
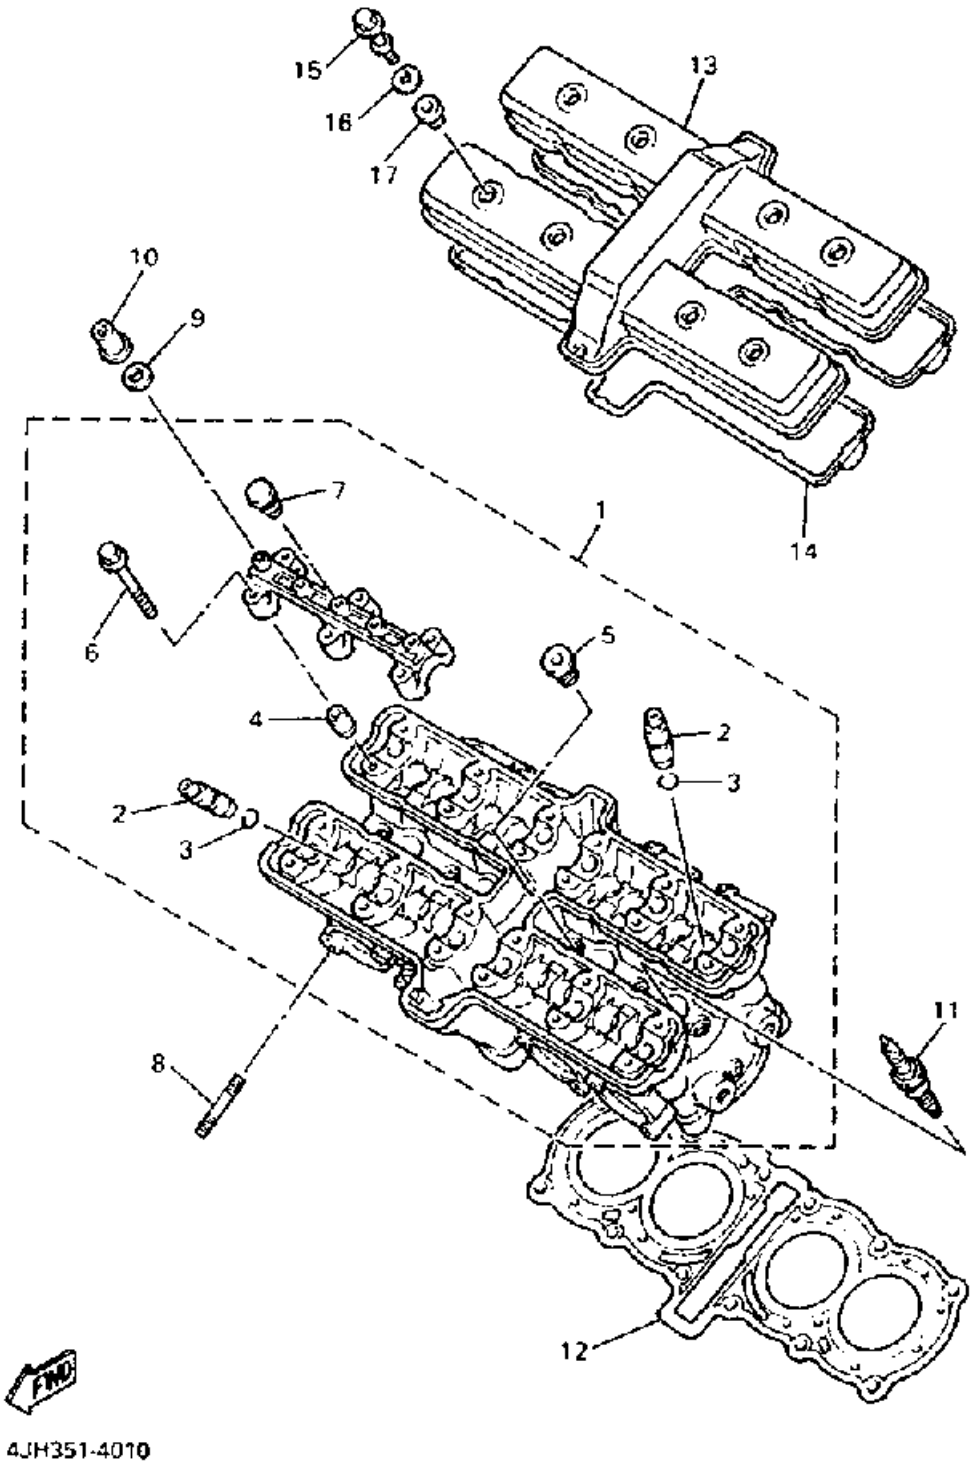



Ref No	Part No	Description
01	4JH-11101-00-00	Cylinder Head Assy
02	3TJ-11133-10-00	• . Guide, Intake Valve
03	93440-07149-00	• . Circlip
04	99510-08016-00	• . Pin, Dowel
05	90340-12112-00	• . Plug, Straight Screw
06	90105-06384-00	• . Bolt, Washer Based
07	90338-08174-00	• . Plug
08	90116-06437-00	Bolt, Stud
09	90201-090P4-00	Washer, Plate
10	90179-09612-00	Nut
11	94701-00318-00	Plug, Spark (ngk R Cr9e)
11	94701-00319-00	Plug, Spark (nd U27esr-n)
12	4JH-11181-00-00	Gasket, Cylinder Head 1
13	3TJ-11191-00-00	Cover, Cylinder Head 1
14	3TJ-11193-00-00	Gasket, Head Cover 1
15	90109-064F0-00	Bolt
16	90209-11262-00	Washer
17	2GH-1111G-00-00	Rubber, Mount 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

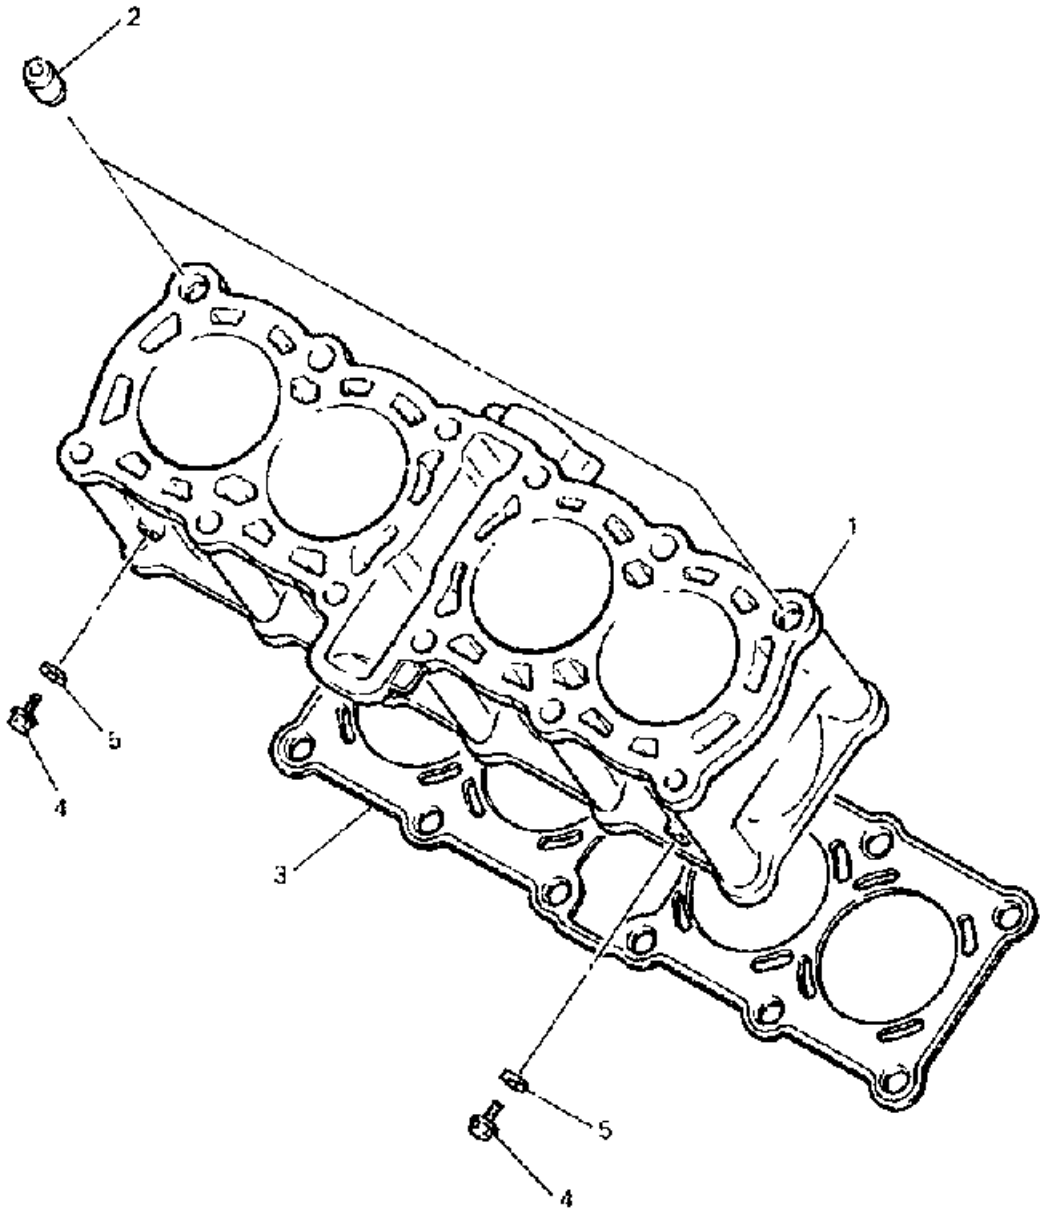


Ref No	Part No	Description
01	4JH-11311-00-00	Cylinder 1
02	91810-08016-00	Pin, Dowel
03	3TJ-11351-00-00	Gasket, Cylinder
04	90153-06045-00	Screw, Hexagon
05	90430-06014-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

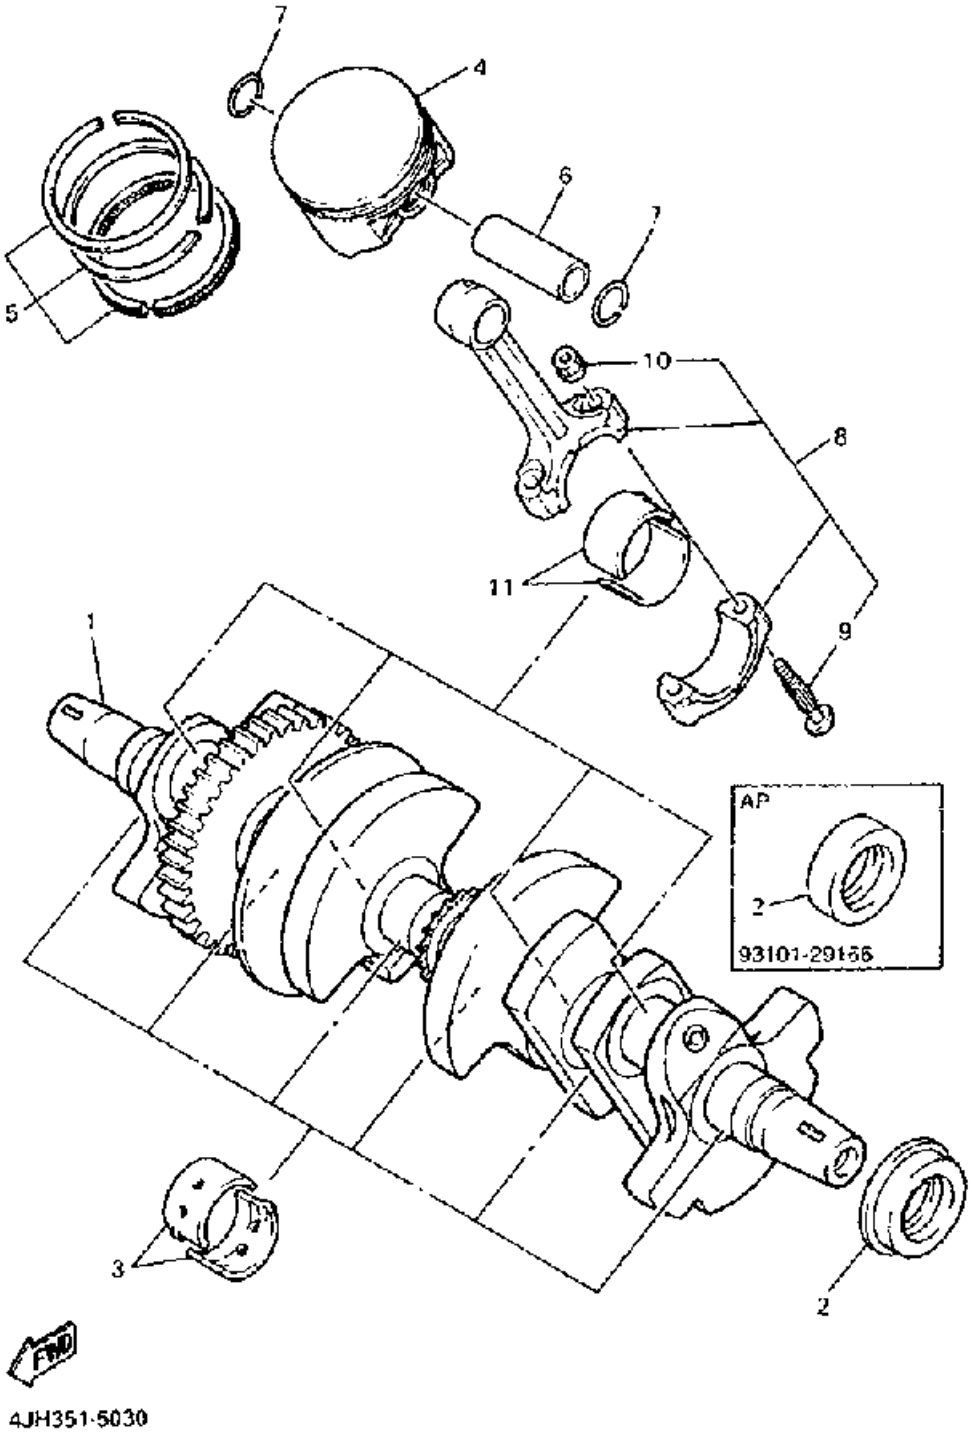


Ref No	Part No	Description
01	4JH-11411-00-00	Crankshaft
02	93101-29165-00	Oil Seal
02	93101-29166-00	Oil Seal
03	1WG-11416-00-00	Plane Bearing, Crankshaft 1
03	1WG-11416-10-00	Plane Bearing, Crankshaft 1
03	1WG-11416-20-00	Plane Bearing, Crankshaft 1
03	1WG-11416-30-00	Plane Bearing, Crankshaft 1
03	1WG-11416-40-00	Plane Bearing, Crankshaft 1
03	1WG-11416-50-00	Plane Bearing, Crankshaft 1
04	4JH-11631-00-00	Piston (std)
05	4JH-11603-00-00	Piston Ring Set (std)
06	4JH-11633-00-00	Pin, Piston
07	90468-12069-00	Clip
08	4JH-11650-00-00	Connecting Rod Assy
09	4JH-11654-00-00	• . Bolt, Connecting Rod
10	90179-07652-00	• . Nut
11	1WG-11656-00-00	Plane Bearing, Connecting Rod
11	1WG-11656-10-00	Plane Bearing, Connecting Rod
11	1WG-11656-20-00	Plane Bearing, Connecting Rod
11	1WG-11656-30-00	Plane Bearing, Connecting Rod

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

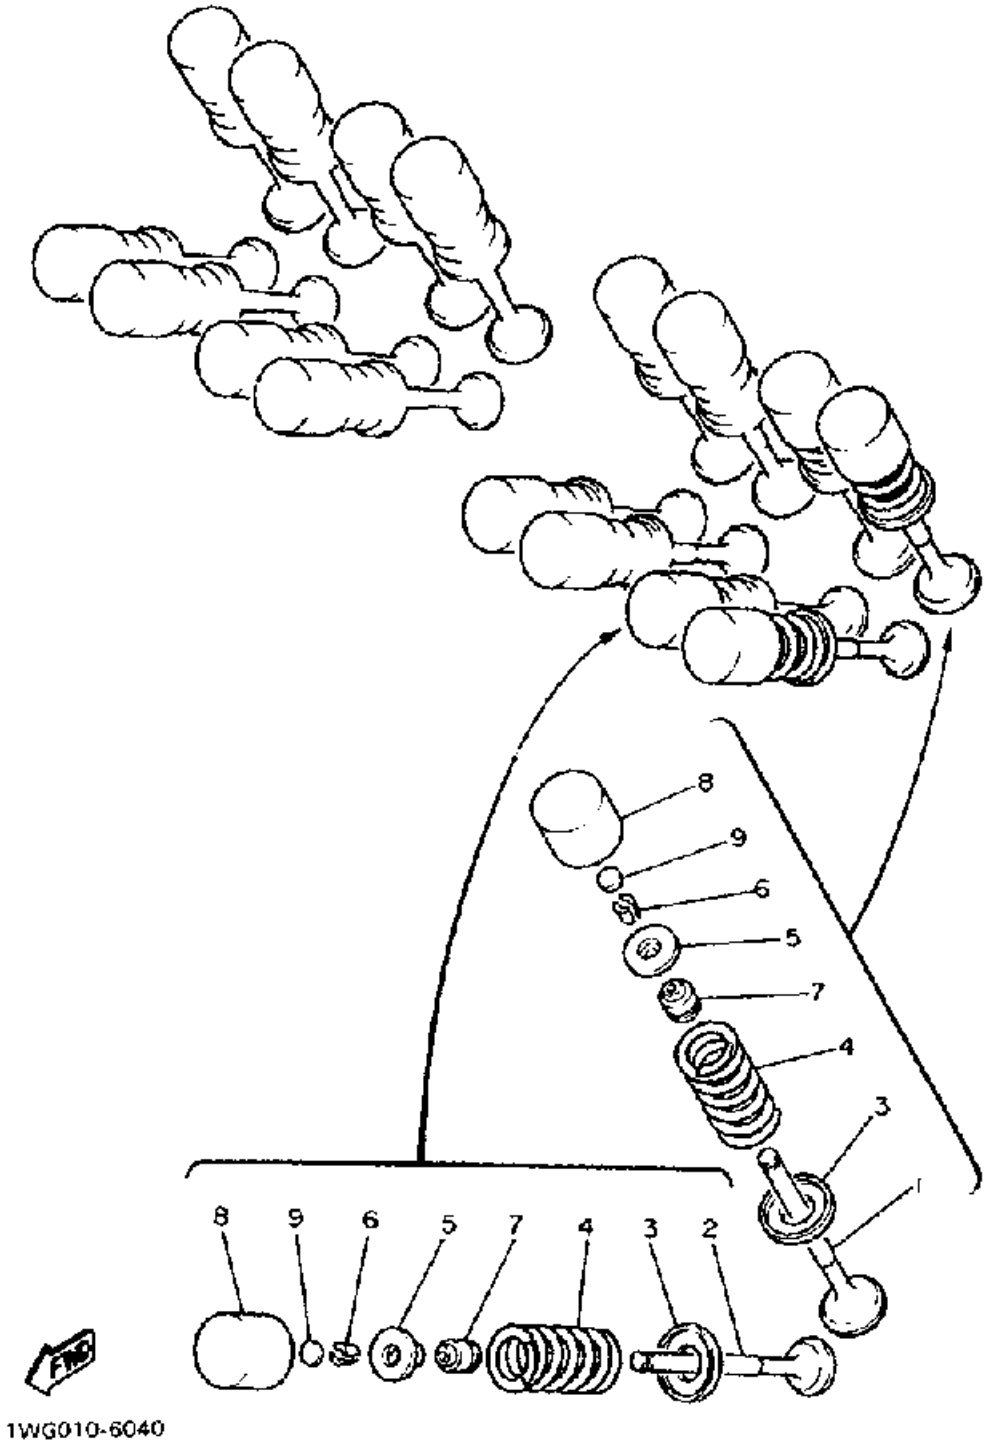


Ref No	Part No	Description
01	4JH-12111-00-00	Valve, Intake
02	4JH-12121-00-00	Valve, Exhaust
03	1WG-12116-00-00	Seat, Valve Spring
04	4JH-12113-00-00	Spring, Valve Inner
05	3TJ-12117-00-00	Retainer, Valve Spring
06	1HX-12118-00-00	Cotter, Valve
07	1HX-12119-00-00	Seal, Valve Stem
08	3FV-12153-10-00	Lifter, Valve
08	3FV-12153-09-00	Lifter, Valve (ug)
09	1HX-12168-00-00	Pad, Adjusting (1.20)
09	1HX-12168-M1-00	Pad, Adjusting (1.65)
09	1HX-12168-R1-00	Pad, Adjusting (1.70)
09	1HX-12168-U1-00	Pad, Adjusting (1.75)
09	1HX-12168-W1-00	Pad, Adjusting (1.80)
09	1HX-12168-Y1-00	Pad, Adjusting (1.85)
09	1HX-12169-11-00	Pad, Adjusting (1.90)
09	1HX-12169-31-00	Pad, Adjusting (1.95)
09	1HX-12169-50-00	Pad, Adjusting (2.00)
09	1HX-12169-70-00	Pad, Adjusting (2.05)
09	1HX-12169-90-00	Pad, Adjusting (2.10)
09	1HX-12168-20-00	Pad, Adjusting (1.25)
09	1HX-12169-E0-00	Pad, Adjusting (2.15)
09	1HX-12169-G0-00	Pad, Adjusting (2.25)
09	1HX-12169-L0-00	Pad, Adjusting (2.30)
09	1HX-12169-N0-00	Pad, Adjusting (2.35)
09	1HX-12168-40-00	Pad, Adjusting (1.30)
09	1HX-12168-60-00	Pad, Adjusting
09	1HX-12168-80-00	Pad, Adjusting (1.40)
09	1HX-12168-A0-00	Pad, Adjusting (1.45)
09	1HX-12168-F0-00	Pad, Adjusting (1.50)
09	1HX-12168-H1-00	Pad, Adjusting (1.55)
09	1HX-12168-K1-00	Pad, Adjusting (1.60)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

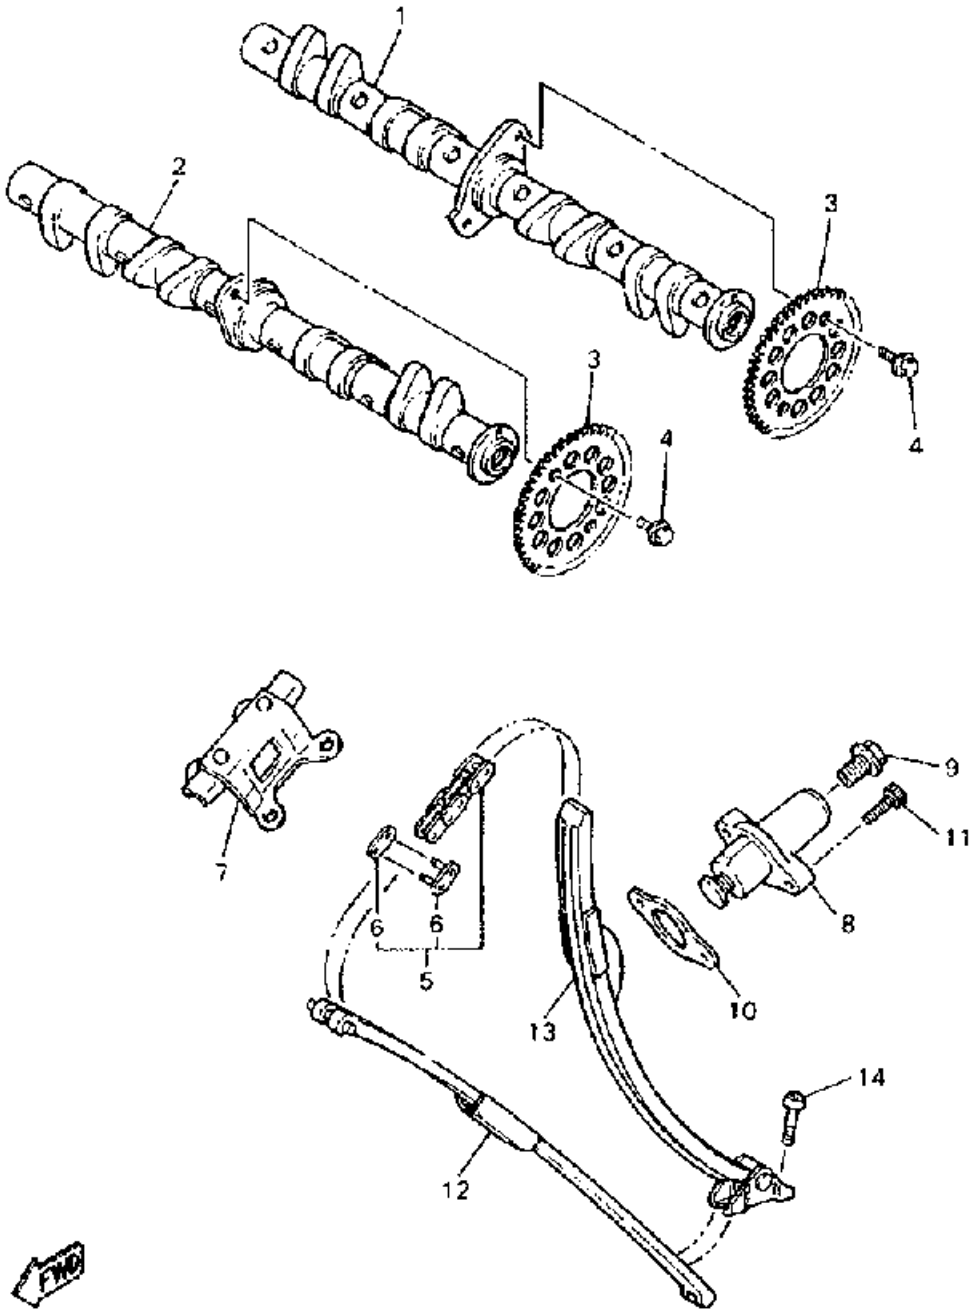


Ref No	Part No	Description
01	4JH-12171-00-00	Camshaft 1
02	4JH-12181-00-00	Camshaft 2
03	1WG-12176-00-00	Sprocket, Cam Chain
04	90105-07385-00	Bolt, Washer Based
05	94581-32118-00	Chain (d.i.d. 215f Dha 118l)
06	94681-32021-00	• . Joint, Chain (d.i.d.215f-lj)
07	3TJ-12241-00-00	Guide, Stopper 2
08	3GM-12210-00-00	Tensioner Assy, Cam Chain
09	90109-112F1-00	Bolt
10	4BE-12213-00-00	Gasket, Tensioner Case
11	91317-06025-00	Bolt
12	3HE-12251-00-00	Damper, Chain 1
13	4JH-12252-00-00	Damper, Chain 2
14	90109-065A8-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

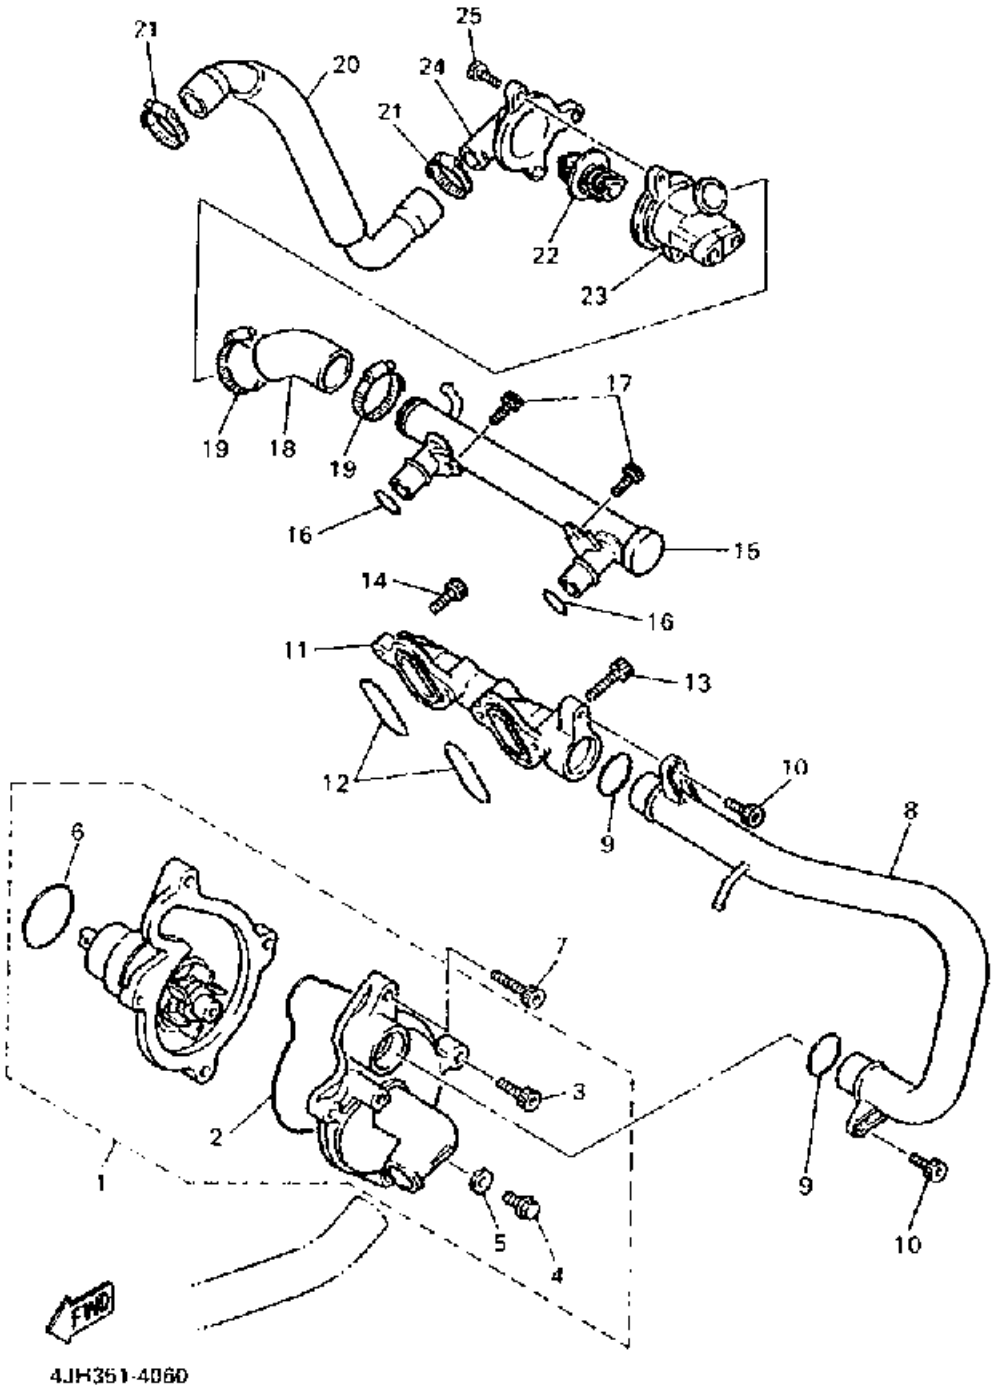


Ref No	Part No	Description
01	3TJ-Y1242-00-00	Water Pump Assy
02	1WG-12439-00-00	• . O-ring
03	91317-06025-00	• . Bolt
04	95027-06012-00	• . Bolt, Flange
05	90430-06014-00	• . Gasket
06	93210-33133-00	• . O-ring
07	91317-06035-00	Bolt
08	4JH-12481-00-00	Pipe 1
09	93210-21190-00	O-ring
10	91317-06010-00	Bolt
11	1WG-12446-01-00	Joint
12	93210-17746-00	O-ring
13	91317-06040-00	Bolt
14	91317-06025-00	Bolt
15	4JH-12482-00-00	Pipe 2
16	93210-15566-00	O-ring
17	91317-06010-00	Bolt
18	3TJ-12576-00-00	Hose 1
19	90450-32051-00	Hose Clamp Assy
20	4JH-12577-00-00	Hose 2
21	90450-32051-00	Hose Clamp Assy
22	4JH-12410-00-00	Thermostat Assy
23	3TJ-12417-00-00	Housing, Thermostat
24	3TJ-12413-00-00	Cover, Thermostat
25	91317-06020-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

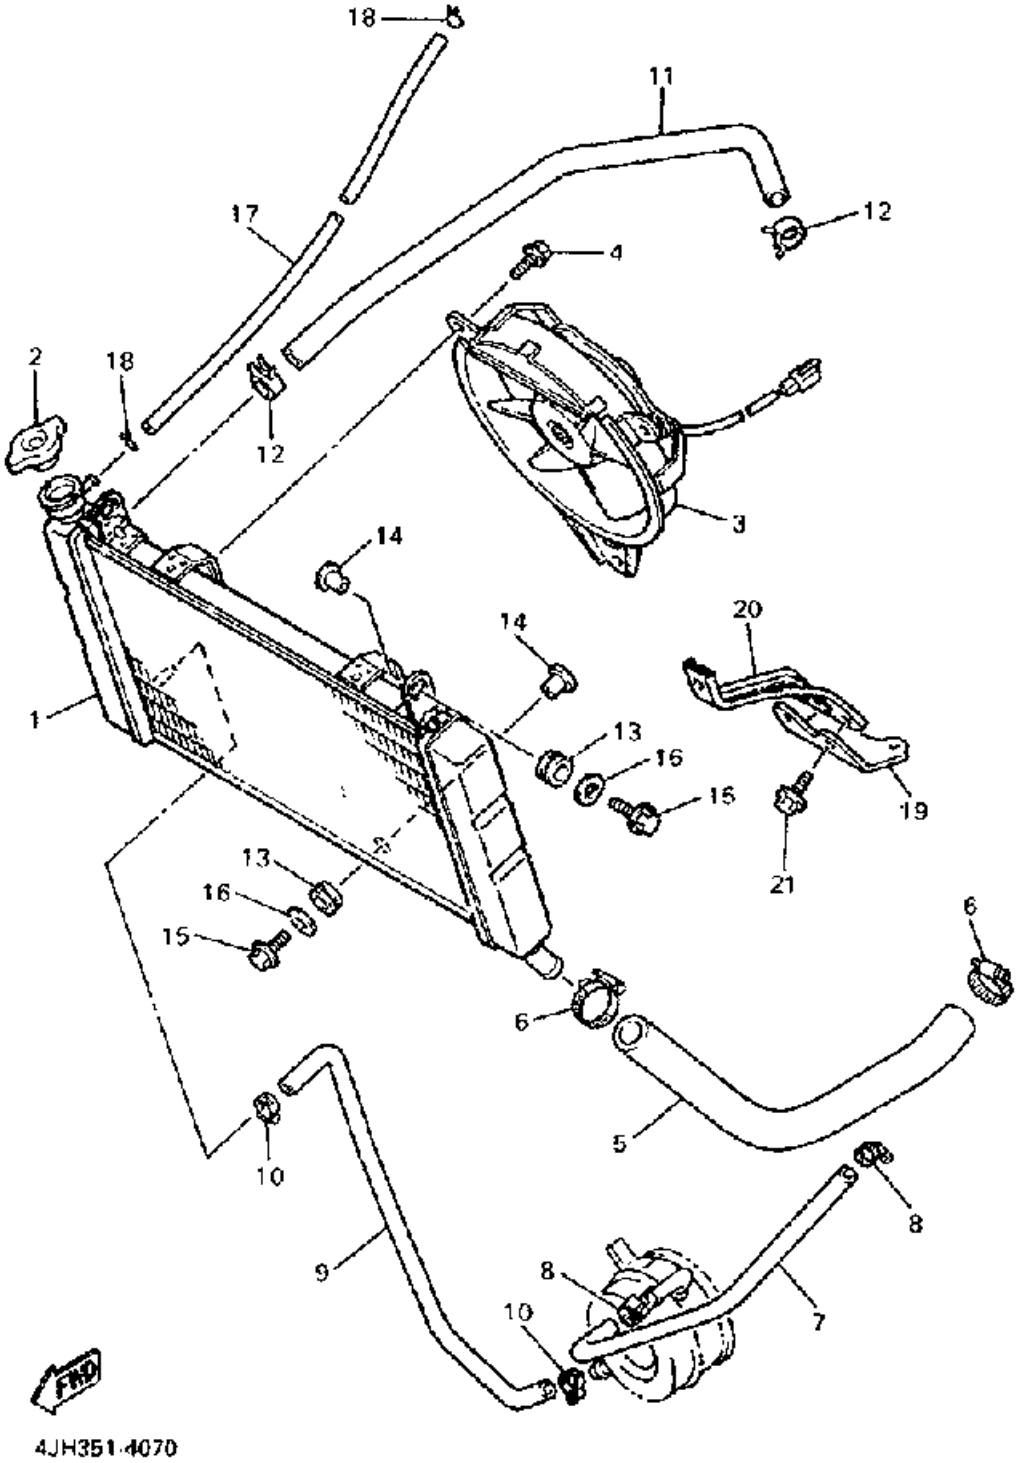


Ref No	Part No	Description
01	4JH-12461-00-00	Radiator Assy
02	4JH-12462-00-00	Cap, Radiator
03	4JH-12405-00-00	Blower Assy
04	95811-06010-00	Bolt, Flange
05	4JH-12578-00-00	Hose 3
06	90450-32051-00	Hose Clamp Assy
07	3TJ-12579-00-00	Hose 4
08	90450-17036-00	Hose Clamp Assy
09	4JH-12588-00-00	Hose 5
10	90450-17036-00	Hose Clamp Assy
11	4JH-1243A-00-00	Hose 1
12	90467-11090-00	Clip
13	90480-15363-00	Grommet
14	90387-07391-00	Collar
15	95807-06025-00	Bolt, Flange
16	90201-063J2-00	Washer, Plate
17	90445-095E9-00	Hose
18	90467-08003-00	Clip
19	4JH-1244F-00-00	Bracket 1
20	4JH-2142K-00-00	Bracket, Radiator
21	95817-06012-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

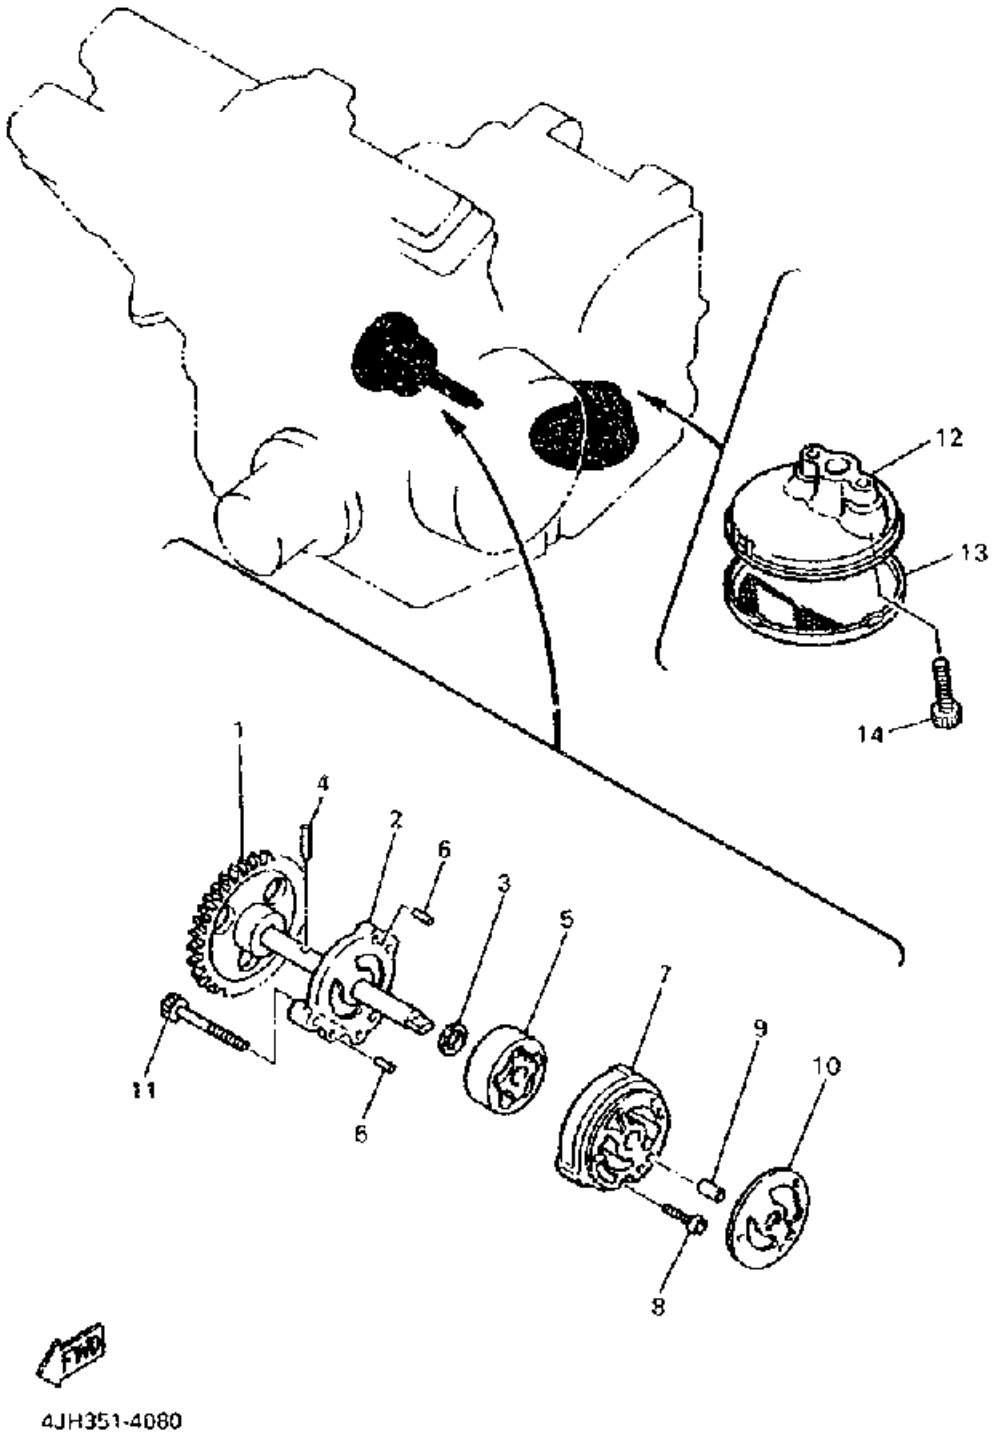


Ref No	Part No	Description
01	4JH-13330-00-00	Pump Shaft Assy
02	1WG-13316-00-00	Cover, Pump
03	90201-113K2-00	Washer, Plate
04	93603-17070-00	Pin, Dowel
05	1WG-13310-00-00	Rotor Assy 1
06	93603-09106-00	Pin, Dowel
07	1WG-13336-00-00	Housing, Rotor
08	98507-06020-00	Screw, Pan Head
09	99510-08012-00	Pin, Dowel
10	1WG-13329-00-00	Gasket, Pump Cover
11	90110-06130-00	Bolt, Hexagon Socket Head
12	3TJ-13412-00-00	Housing, Strainer
13	4H7-13411-02-00	Strainer, Oil
14	90110-06225-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

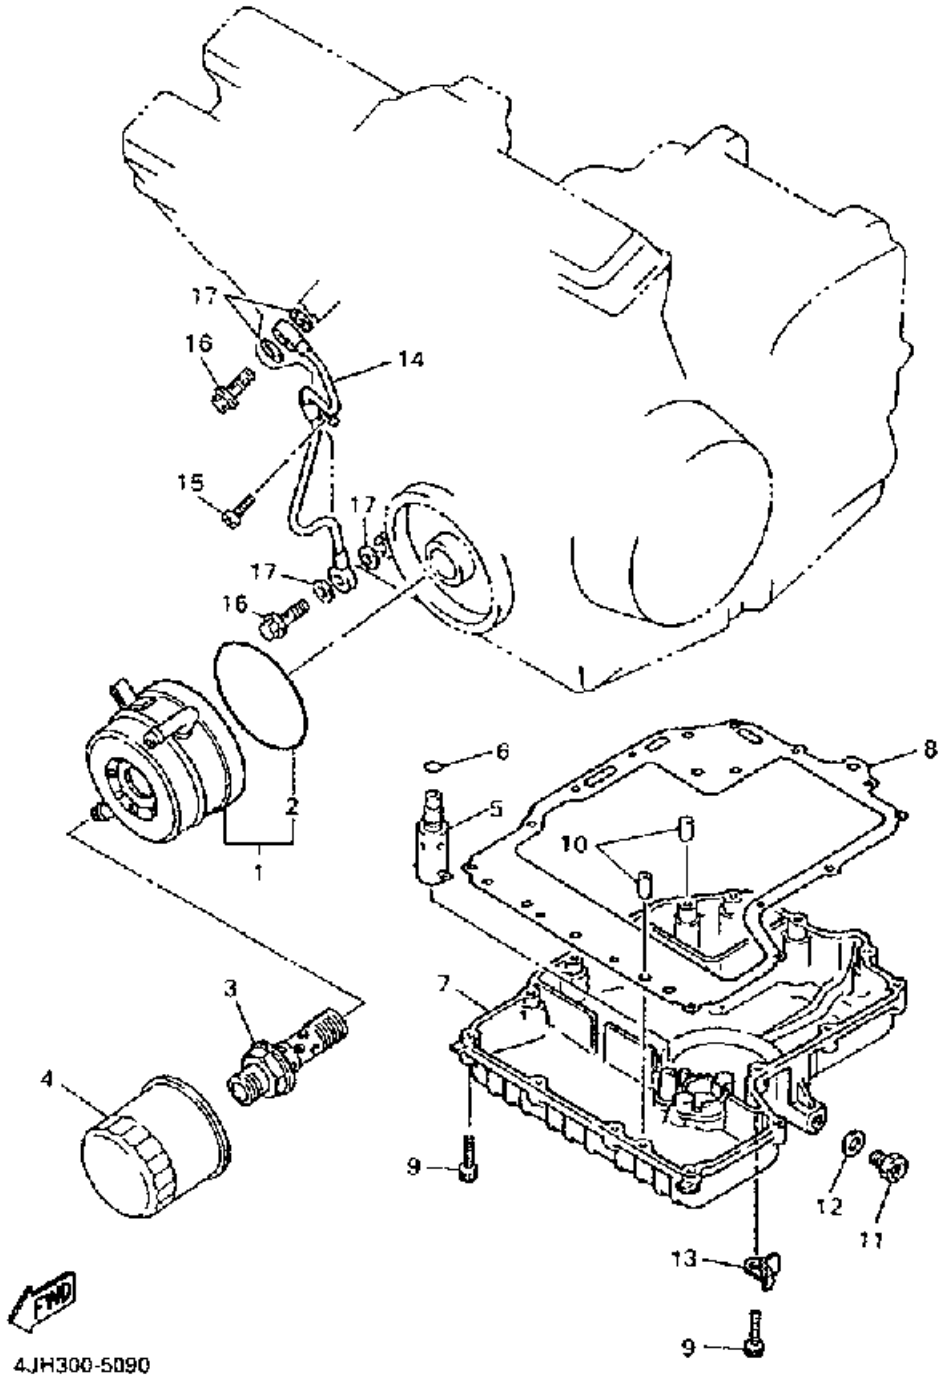


Ref No	Part No	Description
01	4JH-13470-00-00	Oil Cooler Assy
02	4JH-13473-00-00	• . O-ring
03	90401-20158-00	Bolt, Union
04	3FV-13440-00-00	Element Assy, Oil Cleaner
05	11H-13490-00-00	Relief Valve Assy
06	93210-10096-00	O-ring
07	4JH-13417-00-00	Cover, Strainer
08	3HE-13414-10-00	Gasket, Strainer Cover
09	91317-06025-00	Bolt
10	99510-08016-00	Pin, Dowel
11	3VD-13455-00-00	Plug
12	214-11198-01-00	Gasket
13	90465-10306-00	Clamp
14	3HE-13161-00-00	Pipe, Delivery 1
15	91317-06010-00	Bolt
16	90401-10106-00	Bolt, Union
17	90430-10171-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

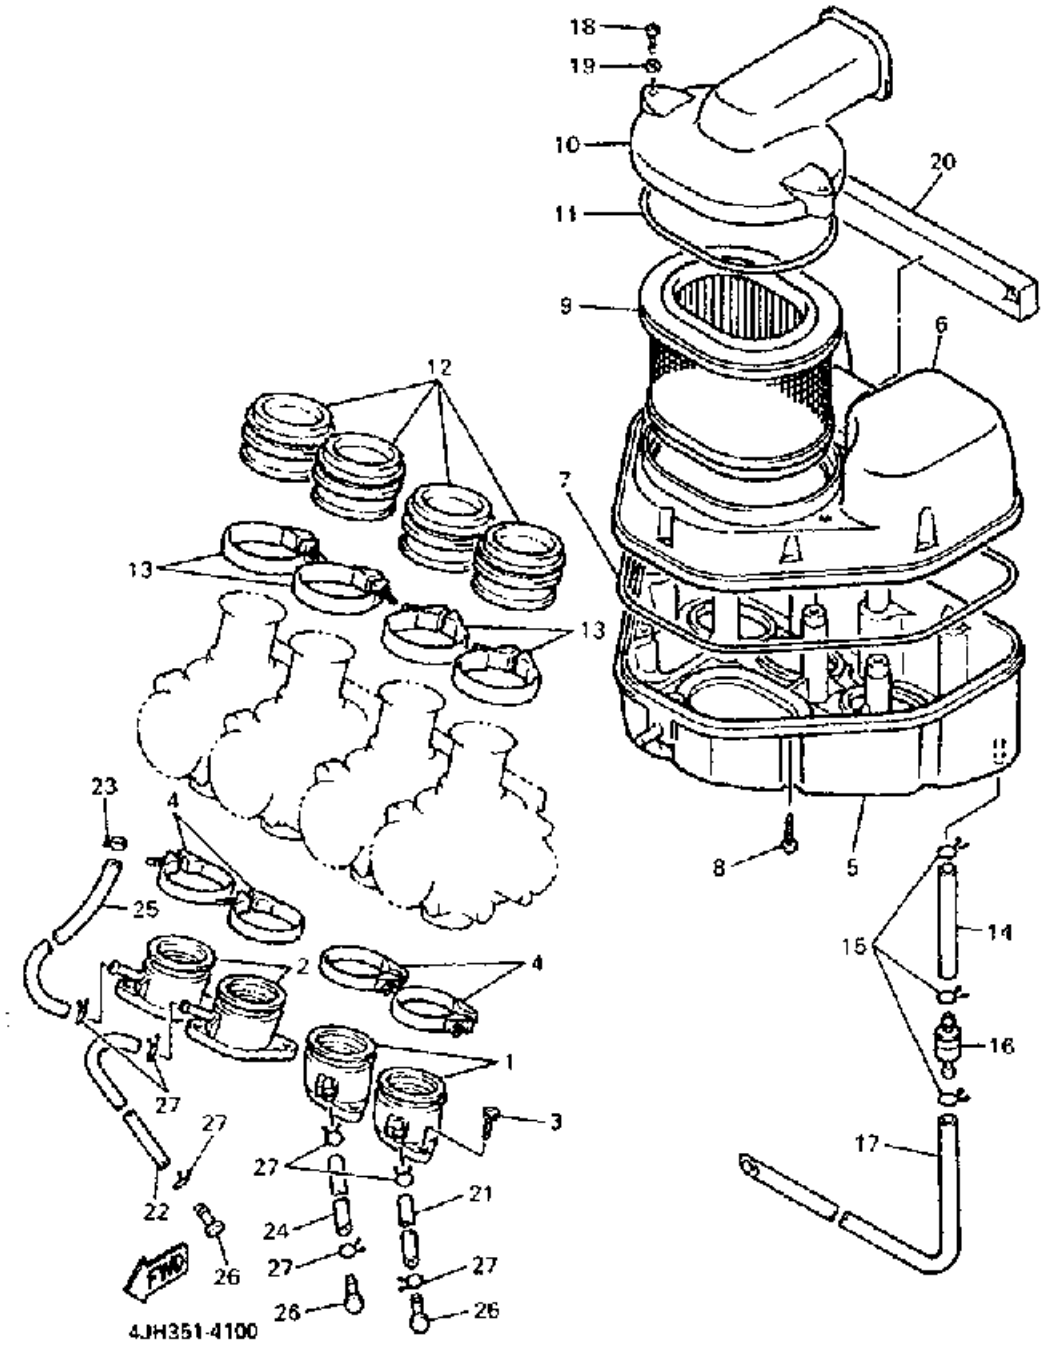


Ref No	Part No	Description
01	4JH-13586-00-00	Joint, Carburetor 1
01	4MH-13586-00-00	Joint, Carburetor 1
02	4JH-13596-00-00	Joint, Carburetor 2
02	4MH-13596-00-00	Joint, Carburetor 2
03	91317-06020-00	Bolt
04	90450-52074-00	Hose Clamp Assy
05	4JH-14411-00-00	Case, Air Cleaner 1
06	4JH-14421-00-00	Case, Air Cleaner 2
07	4FM-14452-00-00	Seal
08	97707-50525-00	Screw, Tapping
09	4JH-14451-00-00	Element, Air Cleaner
10	4JH-14412-00-00	Cap, Cleaner Case 1
11	1VJ-14462-00-00	Seal
12	4JH-14453-00-00	Joint, Air Cleaner 1
13	90460-60165-00	Clamp, Hose
14	90445-11452-00	Hose
15	90467-10008-00	Clip
16	4X7-2149Y-00-00	Filter Assy
17	90445-075G7-00	Hose
18	98507-05030-00	Screw, Pan Head
19	92907-05600-00	Washer, Plate
20	4JH-14467-00-00	Seal
21	90445-09488-00	Hose
22	90445-09496-00	Hose
23	90467-08092-00	Clip
24	90445-09683-00	Hose
25	90445-090E5-00	Hose
26	90338-05240-00	Plug
27	90467-08017-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

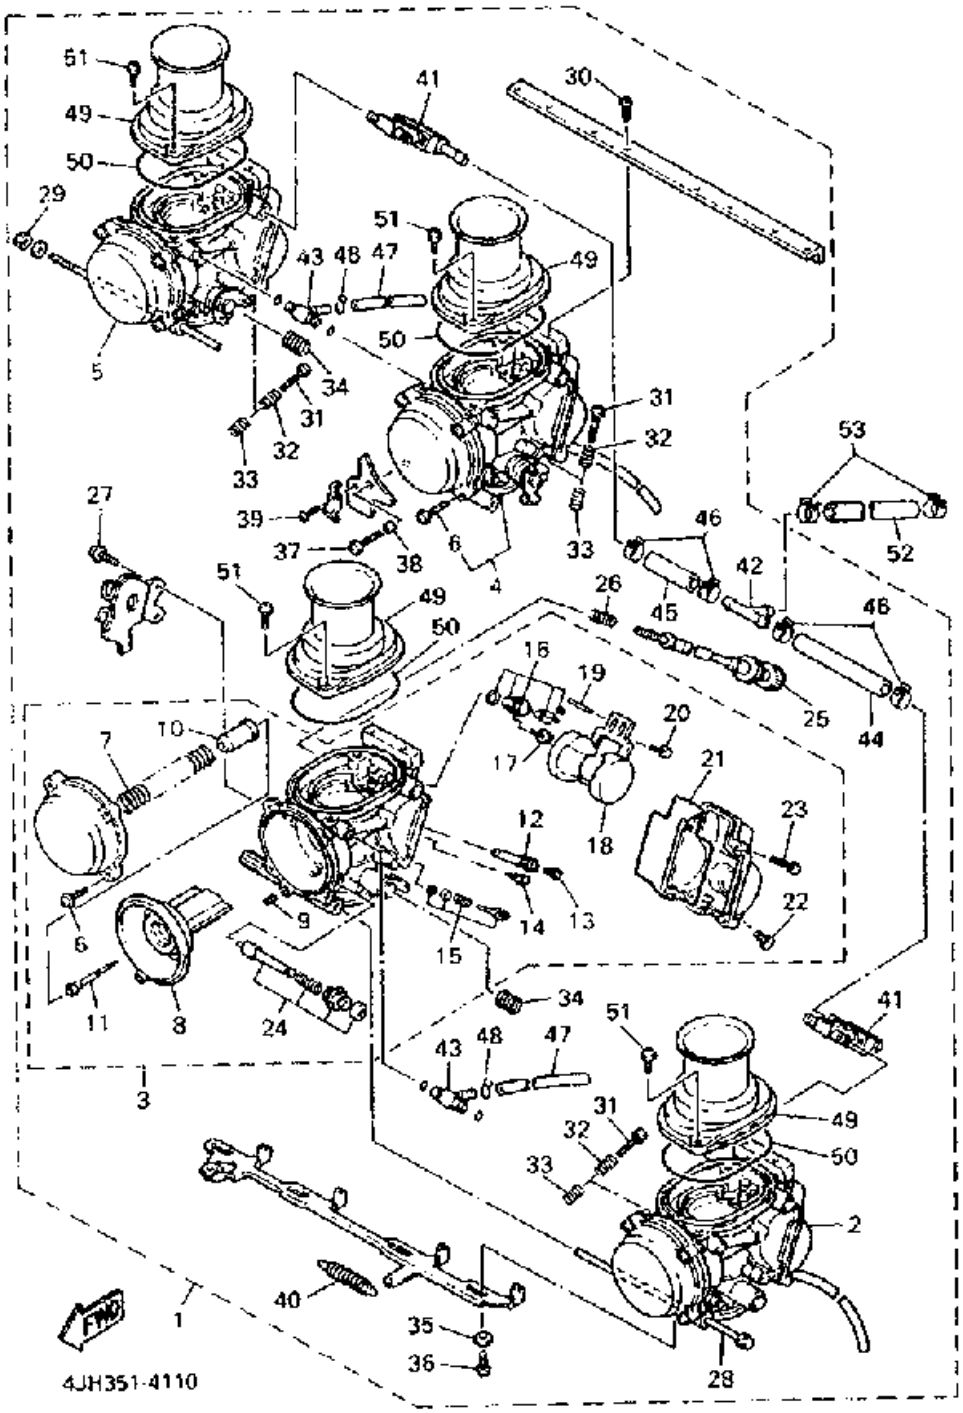


Ref No	Part No	Description
01	4JH-14900-00-00	Carburetor Assy
01	4MH-14900-00-00	Carburetor Assy
02	4JH-14901-00-00	• . Carburetor Assy 1
02	4MH-14901-00-00	• . Carburetor Assy 1
03	4JH-14902-00-00	• . Carburetor Assy 2
03	4MH-14902-00-00	• . Carburetor Assy 2
04	4JH-14903-00-00	• . Carburetor Assy 3
04	4MH-14903-00-00	• . Carburetor Assy 3
05	4JH-14904-00-00	• . Carburetor Assy 4
05	4MH-14904-00-00	• . Carburetor Assy 4
06	4JH-14216-00-00	•• .. Screw
07	4JH-14933-00-00	•• .. Spring, Diaphragm
07	4MH-14933-00-00	•• .. Spring, Diaphragm
08	4JH-14940-00-00	•• .. Diaphragm Assy
08	4MH-14940-00-00	•• .. Diaphragm Assy
09	4JH-14515-00-00	•• .. Jet
10	4JH-14936-00-00	•• .. Seat, Spring
11	4JH-14916-00-00	•• .. Needle
11	4NA-14916-00-00	•• .. Needle
12	4JH-1414G-00-00	•• .. Pipe, Main Breed
13	3TJ-14943-81-00	•• .. Jet, Main (118)
13	3TJ-14943-29-00	Jet, Main (110)
14	4JH-14948-01-00	•• .. Jet (35)
15	4JH-14105-00-00	•• .. Pilot Screw Set
16	4JH-14107-00-00	•• .. Needle Valve Set
17	3TJ-14216-40-00	•• .. Screw
18	4JH-14985-00-00	•• .. Float
19	663-14548-00-00	•• .. Pin, Float Arm
20	98580-04008-00	•• .. Screw, Pan Head
21	4JH-14984-00-00	•• .. Gasket, Float Chamber
22	3TJ-14191-40-00	•• .. Plug, Drain
23	98503-04014-00	•• .. Screw, Pan Head
24	4JH-1410A-00-00	•• .. Starter Set
25	4JH-14922-00-00	• . Screw, Throttle
26	4JH-14934-00-00	• . Spring, Throttle Stop
27	4JH-14429-00-00	• . Screw
28	4JH-14162-00-00	• . Bolt, Holding
29	4JH-14358-00-00	• . Nut
30	4JH-14325-00-00	• . Screw, Pan Head
31	4JH-14121-00-00	• . Screw, Throttle Stop
32	7A9-14555-00-00	• . Spring
33	4JH-14133-00-00	• . Spring, Throttle Stop
34	4JH-14487-00-00	• . Spring
35	90202-06055-00	• . Washer, Plate
36	3TJ-14245-40-00	• . Screw, Guide
37	4JH-14565-00-00	• . Screw
38	4JH-14264-00-00	• . Collar
39	4JH-14567-00-00	• . Screw
40	4JH-14935-00-00	• . Spring
41	4JH-14350-00-00	• . Pipe Adaptor Assy
42	4JH-13918-00-00	• . Pipe T
43	4JH-14917-00-00	• . Jet, Needle
44	4JH-14294-00-00	• . Hose
45	4JH-14298-00-00	• . Pipe
46	4JH-14137-00-00	• . Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

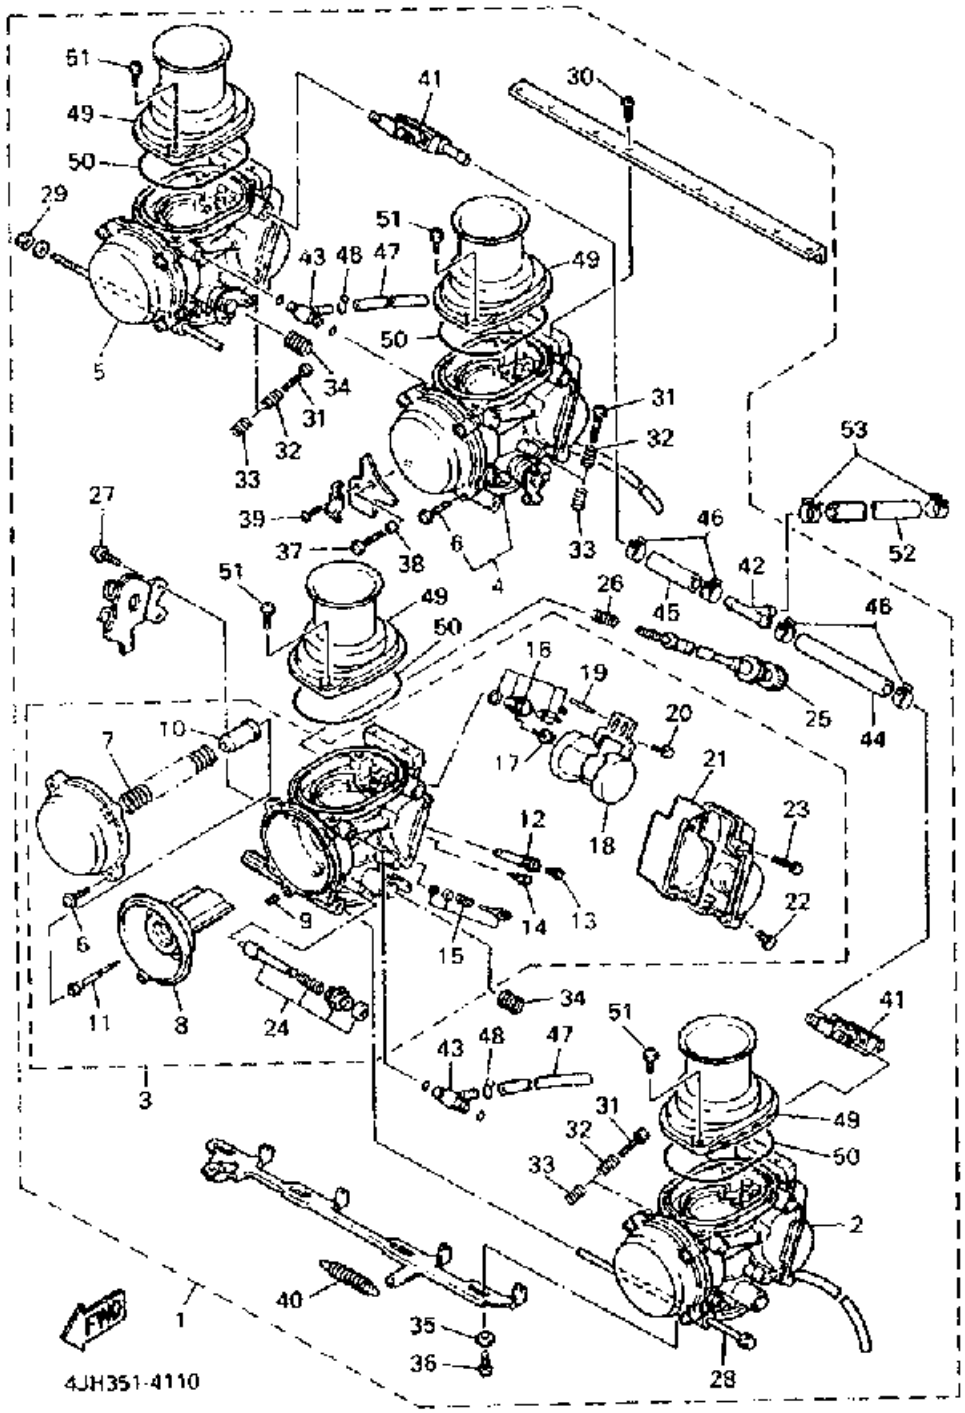

Ref No	Part No	Description
47	3TJ-14148-40-00	• . Pipe
48	3TJ-14937-00-00	• . Clip
49	4JH-1440F-00-00	• . Joint, Air Filter 1
50	4JH-14561-00-00	• . O-ring
51	4JH-14245-00-00	• . Screw, Guide
52	90445-142H0-00	Hose
53	90467-13123-00	Clip


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

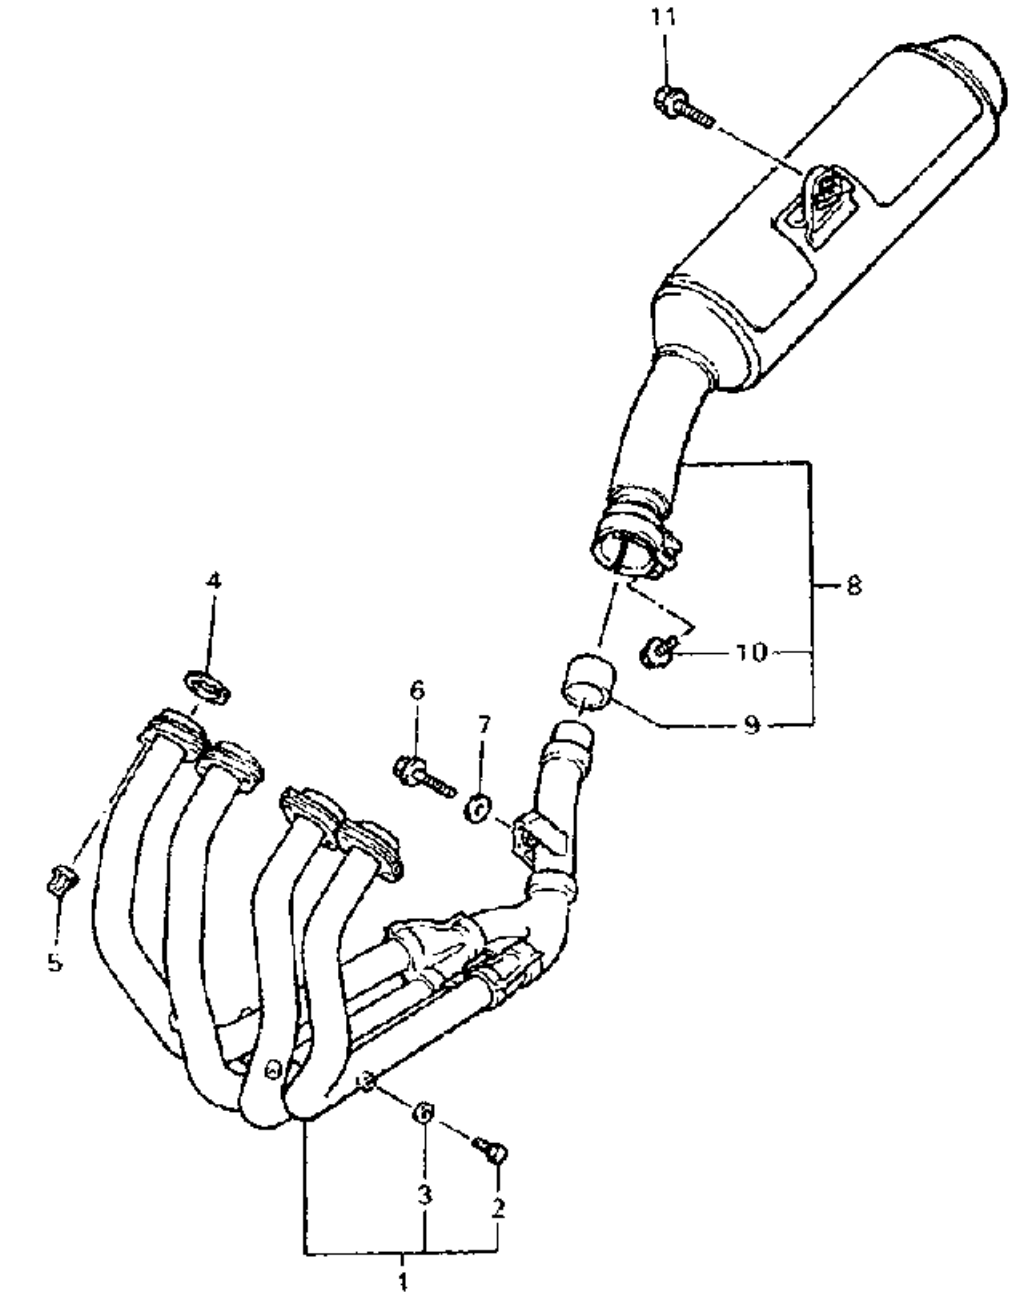

4JH351-4120


Ref No	Part No	Description
01	4JH-14602-00-00	Exhaust Pipe Comp.
02	90101-06576-00	• . Bolt
03	92907-06600-00	• . Washer, Plate
04	3YF-14613-01-00	Gasket, Exhaust Pipe
05	90179-06499-00	Nut
06	95817-08030-00	Bolt, Flange
07	90201-08730-00	Washer, Plate
08	4JH-14710-00-00	Muffler Assy 1
09	3XW-14714-00-00	• . Gasket, Muffler
10	95817-08025-00	• . Bolt, Flange
11	95817-08020-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

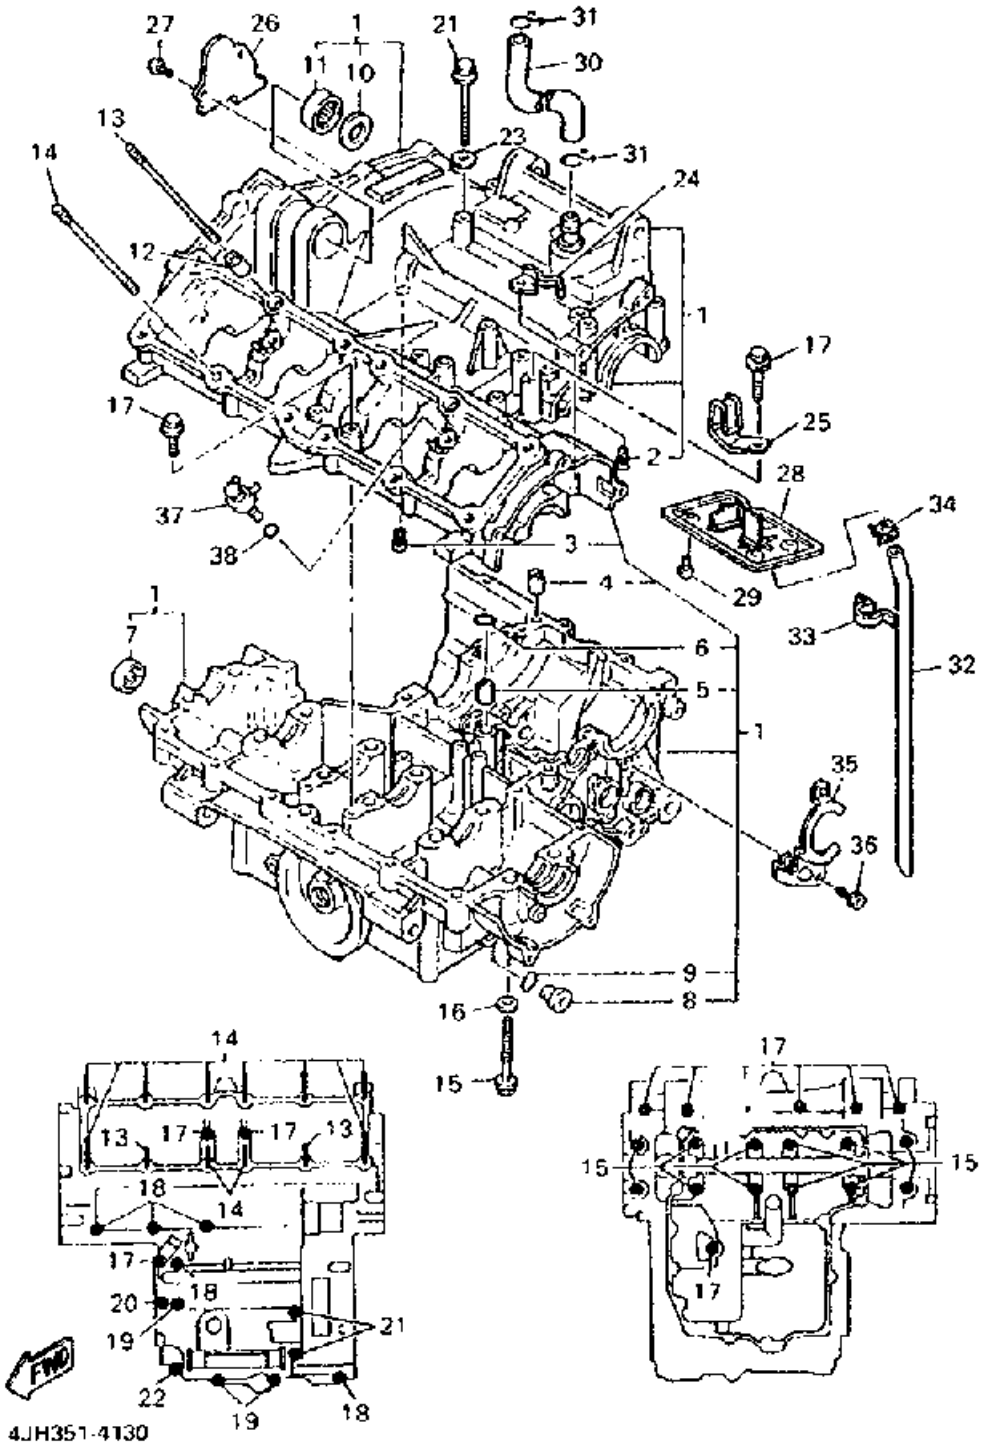


Ref No	Part No	Description
01	4JH-15100-00-00	Crankcase Assy
02	11H-15138-00-00	• . Nozzle 1
03	26H-15138-00-00	• . Nozzle 1
04	99510-12016-00	• . Pin, Dowel
05	4JH-15138-00-00	• . Nozzle 1
06	93210-12152-00	• . O-ring
07	2H7-15361-00-00	• . Gauge, Level
08	36Y-15189-00-00	• . Plug
09	93210-16629-00	• . O-ring
10	90201-236K5-00	• . Washer, Plate
11	93315-32516-00	• . Bearing
12	91810-08016-00	Pin, Dowel
13	90116-09583-00	Bolt, Stud
14	90116-09584-00	Bolt, Stud
15	90105-08630-00	Bolt, Washer Based
16	90201-087K3-00	Washer, Plate
17	95817-06040-00	Bolt, Flange
18	95817-06050-00	Bolt, Flange
19	95817-06070-00	Bolt, Flange
20	95817-06080-00	Bolt, Flange
21	95817-06090-00	Bolt, Flange
22	95817-08070-00	Bolt, Flange
23	90430-06166-00	Gasket
24	90465-10307-00	Clamp
25	90465-10308-00	Clamp
26	4JH-11165-00-00	Plate, Breather
27	98517-06012-00	Screw, Pan Head
28	3HE-11145-00-00	Plate, Breather 2
29	98517-06012-00	Screw, Pan Head
30	1WG-11166-00-00	Pipe, Breather 1
31	90467-14015-00	Clip
32	90445-116E9-00	Hose
33	90465-06289-00	Clamp
34	90467-10038-00	Clip
35	4JH-15381-00-00	Plate, Bearing Cover
36	91317-06012-00	Bolt
37	3HE-15105-00-00	Nozzle Assy
38	93210-06632-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

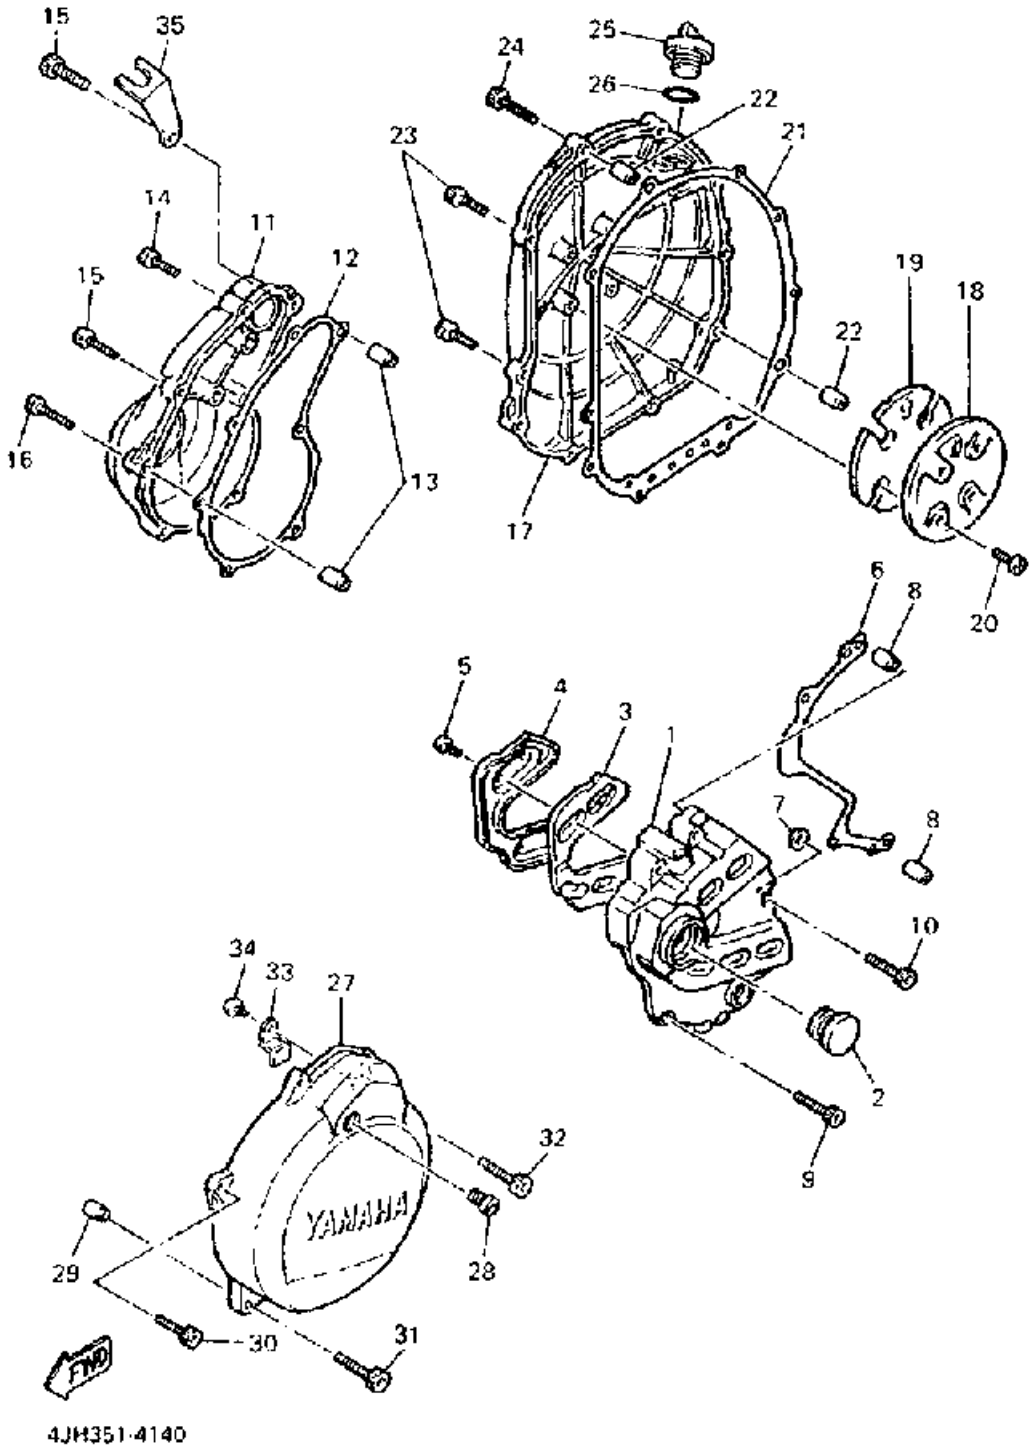


Ref No	Part No	Description
01	4JH-15411-00-00	Cover, Crankcase 1
02	1L9-15417-00-00	Cover, Cap
03	1WG-15316-00-00	Damper, Engine Mount 1
04	1WG-15427-00-00	Cover, Cap 2
05	98907-05008-00	Screw, Bind
06	3HE-15451-10-00	Gasket, Crankcase Cover 1
07	3HE-15467-10-00	Gasket
08	99510-08016-00	Pin, Dowel
09	90110-06149-00	Bolt, Hexagon Socket Head
10	90110-06130-00	Bolt, Hexagon Socket Head
11	4JH-15421-00-00	Cover, Crankcase 2
12	4JH-15461-00-00	Gasket, Crankcase Cover 2
13	99510-08016-00	Pin, Dowel
14	91317-06025-00	Bolt
15	91317-06035-00	Bolt
16	91317-06045-00	Bolt
17	4JH-15431-00-00	Cover, Crankcase 3
18	1WG-15425-00-00	Cover, Generator 2
19	1WG-15326-00-00	Damper, Engine Mount 2
20	98907-05008-00	Screw, Bind
21	4JH-15462-00-00	Gasket, Crankcase Cover 3
22	99510-00016-00	Pin, Dowel
23	91317-06025-00	Bolt
24	91317-06035-00	Bolt
25	3F9-15362-00-00	Plug, Oil Level
26	93210-27778-00	O-ring
27	4JH-15415-00-00	Cover, Generator
28	90340-08M04-00	Plug, Straight Screw
29	99510-08016-00	Pin, Dowel
30	91317-06025-00	Bolt
31	91317-06035-00	Bolt
32	91317-06035-00	Bolt
33	90462-10182-00	Clamp
34	98507-06010-00	Screw, Pan Head
35	4JH-14413-00-00	Stay

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

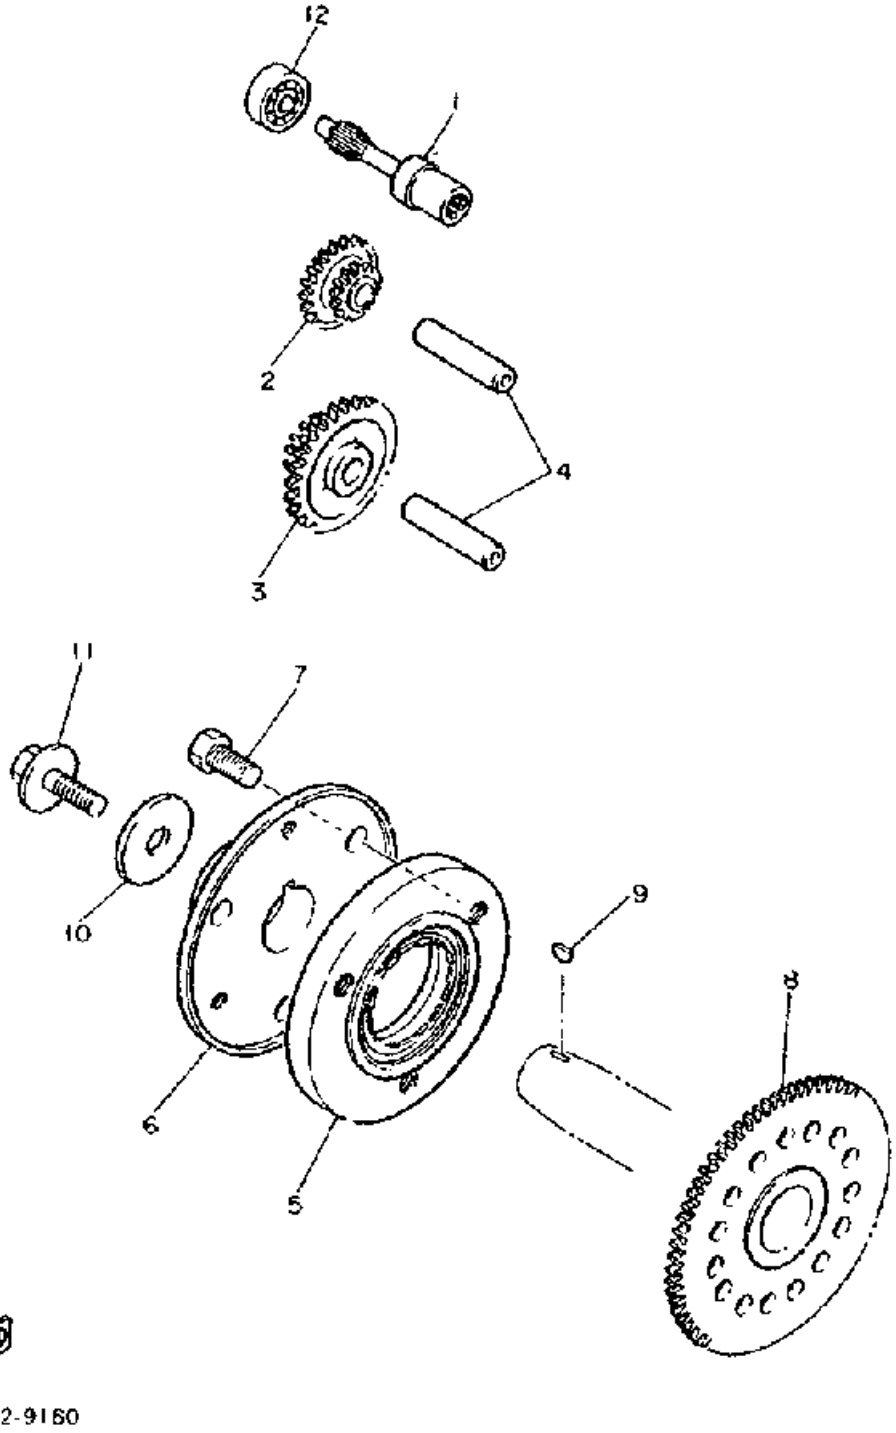


Ref No	Part No	Description
01	3HE-15521-00-00	Shaft 1
02	3HE-15512-00-00	Gear, Idler 1
03	3HE-15517-00-00	Gear, Idler 2
04	3TJ-15521-00-00	Shaft 1
05	3HE-15590-02-00	Starter One-way Assy
06	3HE-15524-00-00	Wheel, Starter
07	91317-08020-00	Bolt
08	4JH-15515-00-00	Gear 3
09	90280-16053-00	Key, Woodruff
10	90201-107K6-00	Washer, Plate
11	90105-10445-00	Bolt, Washer Based
12	93306-20006-00	Bearing (b6200)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

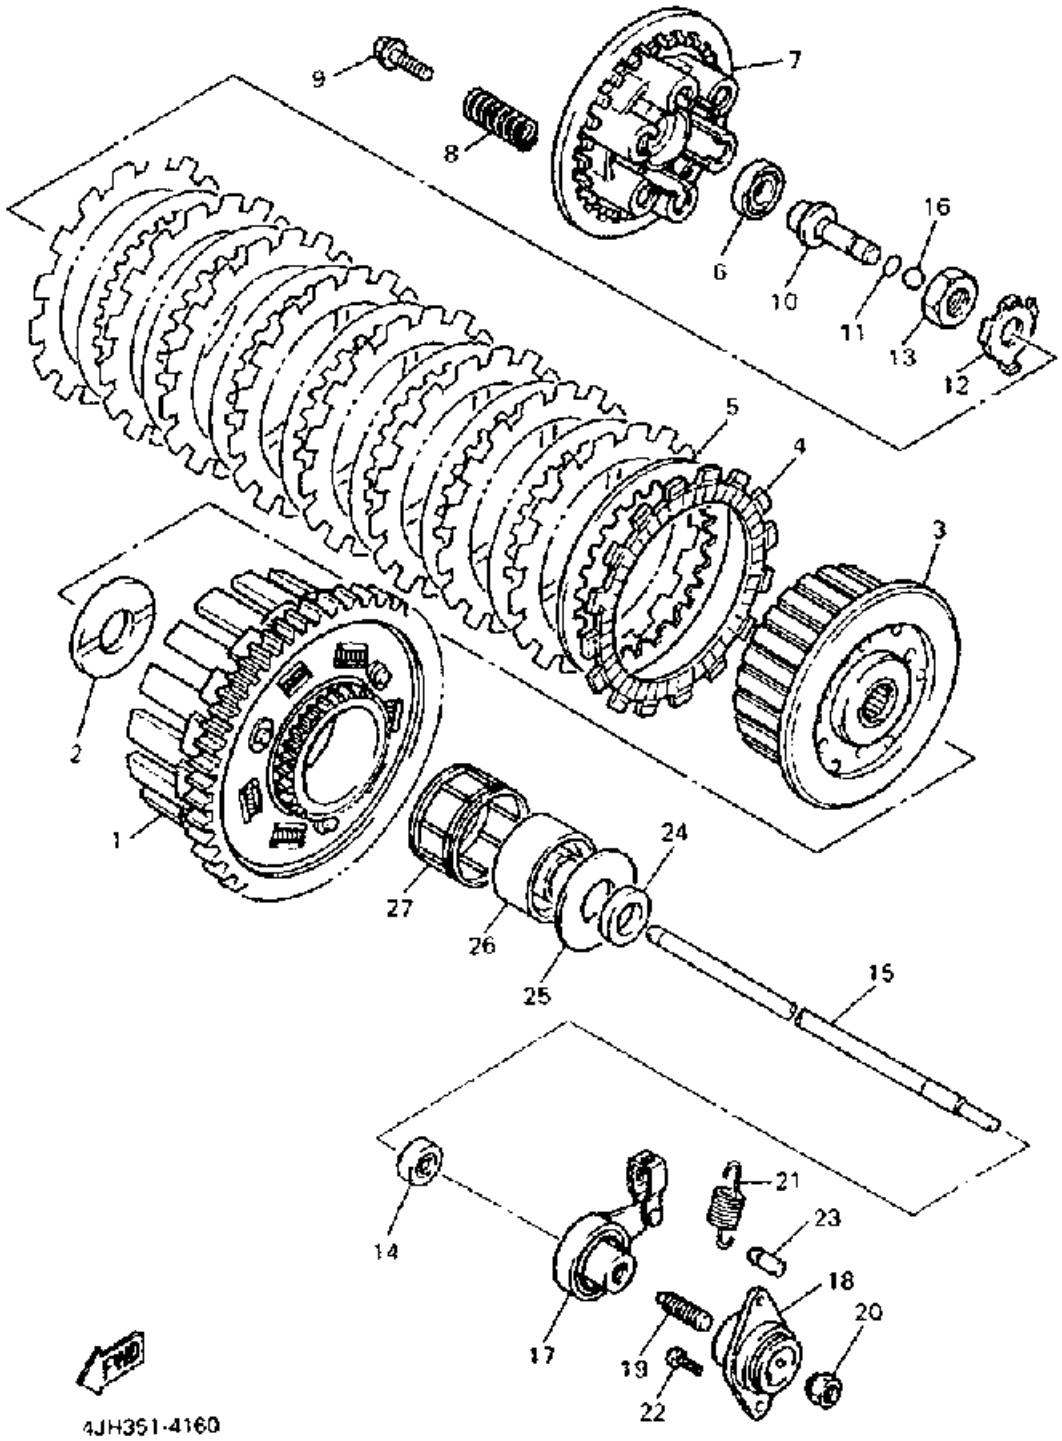


Ref No	Part No	Description
01	4JH-16150-00-00	Primary Driven Gear Comp.
02	1WG-16154-00-00	Plate, Thrust 1
03	4JH-16371-00-00	Boss, Clutch
04	4JH-16321-00-00	Plate, Friction
05	1LX-16324-00-00	Plate, Clutch 1
06	93306-00105-00	Bearing
07	4JH-16351-00-00	Plate, Pressure 1
09	90159-06092-00	Screw, With Washer
10	4JH-16356-00-00	Rod, Push 1
11	93210-48364-00	O-ring
12	90215-18225-00	Washer, Lock
13	90170-18221-00	Nut
14	93109-08058-00	Oil Seal (sd07 8-21-5.5 Hs)
15	4JH-16357-00-00	Rod, Push 2
16	93505-16006-00	Ball
17	4JH-16340-00-00	Push Lever Assy
18	1WG-16304-00-00	Ball Screw Housing Assy
19	90113-08021-00	Bolt, Set
20	90179-08179-00	Nut
21	90506-11488-00	Spring, Tension
22	90157-05065-00	Screw, Pan Head
23	132-16346-00-00	Hook, Spring
24	90387-212R3-00	Collar
25	1WG-16164-00-00	Plate, Thrust 2
26	1WG-16181-00-00	Spacer 1
27	93310-345R8-00	Bearing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

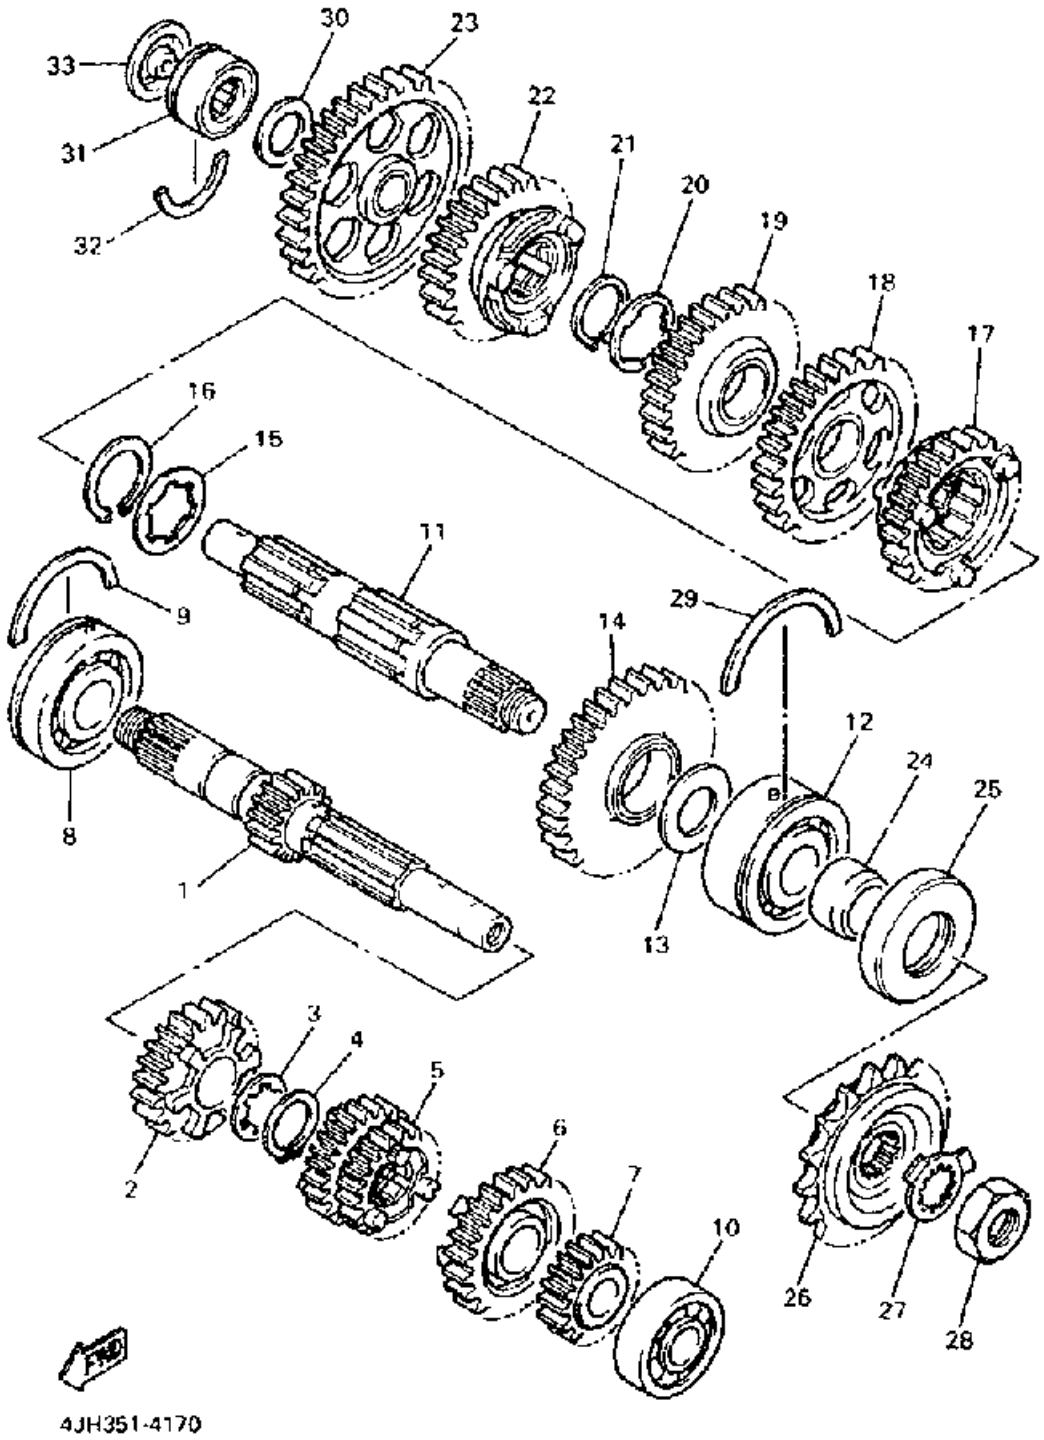


Ref No	Part No	Description
01	4JH-17411-00-00	Axle, Main (13z)
02	4JH-17151-00-00	Gear, 5th Pinion (21z)
03	90209-22191-00	Washer
04	93440-25084-00	Circlip
05	4JH-17131-00-00	Gear, 3rd Pinion (22z)
06	4JH-17161-00-00	Gear, 6th Pinion (27z)
07	4JH-17121-00-00	Gear, 2nd Pinion (19z)
08	93306-37208-00	Bearing
09	93440-54152-00	Circlip
10	93306-20464-00	Bearing
11	4JH-17421-00-00	Axle, Drive
12	93305-20509-00	Bearing
13	90201-25291-00	Washer, Plate
14	4JH-17221-00-00	Gear, 2nd Wheel (37z)
15	90209-27336-00	Washer
16	93440-30077-00	Circlip
17	4JH-17261-00-00	Gear, 6th Wheel (29z)
18	4JH-17231-00-00	Gear, 3rd Wheel (34z)
19	4JH-17241-00-00	Gear, 4th Wheel (28z)
20	90209-22191-00	Washer
21	93440-25084-00	Circlip
22	4JH-17251-00-00	Gear, 5th Wheel (25z)
23	4JH-17251-00-00	Gear, 5th Wheel (37z)
24	90387-2504A-00	Collar
25	93102-35368-00	Oil Seal
26	3HE-17460-00-00	Sprocket, Drive (15z)
27	90215-21022-00	Washer, Lock
28	90179-18020-00	Nut
29	93440-52014-00	Circlip
30	90201-20276-00	Washer, Plate (1.0d)
31	93311-42045-00	Bearing (20ng3315ne)
32	278-17425-00-00	Circlip 2
33	4G0-17433-01-00	Nozzle

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

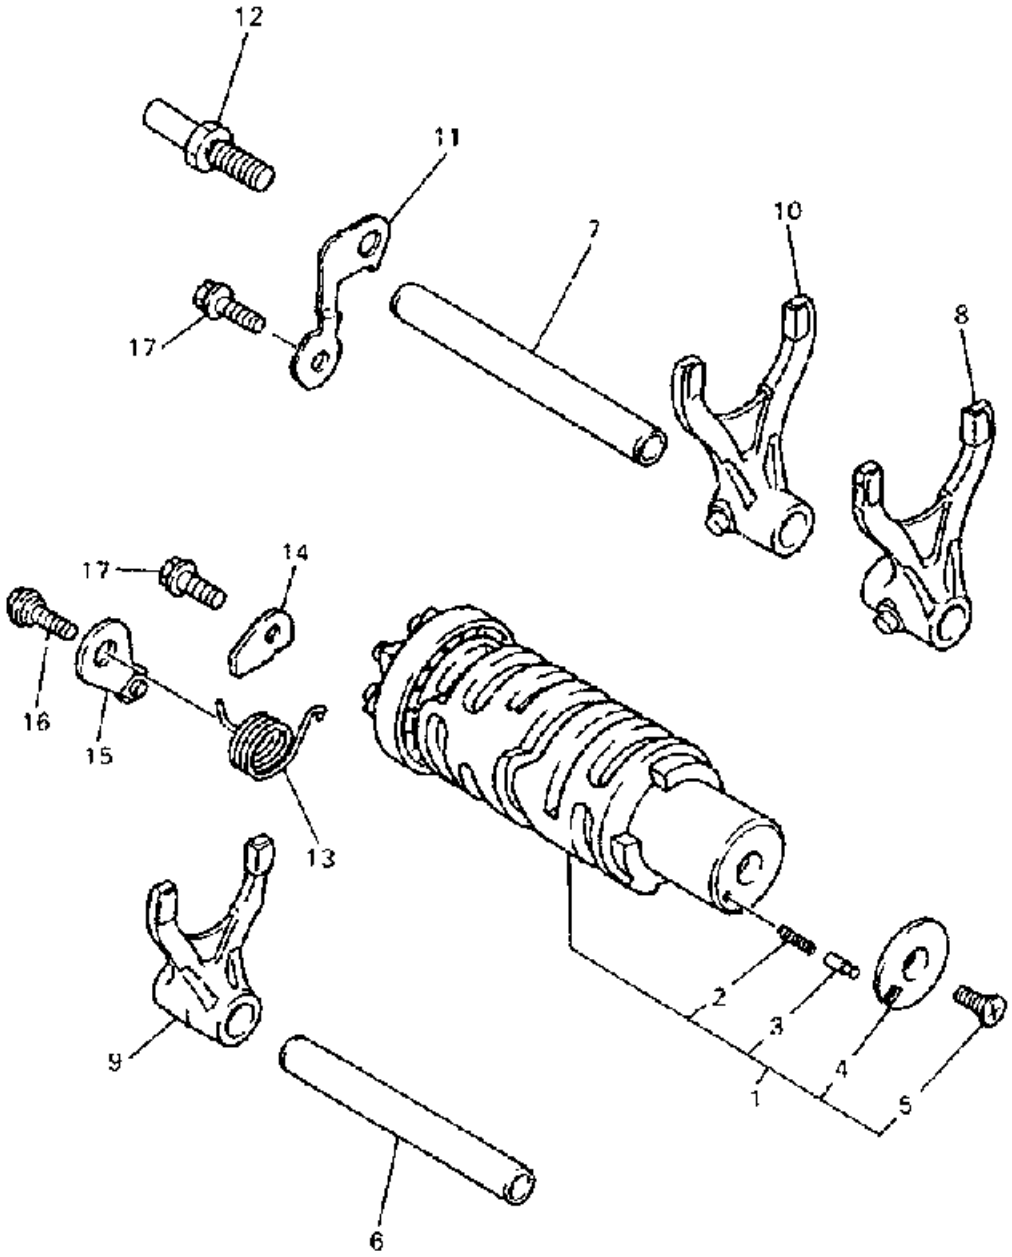


Ref No	Part No	Description
01	4JH-18540-00-00	Shift Cam Assy
02	90501-06022-00	• . Spring, Compression
03	278-18542-00-00	• . Point, Neutral
04	278-18566-00-00	• . Plate, Side 2
05	98707-05012-00	• . Screw, Flat Head
06	4JH-18531-00-00	Bar, Shift Fork Guide 1
07	4JH-18535-00-00	Bar, Shift Fork Guide 2
08	4JH-18511-00-00	Fork, Shift 1
09	4JH-18512-00-00	Fork, Shift 2
10	4JH-18513-00-00	Fork, Shift 3
11	1WG-18536-00-00	Stopper, Shift Bar
12	1HX-18127-00-00	Stopper, Screw
13	90508-237A0-00	Spring, Torsion
14	1WG-18562-00-00	Plate, Stopper 2
15	36Y-18140-00-00	Stopper Lever Assy
16	90109-063F7-00	Bolt
17	95827-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

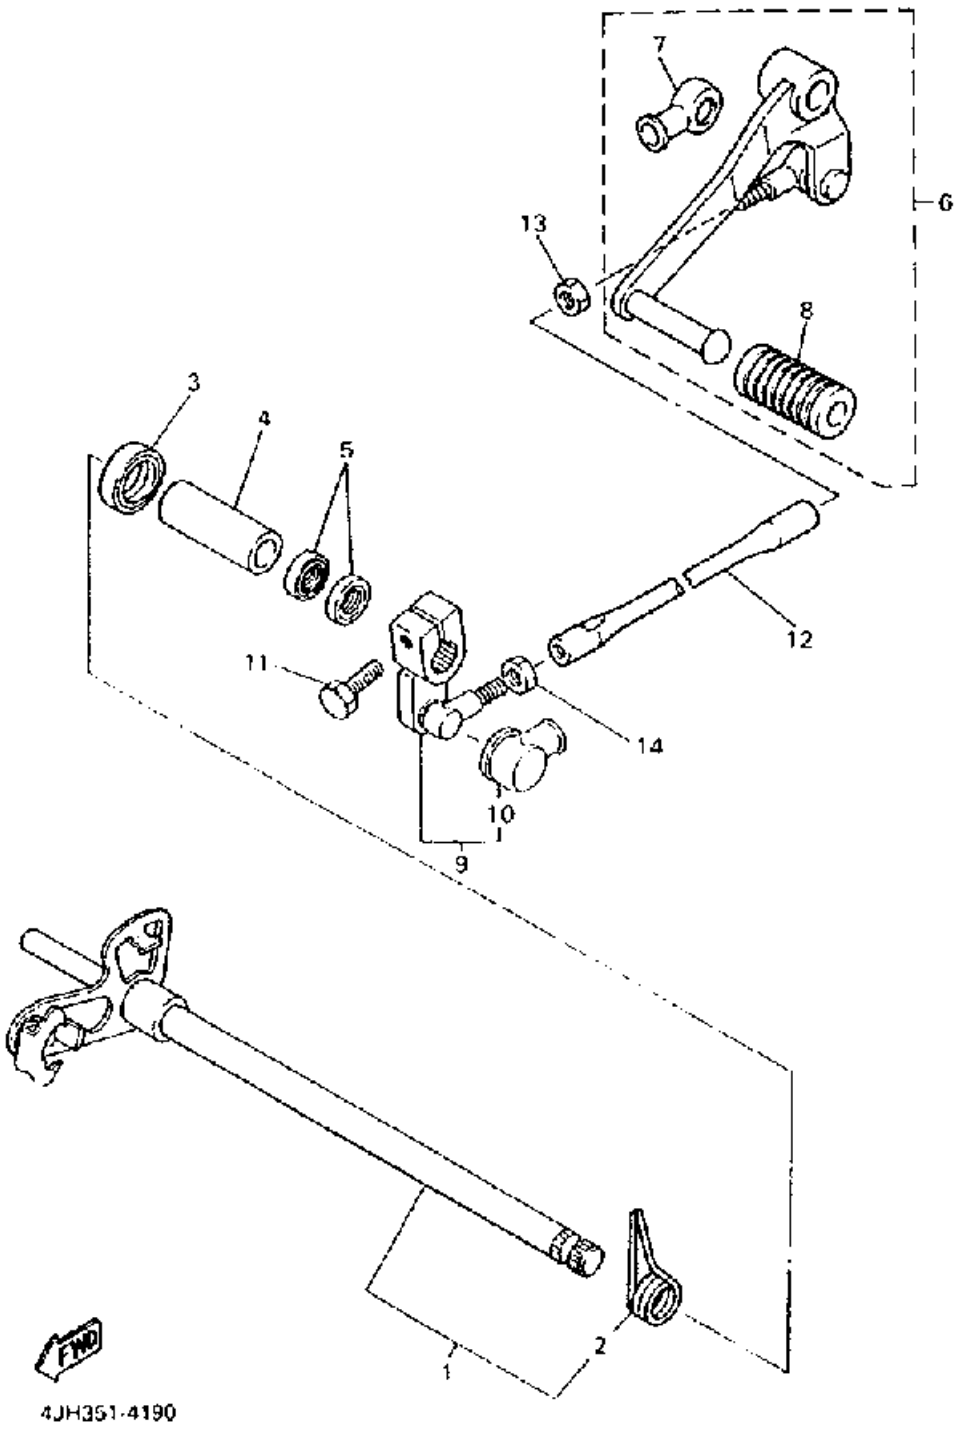


Ref No	Part No	Description
01	4JH-18101-00-00	Shift Shaft Assy
02	90508-32682-00	• . Spring, Torsion
03	93102-12106-00	Oil Seal
04	90560-12211-00	Spacer
05	93109-12053-00	Oil Seal
06	4JH-18110-00-00	Shift Pedal Assy
07	2H9-18154-00-00	• . Cover, Dust
08	132-18113-01-00	• . Cover, Shift Pedal
09	4JH-18130-00-00	Shift Shaft Assy
10	2H9-18154-00-00	• . Cover, Dust
11	97027-06020-00	Bolt
12	4JH-18115-00-00	Rod, Shift
13	90170-08358-00	Nut
14	95304-08700-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

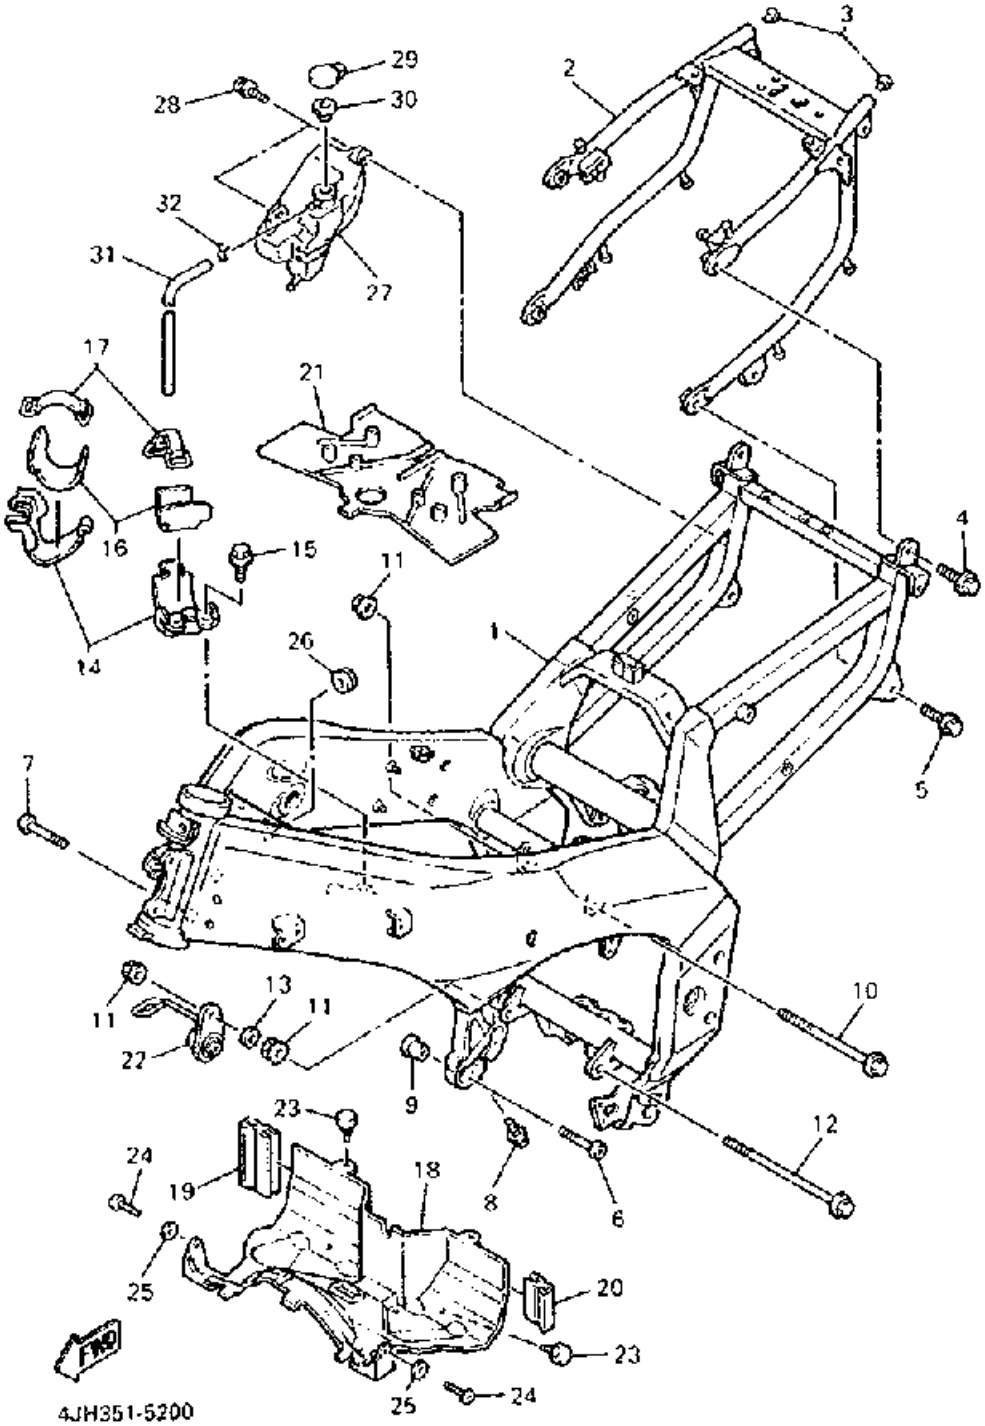


Ref No	Part No	Description
01	4JH-21110-10-T9	Frame Comp.
02	4FM-21645-01-00	Stay, Rear
03	90338-16148-00	Plug
04	95817-08016-00	Bolt, Flange
05	95817-08035-00	Bolt, Flange
06	91317-10045-00	Bolt
07	91317-10050-00	Bolt
08	95817-10025-00	Bolt, Flange
09	90387-115V8-00	Collar
10	90105-10130-00	Bolt, Washer Based
11	95707-10500-00	Nut, Flange
12	95827-10175-00	Bolt, Flange
13	90201-10774-00	Washer, Plate
14	4JH-21359-00-00	Bracket, Coil
15	95817-06012-00	Bolt, Flange
16	4JH-21488-00-00	Damper
17	3TJ-82131-00-00	Band, Battery
18	4JH-2117M-00-00	Cover 2
19	4JH-21208-00-00	Seal Set, 1
20	4JH-21209-00-00	Seal Set, 2
21	4JH-2117N-01-00	Cover 3
22	4JH-21446-00-00	Stay, Muffler 2
23	36Y-21639-00-00	Damper 2
24	98507-06016-00	Screw, Pan Head
25	92907-06600-00	Washer, Plate
26	90480-18171-00	Grommet
27	4FM-21871-00-00	Tank, Recovery
28	90159-06033-00	Screw, With Washer
29	4L0-21875-00-00	Cap
30	1AA-21874-00-00	Gasket
31	90445-08786-00	Hose
32	90467-08003-00	Clip


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

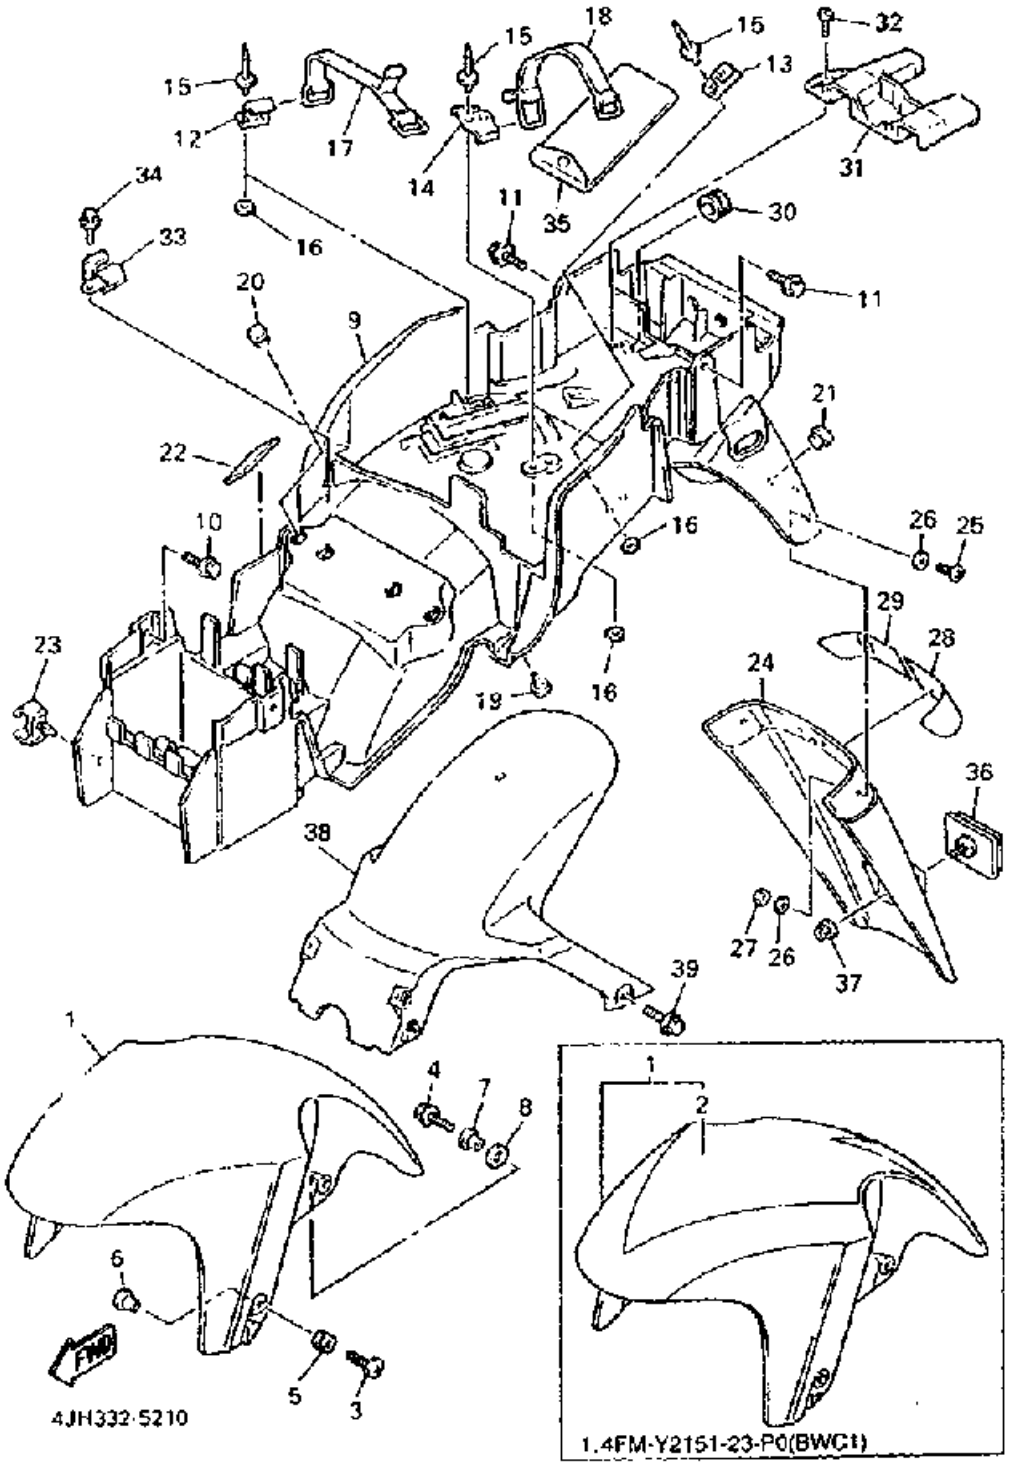

Ref No	Part No	Description
01	4FM-Y2151-23-P0	Front Fender Comp.
01	4FM-21511-03-R0	Fender, Front
01	4FM-21511-03-4B	Fender, Front
02	4JH-21569-00-00	• . Graphic 1
03	90154-06061-00	Screw, Binding
04	95807-06016-00	Bolt, Flange
05	90480-12072-00	Grommet
06	90387-065J6-00	Collar
07	90387-087L0-00	Collar
08	4FM-28372-00-00	Damper
09	4FM-21611-03-00	Fender, Rear
10	90119-06118-00	Bolt, With Washer
11	90119-06205-00	Bolt, With Washer
12	3VD-21366-00-00	Hook, Tool Band
13	1M1-21366-00-00	Hook, Tool Band
14	4JH-2161A-00-00	Bracket 3
15	90267-40076-00	Rivet, Blind
16	90201-04018-00	Washer, Plate
17	4J2-82131-01-00	Band, Battery
18	36X-2811G-00-00	Band
19	35T-24724-00-00	Damper, Seat
20	90338-10132-00	Plug
21	90338-07043-00	Plug
22	3XV-21778-00-00	Damper, Locating 1
23	90464-09130-00	Clamp
24	3GM-21621-00-00	Flap
25	90149-04278-00	Screw
26	90201-04018-00	Washer, Plate
27	95607-04100-00	Nut, U
28	3GM-21649-00-00	Damper
29	3GM-21649-10-00	Damper
30	90480-10258-00	Grommet
31	4JH-2163A-00-00	Cover, Rear Fender 1
32	97707-60016-00	Screw, Tapping
33	4JH-21366-00-00	Hook, Tool Band
34	95807-06016-00	Bolt, Flange
35	1WG-28100-01-00	Tool Kit
36	3G1-85130-01-00	Rear Reflector Assy
37	95701-05500-00	Nut, Flange
38	4JH-21650-00-00	Rear Fender Comp.
39	90119-06194-00	Bolt, With Washer


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

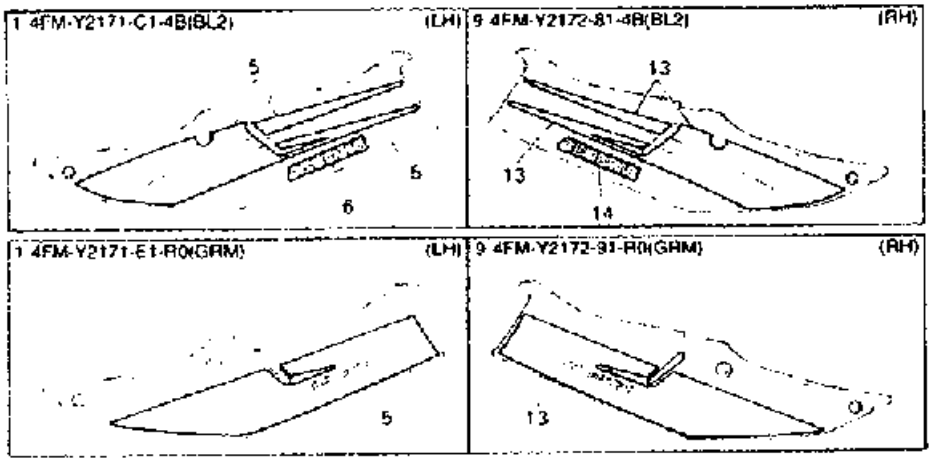

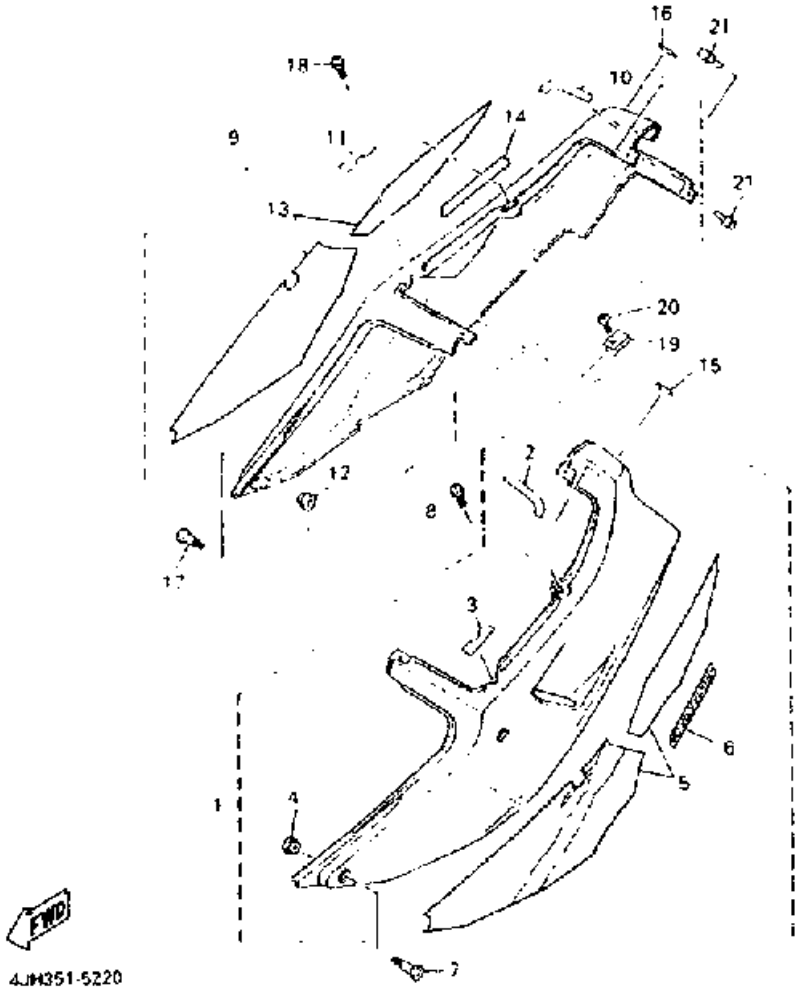


Ref No	Part No	Description
01	4FM-Y2171-B1-P0	Cover, Side 1
01	4FM-Y2171-C1-4B	Cover, Side 1
01	4FM-Y2171-E1-R0	Cover, Side 1
02	3GM-21575-00-00	• . Seal 1
03	4FM-2173T-00-00	• . Tape 1
04	90480-13398-00	• . Grommet
05	4JH-2173L-20-00	• . Graphic Set 1
05	4JH-2173L-30-00	• . Graphic Set 1
05	4JH-2173E-00-00	• . Graphic 1
06	4JH-21781-10-00	• . Emblem 1
07	90150-06306-00	Screw, Round Head
08	90159-06093-00	Screw, With Washer
09	4FM-Y2172-71-P0	Cover, Side 2
09	4FM-Y2172-81-4B	Cover, Side 2
09	4FM-Y2172-91-R0	Cover, Side 2
10	3GM-21576-00-00	• . Seal 2
11	4FM-2173T-00-00	• . Tape 1
12	90480-13398-00	• . Grommet
13	4JH-2174L-20-00	• . Graphic Set 2
13	4JH-2174L-30-00	• . Graphic Set 2
13	4JH-2173F-00-00	• . Graphic 2
14	4JH-21781-10-00	• . Emblem 1
15	3TU-2178A-00-00	Label
16	3TU-2178A-00-00	Label
17	90150-06036-00	Screw, Round Head
18	90159-06093-00	Screw, With Washer
19	90183-04064-00	Nut, Spring
20	97707-40010-00	Screw, Tapping
21	90480-04166-00	Grommet

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

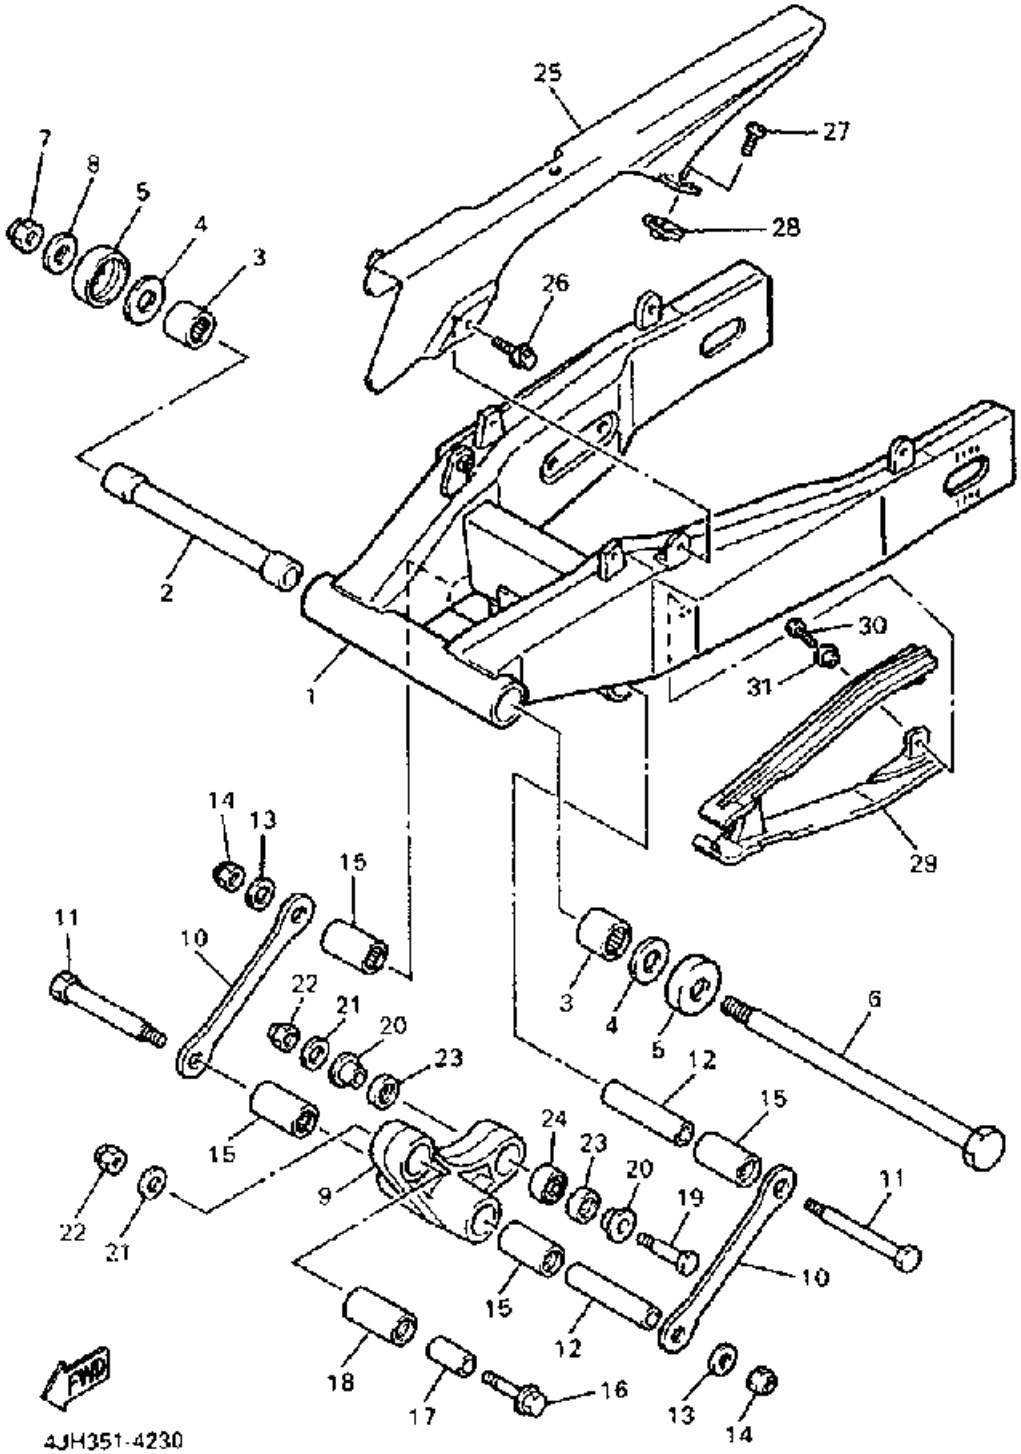

Ref No	Part No	Description
01	47H-22110-00-T9	Rear Arm Comp.
02	47X-22184-00-00	Bush
03	93320-32403-00	Bearing
04	90201-161J3-00	Washer, Plate
05	4X7-22129-00-00	Cover, Thrust 2
06	1UY-22141-00-00	Shaft, Pivot
07	90185-16127-00	Nut, Self-locking
08	90201-160F6-00	Washer, Plate
09	3GM-2217A-00-00	Arm, Relay
10	3GM-2217M-00-00	Arm 1
11	90101-12673-00	Bolt
12	90387-126T1-00	Collar
13	90201-126A7-00	Washer, Plate
14	95617-12100-00	Nut, U
15	93317-41761-00	Bearing
16	90105-10727-00	Bolt, Washer Based
17	90387-100T8-00	Collar
18	93317-42060-00	Bearing
19	90101-10659-00	Bolt
20	90387-124W2-00	Collar
21	90201-101J1-00	Washer, Plate
22	95607-10100-00	Nut, U
23	93101-16131-00	Oil Seal
24	93399-99919-00	Bearing
25	4JH-22311-00-00	Case, Chain
26	90119-06194-00	Bolt, With Washer
27	90154-05013-00	Screw, Binding
28	90183-05024-00	Nut, Spring
29	4JH-22151-00-00	Seal, Guard
30	97007-06014-00	Bolt
31	90387-062M9-00	Collar


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

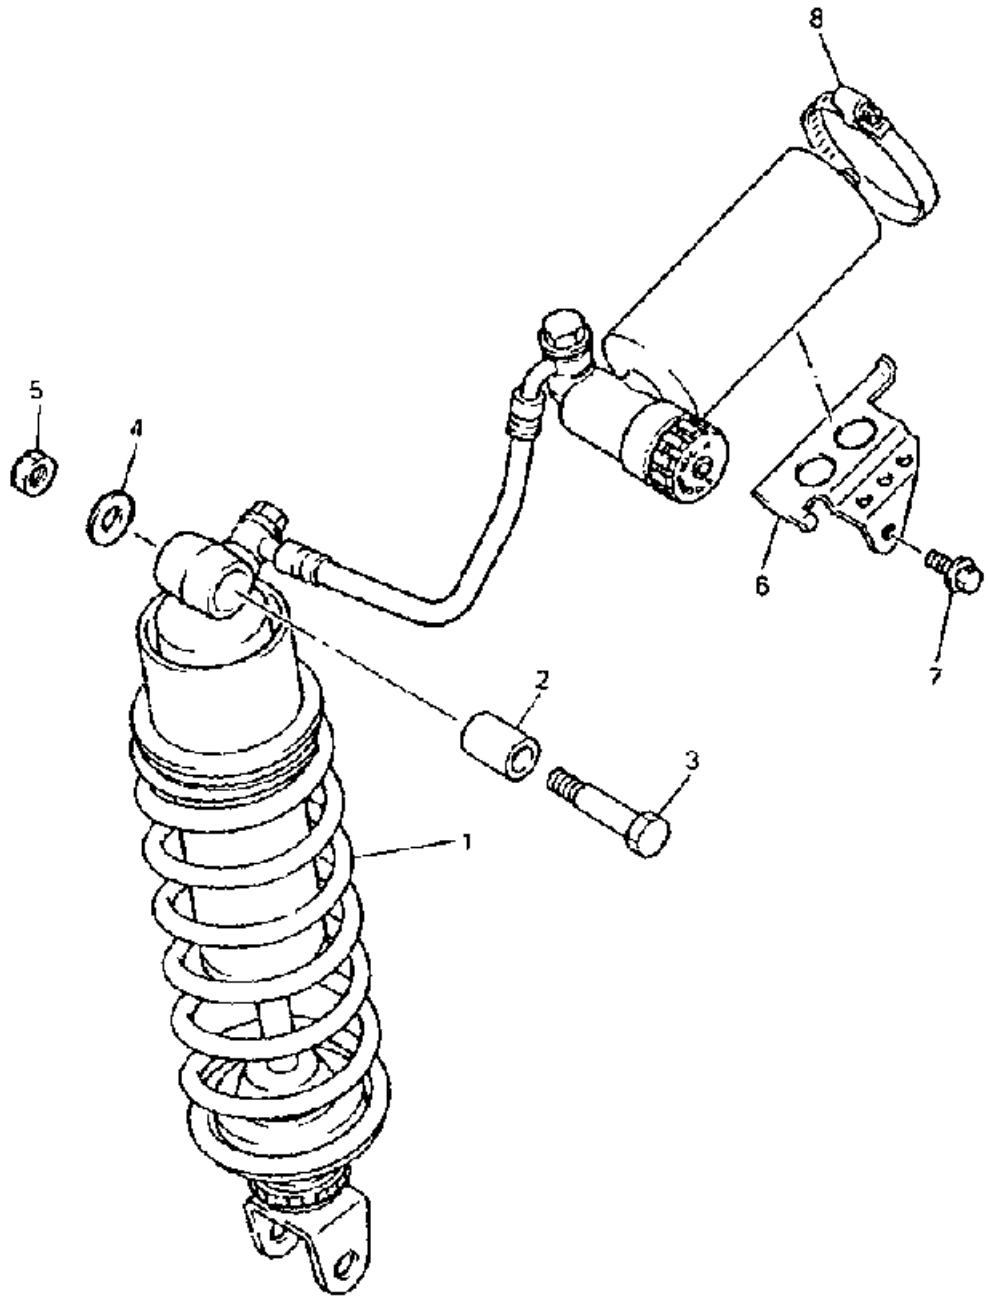

4JH351-5240

Ref No	Part No	Description
01	4JH-22210-30-00	Shock Absorber Assy, Rear
02	90387-124T2-00	Collar
03	90109-10554-00	Bolt
04	90201-101J1-00	Washer, Plate
05	95607-10100-00	Nut, U
06	4FM-22262-00-00	Holder, Sub Tank
07	95807-06016-00	Bolt, Flange
08	90450-32008-00	Hose Clamp Assy


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

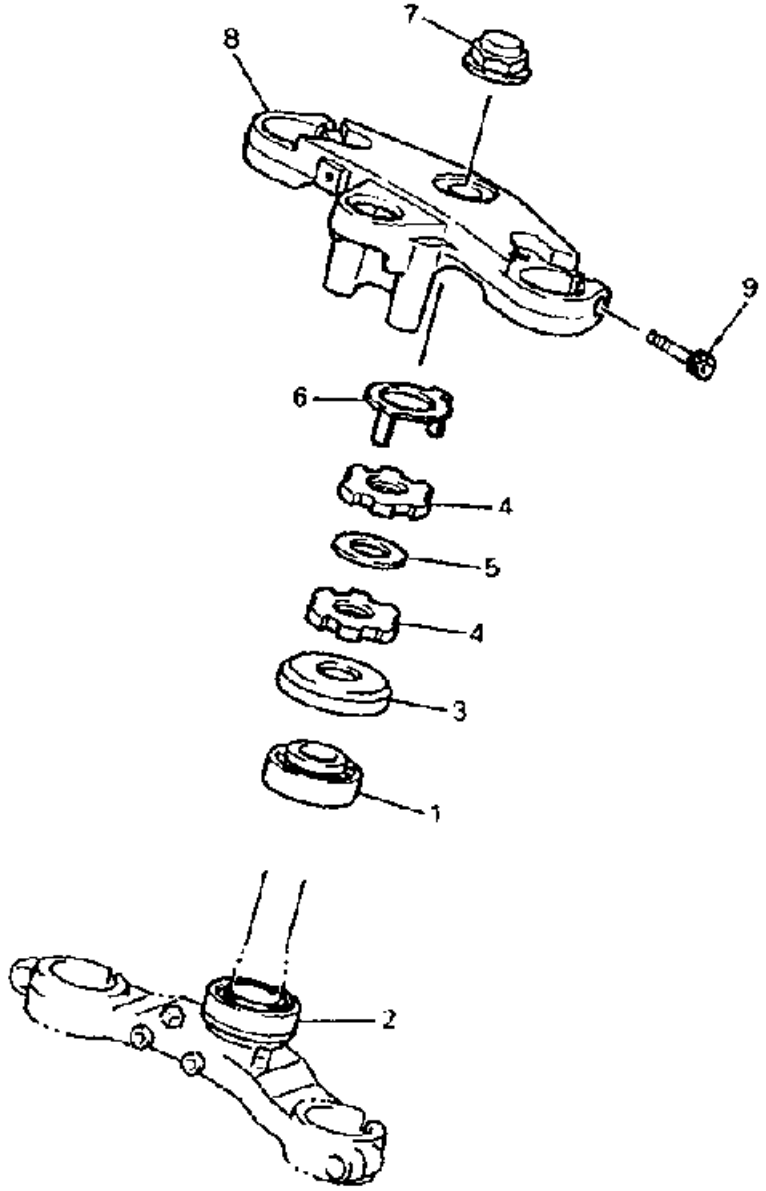

4JH351-4250


Ref No	Part No	Description
01	93332-00001-00	Bearing
02	93332-00008-00	Bearing
03	3HE-23416-00-00	Cover, Ball Race 2
04	90179-25033-00	Nut
05	90202-26142-00	Washer, Plate
06	26H-23418-01-00	Washer, Special
07	90176-22050-00	Nut, Crown
08	4JH-23435-00-00	Crown, Handle
09	91317-08030-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

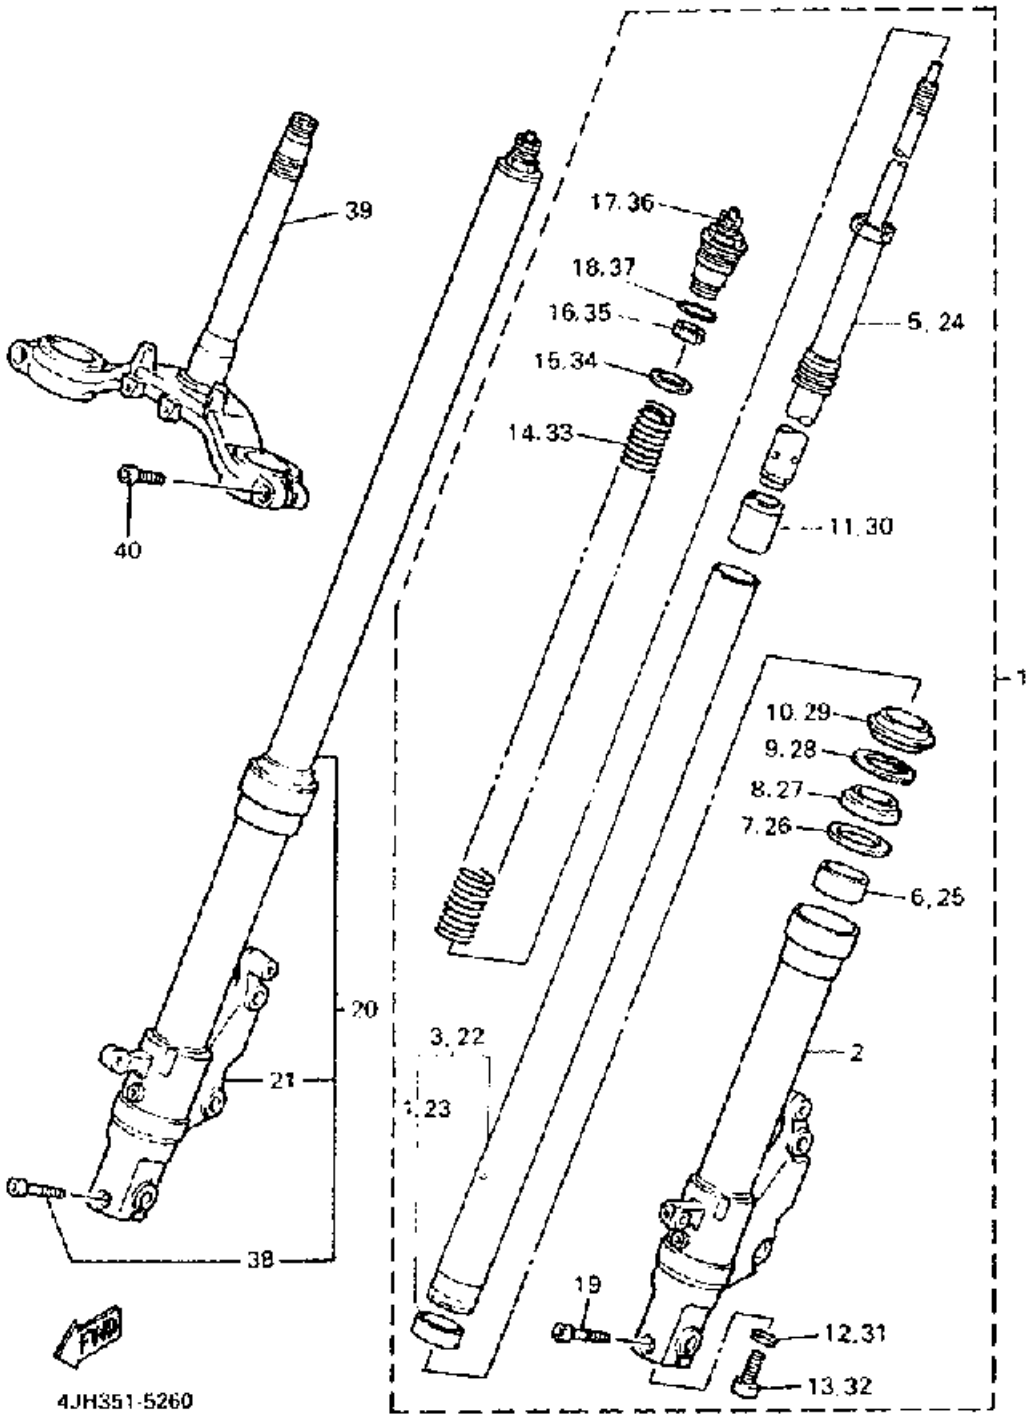


Ref No	Part No	Description
01	4JH-23102-10-00	Front Fork Assy (l.h)
02	4JH-23126-10-00	• . Tube, Outer (left)
03	4JH-23110-10-00	• . Inner Tube Comp.1
04	3JD-23171-L0-00	•• .. Piston, Front Fork
05	4JH-23170-10-00	• . Cylinder Comp., Front Fork
06	3GM-23125-50-00	• . Metal, Slide 1
07	36Y-23146-10-00	• . Washer, Oil Seal
08	3SP-23145-L0-00	• . Oil Seal
09	26H-23156-00-00	• . Clip, Oil Seal
10	3XV-23144-50-00	• . Seal, Dust
11	3LC-23173-00-00	• . Spindle, Taper
12	2K8-23158-L0-00	• . Gasket
13	3LC-23181-00-00	• . Bolt, Hexagon Socket Head
14	4JH-23141-10-00	• . Spring, Front Fork
15	3LC-23149-00-00	• . Washer, Spring Upper
16	3LC-23357-00-00	• . Nut
17	4JH-23111-10-00	• . Bolt, Cap
18	43F-23188-10-00	• . O-ring
19	91314-10045-00	• . Bolt
20	4JH-23103-10-00	Front Fork Assy (r.h)
21	4JH-23136-10-00	• . Tube, Outer (right)
22	4JH-23110-10-00	• . Inner Tube Comp.1
23	3JD-23171-L0-00	•• .. Piston, Front Fork
24	4JH-23170-10-00	• . Cylinder Comp., Front Fork
25	3GM-23125-50-00	• . Metal, Slide 1
26	36Y-23146-10-00	• . Washer, Oil Seal
27	3SP-23145-L0-00	• . Oil Seal
28	26H-23156-00-00	• . Clip, Oil Seal
29	3XV-23144-50-00	• . Seal, Dust
30	3LC-23173-00-00	• . Spindle, Taper
31	2K8-23158-L0-00	• . Gasket
32	3LC-23181-00-00	• . Bolt, Hexagon Socket Head
33	4JH-23141-10-00	• . Spring, Front Fork
34	3LC-23149-00-00	• . Washer, Spring Upper
35	3LC-23357-00-00	Nut
36	4JH-23111-10-00	• . Bolt, Cap
37	43F-23188-10-00	• . O-ring
38	91314-10045-00	• . Bolt
39	4JH-23340-00-00	Under Bracket Comp.
40	91314-12030-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

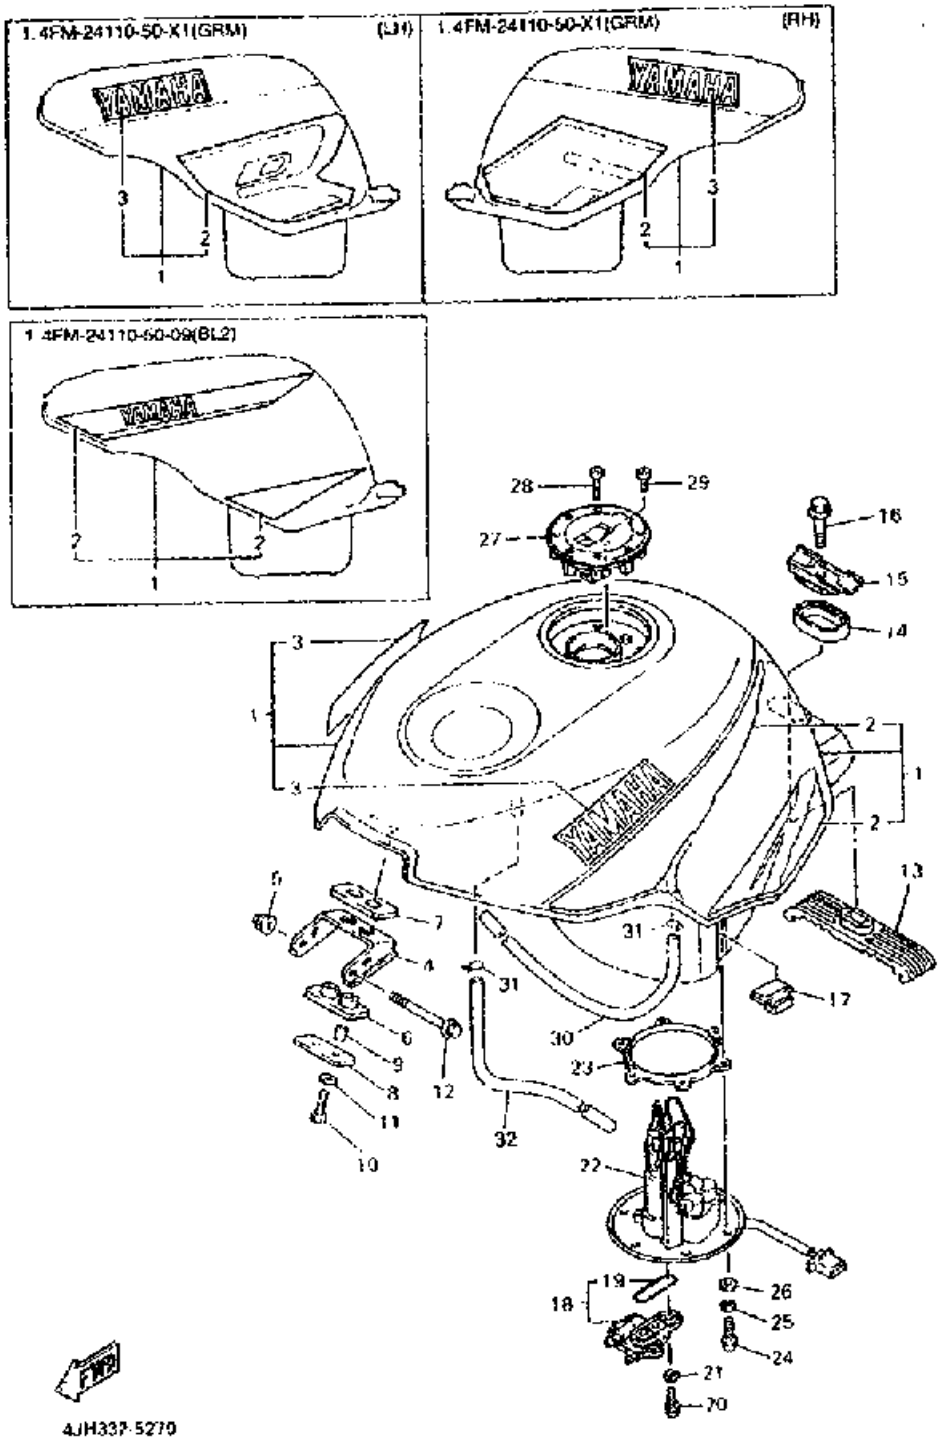


Ref No	Part No	Description
01	4FM-24110-50-X1	Fuel Tank Comp.
01	4FM-24110-50-08	Fuel Tank Comp.
01	4FM-24110-50-09	Fuel Tank Comp.
02	4JH-24240-20-00	• . Graphic Set
02	4JH-24240-30-00	• . Graphic Set
02	4JH-24240-40-00	• . Graphic Set
03	99226-00160-00	• . Emblem, Yamaha
03	99227-00160-00	• . Emblem, Yamaha
04	4FM-24191-00-00	Bracket, Fuel Tank 1
05	90176-06055-00	Nut, Crown
06	2GH-24181-00-00	Damper, Locating 1
07	2GH-23183-00-00	Circlip
08	2GH-24186-00-00	Washer, Special
09	90387-06299-00	Collar
10	97007-06025-00	Bolt
11	92907-06100-00	Washer, Spring
12	95817-06075-00	Bolt, Flange
13	33M-24182-01-00	Damper, Locating 2
14	3Y6-24183-00-00	Damper, Locating 3
15	4FM-24187-00-00	Washer, Special
16	95817-08035-00	Bolt, Flange
17	4JH-24183-00-00	Damper, Locating 3
18	3FV-24500-01-00	Fuel Cock Assy 1
19	4X8-24512-00-00	• . Gasket
20	90149-06008-00	Screw
21	90202-05187-00	Washer, Plate
22	4FM-13910-00-00	Fuel Pump Assy
23	4FM-2414G-00-00	Seal
24	98507-05016-00	Screw, Pan Head
25	92907-05100-00	Washer, Spring
26	92907-05600-00	Washer, Plate
27	4HN-24602-00-00	Cap Assy
28	90110-05112-00	Bolt, Hexagon Socket Head
29	91317-05010-00	Bolt
30	90445-107H3-00	Hose
31	90467-09006-00	Clip
32	90445-105G5-00	Hose

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

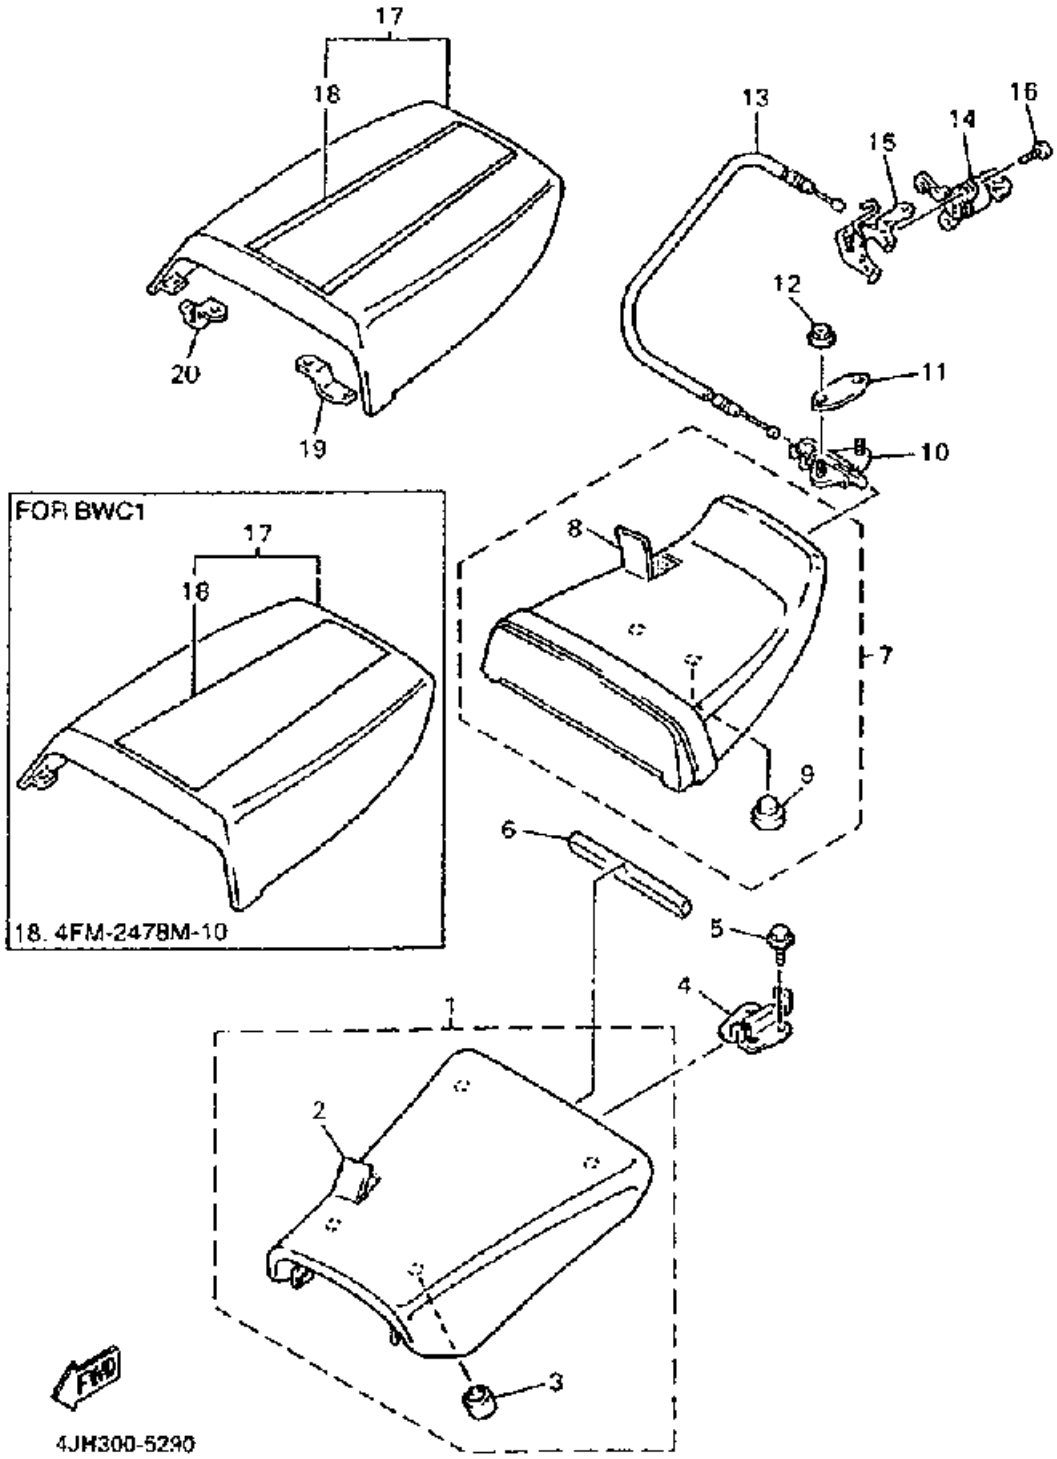


Ref No	Part No	Description
01	4JH-24710-00-00	Single Seat Assy
02	4JH-24711-00-00	• . Cover, Single Seat
03	278-27114-00-00	• . Stopper, Main Stand
04	4FM-24780-00-00	Seat Lock Assy
05	95807-06016-00	Bolt, Flange
06	88T-77198-00-00	Damper 1
07	4FM-24750-10-00	Tandem Seat Assy
08	4FM-24751-00-00	• . Cover, Tandem Seat
09	509-24724-00-00	• . Damper, Seat
10	4BP-24780-00-00	Seat Lock Assy
11	4BP-24792-00-00	Plate
12	95707-06500-00	Nut, Flange
13	4FM-2478E-01-00	Cable, Seat Lock
14	3CK-W2470-00-00	Seat Lock Assy
15	4FM-2117K-00-00	Stay, Lock
16	90149-06308-00	Screw
17	4FM-Y2479-60-P0	Cover, Seat
17	4FM-Y2479-4B-00	Cover, Seat
17	4FM-24791-00-R0	Cover, Seat Back
18	4FM-2478M-10-00	• . Graphic, Seat
18	4JH-2478M-20-00	• . Graphic, Seat
19	4FM-2475J-00-00	Bracket, Seat Lever 2
20	4FM-2475H-00-00	Bracket, Seat Lever 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

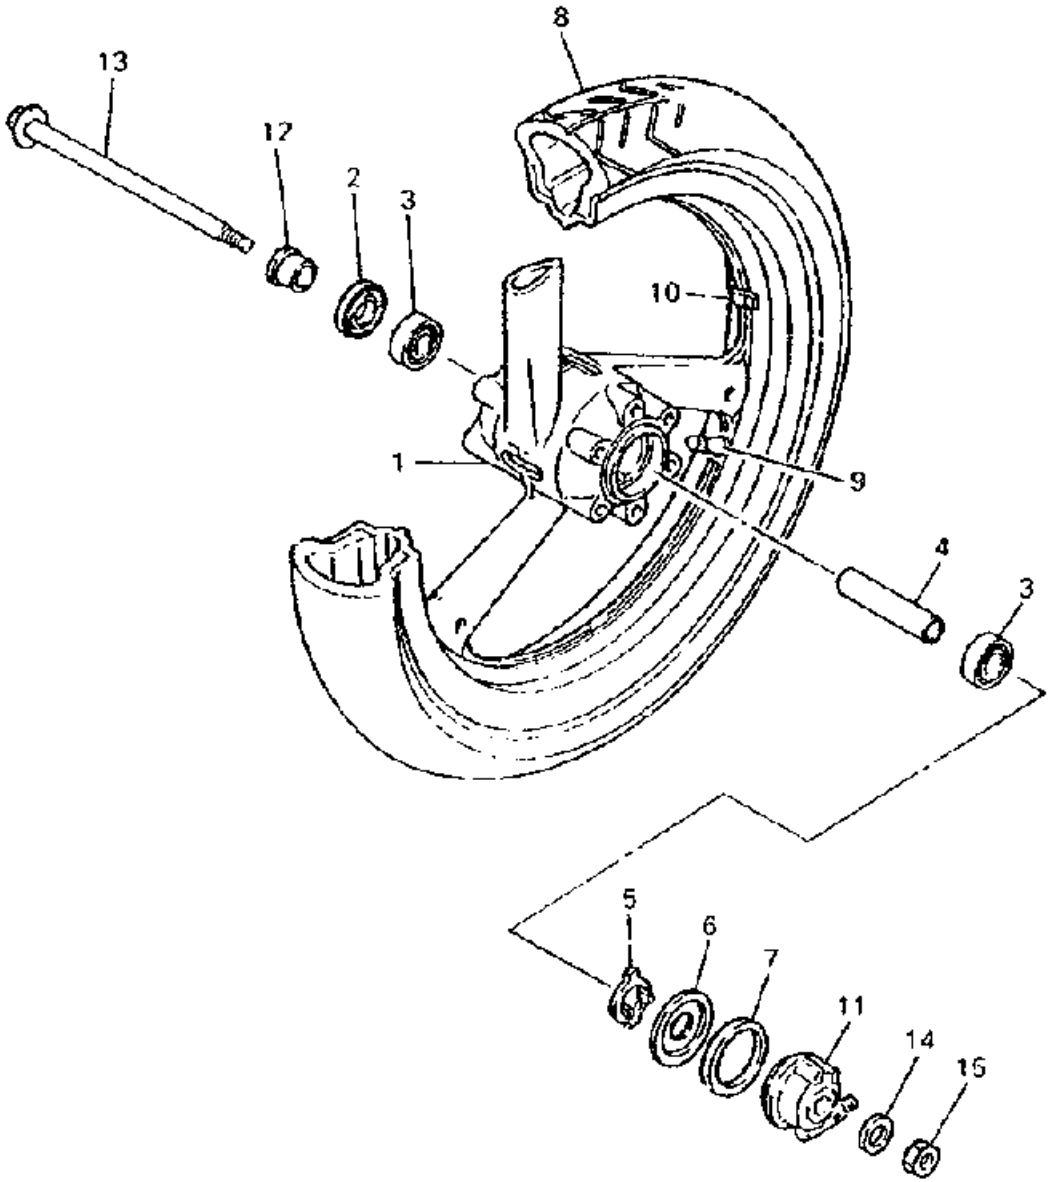


Ref No	Part No	Description
01	3TJ-25168-00-P1	Cast Wheel, Front
01	3TJ-25168-00-7B	Cast Wheel, Front
02	93102-23252-00	Oil Seal
03	93306-20314-00	Bearing
04	90560-17358-00	Spacer
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93105-45017-00	Oil Seal
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	4HM-25190-00-00	Gear Unit Assy
12	90387-177V5-00	Collar
13	4JH-25181-00-00	Axle, Wheel
15	90170-14349-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

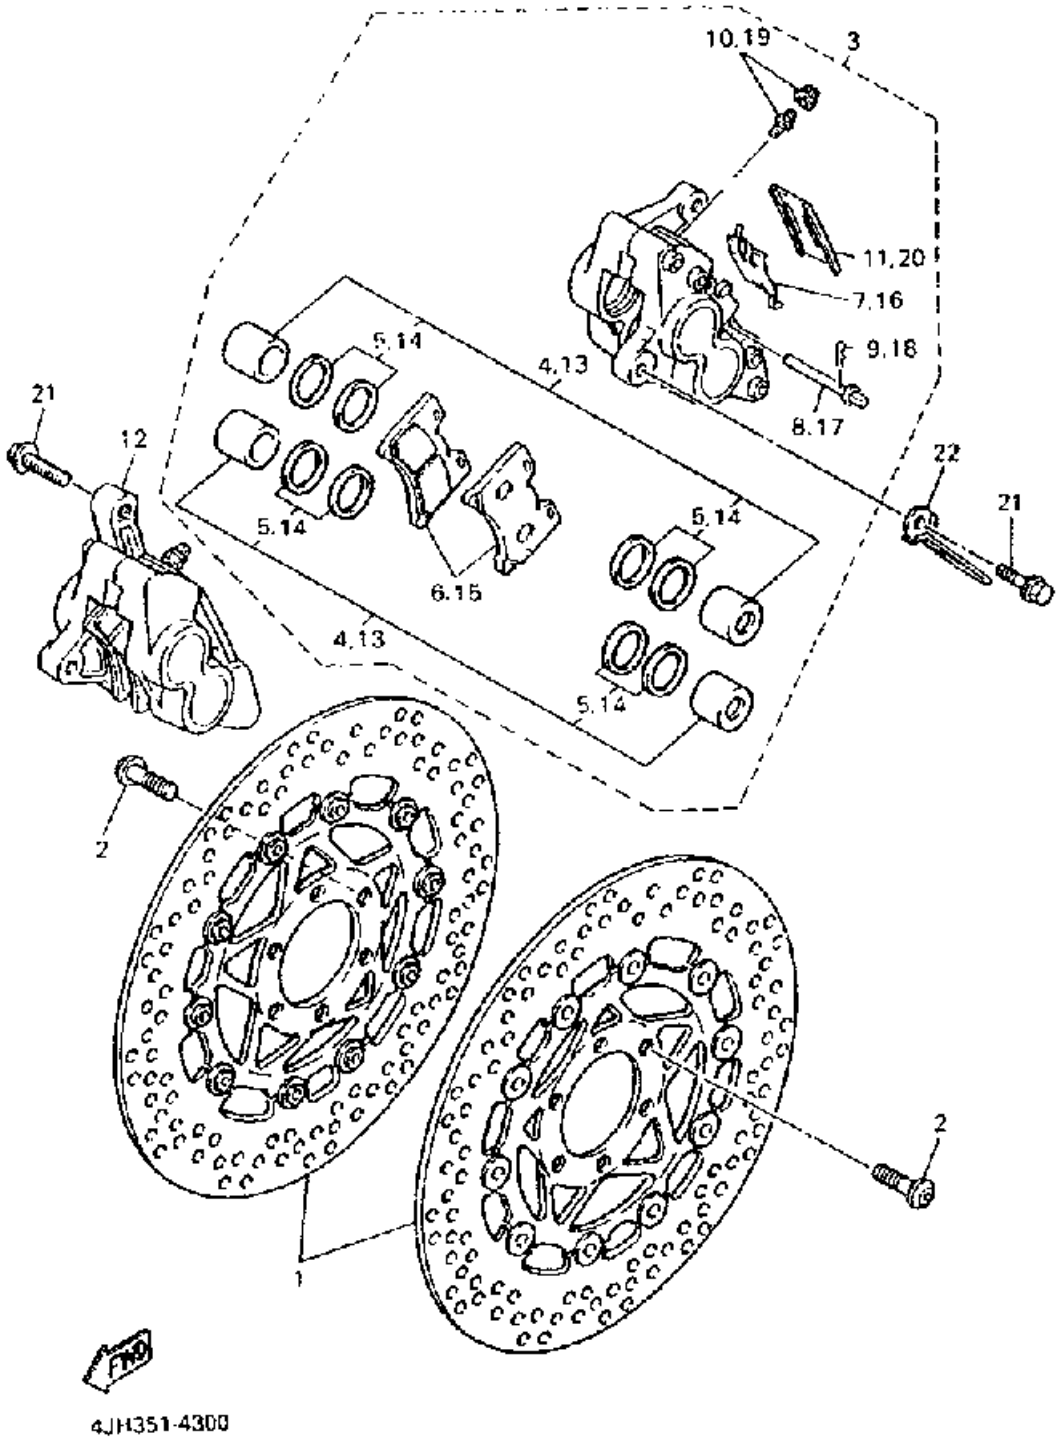


Ref No	Part No	Description
01	4JH-2581T-00-00	Disc Brake Assy
02	90109-08718-00	Bolt
03	3HE-2580T-60-00	Caliper Assy (left)
04	3HE-W0057-50-00	• . Piston Assy, Caliper
05	3HE-W0047-50-00	•• .. Caliper Seal Kit
06	3GM-W0045-02-00	• . Brake Pad Kit
07	3GM-25919-00-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3GM-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Bleed Screw Kit
11	1KT-25836-00-00	• . Cover, Dust
12	3HE-2580U-60-00	Caliper Assy (right)
13	3HE-W0057-00-00	• . Piston Assy, Caliper
14	3HE-W0047-50-00	•• .. Caliper Seal Kit
15	3GM-W0045-02-00	• . Brake Pad Kit
16	3GM-25919-00-00	• . Support, Pad
17	3HE-25924-00-00	• . Pin, Pad
18	3GM-25925-00-00	• . Clip
19	1J3-W0048-00-00	• . Bleed Screw Kit
20	1KT-25836-00-00	• . Cover, Dust
21	90105-10638-00	Bolt, Washer Based
22	4FM-21596-00-00	Holder

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

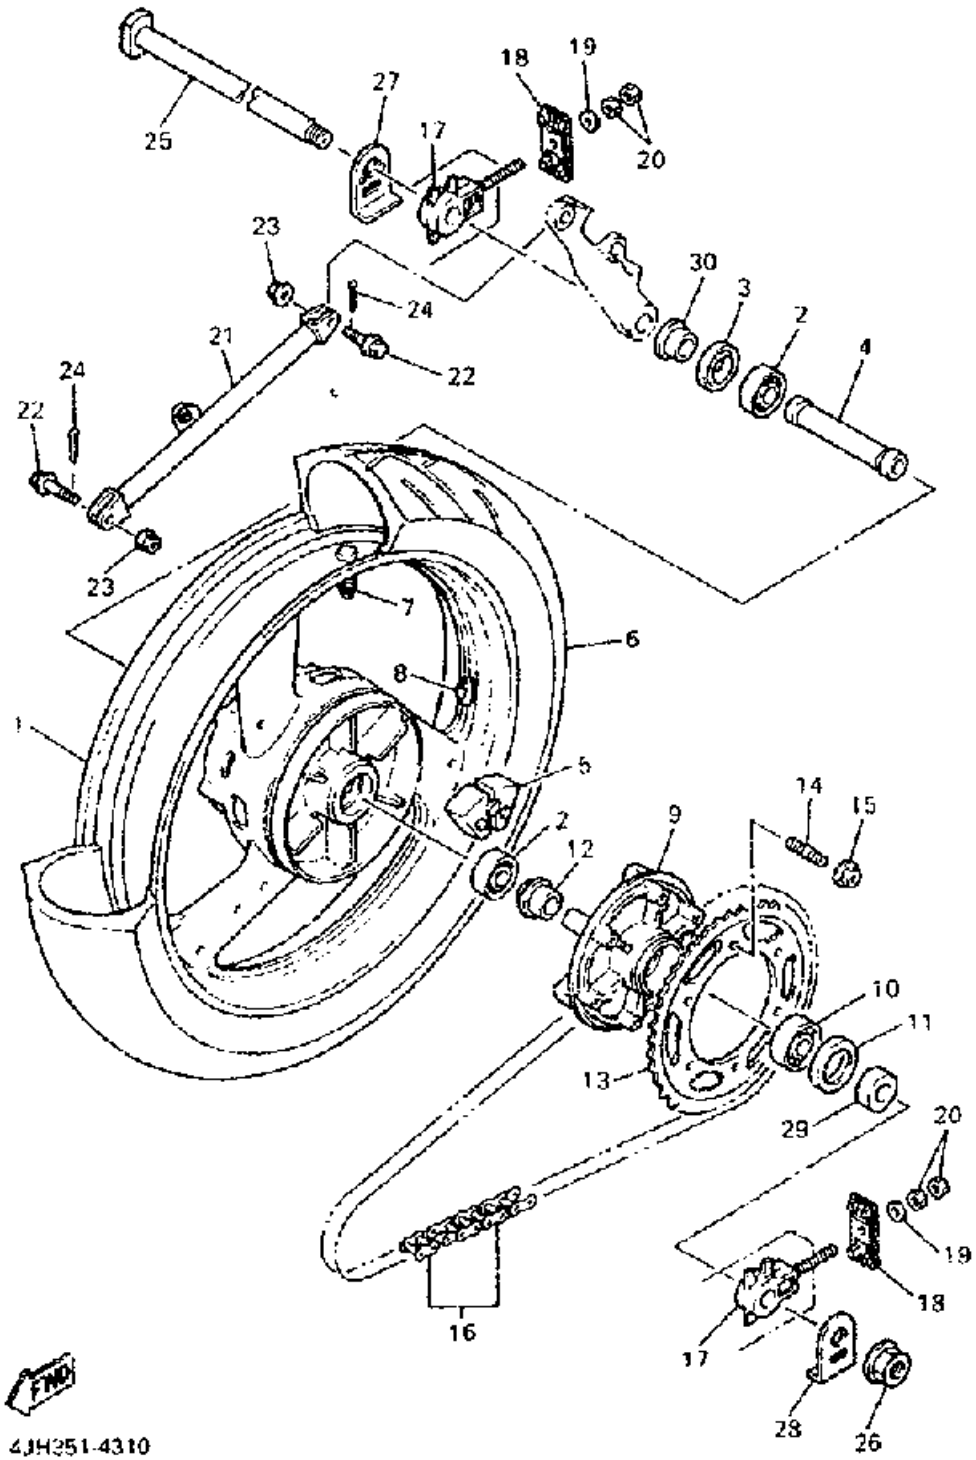


Ref No	Part No	Description
01	4JH-25338-00-P1	Cast Wheel, Rear
01	4JH-25338-00-7B	Cast Wheel, Rear
02	93306-20469-00	Bearing
03	93102-28022-00	Oil Seal
04	90387-2004F-00	Collar
05	4FM-25364-00-00	Damper
07	93900-00030-00	Valve, Rim
08	29L-25398-00-00	Balancer, Wheel (10g)
08	29L-25398-10-00	Balancer, Wheel (20g)
08	29L-25398-20-00	Balancer, Wheel (30g)
09	4FM-25366-00-00	Clutch, Hub
10	93305-10644-00	Bearing
11	93102-40211-00	Oil Seal
12	90387-2004E-00	Collar
13	4JH-25447-00-00	Sprocket, Driven (47z)
14	90116-10575-00	Bolt, Stud
15	95617-10200-00	Nut, Self-locking
16	94581-59108-00	Chain (d.i.d.50va7-108le)
17	3XW-25388-00-00	Puller, Chain 1
18	4JH-22174-00-00	End 1
19	92907-08600-00	Washer, Plate
20	95307-08600-00	Nut
21	4JH-25371-00-00	Bar, Tension
22	90105-08321-00	Bolt, Washer Based
23	95707-08500-00	Nut, Flange
24	91490-20020-00	Pin, Cotter
25	3GM-25381-A0-00	Axle, Wheel
26	95607-18200-00	Nut, Self-locking
27	4JH-25384-02-00	Washer, Wheel
28	4JH-25384-11-00	Washer, Wheel
29	90387-2004C-00	Collar
30	90387-2004D-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

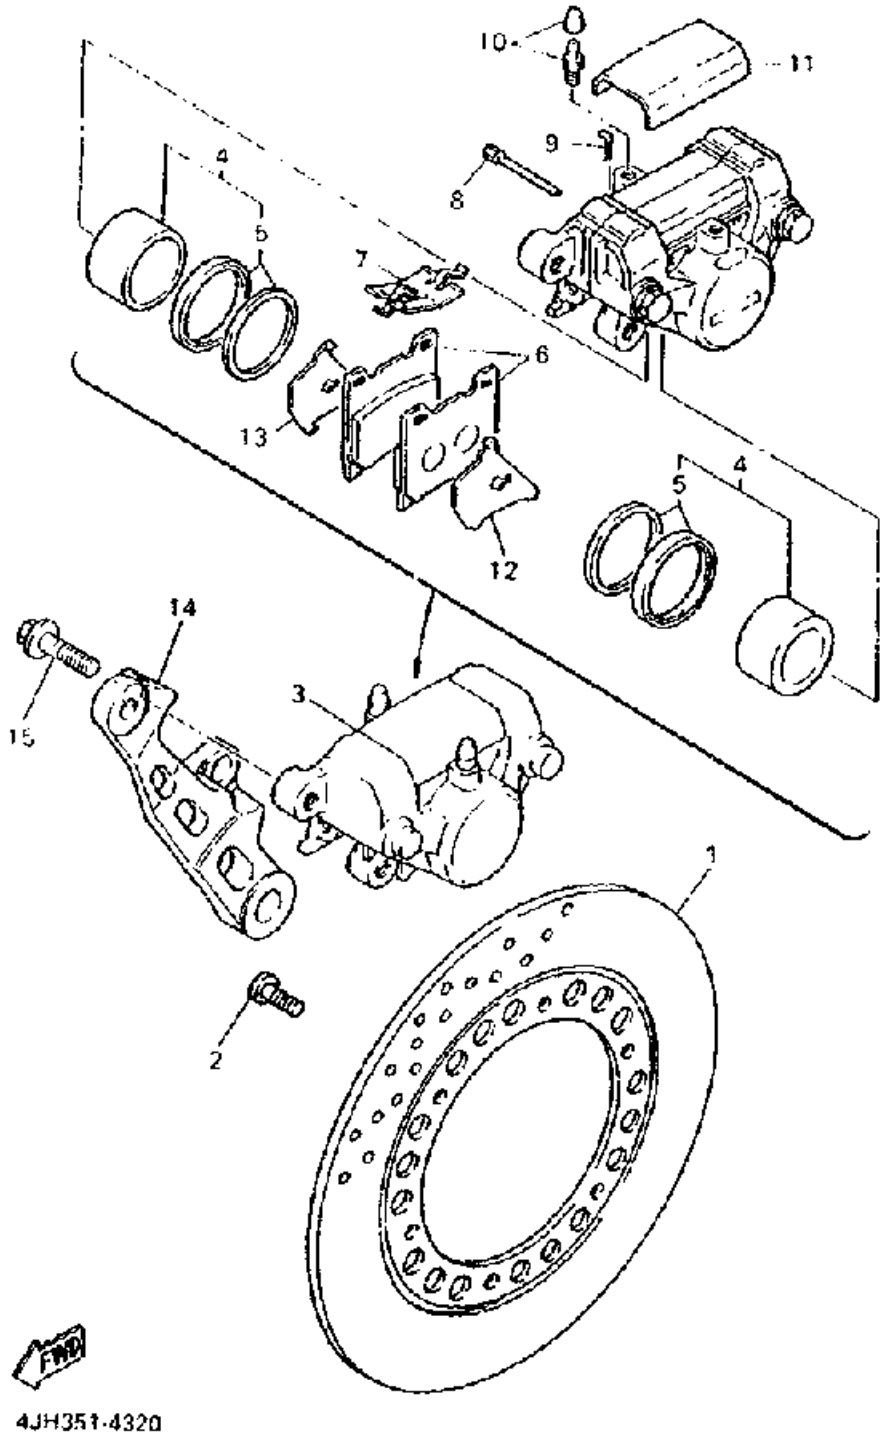


Ref No	Part No	Description
01	4JH-2582W-00-00	Disc, Rear Brake 2
02	90109-081F0-00	Bolt
03	3HE-2580W-10-00	Caliper Assy, Rear 2
04	31A-W0057-00-00	• . Piston Assy, Caliper
05	31A-W0047-00-00	•• .. Caliper Seal Kit
06	1FK-W0046-02-00	• . Brake Pad Kit 2
07	29L-25919-A0-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3HE-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Bleed Screw Kit
11	42H-25836-00-00	• . Cover, Dust
12	1FK-25827-00-00	• . Shim, Caliper
13	1FK-25828-00-00	• . Shim, Caliper
14	4JH-25819-00-00	Bracket, Caliper
15	90105-10638-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

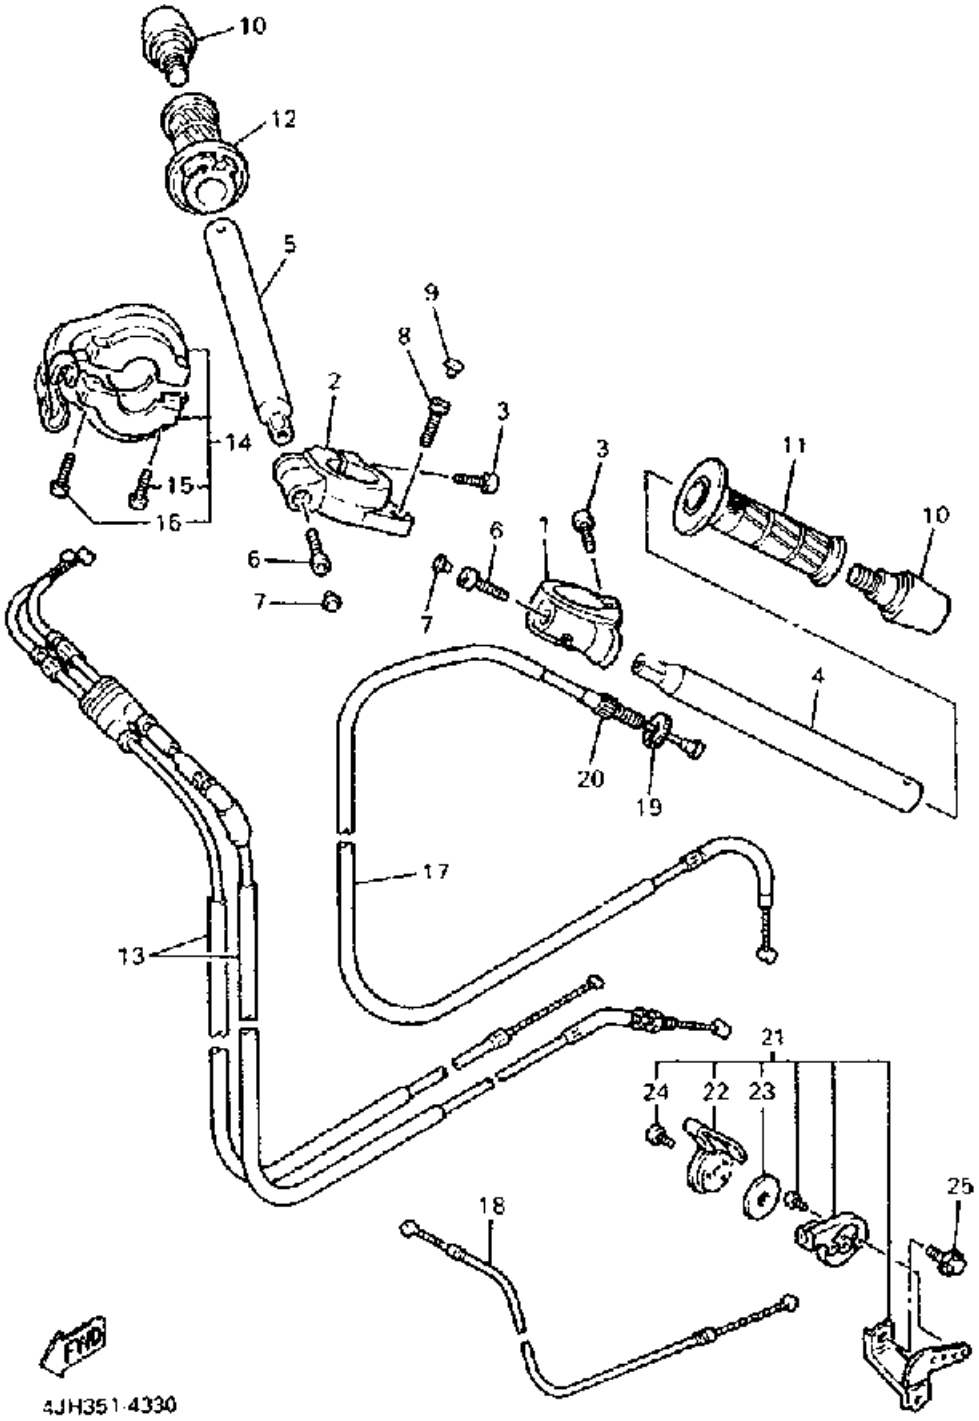


Ref No	Part No	Description
01	4JH-26121-00-00	Handlebar (left)
02	4JH-26122-00-00	Handlebar (right)
03	91317-06020-00	Bolt
04	4JH-26111-00-00	Handlebar
05	4JH-26112-00-00	Bar, Handle
06	91317-08025-00	Bolt
07	341-23469-00-00	Cap, Bolt
08	91317-06025-00	Bolt
09	10L-23469-00-00	Cap, Bolt
10	36Y-26246-00-00	End, Grip
11	3FM-26241-00-00	Grip (left)
12	4JD-26240-00-00	Grip Assy
13	4JH-26302-00-00	Throttle Cable Assy
14	3LN-26270-01-00	Cable Connector Cap Assy
15	98507-05020-00	• . Screw, Pan Head
16	98507-05025-00	• . Screw, Pan Head
17	4JH-26335-00-00	Cable, Clutch
18	4JH-26331-00-00	Cable, Starter 1
19	90179-08148-00	Nut
20	90123-08048-00	Bolt
21	4JH-83940-00-00	Starter Assy
22	1WG-83941-00-00	• . Lever, Starter
23	90209-10131-00	• . Washer
24	98907-06008-00	• . Screw, Bind
25	95807-06010-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

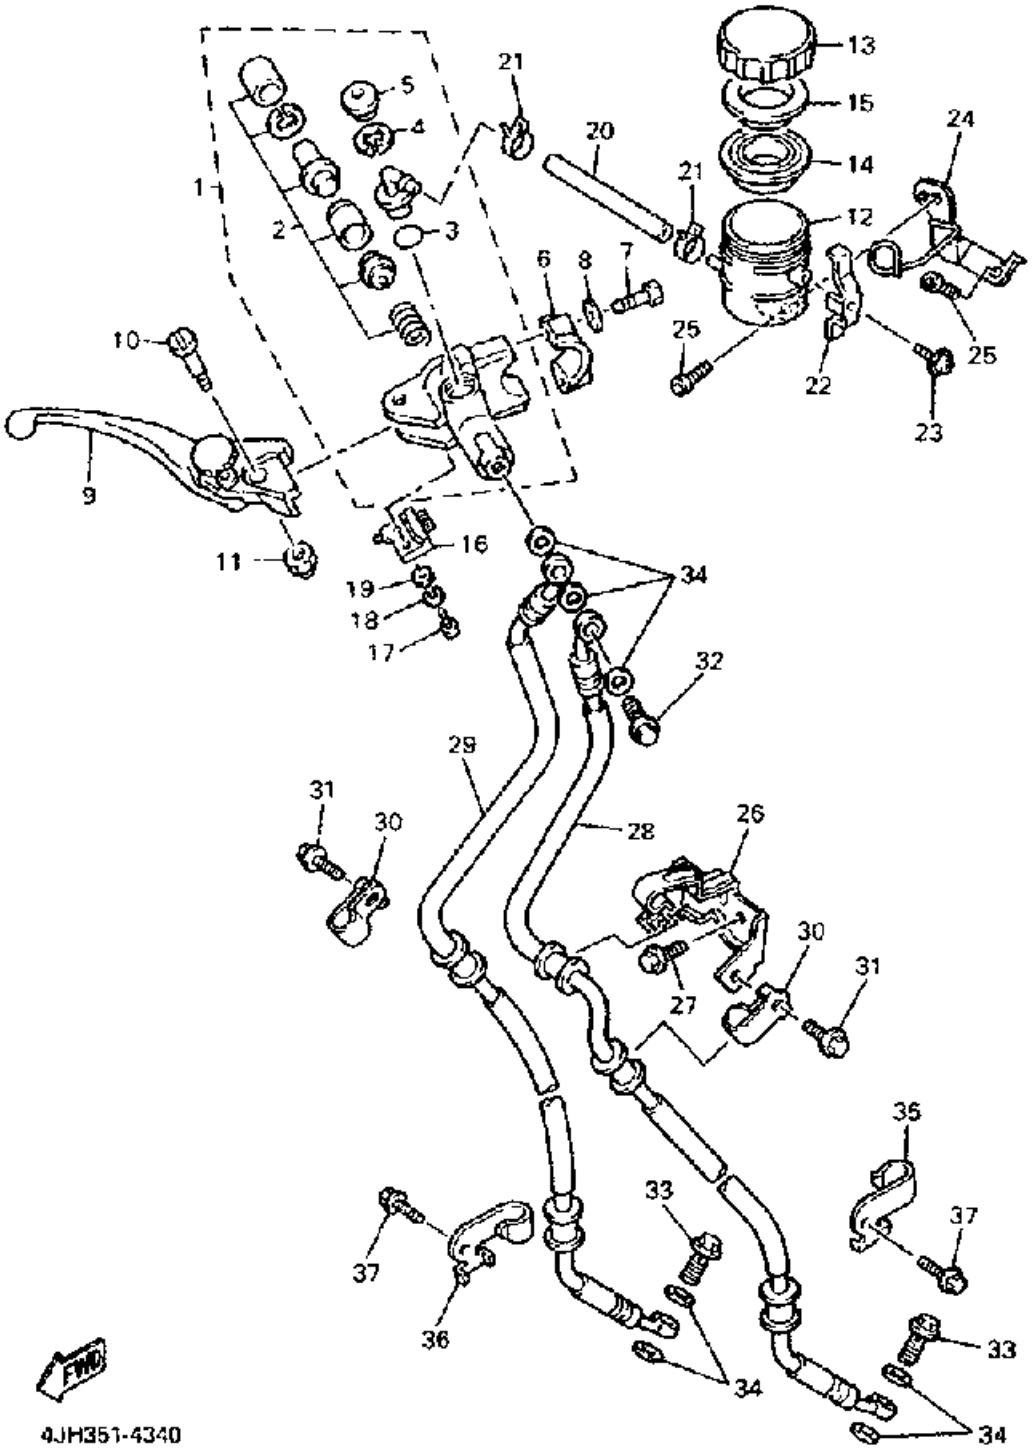


Ref No	Part No	Description
01	3GM-W2587-50-00	Master Cylinder Sub Assy
02	3GM-W0041-50-00	• . Cylinder Kit, Master
03	93210-15620-00	• . O-ring
04	2VN-25866-00-00	• . Circlip
05	3FV-2589A-00-00	• . Cover, Dust
06	56A-25867-00-00	Bracket, Master Cylinder
07	97016-06025-00	Bolt
08	92906-06600-00	Washer, Plate
09	3TJ-83922-01-00	Lever 2
10	3FV-2589F-00-00	Bolt, Lever
11	95617-06100-00	Nut, U
12	3FV-25894-00-00	Tank, Reservoir
13	3GM-25852-50-00	Cap, Reservoir
14	3FV-25854-00-00	Diaphragm, Reservoir
15	2J2-25855-50-00	Bush,diaphragm
16	3FV-83980-00-00	Front Stop Switch Assy
17	98517-04012-00	Screw, Pan Head
18	92990-04100-00	Washer, Spring
19	92901-04600-00	Washer, Plate
20	3GM-2585F-00-00	O-ring
21	3PA-24356-00-00	Clip, Pipe 1
22	3FV-2589G-00-00	Holder
23	3GM-2589H-00-00	Screw
24	4JH-26292-00-00	Stay
25	91317-06012-00	Bolt
26	4JH-2134K-00-00	Bracket, Horn
27	95817-06012-00	Bolt, Flange
28	4JH-25872-00-00	Hose, Brake 1
29	4JH-25873-00-00	Hose, Brake 2
30	90461-10132-00	Clamp
31	95817-06012-00	Bolt, Flange
32	90401-10160-00	Bolt, Union
33	90401-10159-00	Bolt, Union
34	90201-10118-00	Washer, Plate
35	3MA-25876-12-00	Holder, Brake Hose 2
36	3MA-25876-22-00	Holder, Brake Hose 2
37	95817-06012-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

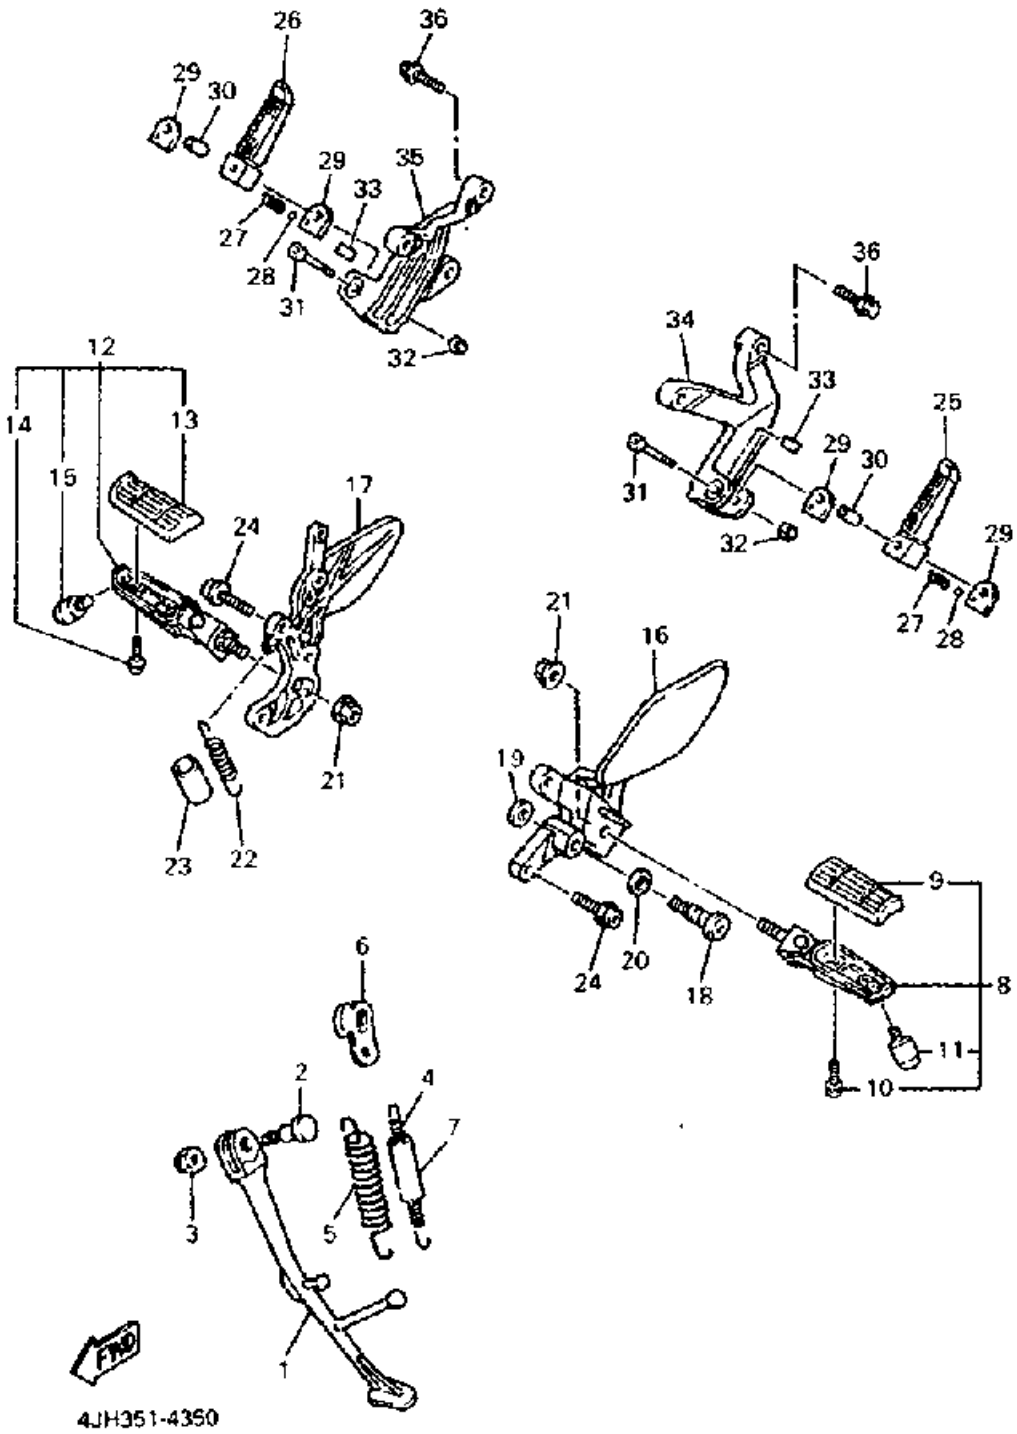


Ref No	Part No	Description
01	4FM-27311-00-00	Stand, Side
02	90109-104E6-00	Bolt
03	90185-10037-00	Nut, Self-locking
04	90506-18224-00	Spring, Tension
05	90506-26225-00	Spring, Tension
06	4FM-27315-00-00	Link, Side Stand
07	1TX-27351-00-00	Guide, Side Stand
08	4JH-27410-00-00	Front Footrest Assy (left)
09	3YX-27413-00-00	• . Cover, Footrest
10	90159-05122-00	• . Screw, With Washer
11	3HE-27435-00-00	• . Bolt
12	4JH-27420-00-00	Front Footrest Assy (right)
13	3YX-27413-00-00	• . Cover, Footrest
14	90159-05122-00	• . Screw, With Washer
15	3HE-27435-00-00	• . Bolt
16	4FM-27442-00-00	Bracket 2
17	4FM-27443-00-00	Bracket 3
18	4BP-27434-01-00	Bolt
19	90201-08326-00	Washer, Plate
20	90201-127J6-00	Washer, Plate
21	90179-10247-00	Nut
22	90506-20377-00	Spring, Tension
23	90446-17346-00	Hose
24	91317-08025-00	Bolt
25	3XV-27431-00-00	Footrest, Rear 1
26	3XV-27441-10-00	Footrest, Rear 2
27	90501-12743-00	Spring, Compression
28	93501-04011-00	Ball
29	1HX-27437-00-00	Washer, Special
30	90387-064H8-00	Collar
31	91317-06045-00	Bolt
32	95607-06100-00	Nut, U
33	1HX-27415-00-00	Plate, Footrest
34	4JH-2741L-01-00	Bracket 4
35	4JH-2742L-01-00	Bracket 5
36	95817-08035-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

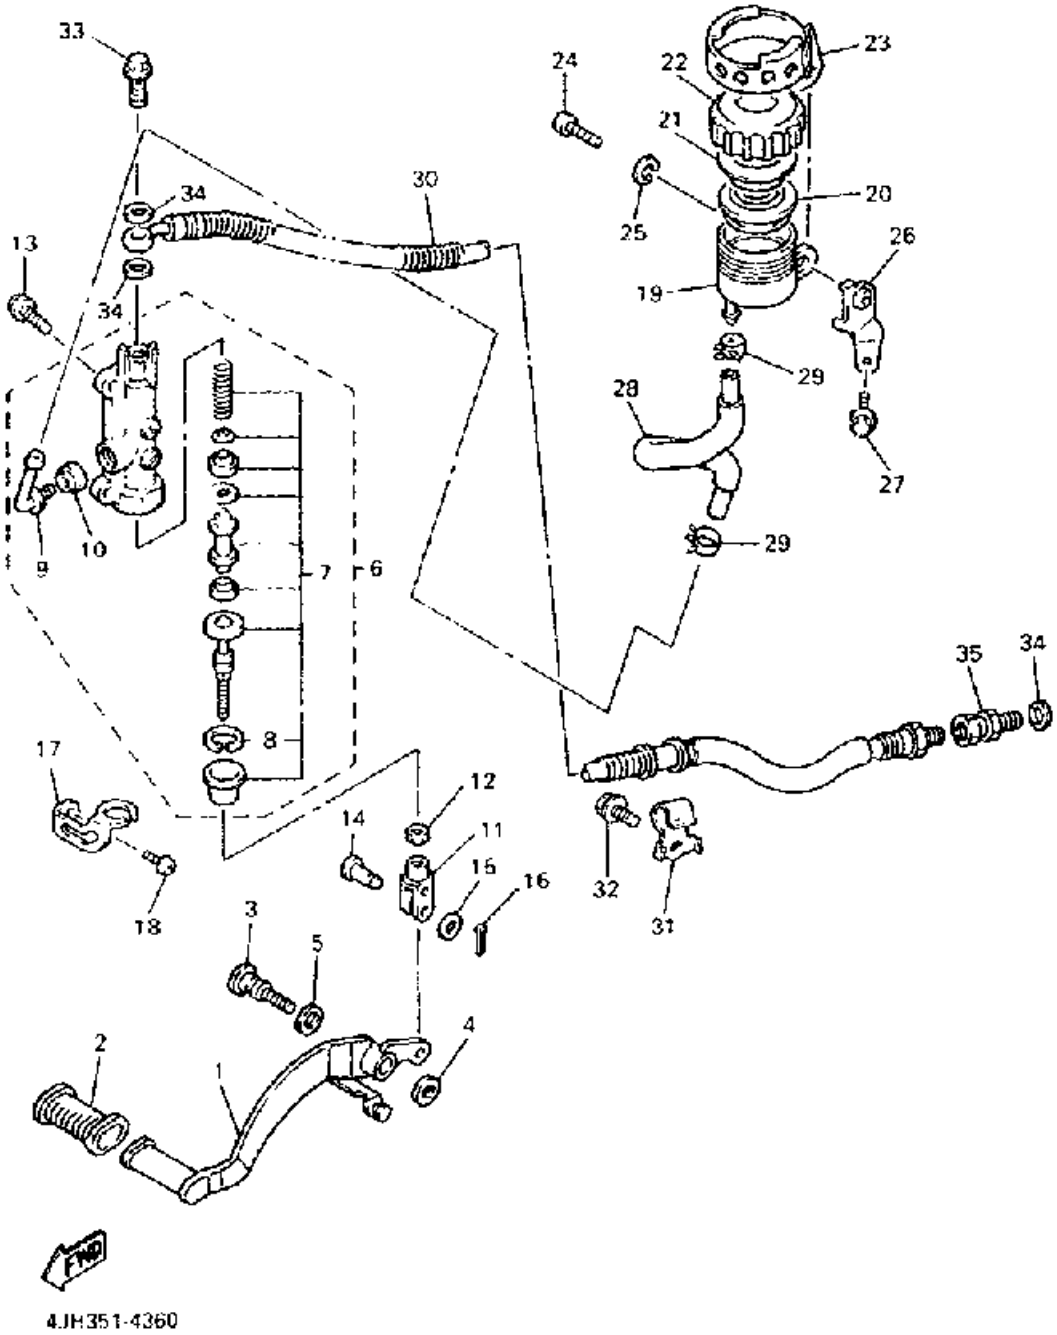


Ref No	Part No	Description
01	4JH-27211-00-00	Pedal, Brake
02	22N-18113-00-00	Cover, Shift Pedal
03	3YF-27261-00-00	Shaft
04	90201-104R2-00	Washer, Plate
05	90206-14086-00	Washer, Wave
06	4BH-2583V-00-00	Rr. Master Cylinder Assy.
07	4BH-W0042-50-00	• . Cylinder Kit, Master
08	3LN-2585G-00-00	•• .. Circlip
09	4BP-2582A-00-00	• . Joint
10	4BP-2585F-00-00	• . O-ring
11	47X-27222-00-00	Joint
12	95307-08700-00	Nut
13	92017-08020-00	Bolt, Button Head
14	90240-08124-00	Pin, Clevis
15	90201-08083-00	Washer, Plate
16	91490-20020-00	Pin, Cotter
17	4FM-2144G-00-00	Stay, Stop Switch
18	98507-06010-00	Screw, Pan Head
19	31A-25894-01-00	Tank, Reservoir
20	360-25854-00-00	Diaphragm, Reservoir
21	2GU-25855-00-00	Bush,diaphragm
22	2KF-25852-50-00	Cap, Reservoir
23	3PJ-25888-00-00	Cover, Reservoir Tank
24	98507-06020-00	Screw, Pan Head
25	92907-06100-00	Washer, Spring
26	4FM-2133G-00-00	Bracket, Reserver
27	95807-06016-00	Bolt, Flange
28	4JH-25895-00-00	Hose, Reservoir
29	90467-14057-00	Clip
30	4JH-25874-01-00	Hose, Brake
31	90461-08031-00	Clamp
32	95817-06012-00	Bolt, Flange
33	90401-10159-00	Bolt, Union
34	90201-10118-00	Washer, Plate
35	3LC-25885-00-00	Joint

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

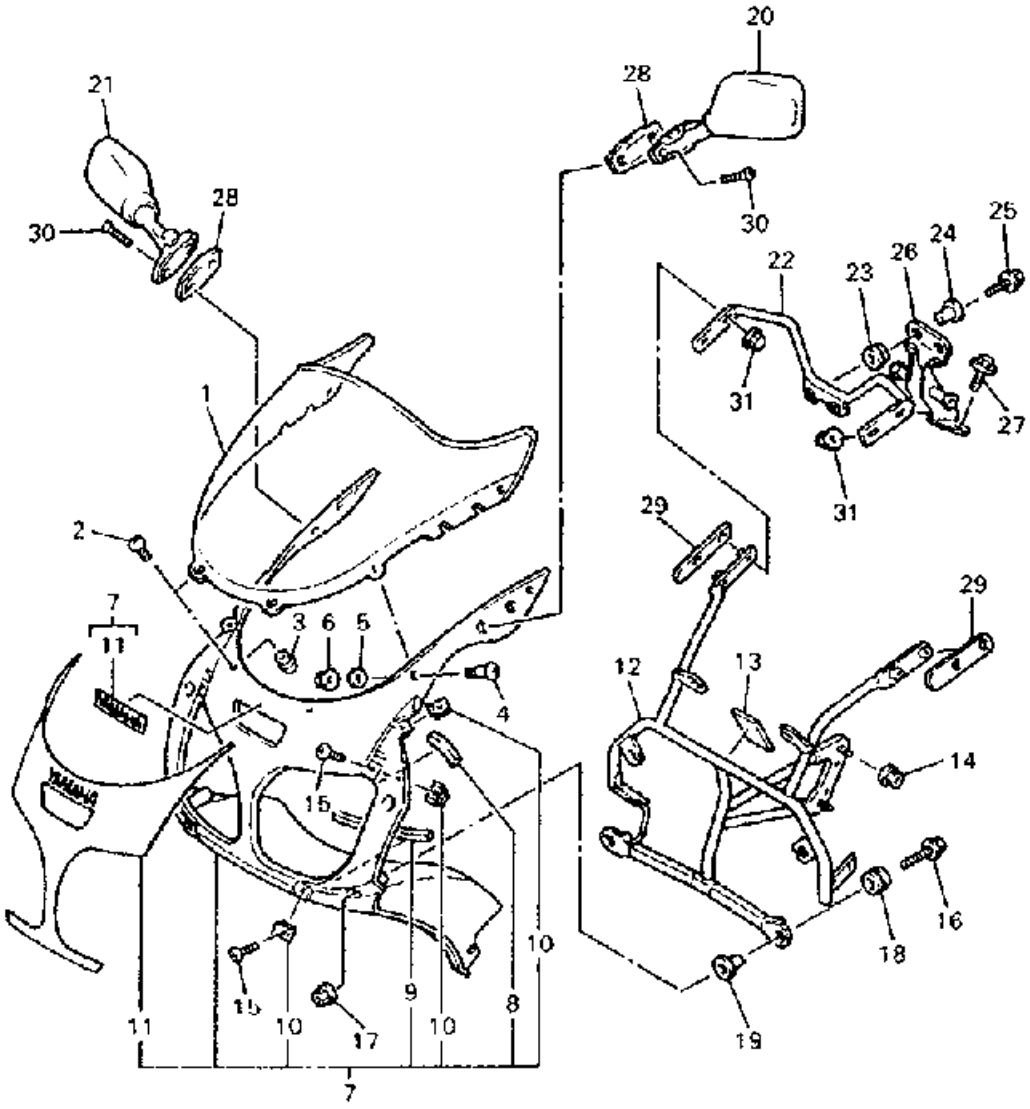


Ref No	Part No	Description
01	4JH-28381-00-00	Windshield
02	90150-05023-00	Screw, Round Head
03	90179-05523-00	Nut
04	90149-05273-00	Screw
05	4FM-28215-00-00	Washer, Special
06	95707-05500-00	Nut, Flange
07	4JH-Y2835-10-P2	Cowling Ass'y
07	4JH-Y2835-40-P0	Cowling Ass'y
07	4JH-Y2835-50-4B	Cowling Ass'y
08	89X-77167-00-00	• . Trim 3
09	3MA-21649-00-00	• . Damper
10	90183-05024-00	• . Nut, Spring
11	4JH-28390-10-00	• . Graphic Set, Cowling
11	99236-00100-00	• . Emblem, Yamaha
11	99237-00100-00	Emblem, Yamaha
12	4JH-28356-00-00	Stay 1
13	51L-28371-00-00	Damper
14	95617-08200-00	Nut, Self-locking
15	90154-05059-00	Screw, Binding
16	95807-06030-00	Bolt, Flange
17	95607-06200-00	Nut, Self U-flange
18	90480-14229-00	Grommet
19	90387-07391-00	Collar
20	4FM-26280-00-00	Rear View Mirror Assy(left)
20	4FM-26280-10-00	Rear View Mirror Assy(left)
21	4FM-26290-00-00	Rear View Mirror Assy(right)
21	4FM-26290-10-00	Rear View Mirror Assy(right)
22	4JH-2831W-00-00	Stay, Mirror 1
23	90480-13398-00	Grommet
24	90387-067N5-00	Collar
25	95027-06016-00	Bolt, Flange
26	4JH-2832W-00-00	Stay, Mirror 2
27	95027-06012-00	Bolt, Flange
28	4FM-26299-00-00	Plate, Mirror Fitting 2
29	3XV-26298-00-00	Plate, Mirror Fitting 1
30	98707-06025-00	Screw, Flat Head
31	90176-06055-00	Nut, Crown

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

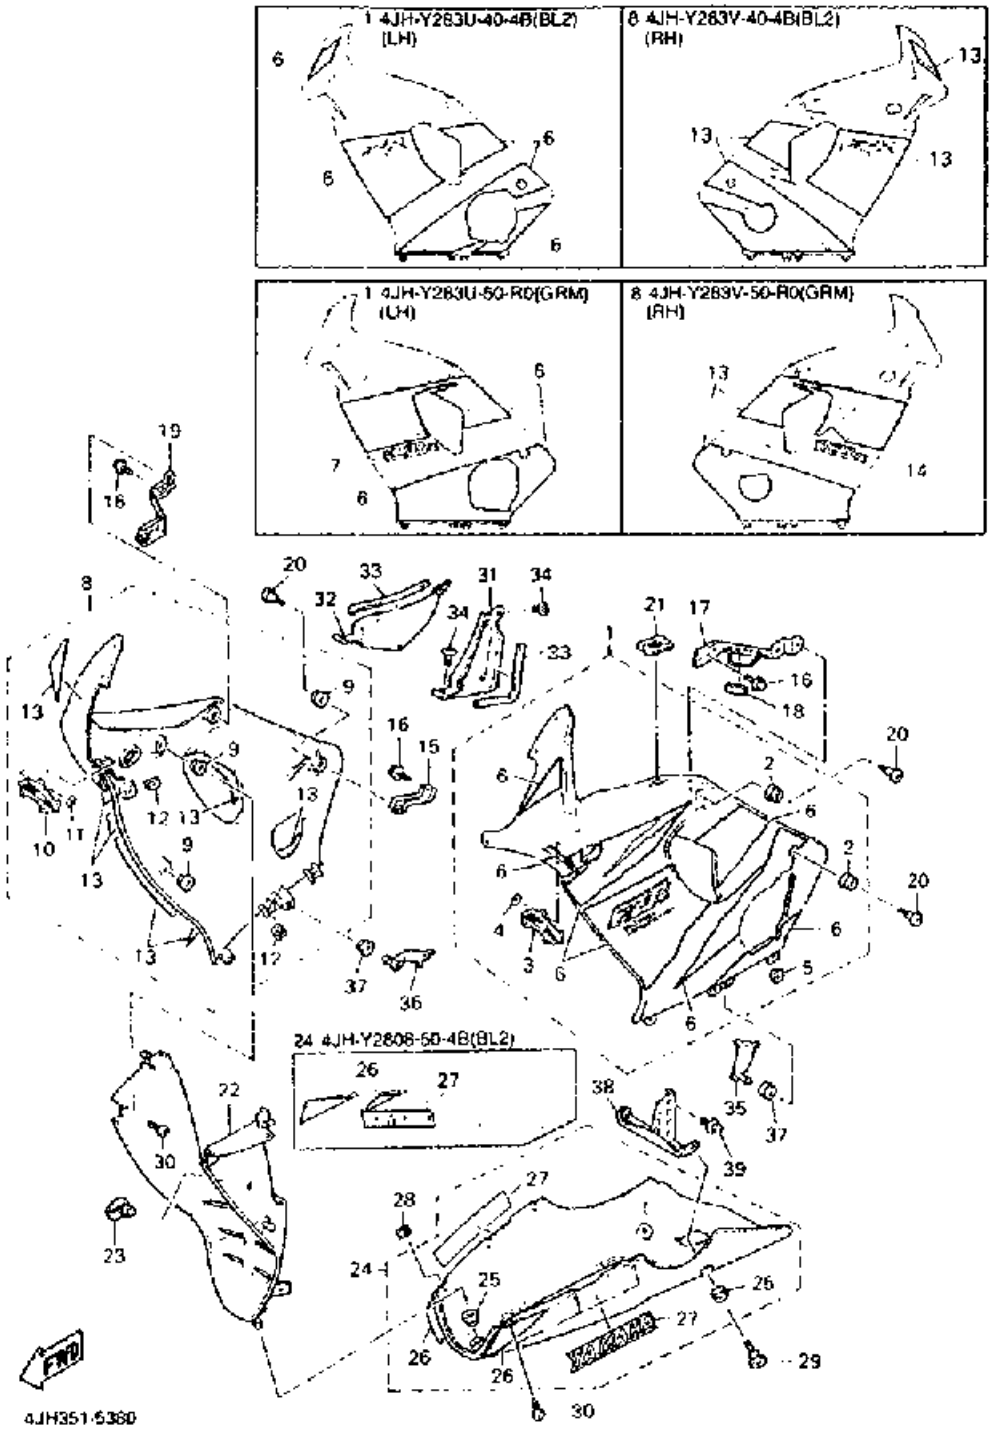

Ref No	Part No	Description
01	4JH-Y283U-30-P1	Panel Assembly 1
01	4JH-Y283U-40-4B	Panel Assembly 1
01	4JH-Y283U-50-R0	Panel Assembly 1
02	90480-13398-00	• . Grommet
03	4JH-2172A-00-00	• . Panel 1
04	90183-03010-00	• . Nut, Spring
05	90183-05024-00	• . Nut, Spring
06	4JH-28301-20-00	• . Graphic Set, Lower Cover 1
06	4JH-28301-30-00	• . Graphic Set, Lower Cover 1
06	4JH-28301-40-00	• . Graphic Set, Lower Cover 1
07	4JH-28368-00-00	• . Emblem
08	4JH-Y283V-30-P1	Panel Assembly 2
08	4JH-Y283V-40-4B	Panel Assembly 2
08	4JH-Y283V-50-R0	Panel Assembly 2
09	90480-13398-00	• . Grommet
10	4JH-2172F-00-00	• . Panel 2
11	90183-03010-00	• . Nut, Spring
12	90183-05024-00	• . Nut, Spring
13	4JH-28303-20-00	• . Graphic Set,lower Cover 2
13	4JH-28303-30-00	• . Graphic Set,lower Cover 2
13	4JH-28303-40-00	• . Graphic Set,lower Cover 2
14	4JH-28368-00-00	• . Emblem
15	4JH-2832U-00-00	Stay, Side 1
16	95807-06010-00	Bolt, Flange
17	4JH-2836H-00-00	Bracket 5
18	3VD-24188-00-00	Mold, Fuel Tank
19	4JH-2836J-00-00	Bracket 6
20	90150-06036-00	Screw, Round Head
21	3FV-28365-00-00	Cover
22	4JH-2836K-00-P0	Panel, Inner 1
22	4JH-2836K-00-R0	Panel, Inner 1
22	4JH-2836K-00-4B	Panel, Inner 1
23	1A8-21518-00-00	Holder, Cable
24	4JH-Y2808-40-P3	Cover Assy, Under
24	4JH-Y2808-50-4B	Cover Assy, Under
24	4JH-Y2808-60-P4	Cover Assy, Under
25	90480-13398-00	• . Grommet
26	4JH-28304-20-00	• . Graphicset, Lower Cover 3
26	4JH-28304-30-00	• . Graphicset, Lower Cover 3
27	99236-00280-00	• . Emblem, Yamaha
27	99236-00300-00	• . Emblem, Yamaha
28	90183-05024-00	Nut, Spring
29	90150-06036-00	Screw, Round Head
30	90154-05059-00	Screw, Binding
31	4JH-28396-00-00	Plate 1
32	4JH-28397-00-00	Plate 2
33	4DN-21669-00-00	Seal
34	90269-07036-00	Rivet
35	4JH-2836F-00-00	Bracket 3
36	4JH-2836G-00-00	Bracket 4
37	90480-12320-00	Grommet
38	4JH-2831T-00-00	Stay, Support 1
39	95807-06010-00	Bolt, Flange


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

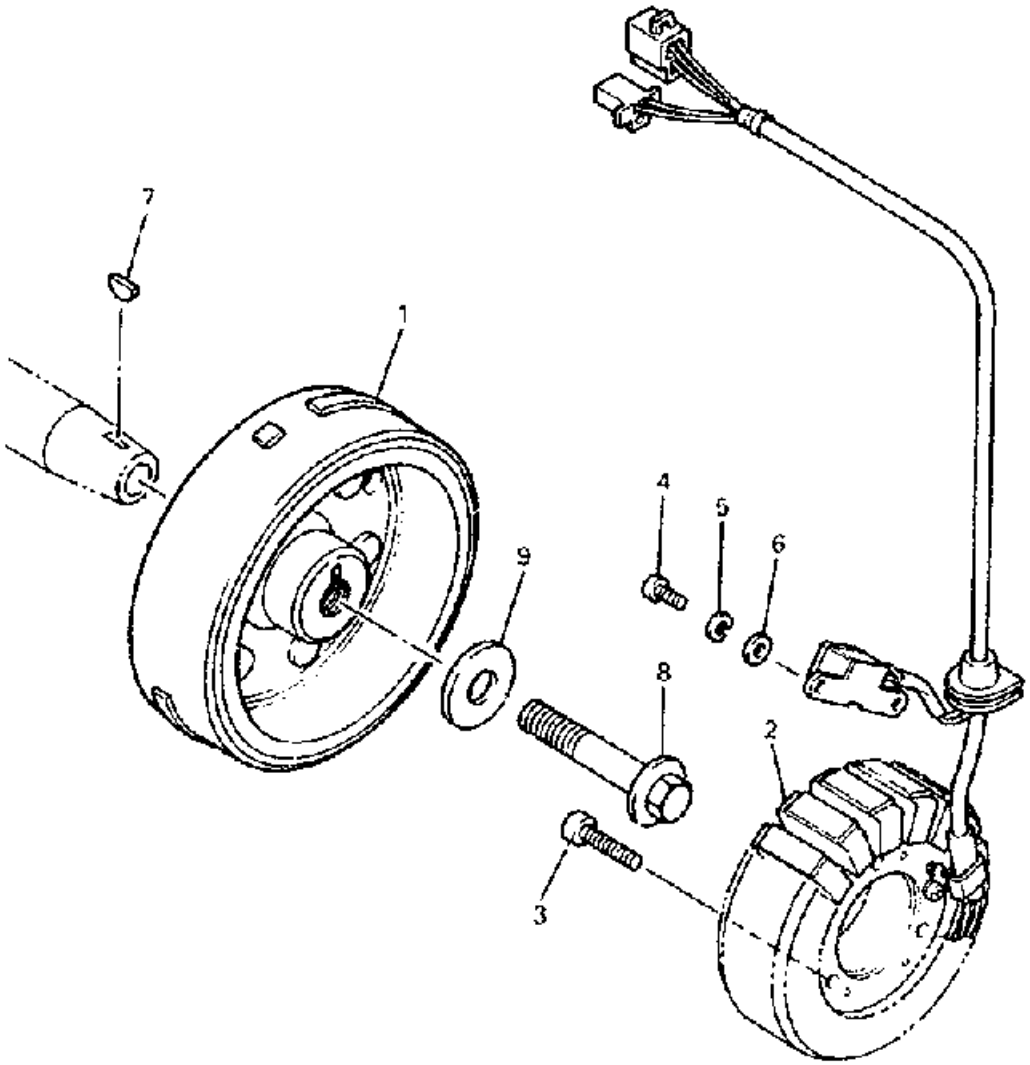

4JH351-4390


Ref No	Part No	Description
01	4JH-81450-00-00	Rotor Assy
02	4JH-81410-00-00	Stator Assy
03	91317-06035-00	Bolt
04	98507-05016-00	Screw, Pan Head
05	92907-05100-00	Washer, Spring
06	90201-05027-00	Washer, Plate
07	90280-03047-00	Key, Woodruff
08	90105-10430-00	Bolt, Washer Based
09	90201-107K6-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

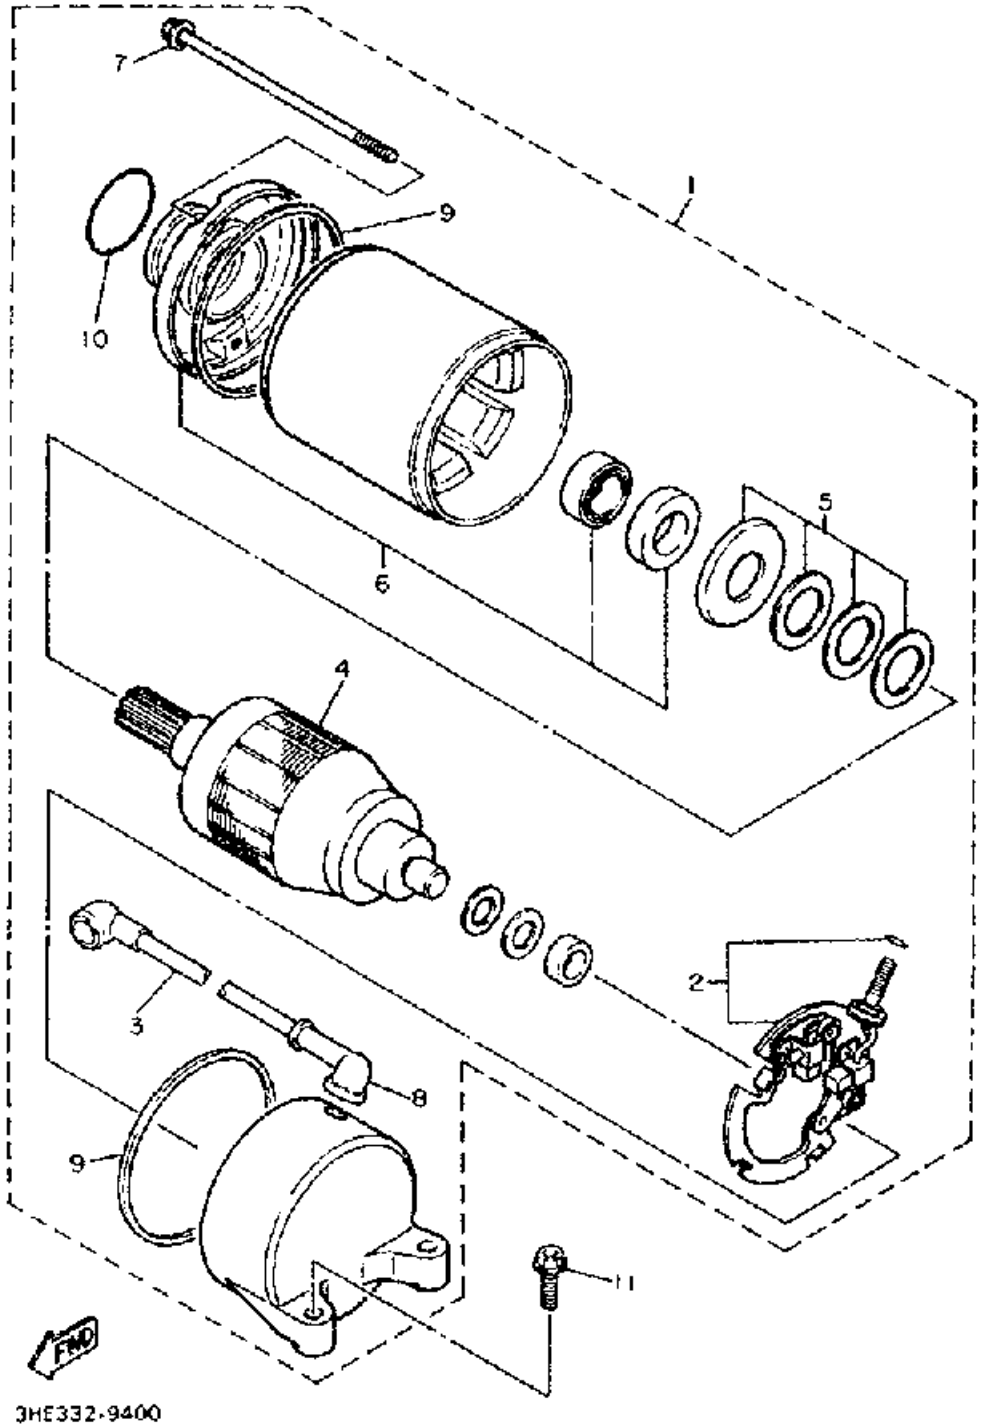


Ref No	Part No	Description
01	3HW-81800-00-00	Starting Motor Assy
02	3HE-81840-00-00	• . Brush Holder Assy
03	1HX-81815-00-00	• . Cord, Starter Motor
04	3HE-81850-00-00	• . Armature Assy
05	3AJ-81809-00-00	• . Washer Kit
06	3HE-81830-00-00	• . Front Bracket Assy
07	3HE-81826-00-00	• . Bolt
08	5H0-81871-00-00	• . Cap
09	11H-81844-00-00	• . Gasket
10	26H-81847-00-00	• . O-ring
11	95027-06025-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

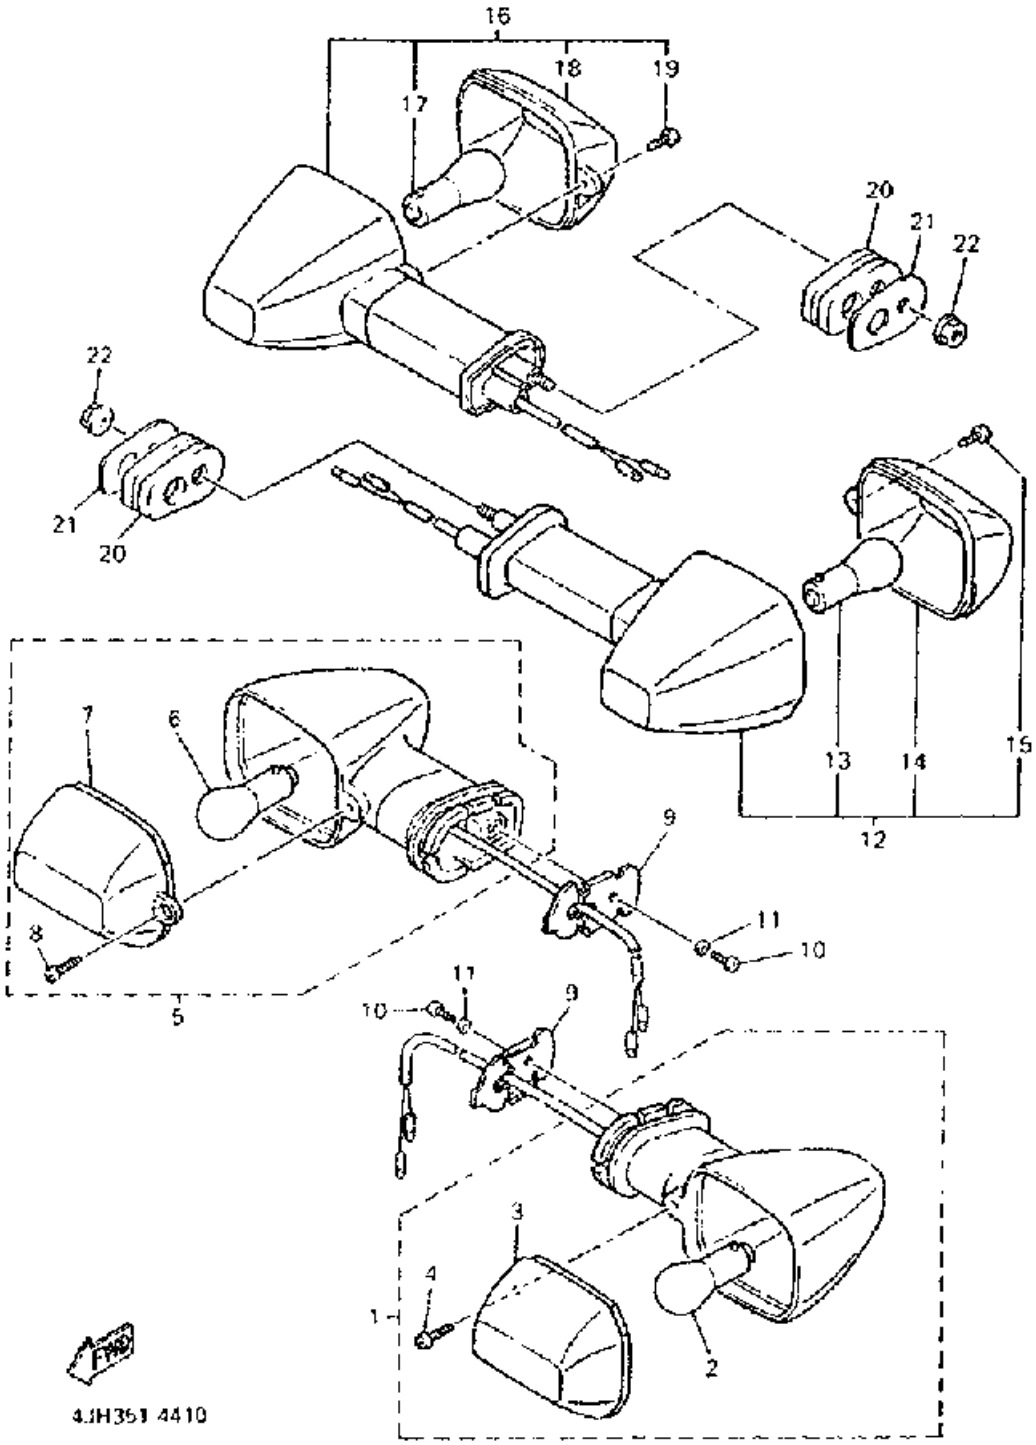


Ref No	Part No	Description
01	4JH-83310-00-00	Front Flasher Light Assy 1
02	306-83311-40-00	• . Bulb, Flasher (12v-21w)
03	4JH-83332-00-00	• . Lens, Flasher
04	97702-40610-00	• . Screw, Tapping
05	4JH-83320-00-00	Front Flasher Light Assy 2
06	306-83311-00-00	• . Bulb, Flasher (12v-21w)
07	4JH-83342-00-00	• . Lens, Flasher 2
08	97702-40610-00	• . Screw, Tapping
09	4JH-83318-00-00	Stay, Flasher 1
10	98507-04008-00	Screw, Pan Head
11	92907-04600-00	Washer
12	4JH-83330-00-00	Rear Flasher Light Assy 1
13	306-83311-40-00	• . Bulb, Flasher (12v-21w)
14	4JH-83332-00-00	• . Lens, Flasher
15	97702-40610-00	• . Screw, Tapping
16	4JH-83340-00-00	Flasher Light Assy 2
17	306-83311-40-00	• . Bulb, Flasher (12v-21w)
18	4JH-83342-00-00	• . Lens, Flasher 2
19	97702-40610-00	• . Screw, Tapping
20	4FM-83345-00-00	Plug, Blind
21	4FM-83369-00-00	Stay, Flasher 2
22	95707-06500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

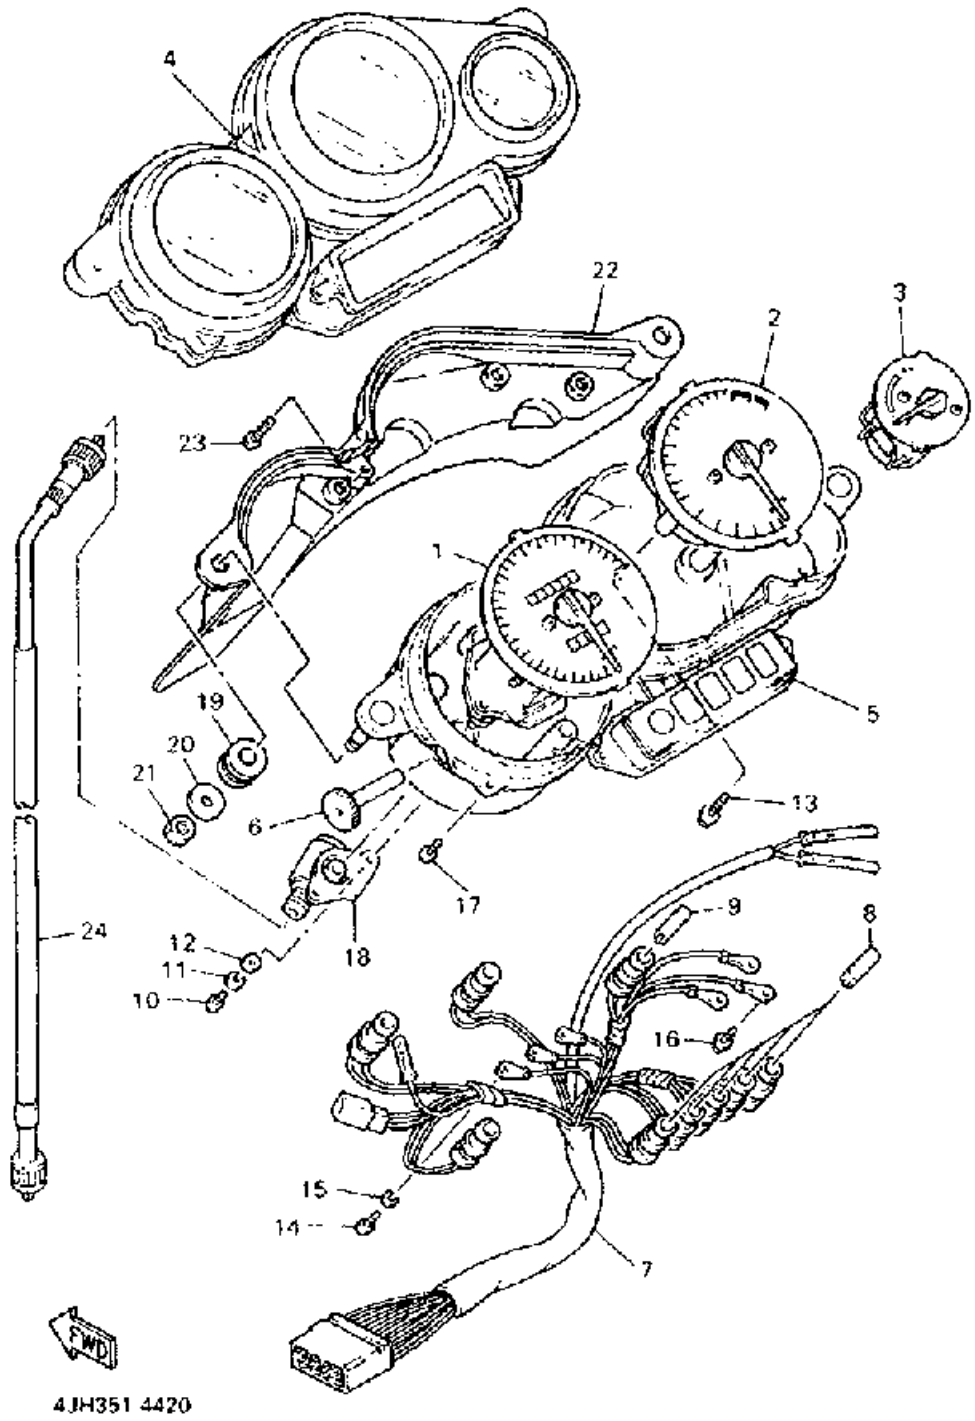


Ref No	Part No	Description
01	4FM-83570-00-00	Speedometer Assy
02	4FM-83540-00-00	Tachometer Assy
03	4FM-83590-00-00	Water Temperature Assy
04	4FM-83559-00-00	Cover, Meter
05	4FM-8353H-40-00	Case, Under
06	2GH-83578-00-00	Knob, Trip Meter
07	4FM-83509-00-00	Socket Cord Assy
08	4G1-84744-00-00	Bulb (12v-3.4w)
09	2GV-83517-00-00	Bulb (12v-7w, T6.5)
10	98580-04010-00	Screw, Pan Head
11	92990-04100-00	Washer, Spring
12	92901-04600-00	Washer, Plate
13	97902-04122-00	Screw, With Washer
14	98580-03010-00	Screw, Pan Head
15	92990-03100-00	Washer, Spring
16	90159-03102-00	Screw, With Washer
17	90164-04023-00	Screw, Tapping
18	4FM-83520-00-00	Socket Cord Assy
19	90480-14585-00	Grommet
20	90201-06059-00	Washer, Plate
21	95317-06600-00	Nut
22	3GM-87278-A0-00	Cover, Meter
23	97707-40012-00	Screw, Tapping
24	4JH-83550-00-00	Speedometer Cable Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

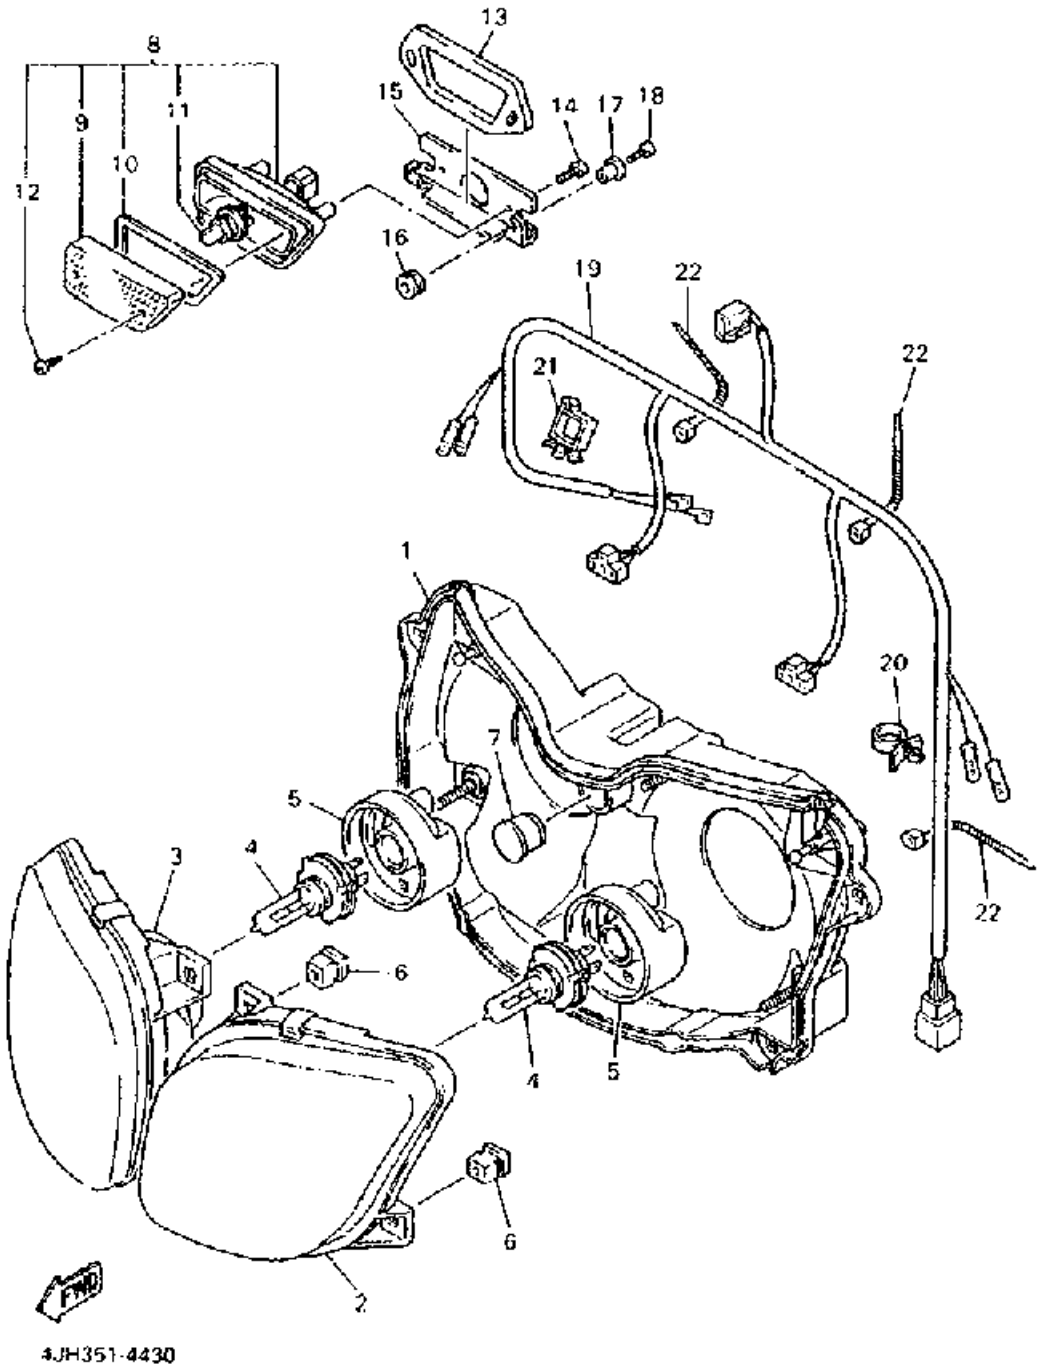


Ref No	Part No	Description
01	4FM-84330-41-00	Body Assy
02	4FM-84320-10-00	Lens Assy
03	4FM-8432A-10-00	Lens Assy
04	2F9-84314-00-00	Bulb, Headlight
05	4JG-84397-00-00	Cover, Socket
06	51L-84334-00-00	Nut, Adjusting
07	90338-24112-00	Plug
08	3GM-84301-00-00	Pilot Light Assy 1
09	3GM-84321-00-00	• . Lens Assy
10	3GM-84322-00-00	• . Gasket, Lens
11	2JE-84744-00-00	• . Bulb (12v 5w)
12	3GM-84192-00-00	• . Screw, Special (m4,l=12)
13	3GM-84367-50-00	Damper, Headlight 2
14	97707-50012-00	Screw, Tapping
15	3GM-8431R-00-00	Stay, Setting
16	90480-10517-00	Grommet
17	90387-052U5-00	Collar
18	90167-05037-00	Screw, Tapping
19	4JH-84359-00-00	Cord, Headlight
20	90464-13133-00	Clamp
21	90464-16021-00	Clamp
22	90464-13073-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

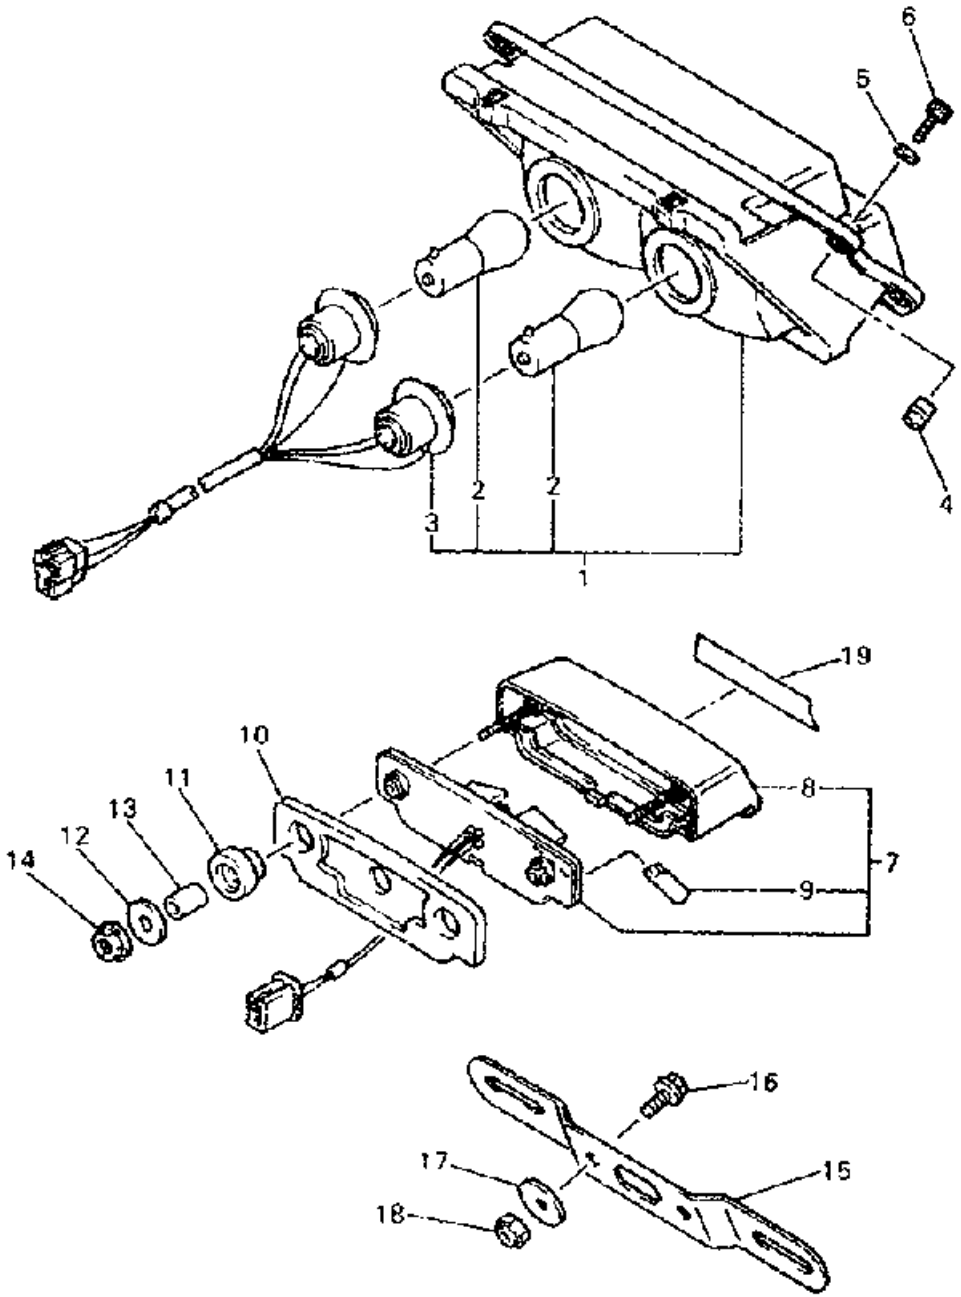


Ref No	Part No	Description
01	4FM-84710-00-00	Taillight Unit Assy
02	31L-84714-00-00	• . Bulb (12v-21/5w)
03	4FM-84735-00-00	• . Cord Assy
04	90179-05523-00	Nut
05	92907-05600-00	Washer, Plate
06	90110-05112-00	Bolt, Hexagon Socket Head
07	4FM-84745-00-00	Licence Light Unit Assy
08	4FM-84749-00-00	• . Body, Licence Light
09	2JE-84744-00-00	• . Bulb (12v 5w)
10	3F9-84742-00-00	Seat, Base
11	3F9-84553-00-00	Damper
12	90201-05033-00	Washer, Plate
13	90387-06241-00	Collar
14	95707-05500-00	Nut, Flange
15	3YF-84751-00-00	Bracket, License
16	95027-06016-00	Bolt, Flange
17	90201-06059-00	Washer, Plate
18	95607-06100-00	Nut, U
19	99237-00080-00	Emblem, Yamaha

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

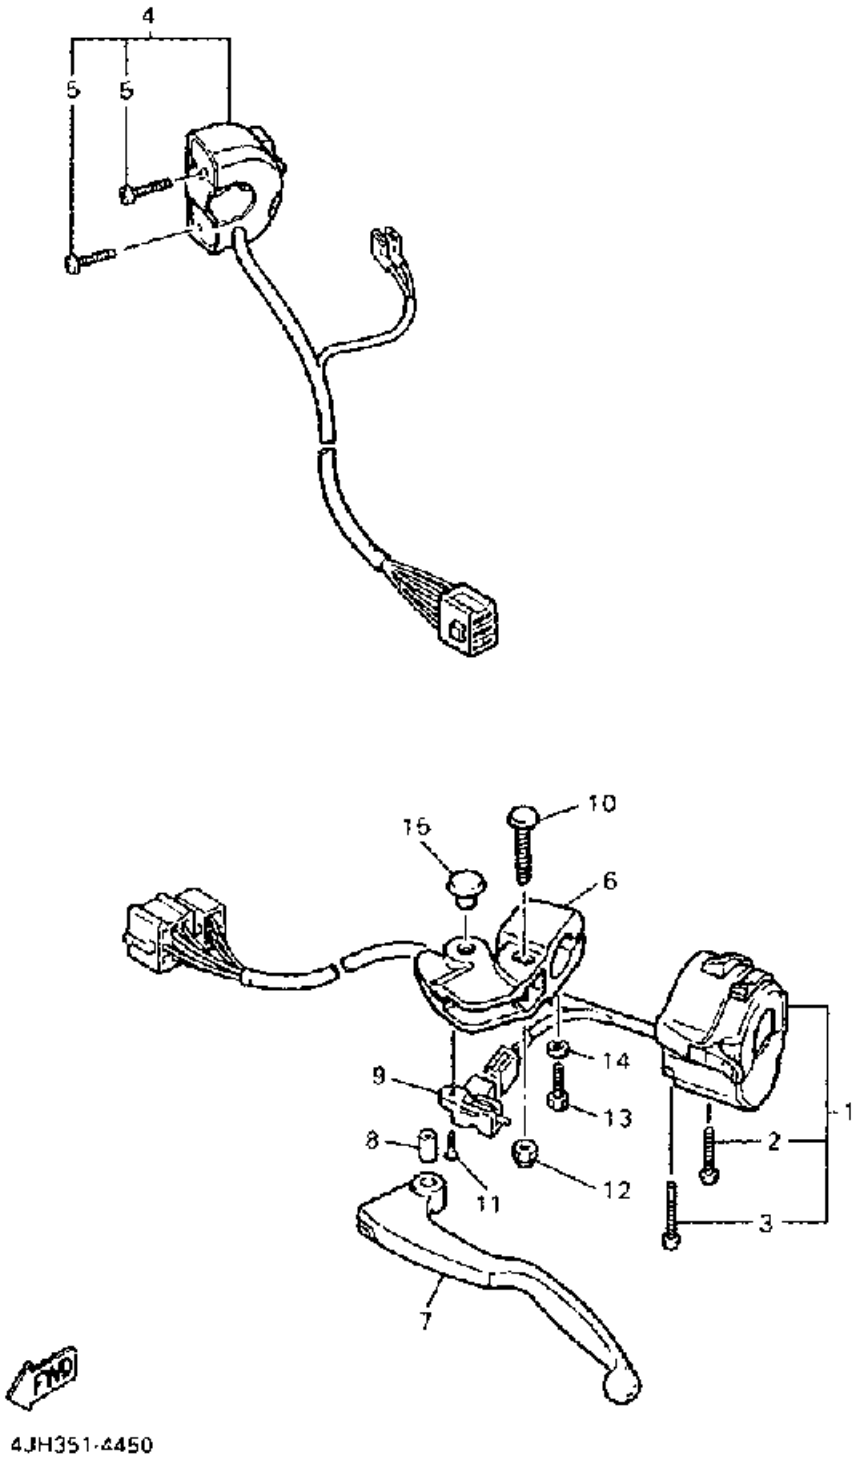


Ref No	Part No	Description
01	4BR-83969-01-00	Switch, Handle 5
02	98507-05030-00	• . Screw, Pan Head
03	98507-05040-00	• . Screw, Pan Head
04	4FM-83975-00-00	Switch, Handle 2
05	98507-05018-00	• . Screw, Pan Head
06	29L-82911-01-00	Holder, Lever 1
07	3LN-83912-00-00	Lever 1
08	31A-83913-00-00	Collar, Lever 1
09	31A-82917-00-00	Switch
10	31A-83945-00-00	Bolt, Lever
11	98707-03008-00	Screw, Flat Head
12	95607-06100-00	Nut, U
13	97007-06025-00	Bolt
14	92907-06100-00	Washer, Spring
15	90338-09012-00	Plug

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

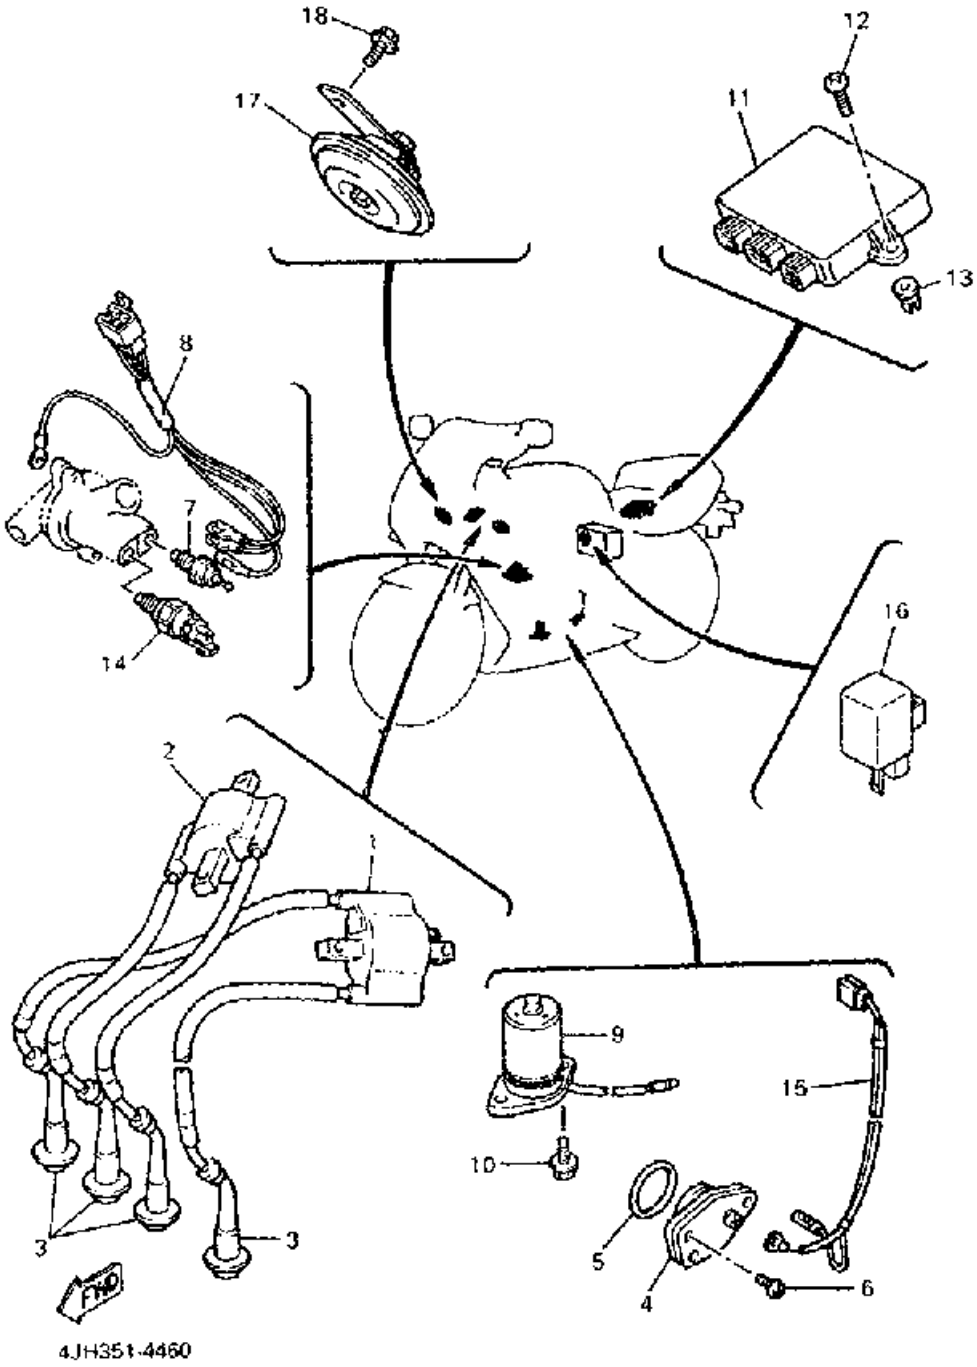

Ref No	Part No	Description
01	4JH-82310-00-00	Ignition Coil Assy
02	4JH-82320-00-00	Ignition Coil Assy
03	1WG-82370-00-00	Plug Cap Assy
04	1AE-82540-00-00	Neutral Switch Assy
05	93210-29196-00	O-ring
06	98507-06016-00	Screw, Pan Head
07	11H-83591-00-00	Thermo Unit
08	3TJ-82583-00-00	Band
09	4JH-85720-00-00	Oil Level Gauge Assy
10	95027-06016-00	Bolt, Flange
11	4JH-82305-00-00	Ignitor Unit Assy
11	4JH-82305-10-00	Ignitor Unit Assy
11	4JH-82305-20-00	Ignitor Unit Assy
12	97707-60016-00	Screw, Tapping
13	90338-08226-00	Plug
14	3LN-82560-00-00	Thermo Switch Assy
15	1WG-82541-00-00	Wire, Lead
16	3GM-83350-00-00	Flasher Relay Assy
17	3AY-83371-00-00	Horn
18	95807-06010-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

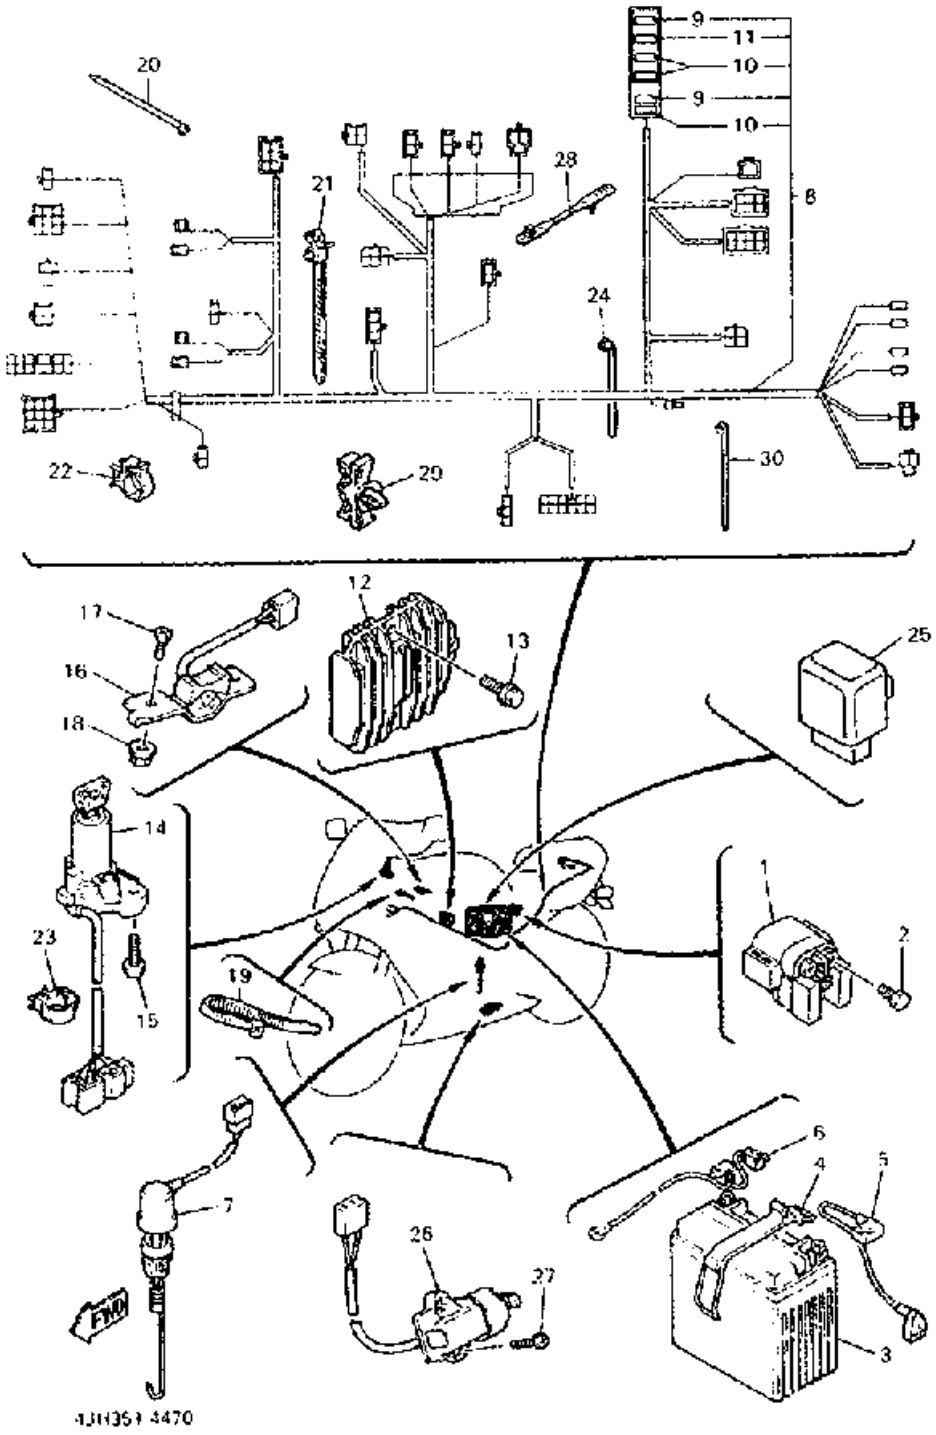

Ref No	Part No	Description
01	4DN-81940-00-00	Starter Relay Assy
02	95027-06008-00	Bolt, Flange
03	3VD-82100-00-00	Battery Assy (ytx12-bs)
04	4BP-82131-00-00	Band, Battery
05	4JH-82115-00-00	Wire, Plus Lead
06	4JH-82116-00-00	Wire, Minus Lead
07	1KT-82530-02-00	Stop Switch Assy
08	4JH-82590-00-00	Wire Harness Assy
09	2GH-82151-00-00	• . Fuse (20a-bl)
10	2KW-82151-00-00	• . Fuse (7.5a-bl)
11	36Y-82151-00-00	• . Fuse (15a-bl)
12	4JH-81960-00-00	Rectifier & Regulator Assy
13	95807-06020-00	Bolt, Flange
14	4JH-82501-01-00	Main Switch Steering Lock
15	90109-080G5-00	Bolt
16	3TJ-83964-10-00	Switch
17	98780-05016-00	Screw, Flat Head
18	95707-05500-00	Nut, Flange
19	1UA-82591-00-00	Band
20	90464-13073-00	Clamp
21	90464-12089-00	Clamp
22	90464-10190-00	Clamp
23	90464-15192-00	Clamp
24	90464-15195-00	Clamp
25	3EN-81950-00-00	Relay Assy
26	3LD-82566-00-00	Switch, Side Stand
27	90157-05079-00	Screw, Pan Head
28	90464-07121-00	Clamp
29	90464-08211-00	Clamp
30	25G-83936-01-00	Band, Switch Cord

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.