
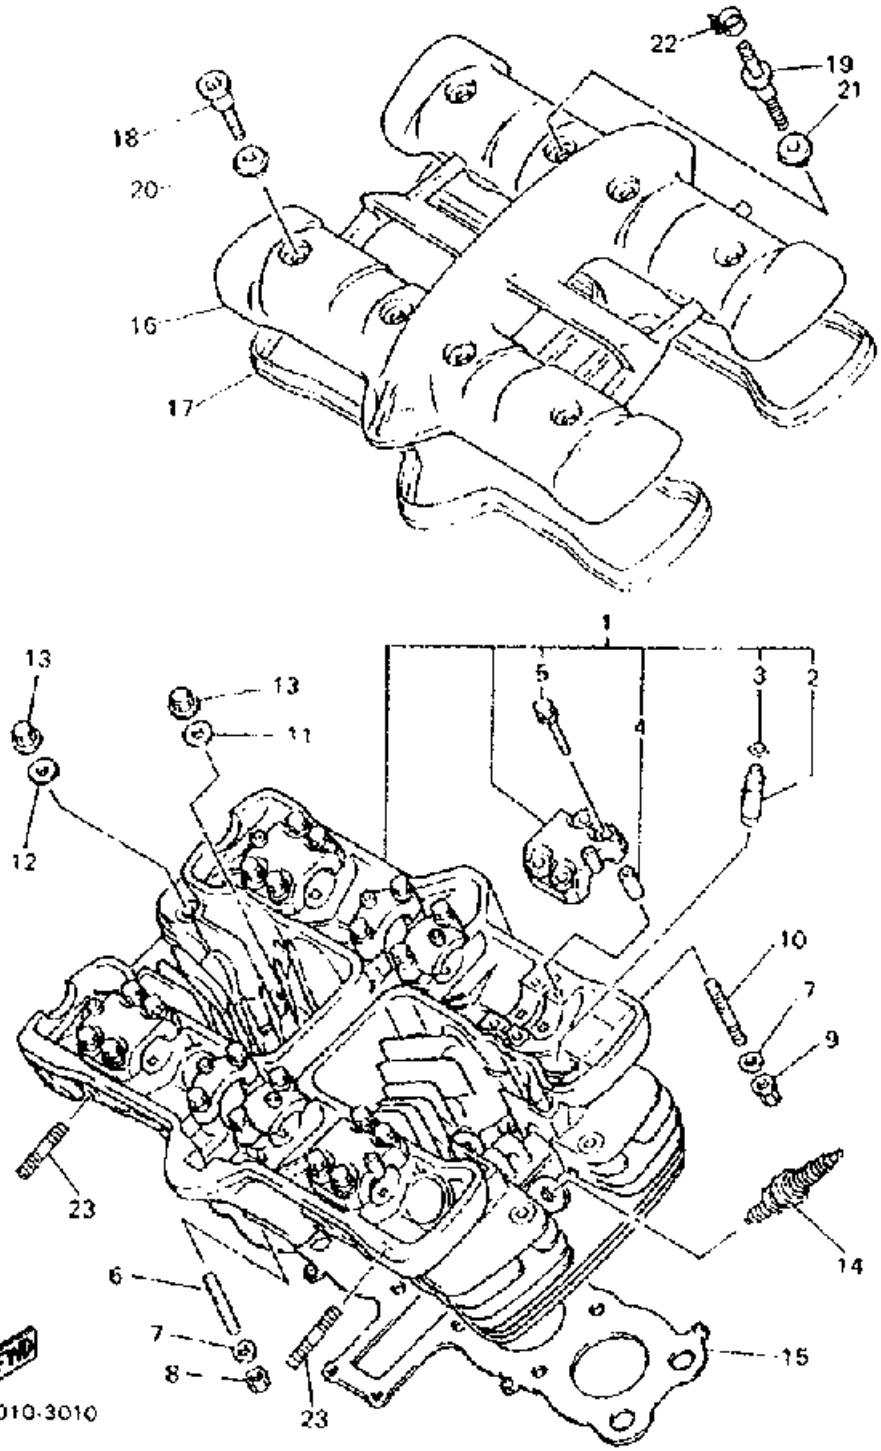


Ref No	Part No	Description
01	4BR-11101-00-00	Cylinder Head Assy
02	4BR-11133-10-00	• . Guide, Intake Valve
03	93440-09141-00	• . Circlip
04	99510-08016-00	• . Pin, Dowel
05	90105-06153-00	• . Bolt, Washer Based
06	95617-06618-00	Bolt, Stud
07	92907-06600-00	Washer, Plate
08	95317-06600-00	Nut
09	90179-06499-00	Nut
10	95627-06625-00	Bolt, Stud
11	90201-094G1-00	Washer, Plate
12	90201-080L7-00	Washer, Plate
13	90176-08026-00	Nut, Crown
14	94701-00330-00	Plug, Spark (ngk R Cr8e)
14	94701-00329-00	Plug, Spark (u24esr N)
15	4BR-11181-00-00	Gasket, Cylinder Head 1
16	4BR-11190-00-00	Cover, Cylinder Head 1
17	4BR-11193-00-00	Gasket, Head Cover 1
18	90109-066F0-00	Bolt
19	4BR-1118E-00-00	Bolt, Cover Mounting
20	4BR-1111G-09-00	Rubber, Mount 1
21	4BR-1112G-00-00	Rubber, Mount 2
22	90467-11106-00	Clip
23	90116-08360-00	Bolt, Stud


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

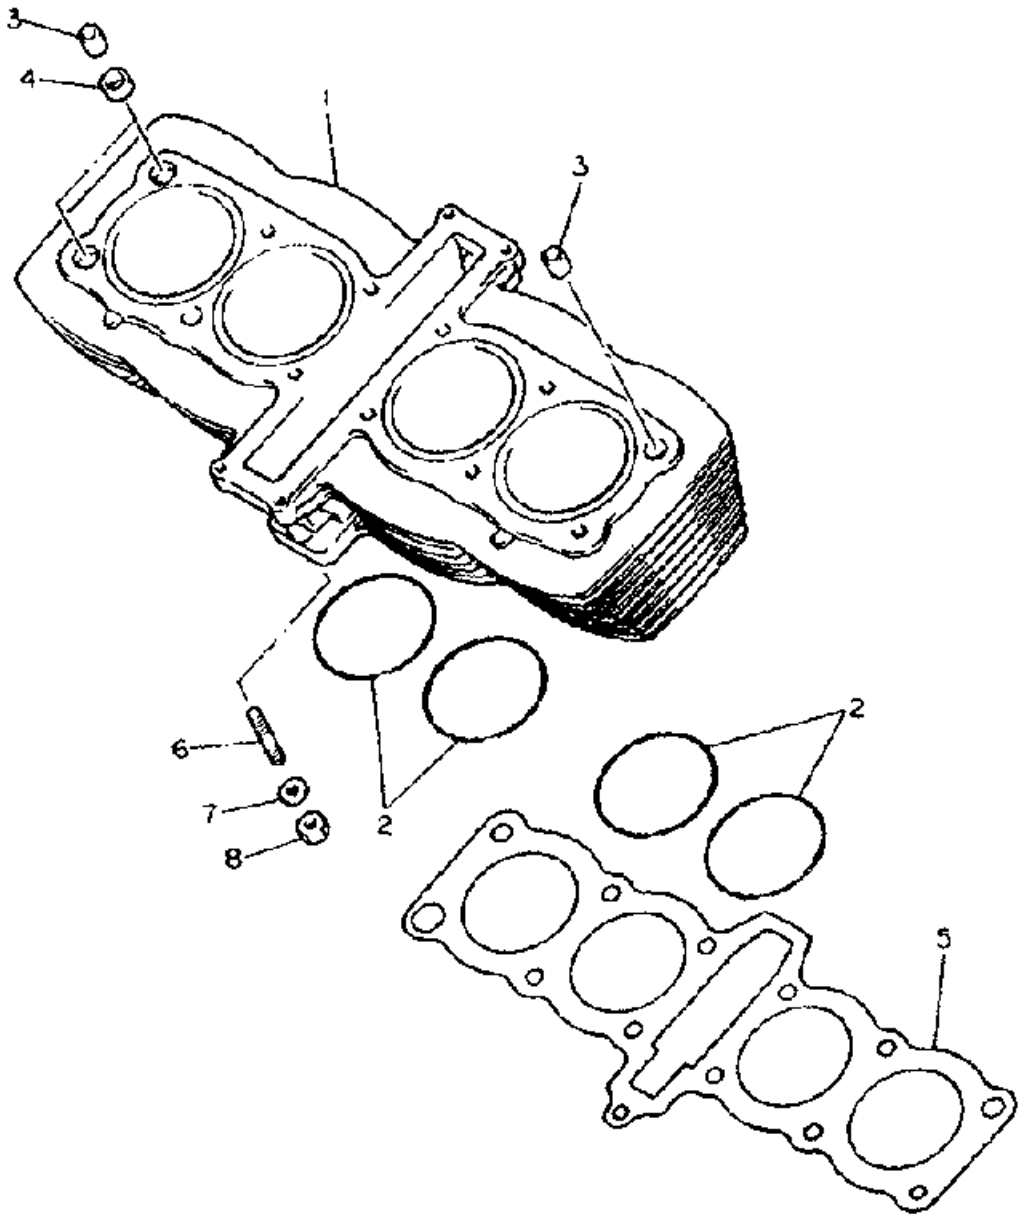

4BP010-1020

Ref No	Part No	Description
01	4BR-11310-00-00	Cylinder
02	93210-63442-00	O-ring
03	99530-14016-00	Pin, Dowel
04	90430-14131-00	Gasket
05	4BR-11351-01-00	Gasket, Cylinder
06	95627-08330-00	Bolt, Stud
07	90201-084G3-00	Washer, Plate
08	95317-08600-00	Nut


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

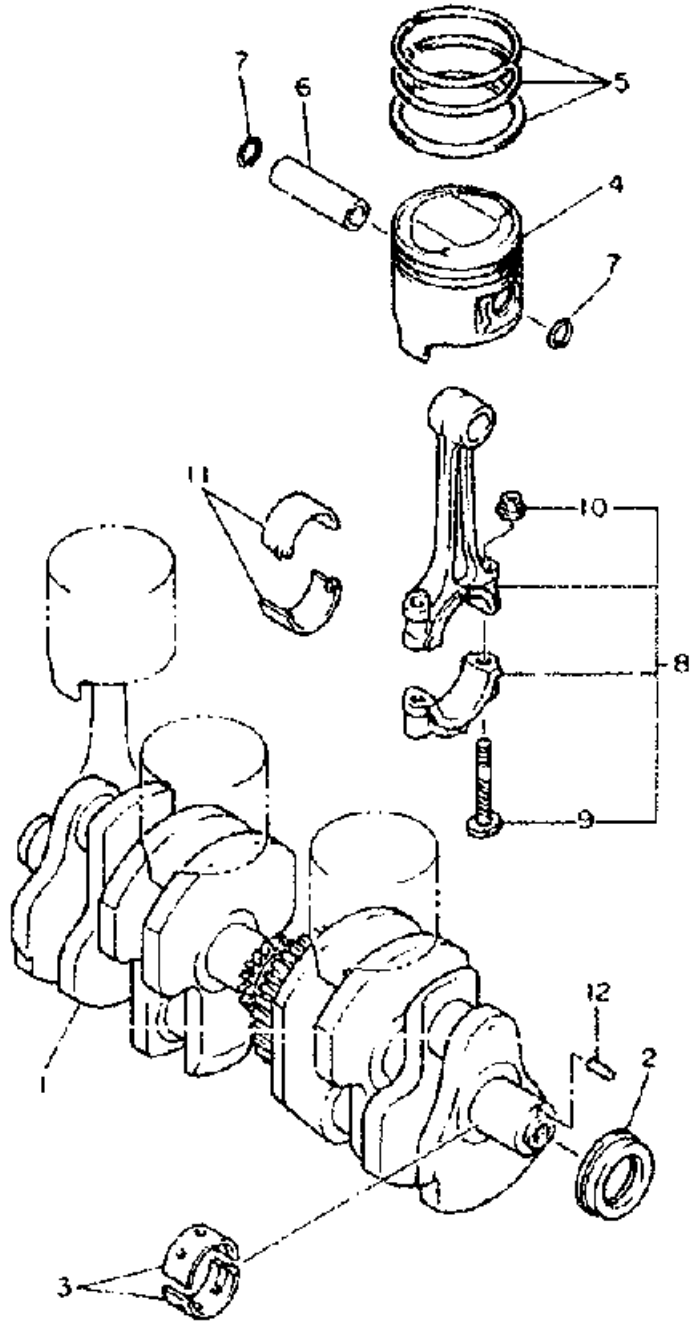

4BP010-1030


Ref No	Part No	Description
01	4BR-11411-00-00	Crankshaft
02	93101-32144-00	Oil Seal
03	4BR-11416-00-00	Plane Bearing, Crankshaft 1
03	4BR-11416-10-00	Plane Bearing, Crankshaft 1
03	4BR-11416-20-00	Plane Bearing, Crankshaft 1
03	4BR-11416-30-00	Plane Bearing, Crankshaft 1
03	4BR-11416-40-00	Plane Bearing, Crankshaft 1
04	4BR-11631-00-A0	Piston (std)
04	4BR-11636-00-00	Piston (0.50mm O/s)
04	4BR-11638-00-00	Piston (1.00mm O/s)
05	4BR-11610-00-00	Piston Ring Set
05	4BR-11610-20-00	Piston Ring Set
05	4BR-11610-40-00	Piston Ring Set
06	49A-11633-00-00	Pin, Piston
07	93450-16068-00	Circlip
08	4BR-11650-00-00	Connecting Rod Assy
09	4H7-11654-00-00	• . Bolt, Connecting Rod
10	90179-07307-00	• . Nut
11	49A-11656-00-00	Plane Bearing, Connecting Rod
11	49A-11656-10-00	Plane Bearing, Connecting Rod
11	49A-11656-20-00	Plane Bearing, Connecting Rod
11	49A-11656-30-00	Plane Bearing, Connecting Rod
12	93604-10011-00	Pin, Dowel

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

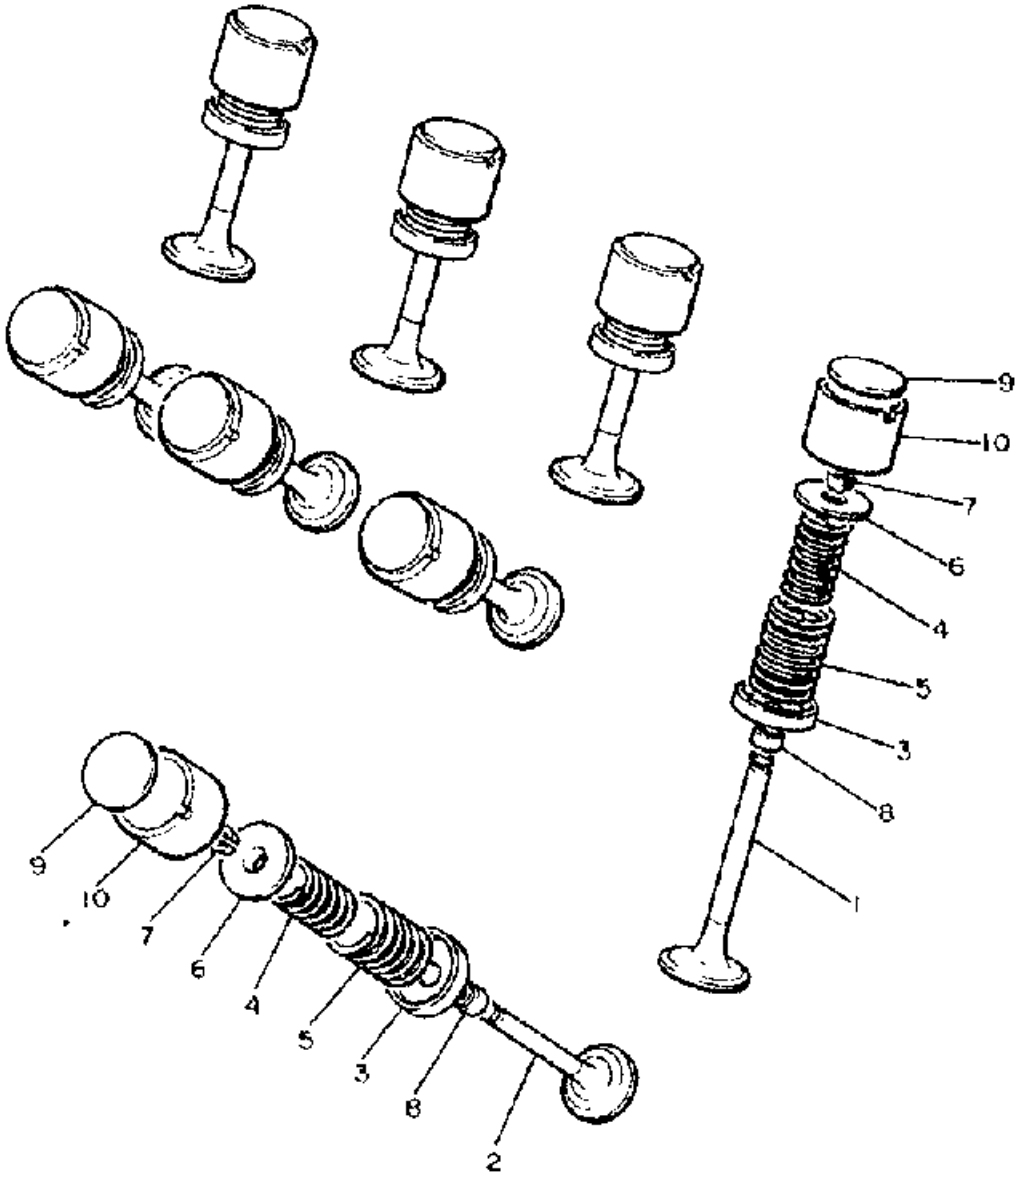


Ref No	Part No	Description
01	4BR-12111-00-00	Valve, Intake
02	4BR-12121-00-00	Valve, Exhaust
03	4BR-12116-00-00	Seat, Valve Spring
04	4BR-12113-00-00	Spring, Valve Inner
05	4BR-12114-00-00	Spring, Valve Outer
06	33M-12117-00-00	Retainer, Valve Spring
07	1AA-12118-00-00	Cotter, Valve
08	33M-12119-00-00	Seal, Valve Stem
09	26H-12168-00-00	Pad, Adjusting (2.00)
09	26H-12168-M0-00	Pad, Adjusting (2.45)
09	26H-12168-R0-00	Pad, Adjusting (2.50)
09	26H-12168-U0-00	Pad, Adjusting (2.55)
09	26H-12168-W0-00	Pad, Adjusting (2.60)
09	26H-12168-Y0-00	Pad, Adjusting (2.65)
09	26H-12169-10-00	Pad, Adjusting (2.70)
09	26H-12169-30-00	Pad, Adjusting (2.75)
09	26H-12169-50-00	Pad, Adjusting (2.80)
09	26H-12169-70-00	Pad, Adjusting (2.85)
09	26H-12169-90-00	Pad, Adjusting (2.90)
09	26H-12168-20-00	Pad, Adjusting (2.05)
09	26H-12169-E0-00	Pad, Adjusting (2.95)
09	26H-12169-G0-00	Pad, Adjusting (3.00)
09	26H-12169-J0-00	Pad, Adjusting (3.05)
09	26H-12169-L0-00	Pad, Adjusting (3.10)
09	26H-12169-N0-00	Pad, Adjusting (3.15)
09	26H-12169-T0-00	Pad, Adjusting (2.20)
09	26H-12168-40-00	Pad, Adjusting (2.10)
09	26H-12168-60-00	Pad, Adjusting (2.15)
09	26H-12168-80-00	Pad, Adjusting (2.20)
09	26H-12168-A0-00	Pad, Adjusting (2.25)
09	26H-12168-F0-00	Pad, Adjusting (2.30)
09	26H-12168-H0-00	Pad, Adjusting (2.35)
09	26H-12168-K0-00	Pad, Adjusting (2.40)
10	26H-12153-00-Y0	Lifter, Valve

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

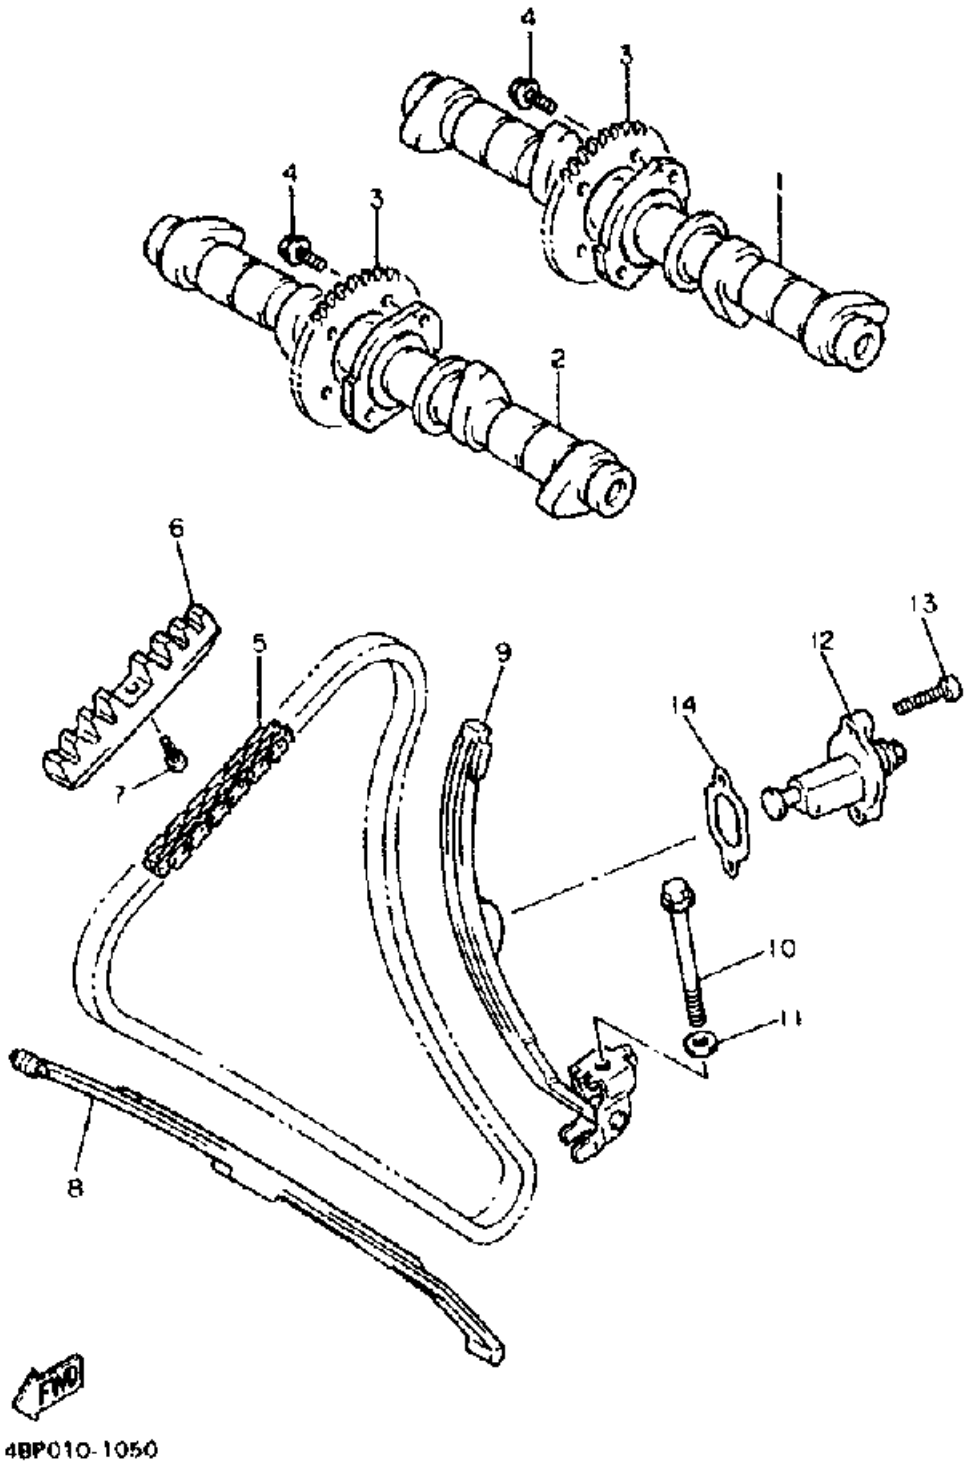


Ref No	Part No	Description
01	4BR-12171-00-00	Camshaft 1
02	4BR-12181-00-00	Camshaft 2
03	4BR-12176-00-00	Sprocket, Cam Chain
04	90105-07342-00	Bolt, Washer Based
05	94890-04144-00	Chain
06	4BR-12241-00-00	Guide, Stopper 2
07	98907-06010-00	Screw, Bind
08	4BR-12251-00-00	Damper, Chain 1
09	4BR-12252-00-00	Damper, Chain 2
10	95827-08075-00	Bolt, Flange
11	90201-080L8-00	Washer, Plate
12	4BR-12210-00-00	Tensioner Assy, Cam Chain
13	91317-06025-00	Bolt
14	4BR-12213-00-00	Gasket, Tensioner Case

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

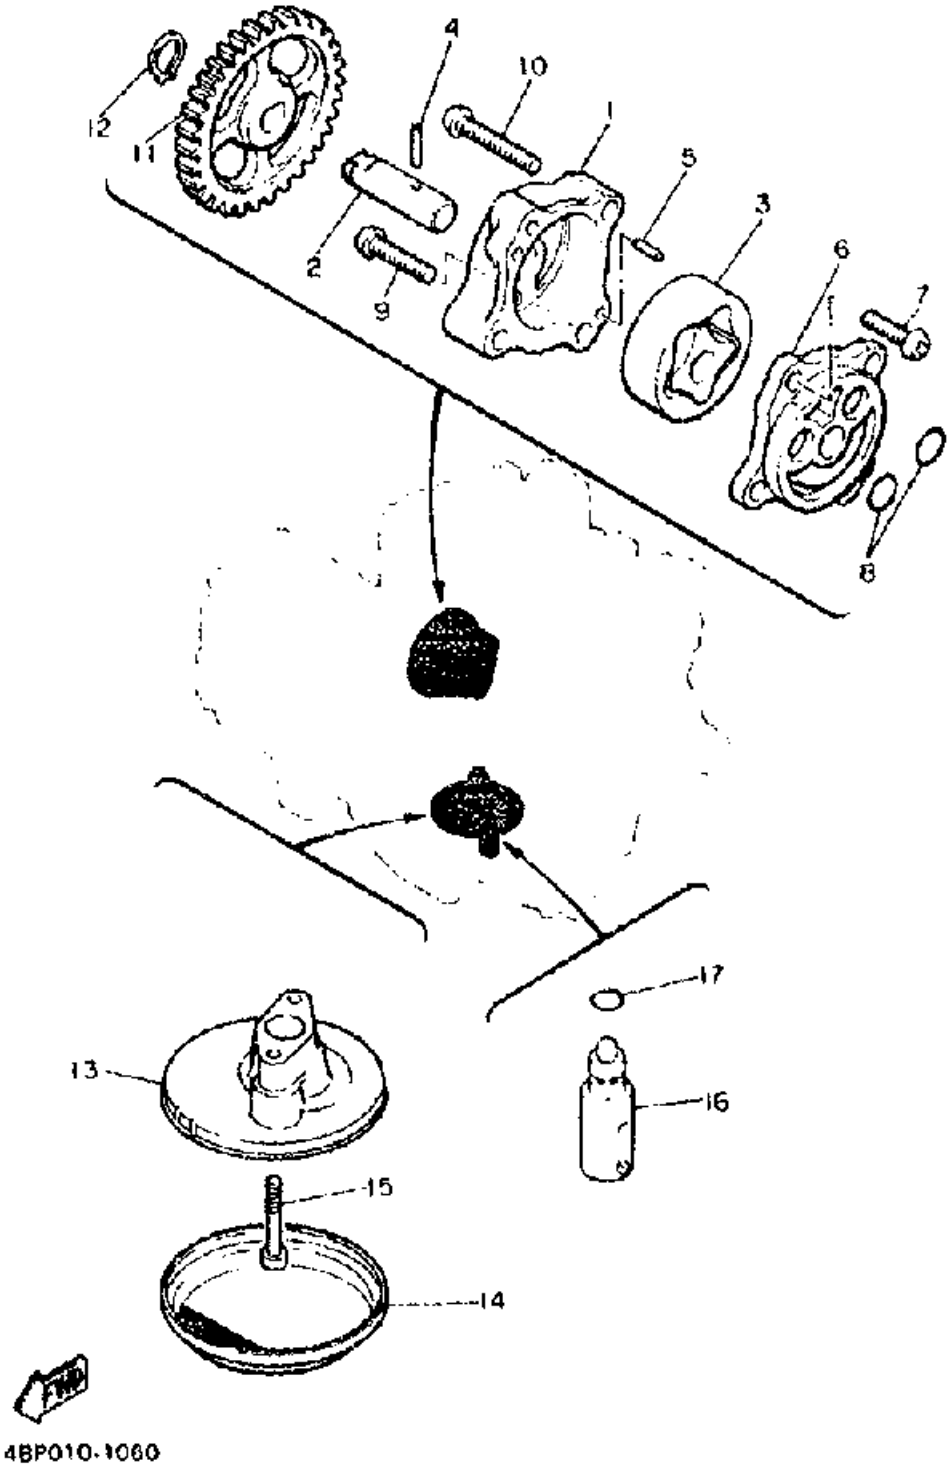


Ref No	Part No	Description
01	33M-13336-00-00	Housing, Rotor
02	33M-13314-01-00	Shaft, Pump
03	4H7-13310-00-00	Rotor Assy 1
04	93603-17070-00	Pin, Dowel
05	93603-17073-00	Pin, Dowel
06	4G0-13316-00-00	Cover, Pump
07	98507-06025-00	Screw, Pan Head
08	93210-13361-00	O-ring
09	98507-06025-00	Screw, Pan Head
10	98507-06035-00	Screw, Pan Head
11	4G0-13325-01-00	Gear, Pump Driven
12	99009-11400-00	Circlip
13	4BR-13412-00-00	Housing, Strainer
14	4H7-13411-02-00	Strainer, Oil
15	91317-06030-00	Bolt
16	11H-13490-00-00	Relief Valve Assy
17	93210-10096-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

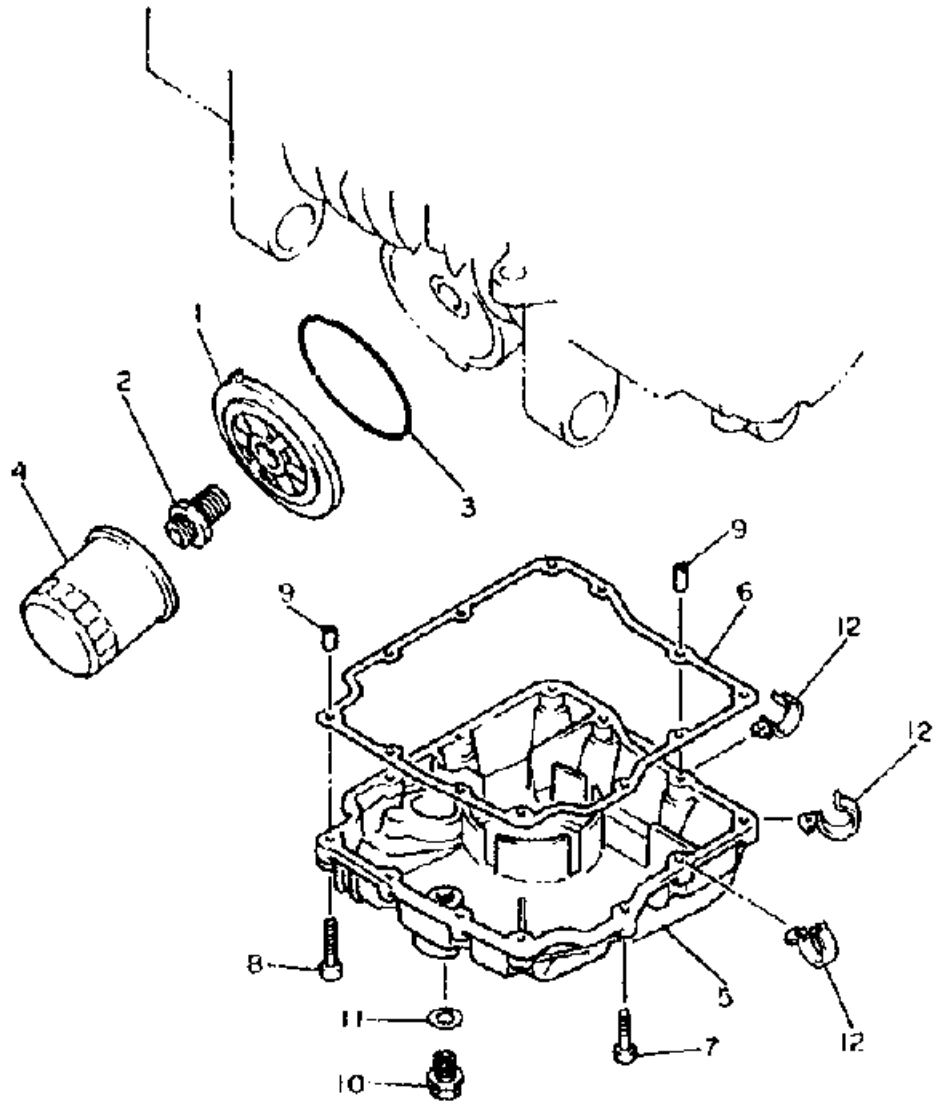


Ref No	Part No	Description
01	3TJ-13461-00-00	Plate, Adaptor
02	90401-20145-00	Bolt, Union
03	93210-87723-00	O-ring
04	3FV-13440-00-00	Element Assy, Oil Cleaner
05	4BR-13417-00-00	Cover, Strainer
06	4BR-13414-00-00	Gasket, Strainer Cover
07	91317-06030-00	Bolt
08	91317-06040-00	Bolt
09	99510-08016-00	Pin, Dowel
10	3VD-13455-00-00	Plug
11	214-11198-01-00	Gasket
12	90462-07078-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

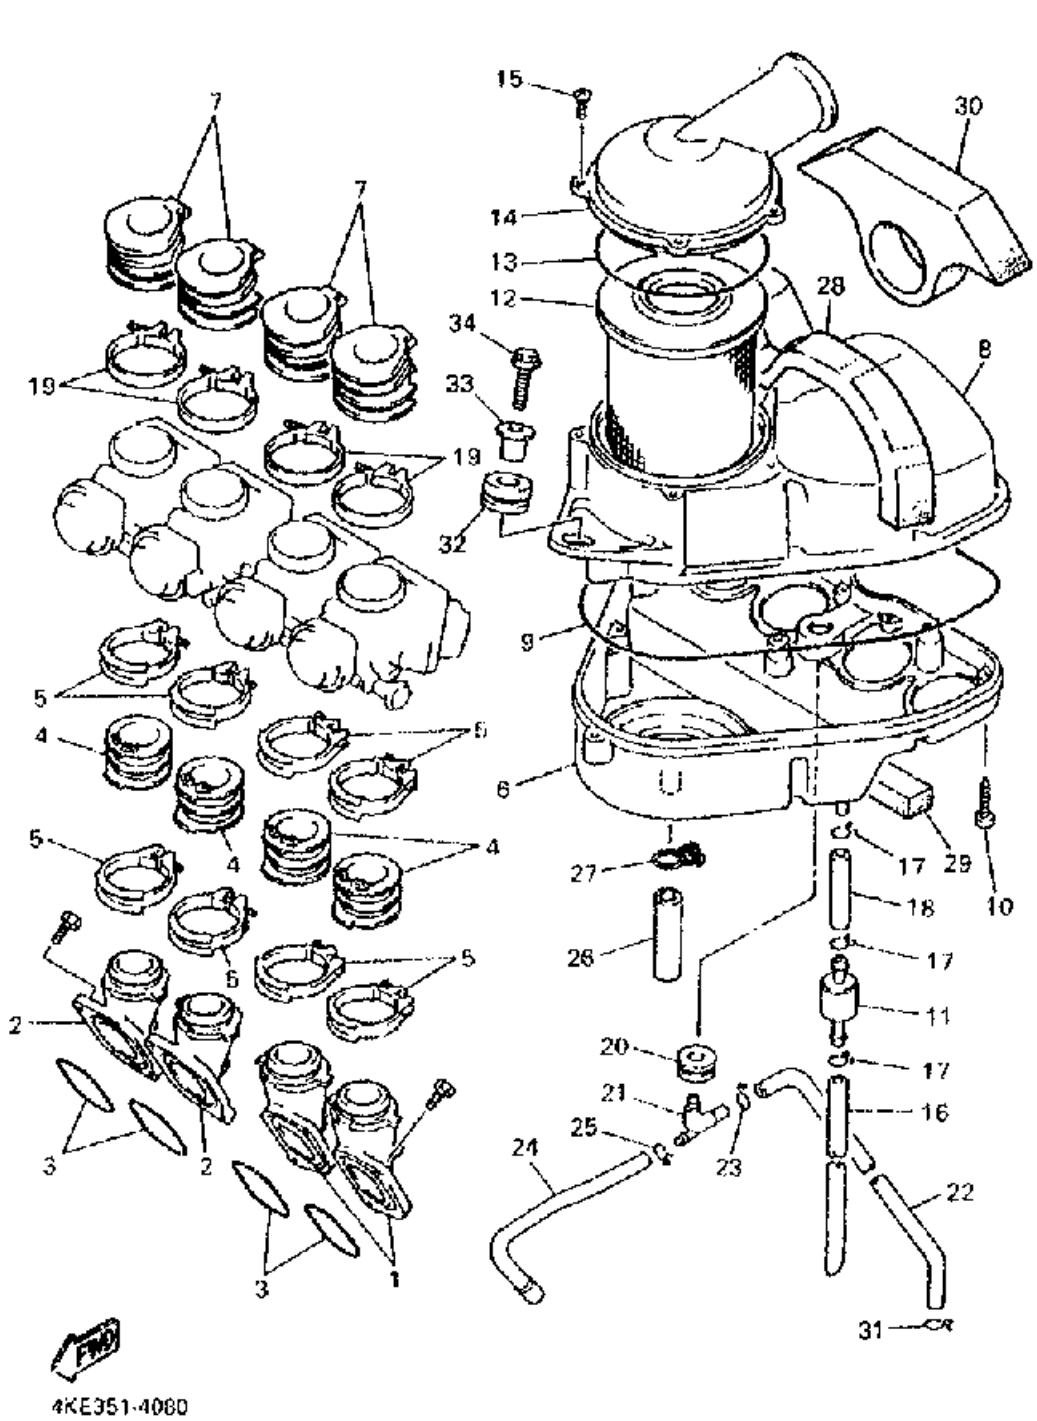


Ref No	Part No	Description
01	4BR-13586-00-00	Joint, Carburetor 1
02	4BR-13596-00-00	Joint, Carburetor 2
03	93210-37532-00	O-ring
04	4E8-13598-01-00	Joint, Carburetor 4
04	4LX-13598-00-00	Joint, Carburetor 4
05	4BR-13575-00-00	Band
06	4BR-14411-00-00	Case, Air Cleaner 1
07	4BR-14453-00-00	Joint, Air Cleaner 1
08	4BR-14421-00-00	Case, Air Cleaner 2
09	4BR-14452-00-00	Seal
10	97707-50130-00	Screw, Tapping
11	4X7-2149Y-00-00	Filter Assy
12	4BR-14451-00-00	Element, Air Cleaner
13	5T0-14457-00-00	Seal
14	4BR-14412-01-00	Cap, Cleaner Case 1
15	97707-50130-00	Screw, Tapping
16	90445-11152-00	Hose
17	90467-10008-00	Clip
18	90445-11699-00	Hose
19	90460-54137-00	Clamp, Hose
20	31A-14435-00-00	Grommet
21	4BR-14419-00-00	Pipe
22	4BR-11166-00-00	Pipe, Breather 1
23	90467-71015-00	Clip
24	4BR-14349-00-00	Pipe
25	90467-10008-00	Clip
26	90446-15233-00	Hose
27	90467-15012-00	Clip
28	4KE-14425-00-00	Damper 1
29	4KE-14426-00-00	Damper 2
30	4KE-1442G-00-00	Damper 3
31	90467-14015-00	Clip
32	90480-14023-00	Grommet
33	90387-060M9-00	Collar
34	95817-06030-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

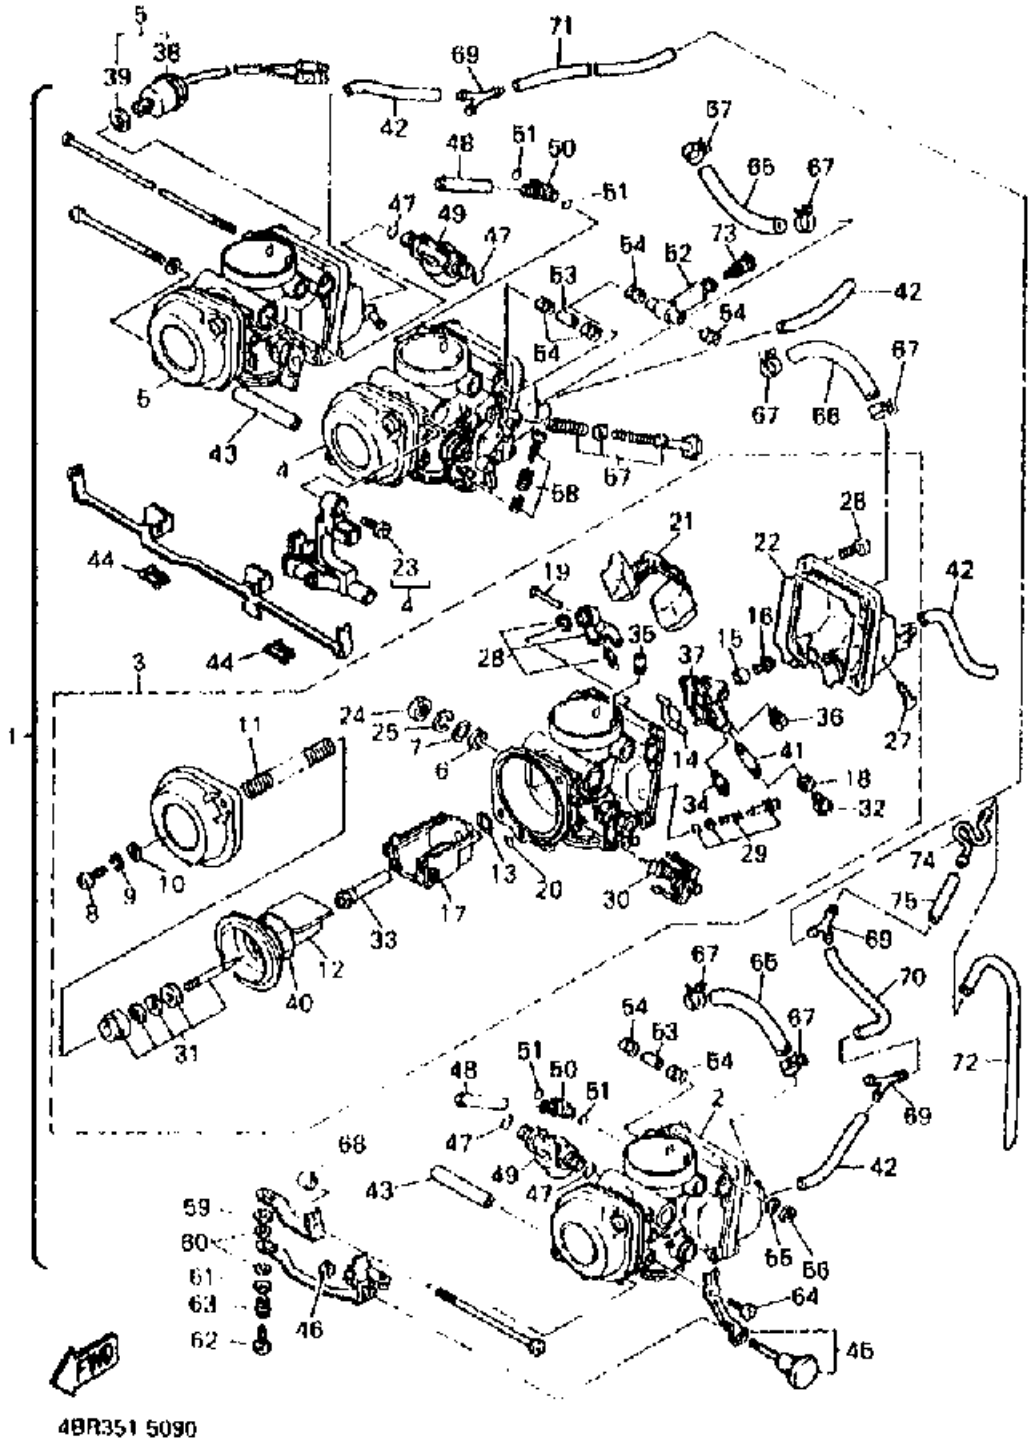


Ref No	Part No	Description
01	4E8-14900-04-00	Carburetor Assy
01	4DS-14900-04-00	Carburetor Assy
02	4E8-14901-04-00	• . Carburetor Assy 1
02	4DS-14902-04-00	• . Carburetor Assy 2
03	4E8-14902-04-00	• . Carburetor Assy 2
03	4DS-14902-04-00	• . Carburetor Assy 2
04	4E8-14903-04-00	• . Carburetor Assy 3
04	4DS-14903-04-00	• . Carburetor Assy 3
05	4E8-14904-04-00	• . Carburetor Assy 4
05	4DS-14904-04-00	• . Carburetor Assy 4
06	256-14997-00-00	•• .. Seal
07	1A8-14953-00-00	•• .. Washer
08	98507-05016-00	•• .. Screw, Pan Head
09	92907-05600-00	•• .. Washer, Plate
10	92907-05600-00	•• .. Washer, Plate
11	3LN-14933-00-00	•• .. Spring, Diaphragm
12	3YX-14940-00-00	•• .. Diaphragm Assy
13	1AE-14147-00-00	•• .. O-ring
14	3LN-14147-00-00	•• .. O-ring
15	137-14153-00-00	•• .. Washer, Main Jet
16	1HX-14565-00-00	•• .. Screw
17	4BR-1411E-01-00	•• .. Block, Jet
18	1AE-14227-00-00	•• .. Washer
19	53L-14186-00-00	•• .. Pin, Float
20	3FV-14147-00-00	•• .. O-ring
21	3GM-14985-00-00	•• .. Float
22	3GM-14997-00-00	•• .. Seal
23	98602-05014-00	•• .. Screw, Oval Head
24	812-14594-00-00	•• .. Nut
25	92902-08100-00	•• .. Washer, Spring
26	98507-05012-00	•• .. Screw, Pan Head
27	12R-14191-00-00	•• .. Plug, Drain
28	3GM-14107-15-00	•• .. Needle Valve Set
29	12R-14105-00-00	•• .. Pilot Screw Set
30	3LN-1410A-10-00	•• .. Starter Set
31	4BR-1490J-01-00	•• .. Needle Set
32	3G2-14231-21-00	•• .. Jet, Main (105)
32	3G2-1423A-71-00	•• .. Jet, Main (102.5)
33	4DS-14141-34-00	•• .. Nozzle, Main
34	1NT-14142-15-00	•• .. Jet, Pilot (15)
35	830-14231-29-00	•• .. Jet, Main (145)
36	3G2-1423A-61-00	•• .. Jet, Main (52.5)
37	4BR-1411A-00-00	•• .. Block Jet Assy
38	4BR-82560-00-00	•• .. Thermo Switch Assy
39	4BR-14952-00-00	•• .. Washer
40	3YX-1416A-00-00	•• .. O-ring
41	4BR-14148-00-00	•• .. Pipe
42	7HU-14987-00-00	• . Hose
43	3HE-14148-00-00	• . Pipe
44	3EN-14261-00-00	• . Holder
45	4BP-14978-00-00	• . Shaft, Starter Lever
46	95301-04600-00	• . Nut
47	3LC-1416A-00-00	• . O-ring
48	4BP-14197-00-00	Pipe
49	4BP-14988-00-00	• . Pipe, Starter Connecting

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

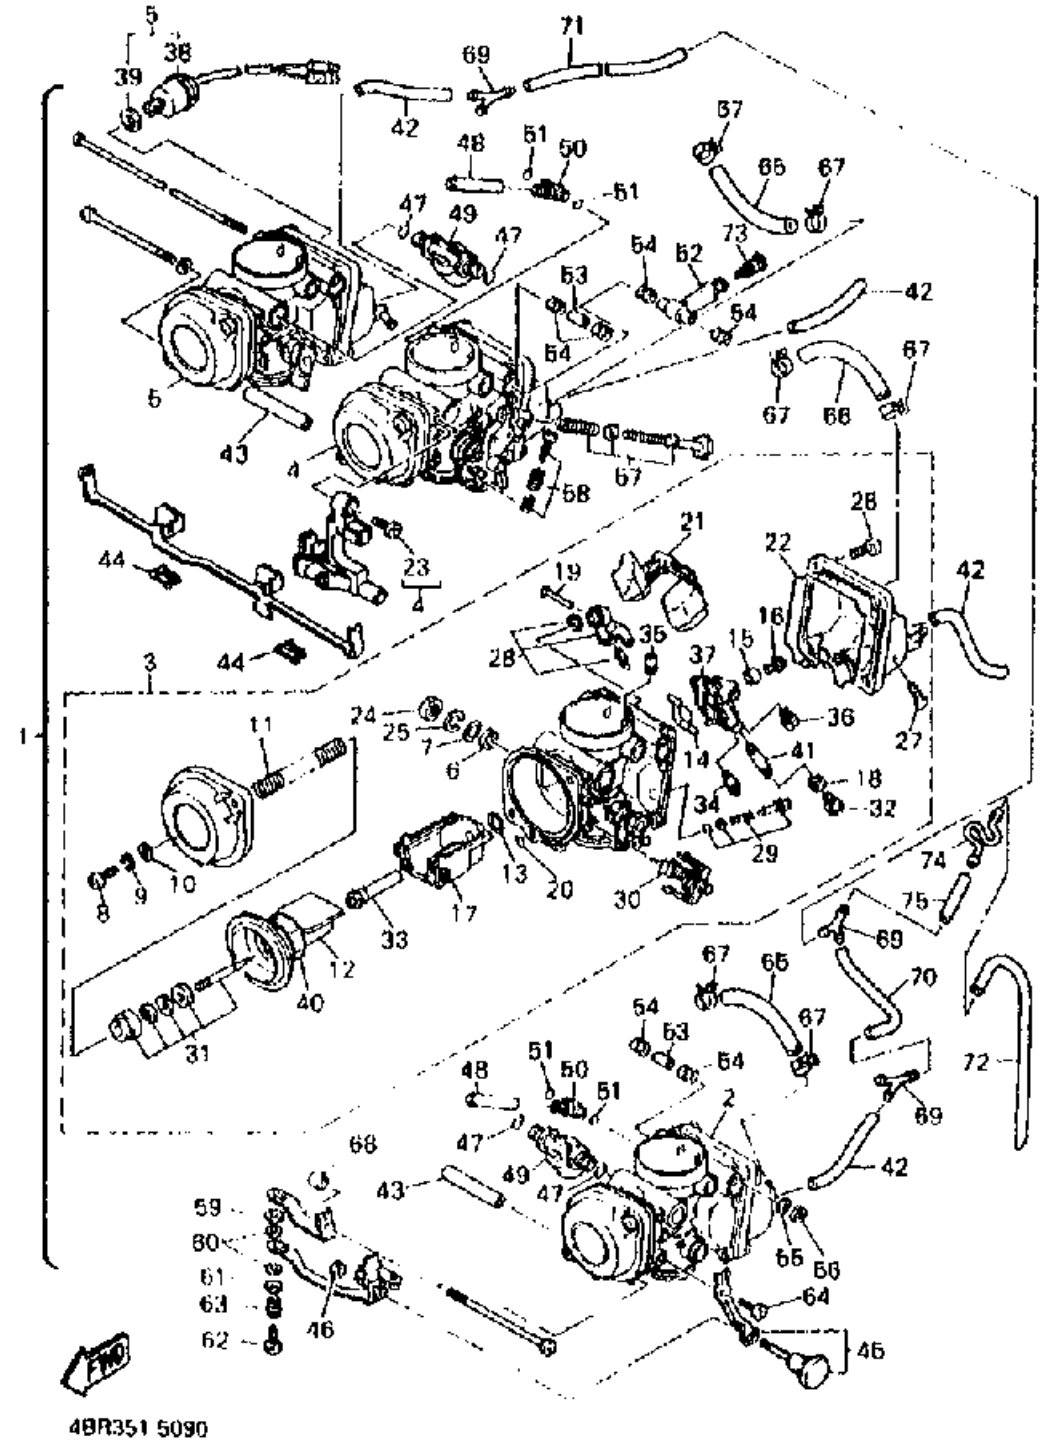


Ref No	Part No	Description
50	4V7-14988-00-00	• . Pipe, Starter Connecting
51	822-14147-00-00	• . O-ring
52	3LN-14251-00-00	• . Nipple
53	3YX-14148-00-00	• . Pipe
54	3EN-14997-00-00	• . Seal
55	92901-05600-00	• . Washer, Plate
56	95380-05600-00	• . Nut
57	3LN-14103-00-00	• . Throttle Screw Set
58	3EN-1490K-00-00	• . Stop Screw Set
59	256-14952-00-00	• . Washer
60	1FK-14952-00-00	• . Washer
61	1FK-14179-00-00	• . Washer, Starter Lever
62	22F-14115-00-00	• . Plug, Screw
63	46X-14938-00-00	• . Spring
64	98507-05008-00	• . Screw, Pan Head
65	4BP-12483-01-00	• . Pipe 3
66	4BP-12484-01-00	• . Pipe 4
67	4BP-14139-01-00	• . Clip, Pipe
68	4BR-14987-00-00	• . Hose
69	90413-05008-00	• . Way 3
70	4DS-14987-00-00	• . Hose
71	4DG-14987-00-00	• . Hose
72	4BR-14349-00-00	• . Pipe
73	1KT-14994-00-00	• . Net, Filter
74	4BR-14193-00-00	• . Pipe
75	4BR-14396-00-00	• . Pipe

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

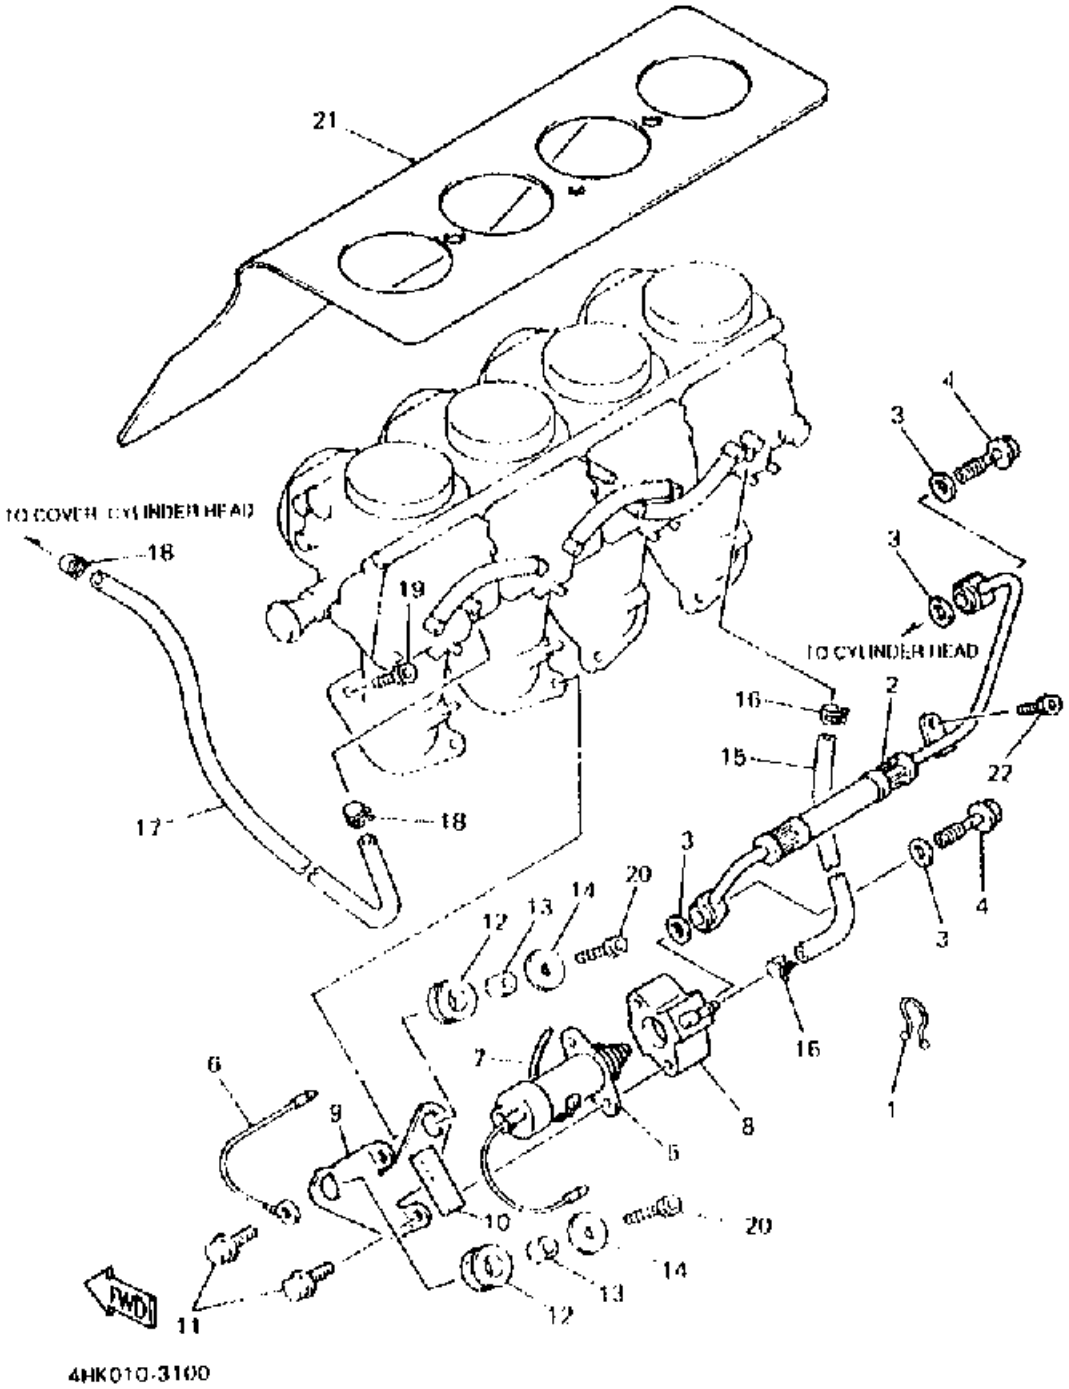


Ref No	Part No	Description
01	90464-16039-00	Clamp
02	4BR-13416-00-00	Pipe, Oil 1
03	90430-06166-00	Gasket
04	90401-06119-00	Bolt, Union
05	4BR-13183-00-00	Valve, Check
06	3YF-81971-00-00	Wire, Lead
07	90464-35132-00	Clamp
08	4BR-14510-02-00	Carburetor Assy 2
09	4BR-14261-00-00	Holder
10	3XV-21717-00-00	Damper
11	95827-06016-00	Bolt, Flange
12	90480-15557-00	Grommet
13	90387-064T3-00	Collar
14	90201-06067-00	Washer, Plate
15	4BR-13464-00-00	Hose, Oil 1
16	90467-11108-00	Clip
17	4BR-1316F-00-00	Hose, Oil 1
18	90467-11108-00	Clip
19	91317-06020-00	Bolt
20	90110-06181-00	Bolt, Hexagon Socket Head
21	4BR-12682-01-00	Protector, Heat
22	91317-06025-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

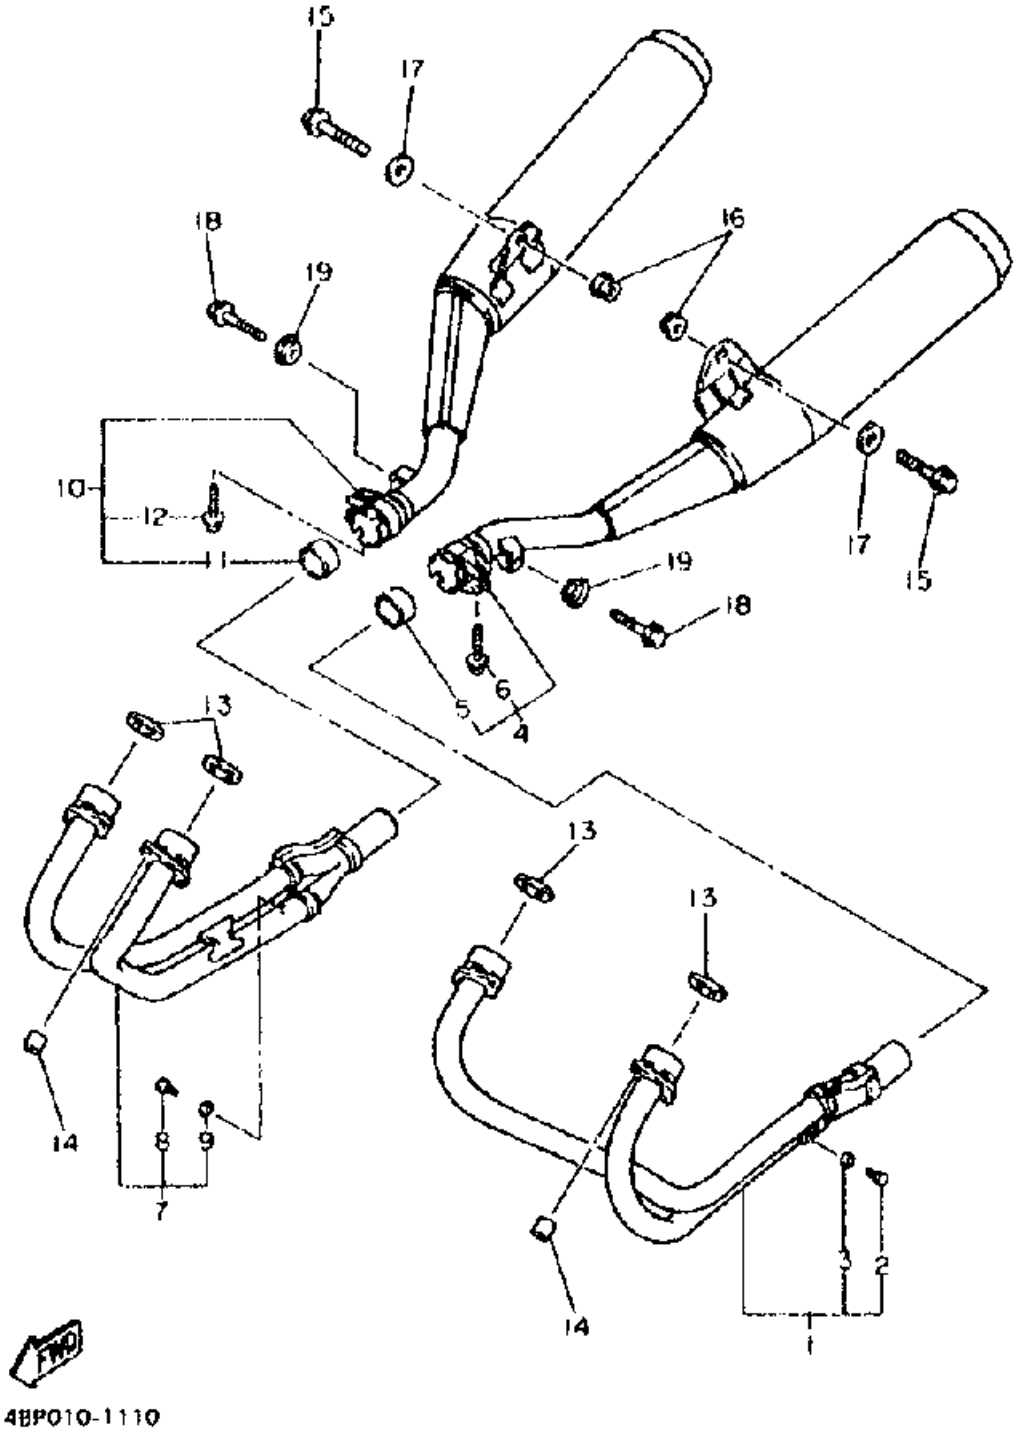


Ref No	Part No	Description
01	4BR-14610-01-00	Exhaust Pipe Assy 1
02	90101-06576-00	• . Bolt
03	92907-06600-00	• . Washer, Plate
04	4BR-14710-00-00	Muffler Assy 1
05	3VD-14755-00-00	• . Gasket, Silencer
06	95027-08030-00	• . Bolt, Flange
07	4BR-14620-01-00	Exhaust Pipe Assy 2
08	90101-06576-00	• . Bolt
09	92907-08600-00	• . Washer, Plate
10	4BR-14720-00-00	Muffler Assy 2
11	3VD-14755-00-00	• . Gasket, Silencer
12	95027-06030-00	• . Bolt, Flange
13	4BR-14613-00-00	Gasket, Exhaust Pipe
14	90179-08507-00	Nut
15	95807-10040-00	Bolt, Flange
16	95707-10600-00	Nut, Flange
17	90201-10600-00	Washer, Plate
18	95807-08035-00	Bolt, Flange
19	90209-08249-00	Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

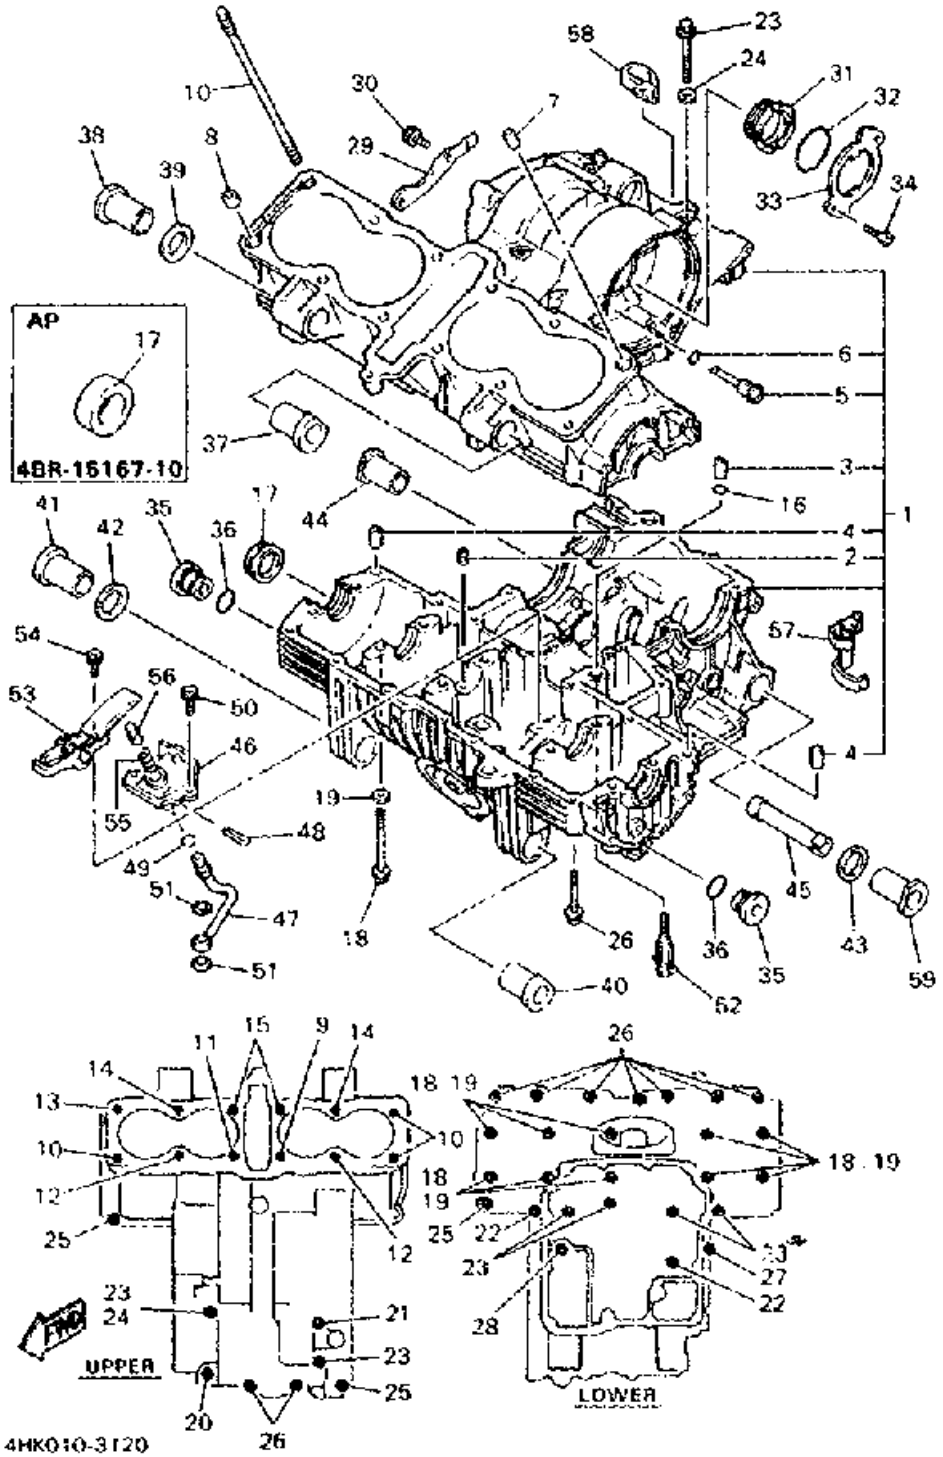


Ref No	Part No	Description
01	4BR-15100-01-00	Crankcase Assy
02	4G0-15138-00-00	• . Nozzle 1
03	99530-10014-00	• . Pin, Dowel
04	99510-12016-00	• . Pin, Dowel
05	4BR-15148-00-00	• . Nozzle 2
06	93210-11453-00	• . O-ring
07	99530-14016-00	Pin, Dowel
08	90387-16547-00	Collar
09	90116-06058-00	Bolt, Stud
10	90116-06566-00	Bolt, Stud
11	90116-06339-00	Bolt, Stud
12	90116-06340-00	Bolt, Stud
13	4BR-11363-00-00	Bolt, Cylinder Holding 3
14	4G0-11364-00-00	Bolt, Cylinder Holding 4
15	4G0-11363-00-00	Bolt, Cylinder Holding 3
16	93210-09850-00	O-ring
17	90387-48229-00	Collar
17	4BR-15167-10-00	Plug, Blind 1
18	95817-08100-00	Bolt, Flange
19	90201-094G1-00	Washer, Plate
20	95817-08080-00	Bolt, Flange
21	95817-06135-00	Bolt, Flange
22	95817-06095-00	Bolt, Flange
23	95817-06065-00	Bolt, Flange
24	90430-06160-00	Gasket
25	95817-06055-00	Bolt, Flange
26	95817-06045-00	Bolt, Flange
27	95817-06040-00	Bolt, Flange
28	95817-06035-00	Bolt, Flange
29	4BR-15381-00-00	Plate, Bearing Cover
30	91317-06016-00	Bolt
31	4G0-15163-01-00	Housing, Bearing 1
32	93210-48460-00	O-ring
33	4G0-15383-00-00	Plate, Bearing Cover
34	90151-06014-00	Screw, Countersunk
35	3KM-15189-00-00	Plug
36	93210-20573-00	O-ring
37	4G0-15336-00-00	Damper, Engine Mount 3
38	33M-15336-00-00	Damper, Engine Mount 3
39	90202-15159-00	Washer, Plate
40	4G0-15316-00-00	Damper, Engine Mount 1
41	33M-15337-00-00	Damper 4
42	90202-15153-00	Washer, Plate
43	90202-17211-00	Washer, Plate
44	46X-15326-00-00	Damper, Engine Mount 2
45	4BR-15327-00-00	Spacer, Engine Mount
46	4G0-11592-00-00	Tensioner, Chain
47	4G0-13171-00-00	Pipe, Delivery 2
48	91401-25020-00	Pin, Cotter
49	93210-07540-00	O-ring
50	90110-06258-00	Bolt, Hexagon Socket Head
51	90430-10171-00	Gasket
52	4G0-11575-00-00	Relief Valve Assy
53	4BR-11492-00-00	Tensioner Arm Comp.
54	90110-06158-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

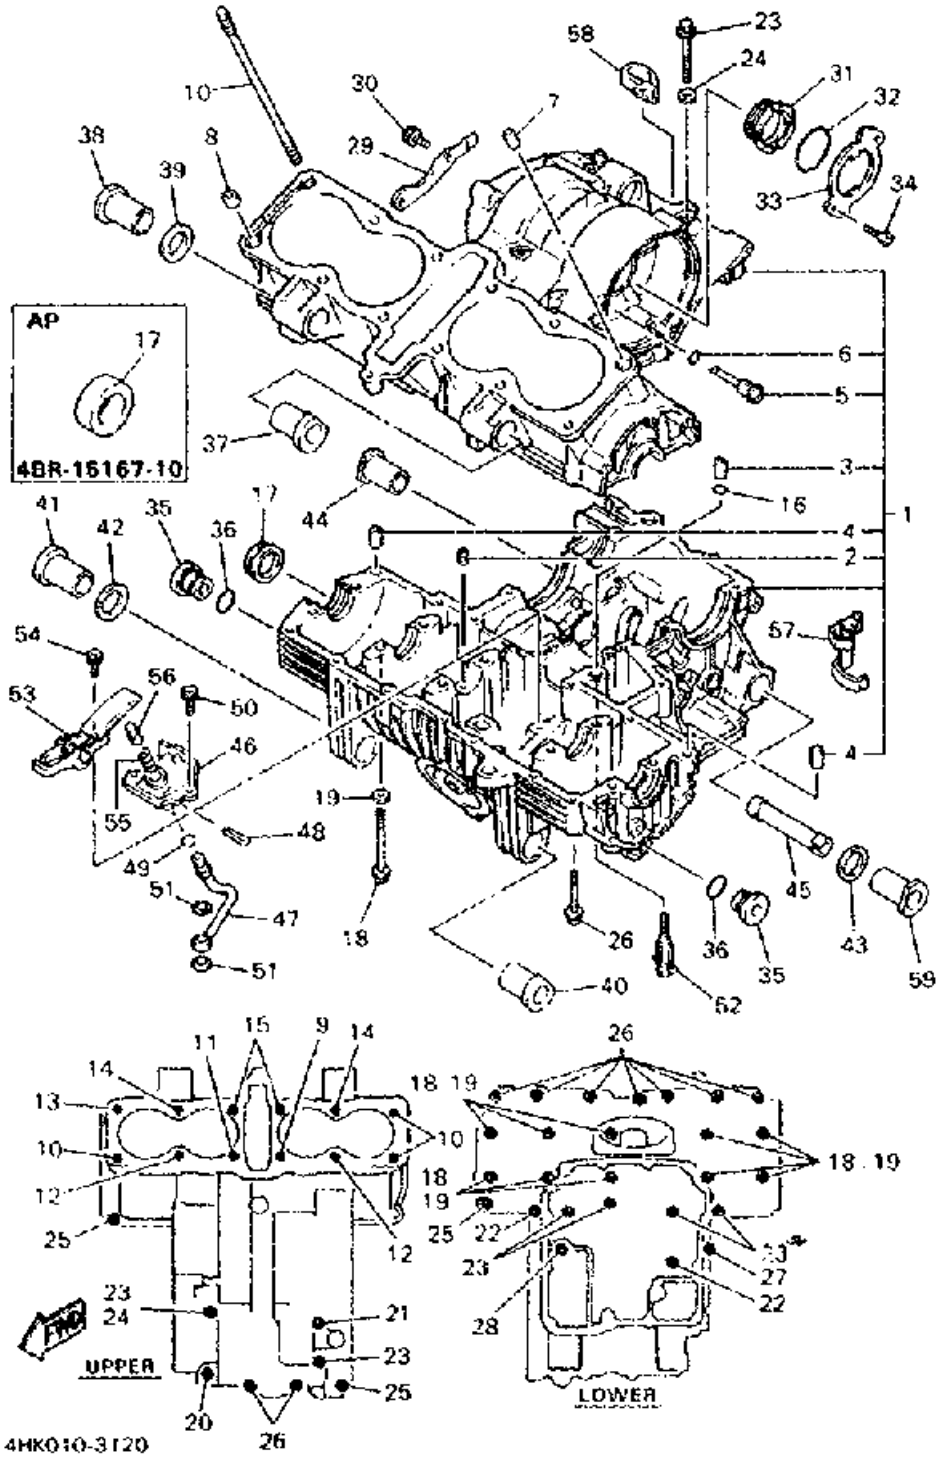


Ref No	Part No	Description
55	90501-143A8-00	Spring, Compression
56	46X-11597-00-00	Plunger, Tensioner
57	90462-06067-00	Clamp
58	90465-10290-00	Clamp
59	90387-125V2-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

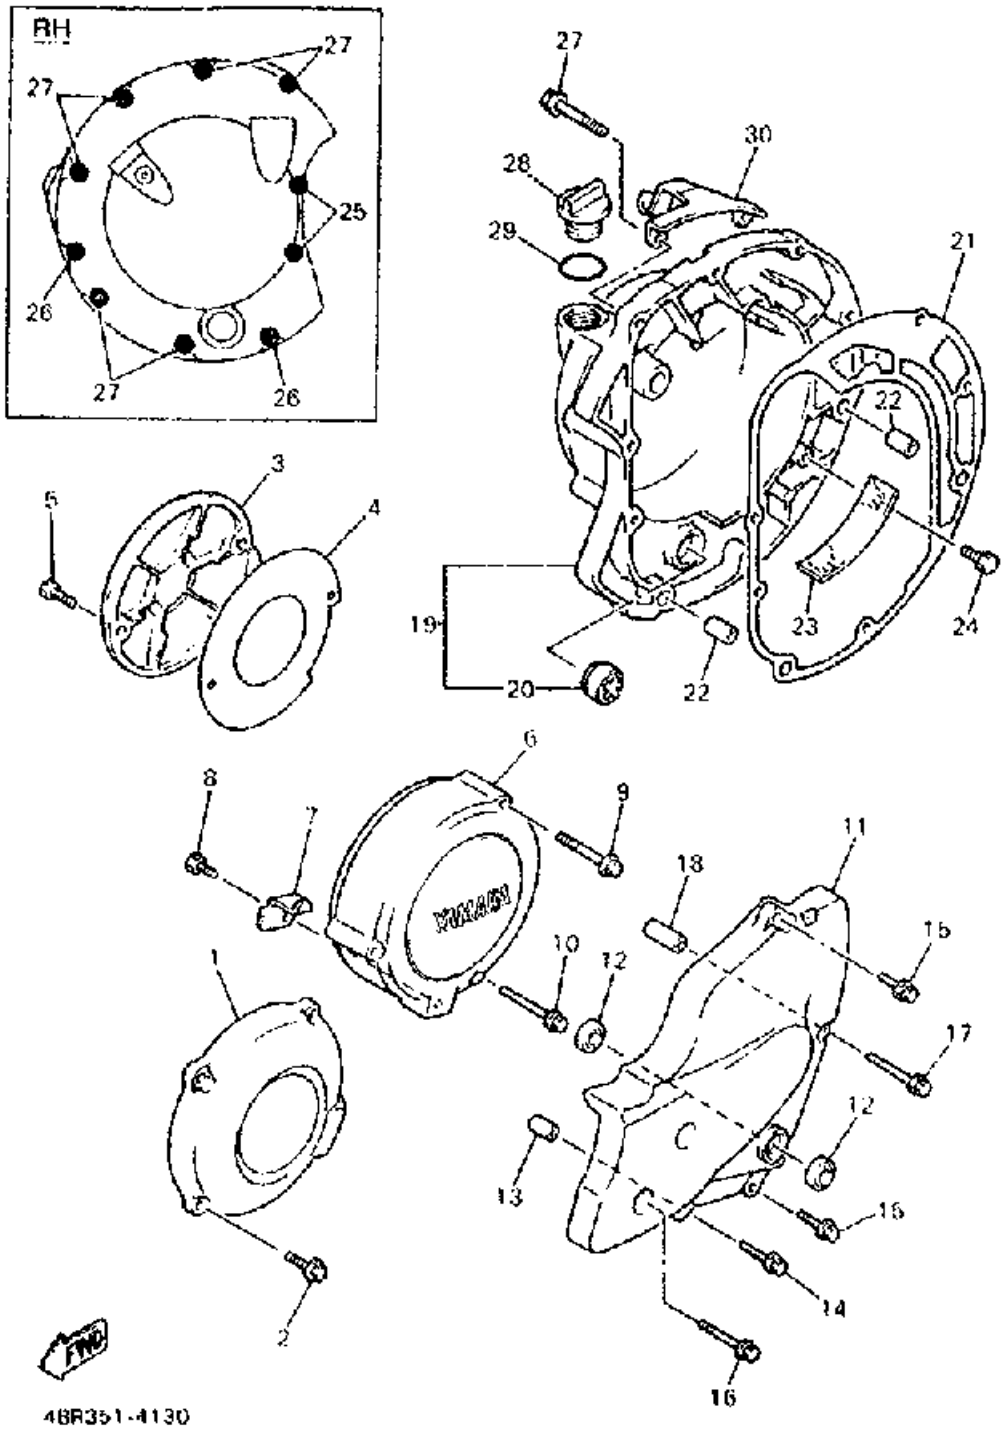


Ref No	Part No	Description
01	4BR-15410-00-00	Crankcase Cover Assy 1
02	95027-06020-00	Bolt, Flange
03	4BR-15420-10-00	Crankcase Cover Assy 2
04	4BR-15463-00-00	Gasket, Carburetor Cover 2
05	90111-06005-00	Bolt
06	4BR-15415-00-00	Cover, Generator
07	4BR-15484-00-00	Clamp 2
08	91317-06010-00	Bolt
09	95027-06065-00	Bolt, Flange
10	90106-06671-00	Bolt Mit, Scheibe
11	4BR-15411-00-00	Cover, Crankcase 1
12	93109-12053-00	Oil Seal
13	99530-10014-00	Pin, Dowel
14	95027-06035-00	Bolt, Flange
15	95027-06030-00	Bolt, Flange
16	95027-06055-00	Bolt, Flange
17	95027-06065-00	Bolt, Flange
18	90387-064Y1-00	Collar
19	4BR-W1543-00-00	Crankcase Cover Assy 2
20	3Y1-15361-00-00	• . Gauge, Level
21	4BR-15461-00-00	Gasket, Crankcase Cover 2
22	99530-10011-00	Pin, Dowel
23	49A-15412-00-00	Cover, Oil Pump
24	97027-06012-00	Bolt
25	95027-06070-00	Bolt, Flange
26	95027-06040-00	Bolt, Flange
27	95027-06030-00	Bolt, Flange
28	3F9-15362-00-00	Plug, Oil Level
29	93210-27778-00	O-ring
30	4BR-15441-00-00	Holder, Clutch Cable

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

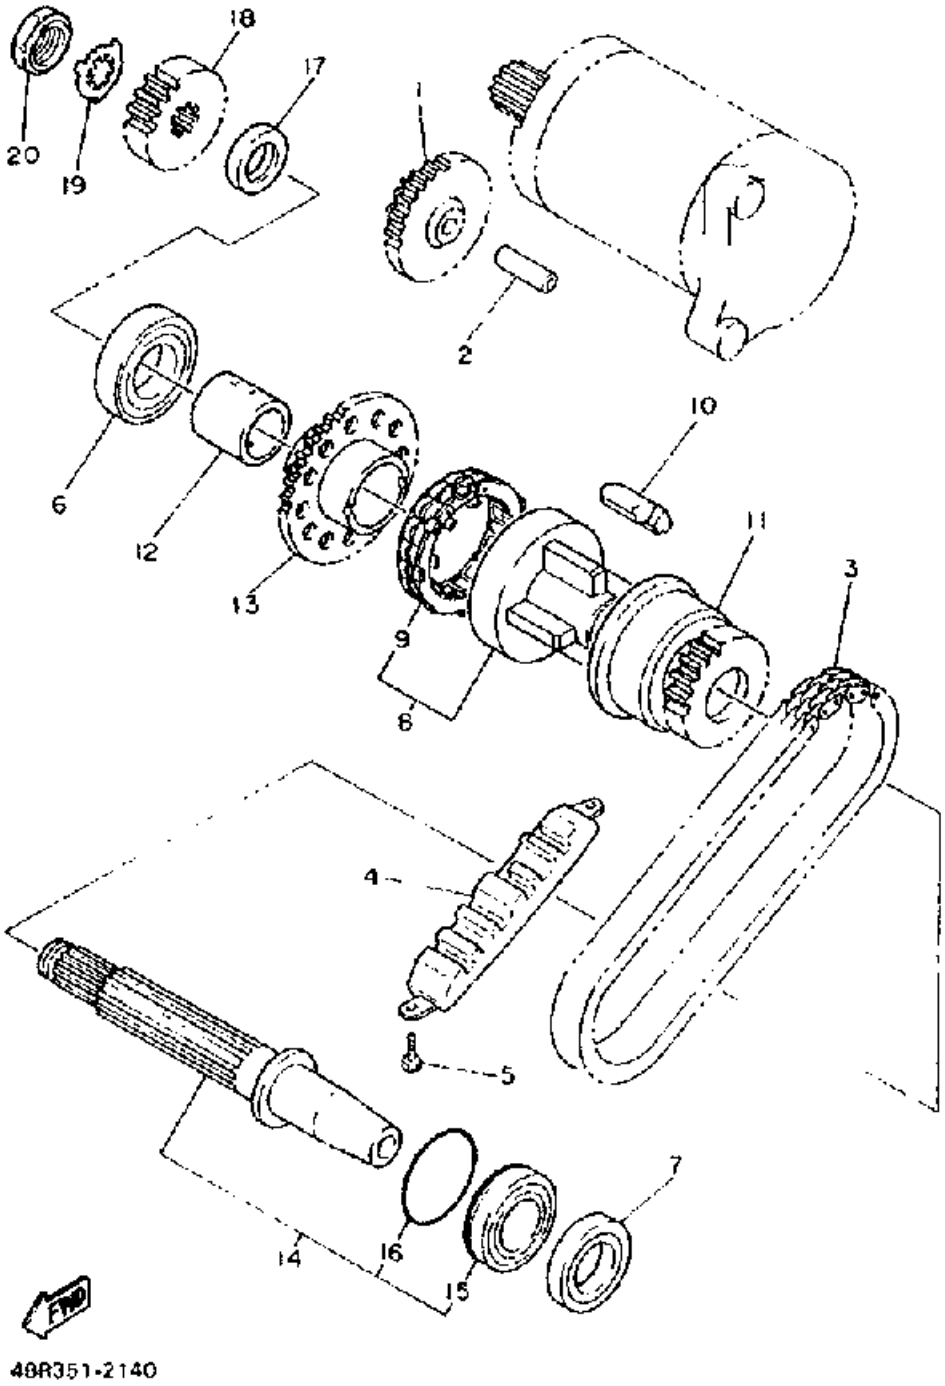


Ref No	Part No	Description
01	4BP-15512-00-00	Gear, Idler 1
02	33M-15521-00-00	Shaft 1
03	4BR-16139-00-00	Chain, Primary
04	4BR-11474-00-00	Guide, Upper
05	97007-06014-00	Bolt
06	93306-30625-00	Bearing (b6305)
07	93102-25263-00	Oil Seal
08	4BR-15570-00-00	Starter Clutch Assy
09	4BR-15580-01-00	• . Starter Clutch Outer Assy
10	4BR-16155-00-00	Absorber 1
11	4BR-11537-00-00	Gear, Driven
12	90387-263Y6-00	Collar
13	4BR-15517-00-00	Gear, Idler 2
14	4G0-11406-00-00	Shaft Assy
15	93306-20545-00	• . Bearing
16	93210-47440-00	• . O-ring
17	90387-2103N-00	Collar
18	4U8-16111-00-00	Gear, Primary Drive (28z)
19	90215-19226-00	Washer, Lock
20	90179-06319-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

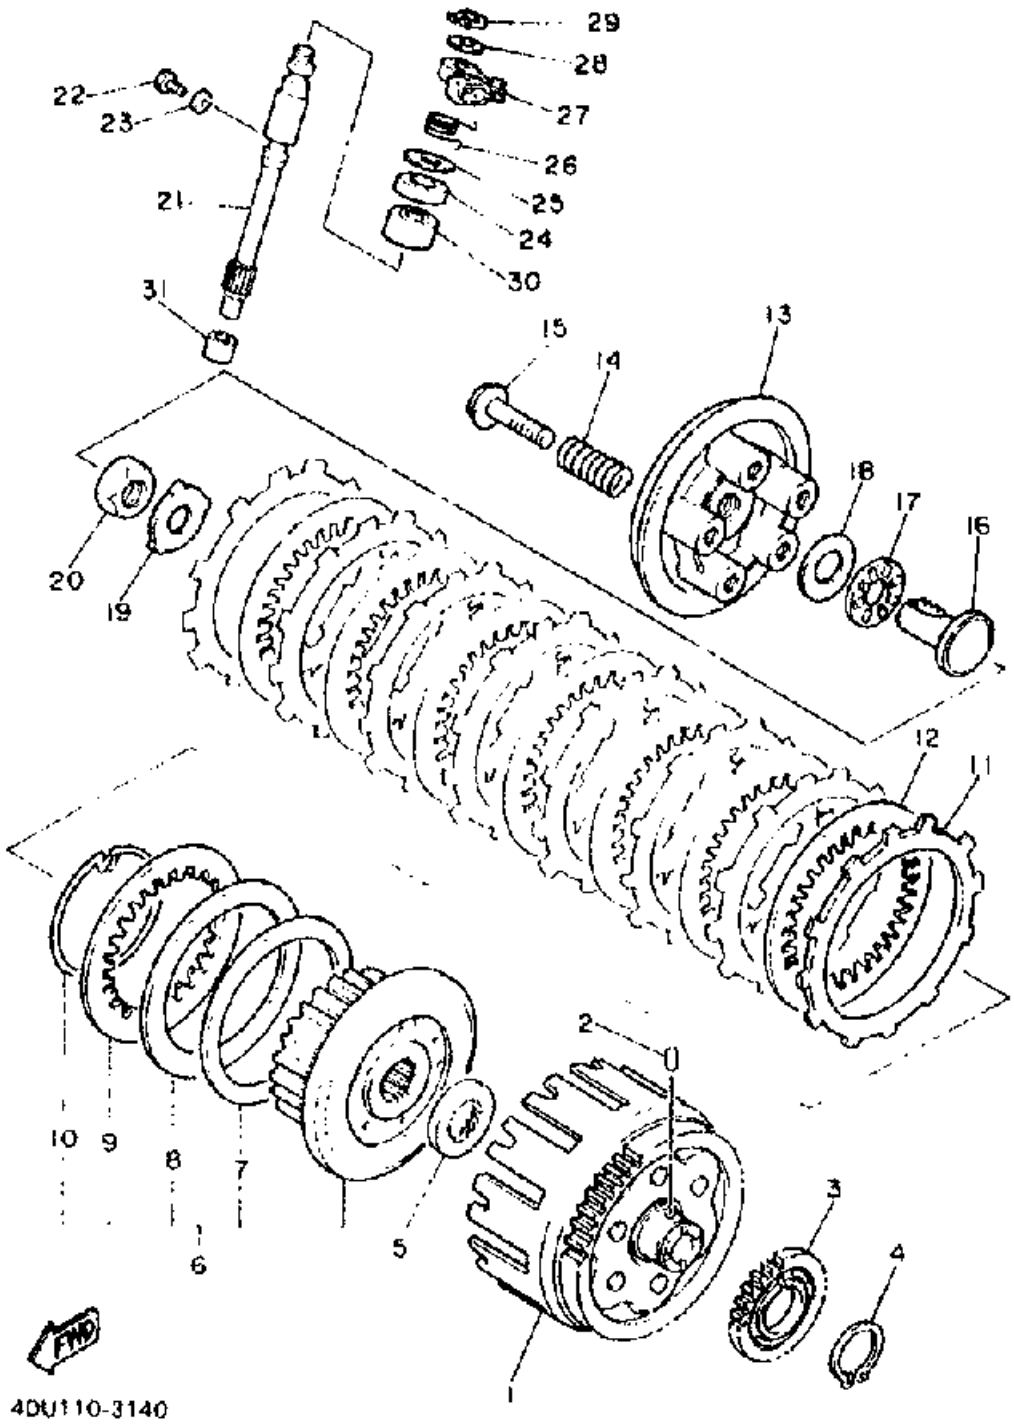

Ref No	Part No	Description
01	4U8-16170-01-00	Primary Driven Gear Comp. (65z)
02	93605-10108-00	Pin, Dowel
03	4G0-13324-09-00	Gear, Pump Drive
04	93410-40059-00	Circlip
05	3Y1-16154-00-00	Plate, Thrust 1
06	4BR-16370-00-00	Clutch Boss Assy
07	1J7-16384-00-00	• . Plate, Seat
08	1J7-16383-01-00	• . Spring, Clutch Boss
09	168-16324-00-00	• . Plate, Clutch 1
10	1J7-16385-00-00	• . Ring, Clutch Boss
11	4H7-16321-01-00	Plate, Friction
12	4H7-16325-00-00	Plate, Clutch 2
13	4BR-16351-00-00	Plate, Pressure 1
14	90501-23391-00	Spring, Compression
15	90159-06092-00	Screw, With Washer
16	3LD-1637A-01-00	Rod Push Assy
17	93340-21505-00	Bearing
18	90201-150H2-00	Washer, Plate
19	90215-20231-00	Washer, Lock
20	90170-20327-00	Nut
21	3JD-16382-00-00	Axle, Push Lever
22	90109-06778-00	Bolt
23	90430-06014-00	Gasket
24	93102-15212-00	Oil Seal
25	90201-15785-00	Washer, Plate
26	90508-142A8-00	Spring, Torsion
27	4BR-16340-00-00	Push Lever Assy
28	90201-10119-00	Washer, Plate
29	99009-10400-00	Circlip
30	93315-31502-00	Bearing
31	93315-10338-00	Bearing


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

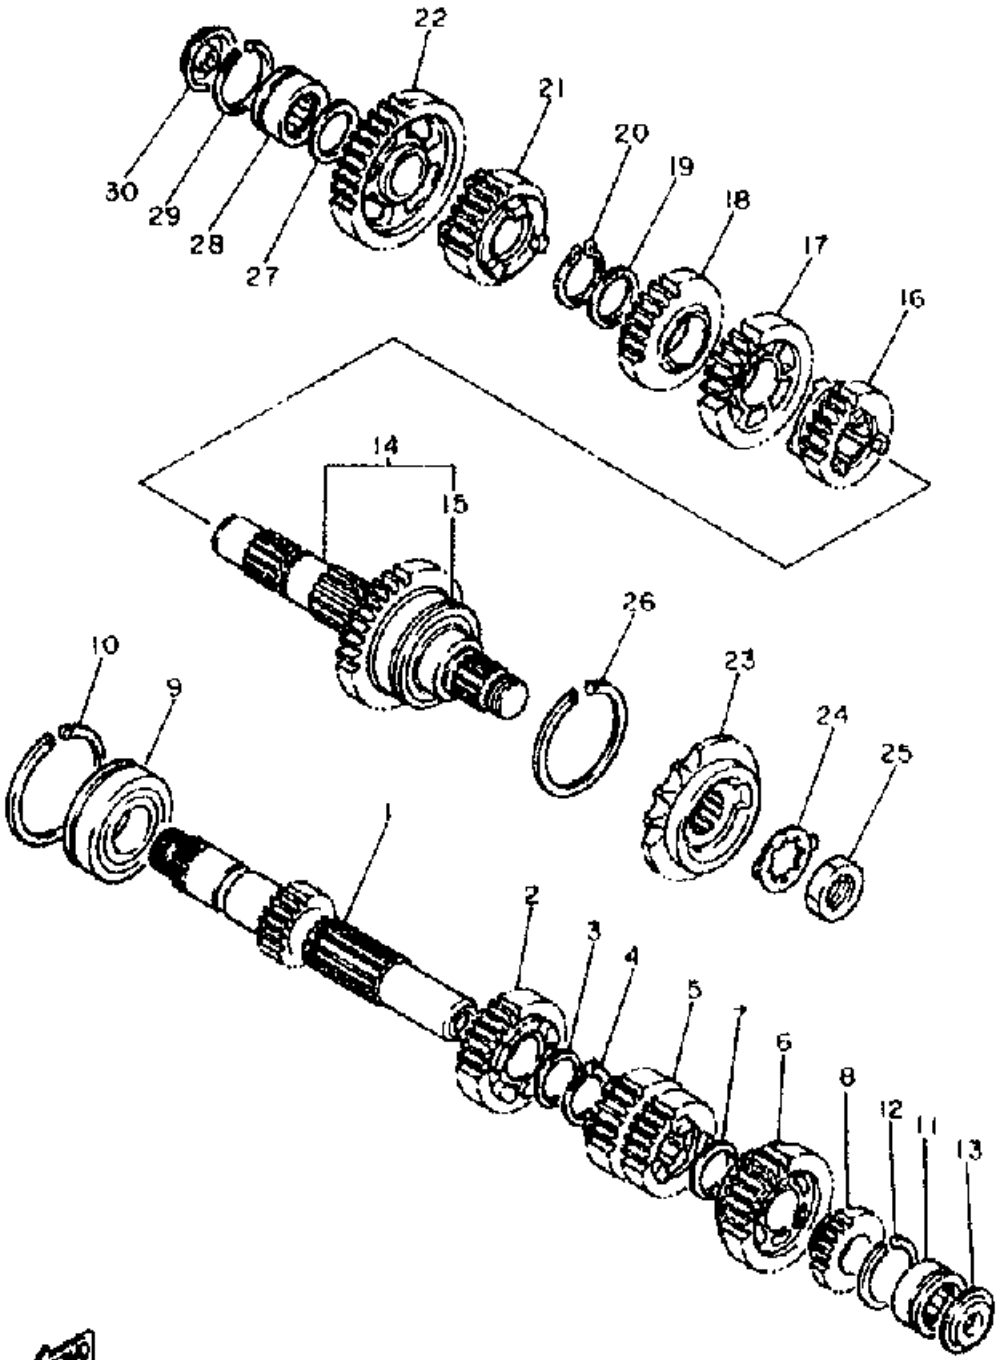

4BP010-1160


Ref No	Part No	Description
01	4BR-17411-00-00	Axle, Main (15t)
02	4BR-17151-00-00	Gear, 5th Pinion (32z)
03	90209-22191-00	Washer
04	93440-25064-00	Circlip
05	4BR-17131-00-00	Gear, 3rd Pinion (27z)
06	4BR-17161-02-00	Gear, 6th Pinion (26z)
07	90201-200K5-00	Washer, Plate
08	4BR-17121-00-00	Gear, 2nd Pinion (18z)
09	93306-30630-00	Bearing
10	278-17425-00-00	Circlip 2
11	93311-42045-00	Bearing (20ng3315ne)
12	278-17425-00-00	Circlip 2
13	4G0-17433-01-00	Nozzle
14	4BR-17402-01-00	Drive Axle Assy
15	93102-35109-00	• . Oil Seal (sd 35-62-6 Hs)
16	4BR-17261-00-00	Gear, 6th Wheel (32z)
17	4BR-17231-00-00	Gear, 3rd Wheel (26z)
18	4BR-17241-00-00	Gear, 4th Wheel (29z)
19	90209-22191-00	Washer
20	93440-25084-00	Circlip
21	4BR-17251-01-00	Gear, 5th Wheel (21z)
22	4BR-17211-00-00	Gear, 1st Wheel (41z)
23	4BR-17460-00-00	Sprocket, Drive (16z)
24	90215-23265-00	Washer, Lock
25	90179-18552-00	Nut
26	278-17421-01-00	Axle, Drive
27	90201-20276-00	Washer, Plate (1.0d)
28	93311-42045-00	Bearing (20ng3315ne)
29	278-17425-00-00	Circlip 2
30	4G0-17433-01-00	Nozzle

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

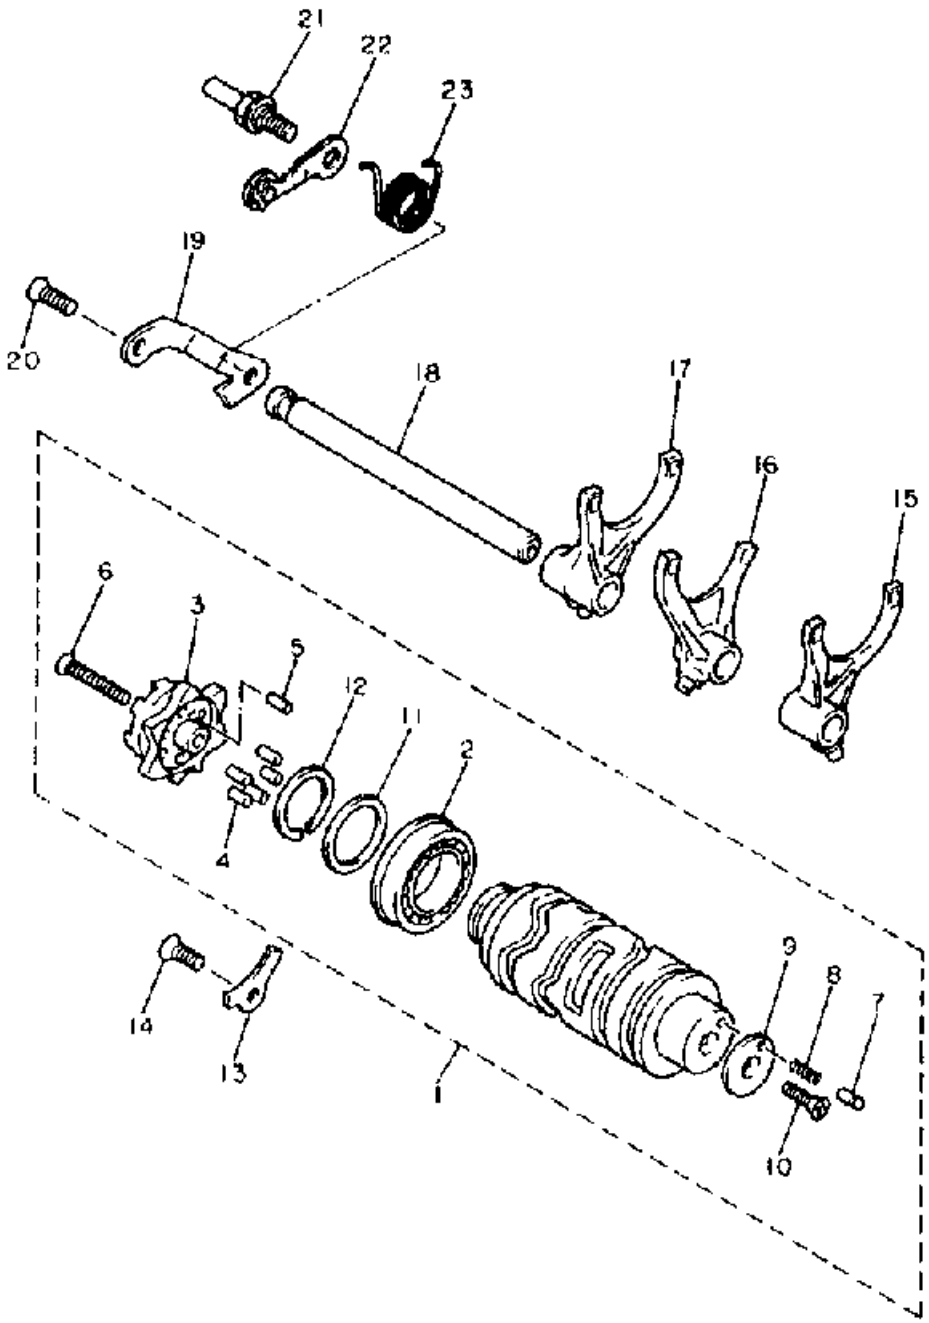


Ref No	Part No	Description
01	4BR-18540-01-00	Shift Cam Assy
02	93306-90803-00	• . Bearing
03	4BR-18185-00-00	• . Segment
04	93604-12037-00	• . Pin, Dowel
05	93604-10011-00	• . Pin, Dowel
06	90151-06013-00	• . Screw, Countersunk
07	278-18542-00-00	• . Point, Neutral
08	90501-06022-00	• . Spring, Compression
09	278-18566-00-00	• . Plate, Side 2
10	98707-06016-00	• . Screw, Flat Head
11	117-15644-00-00	• . Shim
12	93440-25064-00	• . Circlip
13	49A-15383-00-00	Plate, Bearing Cover
14	98707-06016-00	Screw, Flat Head
15	4BR-18511-00-00	Fork, Shift 1
16	4BR-18512-00-00	Fork, Shift 2
17	4BR-18513-00-00	Fork, Shift 3
18	4BR-18531-00-00	Bar, Shift Fork Guide 1
19	4BR-18536-00-00	Stopper, Shift Bar
20	98707-06016-00	Screw, Flat Head
21	4BR-18127-00-00	Stopper, Screw
22	4BR-18140-00-00	Stopper Lever Assy
23	90508-241A9-00	Spring, Torsion

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

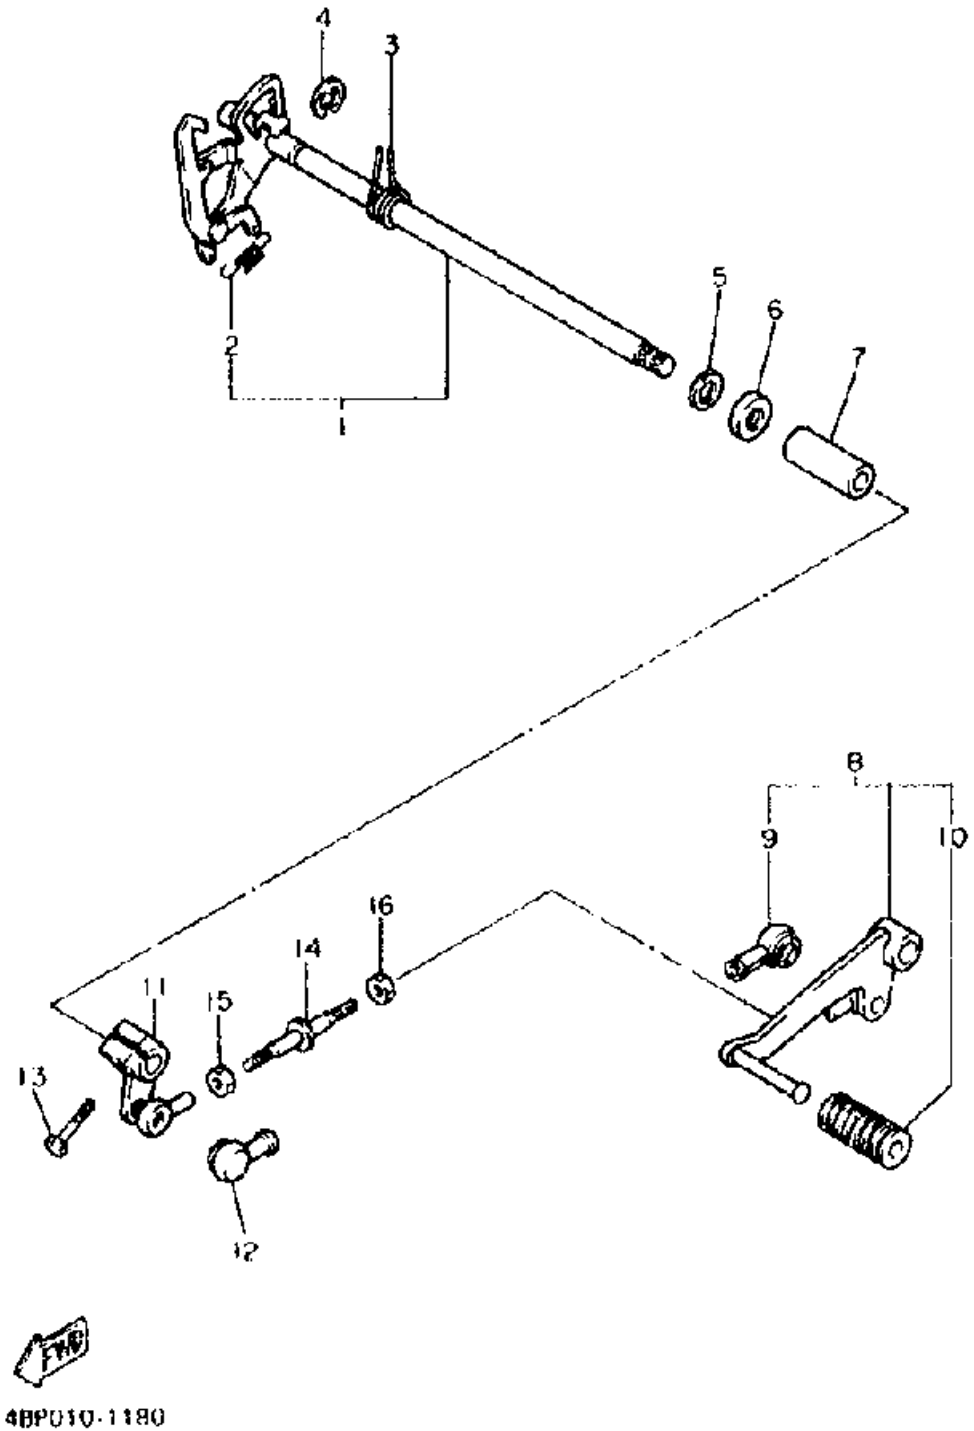


Ref No	Part No	Description
01	4BR-18120-00-00	Shift Lever Assy
02	90506-08227-00	• . Spring, Tension
03	90506-292A0-00	Spring, Tension
04	99006-10600-00	Circlip
05	90201-127J6-00	Washer, Plate
06	93102-12106-00	Oil Seal
07	90560-12211-00	Spacer
08	4BR-18110-00-00	Shift Pedal Assy
09	2H9-18154-00-00	• . Cover, Dust
10	132-18113-01-00	• . Cover, Shift Pedal
11	4BR-18112-00-00	Arm, Shift
12	2H9-18154-00-00	Cover, Dust
13	97027-06020-00	Bolt
14	26H-18115-00-00	Rod, Shift
15	95304-06700-00	Nut
16	90170-06228-00	Nut (verkehtheit Scraube)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

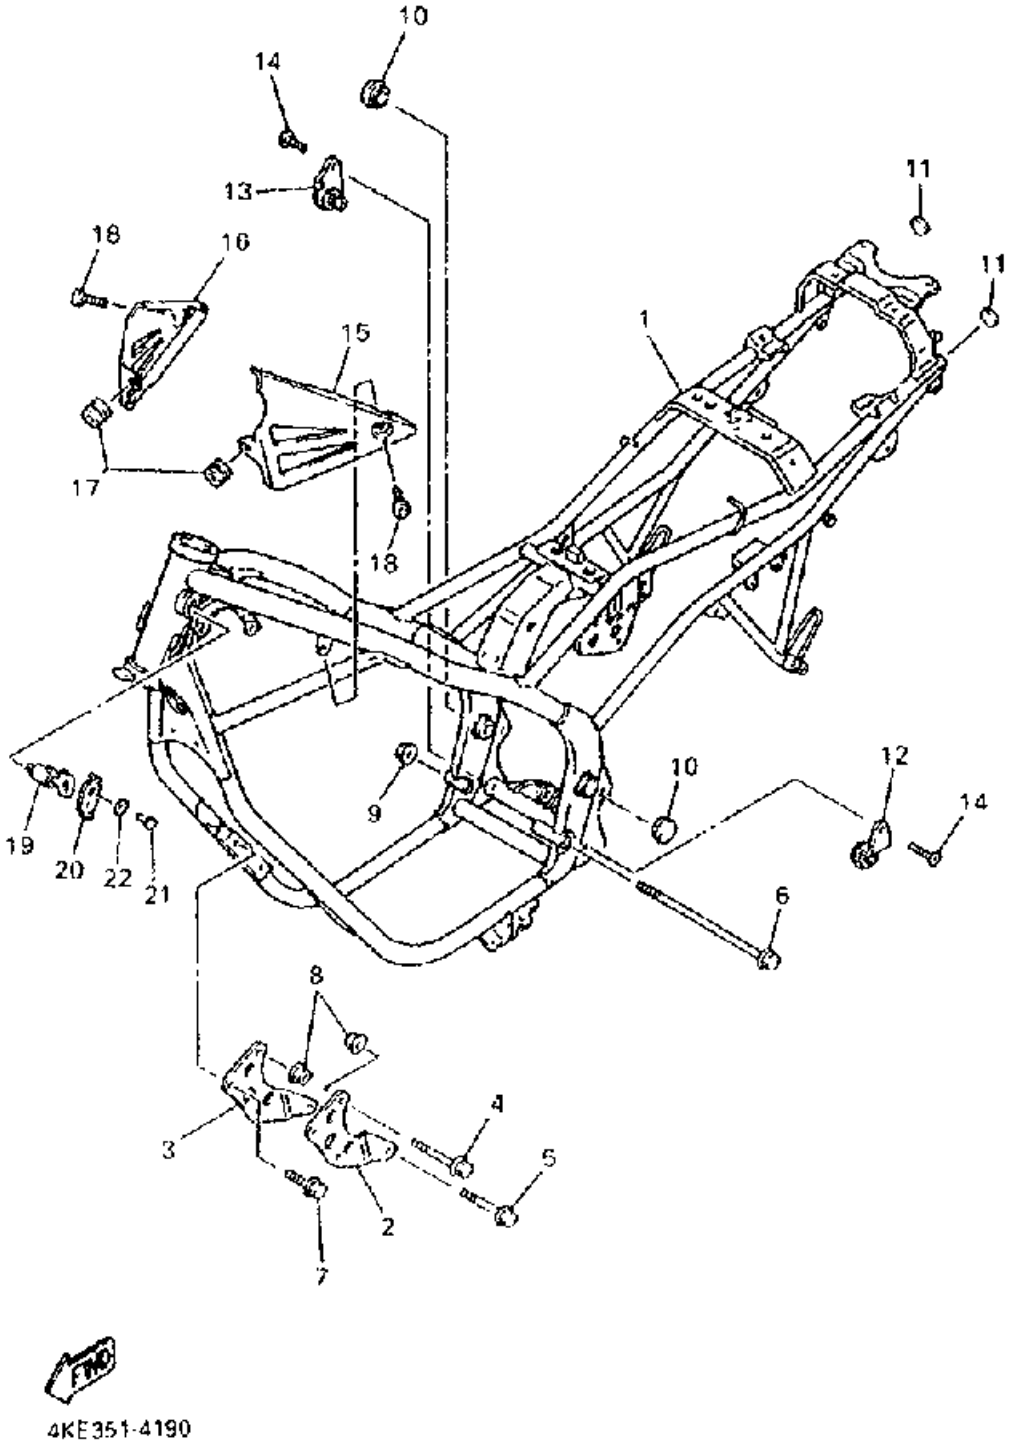


Ref No	Part No	Description
01	4KE-21110-00-P0	Frame Comp.
01	4KE-21110-00-33	Frame Comp.
02	4BP-21315-00-00	Stay, Engine 2
03	4BP-21316-00-00	Stay, Engine 3
04	90105-10253-00	Bolt, Washer Based
05	95817-10050-00	Bolt, Flange
06	90105-12523-00	Bolt, Washer Based
07	95827-10016-00	Bolt, Flange
08	90179-10247-00	Nut
09	90179-12421-00	Nut
10	3SX-2135F-00-00	Cover
11	3YJ-24481-00-00	Plug
12	4BP-21445-00-00	Stay, Muffler 1
13	4BP-21446-00-00	Stay, Muffler 2
14	90157-06117-00	Screw, Pan Head
15	4BP-2117F-00-00	Cover
16	4BP-2117M-00-00	Cover 2
17	90480-12320-00	Grommet
18	90149-06296-00	Screw
20	134-23484-10-00	Cap, Handle Lock
21	90269-04003-00	Rivet
22	90206-04029-00	Washer, Wave

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

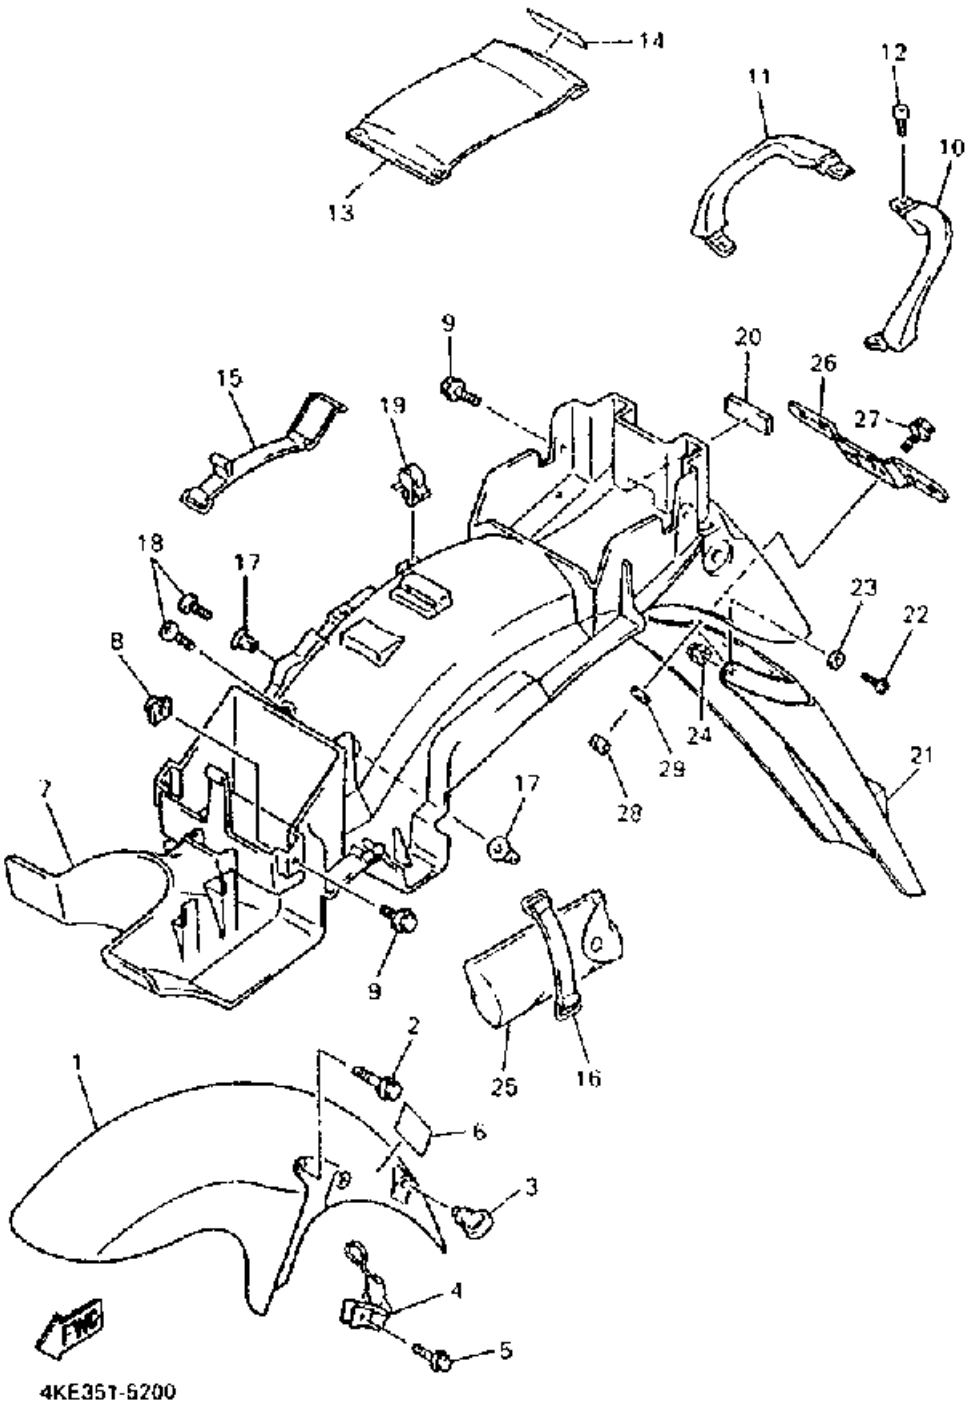


Ref No	Part No	Description
01	4BP-21510-00-P4	Front Fender Comp.
01	4BP-21510-00-4B	Front Fender Comp.
02	95027-06016-00	Bolt, Flange
03	1A8-21518-00-00	Holder, Cable
04	4BP-25875-01-00	Holder, Brake Hose 1
05	95027-06025-00	Bolt, Flange
06	1JK-21735-00-00	Seal 2
07	4BR-21611-00-00	Fender, Rear
08	31A-14477-00-00	Plate
09	90119-06043-00	Bolt, With Washer
10	4BP-21644-00-00	Stay, Rear
11	4BP-21645-00-00	Stay, Rear
12	90109-060E9-00	Bolt
13	4BP-21651-00-P4	Cover, Rear Fender
13	4BP-21651-00-4B	Cover, Rear Fender
14	3WF-2153E-70-00	Emblem, Yamaha
14	3WF-2153E-60-00	Emblem, Yamaha
15	4BP-82131-00-00	Band, Battery
16	120-82131-00-00	Band, Battery
17	90338-06226-00	Plug
18	97707-60016-00	Screw, Tapping
19	90464-15157-00	Clamp
20	8U9-77162-00-00	Strip, Weather 2
21	4BR-21621-00-00	Flap
22	90149-04276-00	Screw
23	90201-04325-00	Washer, Plate
24	95607-04100-00	Nut, U
25	1HX-28100-01-00	Tool Kit

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

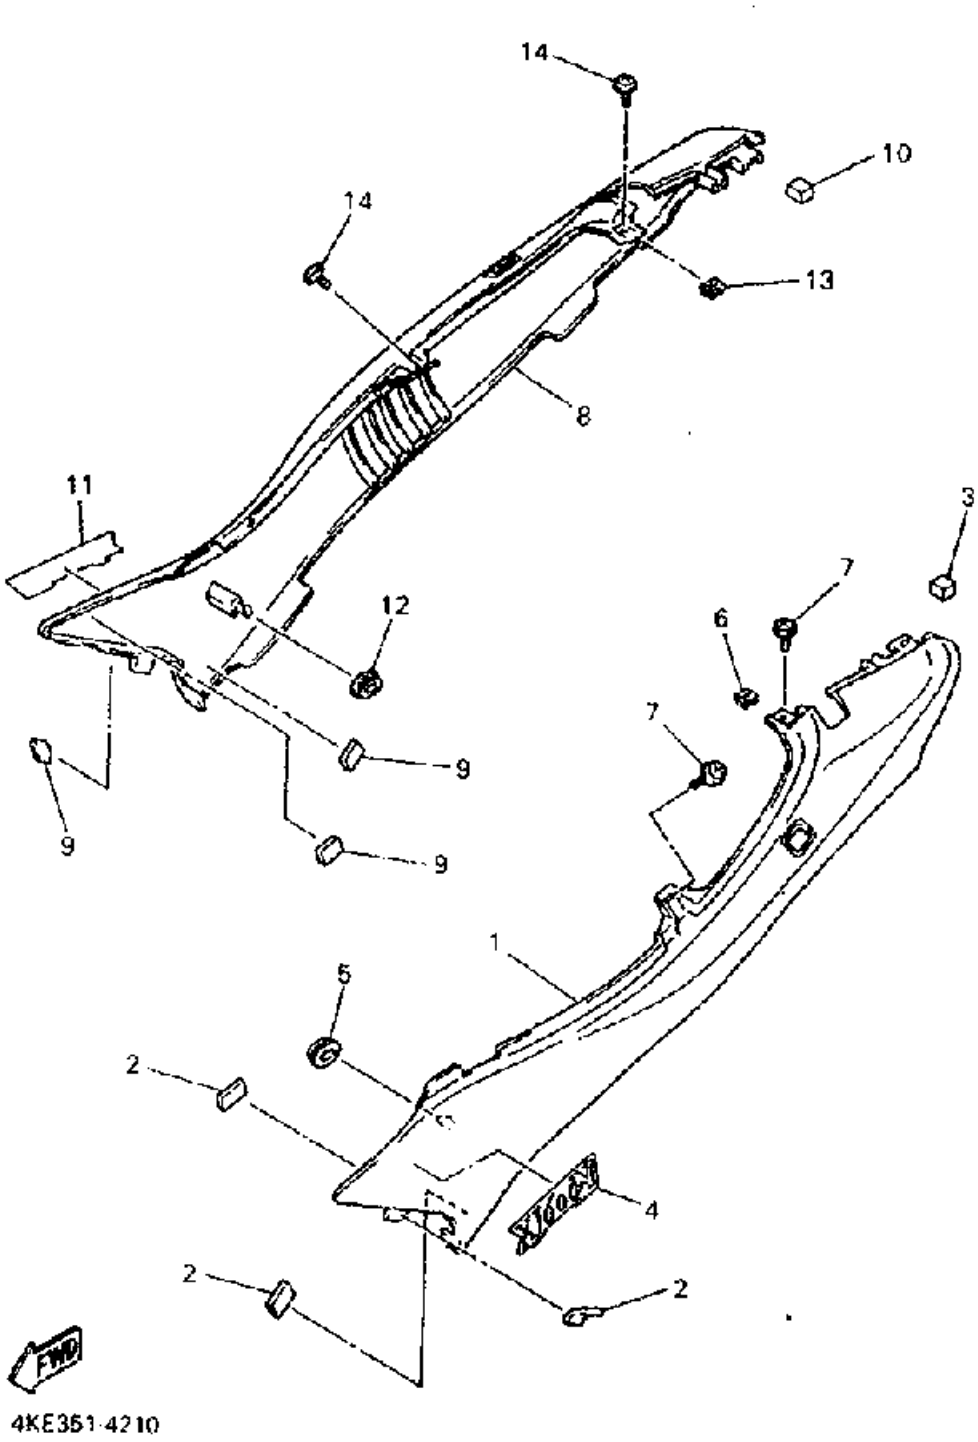


Ref No	Part No	Description
01	4BP-21711-01-P4	Cover, Side 1
01	4NP-21711-01-4B	Cover, Side 1
02	18A-21778-00-00	Damper, Locating 1
03	34M-2139X-00-00	Damper
04	4KE-21781-10-00	Emblem 1
04	4KE-21781-20-00	Emblem 1
05	90480-+0140-10	Grommet
06	90183-06024-00	Nut, Spring
07	90159-05163-00	Screw, With Washer
08	4BP-21721-01-P4	Cover, Side 2
08	4BP-21721-01-4B	Cover, Side 2
09	18A-21778-00-00	Damper, Locating 1
10	34M-2139X-00-00	Damper
11	4KE-21781-10-00	Emblem 1
11	4KE-21781-20-00	Emblem 1
12	90480-01401-00	Grommet
13	90183-05024-00	Nut, Spring
14	90159-05163-00	Screw, With Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

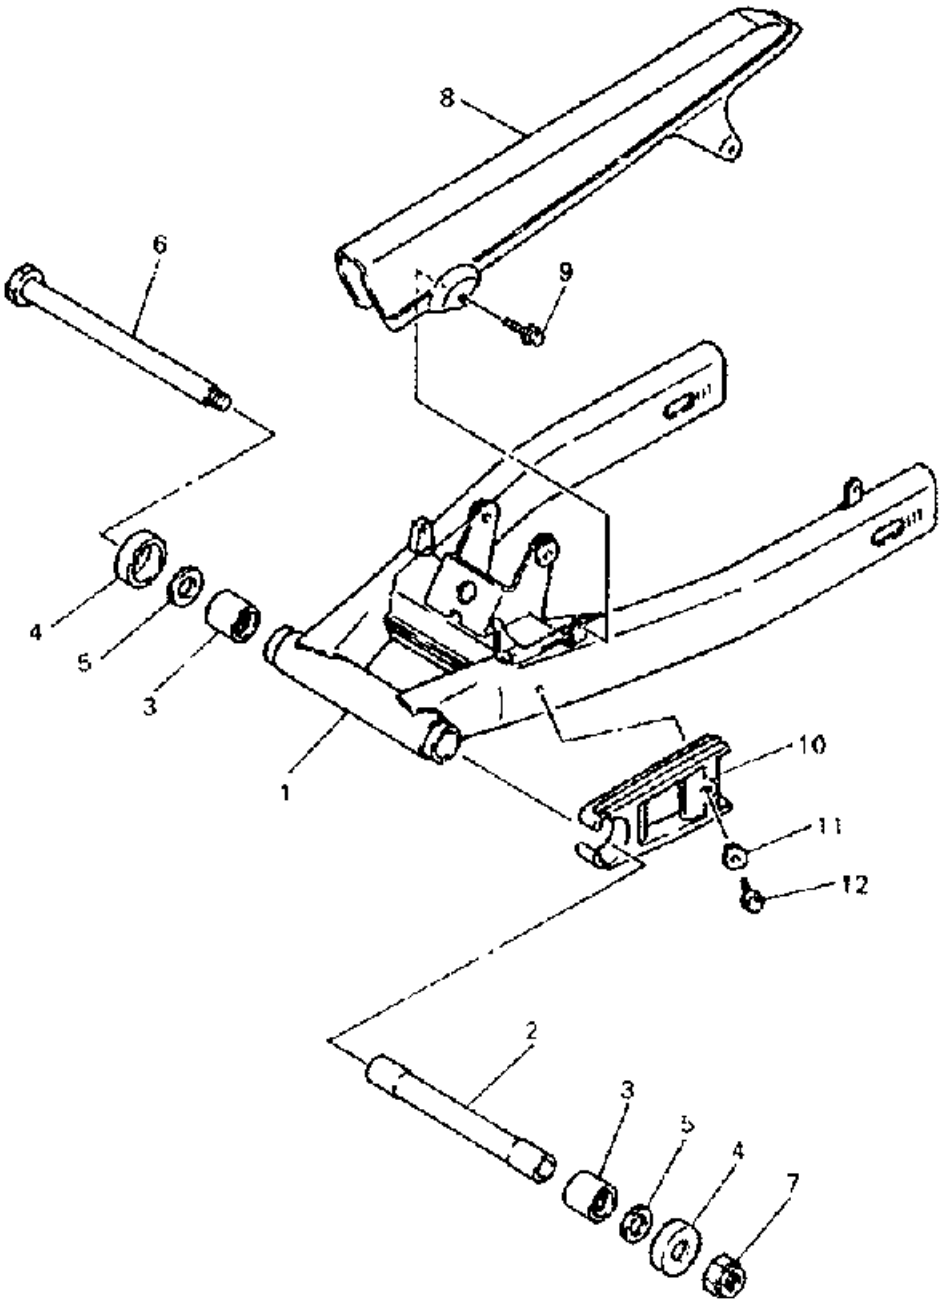


Ref No	Part No	Description
01	4BR-22110-01-WL	Rear Arm Comp.
02	33M-22184-00-00	Bush
03	93320-32503-00	Bearing
04	4X7-22129-00-00	Cover, Thrust 2
05	90201-161J3-00	Washer, Plate
06	3LN-22141-60-00	Shaft, Pivot
07	90185-14070-00	Nut, Self-locking
08	1KT-22311-00-00	Case, Chain
09	90119-06044-00	Bolt, With Washer
10	3YX-22151-00-00	Seal, Guard
11	3YX-22151-00-00	Seal, Guard
12	95807-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

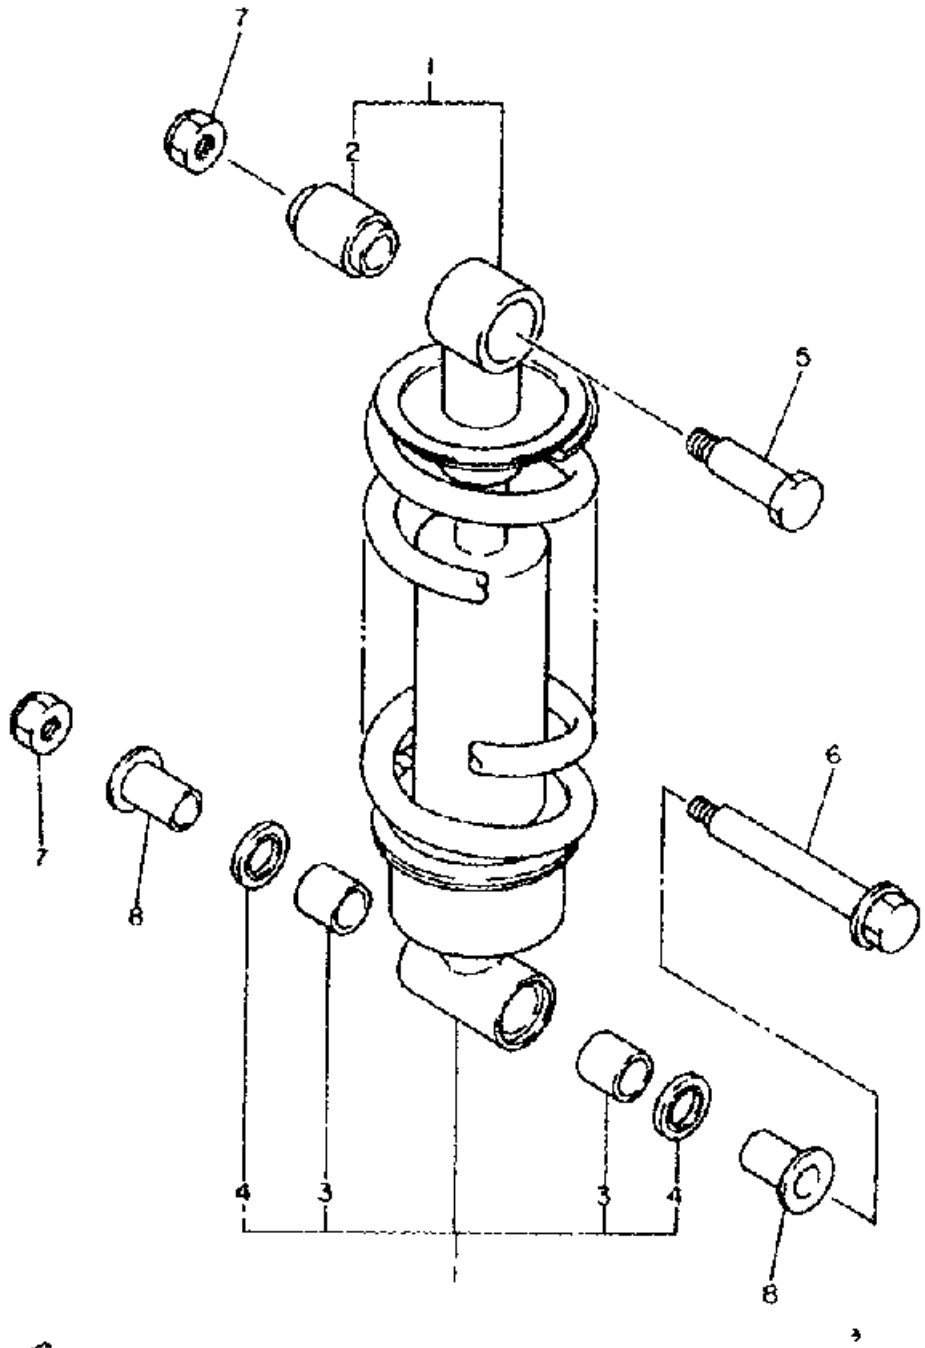


Ref No	Part No	Description
01	4BR-22210-01-00	Shock Absorber Assy, Rear
02	34L-22216-00-00	• . Bush, Rear Shock Absorber
03	93109-18020-00	• . Oil Seal
04	90384-18157-00	• . Bush, Bimetal Formed
05	90101-18157-00	Bolt
06	90105-12612-00	Bolt, Washer Based
07	95607-12200-00	Nut, Self-locking
08	90387-123X6-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

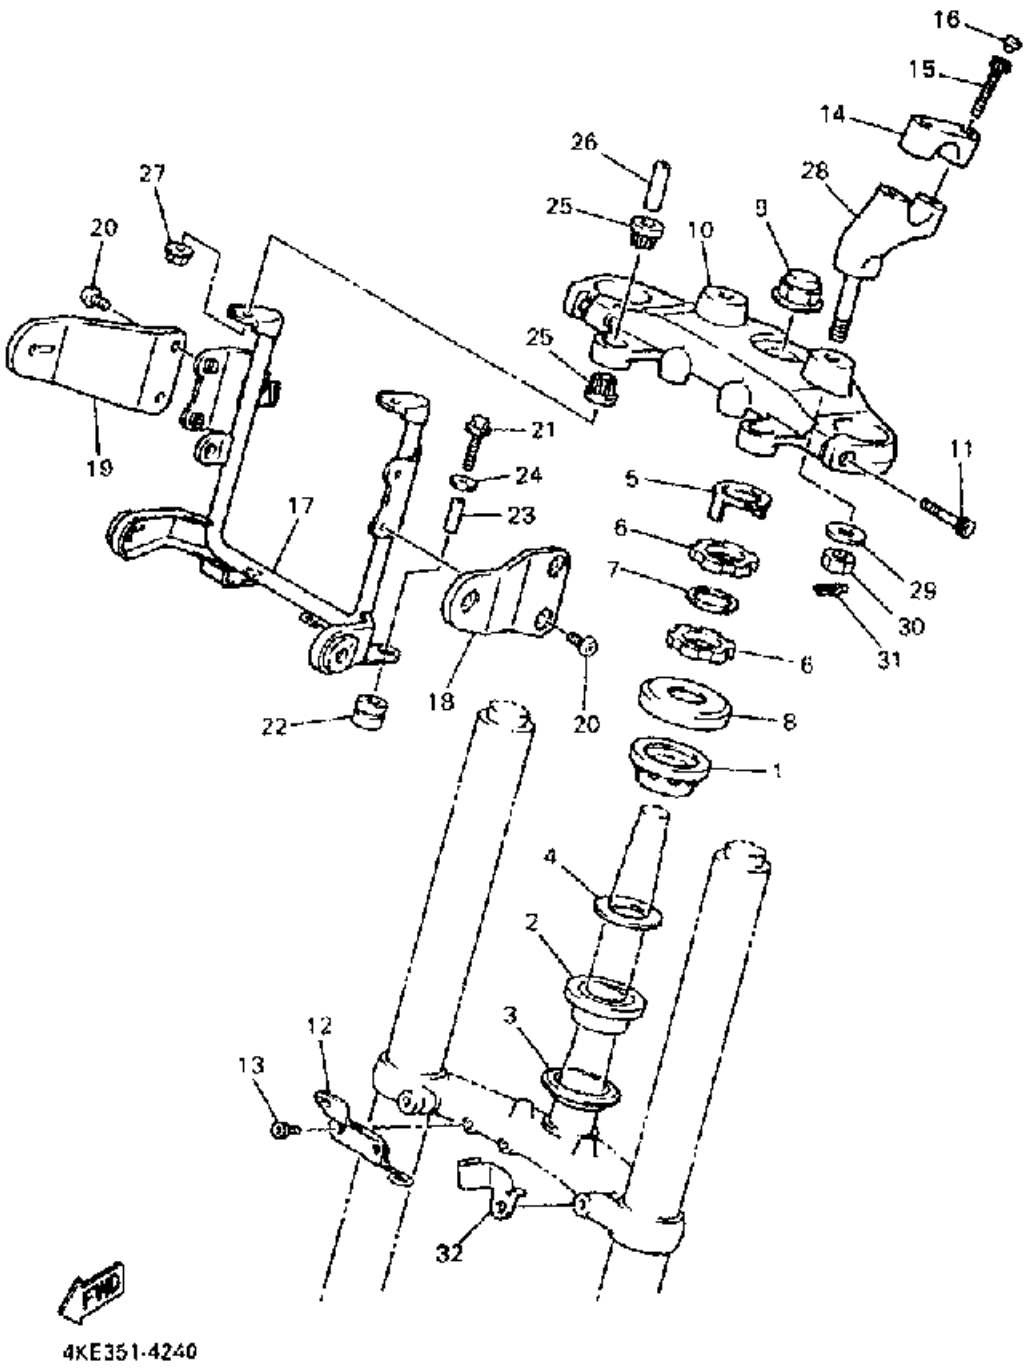


Ref No	Part No	Description
01	93399-99931-00	Bearing
02	93399-99932-00	Bearing
03	3FV-23462-00-00	Seal, Steering
04	90202-24190-00	Washer, Plate
05	26H-23418-01-00	Washer, Special
06	90179-25033-00	Nut
07	90202-26142-00	Washer, Plate
08	3HE-23416-00-00	Cover, Ball Race 2
09	90176-22050-00	Nut, Crown
10	4BP-23435-11-00	Crown, Handle
11	91317-08030-00	Bolt
12	4BP-21343-10-00	Bracket, Horn
13	91317-06016-00	Bolt
14	4H7-23441-00-P0	Holder, Handle Upper
15	91317-08030-00	Bolt
16	341-23469-00-00	Cap, Bolt
17	4KE-23174-00-00	Stay, Headlight
18	1JK-23121-01-00	Cover, Upper 1
19	1JK-23131-01-00	Cover, Upper 2
20	90149-06298-00	Screw
21	95807-06030-00	Bolt, Flange
22	90480-14105-00	Grommet
23	90387-06554-00	Collar
24	90201-06059-00	Washer, Plate
25	1JK-83541-00-00	Damper
26	90387-06676-00	Collar
27	95707-06500-00	Nut, Flange
28	3Y6-23442-00-P0	Holder, Handle Lower
29	92907-10600-00	Washer, Plate
30	95307-10600-00	Nut
31	90468-12006-00	Clip
32	4BP-25886-10-00	Holder, Brake Hose

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

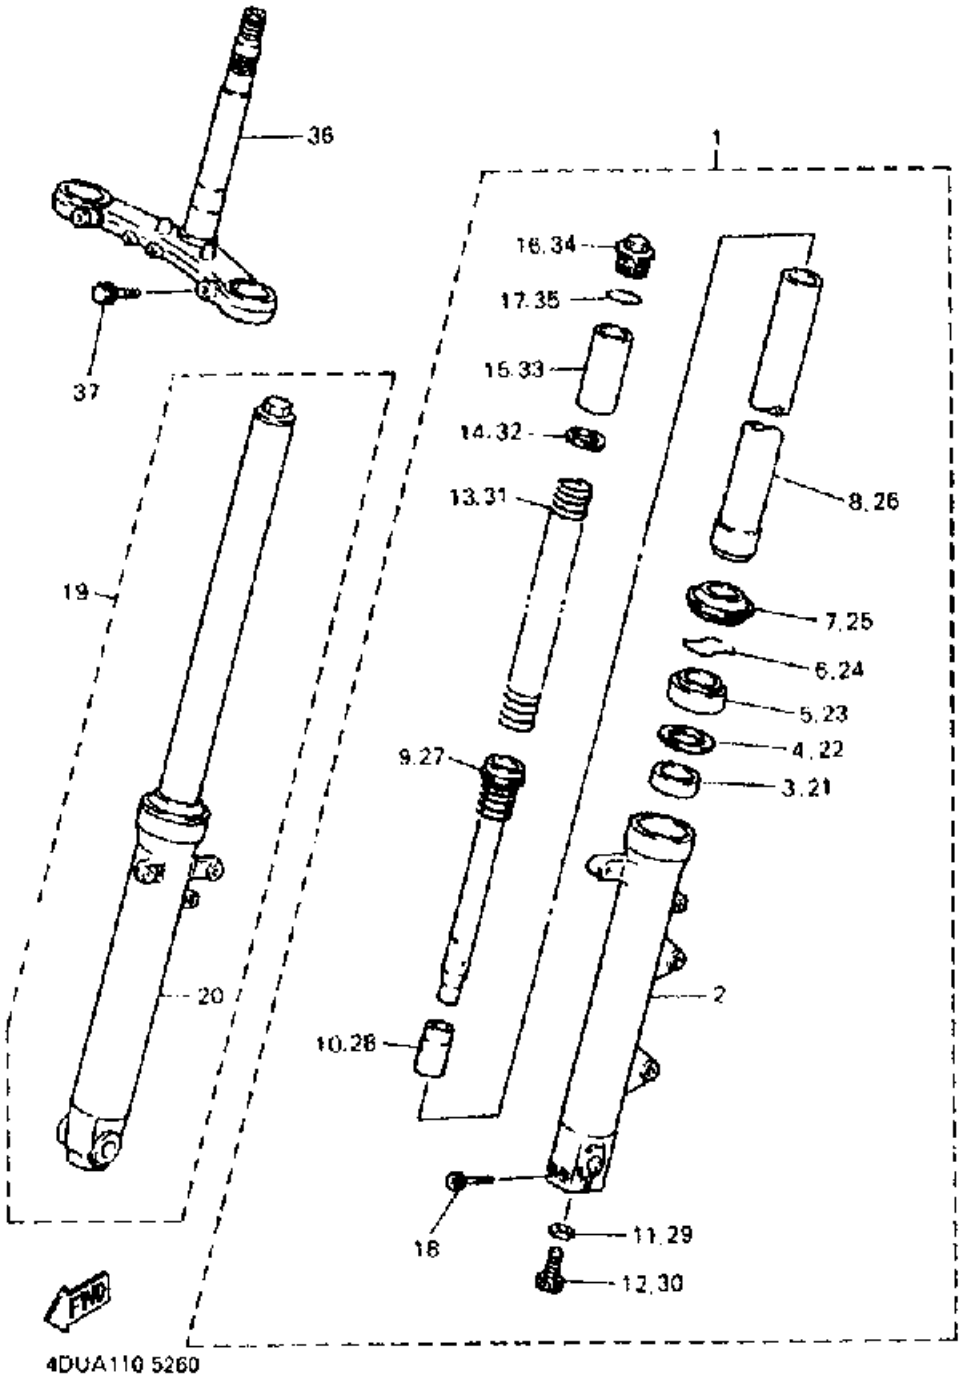


Ref No	Part No	Description
01	4BR-23102-00-00	Front Fork Assy (l.h)
02	4BP-23126-00-00	Tube, Outer (left)
03	3YX-23125-00-00	• . Metal, Slide 1
04	4V2-23146-L0-00	• . Washer, Oil Seal
05	3EN-23145-00-00	• . Oil Seal
06	3R4-23153-00-00	• . Ring, Snap
07	3EN-23144-00-00	• . Seal, Dust
08	3YX-23110-00-00	• . Inner Tube Comp.1
09	4BR-23170-00-00	• . Cylinder Comp., Front Fork
10	2YK-23173-00-00	• . Spindle, Taper
11	509-23158-L0-00	• . Gasket
12	278-23181-50-00	• . Bolt, Hexagon Socket Head
13	4BP-23141-00-00	• . Spring, Front Fork
14	4DN-23149-40-00	• . Washer, Spring Upper
15	26H-23118-00-00	• . Spacer
16	3EN-23111-00-00	• . Bolt, Cap
17	1W4-23114-L0-00	• . Gasket
18	91311-08035-00	• . Bolt
19	4BR-23103-00-00	Front Fork Assy (r.h)
20	4BP-23136-00-00	• . Tube, Outer (right)
21	3YX-23125-00-00	• . Metal, Slide 1
22	4V2-23146-L0-00	• . Washer, Oil Seal
23	3EN-23145-00-00	• . Oil Seal
24	3R4-23153-00-00	• . Ring, Snap
25	3EN-23144-00-00	• . Seal, Dust
26	3YX-23110-00-00	• . Inner Tube Comp.1
27	4BR-23170-00-00	• . Cylinder Comp., Front Fork
28	2YK-23173-00-00	• . Spindle, Taper
29	509-23158-L0-00	• . Gasket
30	278-23181-50-00	• . Bolt, Hexagon Socket Head
31	4BP-23141-00-00	• . Spring, Front Fork
32	4DN-23149-40-00	• . Washer, Spring Upper
33	26H-23118-00-00	• . Spacer
34	3EN-23111-00-00	• . Bolt, Cap
35	1W4-23114-L0-00	• . Gasket
36	4KE-23340-00-00	Under Bracket Comp.
37	2NX-23356-00-00	Bolt 2

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

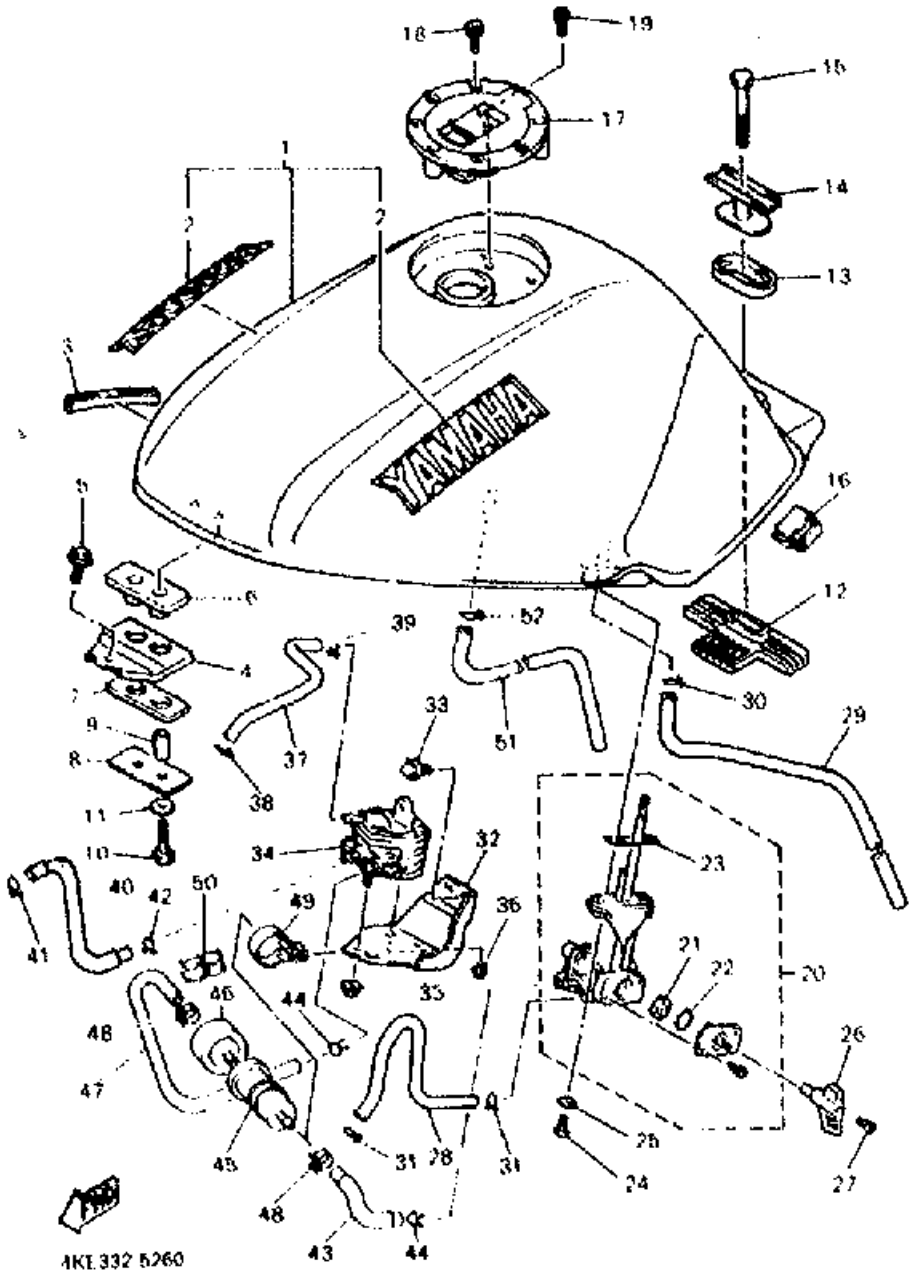


Ref No	Part No	Description
01	4BP-24110-10-09	Fuel Tank Comp.
01	4BP-24110-10-06	Fuel Tank Comp.
02	99226-00140-00	• . Emblem, Yamaha
02	99227-00140-00	• . Emblem, Yamaha
03	4BP-24188-00-00	Mold, Fuel Tank
04	4BP-24191-00-00	Bracket, Fuel Tank 1
05	90119-06213-00	Bolt, With Washer
06	2GH-24181-00-00	Damper, Locating 1
07	2GH-24183-00-00	Damper, Locating 3
08	2GH-24186-00-00	Washer, Special
09	90387-06299-00	Collar
10	97007-06100-00	Bolt
11	92907-06100-00	Washer, Spring
12	4BP-24182-00-00	Damper, Locating 2
13	3Y6-24183-00-00	Damper, Locating 3
14	4BP-24186-00-00	Washer, Special
15	97007-08055-00	Bolt
16	4JH-24183-00-00	Damper, Locating 3
17	4NH-24602-00-00	Cap Assy
18	90110-05100-00	Bolt, Hexagon Socket Head
19	91317-05010-00	Bolt
20	4BP-24500-00-00	Fuel Cock Assy 1
21	3AJ-24523-00-00	• . Valve
22	3AJ-24534-00-00	• . Seal, Cock
23	4X8-24512-00-00	• . Gasket
24	90149-06008-00	Screw
25	90202-05187-00	Washer, Plate
26	3HE-24524-00-00	Lever, Cock
27	98707-04018-00	Screw, Flat Head
28	90445-09683-00	Hose
29	90445-103E6-00	Hose
30	90467-09006-00	Clip
31	90467-08021-00	Clip
32	4BP-24216-00-00	Stay
33	95027-06014-00	Bolt, Flange
34	4BR-13910-00-00	Fuel Pump Assy
35	95707-05500-00	Nut, Flange
36	95607-05200-00	Nut, Self-locking
37	90445-10752-00	Hose
38	90467-08017-00	Clip
39	90467-09006-00	Clip
40	4BR-14294-00-00	Hose
41	90467-11106-00	Clip
42	90467-10008-00	Clip
43	4BR-24311-00-00	Pipe, Fuel 1
44	90467-10008-00	Clip
45	1FK-24560-00-00	Filter Assy
46	9Y121-99800-00	
47	1HX-24312-00-00	Pipe 2
48	90467-1104A-00	Clip
49	4BR-24366-00-00	Clamp, Fuel Pipe 1
50	90464-17176-00	Clamp
51	90445-103E6-00	Hose
52	90467-09006-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

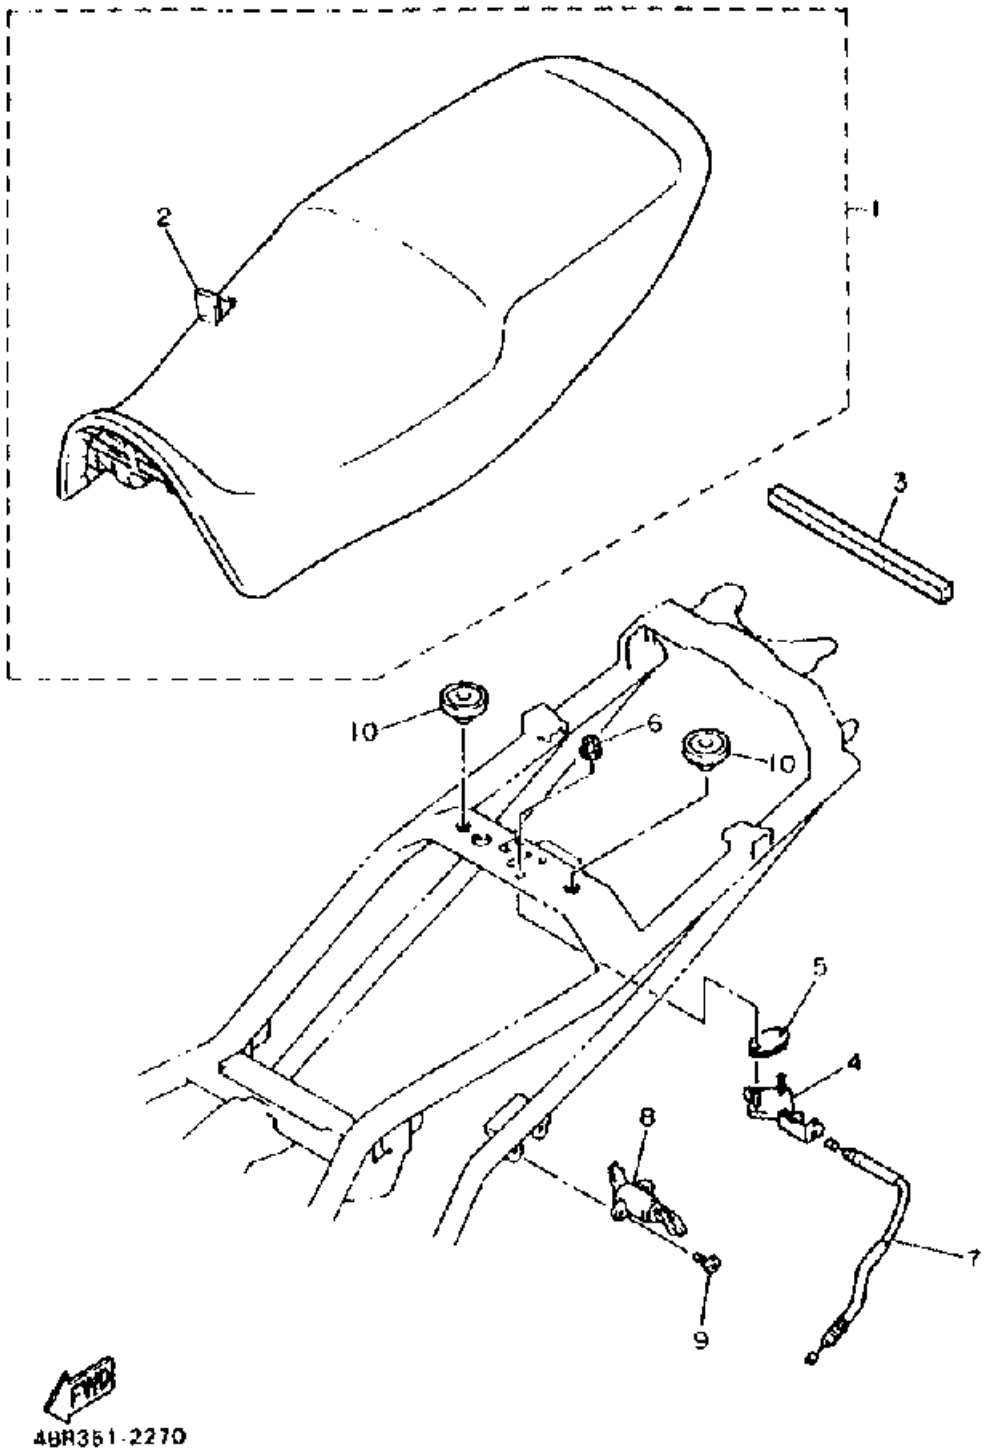


Ref No	Part No	Description
01	4BR-24730-00-00	Double Seat Assy
01	4BR-24730-10-00	Double Seat Assy
02	4BP-24731-00-00	• . Cover, Seat
02	4BR-24731-10-00	• . Cover, Seat
03	4BP-24737-00-00	Damper, Seat
04	4BP-24780-00-00	Seat Lock Assy
05	4BP-24792-00-00	Plate
06	95707-06500-00	Nut, Flange
07	4BP-2478E-00-00	Cable, Seat Lock
08	8CK-E2470-00-00	Strainer Assy
09	90149-06228-00	Screw
10	22W-24741-00-00	Pad, Seat

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

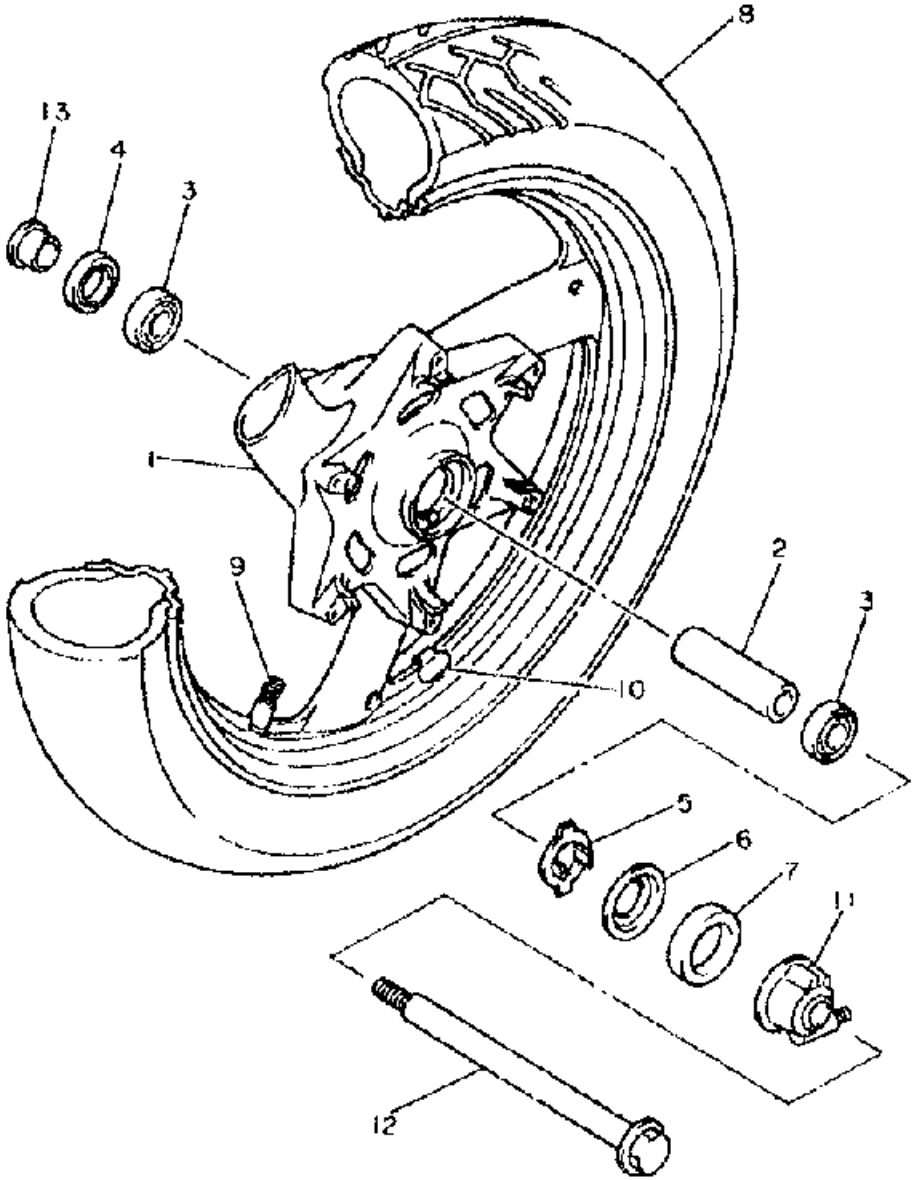


Ref No	Part No	Description
01	4BP-25168-00-WN	Cast Wheel, Front
02	90560-17241-00	Spacer
03	93306-20310-00	Bearing (b6203du)
04	93102-25017-00	Oil Seal
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93105-45017-00	Oil Seal
08	94111-172Y9-00	Tire (110/80-17 57h K275f)
08	94111-173Y1-00	Tire (110/80-17 57h F209)
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	3GM-25190-00-00	Gear Unit Assy
12	3GM-25181-00-00	Axle, Wheel
13	90387-177V4-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

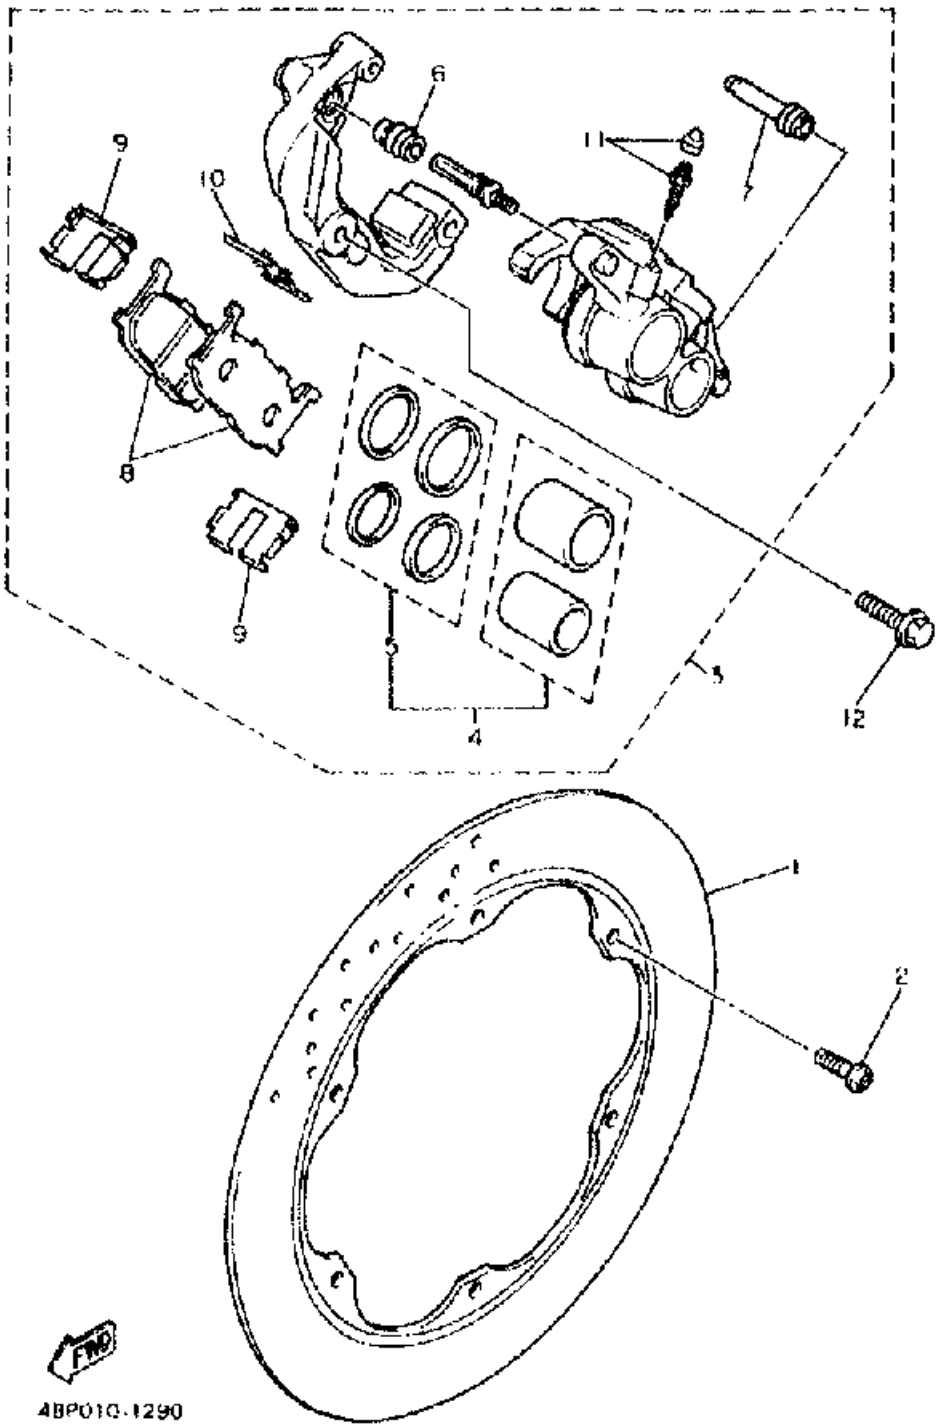


Ref No	Part No	Description
01	4BP-2582T-00-00	Disc, Brake
02	90109-08718-00	Bolt
03	4BP-2580T-00-00	Caliper Assy (left)
04	3YX-W0057-50-00	• . Piston Assy, Caliper
05	3YX-W0047-50-00	•• .. Caliper Seal Kit
06	5R2-25937-00-00	• . Boot 2
07	3YX-25937-00-00	• . Boot 2
08	4BP-W0045-00-00	• . Brake Pad Kit
09	4BP-25919-00-00	• . Support, Pad
10	3YX-25929-00-00	• . Spring, Anti Rattle
11	51L-W0048-00-00	• . Bleed Screw Kit
12	90105-10638-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

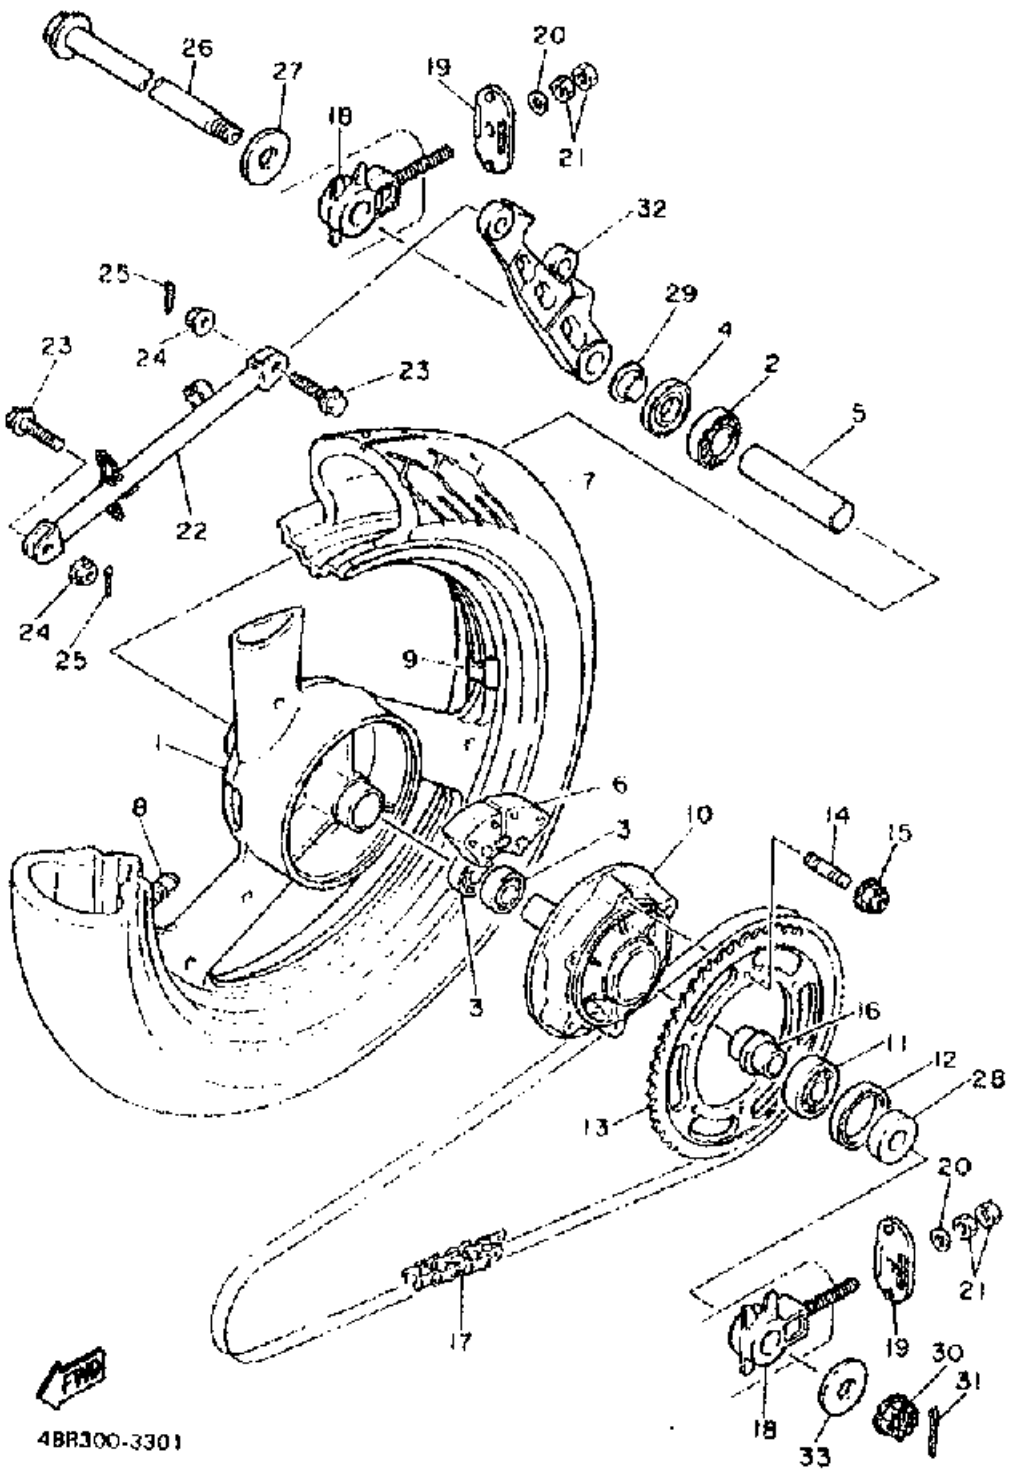


Ref No	Part No	Description
01	3HE-25338-00-WN	Cast Wheel, Rear
02	93306-30309-00	Bearing
03	93306-20314-00	Bearing
04	93102-25044-00	Oil Seal
05	90387-174V8-00	Collar
06	4BP-25364-00-00	Damper
07	94113-183Y0-00	Tire (130/70-18 63h K275)
07	94113-183Y2-00	Tire (130/70-18 63h R209)
08	93900-00030-00	Valve, Rim
09	29L-25398-00-00	Balancer, Wheel (10g)
09	29L-25398-10-00	Balancer, Wheel (20g)
09	29L-25398-20-00	Balancer, Wheel (30g)
10	4BP-25366-00-00	Clutch, Hub
11	93306-37207-00	Bearing
12	93105-42024-00	Oil Seal
13	4BP-25448-20-00	Sprocket, Driven (48z)
14	90116-10485-00	Bolt, Stud
15	95607-10200-00	Nut, Self-locking
16	90387-177K0-00	Collar
17	94581-30110-00	Chain (d.i.d.520vl2.110le)
18	4BP-25388-00-00	Puller, Chain 1
19	3YX-22174-00-00	End 1
20	92907-08600-00	Washer, Plate
21	95307-08600-00	Nut
22	4BR-25371-00-00	Bar, Tension
23	90105-08321-00	Bolt, Washer Based
24	95707-08500-00	Nut, Flange
25	91490-20020-00	Pin, Cotter
26	3HE-25381-00-00	Axle, Wheel
27	90201-177K7-00	Washer, Plate
28	90387-177Y7-00	Collar
29	90387-173L5-00	Collar
30	90171-16024-00	Nut, Castle
31	91401-30030-00	Pin, Cotter
32	3HE-25819-01-00	Bracket, Caliper
33	90201-165L8-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

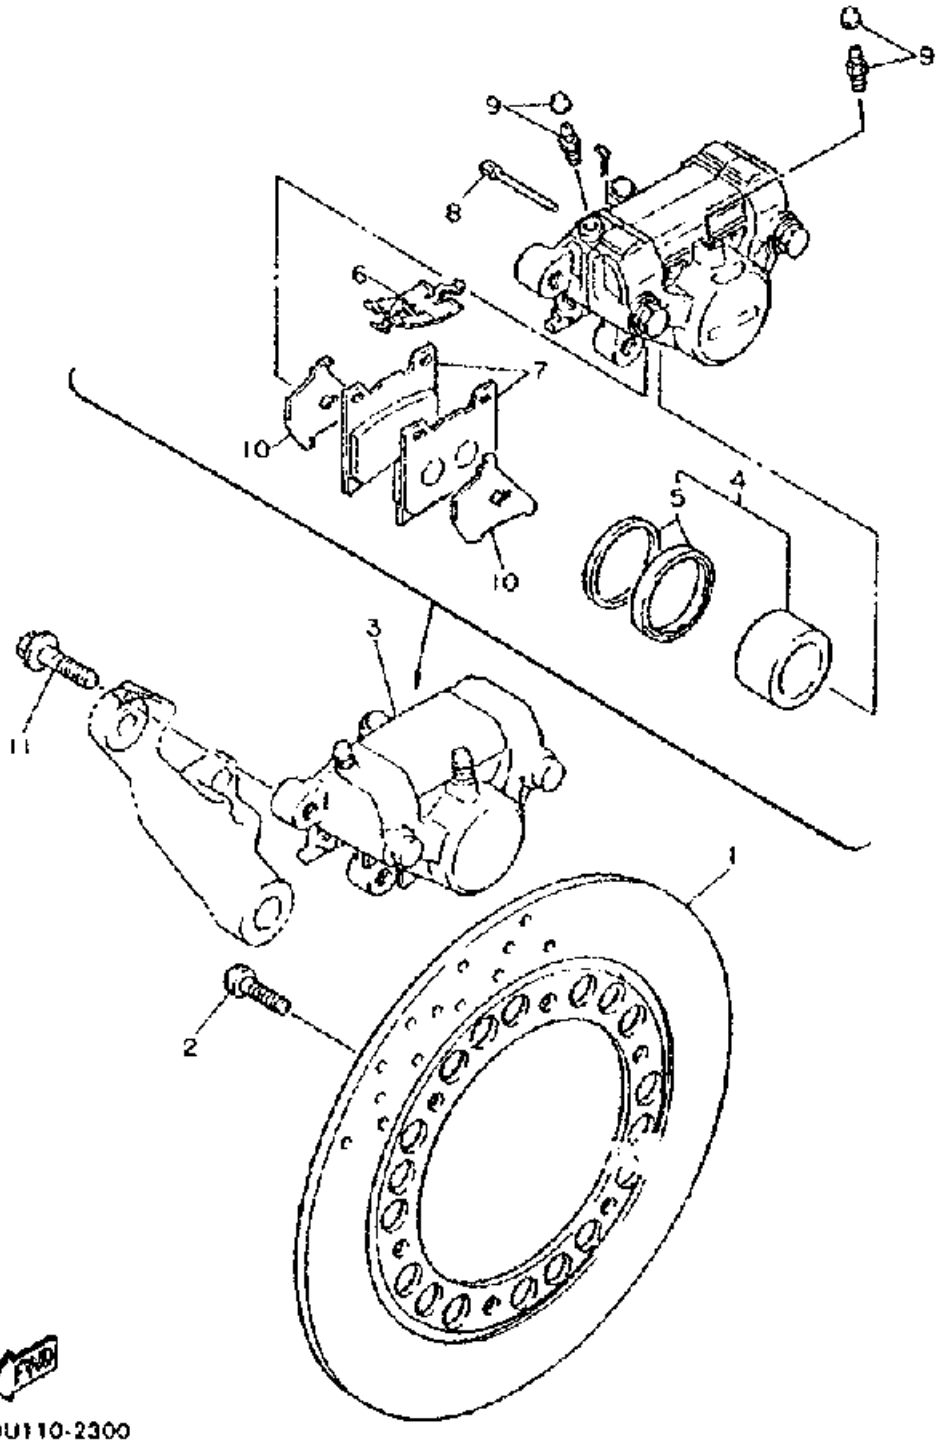


Ref No	Part No	Description
01	4DU-2582W-00-00	Disc, Rear Brake 2
02	90109-08716-00	Bolt
03	4BP-2580W-00-00	Caliper Assy, Rear 2
04	51L-W0057-00-00	• . Piston Assy, Caliper
05	51L-W0047-11-00	•• .. Caliper Seal Kit
06	3LN-25919-00-00	• . Support, Pad
07	51L-W0045-02-00	• . Brake Pad Kit
08	4FL-25924-00-00	• . Pin, Pad
09	51L-W0048-00-00	• . Bleed Screw Kit
10	4BP-25827-00-00	• . Shim, Caliper
11	90105-10636-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

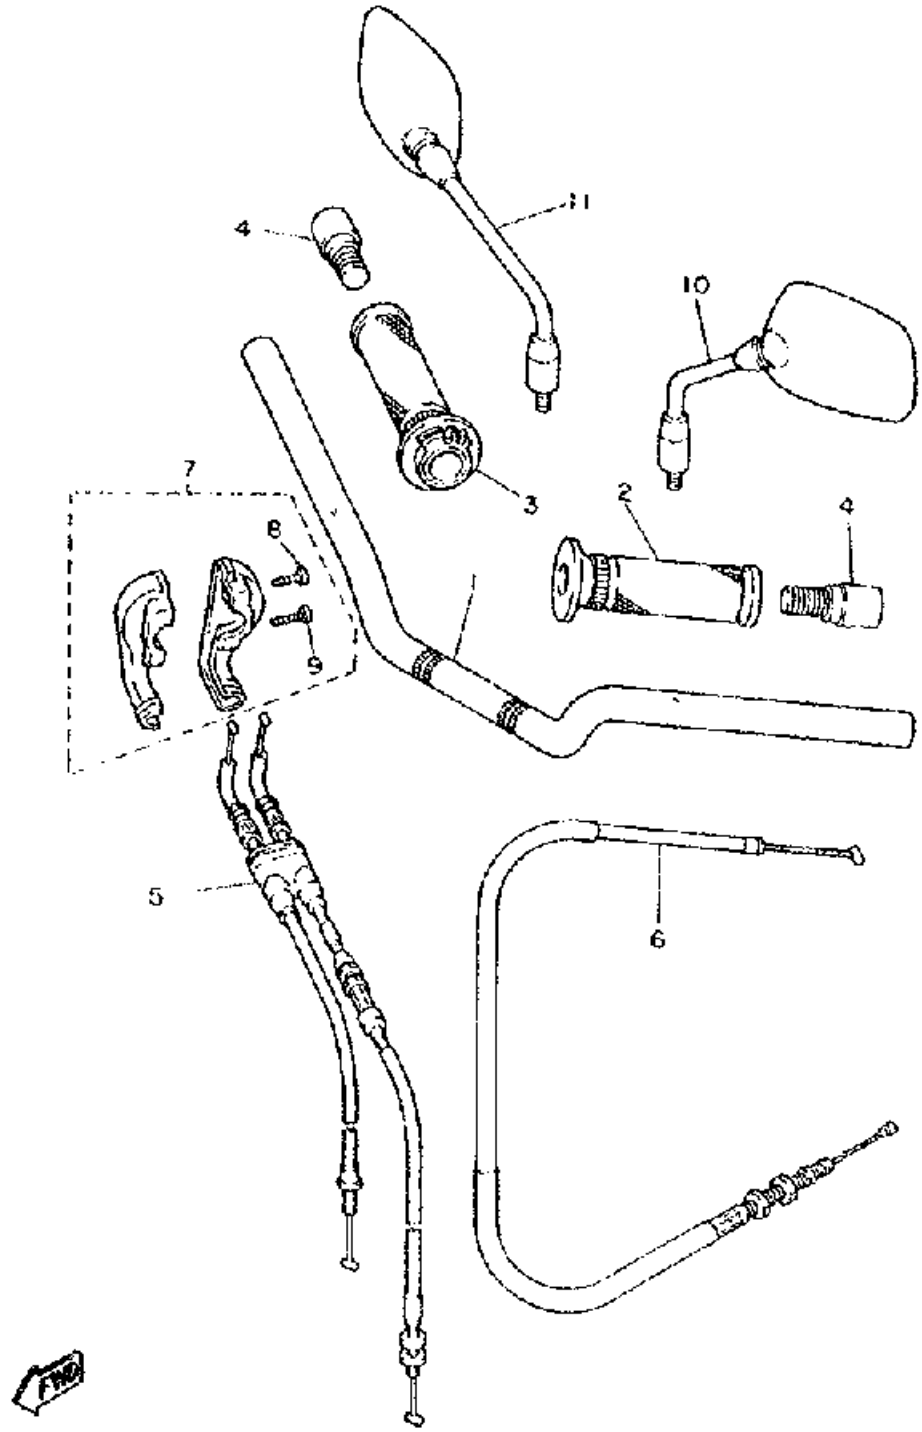


Ref No	Part No	Description
01	4BP-26111-00-00	Handlebar
02	31A-26241-00-00	Grip (left)
03	36Y-26240-00-00	Grip Assy
04	51J-25246-00-00	
05	4KE-26302-00-00	Throttle Cable Assy
06	4KE-25335-00-00	Cap
07	4BP-26270-00-00	Cable Connector Cap Assy
08	98507-05020-00	• . Screw, Pan Head
09	98507-05025-00	• . Screw, Pan Head
10	4BR-26280-00-00	Rear View Mirror Assy(left)
11	4BR-26290-00-00	Rear View Mirror Assy(right)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

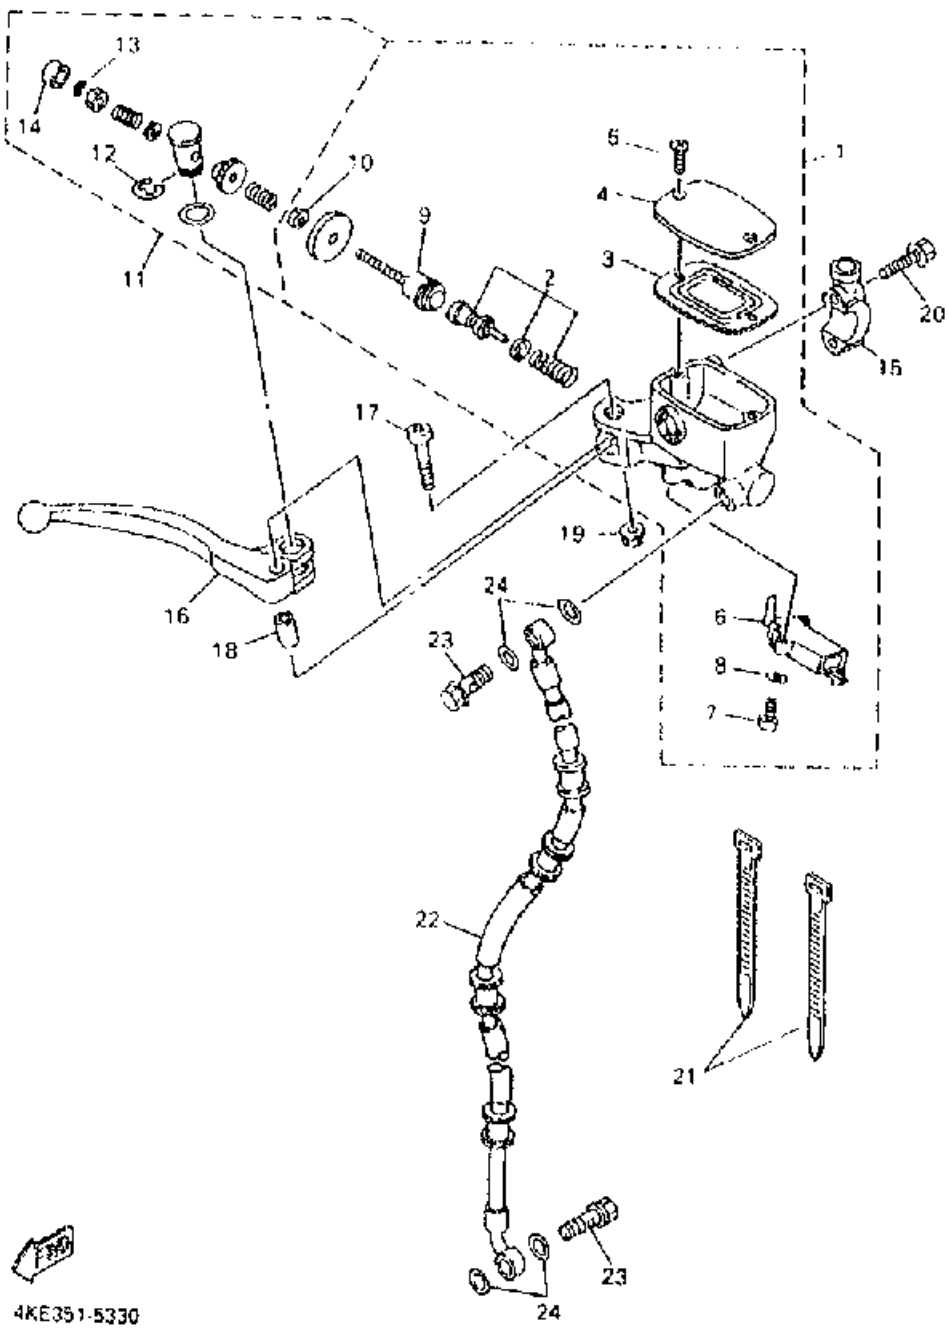


Ref No	Part No	Description
01	4BR-W2587-00-00	Master Cylinder Sub Assy
02	1YX-W0041-50-00	• . Cylinder Kit, Master
03	3YX-25854-00-00	• . Diaphragm, Reservoir
04	3YX-25852-00-00	• . Cap, Reservoir
05	98706-04012-00	• . Screw, Flat Head
06	4BH-83980-00-00	• . Front Stop Switch Assy
07	98506-04012-00	• . Screw, Pan Head
08	92906-04600-00	• . Washer, Plate
09	3YX-25880-00-00	• . Push Rod Comp.
10	95380-06600-00	• . Nut, Hexagon
11	3YX-W0091-02-00	Screw Kit, Master Cylinder
12	3YX-25886-00-00	Holder, Brake Hose
13	3YX-25886-10-00	Holder, Brake Hose
14	3YX-2583H-00-00	Boot
15	3YX-25867-00-00	Bracket, Master Cylinder
16	3YX-83922-00-00	Lever 2
17	3YX-2589F-00-00	Bolt, Lever
18	3YX-25836-00-00	Cover, Dust
19	95617-06010-00	Bolt, Stud
20	95026-06030-00	Bolt, Flange
21	437-83936-01-00	Band, Switch Cord
22	4KE-25872-00-00	Hose, Brake 1
23	90401-10096-00	Bolt, Union
24	90201-10118-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

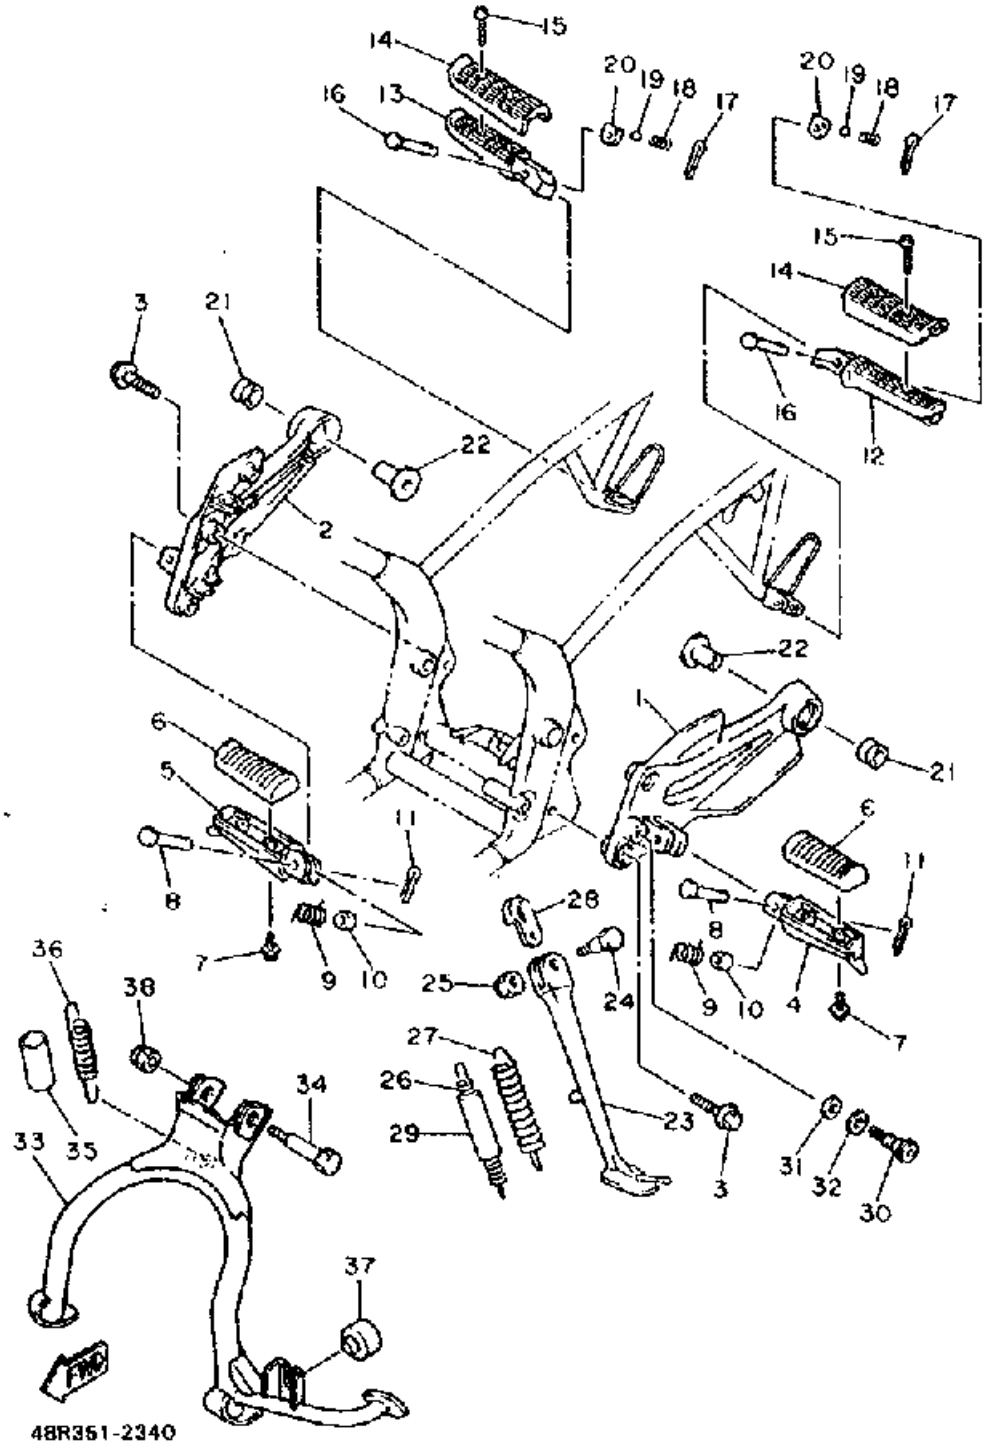


Ref No	Part No	Description
01	4BR-27442-01-00	Bracket 2
02	4BR-27443-01-00	Bracket 3
03	90109-082A1-00	Bolt
04	4BP-27451-00-00	Footrest
05	4BP-27461-00-00	Footrest
06	4BP-27413-00-00	Cover, Footrest
07	90159-05122-00	Screw, With Washer
08	91701-08042-00	Pin, Clevis
09	90508-20572-00	Spring, Torsion
10	90387-084N8-00	Collar
11	91401-25020-00	Pin, Cotter
12	4BR-27431-00-00	Footrest, Rear 1
13	4BR-27441-00-00	Footrest, Rear 2
14	2GH-27413-00-00	Cover, Footrest
15	90157-05079-00	Screw, Pan Head
16	91701-06038-00	Pin, Clevis
17	91401-25020-00	Pin, Cotter
18	90501-12743-00	Spring, Compression
19	93501-04011-00	Ball
20	4BP-27437-00-00	Washer, Special
21	2H7-27414-00-00	Damper, Footrest
22	90387-10636-00	Collar
23	4BP-27311-00-00	Stand, Side
24	90109-106F9-00	Bolt
25	90185-10037-00	Nut, Self-locking
26	90506-18224-00	Spring, Tension
27	90506-26225-00	Spring, Tension
28	2KT-27315-00-00	Link, Side Stand
29	1TX-27351-00-00	Guide, Side Stand
30	4BP-27434-01-00	Bolt
31	90201-08326-00	Washer, Plate
32	90201-127J6-00	Washer, Plate
33	4BR-27111-00-00	Stand, Main
34	90109-101E6-00	Bolt
35	90445-252G6-00	Hose
36	90506-35297-00	Spring, Tension
37	2GM-27114-00-00	Stopper, Main Stand
38	90185-10091-00	Nut, Self-locking

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

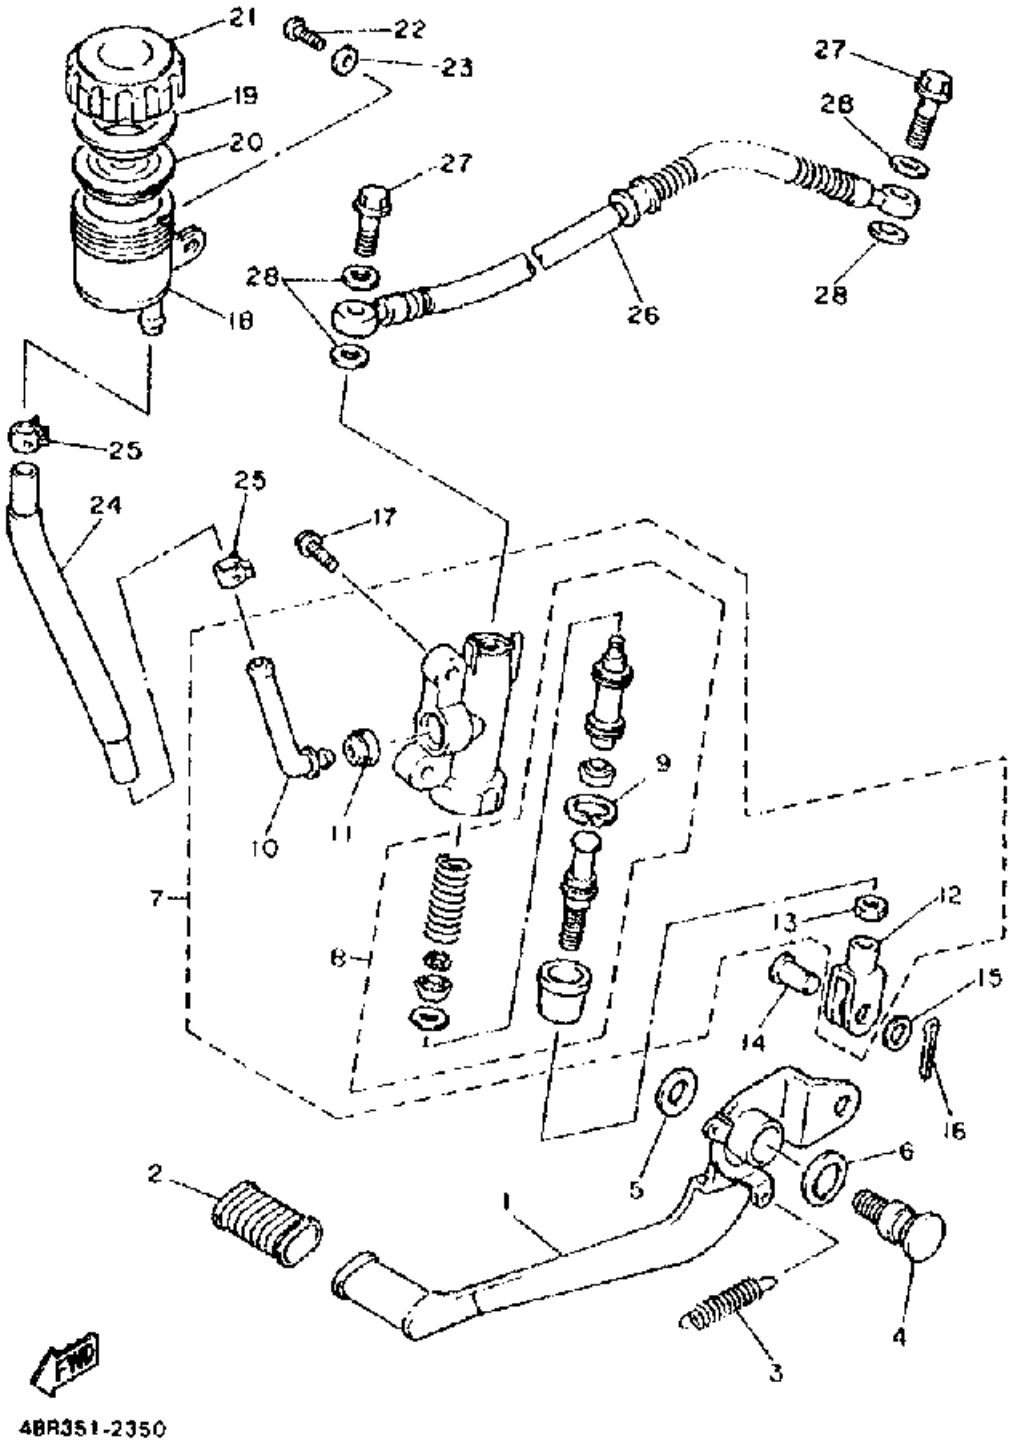


Ref No	Part No	Description
01	4BP-27211-00-00	Pedal, Brake
02	22N-18113-00-00	Cover, Shift Pedal
03	90506-20192-00	Spring, Tension
04	4BP-27261-00-00	Shaft
05	90207-14096-00	Washer, Finish
06	90206-14085-00	Washer, Wave
07	4BP-2583V-00-00	Rr. Master Cylinder Assy.
08	4BP-2583V-00-00	• . Rr. Master Cylinder Assy.
09	3LN-2585G-00-00	• . Circlip
10	4BP-2582A-00-00	• . Joint
11	4BP-2586F-00-00	• .
12	4BP-27222-00-00	• . Joint
13	95307-08700-00	• . Nut
14	90240-08124-00	Pin, Clevis
15	90201-06063-00	Washer, Plate
16	91490-20020-00	Pin, Cotter
17	92017-06025-00	Bolt, Button Head
18	31A-25894-01-00	Tank, Reservoir
19	2GU-25855-00-00	Bush,diaphragm
20	360-25854-00-00	Diaphragm, Reservoir
21	2KF-25852-01-00	Cap, Reservoir
22	98507-08018-00	Screw, Pan Head
23	92907-06600-00	Washer, Plate
24	4BP-25895-01-00	Hose, Reservoir
25	90467-14057-00	Clip
26	4BP-2581K-00-00	Hose, Brake 5
27	90401-10096-00	Bolt, Union
28	90201-10118-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

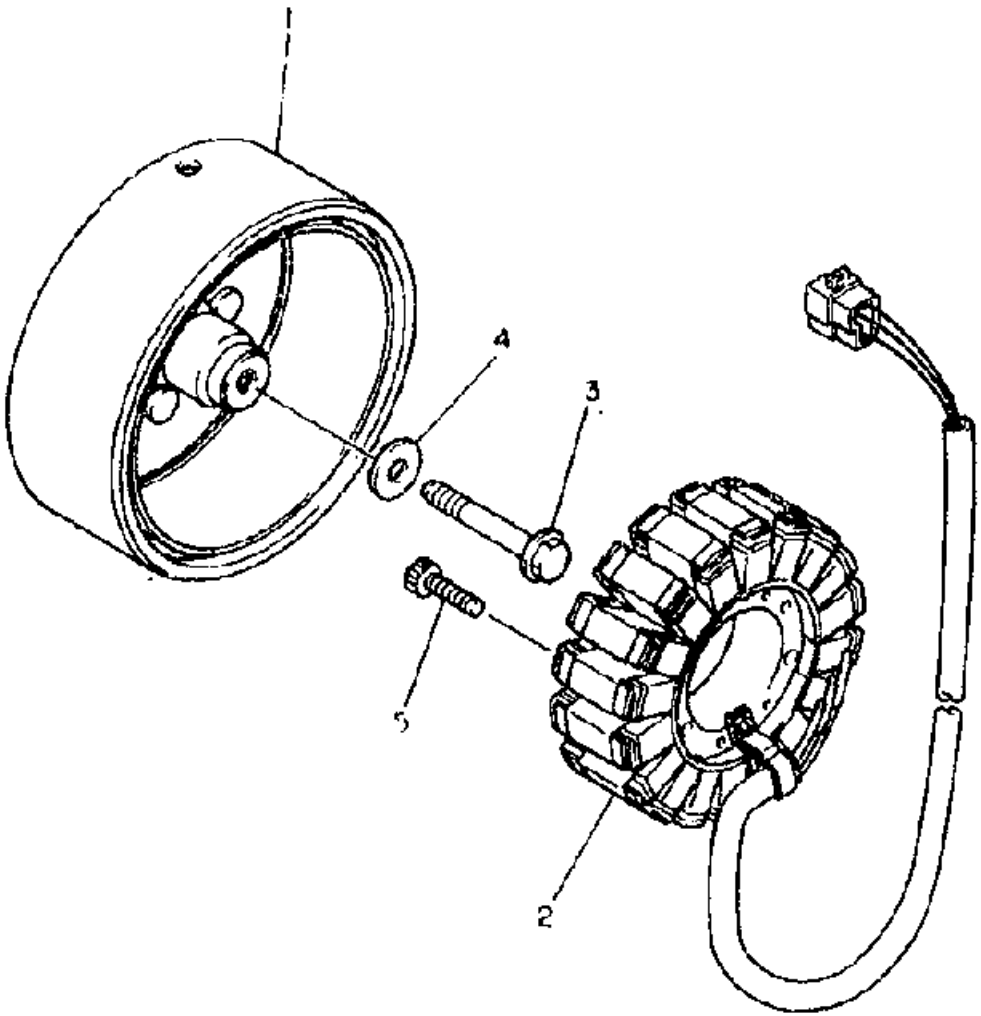

Ref No	Part No	Description
01	4BR-81450-00-00	Rotor Assy
02	4BR-81410-00-00	Stator Assy
03	90105-10662-00	Bolt, Washer Based
04	90201-10639-00	Washer, Plate
05	91317-06030-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

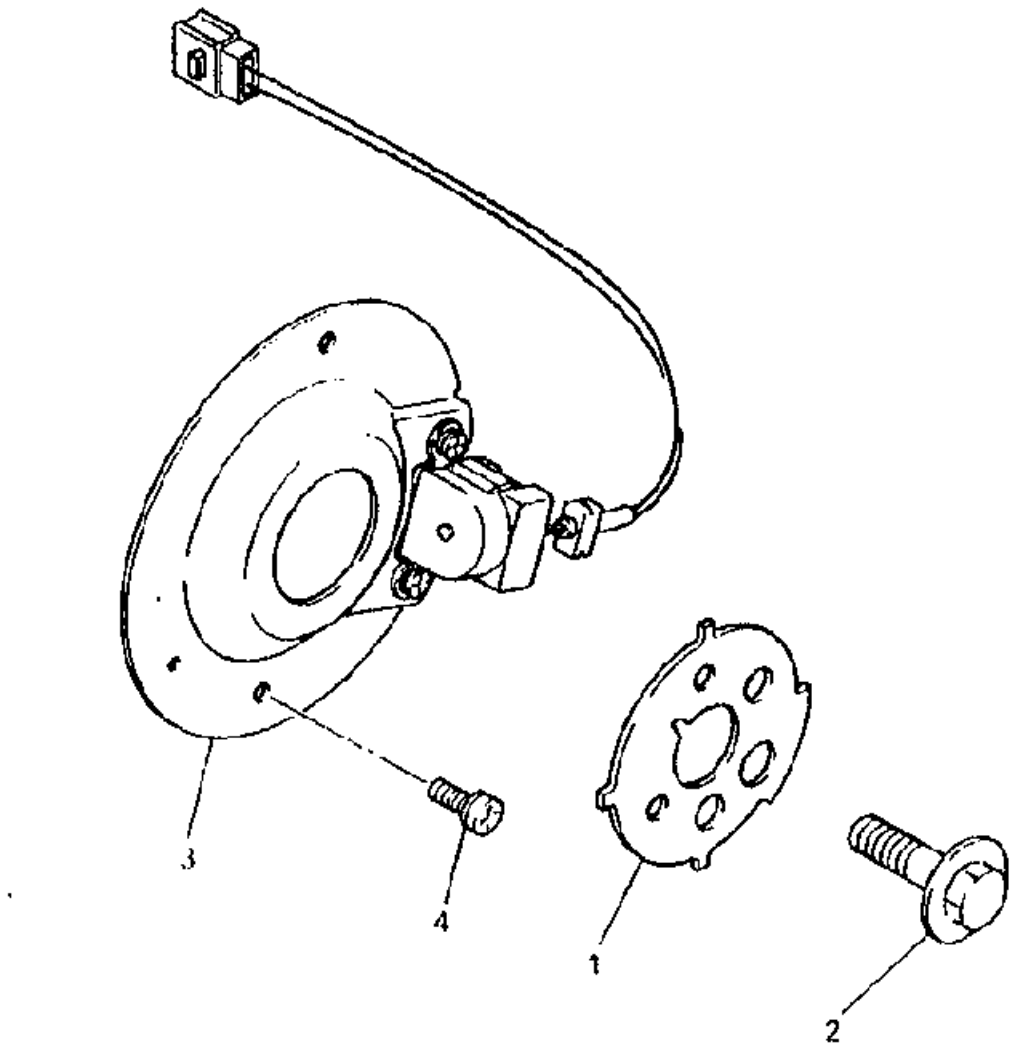


Ref No	Part No	Description
01	4BR-81673-00-00	Rotor
02	90105-10445-00	Bolt, Washer Based
03	4BR-81671-00-00	Base, Pickup
04	90159-06107-00	Screw, With Washer

FWD


4HK010-3380

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

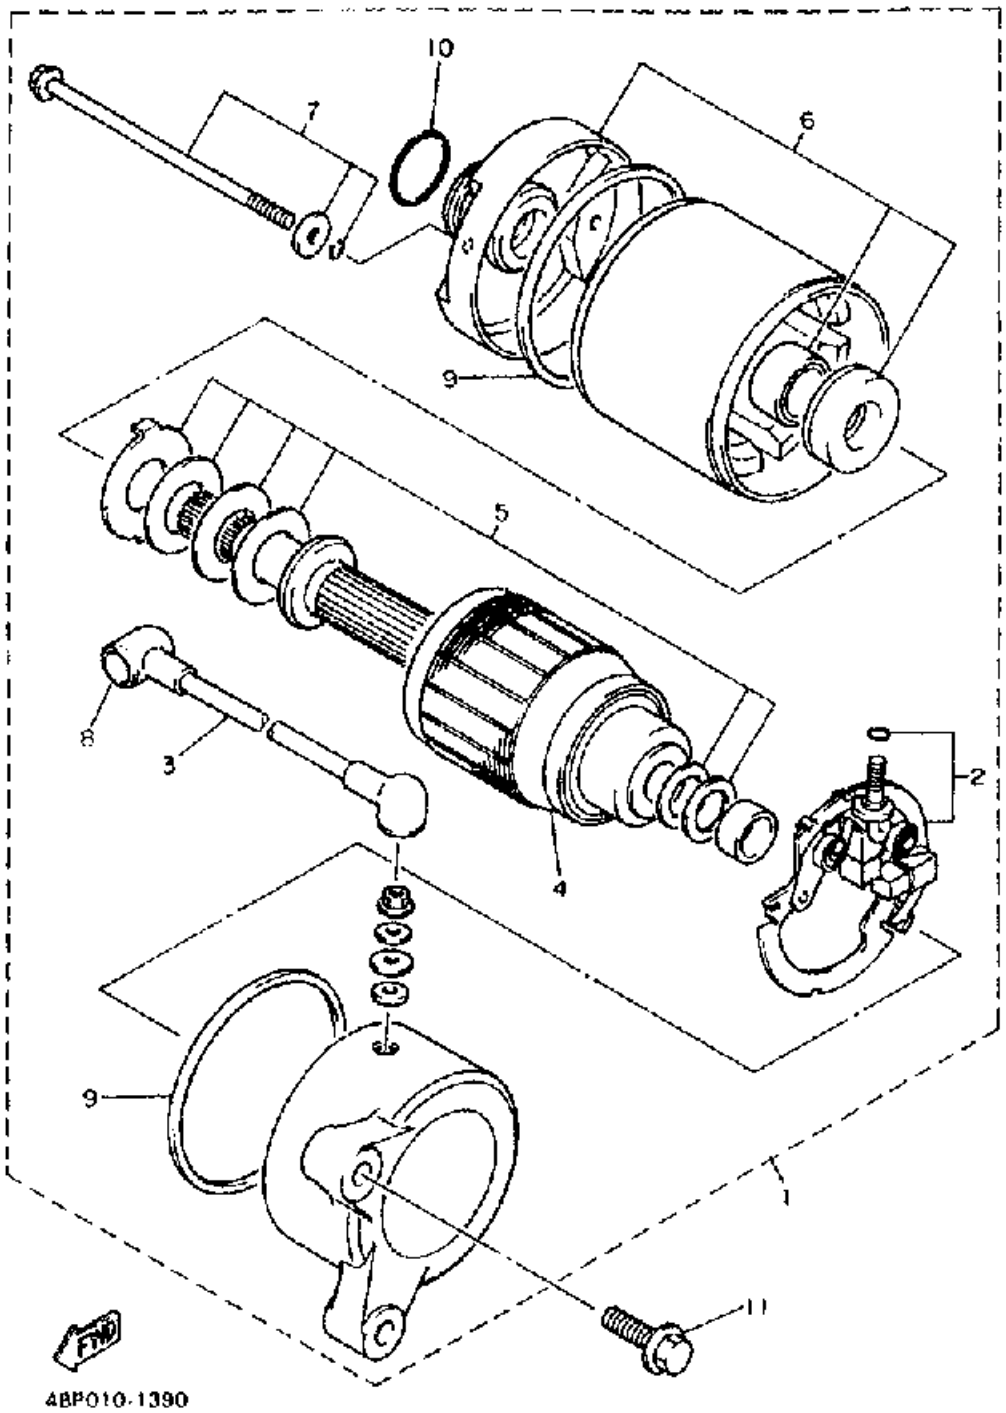


Ref No	Part No	Description
01	4BR-81800-00-00	Starting Motor Assy
02	3KS-81840-00-00	• . Brush Holder Assy
03	4BP-81815-00-00	• . Cord, Starter Motor
04	3HE-81850-00-00	• . Armature Assy
05	3AJ-81809-00-00	• . Washer Kit
06	3HE-81830-00-00	• . Front Bracket Assy
07	3HE-81826-00-00	• . Bolt
08	5H0-81871-00-00	• . Cap
09	11H-81844-00-00	• . Gasket
10	26H-81847-00-00	• . O-ring
11	95627-06025-00	Bolt, Stud

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

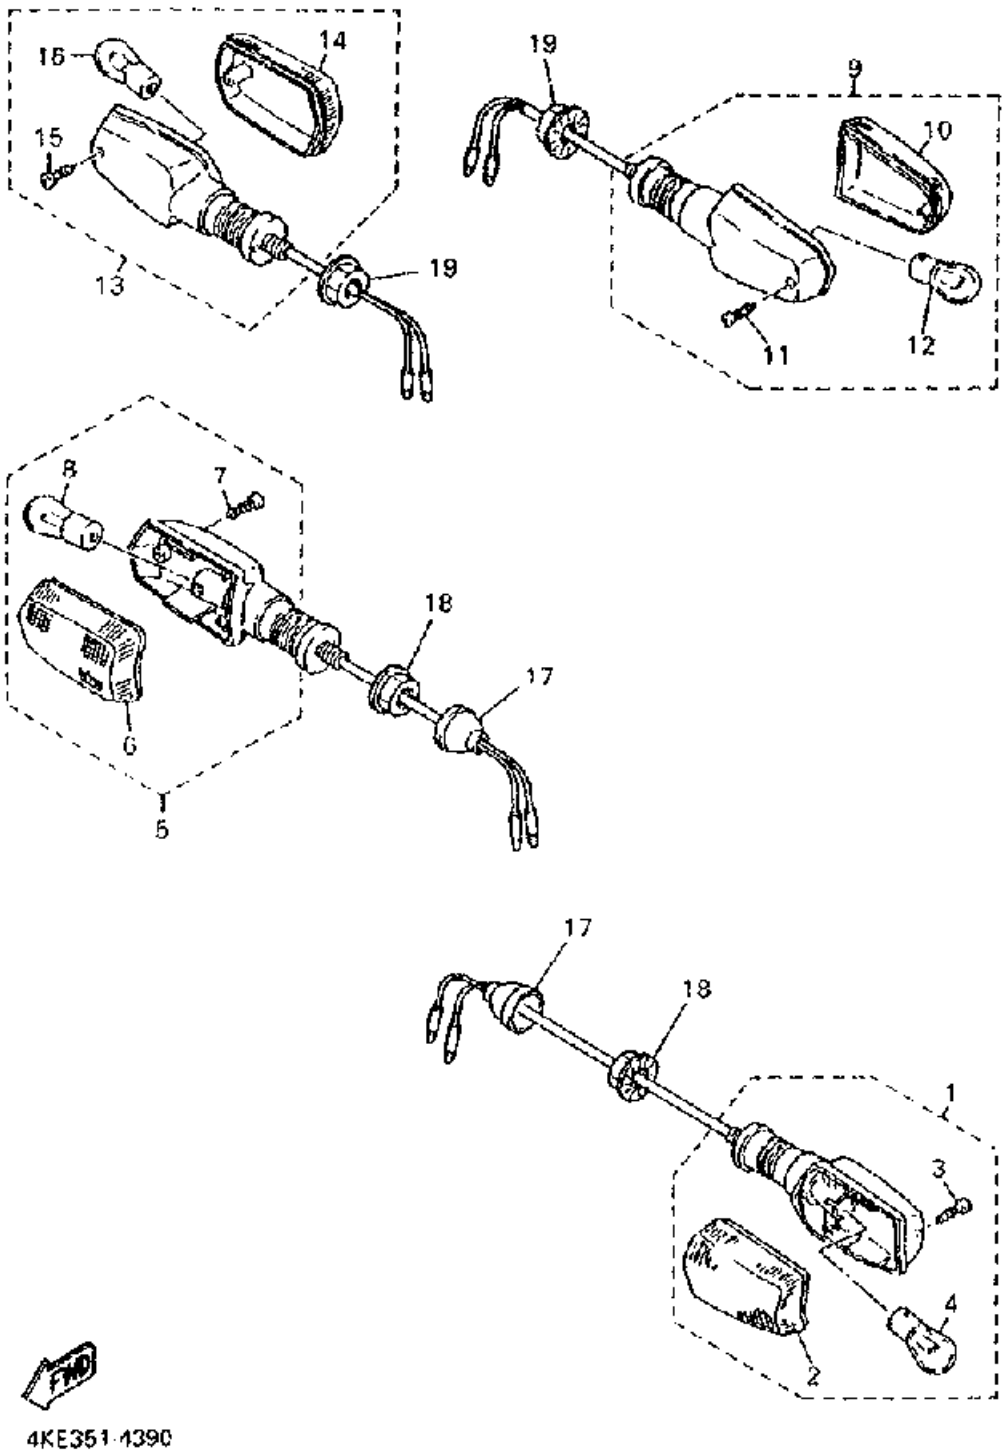


Ref No	Part No	Description
01	51J-83310-00-00	Front Flasher Light Assy 1
02	51L-83332-01-00	• . Lens, Flasher
03	97707-40620-00	• . Screw, Tapping
04	306-83311-40-00	• . Bulb, Flasher (12v-21w)
05	51J-83320-00-00	Front Flasher Light Assy 2
06	51L-83342-01-00	• . Lens, Flasher 2
07	97707-40620-00	• . Screw, Tapping
08	306-83311-40-00	• . Bulb, Flasher (12v-21w)
09	51J-83330-00-00	Rear Flasher Light Assy 1
10	1VU-83332-00-00	• . Lens, Flasher
11	97707-40620-00	• . Screw, Tapping
12	306-83311-40-00	• . Bulb, Flasher
13	51J-83340-00-00	Flasher Light Assy 2
14	1VU-83342-00-00	• . Lens, Flasher 2
15	97707-40620-00	• . Screw, Tapping
16	306-83311-40-00	• . Bulb, Flasher (12v-21w)
17	10V-83365-00-00	Cap
18	95707-12500-00	Nut, Flange
19	95707-12500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

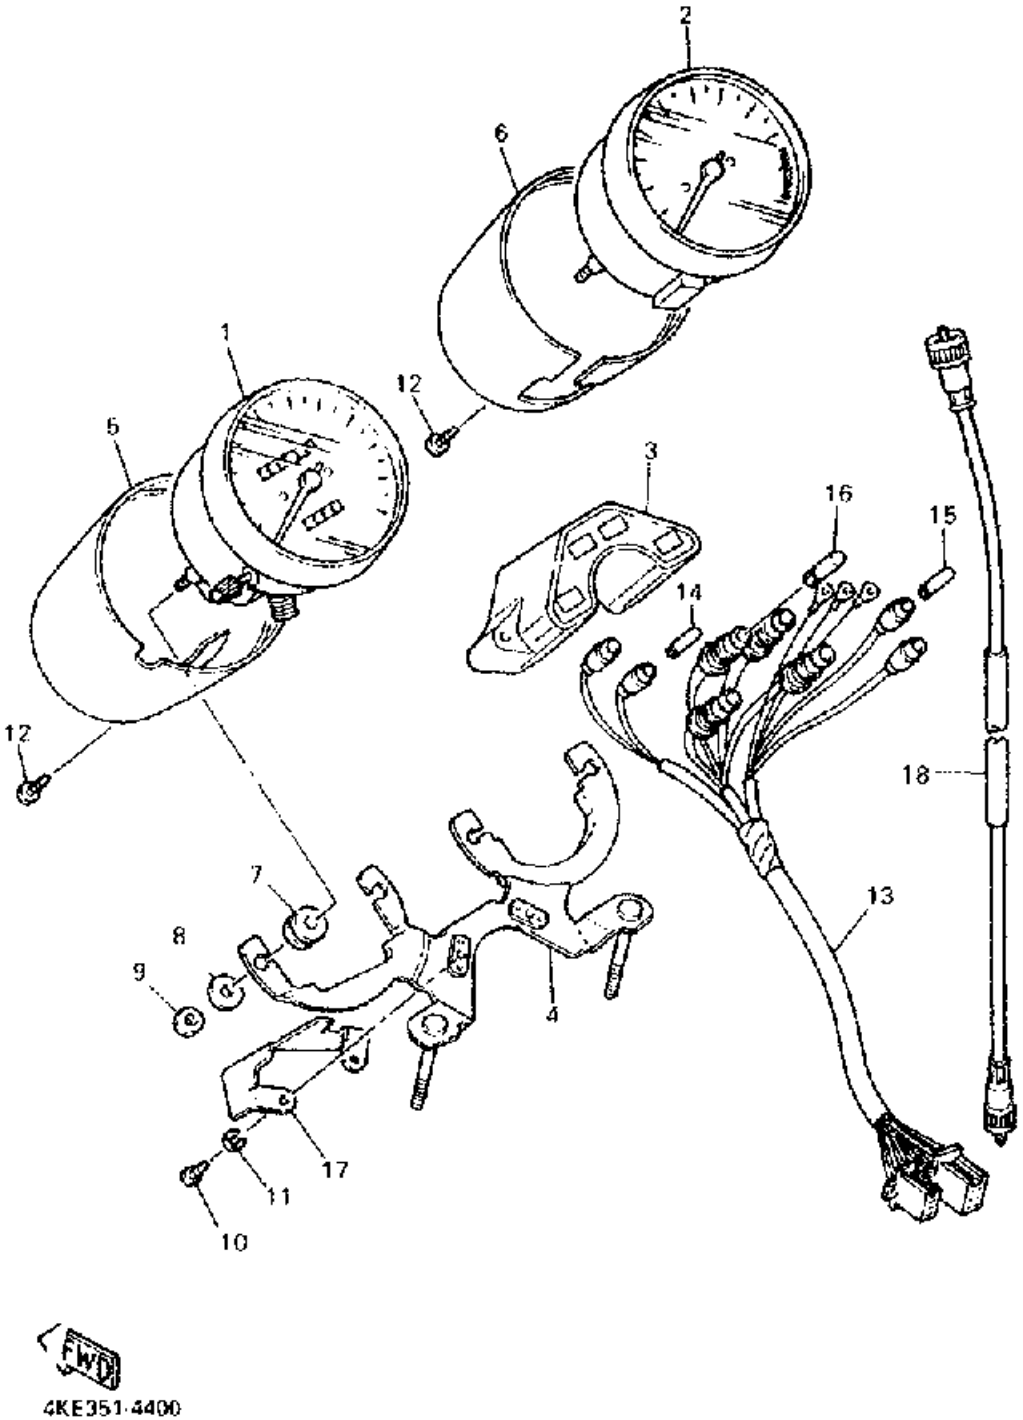


Ref No	Part No	Description
01	4KE-83570-00-00	Speedometer Assy
02	4KE-83540-00-00	Tachometer Assy
03	4KE-83530-00-00	Pilot Light Assy
04	4KE-83519-00-00	Bracket, Meter
05	42X-83507-00-00	Cover, Speedometer
06	42X-83508-00-00	Cover, Tachometer
07	1FG-83523-00-00	Damper
08	90201-05031-00	Washer, Plate
09	95307-05600-00	Nut
10	98507-04012-00	Screw, Pan Head
11	92907-04100-00	Washer, Spring
12	90164-04009-00	Screw, Tapping
13	4KE-83509-00-00	Socket Cord Assy
14	42X-83517-00-00	Bulb (12v-3w)
15	2GV-83517-00-00	Bulb (12v 1.7w.t6.5)
16	4G1-84744-00-00	Bulb (12v-3.4w)
17	4KE-83579-00-00	Cover, Meter 2
18	3MA-83550-00-00	Speedometer Cable Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

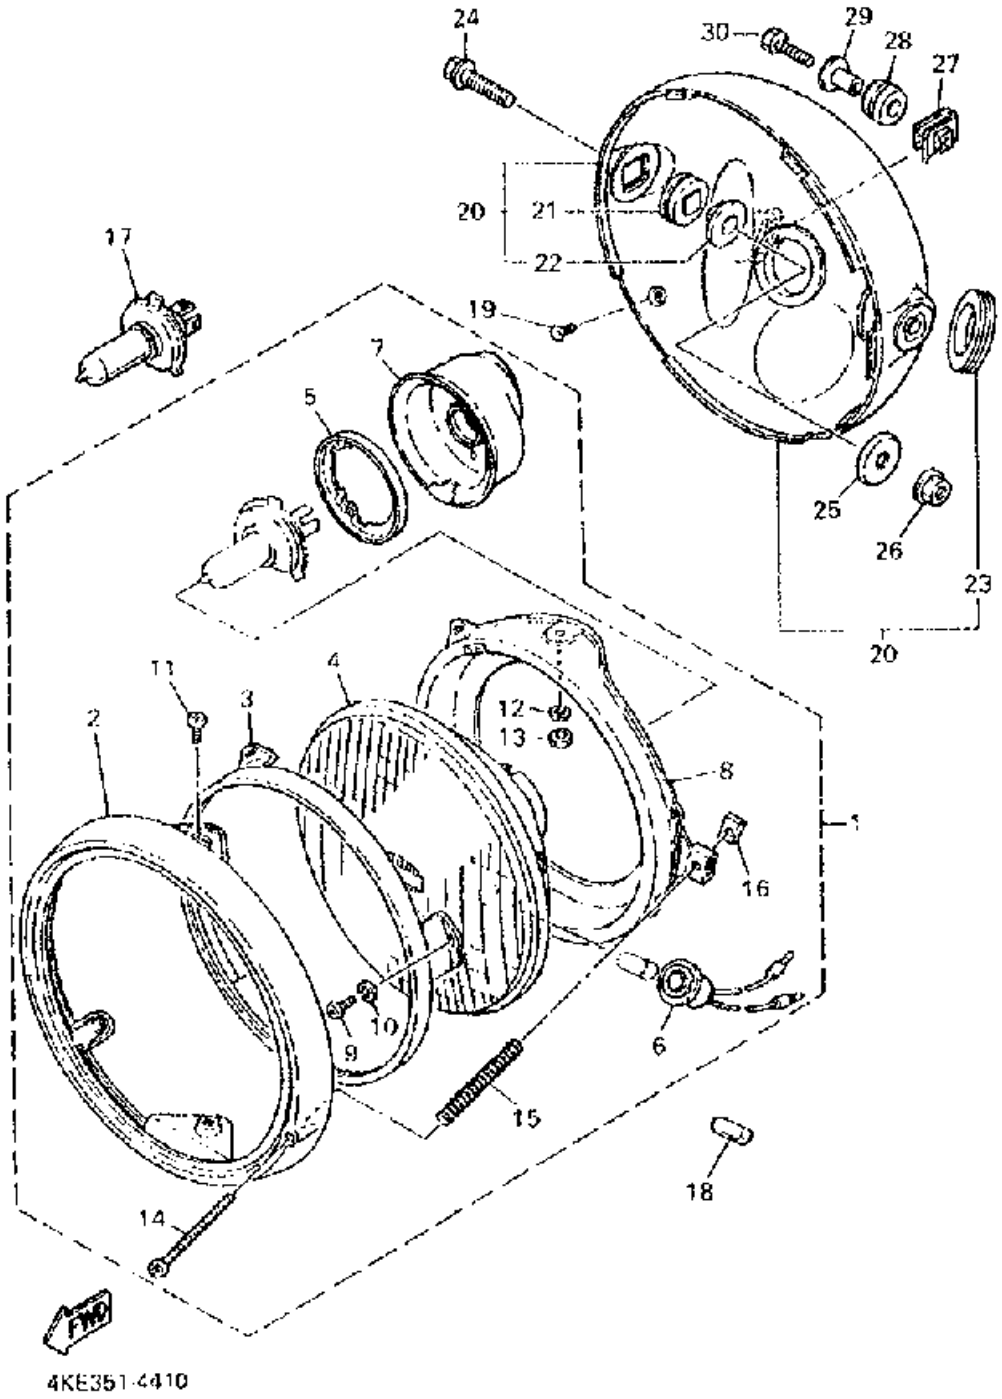


Ref No	Part No	Description
01	1XL-84303-G0-00	Headlight Unit Assy
02	341-84315-40-00	• . Rim, Headlight
03	2F9-84395-00-00	• . Ring, Retaining
04	2K3-84321-40-00	• . Lens Assy
05	2F9-84375-00-00	• . Fitting Plate, Bulb
06	34L-84346-00-00	• . Socket, Pilot Light
07	2F9-84397-01-00	• . Cover, Socket
08	2F9-84394-01-00	• . Ring, Mounting
10	92990-04100-00	• . Washer, Spring
11	1JK-84365-09-00	• . Screw
12	92990-05100-00	• . Washer, Spring
13	95301-04600-00	• . Nut
14	98580-04055-00	• . Screw, Pan Head
15	341-84332-60-00	• . Spring, Screw
16	195-84334-60-00	• . Nut, Adjusting
19	90152-05005-00	Screw, Countersunk
20	1JK-84330-00-93	Body Assy
21	584-84345-60-00	• . Damper, Headlight
22	584-84338-00-00	• . Collar, Body Fitting
23	214-84153-00-00	• . Grommet, Wireherness
24	95024-08030-00	Bolt, Flange
25	90209-06088-00	Washer
26	95707-06500-00	Nut, Flange
27	90183-06023-00	Nut, Spring
28	90480-14023-00	Grommet
29	90387-06368-00	Collar
30	97027-06025-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

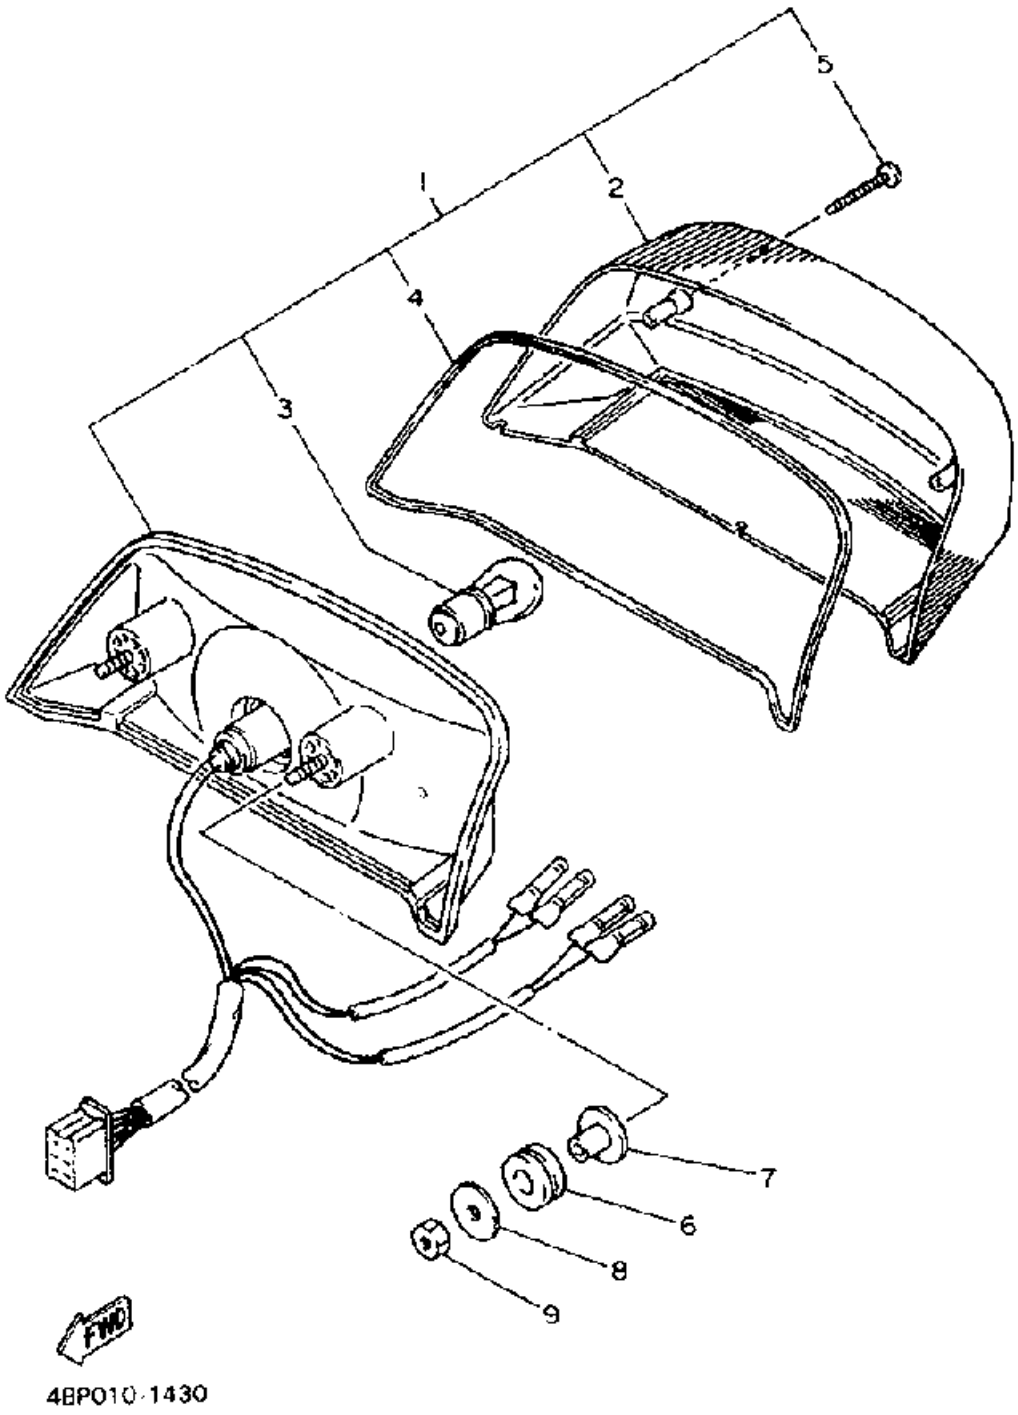


Ref No	Part No	Description
01	4BP-84710-00-00	Taillight Unit Assy
02	4BP-84721-00-00	• . Lens, Taillight
03	137-84714-61-00	• . Bulb
04	4BP-84712-00-00	• . Gasket, Taillight
05	4BP-8471J-00-00	• . Screw, Taillight
06	90480-18276-00	Grommet
07	90387-07037-00	Collar
08	90201-063J2-00	Washer, Plate
09	95307-06600-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

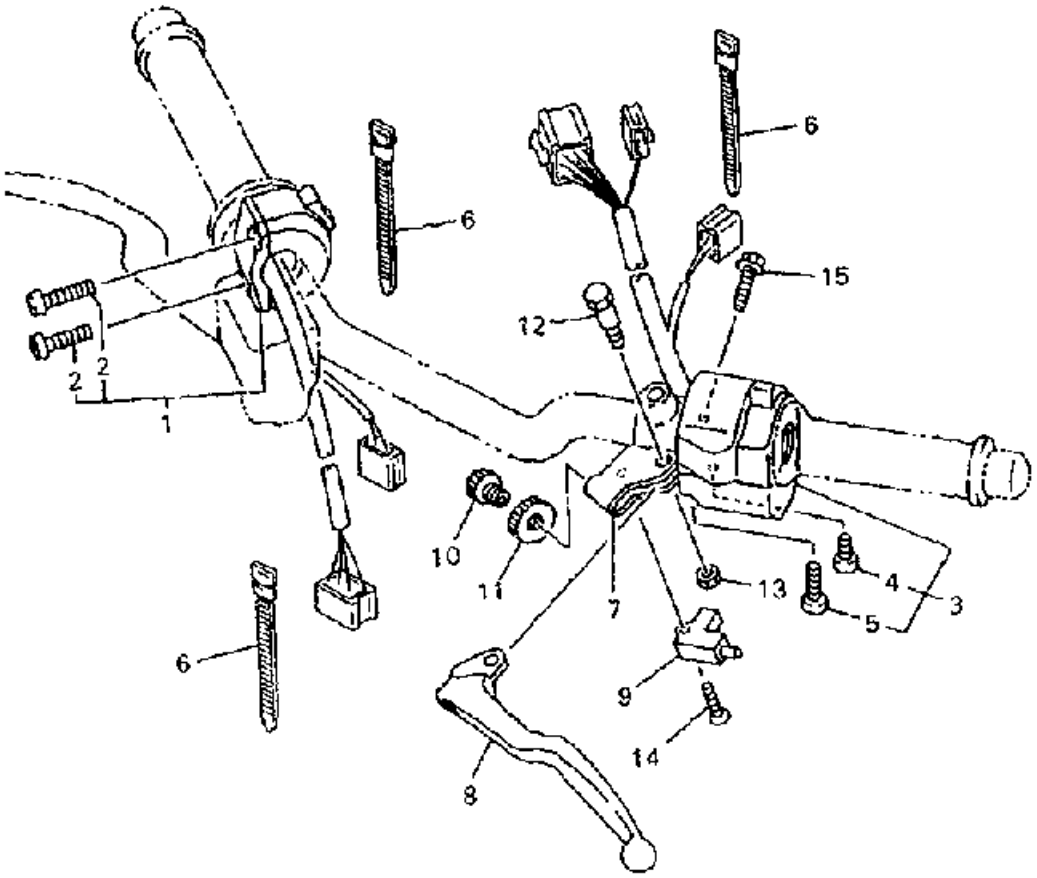


Ref No	Part No	Description
01	4BP-83975-00-00	Switch, Handle 2
02	90157-06057-00	• . Screw, Pan Head
04	98506-05030-00	• . Screw, Pan Head
05	98506-05040-00	• . Screw, Pan Head Zylinderkopfscraube
06	437-83936-01-00	Band, Switch Cord
07	3YX-82911-00-00	Holder, Lever 1
08	3YX-83912-00-00	Lever 1
09	3YX-82917-00-00	Switch
10	90123-06066-00	Bolt
11	90179-08316-00	Nut
12	3YX-83945-00-00	Bolt, Lever
14	98707-03020-00	Screw, Flat Head
15	95027-06020-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

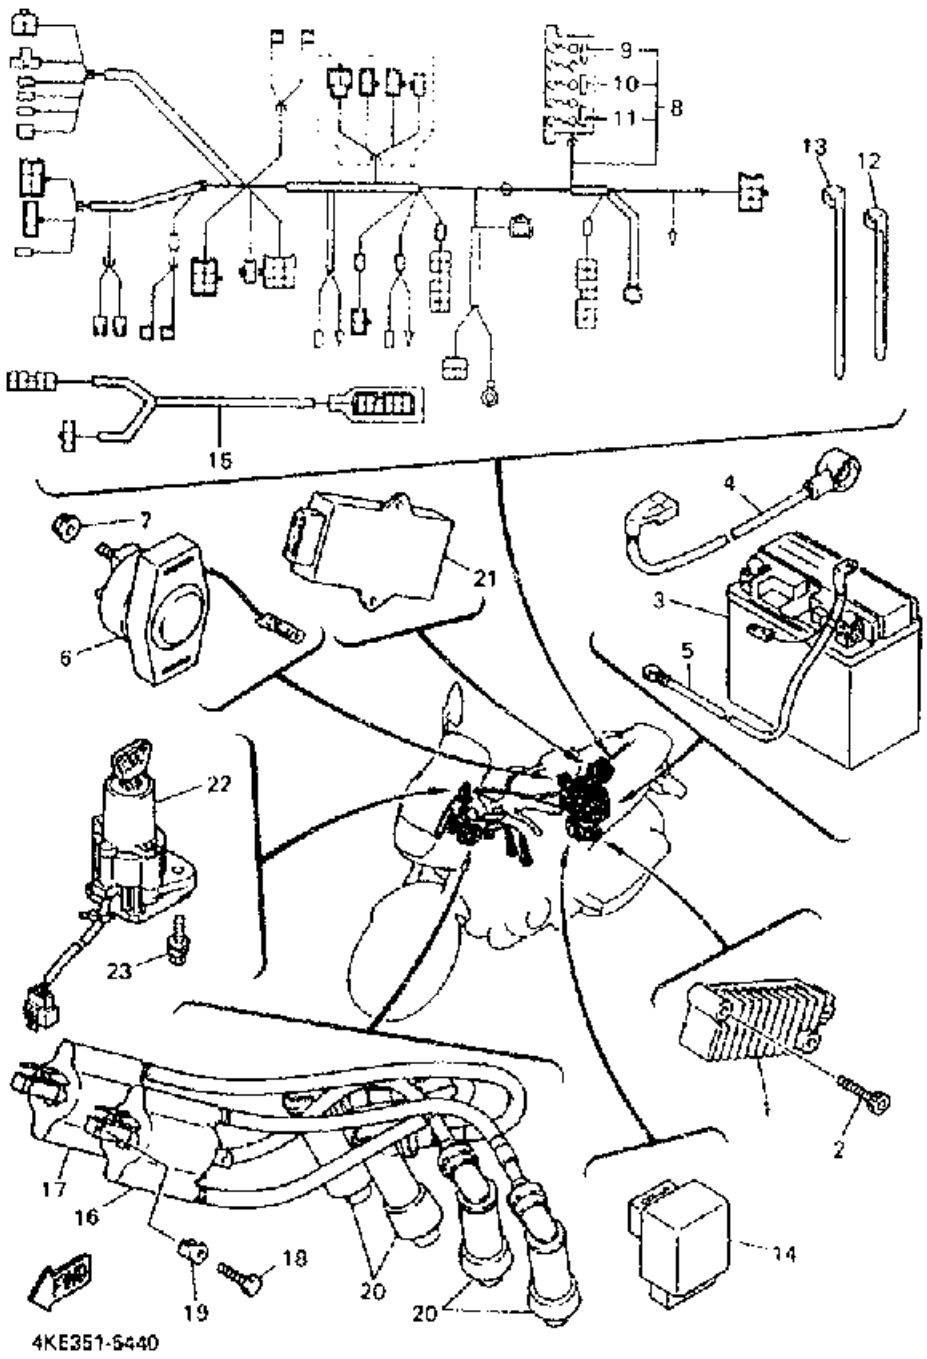

Ref No	Part No	Description
01	3TJ-81960-01-00	Rectifier & Regulator Assy
02	91317-06025-00	Bolt
03	3PK-82100-00-00	Battery Assy (ytx-bs 12v-8ah)
04	4BP-82115-00-00	Wire, Plus Lead
05	4BP-82116-00-00	Wire, Minus Lead
06	4BP-81940-00-00	Starter Relay Assy
07	95707-06500-00	Nut, Flange
08	4KE-82590-00-00	Wire Harness Assy
09	1AE-82151-00-00	• . Fuse (30a-bl)
10	36Y-82151-00-00	• . Fuse (15a-bl)
11	42X-82151-00-00	• . Fuse (10a-bl)
12	90464-13060-00	Clamp
13	90465-13355-00	Clamp
14	2UJ-81950-00-00	Relay Assy
15	4BP-82541-00-00	Wire, Lead
16	4BR-82310-00-00	Ignition Coil Assy
17	4BR-82320-00-00	Ignition Coil Assy
18	97080-08020-00	Bolt
19	4BR-82317-00-00	Damper, Ignition Coil
20	4BP-82370-00-00	Plug Cap Assy
21	4BR-82306-00-00	Ignitor Unit Assy 2
22	4KE-82510-00-00	Main Switch Assy
23	90109-06616-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

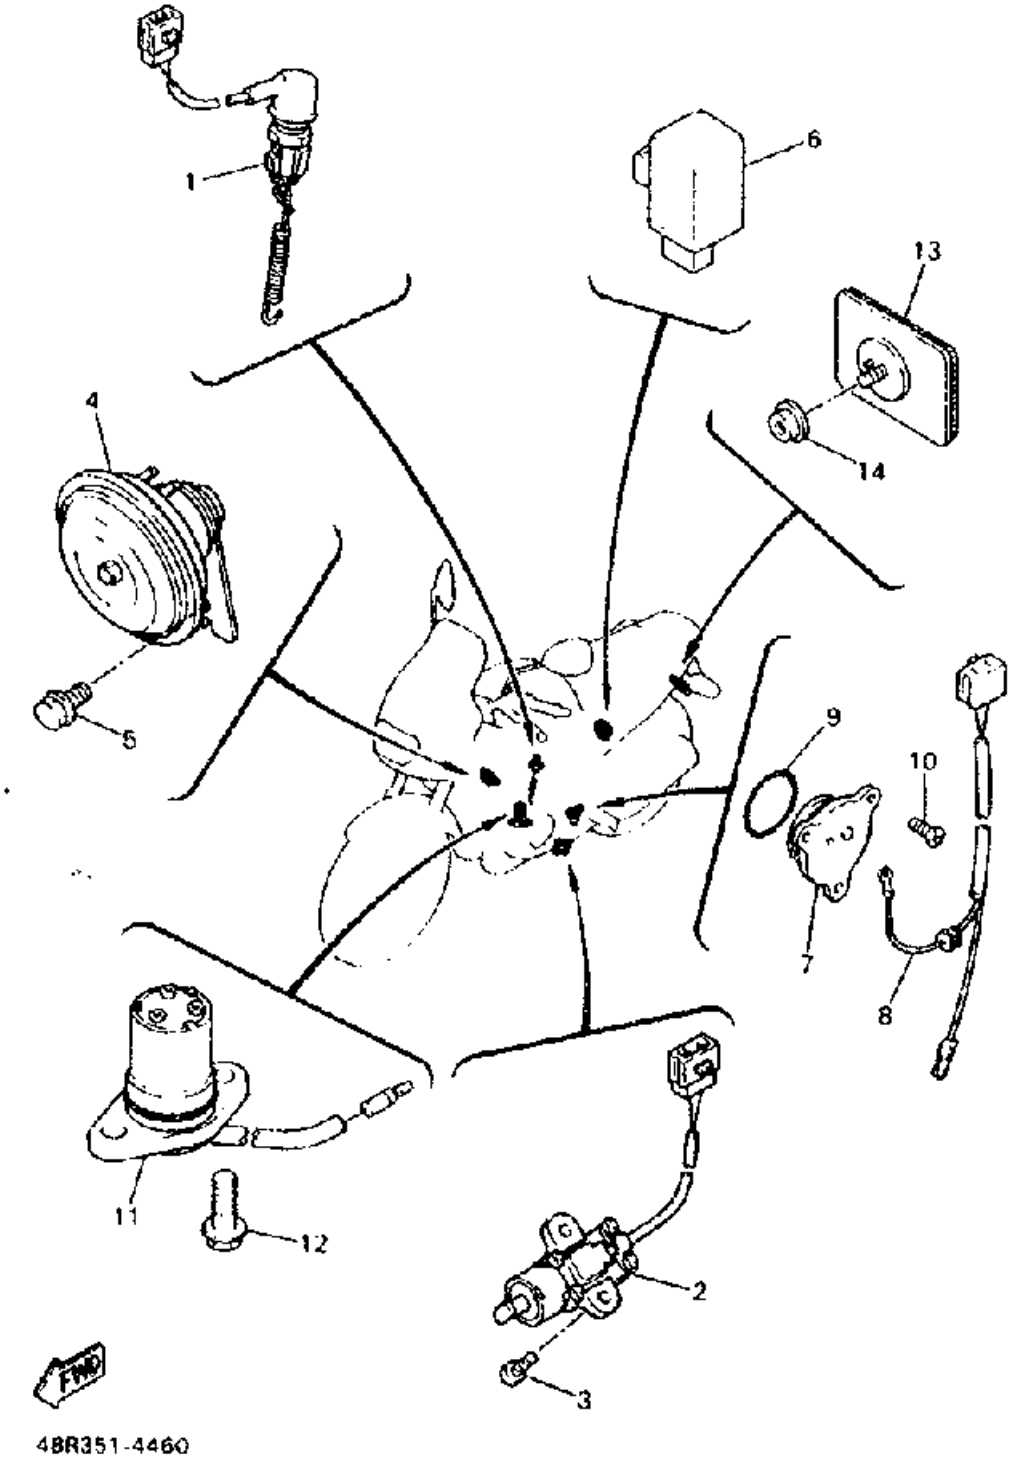

Ref No	Part No	Description
01	4BP-82530-01-00	Stop Switch Assy
02	3LD-82566-70-00	Switch, Side Stand
03	90157-05079-00	Screw, Pan Head
04	3AY-83371-00-00	Horn
05	95807-06010-00	Bolt, Flange
06	3YA-83350-00-00	Flasher Relay Assy
06	3YA-83360-10-00	Hazard Flasher Relay Assy
07	1L9-82540-00-00	Neutral Switch Assy
08	4BP-82509-00-00	Wire, Sub Lead
09	93210-29096-00	O-ring
10	98707-06012-00	Screw, Flat Head
11	4BR-85720-00-00	Oil Level Gauge Assy
12	95027-06016-00	Bolt, Flange
13	3G1-85130-01-00	Rear Reflector Assy
14	95707-05500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.