
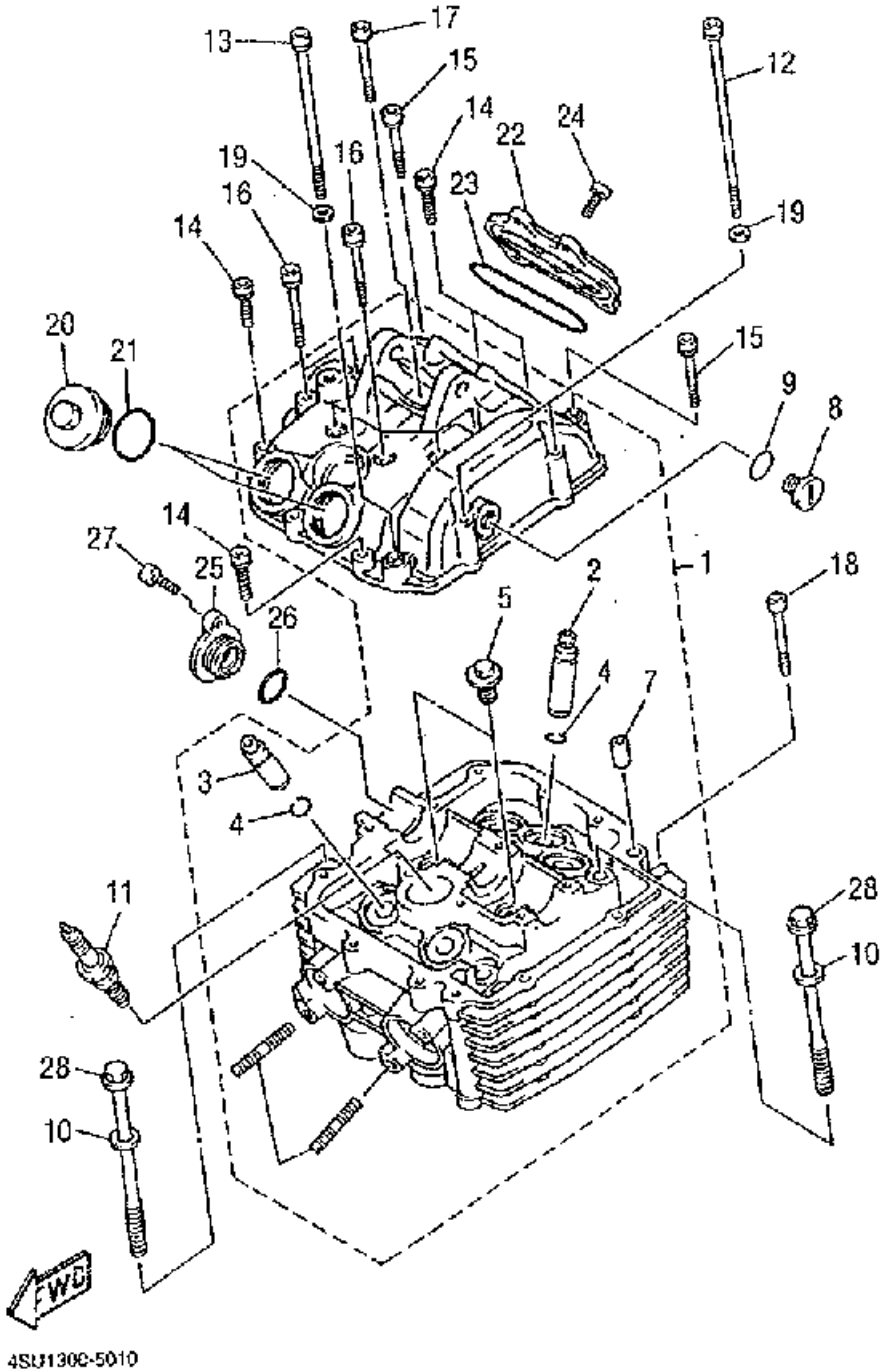



Ref No	Part No	Description
01	3YF-11101-00-00	Cylinder Head Assy
02	3YF-11133-10-00	• . Guide, Intake Valve
03	3YF-11134-10-00	• . Guide, Exhaust Valve
04	93440-10085-00	• . Circlip
05	90340-18101-00	• . Plug, Straight Screw
06	90116-06541-00	• . Bolt, Stud
07	99510-10114-00	• . Pin, Dowel
08	90340-14120-00	Plug, Straight Screw
09	93210-13657-00	O-ring
10	90201-096J9-00	Washer, Plate
11	94701-00241-00	Plug, Spark (ngk Dpr8ea-9)
12	91317-06130-00	Bolt, Hexagon Socket Head
13	91317-06115-00	Bolt Hexagon Socket Head
14	91317-06025-00	Bolt
15	91317-06040-00	Bolt Hexagon Socket Head
16	91317-06055-00	Bolt Hexagon Socket Head
17	90109-063E9-00	Bolt
18	91317-06050-00	Bolt Hexagon Socket Head
19	92907-06600-00	Washer
20	1L9-11186-00-00	Cover, Cylinder Head Side 2
21	93210-32172-00	O-ring
22	3YF-11187-00-00	Cover, Cylinder Head Side 3
23	93210-71360-00	O-ring
24	91317-06018-00	Bolt, Socket Head
25	34K-12215-02-00	Cap, Tensioner Case
26	93210-19522-00	O-ring
27	90110-06093-00	Bolt, Hexagon Socket Head
28	90105-09648-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

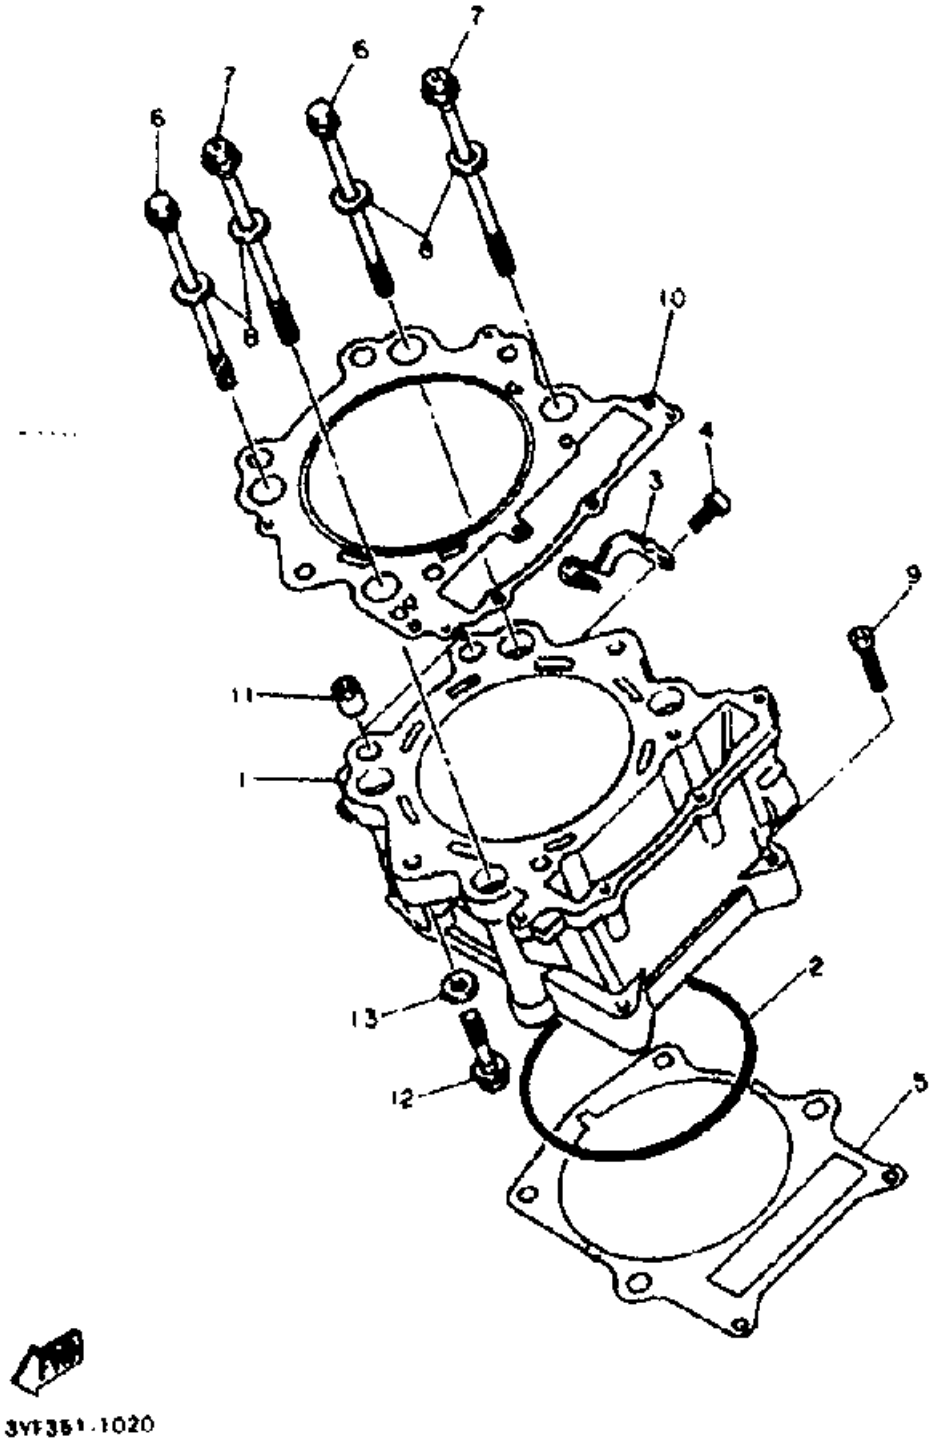


Ref No	Part No	Description
01	3YF-11310-00-00	Cylinder
02	93211-01467-00	O-ring
03	3YF-1131E-00-00	Holder 1
04	91317-06014-00	Bolt,hexagon Socket Head
05	3YF-11351-00-00	Gasket, Cylinder
06	90105-10649-00	Bolt, Washer Based
07	90105-10650-00	Bolt, Washer Based
08	90201-102G9-00	Washer, Plate
09	91317-06040-00	Bolt Hexagon Socket Head
10	3YF-11181-00-00	Gasket, Cylinder Head 1
11	91810-08016-00	Pin, Dowel
12	90105-09647-00	Bolt, Washer Based
13	90201-096J9-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

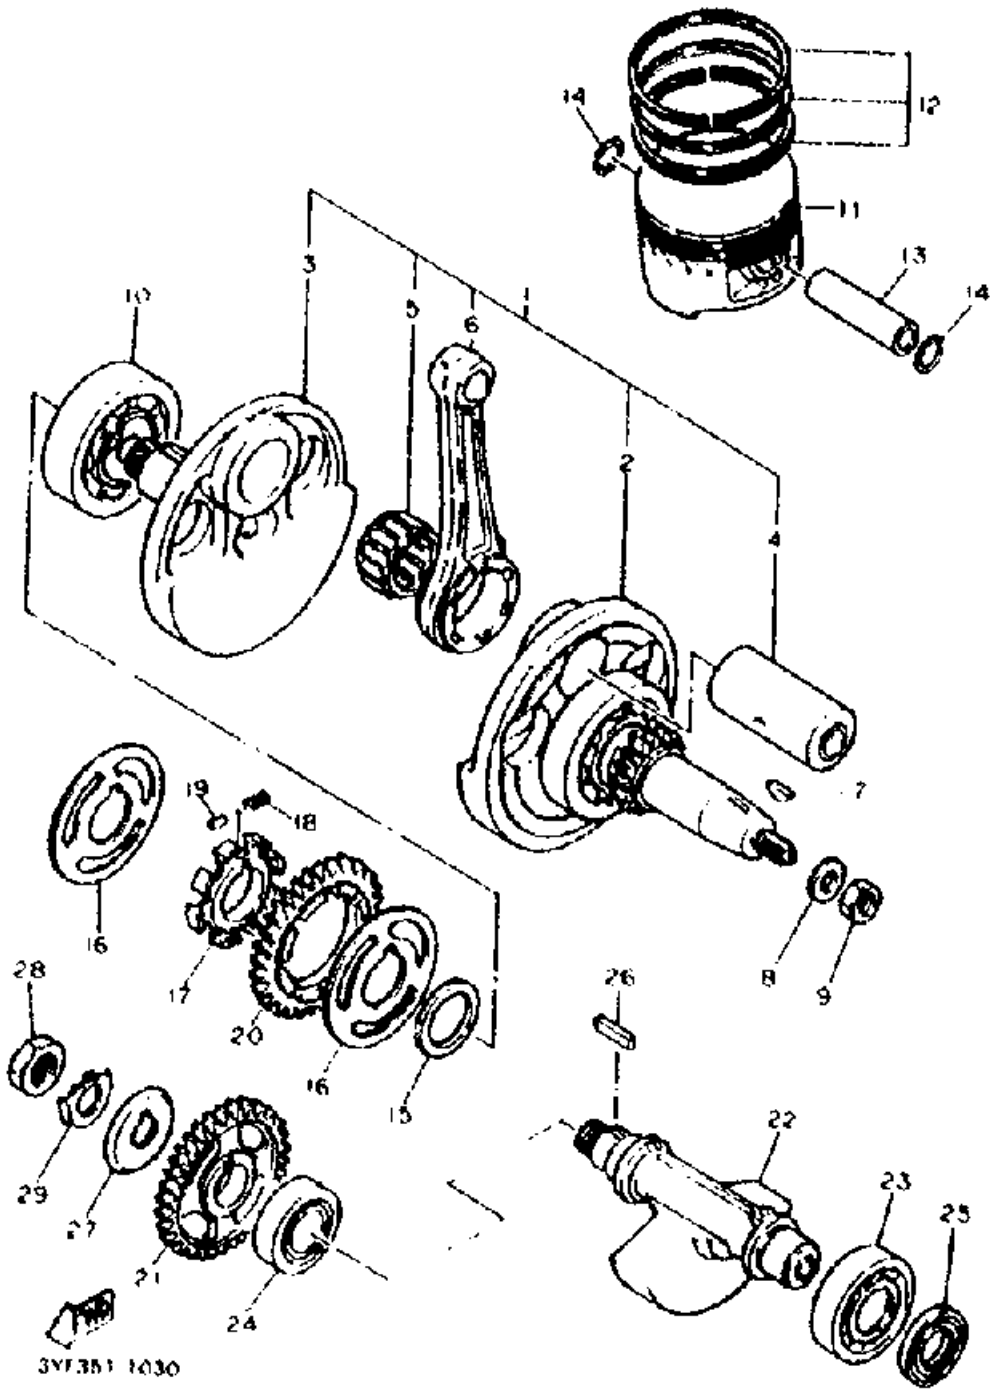


Ref No	Part No	Description
01	3YF-11400-00-00	Crankshaft Assy
02	3YF-W1141-00-00	• . Crank 1
03	3YF-11422-00-00	• . Crank 2
04	3YF-11681-00-00	• . Pin, Crank 1
05	93310-637D3-00	• . Bearing, Cylindrical
06	3YF-11651-00-00	• . Rod, Connecting
07	90280-16053-00	Key, Woodruff
08	90201-141A3-00	Washer, Plate
09	90179-14317-00	Nut
10	93306-30702-00	Bearing (b6307)
11	3YF-11631-00-X0	Piston (std)
11	3YF-11636-00-00	Piston (0.50mm O/s)
11	3YF-11638-00-00	Piston (1.00mm O/s)
12	3YF-11610-00-00	Piston Ring Set (std)
12	3YF-11610-20-00	Piston Ring Set (0.50 Mm O/s)
12	3YF-11610-40-00	Piston Ring Set (1.00 Mm O/s)
13	3YF-11633-00-00	Pin, Piston
14	93450-24028-00	Circlip
15	90201-301F4-00	Washer, Plate
16	34K-11565-02-00	Washer, Bearing Cover
17	5Y1-11496-01-00	Boss, Buffer
18	90501-22721-00	Spring, Compression
19	93605-10090-00	Pin, Dowel
20	2JT-11536-00-00	Gear, Drive
21	5Y1-11531-00-00	Gear, Balance Wt 44t
22	34K-11454-00-00	Weight 1
23	93306-30525-00	Bearing (b6305)
24	93306-30560-00	Bearing
25	93101-25106-00	Oil Seal
26	90282-05013-00	Key, Straight
27	34K-11145-00-00	Plate, Breather 2
28	90170-16343-00	Nut
29	90215-16242-00	Washer, Lock

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

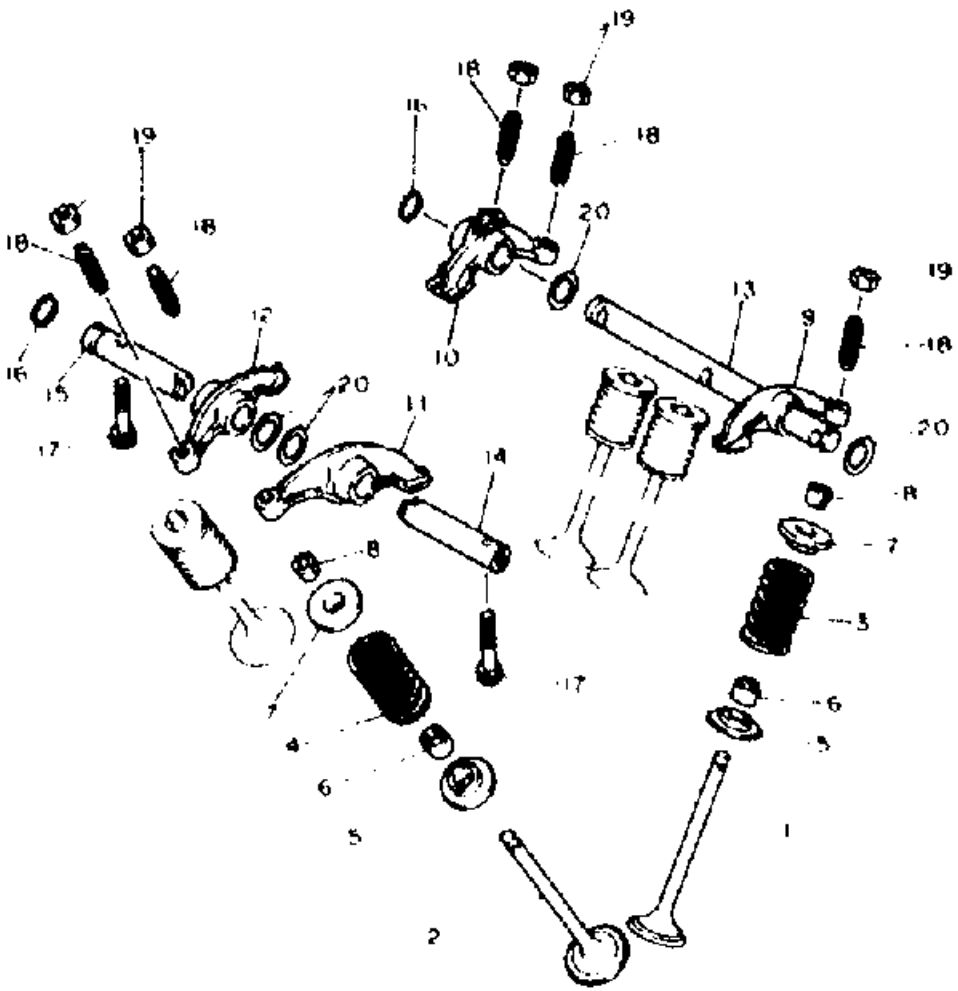


Ref No	Part No	Description
01	3YF-12111-00-00	Valve, Intake
02	3YF-12121-00-00	Valve, Exhaust
03	3YF-12113-00-00	Spring, Valve Inner
04	3YF-12114-00-00	Spring, Valve Outer
05	3YF-12116-00-00	Seat, Valve Spring
06	5H0-12119-00-00	Seal, Valve Stem
07	3YF-12117-00-00	Retainer, Valve Spring
08	4G0-12118-00-00	Cotter, Valve
09	3YF-12151-00-00	Arm, Valve Rocker
10	3YF-12161-00-00	Arm, Valve Rocker 2
11	3YF-12162-00-00	Arm, Valve Rocker 3
12	3YF-12163-00-00	Arm, Valve Rocker 4
13	3YF-12146-00-00	Shaft, Rocker
14	2NX-12156-00-00	Shaft, Rocker 2
15	3YF-12166-00-00	Shaft, Rocker 3
16	93210-08521-00	O-ring
17	90109-063E8-00	Bolt
18	2NX-12159-00-00	Screw, Valve Adjusting
19	90170-06128-00	Nut
20	90206-12074-00	Washer, Wave

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

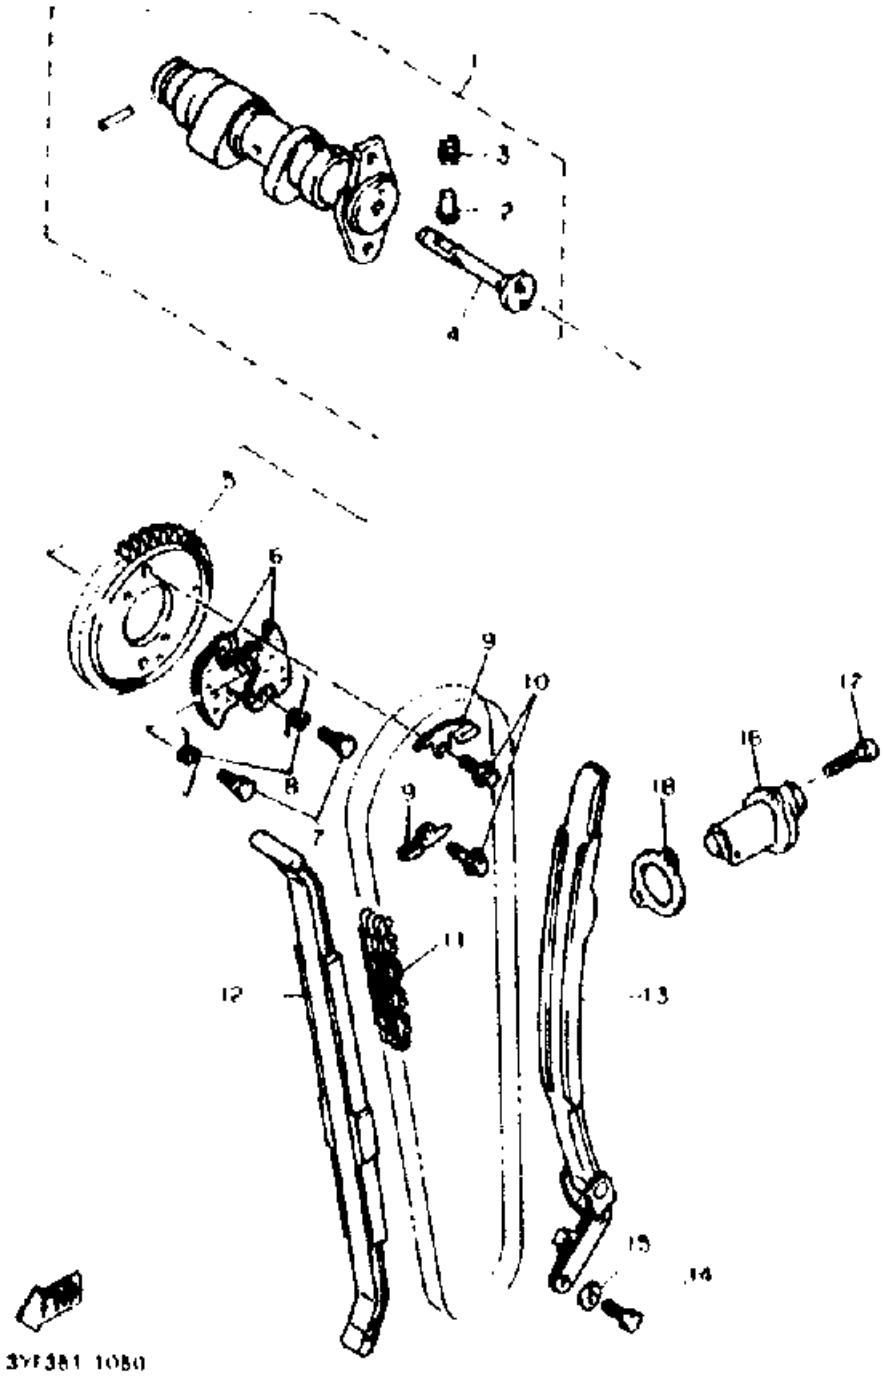


Ref No	Part No	Description
01	3YF-12170-00-00	Camshaft Assy 1
02	3YF-12284-00-00	• . Pin, Decompression Lever
03	90501-044G8-00	• . Spring, Compression
04	3YF-12290-00-00	• . Lever, Decompression Spring
05	3YF-12176-00-00	Sprocket, Cam Chain
06	3YF-12288-00-00	Cam, Decompression
07	3YF-12247-00-00	Shaft, Tensioner
08	3YF-12216-00-00	Spring
09	3YF-12233-00-00	Plate, Guide Stopper 1
10	90105-07342-00	Bolt, Washer Based
11	94590-27126-00	Chain
12	34K-12231-00-00	Guide, Stopper 1
13	34K-12241-00-00	Guide, Stopper 2
14	97017-06016-00	Bolt
15	92907-06600-00	Washer
16	3TB-12210-00-00	Tensioner Assy, Cam Chain
17	91317-06025-00	Bolt
18	4DW-12213-00-00	Gasket, Tensioner Case

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

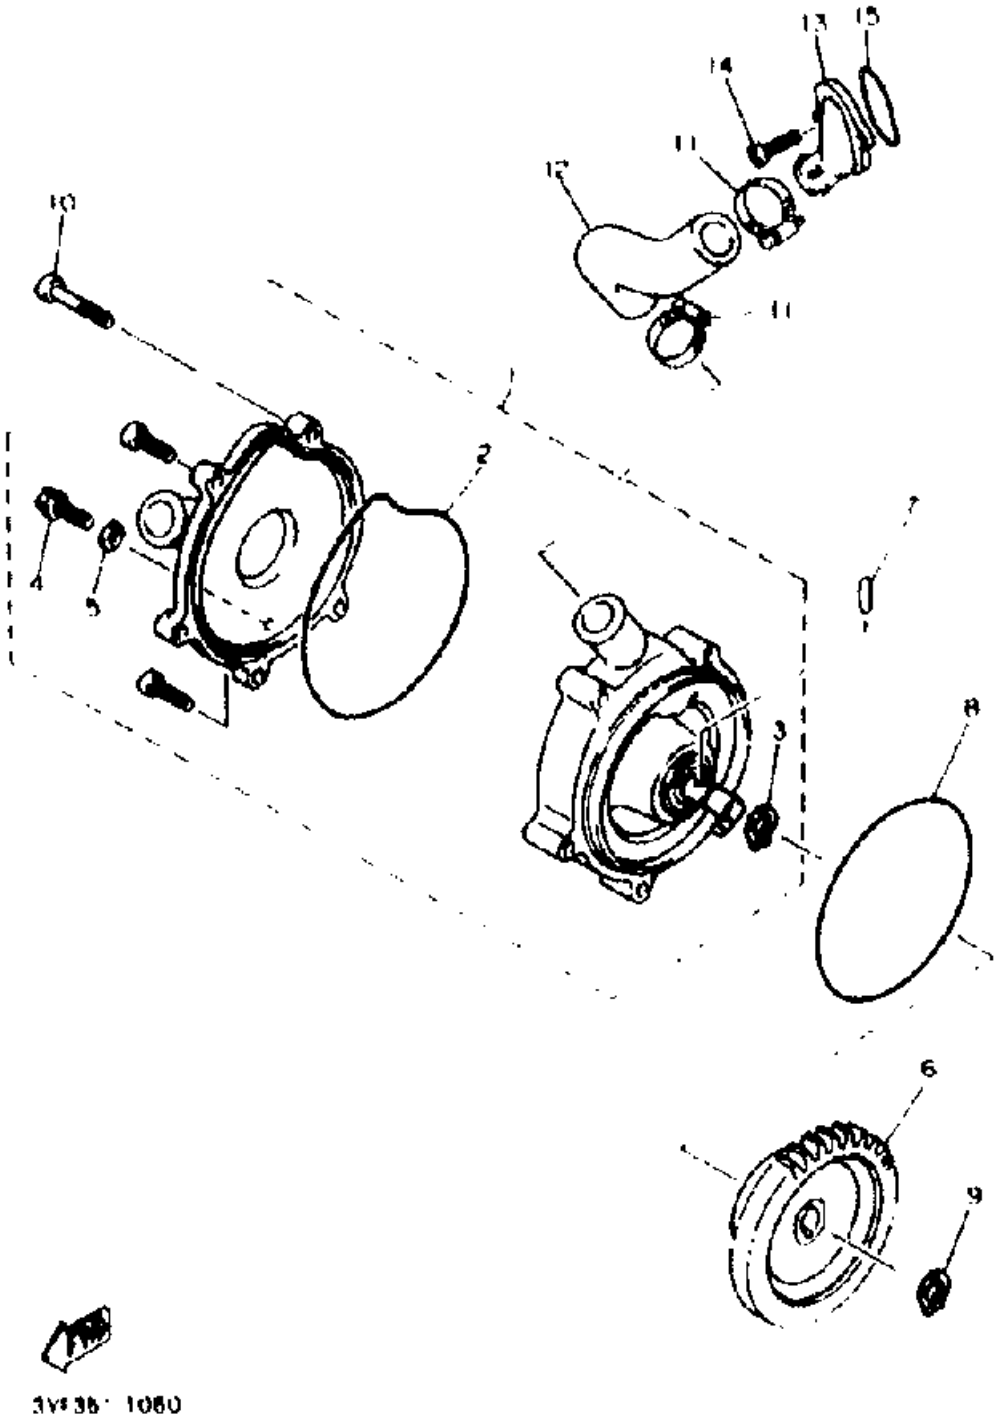


Ref No	Part No	Description
01	4SU-12420-00-00	Water Pump Assy
02	1WG-12439-00-00	• . O-ring
03	99009-12400-00	• . Circlip
04	95027-06012-00	• . Bolt, Flange
05	90430-06014-00	• . Gasket
06	3YF-12459-00-00	Gear, Impeller Shaft
07	93603-16219-00	Pin, Dowel
08	93210-77363-00	O-ring
09	99009-12400-00	Circlip
10	91317-06045-00	Bolt, Socket Head
11	90450-32051-00	Hose Clamp Assy
12	3YF-12577-00-00	Hose 2
13	3YF-12469-00-00	Joint 1
14	91317-06020-00	Bolt
15	93210-33786-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

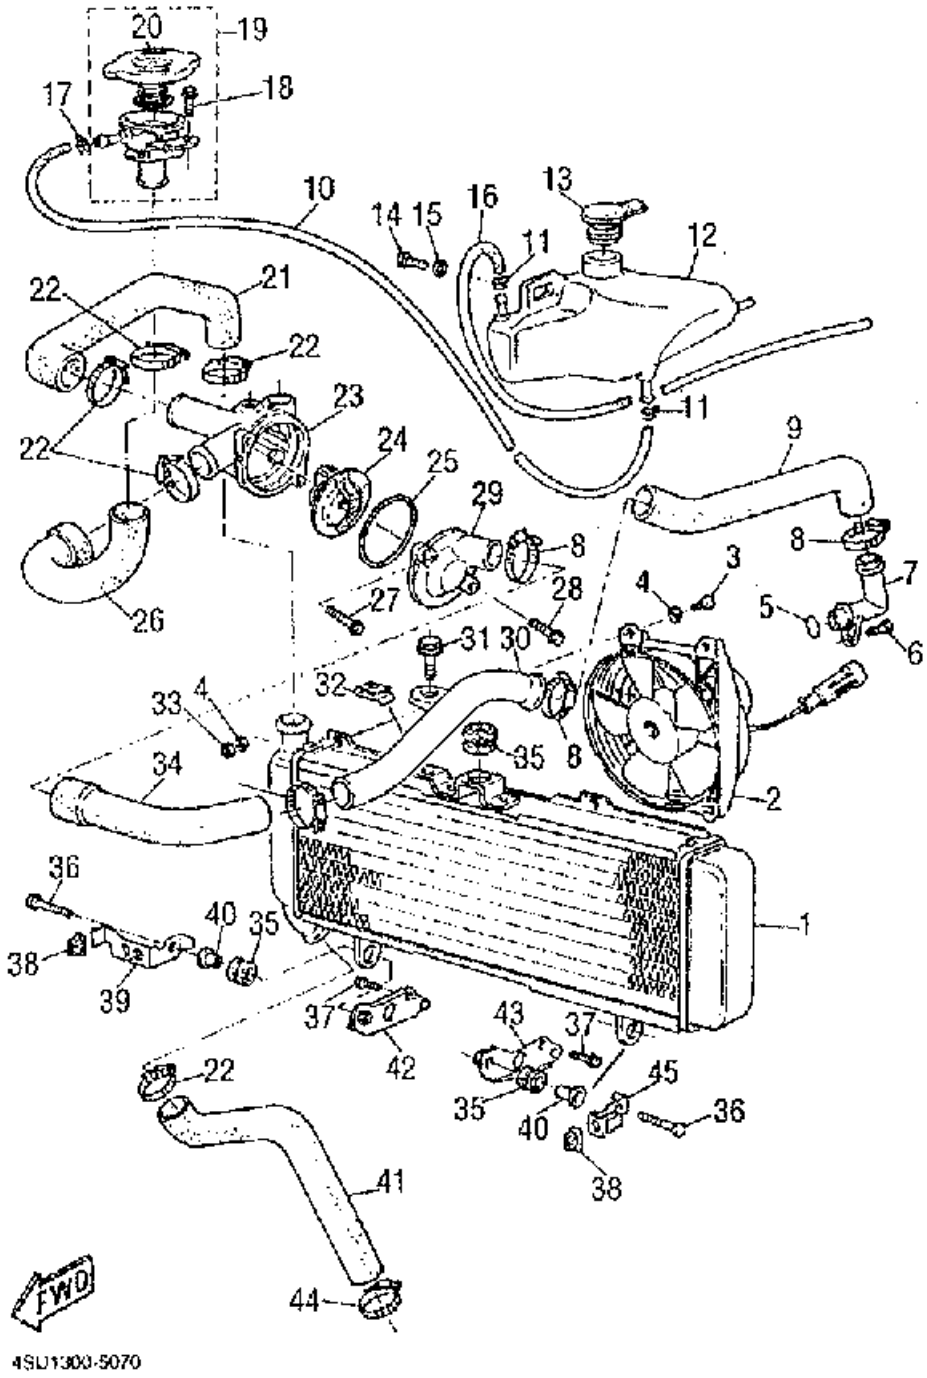


Ref No	Part No	Description
01	4SU-E2461-00-00	Radiator Assy
02	4SU-E2405-00-00	Blower Assy
03	9201M-05016-00	Bolt, Button Head
04	9290L-05200-00	Washer Plain
05	93210-18417-00	O-ring
06	91317-06012-00	Bolt, Hexagon Socket Head
07	3YF-12481-00-00	Pipe 1
08	90450-32015-00	Hose Clamp Assy
09	4SU-E2589-00-00	Hose 6
10	4SU-F4331-00-00	Pipe, Level
11	90467-11832-00	Clip
12	4SU-F1871-00-00	Tank, Recovery
13	3NC-F1875-00-00	Cap
14	9701L-06014-00	Bolt Hex.
15	9290L-06200-00	Washer Plain
16	4SU-F1877-00-00	Pipe, Overflow
17	90467-12835-00	Clip
18	90111-06806-00	Bolt Button Head
19	3SH-E2590-01-00	Conduction Assy
20	3SH-E2462-01-00	• . Cap, Radiator
21	4SU-E2578-00-00	Hose 3
22	90450-32015-00	Hose Clamp Assy
23	1UF-12417-01-00	Housing, Thermostat
24	1AE-12410-00-00	Thermostat Assy
25	93210-49046-00	O-ring
26	4SU-E2588-00-00	Hose 5
27	95027-06030-00	Bolt, Flange
28	95027-06020-00	Bolt, Flange
29	1UF-12413-00-00	Cover, Thermostat
30	4SU-E2482-00-00	Pipe 2
31	9581M-06012-00	Bolt, Flange
32	2VW-F1736-00-00	Nut,plate
33	9570L-05300-00	Nut, Nylon
34	4SU-E2579-00-00	Hose 4
35	90480-15363-00	Grommet
36	9581L-06025-00	Bolt, Flange
37	9581L-06016-00	Bolt, Flange
38	4SU-F3445-00-00	Damper
39	4SU-F836J-00-00	Bracket 6
40	90387-06388-00	Collar
41	4SU-E2576-00-00	Hose 1
42	4SU-F142L-00-00	Bracket, Radiator 2
43	4SU-F142K-00-00	Bracket, Radiator
44	90450-17822-00	Hose Clamp Assy
45	4SU-F836H-00-00	Bracket 5

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

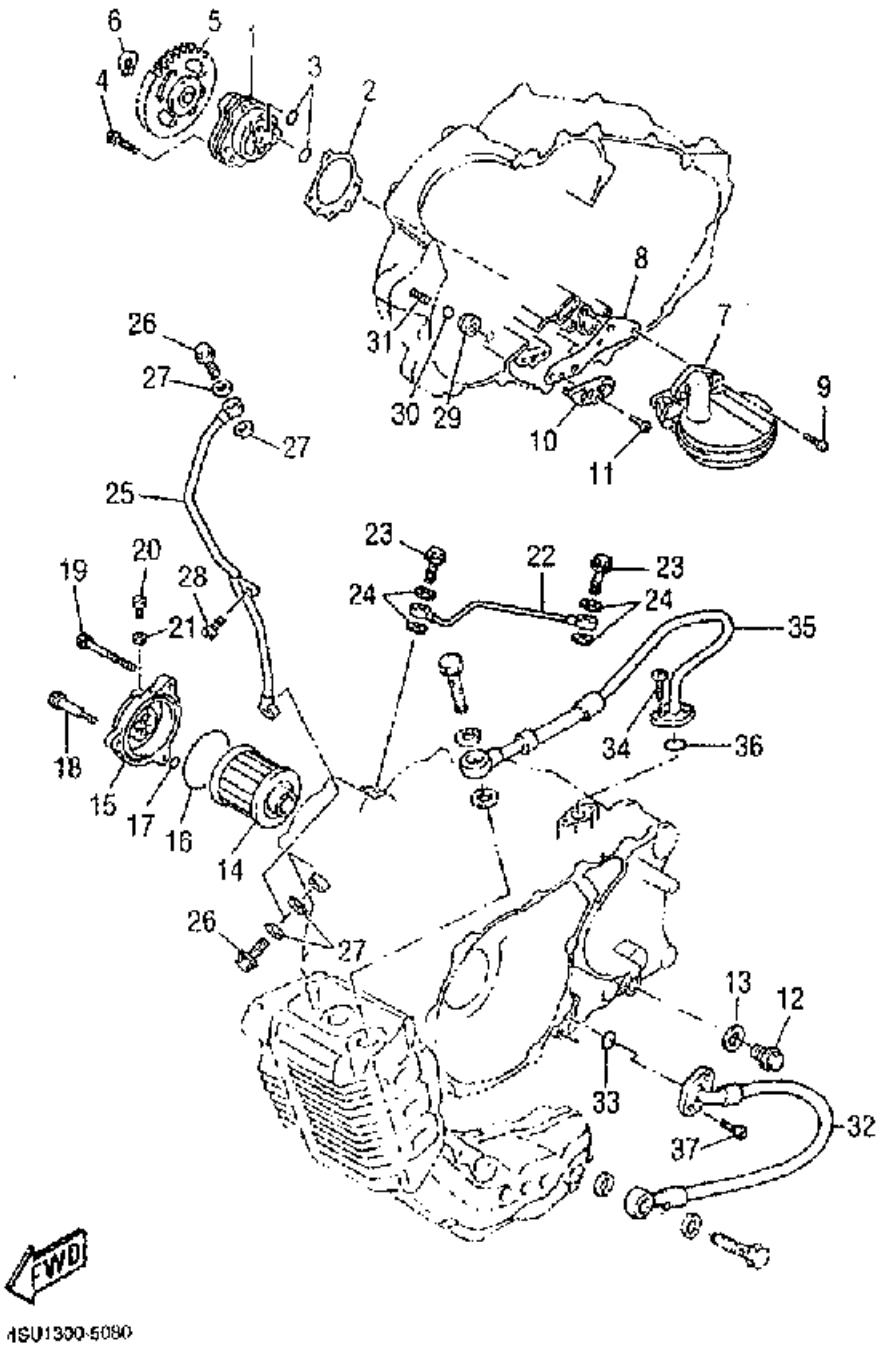


Ref No	Part No	Description
01	3AJ-13300-01-00	Oil Pump Assy
02	3SX-13329-00-00	Gasket, Pump Cover
03	93210-13361-00	O-ring
04	91317-06035-00	Bolt, Hexagon Socket Head
05	3AJ-13325-00-00	Gear, Pump Driven
06	99009-11400-00	Circlip
07	5Y1-W1343-00-00	Strainer Comp.
08	4DW-13415-00-00	Seal, Oil Strainer
09	98507-06016-00	Screw, Pan Head
10	5Y1-15427-01-00	Cover, Cap 2
11	98507-06016-00	Screw, Pan Head
12	90340-14132-00	Plug, Straight Screw Straight Screw
13	214-11198-01-00	Gasket
14	4X7-13440-90-00	Element Assy, Oil Cleaner
15	2WK-13447-00-00	Cover, Oil Element
16	93210-64297-00	O-ring
17	93210-07135-00	O-ring
18	90109-06419-00	Bolt
19	91317-06080-00	Bolt
20	90149-05110-00	Screw
21	90430-05126-00	Gasket
22	3AJ-13161-01-00	Pipe, Delivery 1
23	90401-08133-00	Bolt, Union
24	90430-08204-00	Gasket
25	3YF-13161-00-00	Pipe, Delivery 1
26	90401-10159-00	Bolt, Union
27	90430-10171-00	Gasket
28	91317-06012-00	Bolt, Hexagon Socket Head
29	583-13113-00-00	Seat, Check Ball
30	93503-08007-00	Ball
31	90501-043E0-00	Spring, Compression
32	4SU-E3464-01-00	Hose, Oil 1
33	93210-10197-00	O-ring
34	9131L-06016-00	Bolt.hex.socket Head
35	4SU-13465-00-00	Hose, Oil 2
36	93210-15171-00	O-ring
37	91317-06016-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

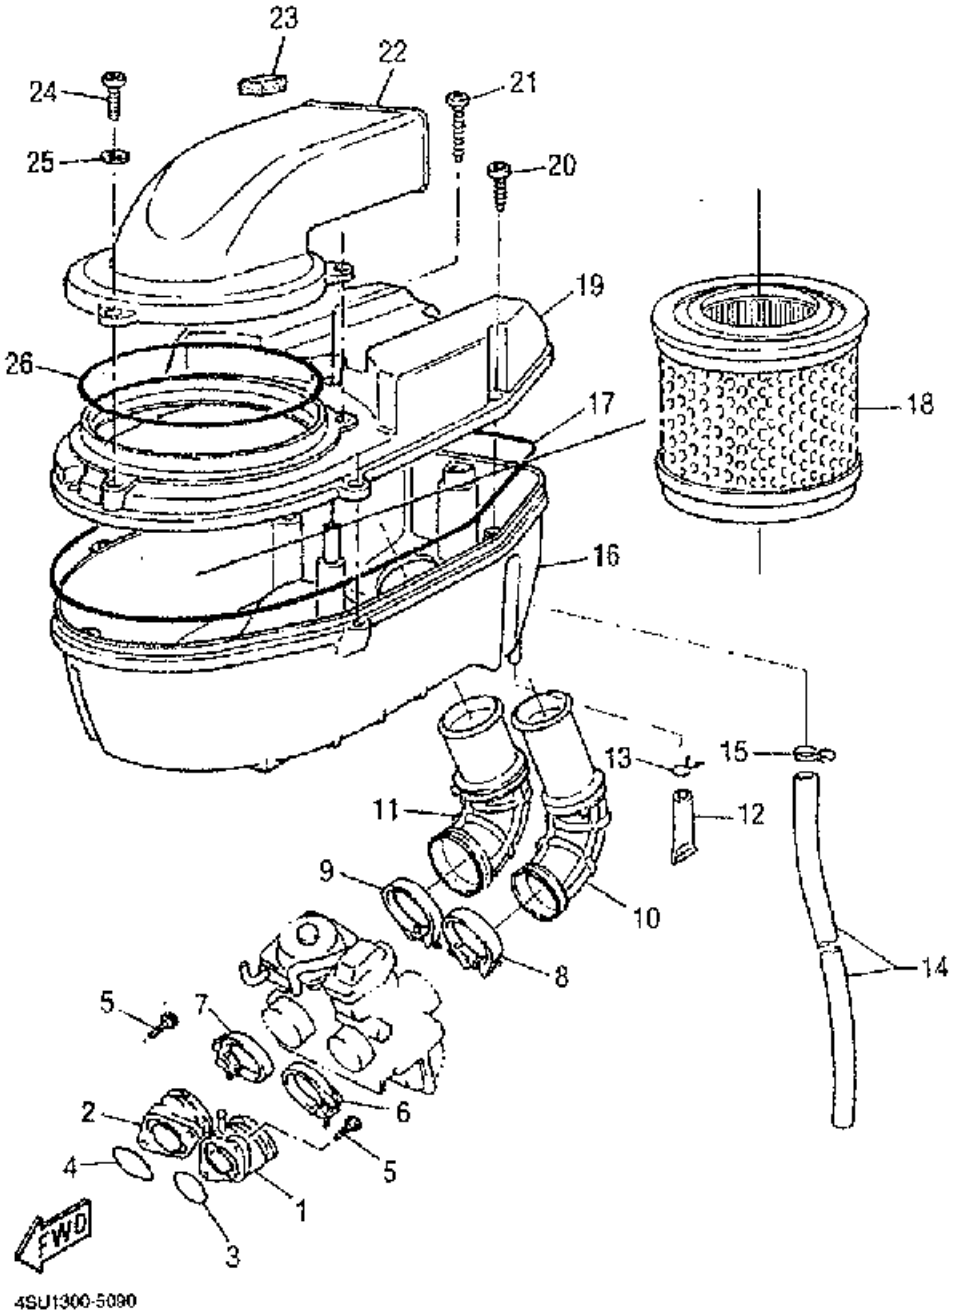


Ref No	Part No	Description
01	3YF-13586-00-00	Joint, Carburetor 1
02	3YF-13596-00-00	Joint, Carburetor 2
03	93210-30611-00	O-ring
04	93210-44545-00	O-ring
05	91317-06020-00	Bolt Hexagon Socket Head
06	90460-46206-00	Clamp, Hose
07	90460-56287-00	Clamp, Hose
08	90460-51059-00	Clamp, Hose
09	90460-58015-00	Clamp, Hose
10	4SU-E4453-00-00	Joint, Air Cleaner 1
11	4SU-E4454-00-00	Joint
12	4SU-E443E-00-00	Pipe, Drain
13	90467-14839-00	Clip
14	4SU-E443E-10-00	Pipe, Drain
15	90467-10833-00	Clip
16	4SU-E4411-00-00	Case, Air Cleaner 1
17	4SU-E4457-00-00	Seal
18	4SU-E4451-00-00	Element, Air Cleaner
19	4SU-E4421-00-00	Case, Air Cleaner 2
20	9770L-50125-00	Screw, Tapping
21	9770L-50132-00	Screw, Tapping
22	4SU-E4422-00-00	Cap, Cleaner Case 2
23	4SU-E4409-00-00	Damper
24	9850L-05016-00	Screw, Pan Head
25	9290L-05600-00	Washer
26	4SU-E4452-00-00	Seal

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

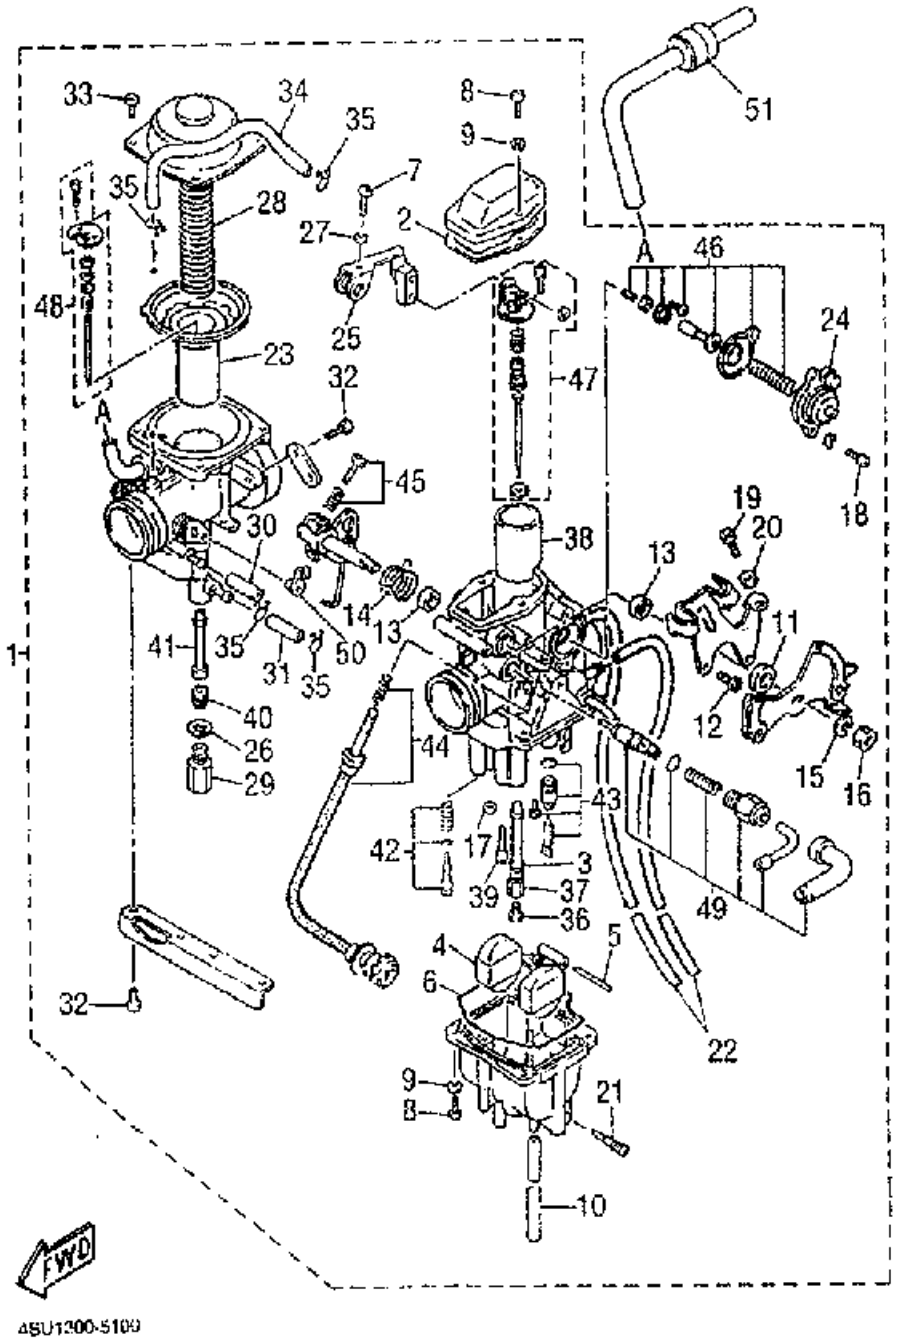


Ref No	Part No	Description
01	4SU-14301-00-00	Carburetor Assy 1
02	5Y1-14198-00-00	• . Gasket
03	360-24152-00-00	• . Gasket
04	2JN-14385-00-00	• . Float
05	689-14386-00-00	• . Pin, Float
06	5Y1-14384-00-00	• . Gasket, Float Chamber
07	98580-04015-00	• . Screw, Pan Head
08	98501-04014-00	• . Screw, Pan Head
09	92900-04100-00	• . Washer Spring
10	1VJ-14197-00-00	• . Pipe
11	1JK-14357-00-00	• . Collar
12	214-24535-00-00	• . Screw, Lever Fittng
13	5Y1-14572-00-00	• . Seal
14	1JK-14131-01-00	• . Spring, Throttle Valve
15	5Y1-14356-00-00	• . Washer, Spring
16	5Y1-14358-00-00	• . Nut
17	5Y1-14536-00-00	• . Gasket
18	98501-04010-00	• . Screw, Pan Head
19	5Y1-14216-00-00	• . Screw Pan Head
20	30X-14358-00-00	• . Nut
21	14T-14323-00-00	• . Screw, Air Adjusting
22	4SU-14149-00-00	• . Pipe
23	3YF-14940-00-00	• . Diaphragm Assy
24	2JN-14293-00-00	• . Cover 1
25	1JK-14291-00-00	• . Connector Comp.
26	3YF-14227-00-00	• . Washer
27	92990-04100-00	• . Washer, Spring
28	3YF-14286-00-00	• . Spring
29	3YF-14162-00-00	• . Bolt, Holding
30	5Y1-14349-00-00	• . Pipe
31	30X-14148-00-00	• . Pipe
32	98501-05010-00	• . Screw, Pan Head
33	98501-04010-00	• . Screw, Pan Head
34	367-14396-00-00	• . Pipe
35	5Y1-14159-00-00	• . Clip
36	288-14343-70-00	• . Jet, Main (140)
36	288-14343-65-00	• . Jet, Main (130)
36	288-14343-75-00	• . Jet, Main (150)
37	2KF-14341-00-00	• . Nozzle, Main
38	1JK-14312-60-00	• . Valve, Throttle 1
39	43F-14342-25-00	• . Jet, Pilot (50)
40	3YF-14343-83-00	• . Jet, Main (165)
41	3YF-14355-00-00	• . Nozzle, Main 2
42	30X-14105-00-00	• . Pilot Screw Set
43	2JN-14107-00-00	• . Needle Valve Set
44	4SU-1490K-00-00	• . Stop Screw Set
45	2NX-14103-00-00	• . Throttle Screw Set
46	1JK-1490A-00-00	• . Diaphragm Set, 1
47	4BW-1490J-10-00	• . Needle Set
48	3YF-1490J-00-00	• . Needle Set
49	1JK-1410A-03-00	• . Starter Set
50	661-41262-02-00	• . Joint, Choke Lever
51	4SU-14197-00-00	Pipe

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

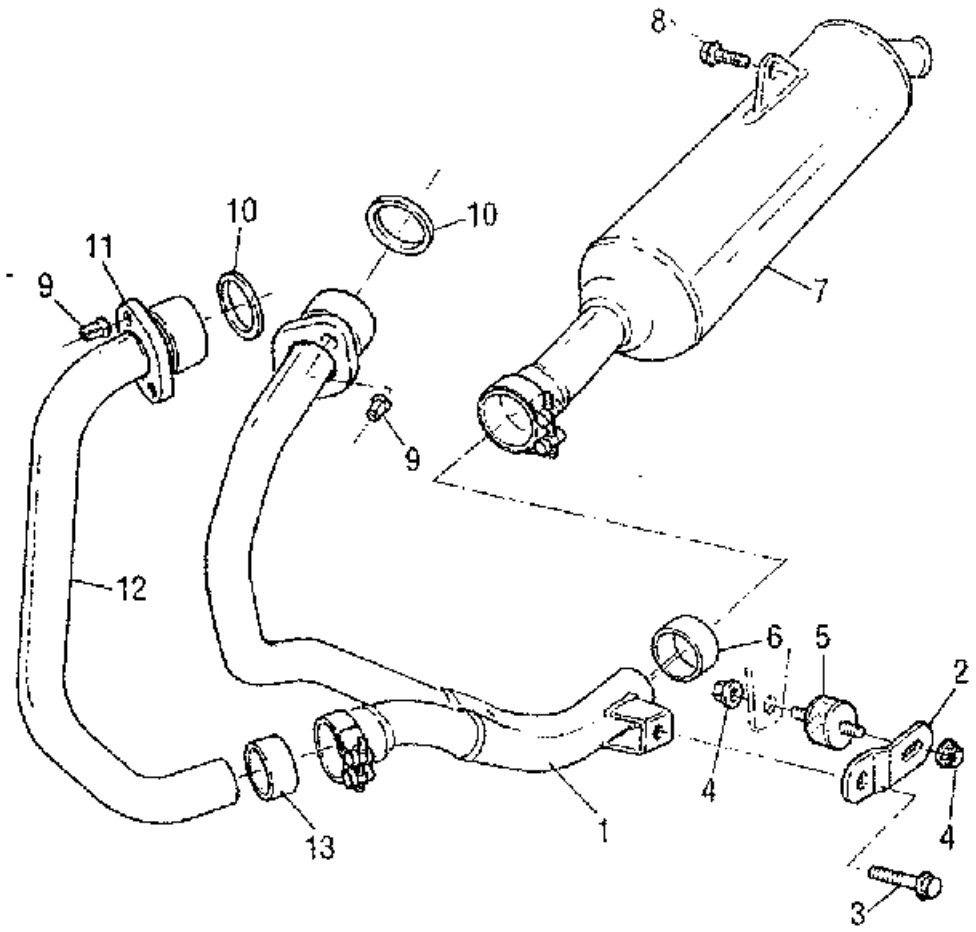


Ref No	Part No	Description
01	4SU-E4611-00-00	Pipe, Exhaust 1
02	4SU-E4744-00-00	Bracket Silencer Hold
03	9581L-08020-00	Bolt, Flange
04	4SU-E4713-00-00	Nut, Muffler Joint
05	4SU-E4747-00-00	Damper, Muffler
06	3YF-14755-00-00	Gasket Silencer
07	4SU-E4703-00-00	Muffler Comp. 1
08	9581L-10016-00	Bolt, Flange
09	90179-06668-00	Nut
10	3YF-14613-01-00	Gasket,exhaust Pipe
11	4GV-E4612-00-00	Nut, Ring
12	4SU-E4621-00-00	Pipe, Exhaust 2
13	3YF-14714-00-00	Gasket, Muffler

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

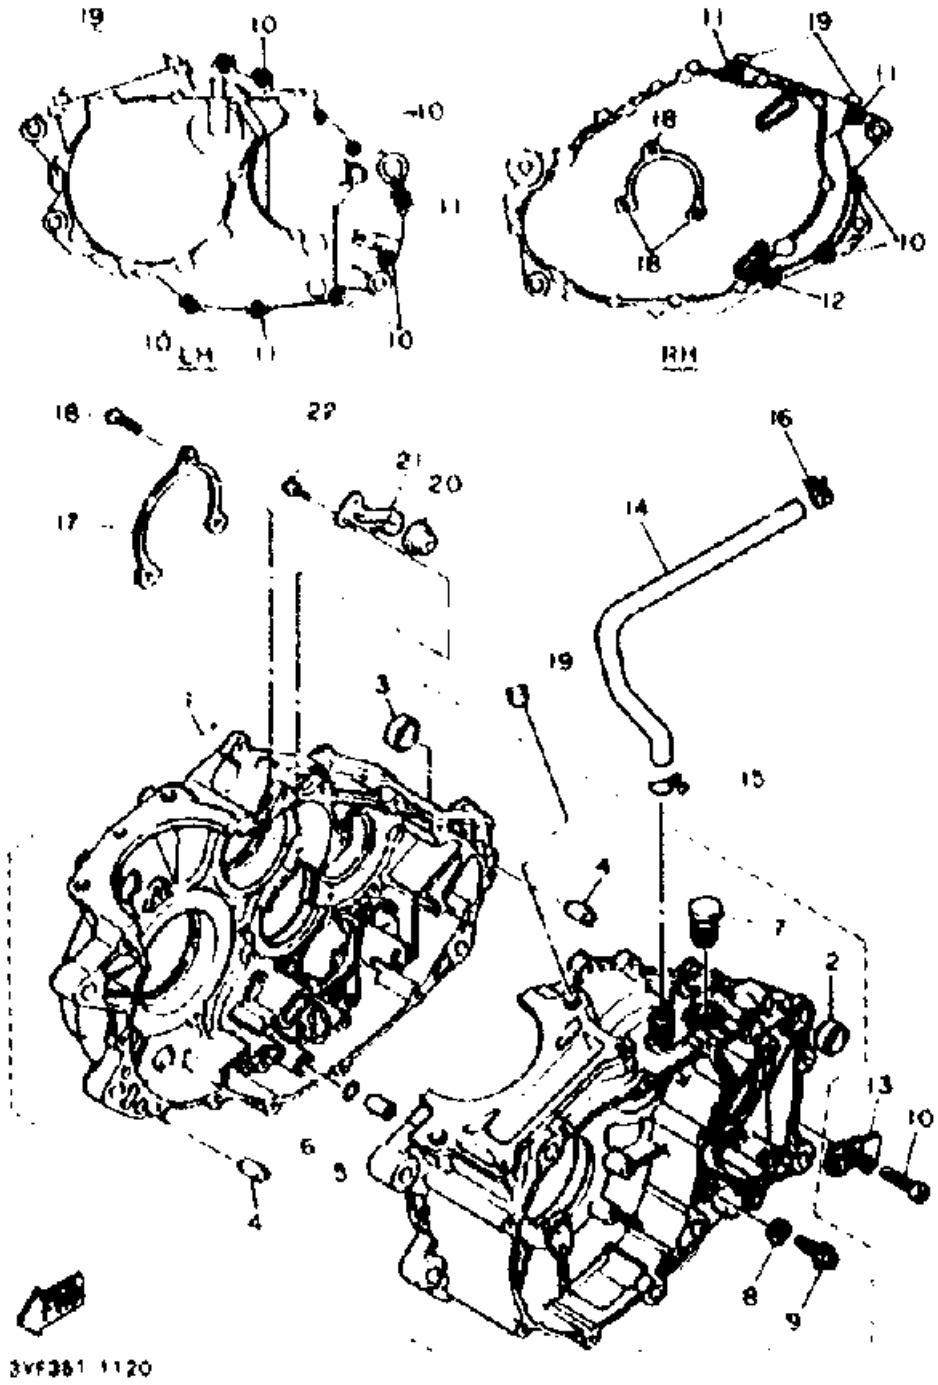


Ref No	Part No	Description
01	4SU-15100-00-00	Crankcase Assy
02	90560-11273-00	• . Spacer
03	90560-11272-00	• . Spacer
04	99510-12016-00	• . Pin, Dowel
05	99510-08016-00	• . Pin, Dowel
06	93210-07135-00	• . O-ring
07	3YF-15167-00-00	• . Plug, Blind 1
08	90201-08087-00	• . Washer, Plate
09	90149-08067-00	• . Screw
10	91317-06030-00	Bolt, Hexagon Socket Head
11	91317-06045-00	Bolt, Socket Head
12	91317-06060-00	Bolt
13	90465-08344-00	Clamp
14	3TB-11166-00-00	Pipe, Breather 1
15	90467-14015-00	Clip
16	90467-17842-00	Clip
17	5Y1-15383-00-00	Plate, Bearing Cover
18	98707-06012-00	Screw, Flat Head
19	99510-14016-00	Pin, Dowel
20	3Y6-15167-00-00	Plug, Blind 1
21	3Y6-15144-00-00	Plate, Lock
22	97017-06016-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

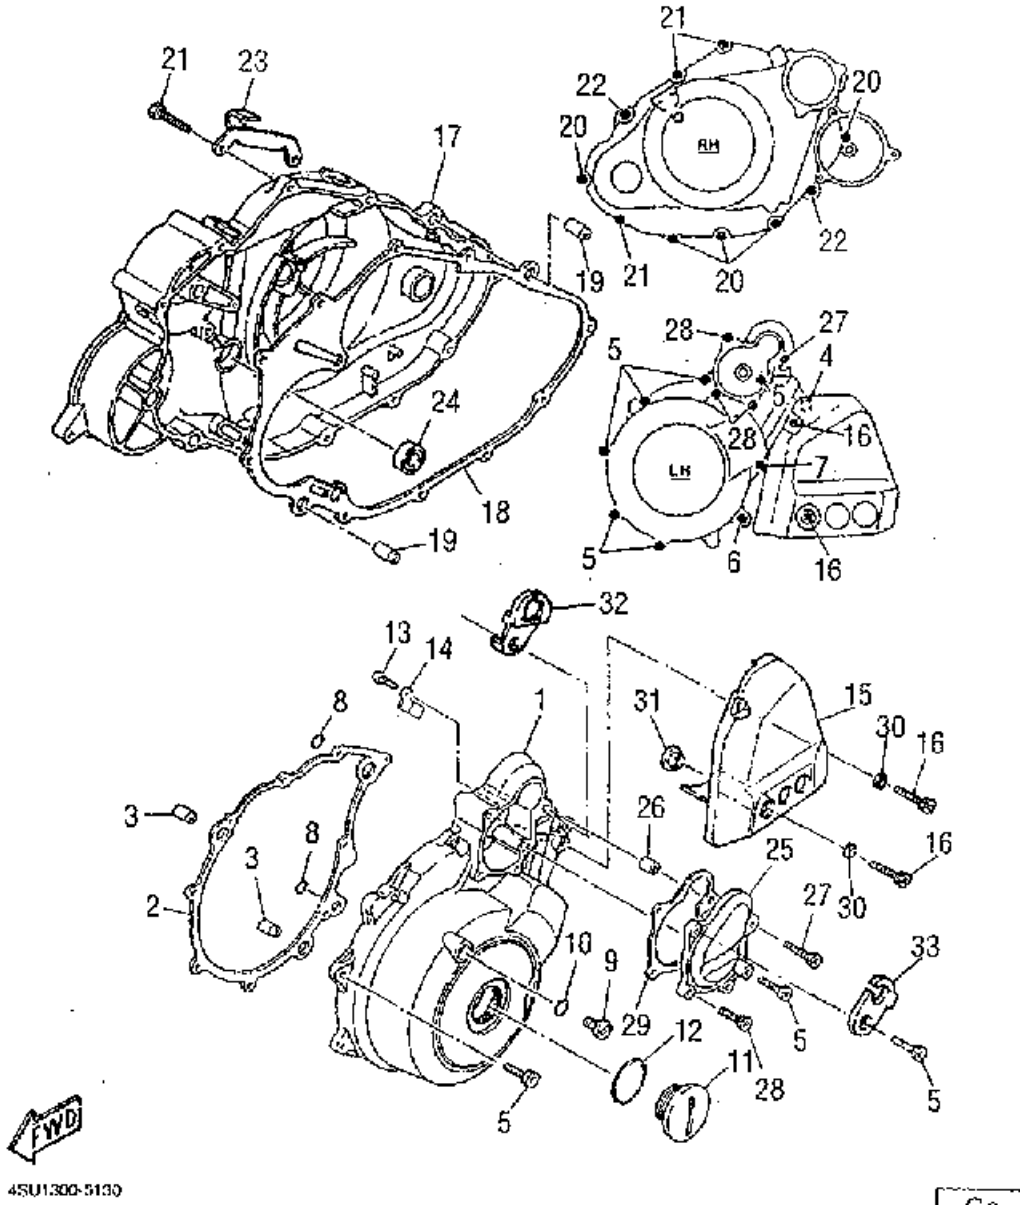


Ref No	Part No	Description
01	3TB-15411-01-00	Cover, Crankcase 1
02	4DW-15451-00-00	Gasket, Crankcase Cover 1
03	99510-12016-00	Pin, Dowel
04	91317-06035-00	Bolt, Hexagon Socket Head
05	91317-06025-00	Bolt
06	91317-06050-00	Bolt
07	91317-06050-00	Bolt
08	93210-13361-00	O-ring
09	90340-08M04-00	Plug, Straight Screw
10	90430-08143-00	Gasket
11	90340-36121-00	Plug, Straight Screw
12	93210-36510-00	O-ring
13	98507-06012-00	Screw, Pan Head
14	90462-16102-00	Clamp
15	4SU-E5421-00-00	Cover, Crankcase 2
16	9131M-06016-00	Bolt
17	3YF-15431-00-00	Cover, Crankcase 3
18	4DW-15462-00-00	Gasket, Crankcase Cover 3
19	99510-12016-00	Pin, Dowel
20	91317-06025-00	Bolt
21	91317-06030-00	Bolt, Hexagon Socket Head
22	91317-06035-00	Bolt, Hexagon Socket Head
23	3YF-15441-00-00	Holder, Clutch Cable
24	93101-14092-00	Oil Seal
25	3TB-15415-00-00	Cover, Generator
26	99510-08016-00	Pin, Dowel
27	91317-06035-00	Bolt, Hexagon Socket Head
28	91317-06025-00	Bolt
29	4DW-15455-00-00	Gasket 1
30	9290M-06600-00	Washer Plain
31	4SU-E5422-00-00	Bush
32	4SU-E4581-01-00	Bracket Choke
33	4SU-E4346-00-00	Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

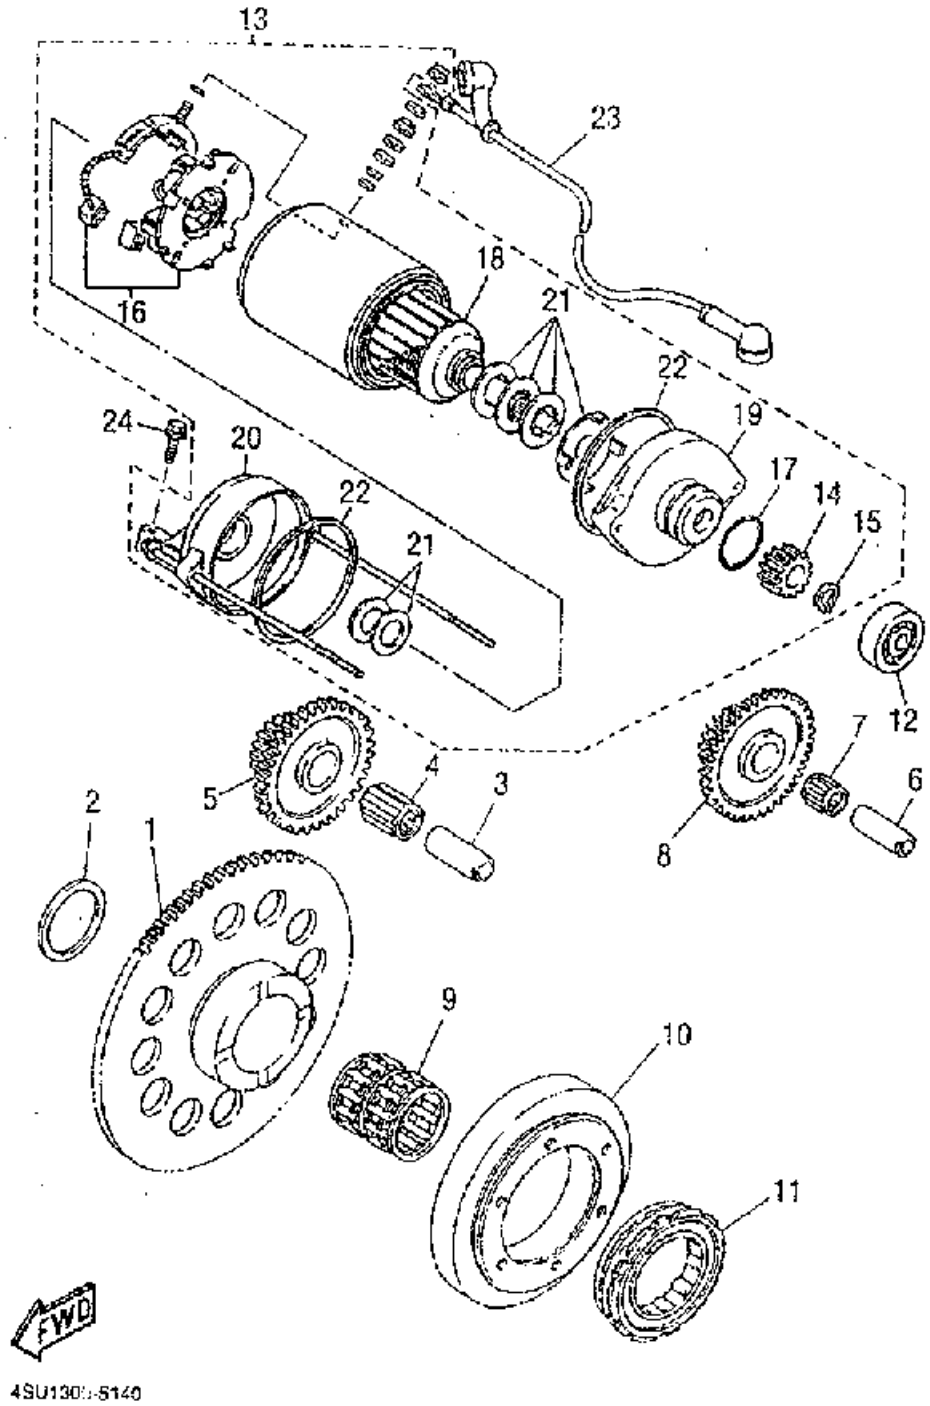


Ref No	Part No	Description
01	3YF-15515-00-00	Gear 3
02	90201-303P4-00	Washer, Plate
03	1VJ-15522-00-00	Shaft 2
04	93310-217R7-00	Bearing, Cylindrical
05	1VJ-15517-00-00	Gear, Idler 2
06	1VJ-15521-00-00	Shaft 1
07	93310-212R6-00	Bearing, Cylindrical
08	1VJ-15512-00-00	Gear, Idler 1
09	93310-53007-00	Bearing, Cylindrical
10	3TB-15590-01-00	Starter One-way Assy
11	3TB-15594-00-00	Race, One-way Bearing
12	93306-20006-00	Bearing (b6200)
13	4GV-81800-00-00	Starting Motor Assy
14	1VJ-15511-00-00	• . Gear, Starting Motor
15	93440-11024-00	• . Circlip
16	3AJ-81801-00-00	• . Brush Set
17	26H-81847-00-00	• . O-ring
18	3AJ-81850-00-00	• . Armature Assy
19	3AJ-81830-00-00	• . Front Bracket Assy
20	3AJ-81820-00-00	• . Rear Bracket Assy
21	3AJ-81809-00-00	• . Washer Kit
22	11H-81844-00-00	• . Gasket
23	4SU-H183G-00-00	Cord Comp.
24	95817-06030-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

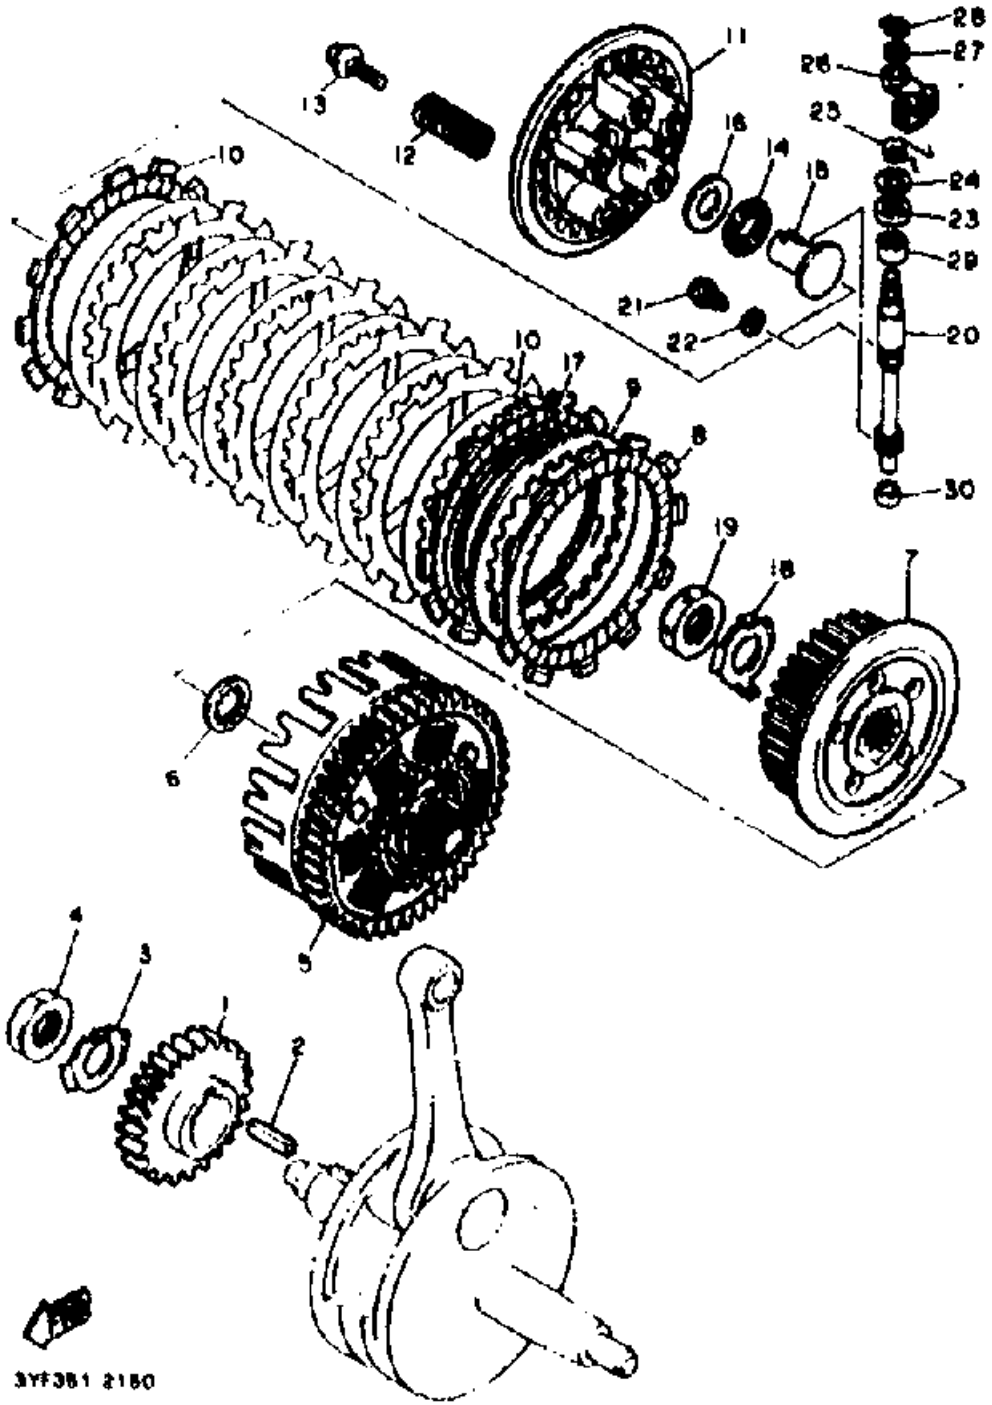


Ref No	Part No	Description
01	3AJ-16111-00-00	Gear, Primary Drive
02	90282-07042-00	Key, Straight
03	90215-20197-00	Washer, Lock
04	90170-20274-00	Nut
05	3AJ-16150-00-00	Primary Driven Gear Comp. (71t)
06	2JN-16154-00-00	Plate, Thrust 1
07	4PT-16371-00-00	Boss, Clutch
08	5Y1-16321-00-00	Plate, Friction
09	360-16325-00-00	Plate, Clutch 2
10	5Y1-16331-01-00	Plate, Friction 2
11	3YF-16351-00-00	Plate, Pressure 1
12	90501-23142-00	Spring, Compression
13	90159-06092-00	Screw, With Washer
14	93340-21505-00	Bearing, Thrust
15	4H7-16356-01-00	Rod, Push 1
16	90201-150H2-00	Washer, Plate
17	5Y1-16383-00-00	Spring, Clutch Boss
18	90215-20231-00	Washer, Lock
19	90170-20327-00	Nut
20	3JD-16382-00-00	Axle, Push Lever
21	90109-06778-00	Bolt
22	90430-06014-00	Gasket
23	93102-15212-00	Oil Seal
24	90201-15785-00	Washer, Plate
25	90508-14767-00	Spring, Torsion
26	3YF-16340-01-00	Push Lever Assy
27	90201-10119-00	Washer, Plate
28	99009-10400-00	Circlip
29	93315-31502-00	Bearing, Cylindrical
30	93315-10838-00	Bearing, Cylindrical

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

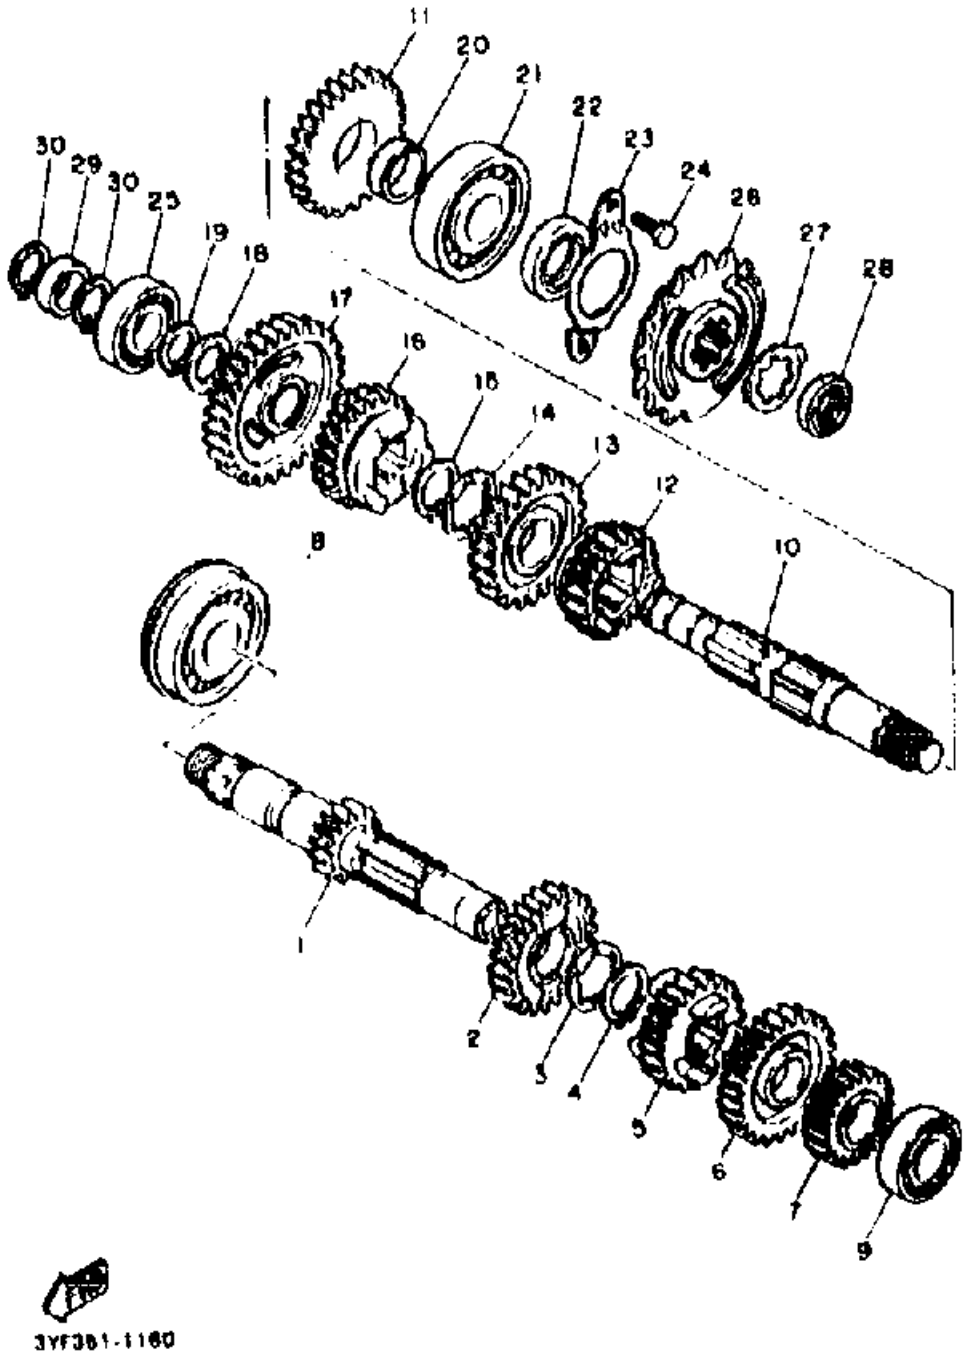

Ref No	Part No	Description
01	4SU-17401-00-00	Main Axle Assy (13t)
02	34K-17141-00-00	Gear, 4th Pinion (22t)
03	90209-22191-00	Washer
04	93440-25084-00	Circlip
05	1VJ-17131-00-00	Gear, 3rd Pinion (20t)
06	3YF-17151-01-00	Gear, 5th Pinion (24t)
07	34K-17121-01-00	Gear, 2nd Pinion (17t)
08	93306-30540-00	Bearing (6305nrx1c3)
09	93306-00431-00	Bearing
10	3YF-17402-00-00	Drive Axle Sub-assy (22t)
11	2JT-17221-00-00	Gear, 2nd Wheel (27t)
12	3YF-17251-01-00	Gear, 5th Wheel (19t)
13	1VJ-17231-00-00	Gear, 3rd Wheel (24t)
14	90209-22191-00	Washer
15	93440-25084-00	Circlip
16	55U-17241-00-00	Gear, 4th Wheel (22t)
17	34K-17211-00-00	Gear, 1st Wheel (30t)
18	90201-20276-00	Washer, Plate
19	99009-20400-00	Circlip
20	3YF-17439-00-00	Spacer
21	93306-30535-00	Bearing
22	93102-25226-00	Oil Seal
23	5Y1-17471-00-00	Plate, Cover
24	97027-06014-00	Bolt
25	93306-00426-00	Bearing
26	99999-01798-00	Sprocket, Drive (15t) (15t)
27	90215-23265-00	Washer, Lock
28	90179-18552-00	Nut
29	90560-20199-00	Spacer
30	99009-20400-00	Circlip


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

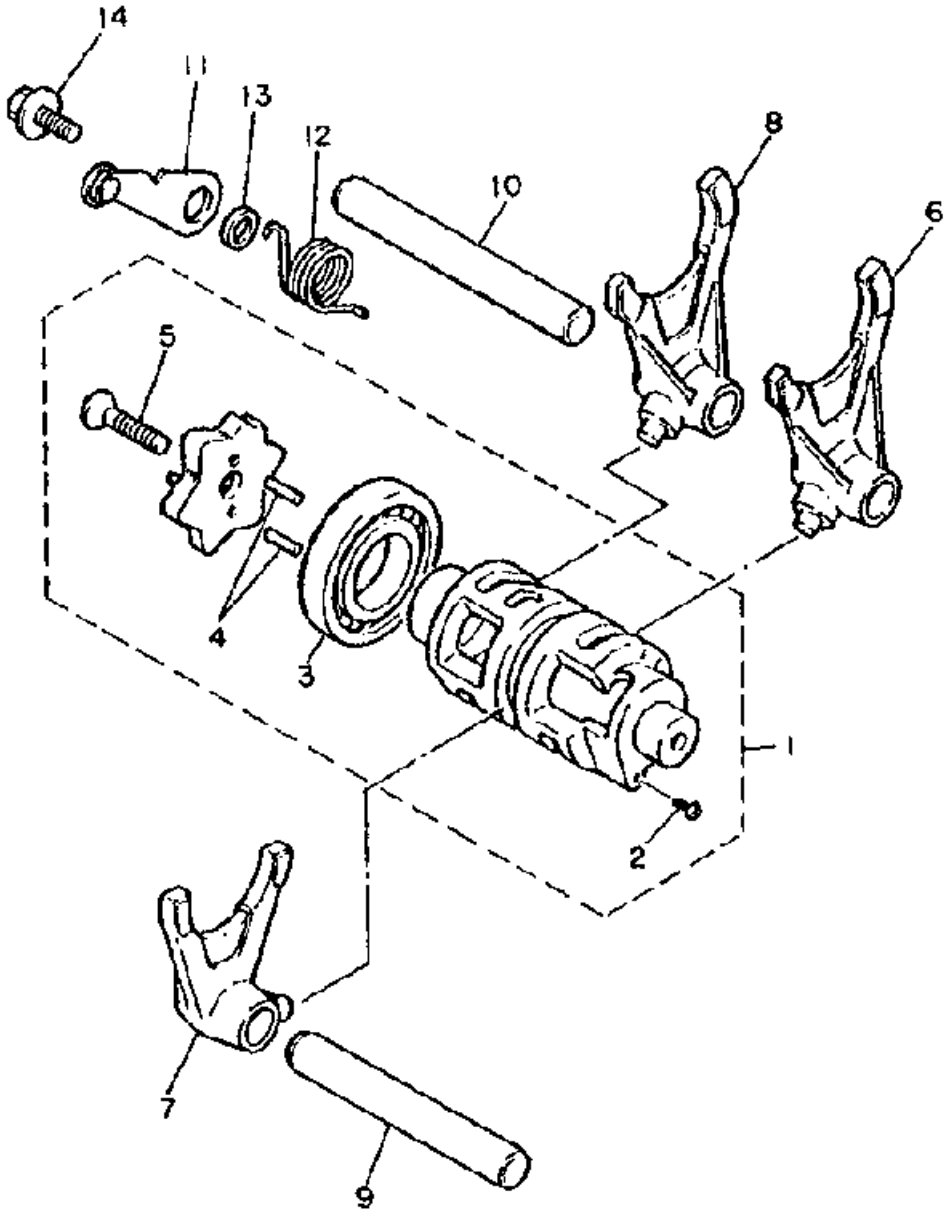

2KF300-7150

Ref No	Part No	Description
01	3YF-18540-00-00	Shift Cam Assy
02	136-18542-00-00	• . Point, Neutral
03	93316-00501-00	• . Bearing, Cylindrical
04	93604-10011-00	• . Pin, Dowel
05	90151-06017-00	• . Screw, Countersunk
06	4PT-18511-00-00	Fork, Shift 1
07	4PT-18512-00-00	Fork, Shift 2
08	4PT-18513-00-00	Fork, Shift 3
09	3YF-18531-00-00	Bar, Shift Fork Guide 1
10	3XV-18535-00-00	Bar, Shift Fork Guide 2
11	2KF-18140-00-00	Stopper Lever Assy
12	90508-26691-00	Spring, Torsion
13	90387-063F7-00	Collar
14	90159-06078-00	Screw, With Washer


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

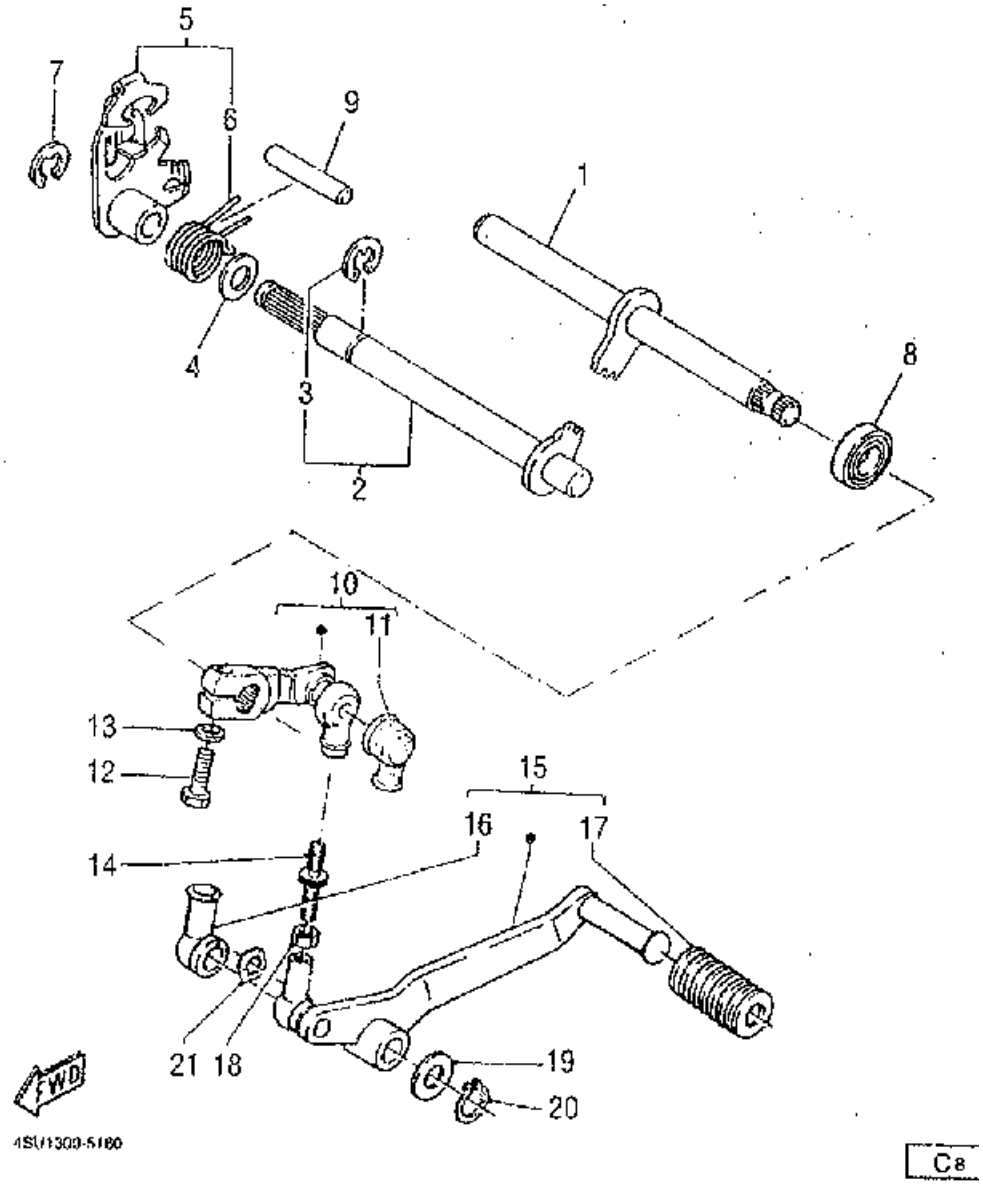

C8

Ref No	Part No	Description
01	43F-18102-02-00	Shift Shaft Assy 2
02	5Y1-18101-02-00	Shift Shaft Assy
03	99006-10600-00	• . Circlip
04	90201-12474-00	Washer, Plate
05	34K-18120-00-00	Shift Lever Assy
06	90508-29629-00	• . Spring, Torsion
07	99001-09600-00	Circlip
08	93102-12106-00	Oil Seal (sd 12-22-5 Hs)
09	93608-33046-00	Pin, Dowel
10	4SU-E8130-01-00	Shift Shaft Assy
11	2H9-18154-00-00	• . Cover, Dust
12	9701L-06025-00	Bolt
13	9290L-06600-00	Washer
14	4DL-E8115-00-00	Rod, Shift
15	4SU-E8110-00-00	Shift Pedal Assy
16	2H9-18154-00-00	• . Cover, Dust
17	4DL-E8113-00-00	• . Cover, Shift Pedal
18	9530L-06700-00	Nut
19	90201-124E4-00	Washer, Plate
20	99009-12400-00	Circlip
21	90206-12074-00	Washer, Wave


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

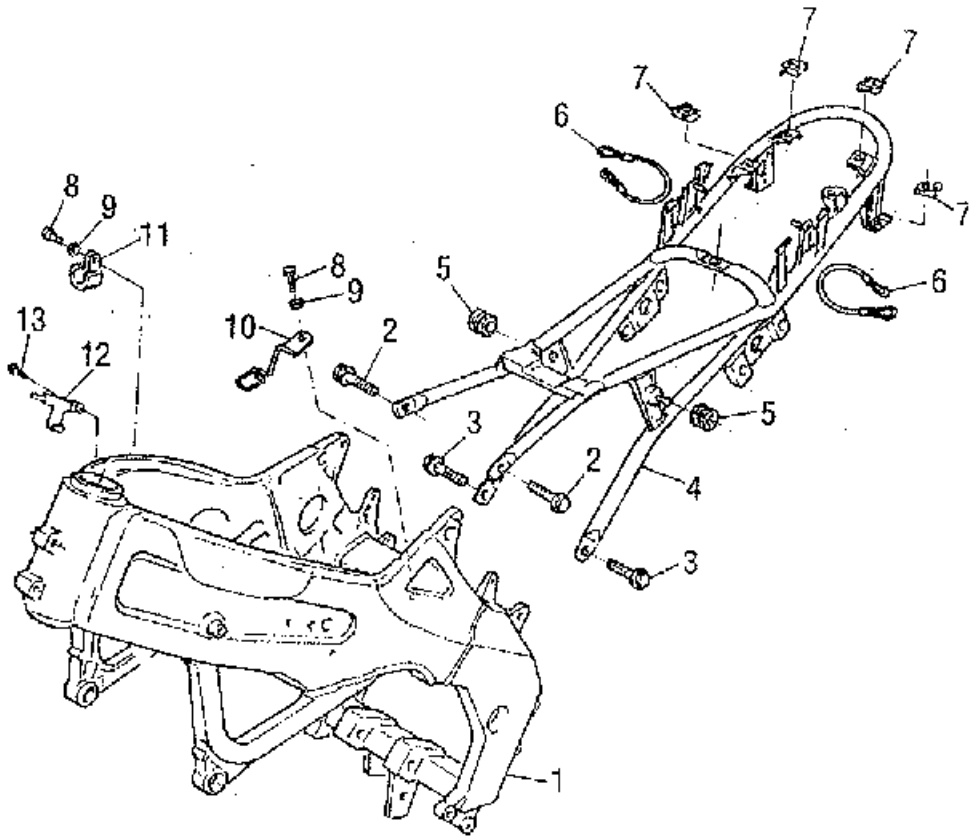

Ref No	Part No	Description
01	4SU-WF111-00-3H	Frame, Compl.
01	4SU-WF111-00-P0	Frame Compl.
02	9581L-08030-00	Bolt, Flange
03	9581L-10025-00	Bolt, Flange
04	4SU-F1190-00-33	Rear Frame Comp.
05	90480-12325-00	Grommet
06	4SU-F473J-00-00	Wire
07	2VW-F1736-00-00	Nut,plate
08	9700L-06020-00	Bolt
09	9290L-06600-00	Washer Plain
10	4DL-F1163-00-00	Holder, Clutch Cable
11	4SU-F1162-00-00	Holder, Cable
12	4SU-F1161-00-00	Holder, Cable
13	9201M-06020-00	Bolt, Button Head

C9

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

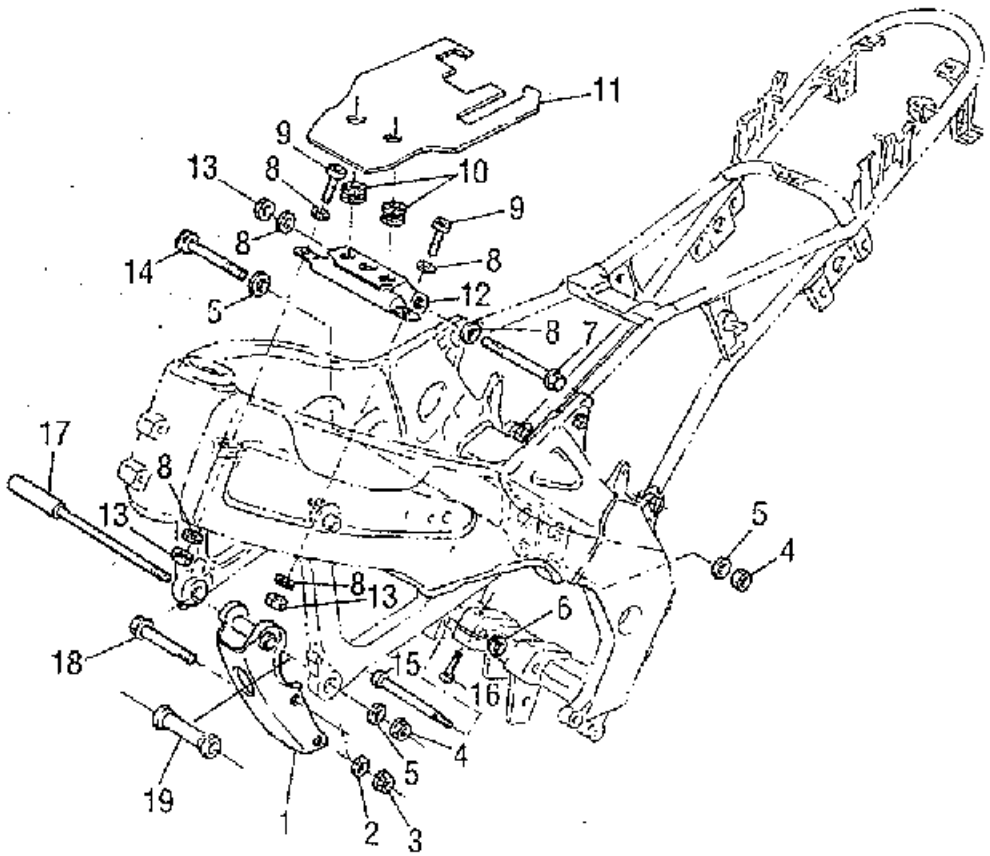


FWD


4SU130C-5200

C 10

Ref No	Part No	Description
01	4SU-F1316-00-3H	Stay, Engine 3
01	4SU-F1316-00-00	Stay, Engine 3
02	9290L-10200-00	Washer
03	90185-10060-00	Nut, Self-locking
04	90185-10060-00	Nut, Self-locking
05	9290L-10200-00	Washer
06	4SU-F142A-00-00	Boss, Engine Mount
07	9131L-10100-00	Bolt
08	9290L-10200-00	Washer
09	9131L-10035-00	Bolt Hex. Socket Head
10	90480-15363-00	Grommet
11	4SU-F172A-00-00	Panel 1
12	4SU-F1315-00-00	Stay, Engine 2
13	90185-10060-00	Nut, Self-locking
14	9131L-10100-00	Bolt Hex.socket Head
15	4SU-F1482-00-00	Bolt, Engine Mounting 2
16	9131L-06025-00	Bolt
17	4SU-F1481-00-00	Bolt, Engine Mounting 1
18	90105-10858-00	Bolt, Washer Based
19	4SU-F1464-00-00	Boss, Engine Mount

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

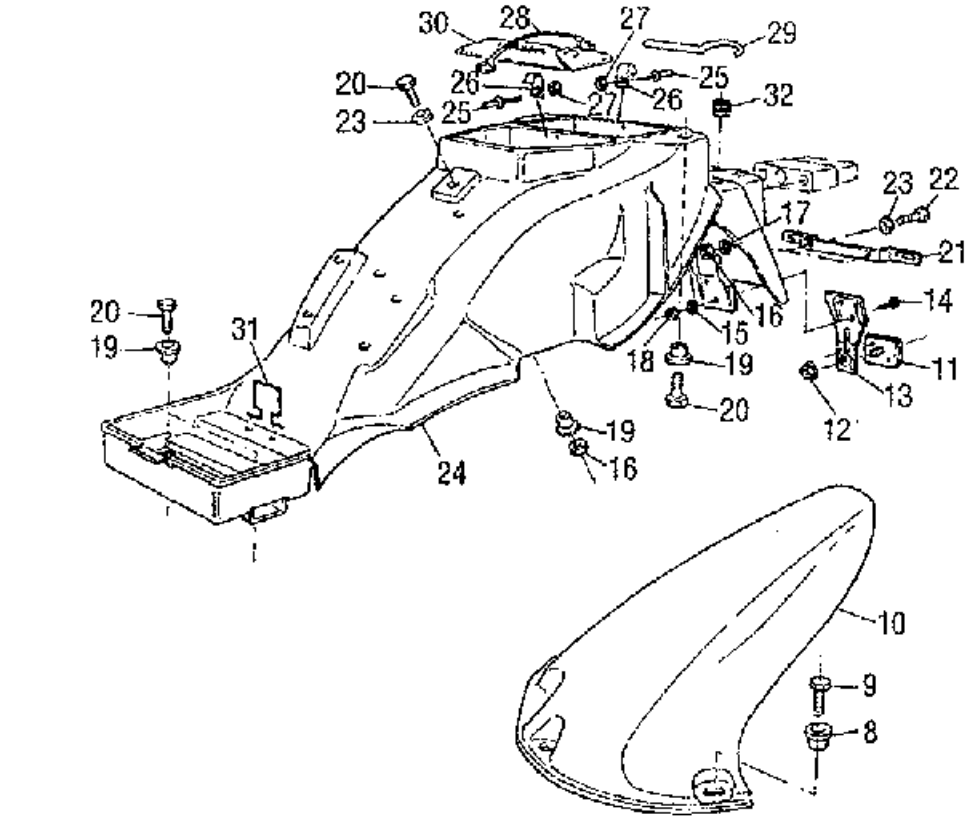


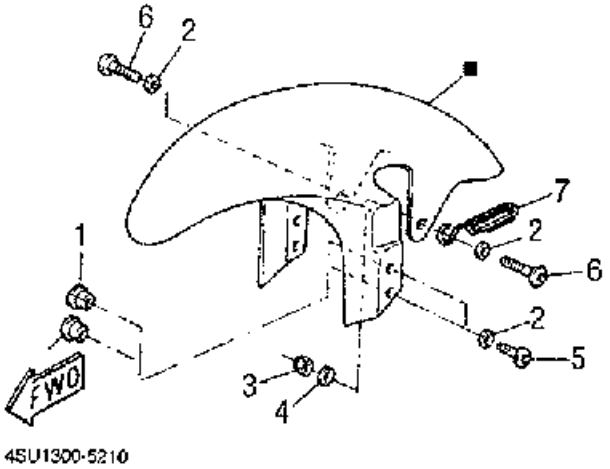

4SU1300-5210


Ref No	Part No	Description
01	90387-062M9-00	Collar
02	9290L-06600-00	Washer Plain
03	90185-06837-00	Nut, Self-locking
04	9290L-06600-00	Washer Plain
05	9201L-06016-00	Bolt, Button Head
06	9201L-06045-00	Bolt, Button Head
07	4SU-F1518-00-00	Holder, Cable
08	90387-062M9-00	Collar
09	9701L-06020-00	Bolt Hex.
10	4DL-F1650-01-00	Rear Fender Comp.
11	4GV-H5130-00-00	Rear Reflector Assy
12	90185-06830-00	Nut, Self-locking
13	4SU-H5132-00-00	Bracket, Reflector 1
14	9201M-05012-00	Bolt, Button Head
15	9290M-05600-00	Washer Plain
16	90185-06837-00	Nut, Self-locking
17	9290L-06200-00	Washer Plain
18	9570L-05300-00	Nut, Nylon
19	90387-062M9-00	Collar
20	9701L-06016-00	Bolt Hex
21	3SH-H4551-00-00	Bracket, Licence
22	9701M-06014-00	Bolt Hex.
23	9290M-06600-00	Washer Plain
24	4SU-F1611-00-00	Fender, Rear
25	90267-32018-00	Rivet, Blind Blind
26	4DL-F1945-00-00	Bracket, Tool Box Fitting
27	9290L-03600-00	Washer Plain
28	4DL-F846G-00-00	Band, 1
29	4GV-F8135-00-00	Spanner, Special
30	4SU-F8100-00-00	Tool Kit
31	4SU-F175R-00-00	Hook, Band
32	90480-12486-00	Grommet

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

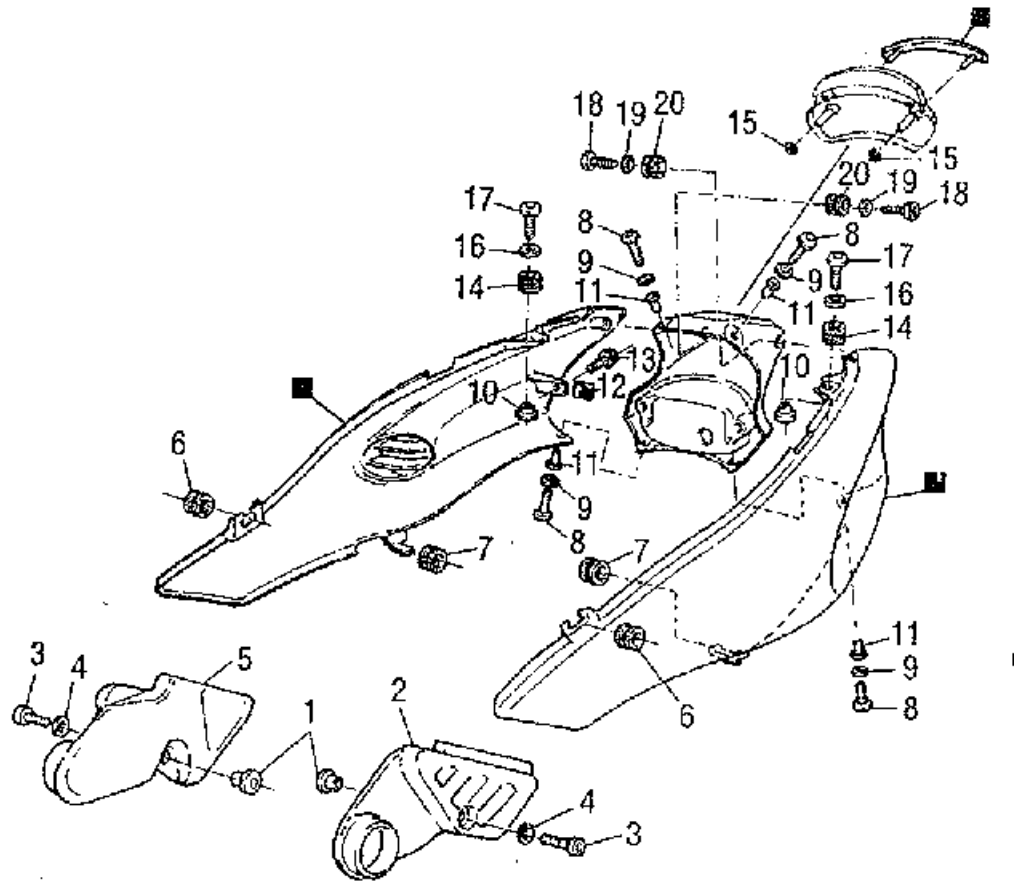


Ref No	Part No	Description
01	90387-068L1-00	Collar
02	4SU-F1731-00-00	Cover, Side 3
03	9201M-06020-00	Bolt, Button Head
04	9290M-06600-00	Washer Plain
05	4SU-F1741-00-00	Cover, Side 4
06	90480-12325-00	Grommet
07	90480-14865-00	Grommet
08	9201M-05016-00	Bolt, Button Head
09	90202-05088-00	Washer, Plate
10	90387-06900-00	Collar
11	90179-05523-00	Nut
12	2VW-F1736-00-00	Nut,plate
13	9131L-06014-00	Bolt Hex.socket Head
14	90480-12846-00	Grommet
15	3BT-F1715-00-00	Washer, Special 1
16	9290M-06200-00	Washer Plain
17	9201M-06020-00	Bolt, Button Head
18	4SU-F1712-00-00	Bolt, Side Cover
19	9290L-08600-00	Washer Plain
20	90480-14865-00	Grommet

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

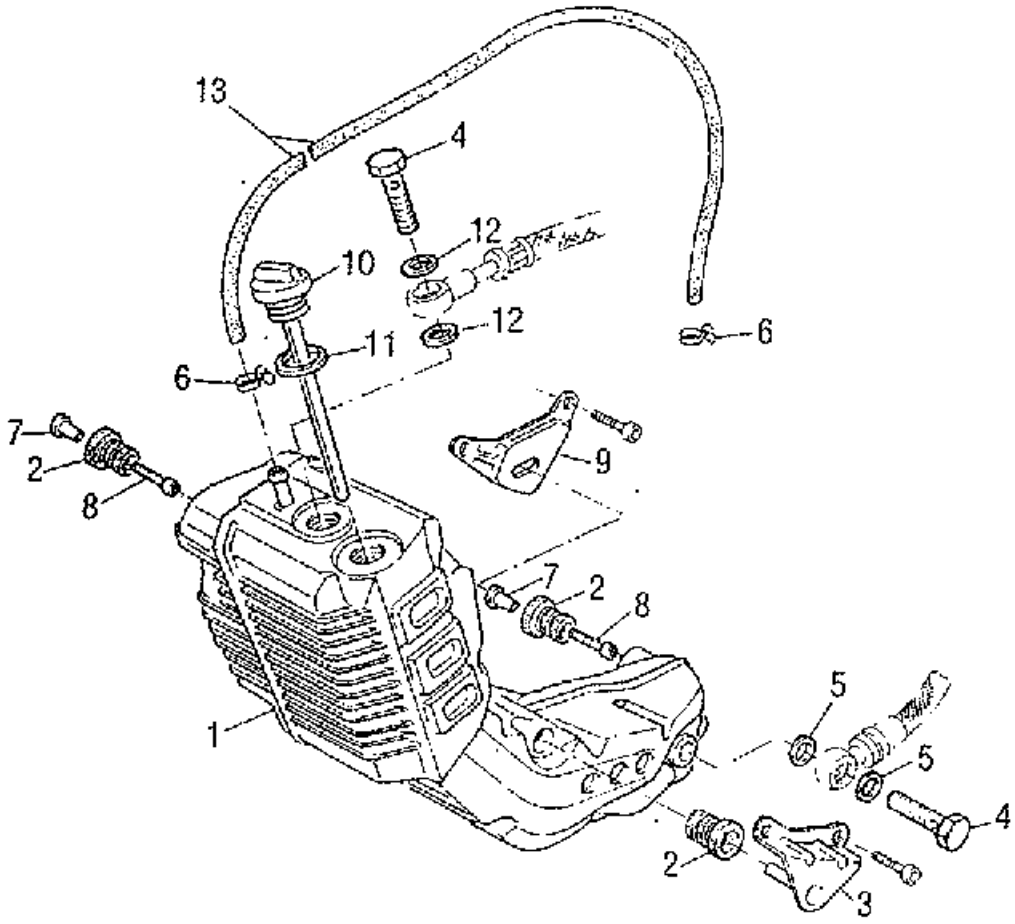

Ref No	Part No	Description
01	4SU-F1750-00-WN	Oil Tank Assy
02	4SU-F1773-00-00	Grommet
03	4SU-F172E-00-00	Stay, Side Cover 1
04	4SU-F2255-01-00	Hose, Joint
05	90201-128H5-00	Washer, Plate
06	90467-12835-00	Clip
07	4SU-F1749-00-00	Collar
08	9131M-06025-00	Bolt Socket
09	4SU-F174E-00-00	Stay, Side Cover 2
10	4SU-F1761-00-00	Gauge, Level
11	93210-218D5-00	O-ring
12	90201-128H5-00	Washer, Plate
13	4SU-F1745-00-00	Pipe, Oil Tank Breather

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

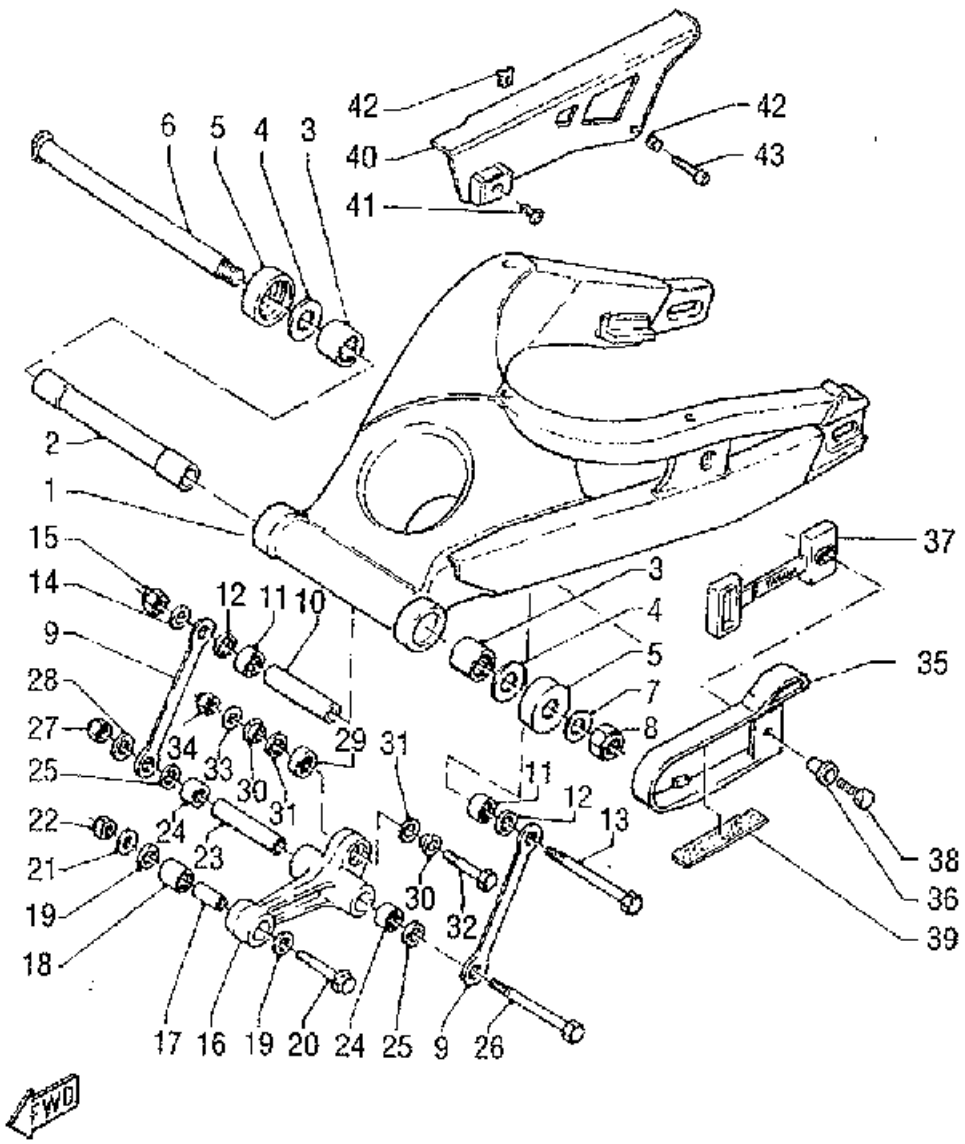


4SU1300-5240

Ref No	Part No	Description
02	4SU-F2184-00-00	Bush
03	93317-52865-00	Bearing, Cylindrical
04	3GM-22127-00-00	Shim
05	3GM-22128-00-00	Cover, Thrust 1
06	4SU-F2141-01-00	Shaft, Pivot
07	90201-18264-00	Washer, Plate
08	90185-18104-00	Nut, Self-locking
09	4DL-F217M-00-00	Arm 1
10	90387-122R5-00	Collar
11	93317-21746-00	Bearing, Cylindrical
12	93109-17048-00	Oil Seal
13	90101-10658-00	Bolt
14	90201-101J1-00	Washer, Plate
15	95617-10100-00	Nut, U
16	4SU-F217A-00-00	Arm, Relay
17	90387-102R4-00	Collar
18	93317-31701-00	Bearing, Cylindrical
19	93109-17048-00	Oil Seal
20	90105-10376-00	Bolt, Washer Based
21	90201-102J5-00	Washer, Plate
22	95617-10100-00	Nut, U
23	90387-122R5-00	Collar
24	93317-21746-00	Bearing, Cylindrical
25	93109-17048-00	Oil Seal
26	90101-10658-00	Bolt
27	95617-10100-00	Nut, U
28	90201-101J1-00	Washer, Plate
29	93399-99919-00	Bearing
30	90387-124W2-00	Collar
31	93101-16131-00	Oil Seal
32	90101-10659-00	Bolt
33	90201-101J1-00	Washer, Plate
34	95617-10100-00	Nut, U
35	4DL-F2151-00-00	Seal, Guard
36	90387-068L5-00	Collar
37	4SU-F2167-00-00	Guide
38	9701L-06030-00	Bolt Hex.
39	4DL-F214F-00-00	Damper 1
40	4DL-F2311-00-00	Case, Chain
41	90111-06806-00	Bolt Hex. Socket
42	2VW-F1736-00-00	Nut,plate
43	9131M-06025-00	Bolt Hex. Socket

C 14


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

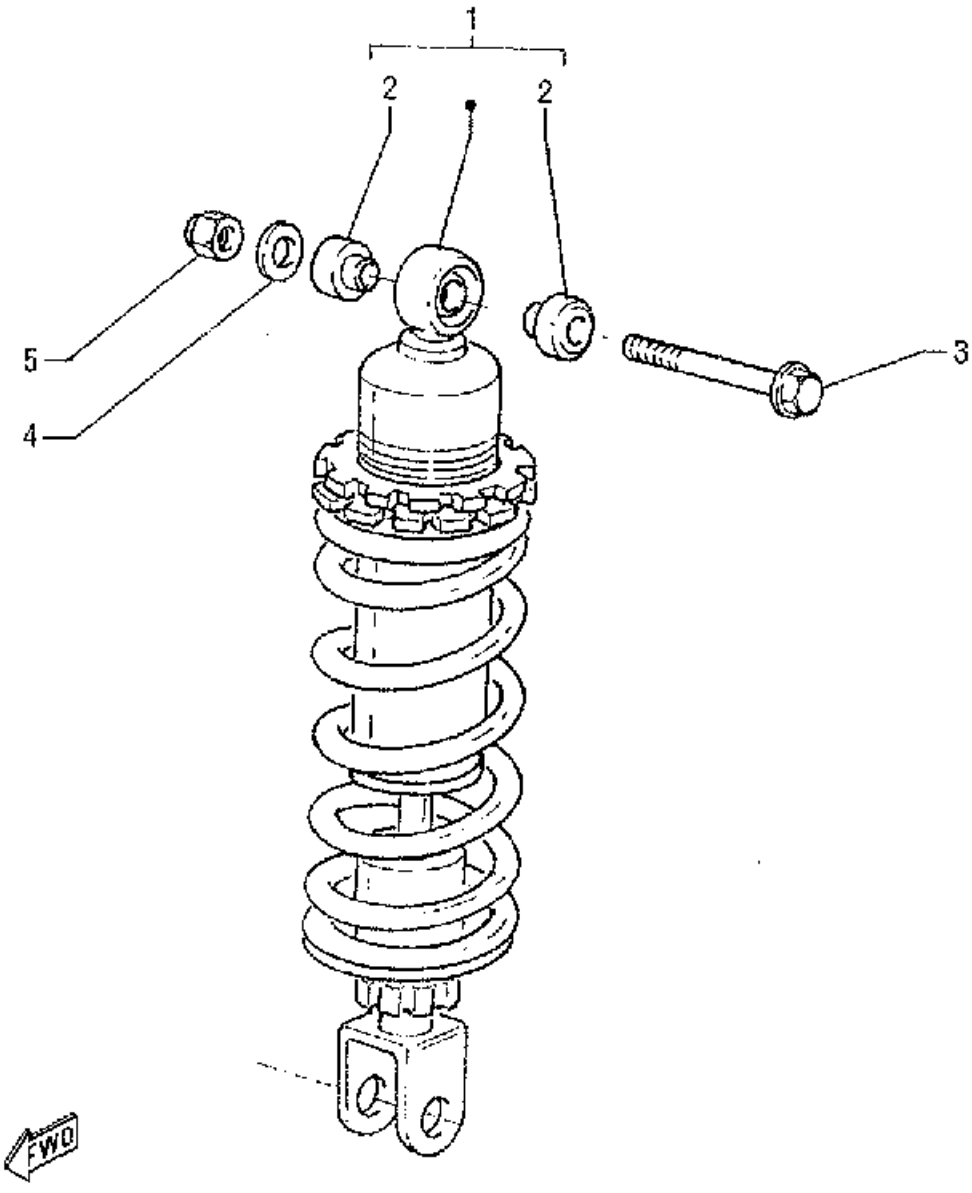

D2


Ref No	Part No	Description
01	4SU-F2210-00-00	Shock Absorber Assy, Rear
02	4SU-F2253-00-00	• . Collar
03	90105-10609-00	Bolt, Washer Based
04	90201-101J1-00	Washer, Plate
05	95617-10100-00	Nut, U

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

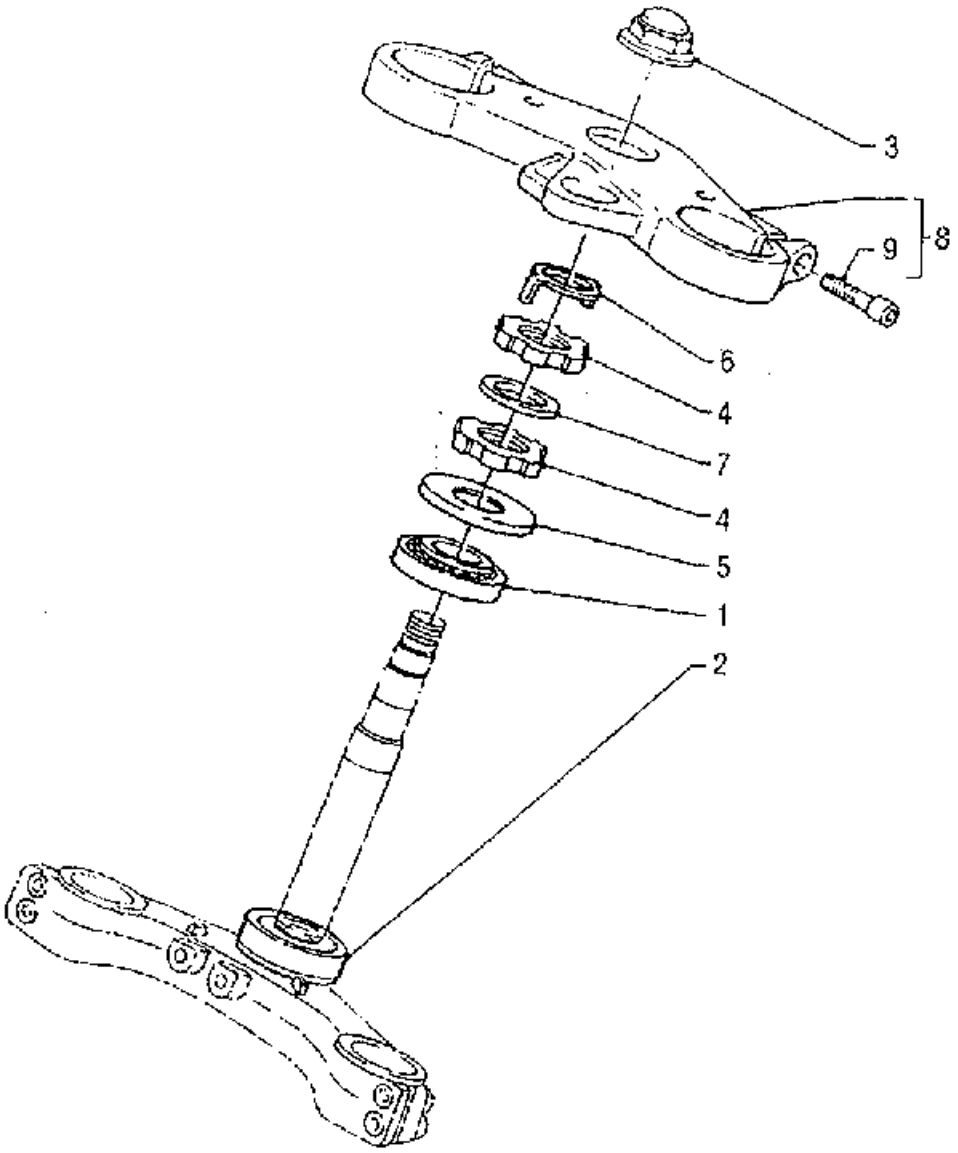


Ref No	Part No	Description
01	93332-00001-00	Bearing
02	93332-000Y1-00	Bearing
03	90176-22050-00	Nut, Crown
04	90179-25033-00	Nut
05	3EN-23415-00-00	Cover, Ball Race 1
06	26H-23418-01-00	Washer, Special
07	90202-26142-00	Washer, Plate
08	4SU-F3435-00-00	Crown, Handle
09	9131L-08030-00	• . Bolt Hex. Socket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

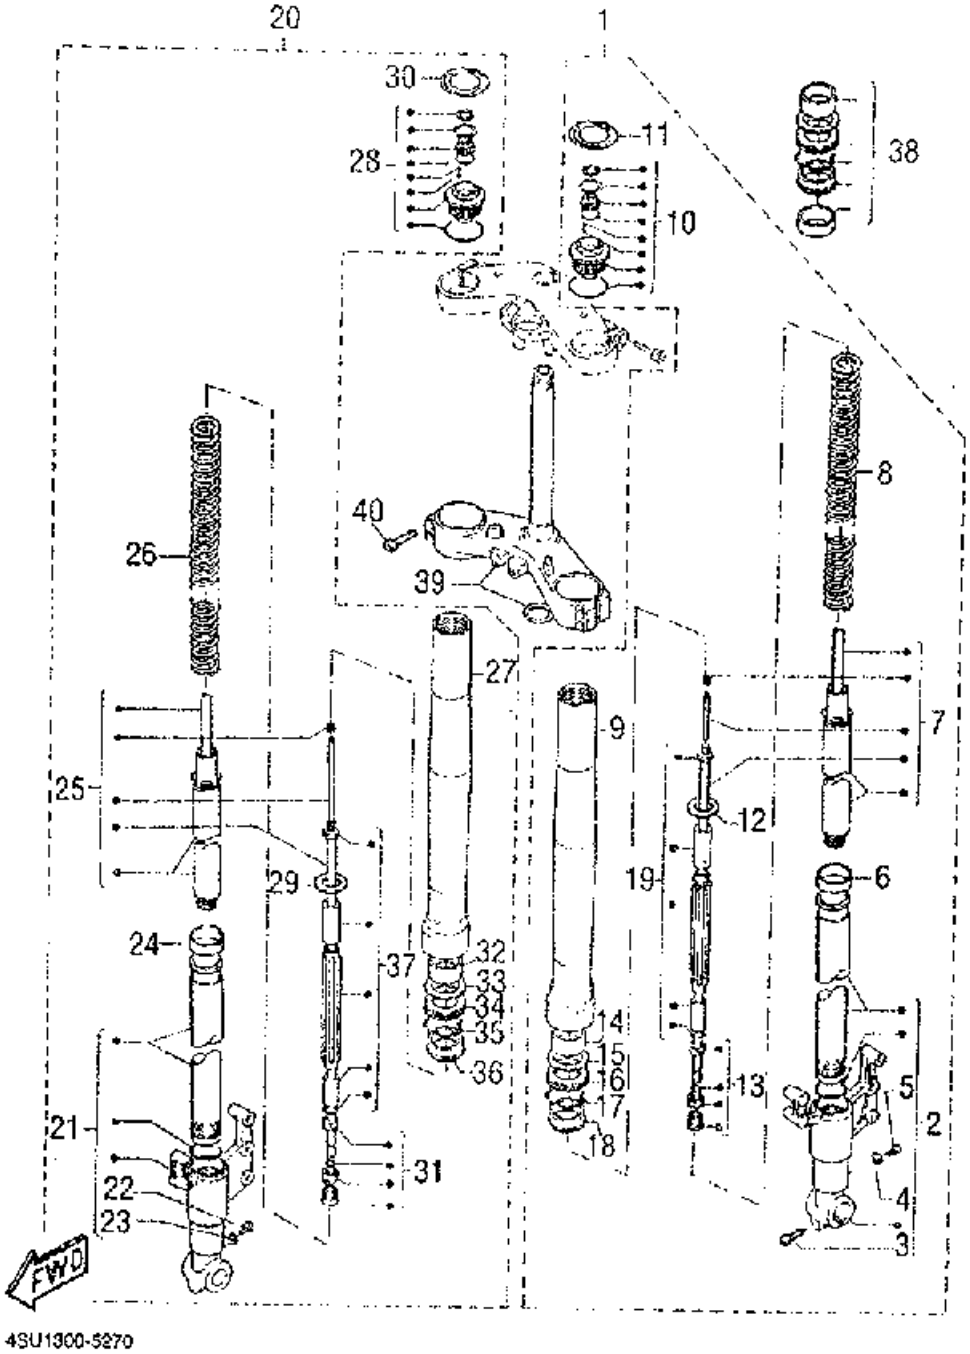


Ref No	Part No	Description
01	4SU-F3102-00-00	Front Fork Assy (l.h)
02	4SU-F3110-00-00	• . Inner Tube Comp.1
03	9131L-08030-00	• . Bolt Hex. Socket
04	3HL-F3129-00-00	• . Gasket
05	9890L-06008-00	• . Screw, Bind Head
06	3SH-F3173-00-00	• . Metal, Slide 2
07	4SU-F3170-00-00	• . Cylinder, Compl.
08	4SU-F3141-00-00	• . Spring, 1
09	4DL-F3136-00-00	• . Tube, Outer (right)
10	4SU-F3111-00-00	• . Bolt, Cap
11	4SU-F3198-00-00	• . Label, Caution 1
12	4SU-F3143-00-00	• . Sheet, Spring Und.
13	4GV-F319K-00-00	• . Plunger Set
14	3SH-F3125-00-00	• . Metal, Slide 1
15	3NC-F3146-00-00	• . Washer, Oil Seal
16	3NC-F3145-00-00	• . Oil Seal
17	3NC-F3156-00-00	• . Clip, Oil Seal
18	3SH-F3144-00-00	• . Seal, Dust
19	4SU-F3142-00-00	• . Seat, Spring Upper
20	4SU-F3103-00-00	Damper,assy Rh.
21	4SU-F3120-00-00	• . Inner Tube Comp.2
22	9890L-06008-00	• . Screw, Bind Head
23	3HL-F3129-00-00	• . Gasket
24	3SH-F3173-00-00	• . Metal, Slide 2
25	4SU-F3170-10-00	• . Cylinder Compl.
26	4SU-F3141-00-00	• . Spring, 1
27	4DL-F3136-00-00	• . Tube, Outer (right)
28	4SU-F3111-00-00	• . Bolt, Cap
29	4SU-F3143-00-00	• . Seat, Spring Lower
30	4SU-F3199-00-00	• . Label, Caution 2
31	4GV-F319K-00-00	• . Plunger Set
32	3SH-F3125-00-00	• . Metal, Slide 1
33	3NC-F3146-00-00	• . Washer, Oil Seal
34	3NC-F3145-00-00	• . Oil Seal
35	3NC-F3156-00-00	• . Clip, Oil Seal
36	3SH-F3144-00-00	• . Seal, Dust
37	4SU-F3142-00-00	• . Seat, Spring Upper
38	4DL-F3114-00-00	• . Gasket & Du Set
39	4DL-F3340-00-00	• . Under Bracket Comp.
40	9131L-08035-00	• . Bolt Hex. Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

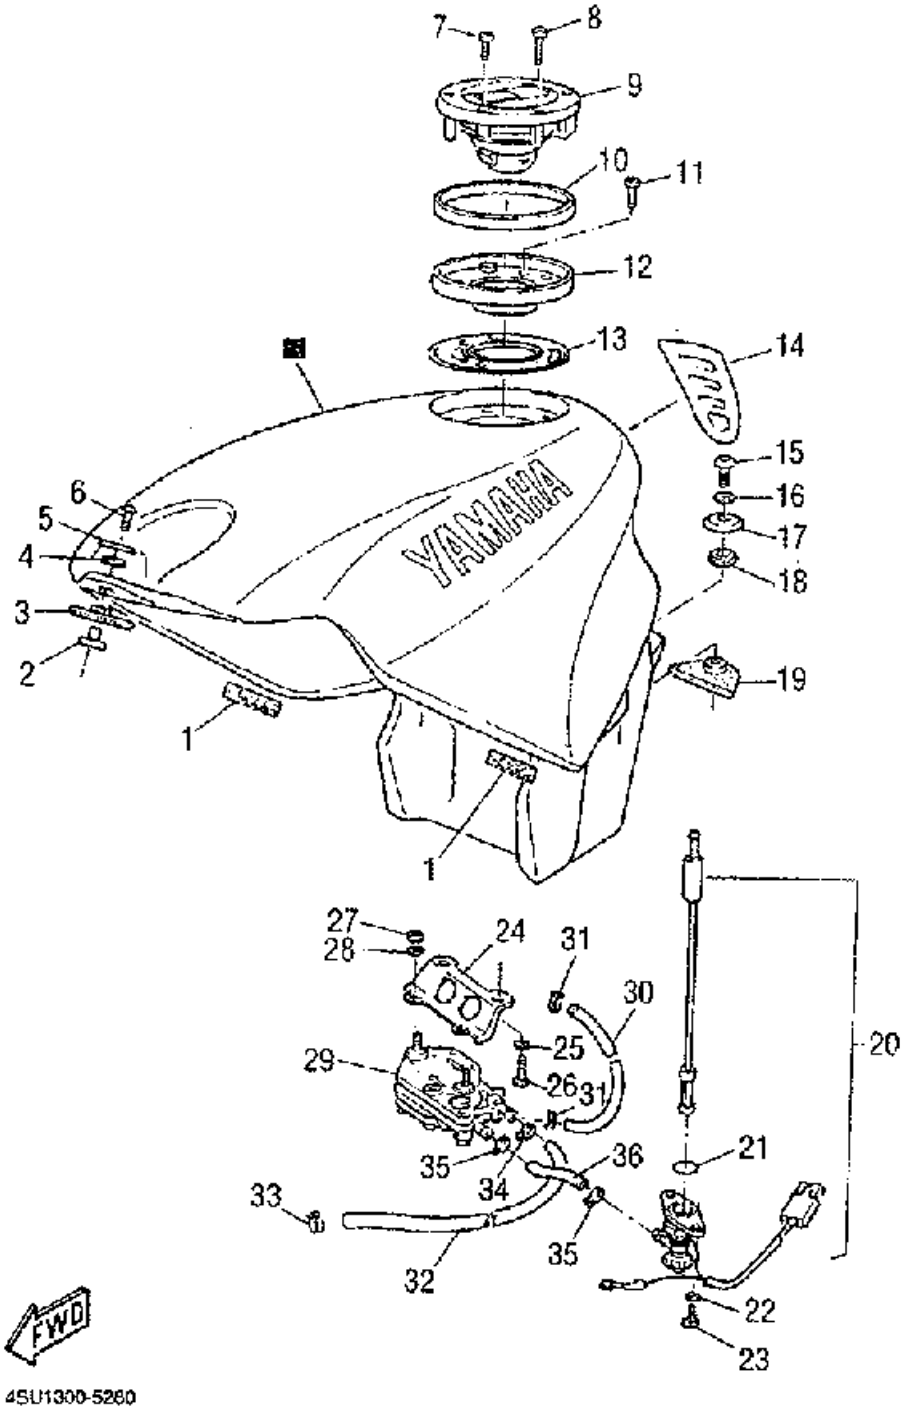

Ref No	Part No	Description
01	4DL-F4182-00-00	Damper, Locating 2
02	90387-068L3-00	Collar
03	4SU-F4181-00-00	Damper, Locating 1
04	4SU-F4183-00-00	Damper, Locating 3
05	4SU-F4145-00-00	Damper, Side Cover
06	90110-06831-00	Bolt, Hexagon Socket Head
07	9131M-05014-00	Bolt
08	9131M-05030-00	Bolt
09	4SU-F4610-00-00	Cap Assy
10	4SU-F414E-00-00	Seal
11	9131L-05010-00	Bolt
12	4SU-F4114-00-00	Tube, Filler
13	4SU-F414A-00-00	Cover, Filler
14	4SU-F4141-00-00	Protector, Fuel Tank
15	9201L-06020-00	Bolt, Button Head
16	9290L-06100-00	Washer Sprg.
17	4SU-F4145-00-00	Damper, Side Cover
18	4SU-F4183-00-00	Damper, Locating 3
19	4SU-F4181-00-00	Damper, Locating 1
20	4SU-F4500-00-00	Fuel Cock Assy 1
21	93210-118C7-00	• . O-ring
22	90202-05193-00	Washer, Plate
23	9850L-06014-00	Screw
24	4SU-F4157-00-00	Stay, Fuel Tank 1
25	9290L-06100-00	Washer Spring
26	9131L-06012-00	Bolt.hex.socket Head
27	9570M-05500-00	Nut, Flange
28	9290M-05100-00	Washer Sprg.
29	3LD-13910-00-00	Fuel Pump Assy
30	4SU-E3929-00-00	Pipe, Impulse
31	90467-09837-00	Clip
32	4SU-E4294-00-00	Hose
33	90467-10833-00	Clip
34	90467-11832-00	Clip
35	90467-11832-00	Clip
36	4SU-F4311-00-00	Pipe, Fuel 1


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

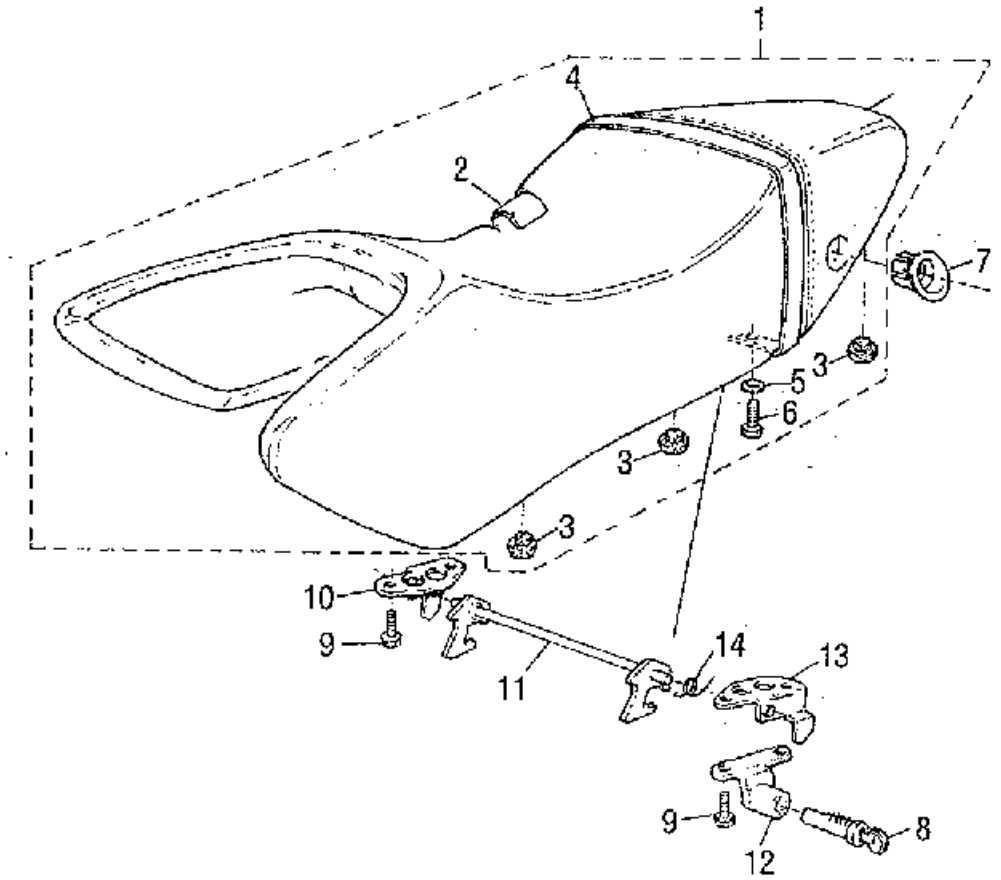

Ref No	Part No	Description
01	4SU-F4730-00-00	Double Seat Assy
01	4SU-F4730-10-00	Double Seat Assy
02	4SU-F470F-00-00	• . Seat Cover Comp.
02	4SU-F470F-10-00	• . Seat Cover Comp.
03	4DL-F4741-00-00	• . Pad, Seat
04	4SU-F4734-00-00	• . Band
04	4SU-F4734-10-00	• . Band
05	4SU-F4722-00-00	• . Washer, Plain
06	9581L-06014-00	• . Bolt, Flange
07	4SU-F4796-00-00	Cover
08	4SU-F4708-00-00	Seat Lever Assy
09	9201L-06010-00	Bolt, Button Head
10	4SU-F4738-00-00	Bracket
11	4SU-F4776-00-00	Lever, Seat
12	4SU-F4728-00-00	Bracket
13	4SU-F4718-00-00	Bracket
14	4SU-F4758-00-00	Spring

D0


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

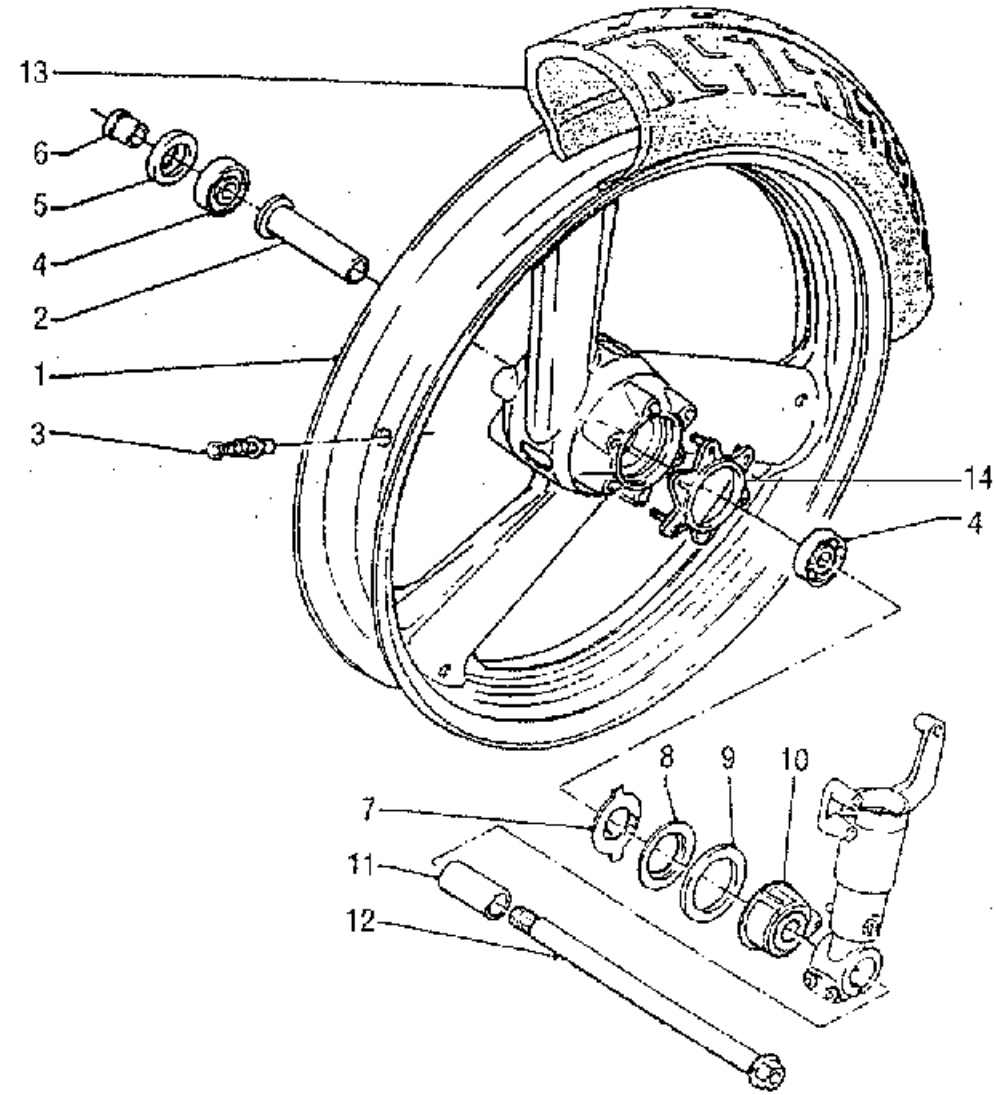

D9


Ref No	Part No	Description
01	4SU-F5168-01-3H	Cast Wheel, Front
01	4SU-F5168-01-33	Cast Wheel, Front
02	90560-17358-00	Spacer
03	93900-00030-00	Valve, Rim
04	93306-203X4-00	Bearing
05	93102-23252-00	Oil Seal
06	90387-178K8-00	Collar
07	341-25149-00-00	Clutch, Meter
08	341-25846-00-00	Retainer, Clutch Meter
09	93105-45017-00	Oil Seal
10	3MA-25190-01-00	Gear Unit Assy
11	90387-178K7-00	Collar
12	3GM-25181-00-00	Axle, Wheel
13	94111-178P9-00	Tire (110/70 Zr-17)
14	94111-178R7-00	Tire (110/70 Zr-17)
15	1U4-25847-00-00	Cover, Housing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

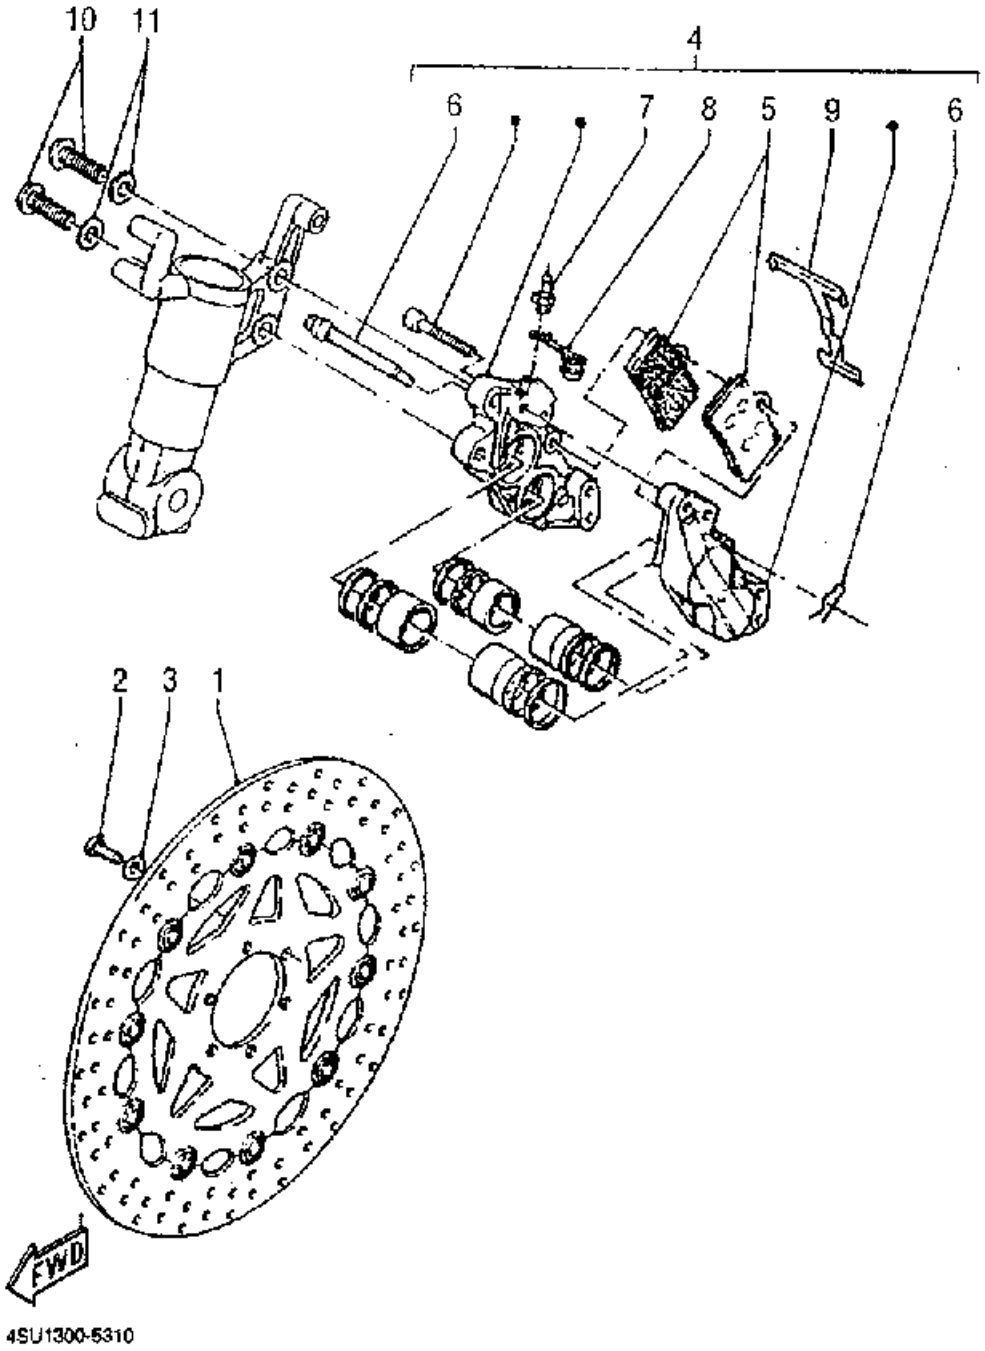


Ref No	Part No	Description
01	3SH-F5830-10-00	Disk Brake Assy
02	90109-08720-00	Bolt 90109-08720-bl
03	90204-08802-00	Washer, Spring
04	4SU-F580U-00-00	Front Caliper, Assy (r.h.)
05	4SU-F5811-00-00	• . Pad Lining Comp.
06	4SU-F5924-00-00	• . Pin, Pad (kit)
07	4DL-F5824-00-00	• . Bleeder, Screw
08	4DL-F5917-00-00	• . Boot, Cover
09	4SU-F5934-00-00	Spring, Friction
10	90105-10866-00	Bolt, Flange 90105-10866-bl
11	90204-10803-00	Washer, Spring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

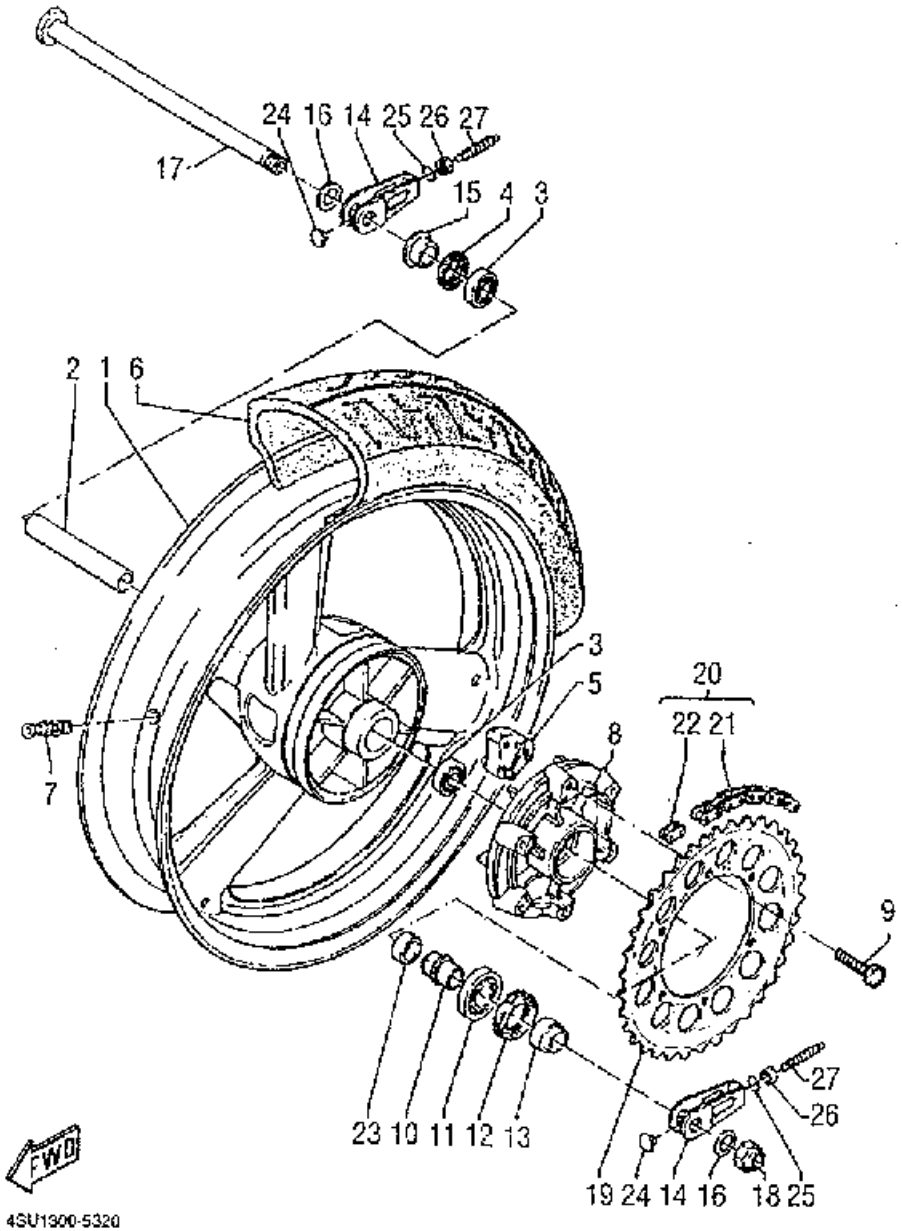


Ref No	Part No	Description
01	4DL-F5338-00-3H	Cast Wheel, Rear
01	4DL-F5338-00-33	Cast Wheel, Rear
02	90560-15277-00	Spacer
03	93306-20222-00	Bearing
04	93102-22216-00	Oil Seal
05	1KT-25364-00-00	Damper
06	94115-178R0-00	Tire (150/60 Zr17)
06	94115-178R8-00	Tire (150/60 Zr17)
07	93900-00030-00	Valve, Rim
08	4SU-F5366-00-3H	Clutch, Hub
08	4SU-F5366-00-33	Clutch, Hub
09	4SU-F5411-00-00	Bolt
10	90387-158K9-00	Collar
11	93306-204Y8-00	Bearing
12	93102-28022-00	Oil Seal
13	90387-158L0-00	Collar
14	4DL-F5388-00-00	Puller, Chain 1
15	90387-15001-00	Collar 90387-15001-bl
16	4SU-F5384-00-00	Washer, Wheel
17	4SU-F5381-00-00	Axle, Wheel
18	95617-14100-00	Nut, U
19	4SU-F5439-00-00	Sprocket, Rr.wheel
20	94568-37110-00	Chain
21	94568-37109-00	• . Chain
22	94668-36031-00	• . Joint, Chain
23	90387-408L2-00	Collar
24	4DL-F538H-00-00	Reinf., 2
25	93210-04800-00	O-ring 93210-04800-bl
26	9530M-08700-00	Nut
27	4DL-F5379-00-00	Bolt, Chain Pullar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

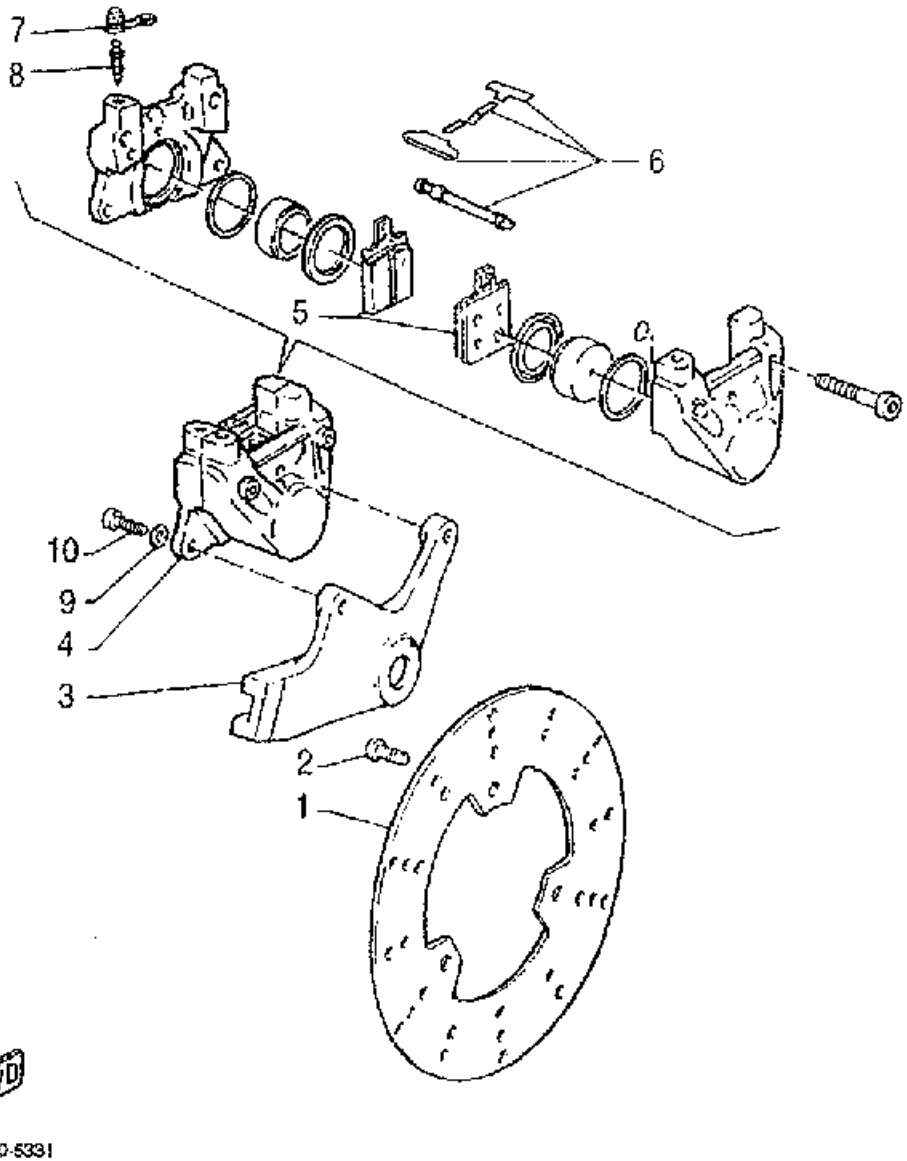

Ref No	Part No	Description
01	1WG-25831-50-00	Disc, Brake
02	90109-08718-00	Bolt
03	4DL-F5819-00-00	Bracket, Caliper
04	4DL-F580W-02-00	Caliper Assy, Rear 2
05	3SH-F5811-20-00	• . Pad, Caliper 2
06	3SH-F5919-01-00	• . Support, Pad
07	3SH-F5825-00-00	• . Cap
08	3SH-F5824-00-00	• . Screw, Bleed
09	90204-08802-00	Washer, Spring
10	90109-08720-00	Bolt, Button Head 90109-08720-bl


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

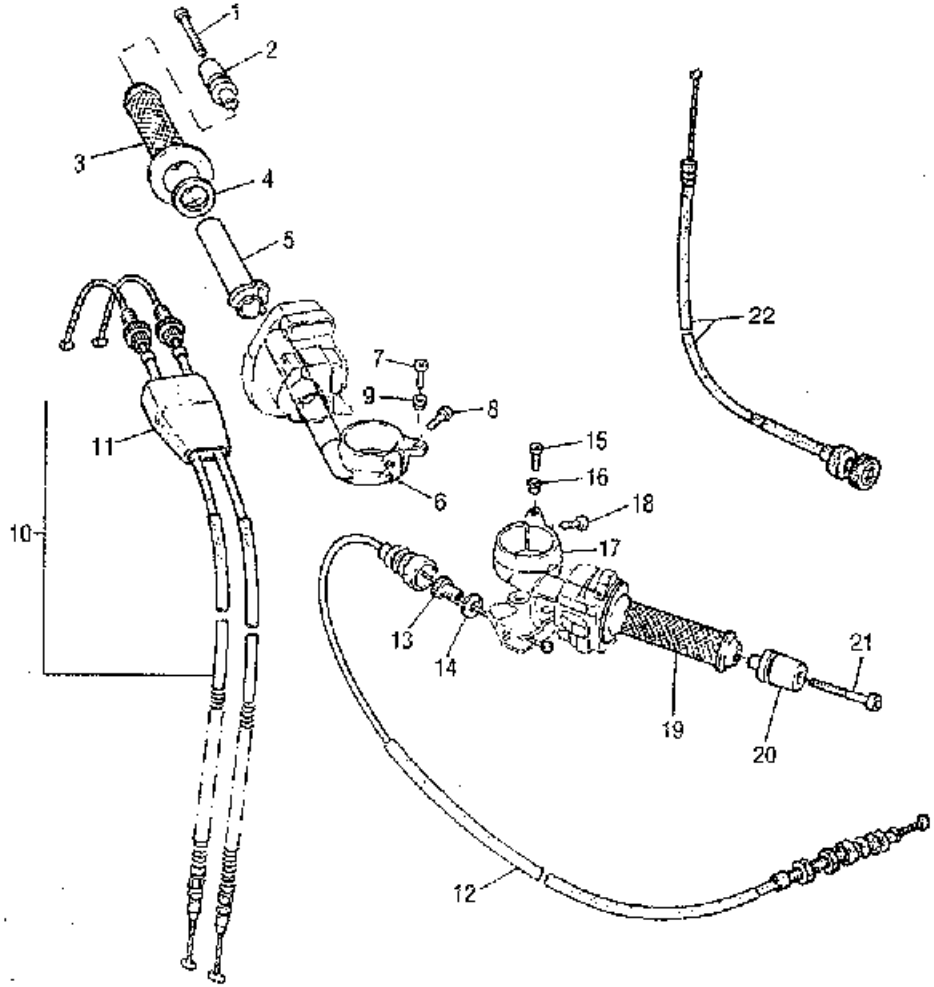

D13


Ref No	Part No	Description
01	9131M-08080-00	Bolt Hex.socket Head
02	4DL-F6246-10-00	End, Grip
03	4DL-F6242-00-00	Grip (right)
04	4GV-F6249-00-00	Ring, Leaf
05	4GV-F6243-00-00	Tube, Throttle Guide
06	4SU-F6122-00-00	Handle Bar (right)
07	90110-06832-00	Bolt, Hexagon Socket Head
08	9131L-06020-00	Bolt Hexagon S0cket Head
09	4SU-F3469-00-00	Cap, Bolt
10	4SU-F6302-00-00	Throttle Cable Assy
11	4GV-F6316-00-00	• . Boot, Throttle Cable
12	4SU-F6335-00-00	Wire, Clutch
13	90123-08046-00	Bolt 90123-08046-bl
14	90179-08148-00	Nut 90179-08148-bl
15	90110-06832-00	Bolt, Hexagon Socket Head
16	4SU-F3469-00-00	Cap, Bolt
17	4SU-F6121-00-00	Handle Bar (left)
18	9131L-06020-00	Bolt Hex. Socket Head
19	4DL-F6241-00-00	Grip (l.h.)
20	4DL-F6246-10-00	End, Grip
21	9131M-08080-00	Bolt Hex.socket Head
22	4SU-F6331-00-00	Wire, Starter

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

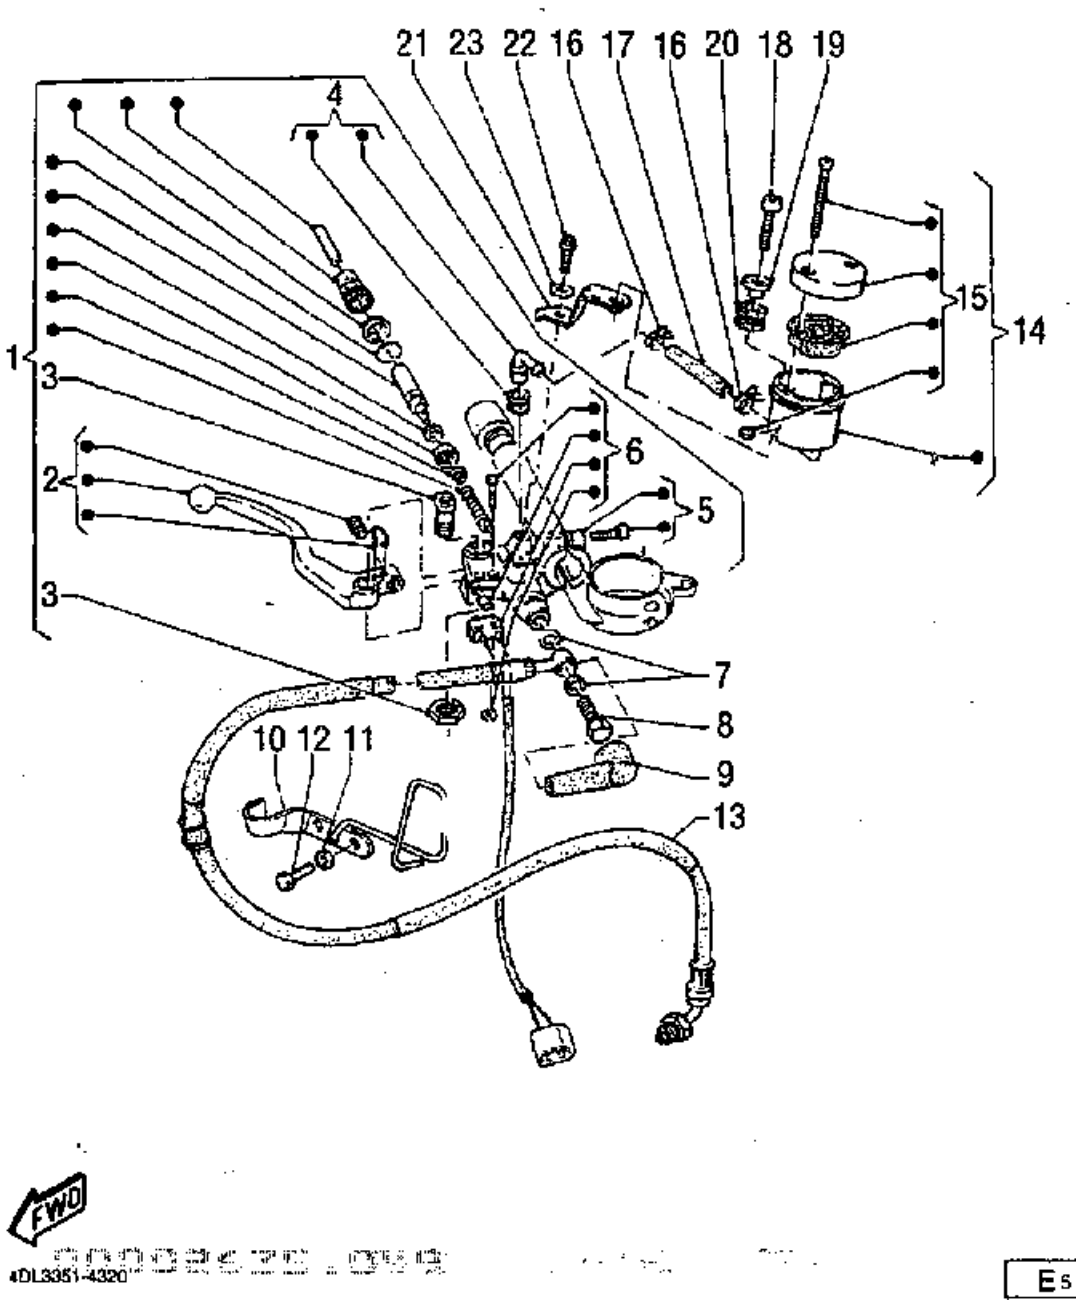


Ref No	Part No	Description
01	4SU-F583T-00-00	Front Master Cylinder, Assy
02	4DL-H3922-00-00	• . Lever 2
03	3SH-F589F-00-00	• . Bolt, Brake Lever
04	3SH-F582A-00-00	• . Joint
05	4DL-F5867-00-00	• . Bracket, Master Cylinder
06	4SU-H3980-00-00	• . Front Stop Switch Assy
07	90201-108E6-00	Washer, Plain
08	90401-10809-00	Bolt, Union
09	2VW-F5862-00-00	Cover
10	4SU-F5876-00-00	Holder, Brake Hose 2
11	9290L-06600-00	Washer Plain
12	9701L-06014-00	Bolt Hex.
13	4SU-F5872-00-00	Hose, Brake 1
14	4DL-F5894-00-00	Tank, Reservoir Assy
15	4DL-F5852-00-00	• . Cap, Reservoir
16	90467-11834-00	Clip
17	4DL-F582F-00-00	End,fitting
18	9131M-06020-00	Bolt Hex. Socket Head
19	90387-06001-00	Collar 90387-06001-bl
20	90480-14023-00	Grommet
21	4SU-F589G-00-00	Stopper, Cap
22	9131M-06012-00	Bolt Hex. Socket Head
23	9290M-06600-00	Washer Plain

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

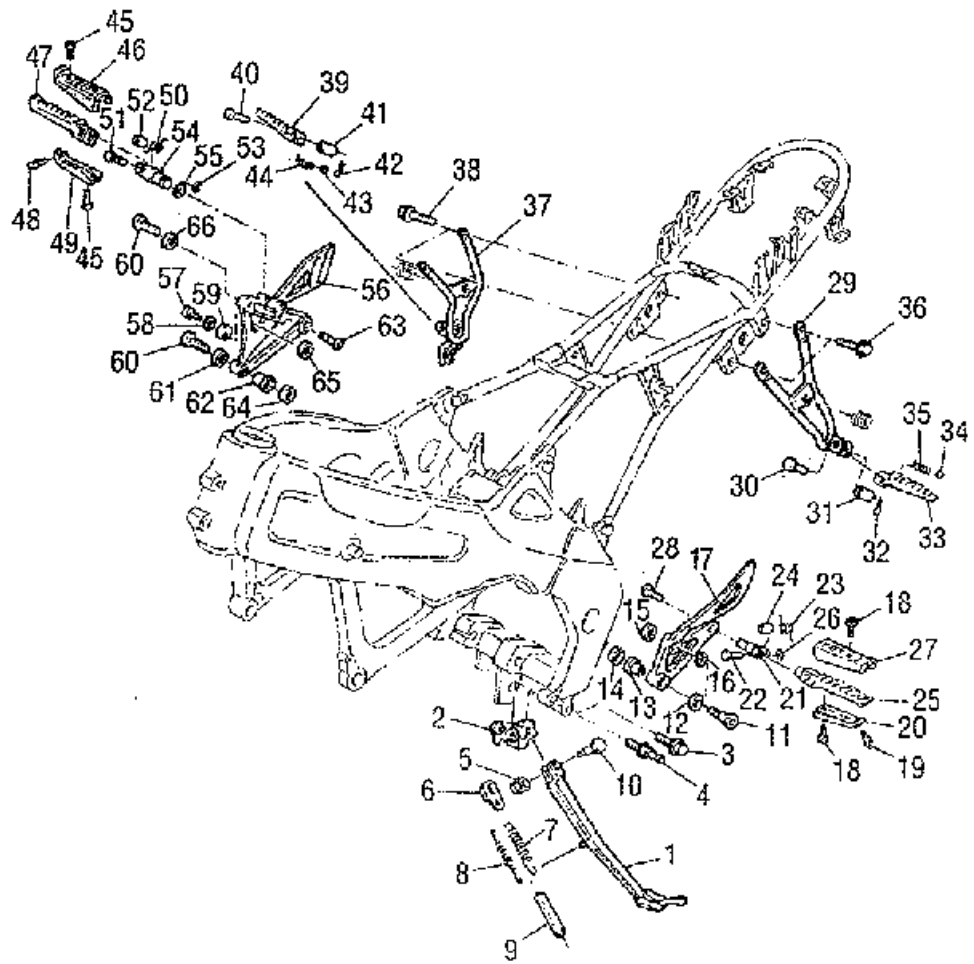


Ref No	Part No	Description
01	3MA-27311-00-00	Stand, Side
02	3MA-27321-00-00	Bracket, Side Stand
03	90105-10436-00	Bolt, Washer Based
04	90109-102F8-00	Bolt
05	90185-10037-00	Nut, Self-locking
06	2KT-27315-00-00	Link, Side Stand
07	90506-33853-00	Spring, Tension 1
08	90506-20854-00	Spring, Tension 2
09	4LW-F7351-00-00	Guide, Side Stand
10	90109-10474-00	Bolt
11	4DL-F7416-00-00	Bolt
12	9290L-08600-00	Washer Plain
13	4DL-F7414-00-00	Damper, Footrest
14	90201-088K1-00	Washer, Plain
15	4DL-F7437-00-00	Washer, Special
16	4DL-F7417-00-00	Washer, Footrest
17	4SU-F7442-00-00	Bracket 2
18	90179-05079-00	Screw
19	4DL-F7435-00-00	Bolt
20	4DL-F7471-00-00	Bar, Footrest 1
21	46X-27411-00-00	Footrest 1
22	90249-08817-00	Pin
23	90508-20572-00	Spring, Torsion
24	90387-084N8-00	Collar
25	4BA-F7451-00-00	Footrest
26	99009-07600-00	Circlip
27	4BA-F7413-00-00	Cover, Footrest
28	90159-05079-00	Screw
29	4SU-F741L-00-00	Bracket 4
30	4DL-F7438-00-00	Pin, Clevis
31	90387-064H8-00	Collar
32	91490-20025-00	Pin, Cotter
33	4BA-F7431-00-00	Footrest, Rear 1
34	93501-04011-00	Ball
35	90501-12743-00	Spring, Compression
36	9581L-08020-00	Bolt, Flange
37	4SU-F742L-00-00	Bracket 5
38	9581L-08020-00	Bolt, Flange
39	4BA-F7441-00-00	Footrest, Rear 2
40	4DL-F7438-00-00	Pin, Clevis
41	90387-064H8-00	Collar
42	91490-20025-00	Pin, Cotter
43	93501-04011-00	Ball
44	90501-12743-00	Spring, Compression
45	90159-05079-00	Screw
46	4BA-F7413-00-00	Cover, Footrest
47	4BA-F7461-00-00	Footrest
48	4DL-F7435-00-00	Bolt
49	4DL-F7471-00-00	Bar, Footrest 1
50	90508-20572-00	Spring, Torsion
51	90249-08817-00	Pin
52	90387-084N8-00	Collar
53	99009-07600-00	Circlip
54	46X-27421-01-00	Footrest 2

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

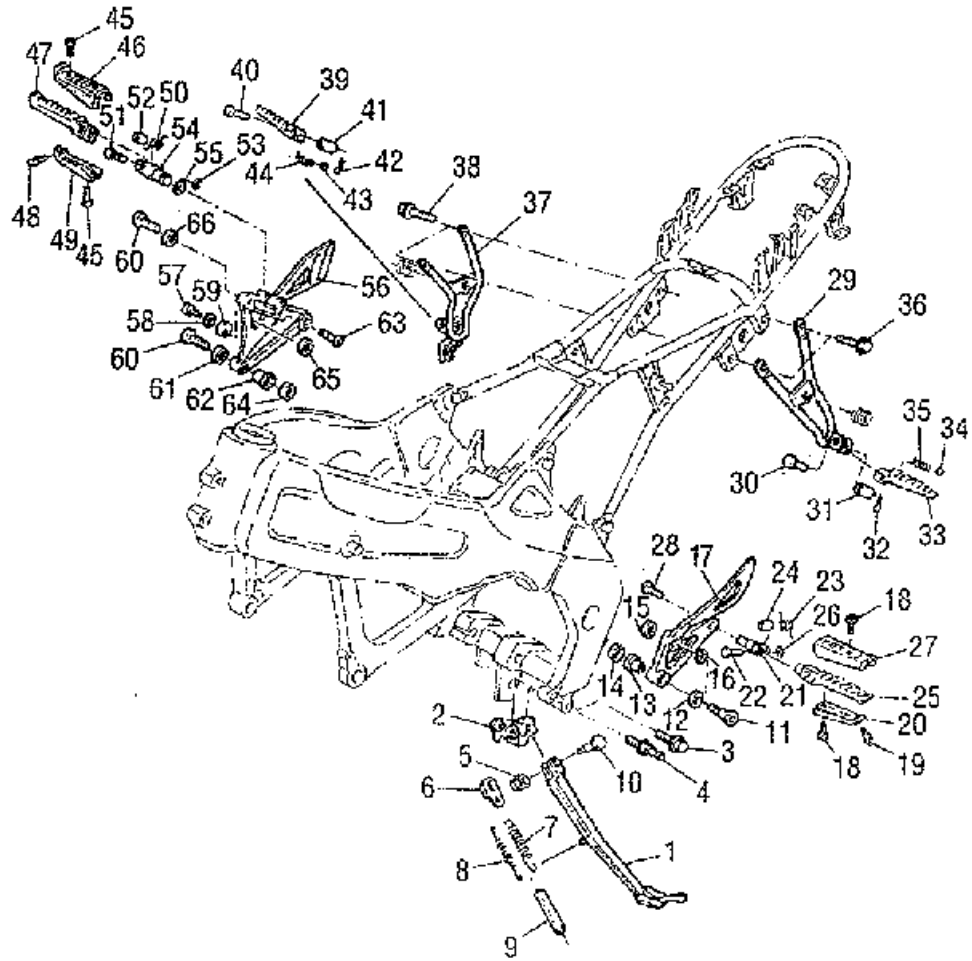


Ref No	Part No	Description
55	90206-17084-00	Washer, Wave
56	4SU-F7443-00-00	Bracket 3
57	9131M-06020-00	Bolt
58	90204-06801-00	Washer, Spring
59	4DL-F7238-00-00	Nut, Adjusting
60	4DL-F7416-00-00	Bolt
61	9290L-08600-00	Washer Plain
62	4DL-F7414-00-00	Damper, Footrest
63	90109-103A9-00	Bolt
64	90201-088K1-00	Washer, Plain
65	4DL-F7437-00-00	Washer, Special
66	4DL-F7417-00-00	Washer, Footrest

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

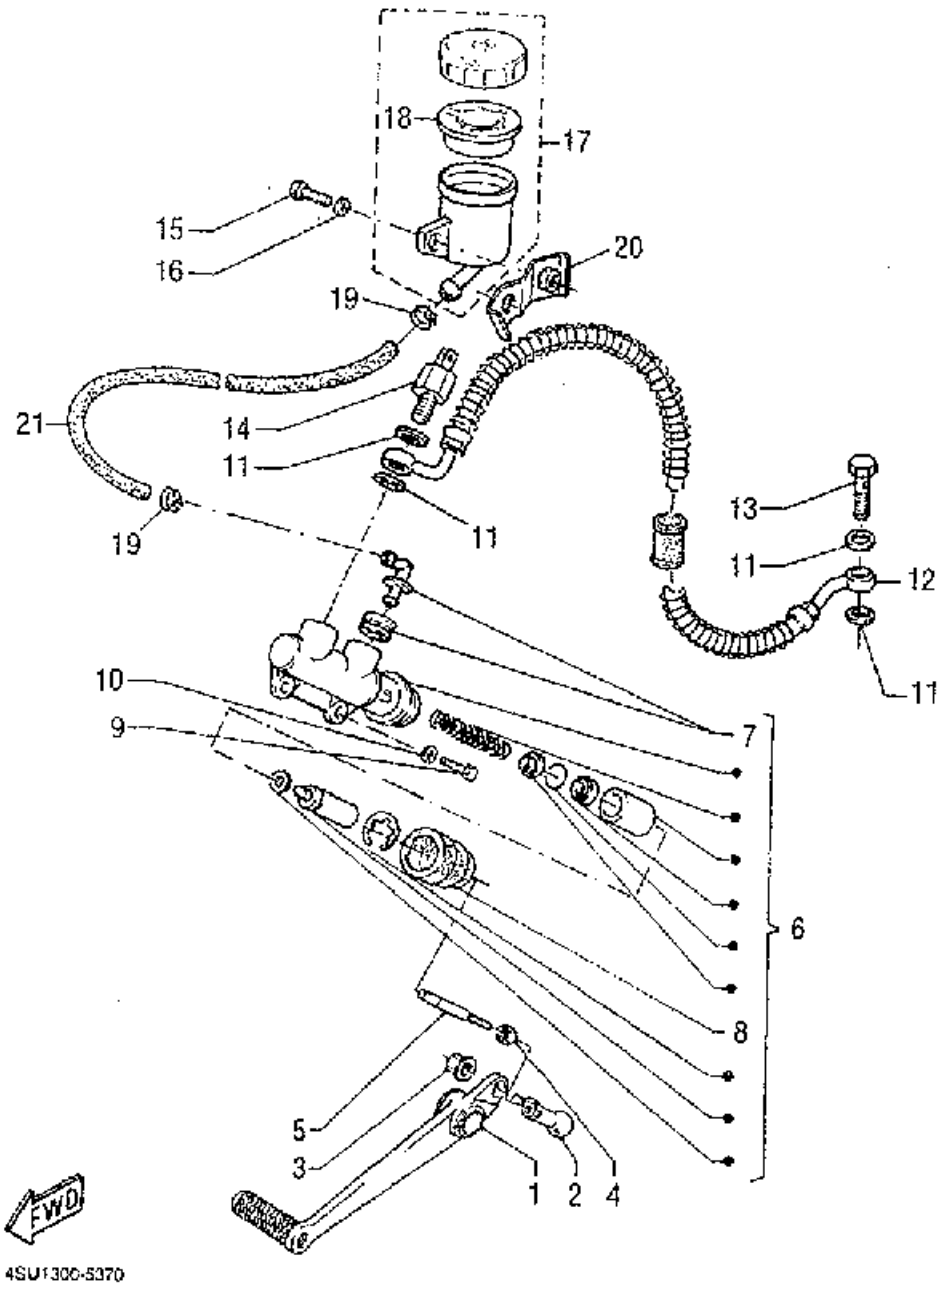

Ref No	Part No	Description
01	4DL-F7200-00-00	Pedal, Brake
02	4DL-F7222-00-00	Joint
03	90185-06830-00	Nut, Self-locking
04	9530L-06700-00	Nut
05	4DL-F7231-00-00	Rod, Brake
06	4SU-F583V-00-00	Rr. Master Cylinder Assy.
07	3SH-F582A-00-00	• . Joint
08	3SH-F583H-00-00	• . Boot Mas. Cyl.
09	9701L-06020-00	Bolt Hex.
10	90204-06801-00	Washer, Spring
11	90201-108E6-00	Washer, Plain
12	4SU-F581J-00-00	Hose, Brake 4
13	90401-10809-00	Bolt, Union
14	4DL-H2530-00-00	Rr. Stop Sw. Assy
15	9131L-06012-00	Bolt.hex.socket Head
16	9290L-06600-00	Washer Plane
17	4GV-F5894-00-00	Tank, Reserve
18	3SH-F5852-50-00	• . Cap, Reservoir
19	90467-10833-00	Clip
20	4SU-F5896-00-00	Plate, Reservoir
21	4SU-F5895-00-00	Hose, Reservoir


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

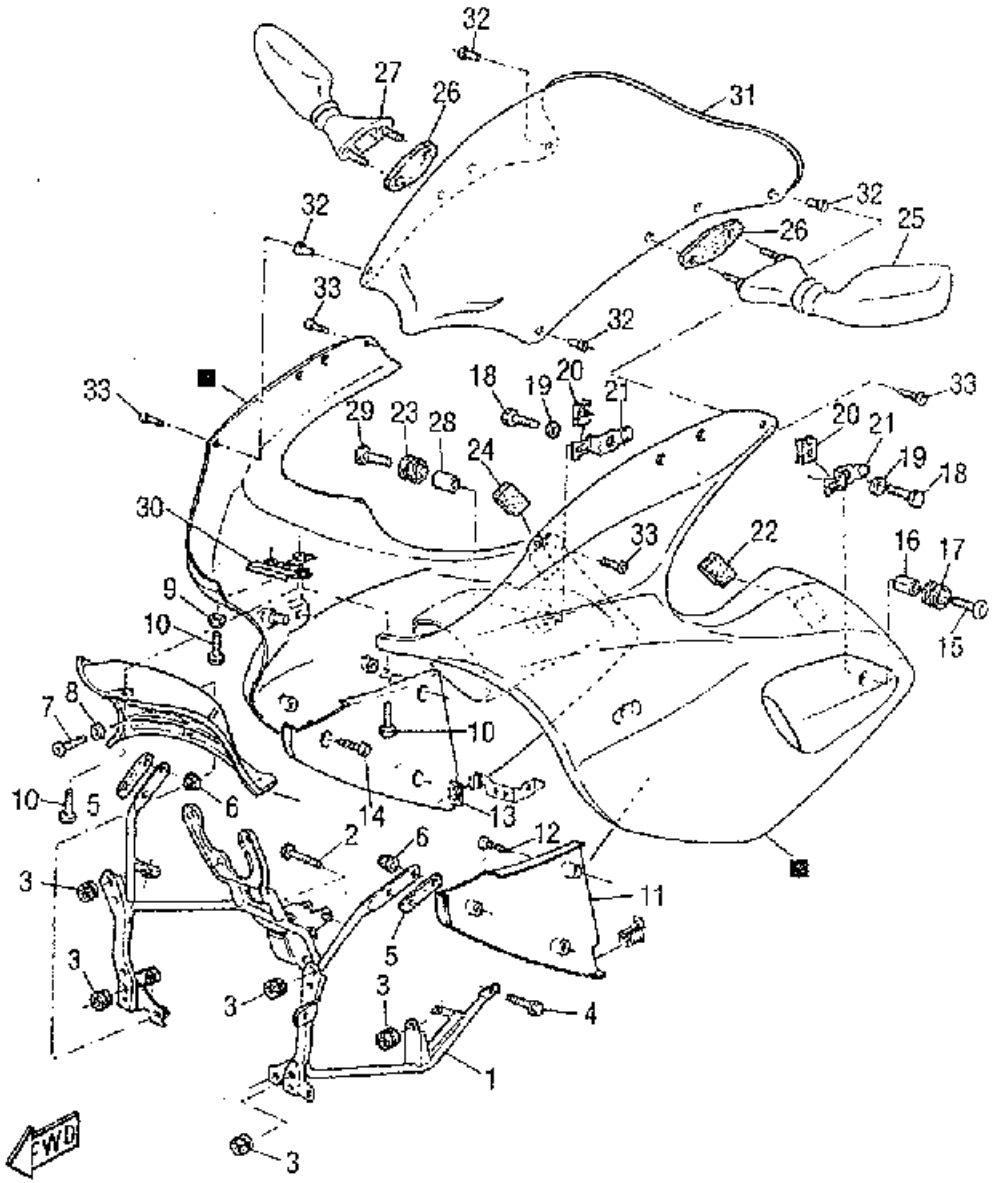

E-4


Ref No	Part No	Description
01	4SU-F8356-00-00	Stay 1
02	9581M-08035-00	Bolt, Flange
03	90480-14865-00	Grommet
04	9581L-08020-00	Bolt, Flange
05	4DL-F6298-00-00	Plate, 1
06	90176-06055-00	Nut, Crown
07	9201M-06014-00	Bolt, Button Head
08	9290M-06600-00	Washer Plain
09	90202-05088-00	Washer, Plate
10	9201M-05012-00	Bolt, Button Head
11	4DL-F836K-00-00	Panel, Inner 1
12	9770M-40112-00	Screw, Tapping
13	4SU-F836L-00-00	Panel, Inner 2
14	9770M-40112-00	Screw, Tapping
15	90110-06104-00	Bolt, Hexagon Socket Head
16	90387-068G9-00	Collar
17	90480-12846-00	Grommet
18	9701L-06020-00	Bolt Hex.
19	9290L-06600-00	Washer Plain
20	2VW-F1736-00-00	Nut,plate
21	4SU-F836F-00-00	Bracket 3
22	4SU-F8372-00-00	Damper
23	90480-12846-00	Grommet
24	4SU-F8372-00-00	Damper
25	4DL-F6280-10-00	Rear View Mirror Assy (left)
26	4SU-F8371-00-00	Damper
27	4DL-F6290-10-00	Rear View Mirror Assy (right)
28	90387-068G9-00	Collar
29	90110-06104-00	Bolt, Hexagon Socket Head
30	4SU-F836G-00-00	Bracket 4
31	4SU-F8381-01-00	Window Front
32	90179-05523-00	Nut
33	90150-05023-00	Screw, Round Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

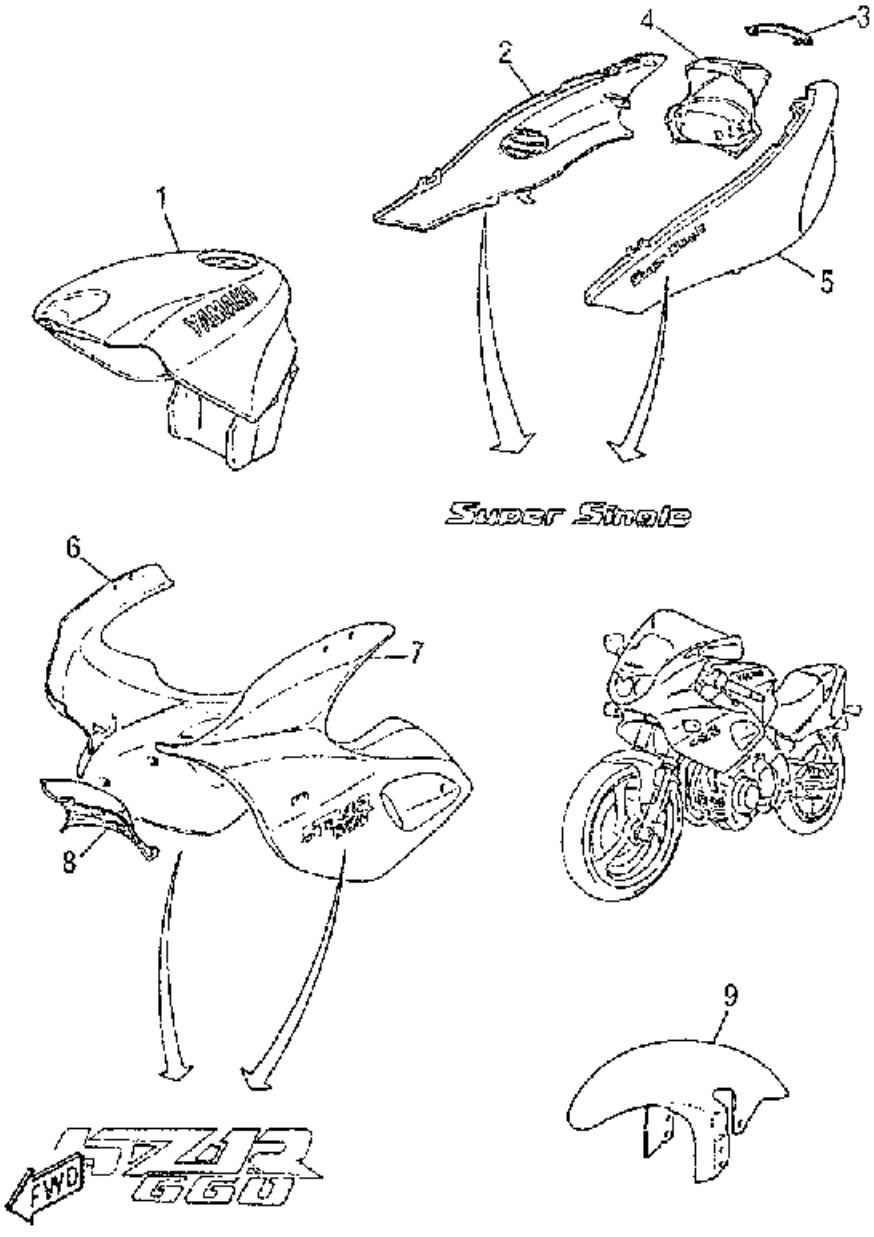

Ref No	Part No	Description
01	4SU-F4110-00-P0	Fuel Tank Comp.
01	4SU-F4110-00-P1	Fuel Tank Comp.
02	4SU-WF172-00-P0	Side, Cover Assy.2
02	4SU-WF172-10-P1	Side, Cover Assy.2
03	4SU-F1694-00-P0	Moulding
03	4SU-F1694-00-P1	Moulding
04	4SU-F4756-00-P0	Cover, Tail
04	4SU-F4756-00-P1	Cover, Tail
05	4SU-WF171-00-P0	Side, Cover Assy.1
05	4SU-WF171-00-P1	Side, Cover Assy.
06	4SU-WF83V-00-P0	Panel 2
06	4SU-WF83V-00-P1	Panel 2
07	4SU-WF83U-00-P0	Panel 1
07	4SU-WF83U-00-P1	Panel 1
08	4SU-F837N-00-P0	Grill, Air Intake 1
08	4SU-F837N-00-P1	Grill, Air Intake 1
09	4DL-F1511-10-P1	Fender, Front
09	4DL-F1511-10-33	Fender, Front


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

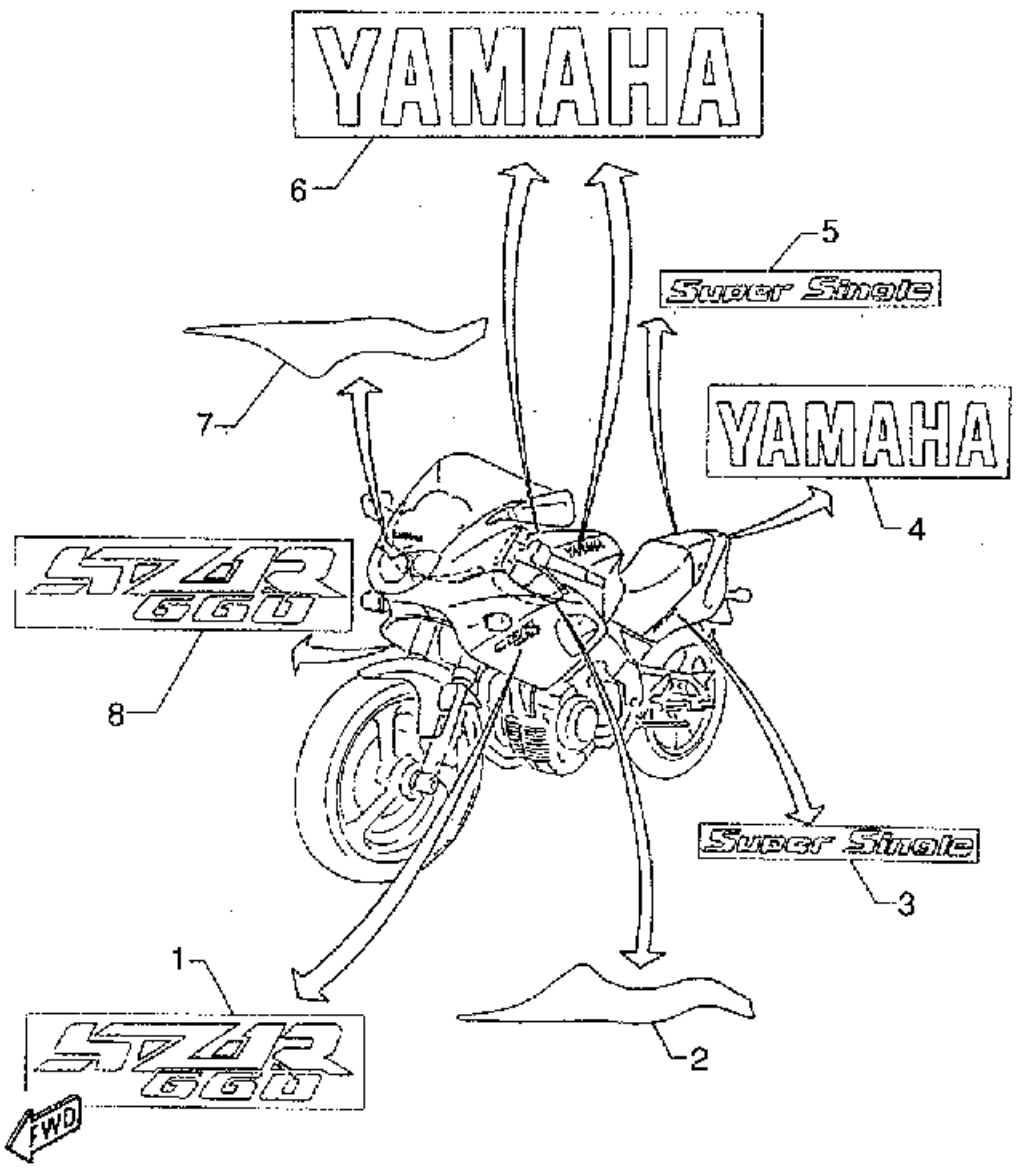

E6


Ref No	Part No	Description
01	4SU-F8368-00-00	Emblem
01	4SU-F8368-10-00	Emblem
02	4SU-F8391-00-00	Graphic 1
03	4SU-F1781-00-00	Emblem
03	4SU-F1781-10-00	Emblem
04	2UT-F163H-20-00	Emblem, Yamaha
04	2UT-F163H-00-00	Emblem, Yamaha
05	4SU-F1781-00-00	Emblem
05	4SU-F1781-10-00	Emblem
06	99236-00160-00	Emblem, Yamaha
06	99234-00160-00	Emblem, Yamaha
07	4SU-F8392-00-00	Graphic 2
08	4SU-F8368-00-00	Emblem
09	4SU-F8368-10-00	Emblem

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

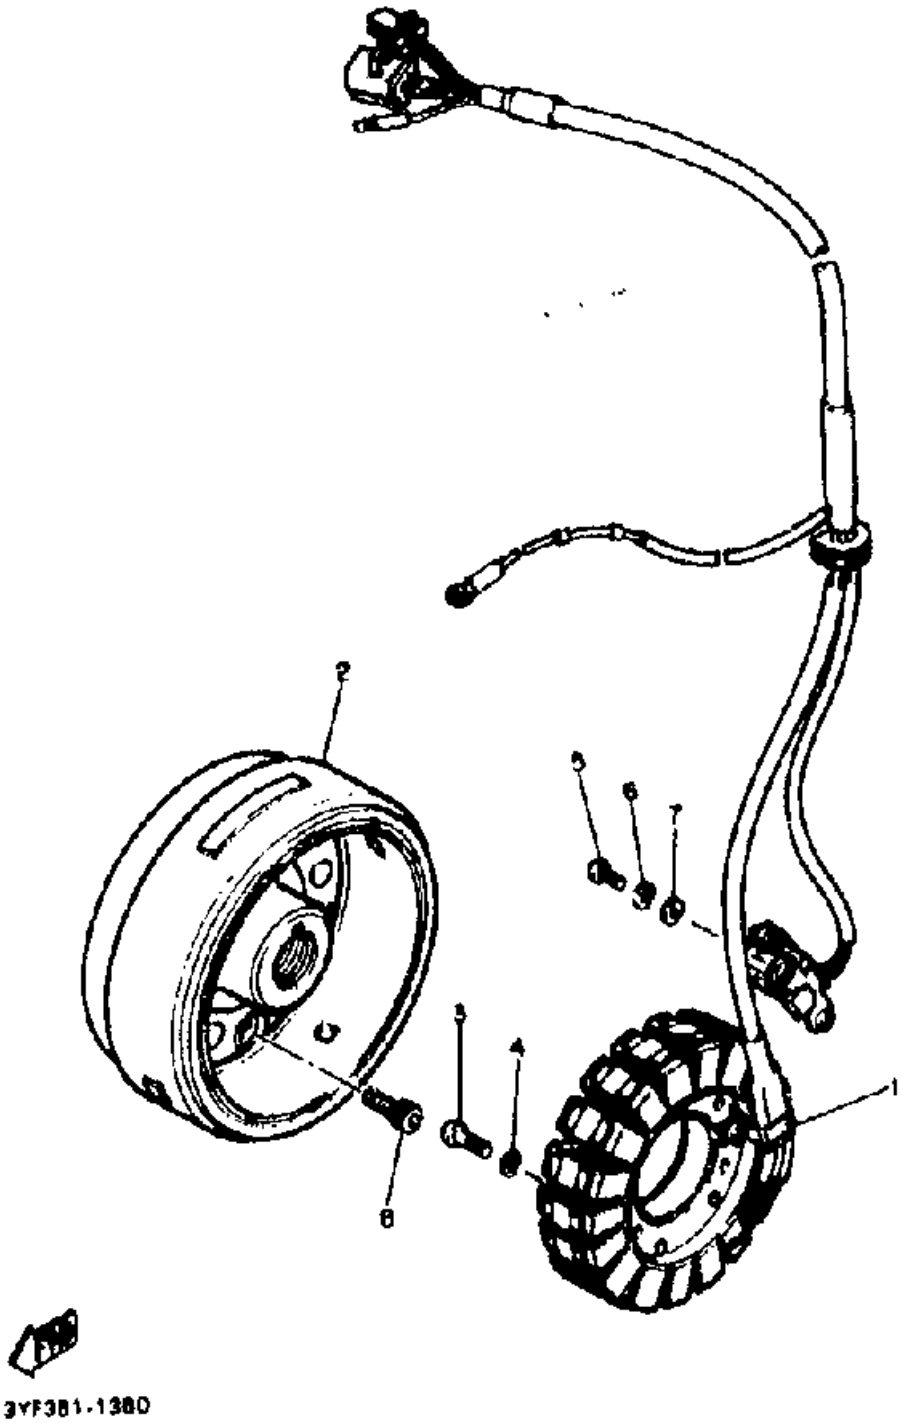


Ref No	Part No	Description
01	3YF-81410-00-00	Stator Assy
02	3YF-81450-00-00	Rotor Assy
03	98507-06030-00	Screw, Pan Head
04	92907-06100-00	Washer, Spring
05	98507-05015-00	Screw, Pan Head
06	92907-05100-00	Washer, Spring
07	92907-05600-00	Washer, Plate
08	90110-08193-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

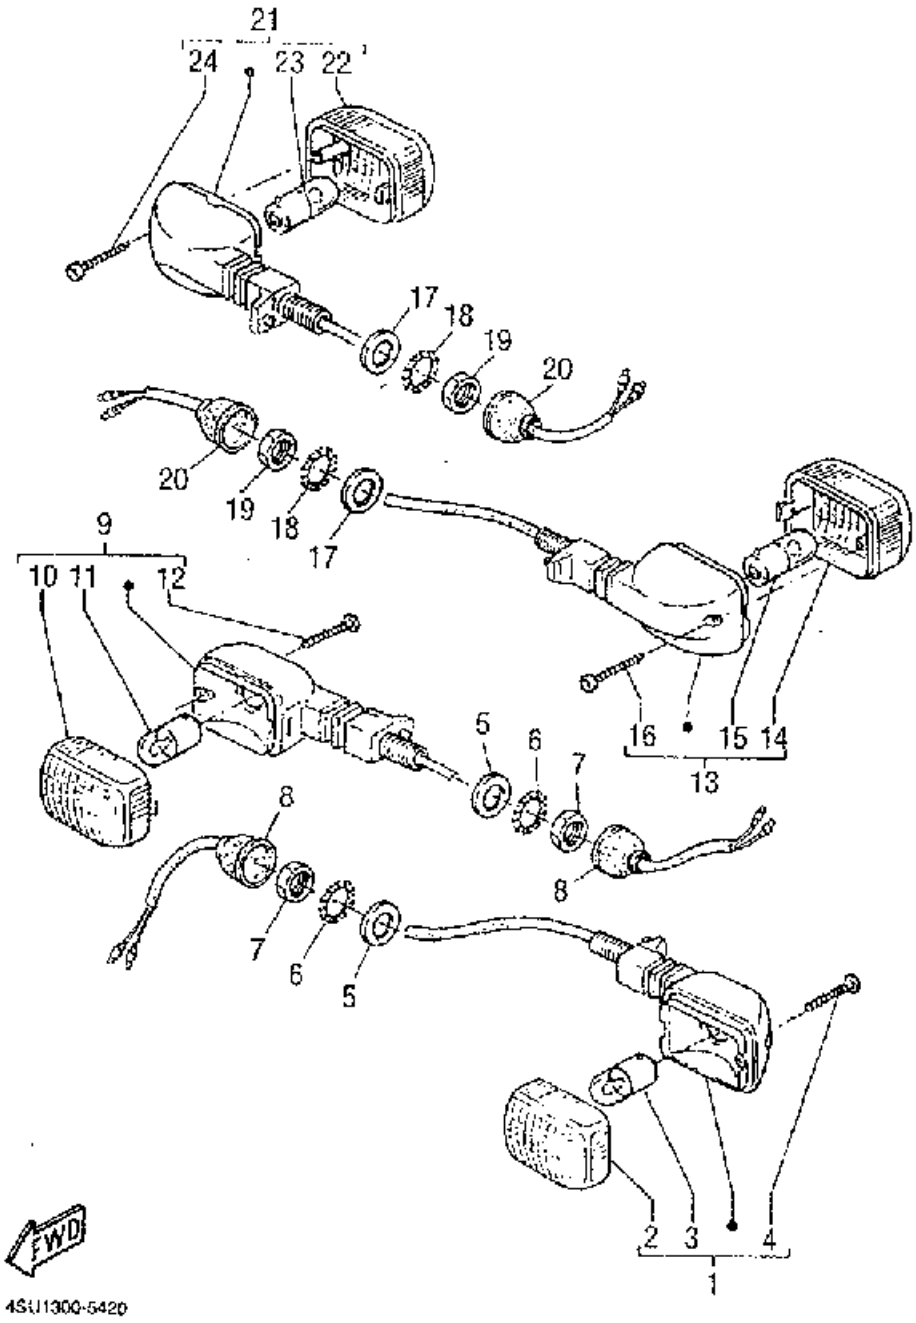


Ref No	Part No	Description
01	4SU-H3310-00-00	Front Flasher Light Assy 1
02	4SU-H3332-00-00	• . Lens, Flasher
04	4SU-H3333-00-00	• . Screw, Lens Fitting
05	9290M-12200-00	Washer Plain
06	9290M-12400-00	Washer Exth. Toothed
07	9530M-12700-00	Nut Hex.
08	3SH-H3365-00-00	Cap
09	4SU-H3320-00-00	Front Flasher Light Assy 2
10	4SU-H3332-00-00	• . Lens, Flasher
12	4SU-H3333-00-00	• . Screw, Lens Fitting
13	4SU-H3330-00-00	Rear Flasher Light Assy 1
14	4SU-H3332-00-00	• . Lens, Flasher
16	4SU-H3333-00-00	• . Screw, Lens Fitting
17	9290M-12200-00	Washer Plain
18	9290M-12400-00	Washer Exth. Toothed
19	9530M-12700-00	Nut Hex.
20	3SH-H3365-00-00	Cap
21	4SU-H3340-00-00	Flasher Light Assy 2
22	4SU-H3332-00-00	• . Lens, Flasher
24	4SU-H3333-00-00	• . Screw, Lens Fitting

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

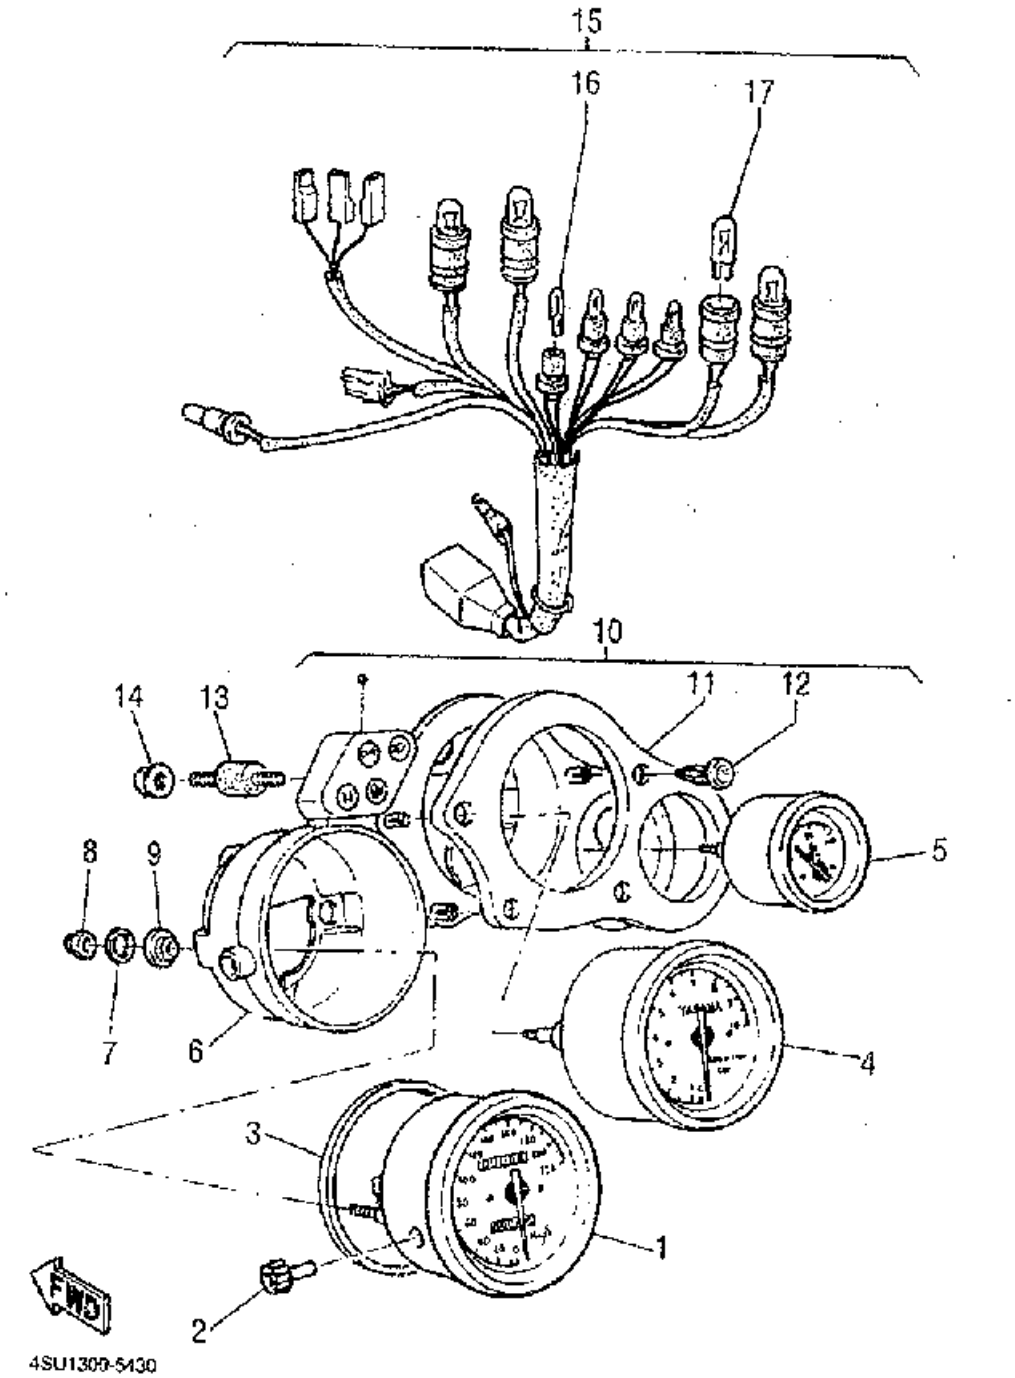

Ref No	Part No	Description
01	4SU-H3570-00-00	Speedometer Assy
02	3SH-H3578-00-00	Knob, Meter Trip
03	4SU-H3541-00-00	Damper
04	4SU-H3540-00-00	Tachometer Assy
05	4SU-H3590-00-00	Water Temperature Assy
06	4SU-H353H-00-00	Case, Under
07	4SU-H3524-00-00	Washer, Special
08	4SU-H354L-00-00	Nut, Shaft Support
09	4SU-H3533-00-00	Grommet
10	4SU-H353F-00-00	Case Comp.under
11	4SU-H3513-00-00	• . Damper
12	4SU-H3525-00-00	• . Clip
13	4SU-H3523-00-00	Damper
14	9570M-05500-00	Nut, Flange
15	4SU-H3509-00-00	Socket Cord Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

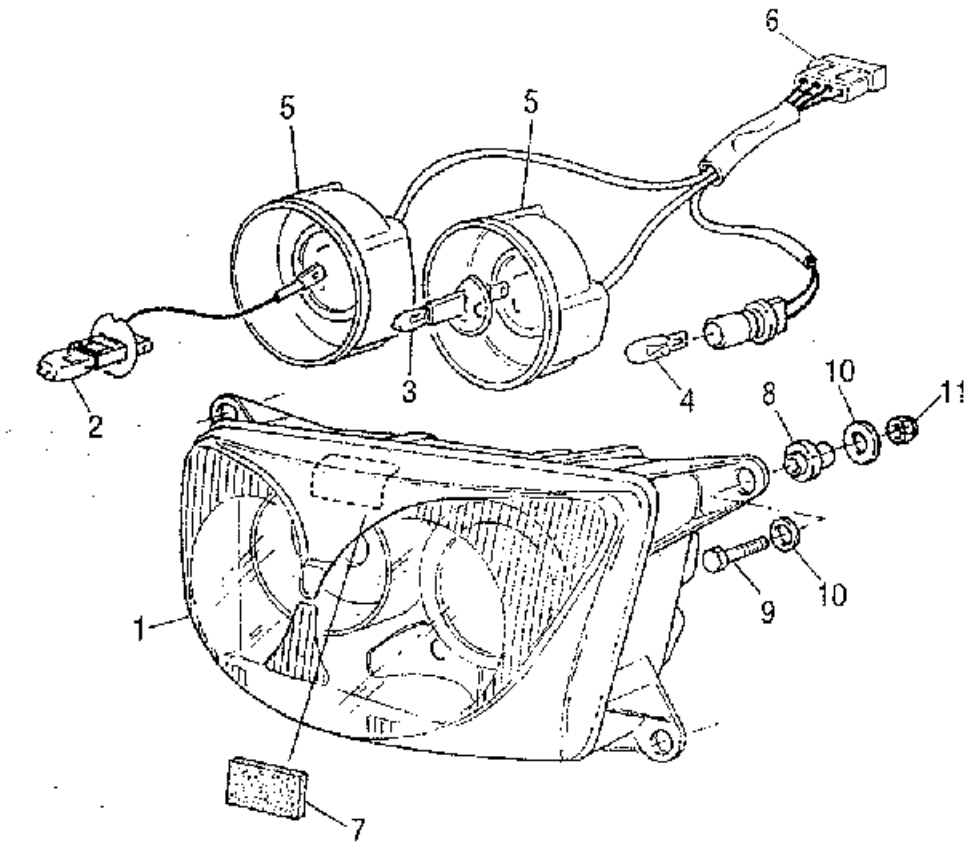


FWD

4SU1300-5440

Ref No	Part No	Description
01	4SU-H4320-00-0	Lens Assy
05	4SU-H4397-00-0	Cover, Socket
06	4SU-H4312-00-0	Holder, Socket
07	4DL-F1268-00-0	Seal
08	90387-068L4-00	Collar
09	9701L-06030-00	Bolt
10	9290L-06200-00	Washer Plain
11	9571L-06300-00	Nut, Nylon

E 10


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

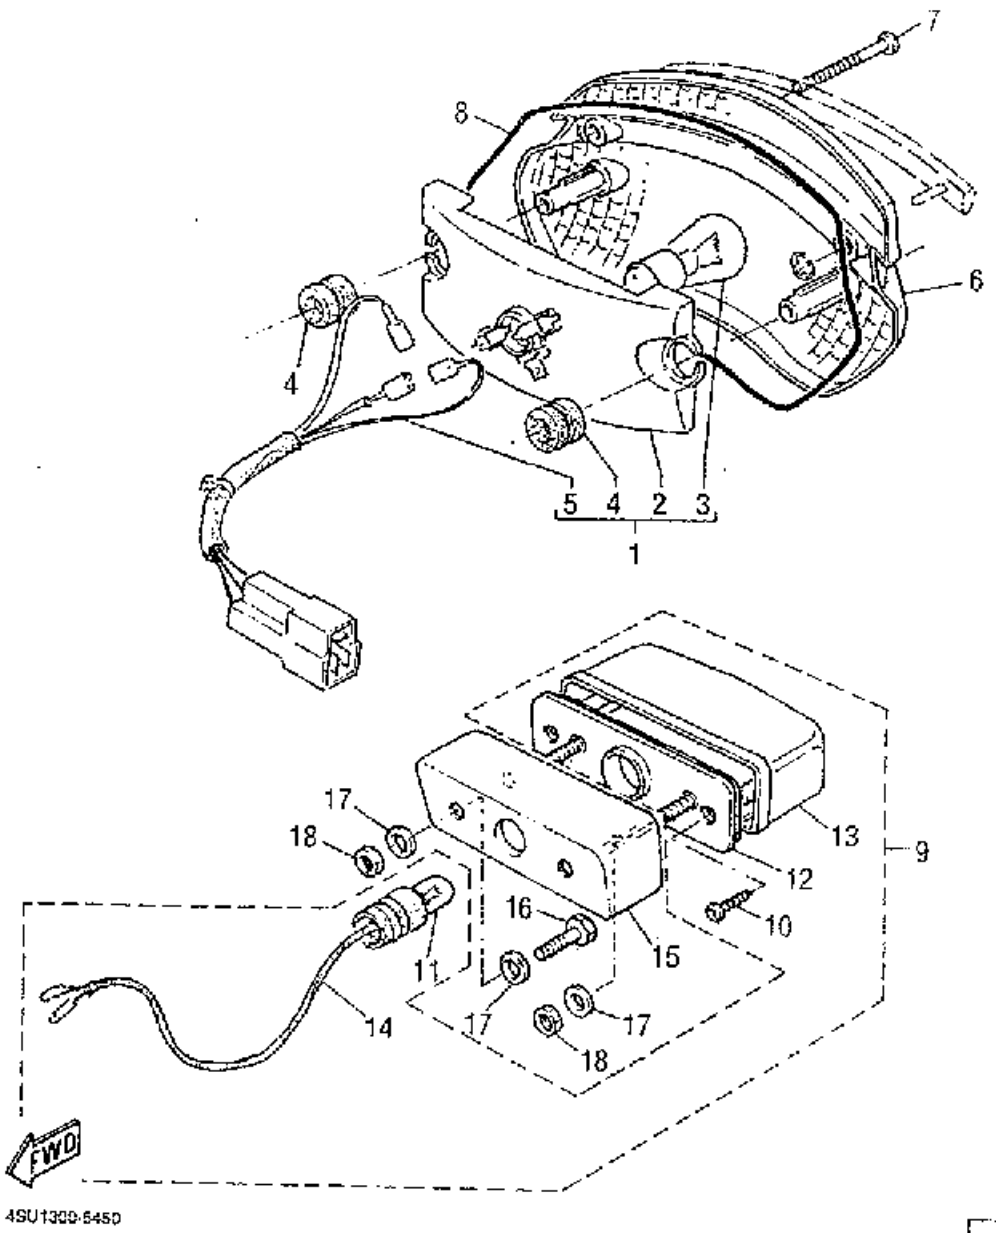

Ref No	Part No	Description
01	4SU-H4720-00-00	Base Assy
02	4SU-H4711-00-00	• . Base, Taillight
04	4SU-H4759-00-00	• . Grommet
05	4SU-H4735-00-00	• . Cord Assy
06	4SU-H4721-00-00	Lens, Taillight
07	90160-04804-00	Screw, Round Tapping
08	4SU-H4723-00-00	Gasket, Tail Lens
09	4SU-H4745-00-00	Licence Light Unit Assy
10	9770L-03110-00	• . Screw, Tapping
11	4SU-H4744-00-00	• . Bulb 12v-5w
12	4SU-H4741-00-00	• . Base, Licence Light
13	4SU-H4749-00-00	• . Body, Licence Light
14	4SU-H4546-00-00	• . Cord Assy
15	4SU-H4746-00-00	Plate, Seat Base
16	9700L-05020-00	Bolt Hex.
17	9290L-05200-00	Washer Plain
18	9570L-05300-00	Nut, Nylon


E 11

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

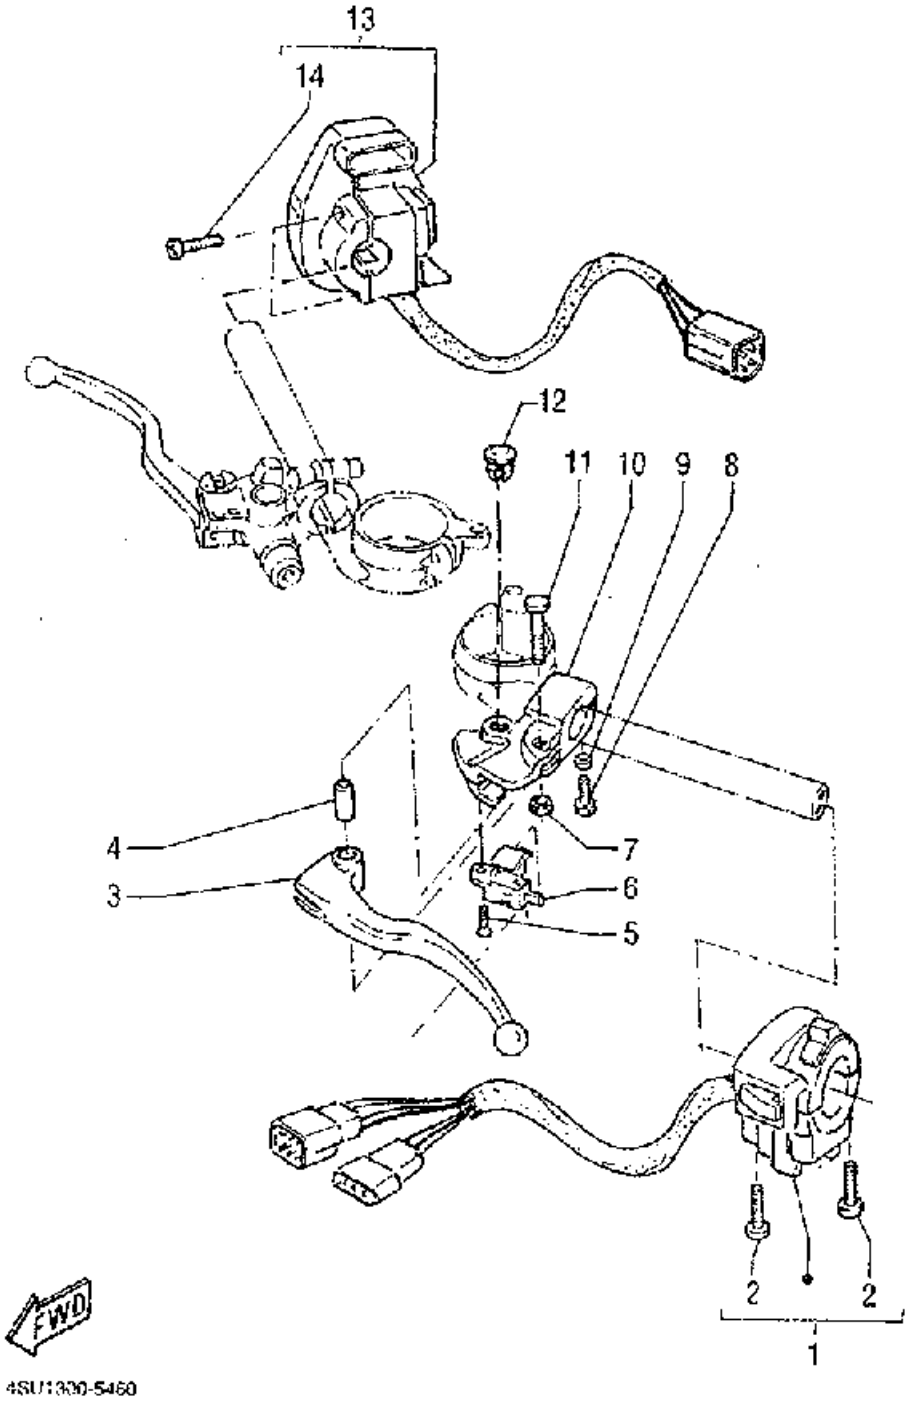


Ref No	Part No	Description
01	4SU-H3972-00-00	Switch, Handle 4
02	9850M-05020-00	• . Screw, Pan Head (+)
03	3HE-83912-00-00	Lever 1
04	31A-83913-00-00	Collar, Lever 1
05	98707-03008-00	Screw, Flat Head
06	31A-82917-00-00	Switch
07	95617-06100-00	Nut, U
08	9701M-06025-00	Bolt Hex.
09	9290M-06100-00	Washer Spring
10	29L-82911-01-00	Holder, Lever 1 Assy
11	31A-83945-00-00	Bolt, Lever
12	4SU-H3931-00-00	Plug, Blind
13	4SU-H3975-00-00	Switch, Handle 2
14	9850M-05016-00	• . Screw, Pan Head (+)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

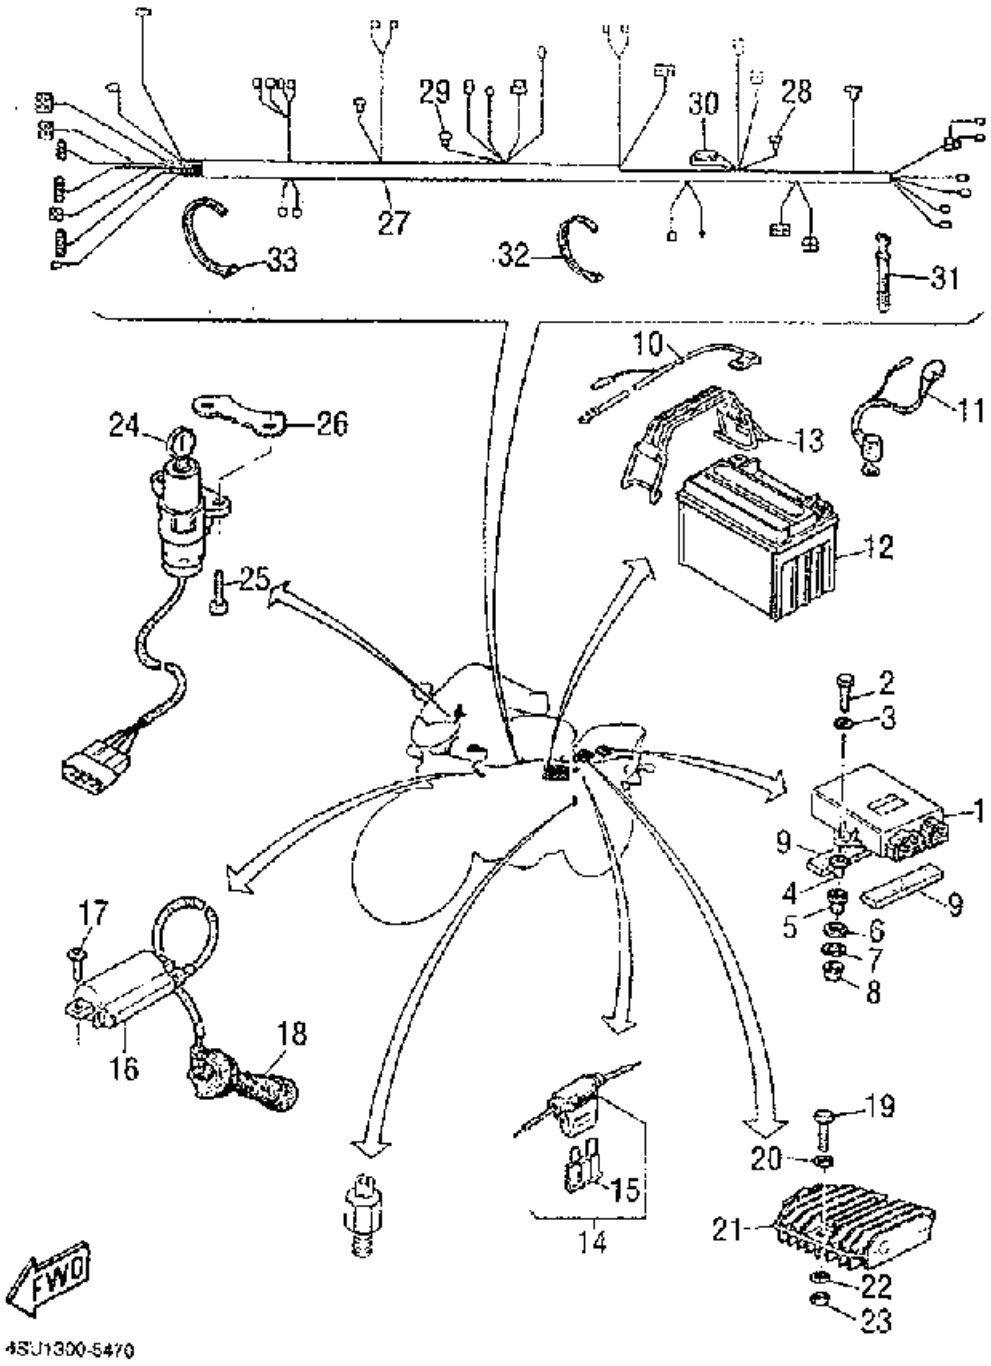

Ref No	Part No	Description
01	4MY-82305-00-00	Ignitor Unit Assy
02	9701L-06030-00	Bolt Hex.
03	9290L-06600-00	Washer Plain
04	90387-068H2-00	Collar
05	4GV-H3523-00-00	Damper
06	4GV-H4736-00-00	Damper, Taillight 1
07	90201-060A3-00	Washer, Plate
08	90185-06837-00	Nut, Self-locking
09	4SU-H4737-00-00	Damper, Tail 2
10	4SU-H2116-00-00	Wire, Minus Lead
11	4SU-H2115-00-00	Wire, Plus Lead
12	4GV-H2100-00-00	Battery Assy
13	4LW-H2131-00-00	Band, Battery
14	4SU-H2150-00-00	Fuse Holder Assy
15	4SU-H2151-10-00	• . Fuse 20a
16	3TB-82310-00-00	Ignition Coil Assy
17	9201M-05020-00	Bolt, Button Head
18	3YF-82370-00-00	Plug Cap Assy
19	9701L-06025-00	Bolt Hex.
20	9290L-06600-00	Washer Plain
21	4JH-81960-00-00	Rectifier & Regulator Assy
22	9290L-06200-00	Washer Plain
23	90185-06837-00	Nut, Self-locking
24	4SU-H2501-00-00	Main Switch
25	4SU-H252V-00-00	Screw, Special
26	4SU-H2514-00-00	Stay, Main Switch
27	4SU-H2590-00-00	Wire Harness Assy
28	3WP-81980-00-00	• . Diode
29	3XV-81980-00-00	• . Diode
30	4SU-H2151-00-00	• . Fuse 7,5a
31	4SU-H3936-00-00	Band, Switch Cord
32	4GV-H3936-00-00	Band, Switch Cord
33	2AJ-F3192-50-00	Band, Sw. Cord

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

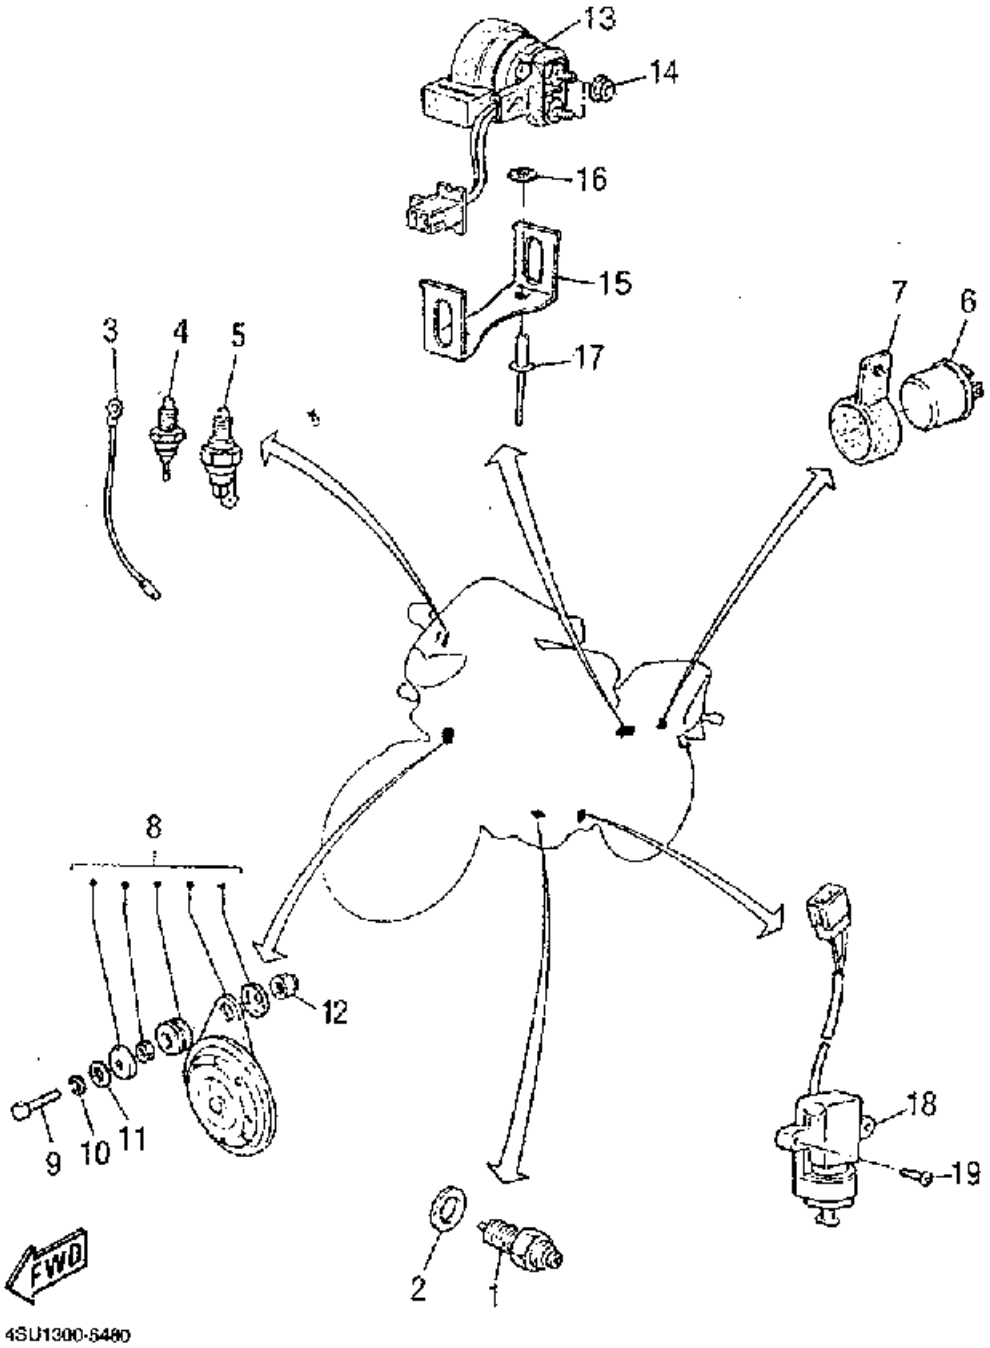

Ref No	Part No	Description
01	4GY-82540-10-00	Neutral Switch Assy
02	90430-10148-00	Gasket
03	1VJ-82519-00-00	Wire, Earth Lead
04	3LN-82560-00-00	Thermo Switch Assy
05	4SU-83591-00-00	Thermo Unit
06	4DL-H3350-00-00	Flasher Relay Assy
07	4DL-H3353-00-00	Damper
08	3SH-H3371-00-00	Horn
09	90101-06868-00	Bolt Hex.
10	90204-06801-00	Washer, Spring
11	9290L-06200-00	Washer
12	90185-06837-00	Nut, Self-locking
13	3SX-81940-00-00	Starter Relay Assy
14	9570L-06500-00	Nut, Flg
15	4SU-H1948-00-00	Bracket
16	90201-044A2-00	Washer, Plate
17	90267-40076-00	Rivet, Blind
18	3LD-82566-50-00	Switch, Side Stand
19	90110-05835-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.