
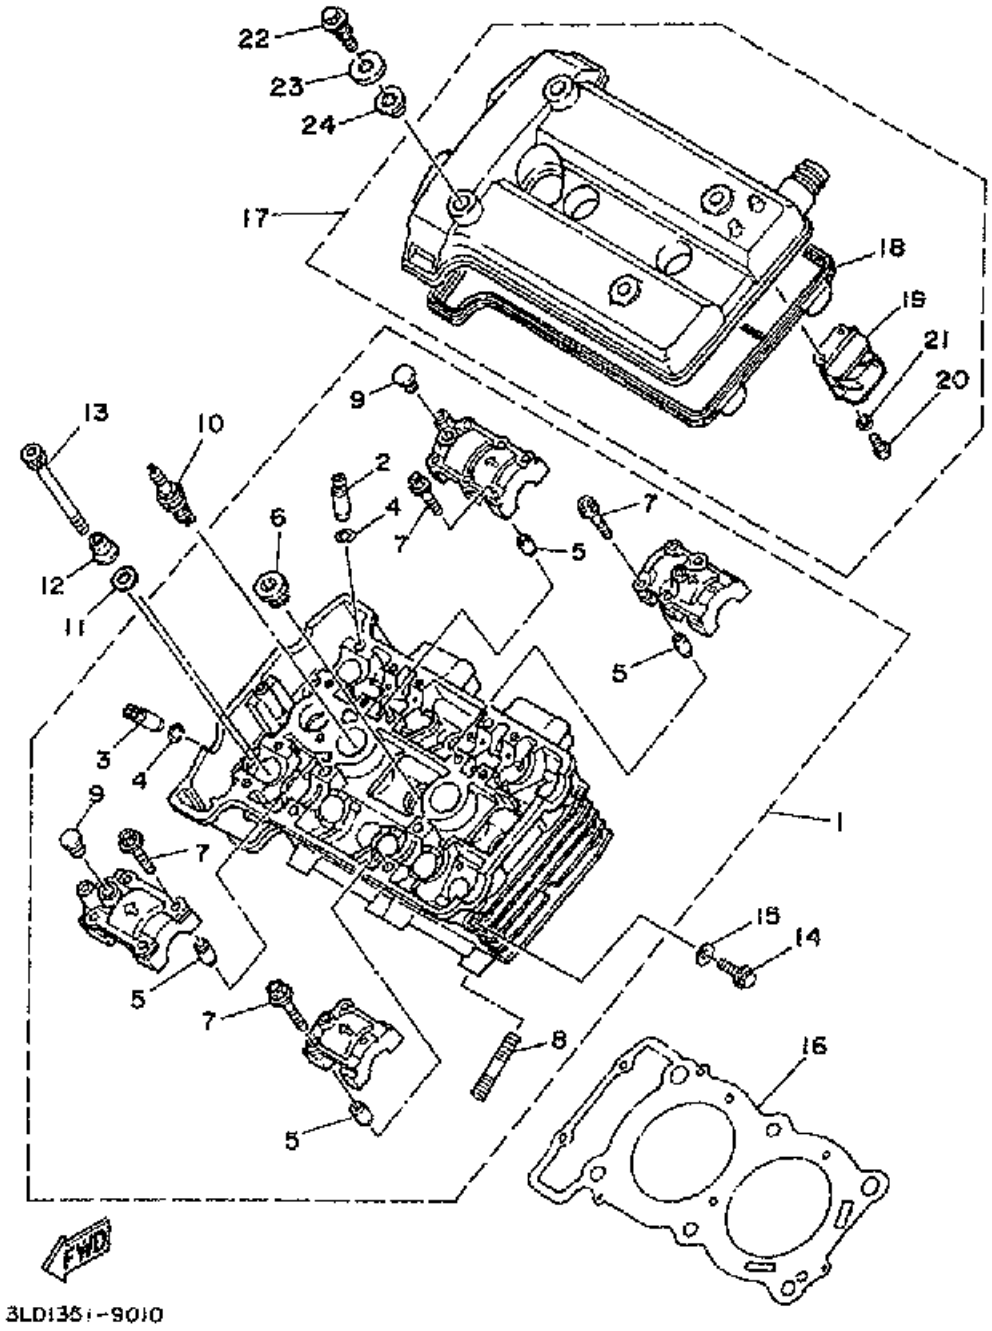



Ref No	Part No	Description
01	3LD-11101-01-00	Cylinder Head Assy
02	3LD-11133-10-00	• . Guide, Intake Valve
03	3LD-11134-10-00	• . Guide, Exhaust Valve
04	93440-10109-00	• . Circlip
05	99510-08016-00	• . Pin, Dowel
06	90340-18101-00	• . Plug, Straight Screw
07	90105-06153-00	• . Bolt, Washer Based
08	90116-08321-00	• . Bolt, Stud
09	90338-10150-00	• . Plug
10	94701-00241-00	Plug, Spark (ngk Dpr8ea-9)
10	94701-00242-00	Plug, Spark (nd X24epr-u9)
11	90201-103M4-00	Washer, Plate
12	90179-10414-00	Nut
13	91317-06150-00	Bolt
14	95027-08012-00	Bolt, Flange
15	90430-08143-00	Gasket
16	3LD-11181-00-00	Gasket, Cylinder Head 1
17	3LD-Y1119-00-00	Cover Assy, Cylinder Head
18	3LD-11193-01-00	• . Gasket, Head Cover 1
19	3LD-11160-02-00	• . Breather Assy
20	98507-04006-00	• . Screw, Pan Head
21	92907-04100-00	• . Washer, Spring
22	90109-064F0-00	Bolt
23	90209-11262-00	Washer
24	2GH-1111G-00-00	Rubber, Mount 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

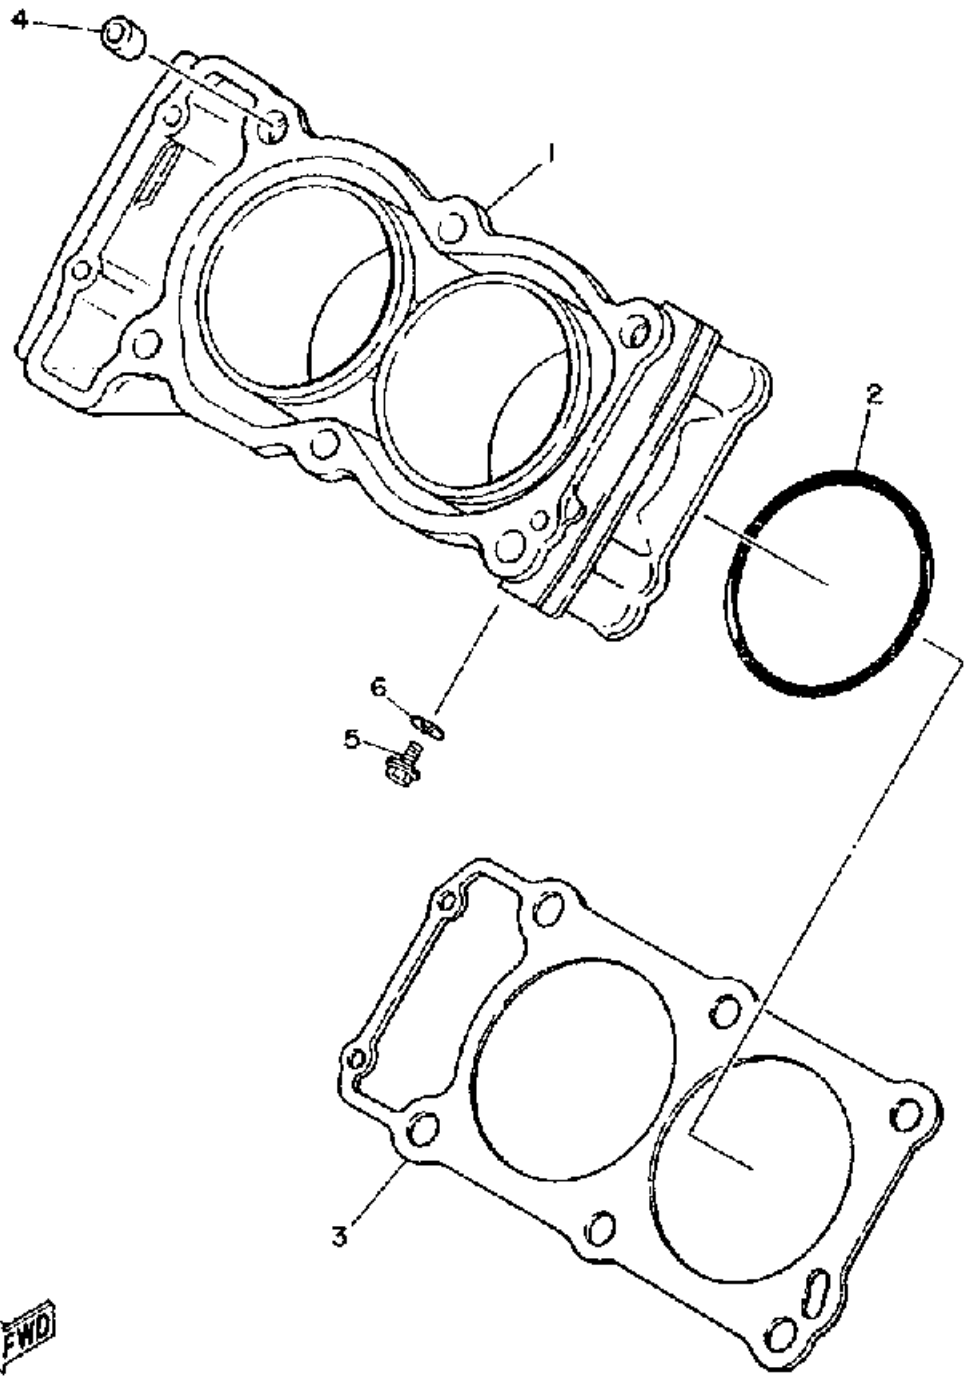


Ref No	Part No	Description
01	3LD-11310-00-00	Cylinder
02	93210-90785-00	O-ring
03	3LD-11351-00-00	Gasket, Cylinder
04	99530-14016-00	Pin, Dowel
05	90153-06045-00	Screw, Hexagon
06	90430-06014-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

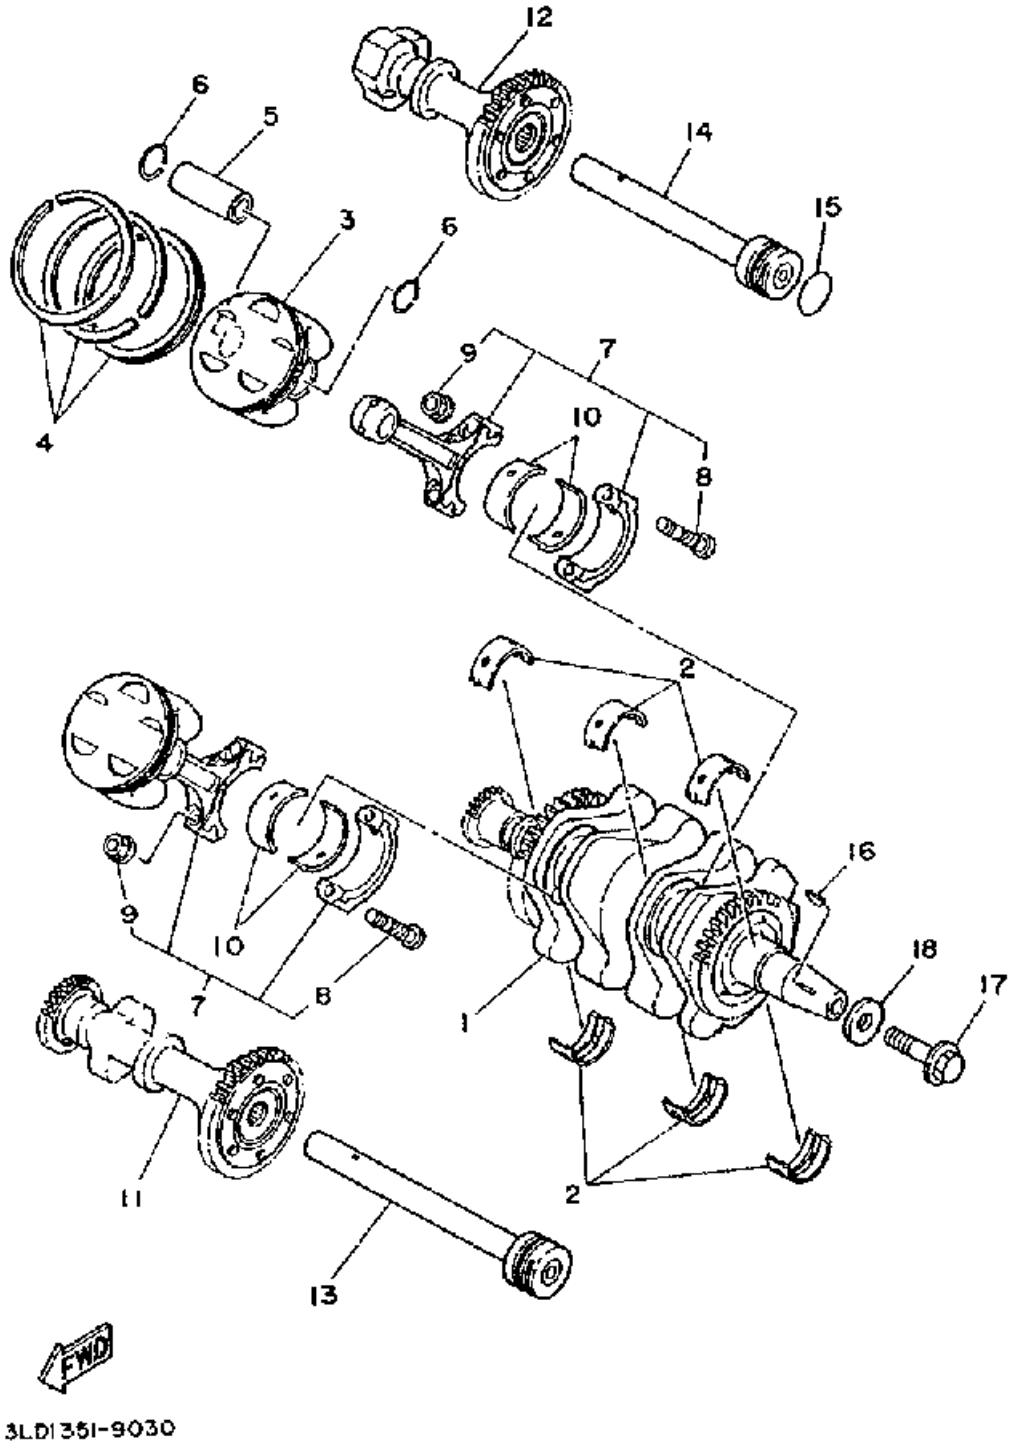


Ref No	Part No	Description
01	3LD-11400-10-00	Crankshaft Assy
02	3LD-11416-00-00	Plane Bearing, Crankshaft 1
02	3LD-11416-10-00	Plane Bearing, Crankshaft 1
02	3LD-11416-20-00	Plane Bearing, Crankshaft 1
02	3LD-11416-30-00	Plane Bearing, Crankshaft 1
02	3LD-11416-40-00	Plane Bearing, Crankshaft 1
02	3LD-11416-50-00	Plane Bearing, Crankshaft 1
02	3LD-11416-60-00	Plane Bearing, Crankshaft 1
03	3LD-11631-00-00	Piston (std)
03	3LD-11636-00-00	Piston (0.50mm O/s)
03	3LD-11638-00-00	Piston (1.00mm O/s)
04	3LD-11610-00-00	Piston Ring Set (std)
04	3LD-11610-20-00	Piston Ring Set (0.50mm Ug)
04	3LD-11610-40-00	Piston Ring Set (1.00mm Ug)
05	3LD-11633-00-00	Pin, Piston
06	93450-22027-00	Circlip
07	3LD-11650-00-00	Connecting Rod Assy
08	3LD-11654-00-00	• . Bolt, Connecting Rod
09	90179-09379-00	• . Nut
10	3LD-11656-00-00	Plane Bearing, Connecting Rod
10	3LD-11656-10-00	Plane Bearing, Connecting Rod
10	3LD-11656-20-00	Plane Bearing, Connecting Rod
10	3LD-11656-30-00	Plane Bearing, Connecting Rod
11	3LD-11500-00-00	Balancer Assy
12	3LD-11510-00-00	Balancer Assy, 2
13	3LD-11583-00-00	Shaft, Balancer 1
14	3LD-11584-00-00	Shaft, Balancer 2
15	93210-30660-00	O-ring
16	90280-05029-00	Key, Woodruff
17	90105-12584-00	Bolt, Washer Based
18	90210-121H0-00	Washer, Seal

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

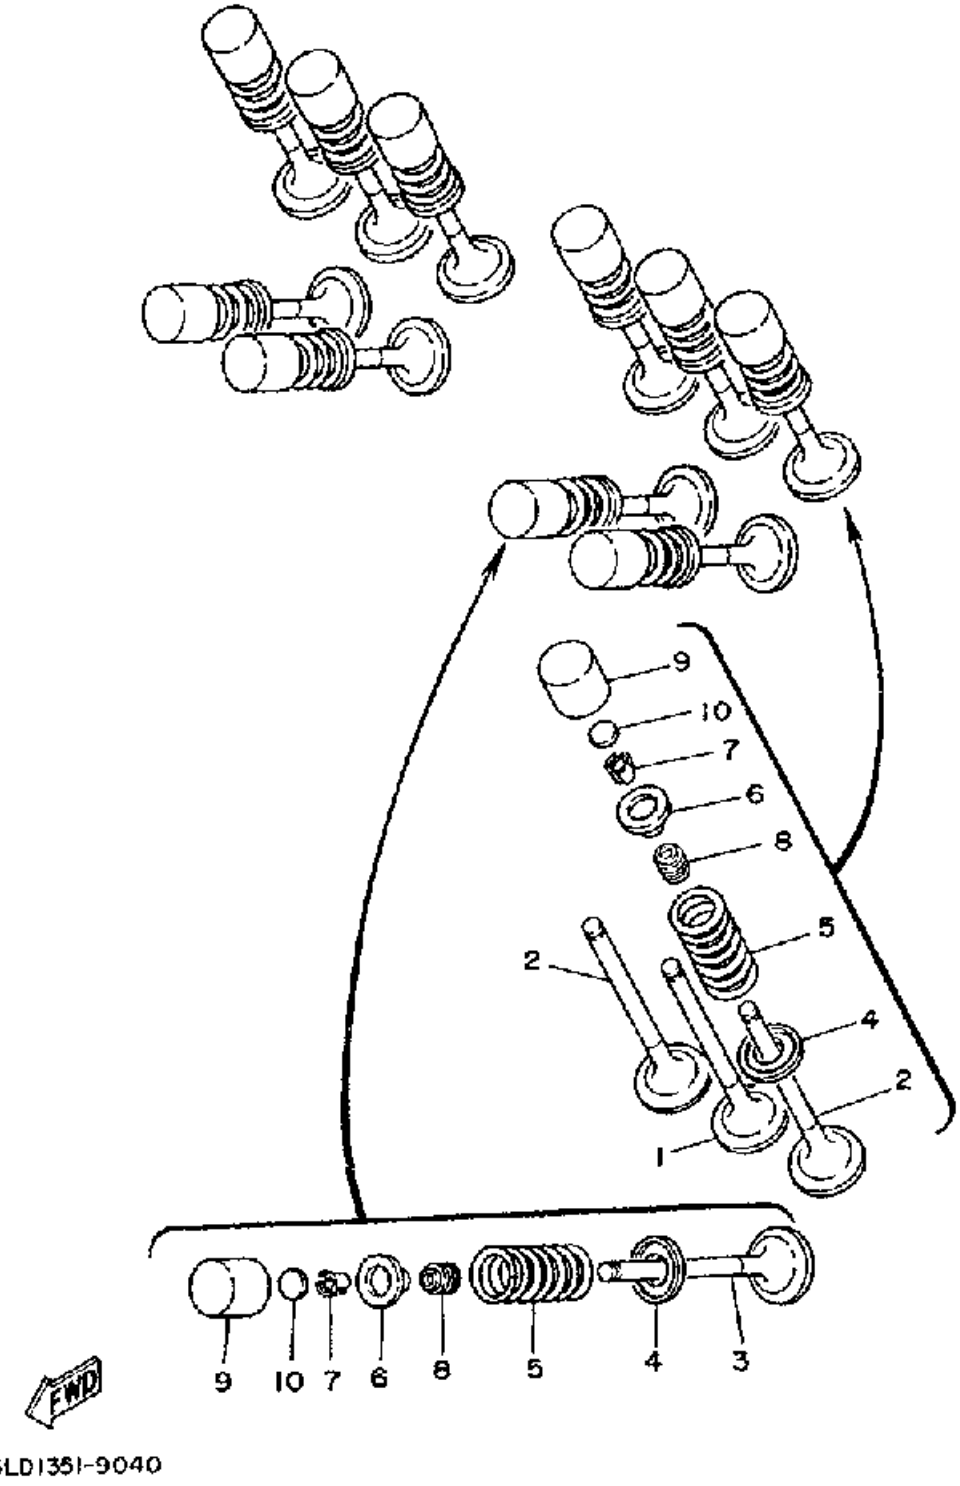


Ref No	Part No	Description
01	3LD-12111-00-00	Valve, Intake (3ld.)
02	3LD-12112-00-00	Valve, Intake 2 (3ld.)
03	3LD-12121-00-00	Valve, Exhaust (3ld.)
04	1WG-12116-00-00	Seat, Valve Spring
05	3LD-12113-00-00	Spring, Valve Inner
06	3LD-12117-00-00	Retainer, Valve Spring
07	3LD-12118-00-00	Cotter, Valve
08	51Y-12119-00-00	Seal, Valve Stem
09	1WG-12153-21-00	Lifter, Valve
09	1WG-12153-31-00	Lifter, Valve
09	1WG-12153-09-00	Lifter, Valve
10	3LD-12168-00-00	Pad, Adjusting (1.20)
10	3LD-12168-M1-00	Pad, Adjusting (1.65)
10	3LD-12168-R1-00	Pad, Adjusting (1.70)
10	3LD-12168-U1-00	Pad, Adjusting (1.75)
10	3LD-12168-W1-00	Pad, Adjusting (1.80)
10	3LD-12168-Y1-00	Pad, Adjusting (1.85)
10	3LD-12169-11-00	Pad, Adjusting (1.90)
10	3LD-12169-31-00	Pad, Adjusting (1.95)
10	3LD-12169-50-00	Pad, Adjusting (2.00)
10	3LD-12169-70-00	Pad, Adjusting (2.05)
10	3LD-12169-90-00	Pad, Adjusting (2.10)
10	3LD-12168-20-00	Pad, Adjusting (1.25)
10	3LD-12169-E0-00	Pad, Adjusting (2.15)
10	3LD-12169-G0-00	Pad, Adjusting (2.20)
10	3LD-12169-J0-00	Pad, Adjusting (2.25)
10	3LD-12169-L0-00	Pad, Adjusting (2.30)
10	3LD-12169-N0-00	Pad, Adjusting (2.35)
10	3LD-12169-T0-00	Pad, Adjusting (2.40)
10	3LD-12168-40-00	Pad, Adjusting (1.30)
10	3LD-12168-60-00	Pad, Adjusting (1.35)
10	3LD-12168-80-00	Pad, Adjusting (1.40)
10	3LD-12168-A0-00	Pad, Adjusting (1.45)
10	3LD-12168-F0-00	Pad, Adjusting (1.50)
10	3LD-12168-H1-00	Pad, Adjusting (1.55)
10	3LD-12168-K1-00	Pad, Adjusting (1.60)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

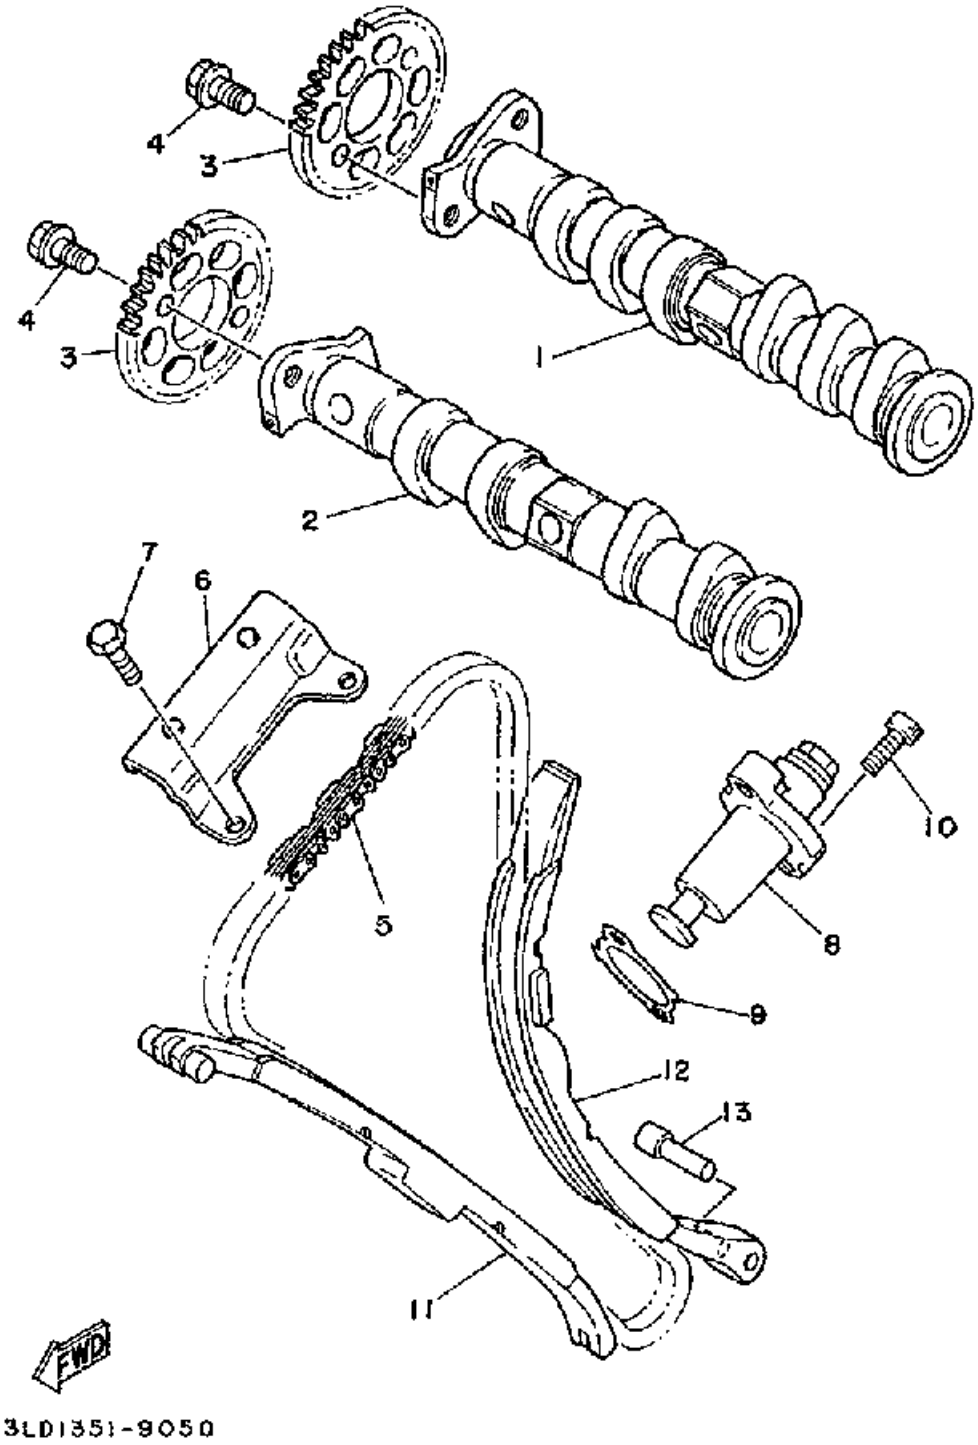


Ref No	Part No	Description
01	3LD-12171-00-00	Camshaft 1
02	3LD-12181-00-00	Camshaft 2
03	3LD-12176-00-00	Sprocket, Cam Chain
04	90105-07342-00	Bolt, Washer Based
05	94591-40138-00	Chain (82rh2015-138l)
06	3LD-12241-00-00	Guide, Stopper 2
07	97027-06012-00	Bolt
08	3LD-12210-00-00	Tensioner Assy, Cam Chain
09	3VD-12213-00-00	Gasket, Tensioner Case
10	91317-06025-00	Bolt
11	3LD-12251-00-00	Damper, Chain 1
12	3LD-12252-00-00	Damper, Chain 2
13	3LD-12247-00-00	Shaft, Tensioner

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

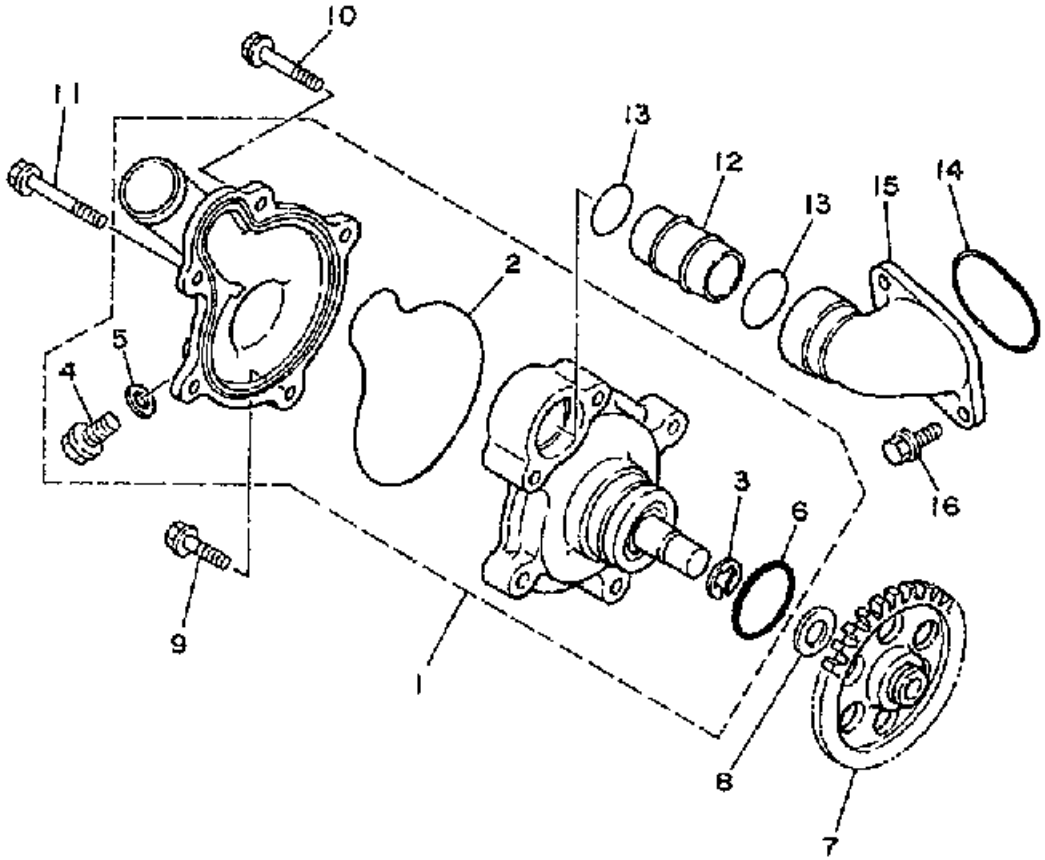


Ref No	Part No	Description
01	3LD-Y1242-00-00	Water Pump Assy
02	3LD-12439-00-00	• . O-ring
03	99009-12400-00	• . Circlip
04	95027-06012-00	• . Bolt, Flange
05	90430-06014-00	• . Gasket
06	93210-33133-00	• . O-ring
07	3VD-12459-00-00	Gear, Impeller Shaft
08	90201-127E1-00	Washer, Plate
09	95027-06030-00	Bolt, Flange
10	95027-06045-00	Bolt, Flange
11	95027-06060-00	Bolt, Flange
12	3LD-12481-00-00	Pipe 1
13	93210-21190-00	O-ring
14	93210-36788-00	O-ring
15	3LD-12469-00-00	Joint 1
16	95027-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

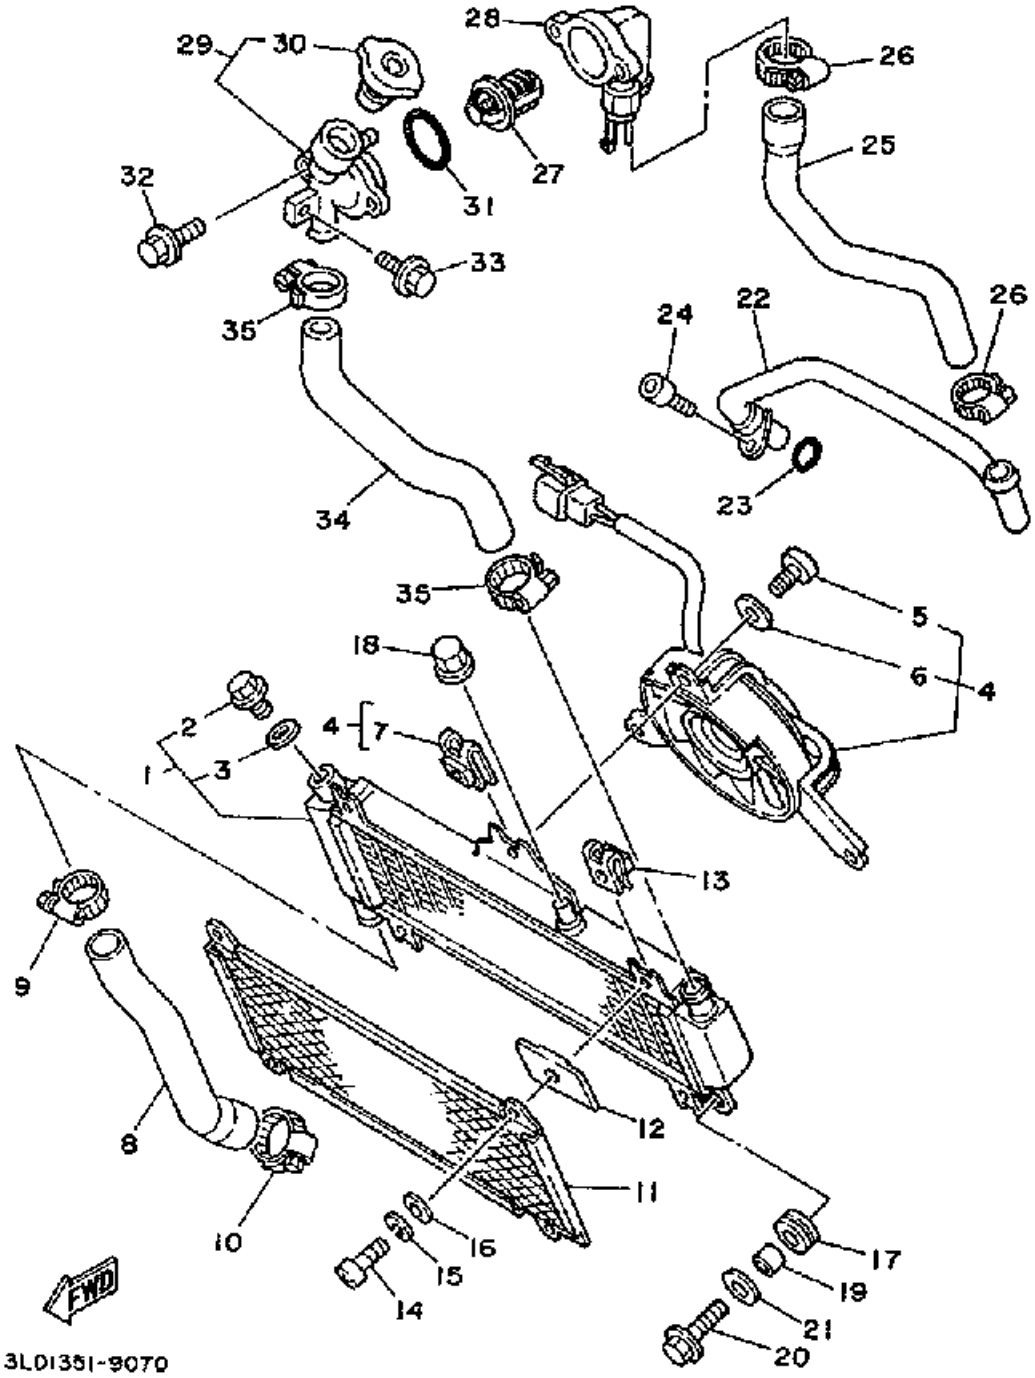


Ref No	Part No	Description
01	3LD-12461-00-00	Radiator Assy
02	1AA-12561-00-00	• . Plug,drain Cock
03	1AA-12435-00-00	• . Gasket
04	3LD-12405-00-00	Blower Assy
05	98507-05010-00	• . Screw, Pan Head
06	92907-05600-00	• . Washer, Plate
07	90183-05024-00	• . Nut, Spring
08	3LD-12578-00-00	Hose 3
09	90450-32051-00	Hose Clamp Assy
10	90450-38040-00	Hose Clamp Assy
11	3LD-12498-00-00	Protector
12	3LD-1246A-00-00	Cover 1
13	90183-05024-00	Nut, Spring
14	98507-05012-00	Screw, Pan Head
15	92907-05100-00	Washer, Spring
16	92907-05600-00	Washer, Plate
17	90480-15363-00	Grommet
18	90338-20188-00	Plug
19	90387-07392-00	Collar
20	95807-06025-00	Bolt, Flange
21	90201-063J2-00	Washer, Plate
22	3LD-12482-00-00	Pipe 2
23	93210-18417-00	O-ring
24	91317-06016-00	Bolt
25	3LD-12577-00-00	Hose 2
26	90450-32051-00	Hose Clamp Assy
27	3LD-12410-00-00	Thermostat Assy
28	3LD-12417-00-00	Housing, Thermostat
29	3LD-12590-00-00	Conduction Assy
30	22W-12462-00-00	• . Cap, Radiator
31	93210-41042-00	O-ring
32	95027-06020-00	Bolt, Flange
33	95807-06020-00	Bolt, Flange
34	3LD-12579-00-00	Hose 4
35	90450-32051-00	Hose Clamp Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

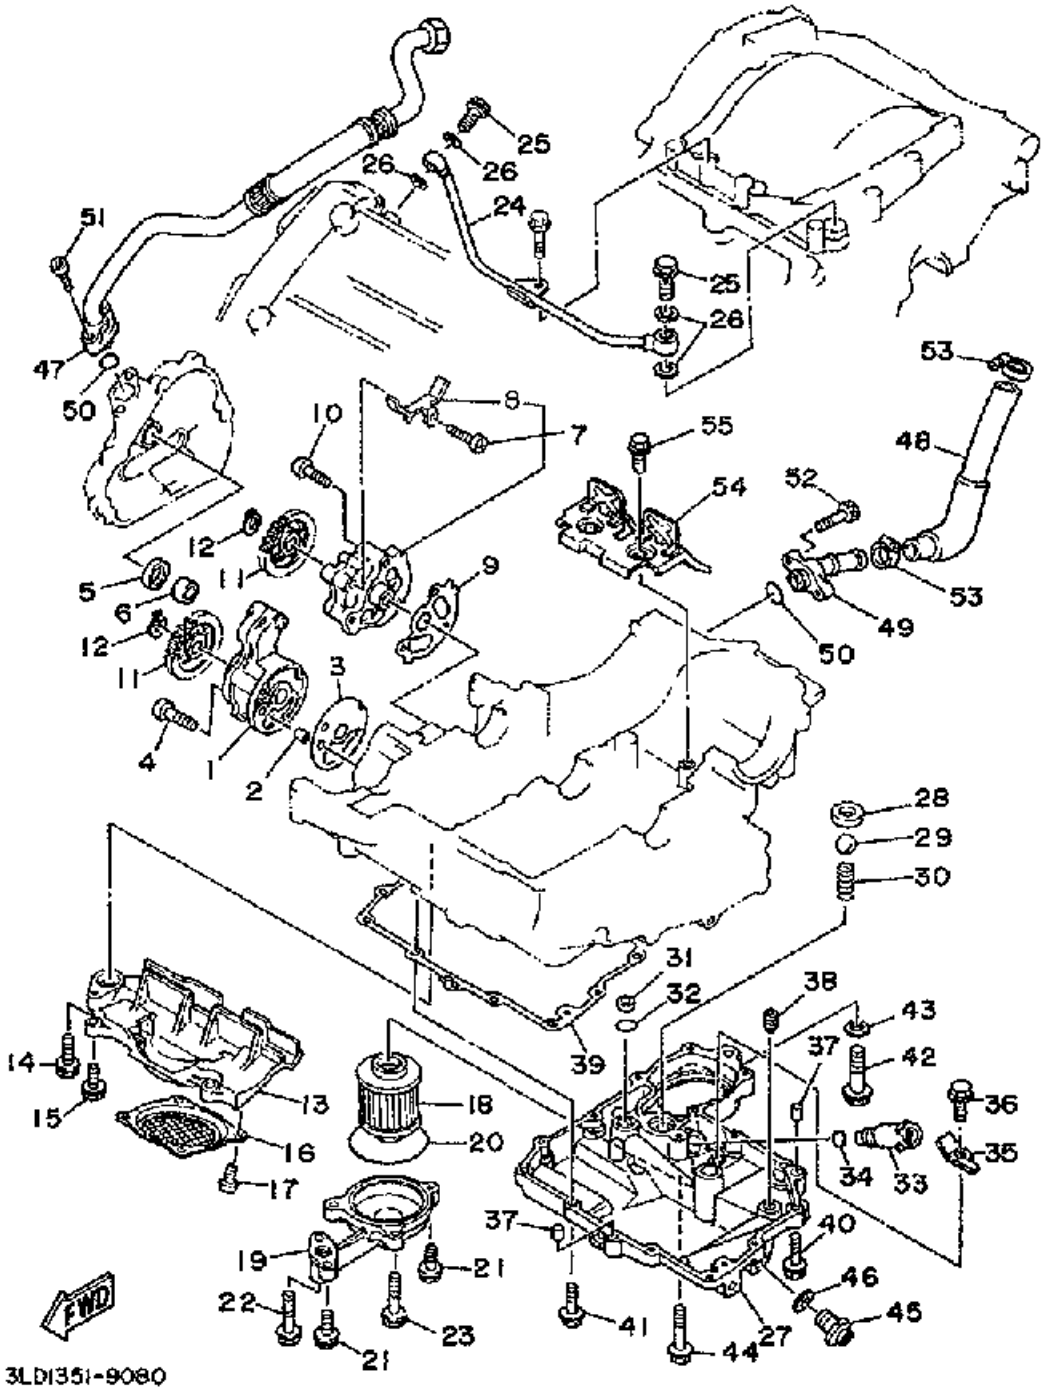


Ref No	Part No	Description
01	3LD-13300-00-00	Oil Pump Assy
02	99510-08012-00	Pin, Dowel
03	3LD-13329-00-00	Gasket, Pump Cover
04	98507-06045-00	Screw, Pan Head
05	90430-14131-00	Gasket
06	90387-120W5-00	Collar
07	3LD-13303-00-00	Oil Pump Assy, 2
08	3LD-13371-00-00	• . Plate
09	3LD-13339-00-00	Gasket, Pump Cover
10	98507-06035-00	Screw, Pan Head
11	3VD-13325-00-00	Gear, Pump Driven
12	99009-11400-00	Circlip
13	3LD-13412-00-00	Housing, Strainer
14	95027-06025-00	Bolt, Flange
15	95027-06020-00	Bolt, Flange
16	3LD-13411-00-00	Strainer, Oil
17	98507-06010-00	Screw, Pan Head
18	4X7-13440-90-00	Element Assy, Oil Cleaner
19	3LD-13447-00-00	Cover, Oil Element
20	93210-64297-00	O-ring
21	95027-06020-00	Bolt, Flange
22	95027-06030-00	Bolt, Flange
23	95027-06040-00	Bolt, Flange
24	3LD-13161-00-00	Pipe, Delivery 1
25	90401-10106-00	Bolt, Union
26	90430-10171-00	Gasket
27	3LD-13417-00-00	Cover, Strainer
28	3LD-13113-00-00	Seat, Check Ball
29	93505-08030-00	Ball
30	90501-104F9-00	Spring, Compression
31	90387-106W6-00	Collar
32	93210-12790-00	O-ring
33	11H-13490-00-00	Relief Valve Assy
34	93210-10096-00	O-ring
35	3LD-13151-00-00	Stay
36	90105-06533-00	Bolt, Washer Based
37	99510-08016-00	Pin, Dowel
38	4H7-15138-00-00	Nozzle 1
39	3VD-13414-00-00	Gasket, Strainer Cover
40	90105-06456-00	Bolt, Washer Based
41	95027-06025-00	Bolt, Flange
42	95027-10040-00	Bolt, Flange
43	90430-10171-00	Gasket
44	95027-06035-00	Bolt, Flange
45	3VD-13455-00-00	Plug
46	214-11198-01-00	Gasket
47	3LD-13464-00-00	Hose, Oil 1
48	3LD-13465-00-00	Hose, Oil 2
49	3LD-13416-00-00	Pipe, Oil 1
50	93210-13657-00	O-ring
51	91317-06020-00	Bolt
52	90110-06093-00	Bolt, Hexagon Socket Head
53	90460-27270-00	Clamp, Hose
54	3VD-13317-00-00	Plate, Baffle

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

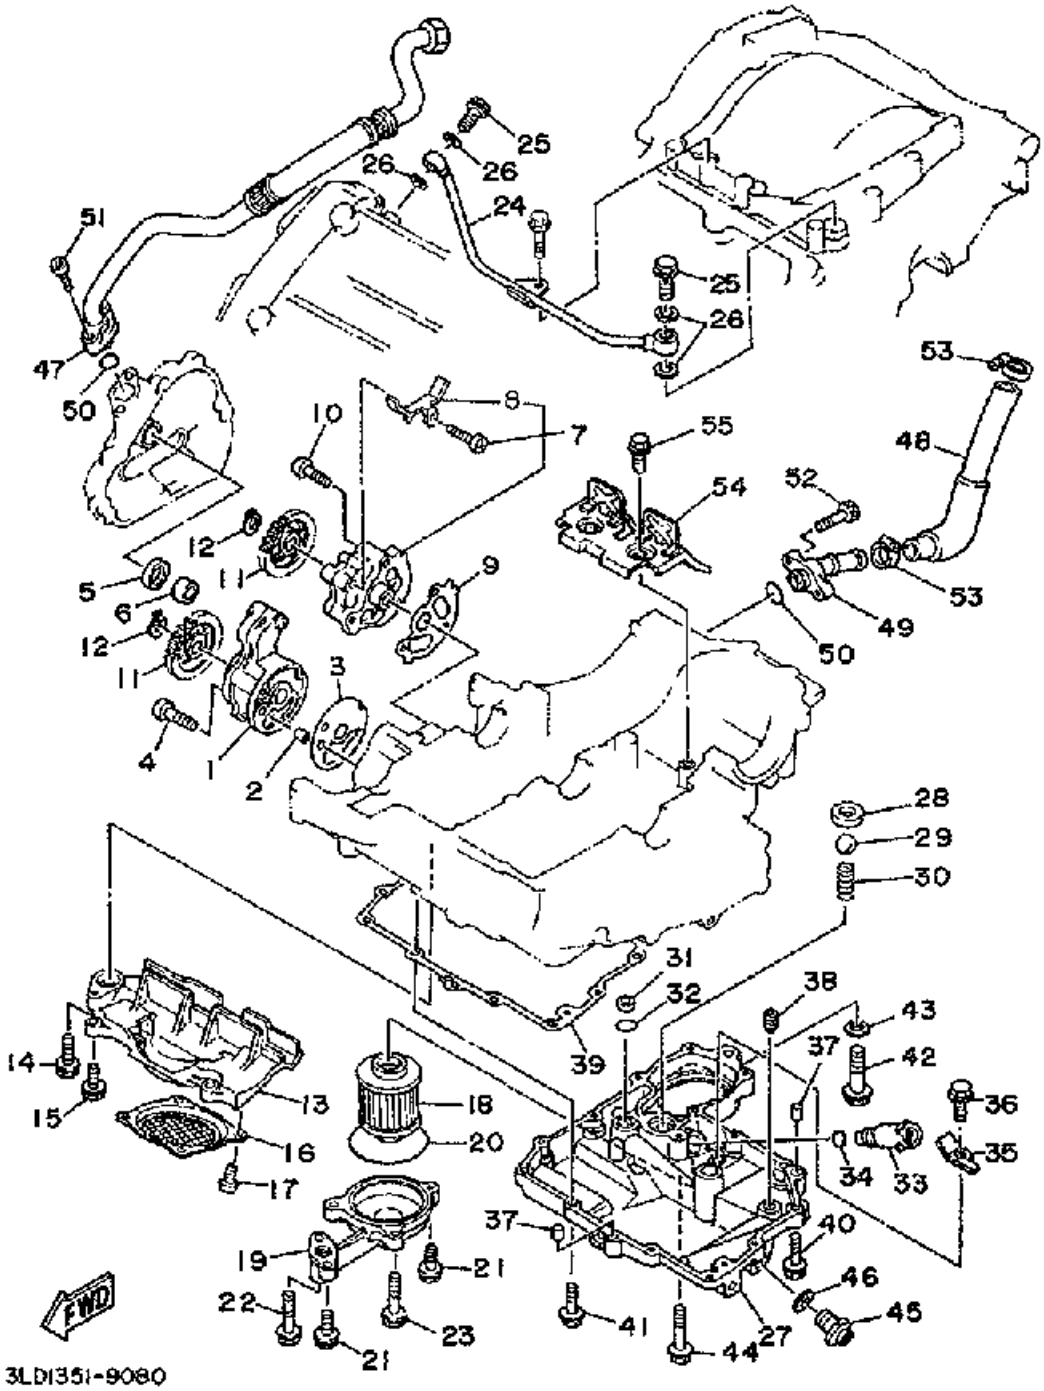


Ref No	Part No	Description
55	90105-06553-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

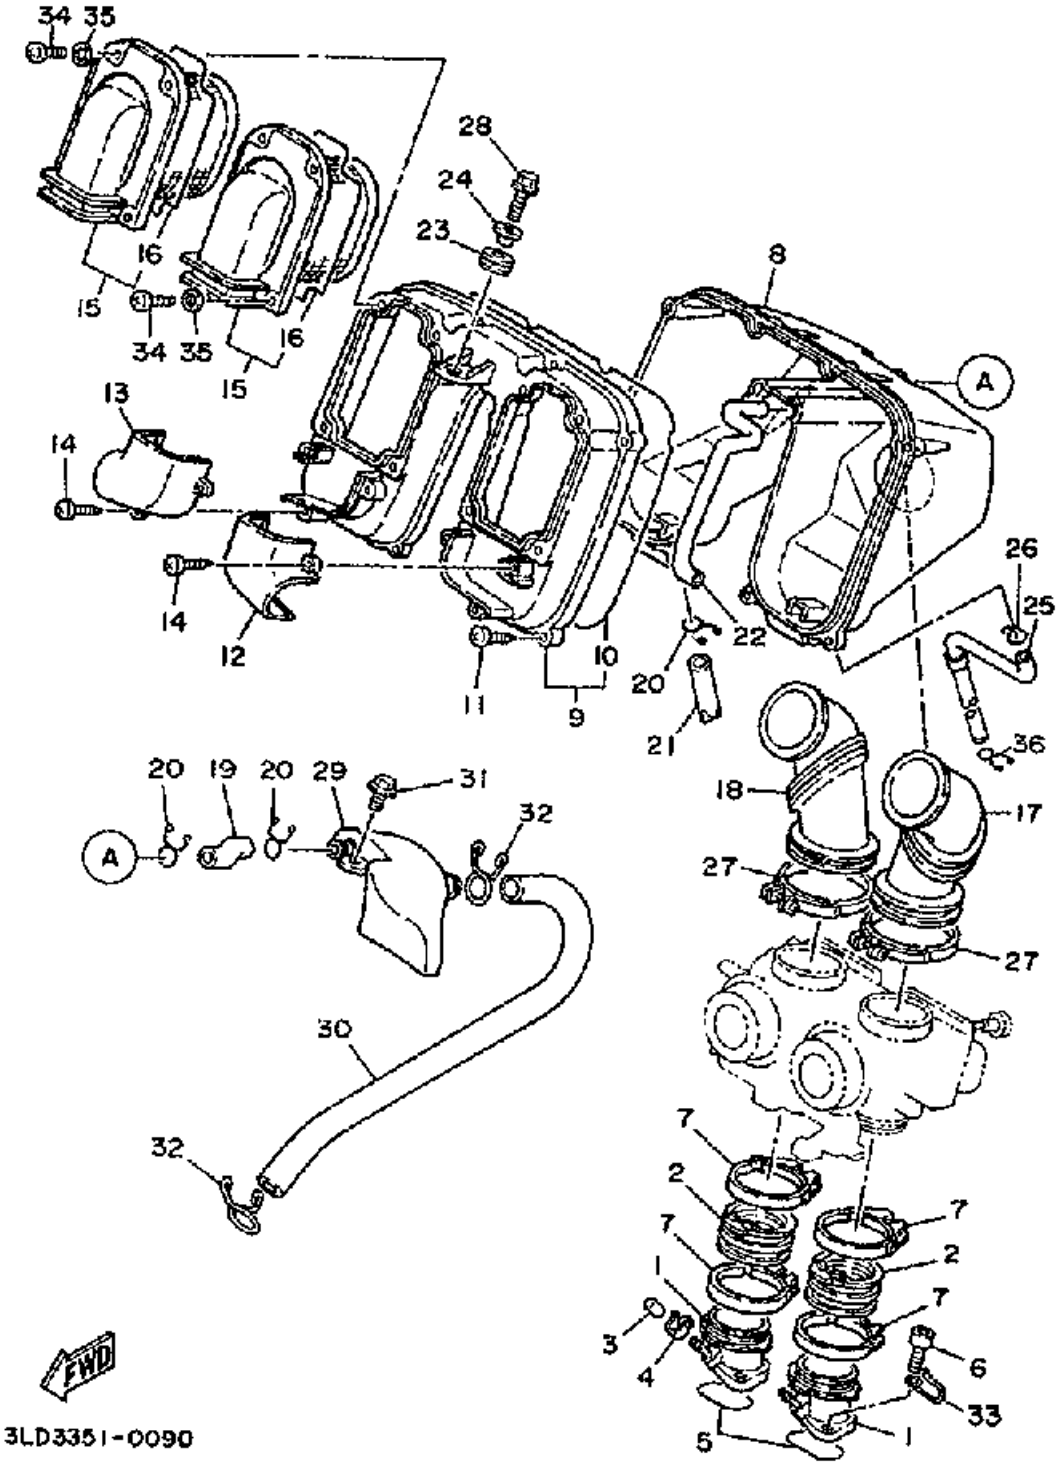


Ref No	Part No	Description
01	3LD-13586-01-00	Joint, Carburetor 1
02	3LD-13597-00-00	Joint, Carburetor 3
03	16G-13569-00-00	Plug, Blind
04	90467-10039-00	Clip
05	93210-44545-00	O-ring
06	91317-06020-00	Bolt
07	90450-57034-00	Hose Clamp Assy
08	3LD-14411-01-00	Case, Air Cleaner 1
09	3LD-14421-01-00	Case, Air Cleaner 2
10	3LD-14452-00-00	• . Seal
11	97707-50620-00	Screw, Tapping
12	3LD-14417-00-00	Cover 1
13	3LD-14418-00-00	Cover 2
14	97707-40612-00	Screw, Tapping
15	3LD-14450-00-00	Element Assy, Air Cleaner
16	3LD-14462-00-00	• . Seal
17	3LD-14453-01-00	Joint, Air Cleaner 1
18	3LD-14463-01-00	Joint, Air Cleaner 2
19	3LD-14419-00-00	Pipe
20	90467-15012-00	Clip
21	3AJ-1443E-00-00	Pipe, Drain
22	3WM-14419-00-00	Pipe
23	90480-12314-00	Grommet
24	90387-065J6-00	Collar
25	3LD-14348-00-00	Pipe 1
26	90467-15012-00	Clip
27	90450-67066-00	Hose Clamp Assy
28	95807-06020-00	Bolt, Flange
29	3LD-15371-10-00	Breather
30	3LD-15393-10-00	Pipe, Breather 2
31	90119-06042-00	Bolt, With Washer
32	90467-22080-00	Clip
33	90465-20035-00	Clamp
34	98507-05018-00	Screw, Pan Head
35	92907-05600-00	Washer, Plate
36	90467-10008-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

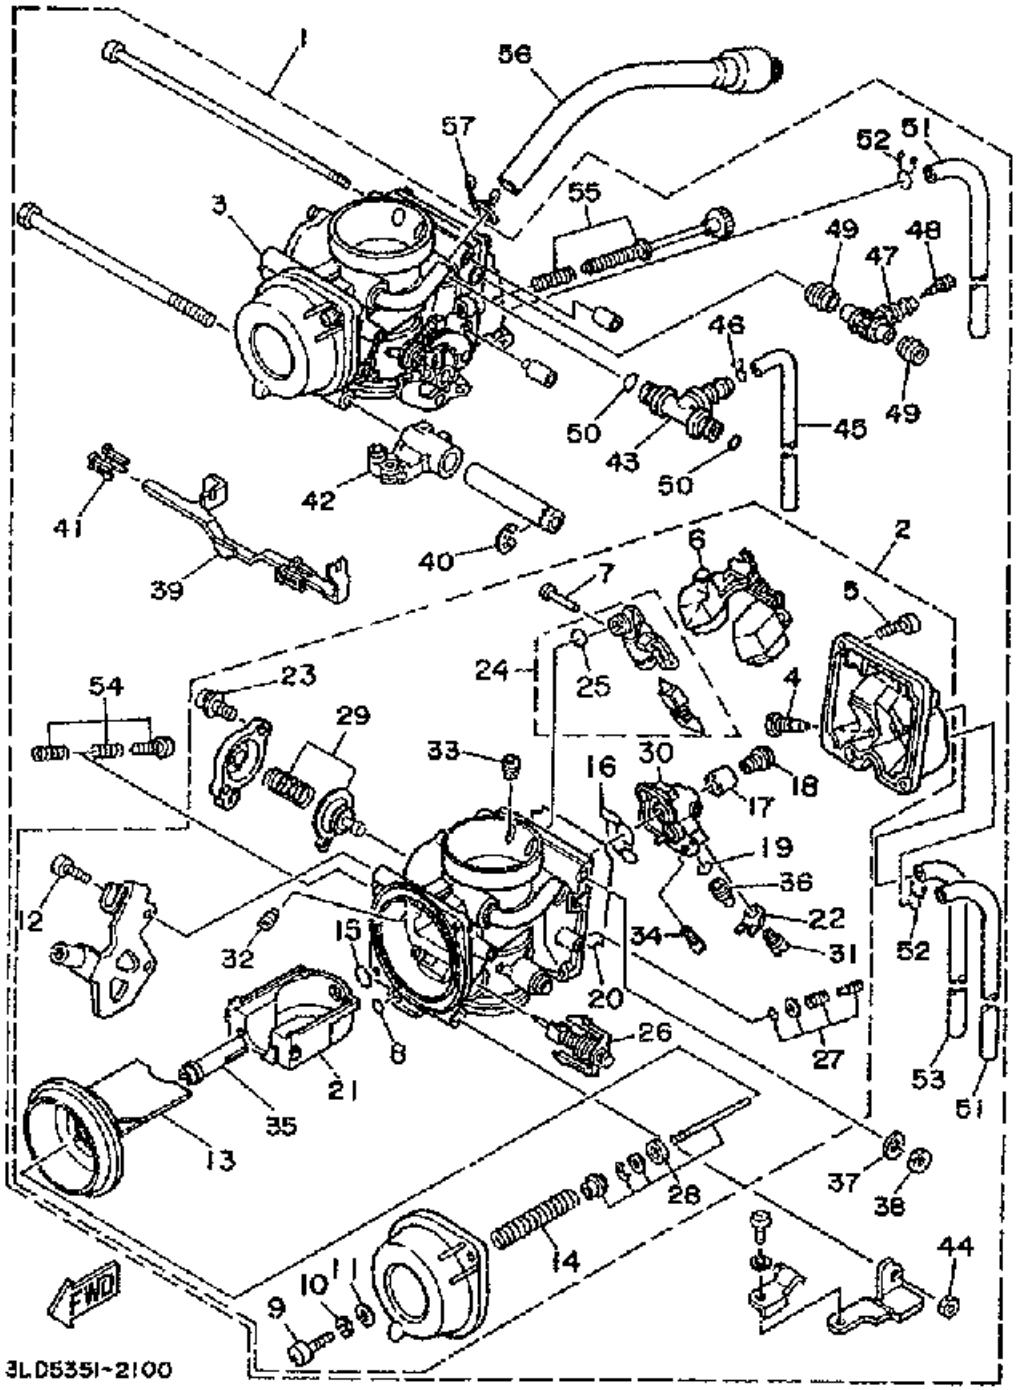


Ref No	Part No	Description
01	3LD-14900-00-00	Carburetor Assy
02	3LD-14901-00-00	• . Carburetor Assy 1
03	3LD-14902-00-00	• . Carburetor Assy 2
04	3FV-14191-00-00	•• .. Plug, Drain
05	98507-05012-00	•• .. Screw, Pan Head
06	3GM-14985-00-00	•• .. Float
07	53L-14186-00-00	•• .. Pin, Float
08	3FV-14147-00-00	• . O-ring
09	98507-05016-00	•• .. Screw, Pan Head
10	92907-05100-00	•• .. Washer, Spring
11	92907-05600-00	•• .. Washer, Plate
12	98580-04008-00	•• .. Screw, Pan Head
13	3GM-14940-00-00	•• .. Diaphragm Assy
14	3LD-14933-00-00	•• .. Spring, Diaphragm
15	1AE-14147-00-00	•• .. O-ring
16	3LF-14147-00-00	•• .. O-ring
17	3GM-14153-00-00	•• .. Washer, Main Jet
18	1HX-14565-00-00	•• .. Screw
19	3LD-14147-00-00	•• .. O-ring
20	3GM-14997-00-00	•• .. Seal
21	3GM-1411E-00-00	•• .. Block, Jet
22	3LD-14945-00-00	•• .. Jet
23	97601-04312-00	•• .. Screw, Pan Head With Washer
24	3GM-14107-17-00	•• .. Needle Valve Set
25	3EN-14147-00-00	•• .. O-ring
26	3EN-1410A-00-00	•• .. Starter Set
27	12R-14105-00-00	•• .. Pilot Screw Set
28	3LD-1490J-00-00	•• .. Needle Set
29	3LD-1490H-00-00	•• .. Diaphragm Set 5
30	3LD-1411A-00-00	•• .. Block Jet Assy
31	620-14231-14-00	•• .. Jet, Main (70)
32	239-14172-14-00	•• .. Pilot Jet, Air (1.4)
33	830-14231-12-00	•• .. Jet, Main (60)
34	4G0-14142-42-A0	•• .. Jet, Pilot (42.5)
35	3GM-14141-94-00	•• .. Nozzle, Main
36	3LD-1423A-79-00	•• .. Jet, Main (142.5)
37	92901-05600-00	• . Washer, Plate
38	95303-05600-00	• . Nut
39	3LD-14986-00-00	• . Lever, Starter
40	3LD-14919-00-00	• . Clip
41	3EN-14261-00-00	• . Holder
42	3GM-14974-00-00	• . Lever, Connect
43	3LD-14988-00-00	• . Pipe, Starter Connecting
44	95303-06600-00	• . Nut
45	2LH-14197-00-00	• . Pipe
46	8U9-14139-00-00	• . Clip, Pipe
47	3EN-14988-00-00	• . Pipe, Starter Connecting
48	1KT-14994-00-00	• . Net, Filter
49	3EN-14997-00-00	• . Seal
50	822-14147-00-00	• . O-ring
51	3TD-14987-00-00	• . Hose
52	90467-07029-00	• . Clip
53	3JE-14197-00-00	• . Pipe
54	3EN-1490K-00-00	• . Stop Screw Set

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

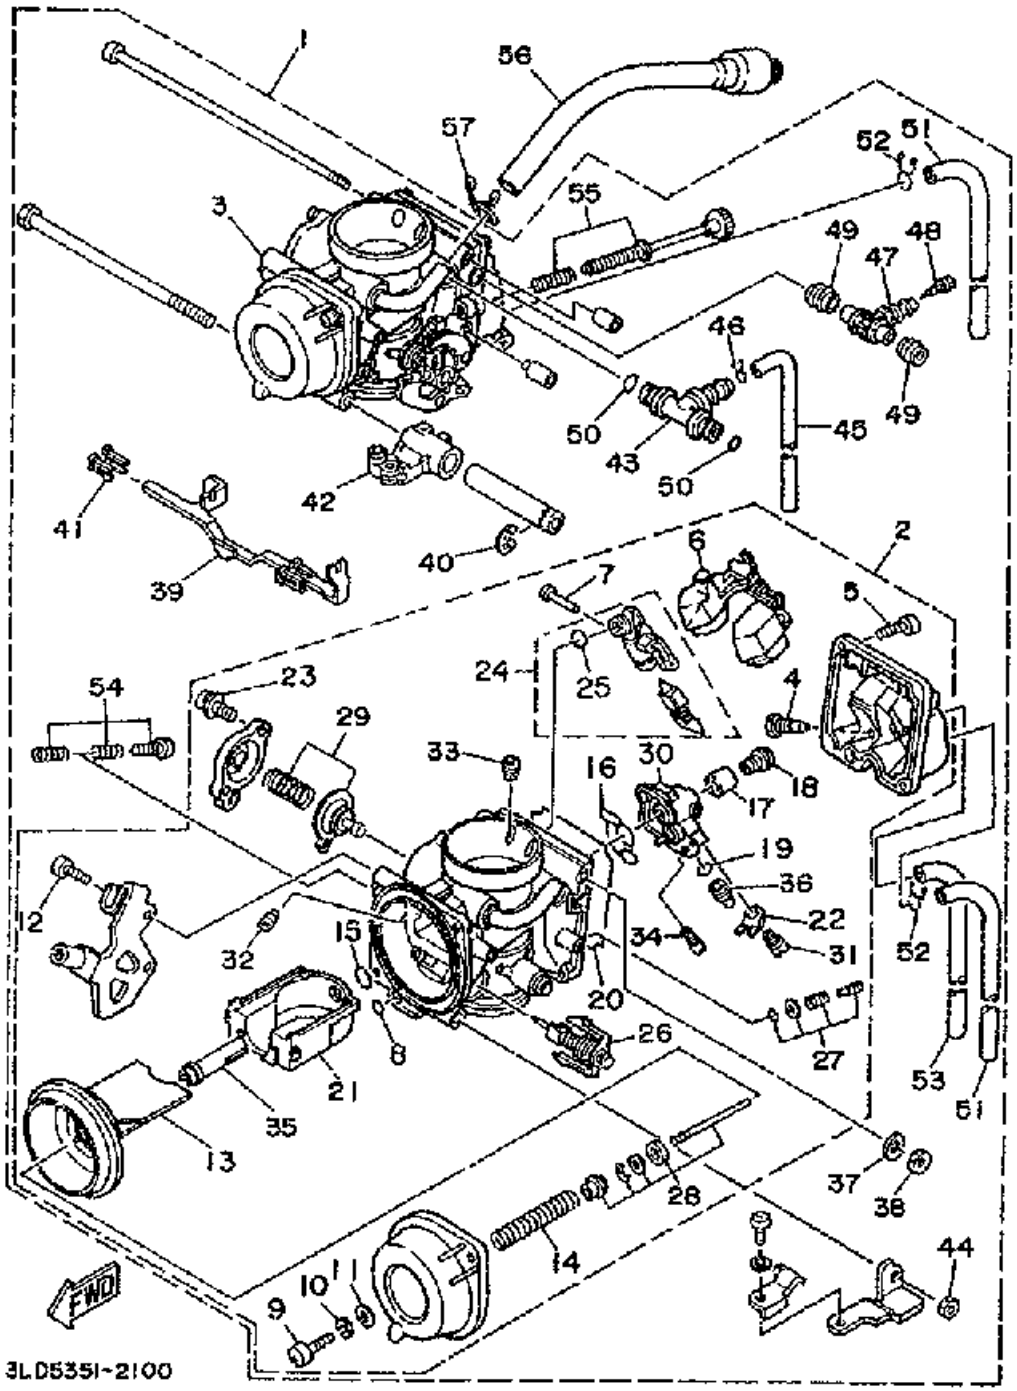


Ref No	Part No	Description
55	3LD-14103-00-00	• . Throttle Screw Set
56	3LD-14197-10-00	Pipe
57	90467-12052-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

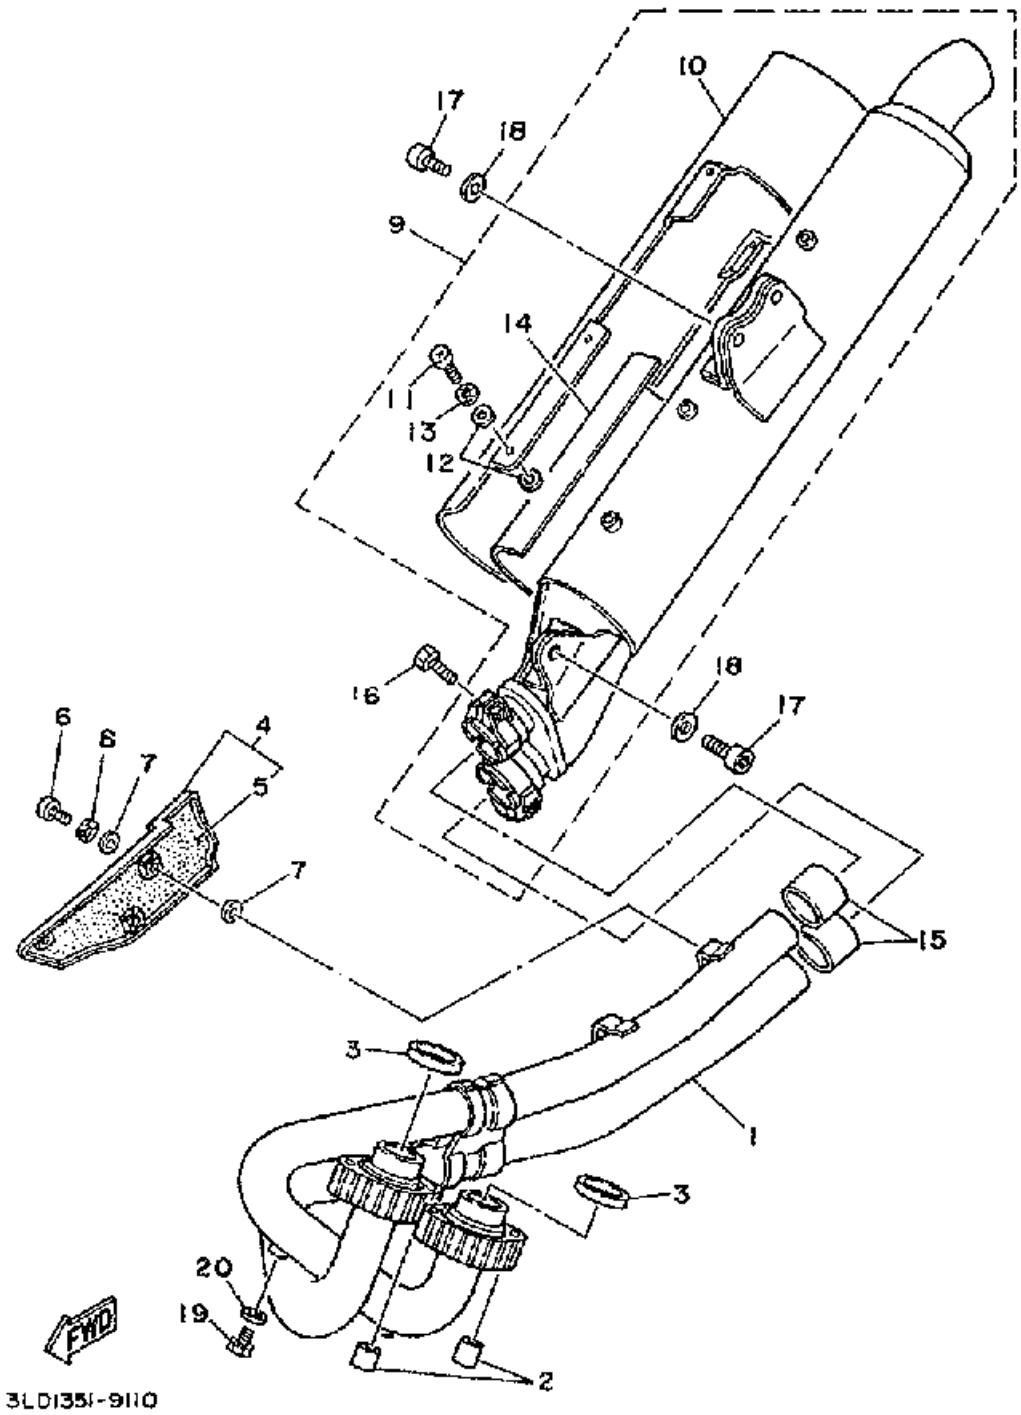


Ref No	Part No	Description
01	3LD-14610-02-00	Exhaust Pipe Assy 1
02	90179-08507-00	Nut
03	3VD-14613-00-00	Gasket, Exhaust Pipe
04	3LD-14628-00-00	Protector, Exhaust Pipe
05	3LD-1465T-00-00	• . Plate, Protector
06	98907-06010-00	Screw, Bind
07	90202-05191-00	Washer, Plate
08	90206-06090-00	Washer, Wave
09	3LD-14711-02-00	Muffler 1
10	3LD-1479H-01-00	• . Cover, 1
11	98907-06008-00	• . Screw, Bind
12	4BD-14766-00-00	• . Washer, Protector
13	90206-06090-00	• . Washer, Wave
14	3LD-14733-00-00	• . Mat 1
15	3LD-14714-00-00	Gasket, Muffler
16	95027-08025-00	Bolt, Flange
17	90109-085E3-00	Bolt
18	90201-08326-00	Washer, Plate
19	90101-06576-00	Bolt
20	92907-06600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

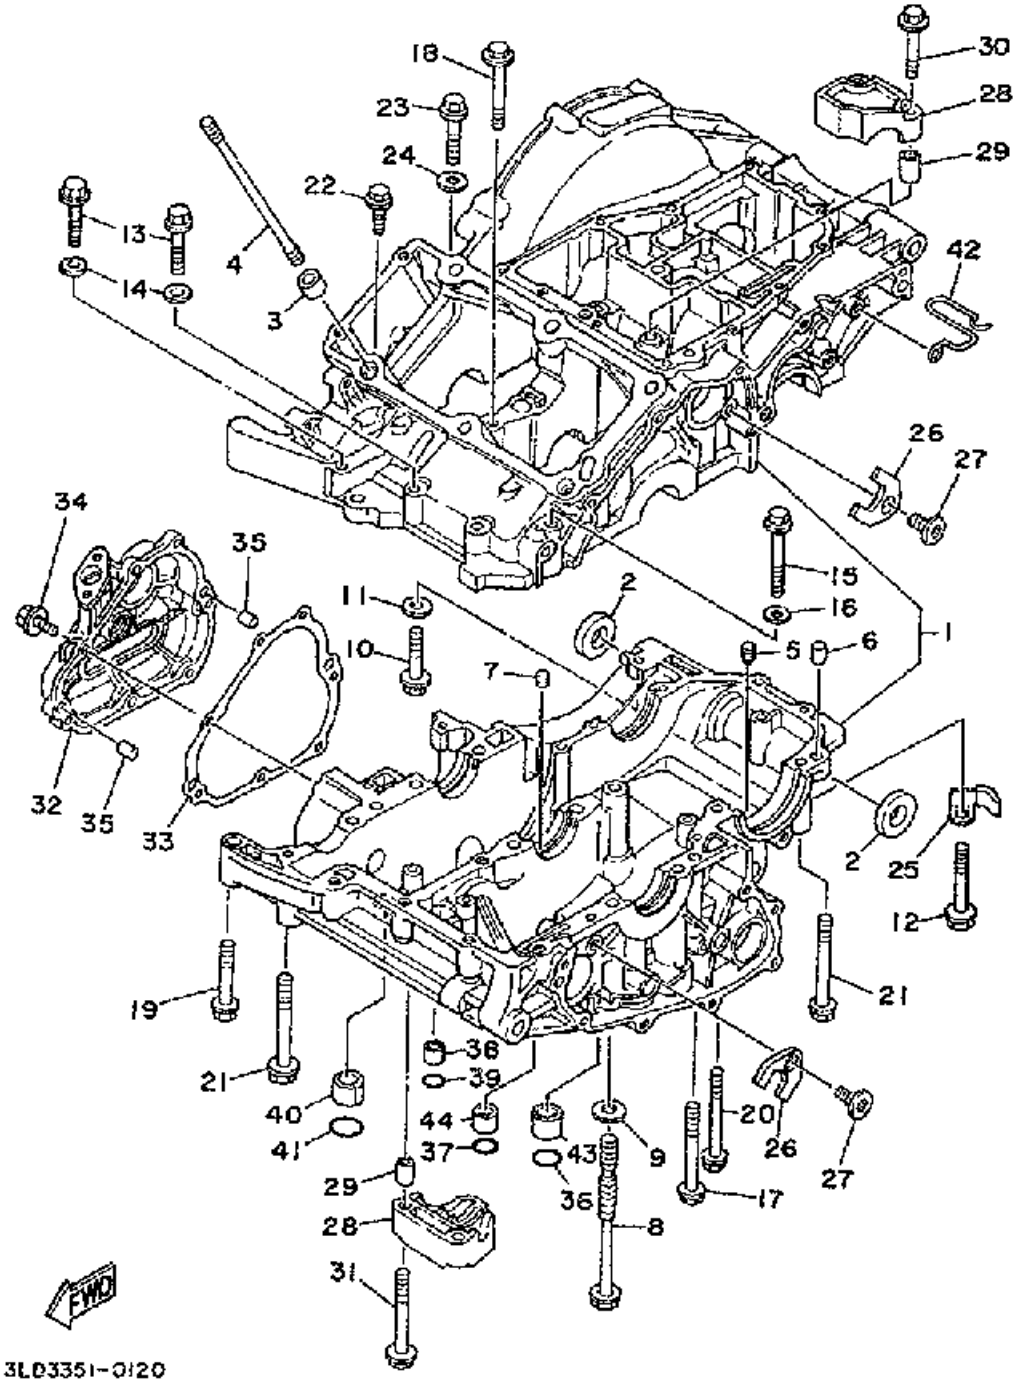


Ref No	Part No	Description
01	3LD-15100-02-00	Crankcase Assy
02	90387-16782-00	Collar
03	99530-14016-00	Pin, Dowel
04	3LD-11361-00-00	Bolt, Cylinder Holding 1
05	4H7-15138-00-00	Nozzle 1
06	99530-10014-00	Pin, Dowel
07	4G0-15138-00-00	Nozzle 1
08	90105-10560-00	Bolt, Washer Based
09	90201-10131-00	Washer, Plate
10	95817-06040-00	Bolt, Flange
11	90201-066F0-00	Washer, Plate
12	95817-06055-00	Bolt, Flange
13	95817-08050-00	Bolt, Flange
14	90201-08087-00	Washer, Plate
15	95817-08060-00	Bolt, Flange
16	90201-08087-00	Washer, Plate
17	95817-06070-00	Bolt, Flange
18	95817-08065-00	Bolt, Flange
19	95817-08050-00	Bolt, Flange
20	95817-08070-00	Bolt, Flange
21	95817-08075-00	Bolt, Flange
22	95817-06025-00	Bolt, Flange
23	95817-06040-00	Bolt, Flange
24	90201-066F0-00	Washer, Plate
25	90465-08341-00	Clamp
26	3LD-15191-00-00	Plate
27	90149-06285-00	Screw
28	3LD-15118-00-00	Holder
29	99510-08016-00	Pin, Dowel
30	95817-06045-00	Bolt, Flange
31	95817-06070-00	Bolt, Flange
32	3LD-15416-01-00	Cover, Oil Pump
33	3VD-15456-00-00	Gasket, Oil Pump Cover 1
34	95027-06020-00	Bolt, Flange
35	99510-08012-00	Pin, Dowel
36	93210-10096-00	O-ring
37	93210-12790-00	O-ring
38	90387-06761-00	Collar
39	93210-07438-00	O-ring
40	90387-130W6-00	Collar
41	93210-15566-00	O-ring
42	90465-20342-00	Clamp
43	90387-086W7-00	Collar
44	90387-106W6-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

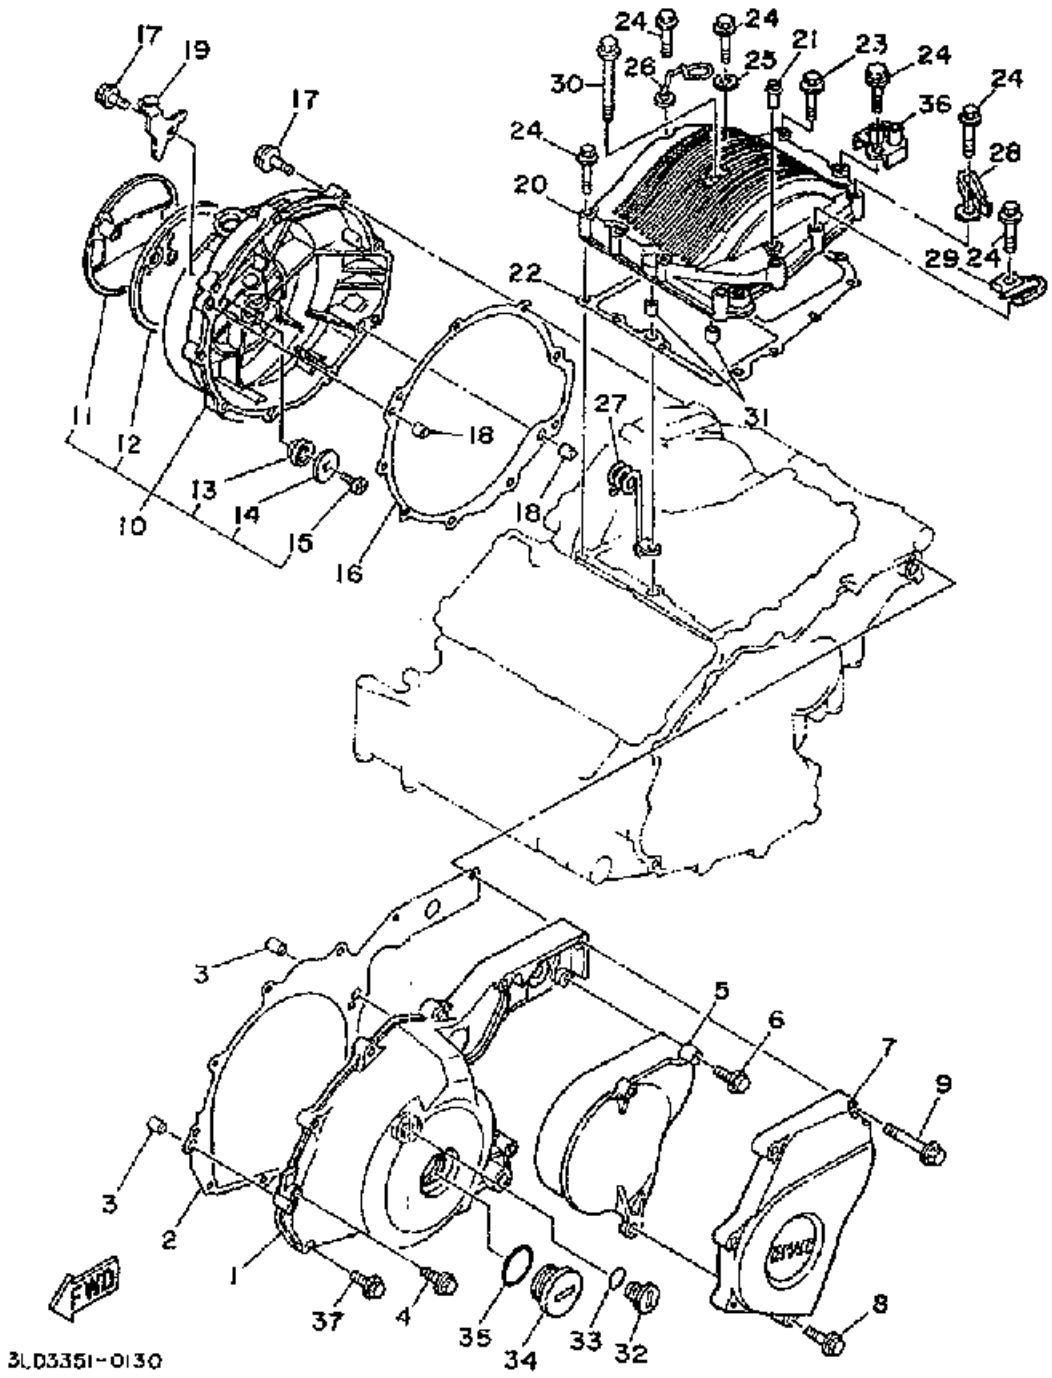


Ref No	Part No	Description
01	3LD-15411-00-00	Cover, Crankcase 1
02	3VD-15451-00-00	Gasket, Crankcase Cover 1
03	99510-08012-00	Pin, Dowel
04	95027-06025-00	Bolt, Flange
05	3LD-15418-00-00	Cover, Chain Case
06	95027-06025-00	Bolt, Flange
07	3LD-15421-00-00	Cover, Crankcase 2
08	95027-06030-00	Bolt, Flange
09	95027-06055-00	Bolt, Flange
10	3LD-15430-00-00	Crankcase Cover Assy 3
11	3LD-15417-00-00	• . Cover, Cap
12	3LD-15449-00-00	• . Ring, Rubber
13	1JK-15486-00-00	• . Grommet
14	90209-05279-00	• . Washer
15	98507-05010-00	• . Screw, Pan Head
16	3VD-15462-00-00	Gasket, Crankcase Cover 3
17	95027-06025-00	Bolt, Flange
18	99510-08012-00	Pin, Dowel
19	3LD-15441-11-00	Holder, Clutch Cable
20	3LD-15425-01-00	Cover, Generator 2
21	583-11126-00-00	Pipe, Breather 3
22	3VD-15463-00-00	Gasket, Carburetor Cover 2
23	95890-06035-00	Bolt, Flange
24	95027-06035-00	Bolt, Flange
25	90201-066F0-00	Washer, Plate
26	90465-26274-00	Clamp
27	3LD-24135-00-00	Clamp 1
28	90465-10290-00	Clamp
29	90462-10081-00	Clamp
30	95027-06070-00	Bolt, Flange
31	99530-10014-00	Pin, Dowel
32	90340-14120-00	Plug, Straight Screw
33	93210-14369-00	O-ring
34	90340-32126-00	Plug, Straight Screw
35	93210-32172-00	O-ring
36	3LD-14413-00-00	Stay
37	90105-06456-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

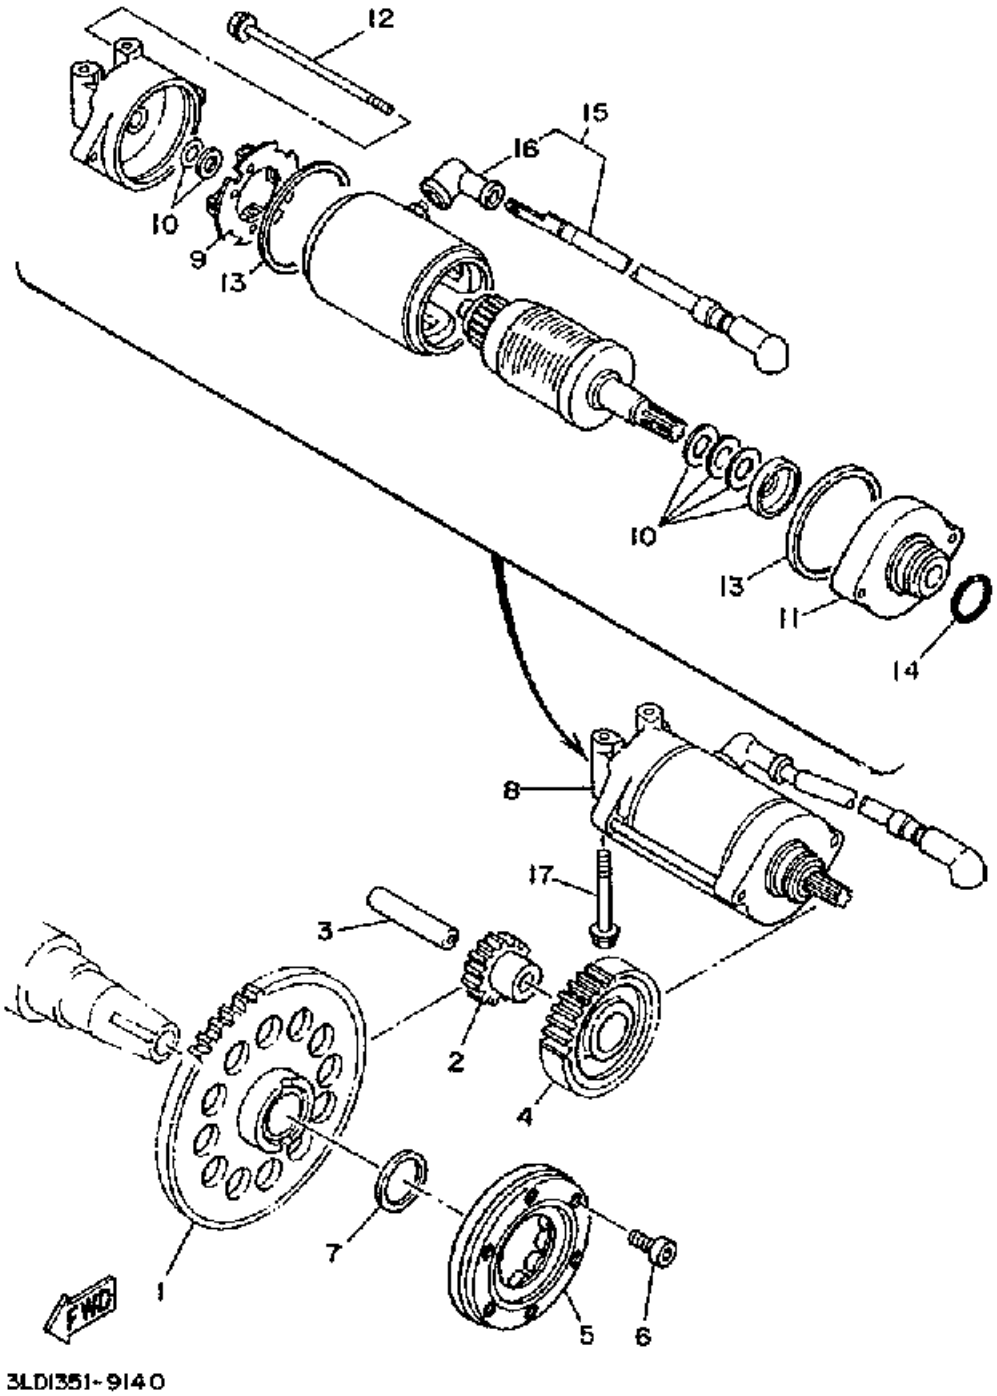


Ref No	Part No	Description
01	3LD-15515-00-00	Gear 3
02	3LD-15517-00-00	Gear, Idler 2
03	3LD-15521-00-00	Shaft 1
04	3LD-15512-00-00	Gear, Idler 1
05	3LD-15590-01-00	Starter One-way Assy
06	91317-06018-00	Bolt
07	90201-301P3-00	Washer, Plate
08	3LD-81800-00-00	Starting Motor Assy
09	3AJ-81801-00-00	• . Brush Set
10	3AJ-81809-00-00	• . Washer Kit
11	3AJ-81830-00-00	• . Front Bracket Assy
12	3AJ-81826-00-00	• . Bolt
13	11H-81844-00-00	• . Gasket
14	26H-81847-00-00	• . O-ring
15	3LD-81815-00-00	• . Cord, Starter Motor
16	5H0-81871-00-00	•• .. Cap
17	95817-06050-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

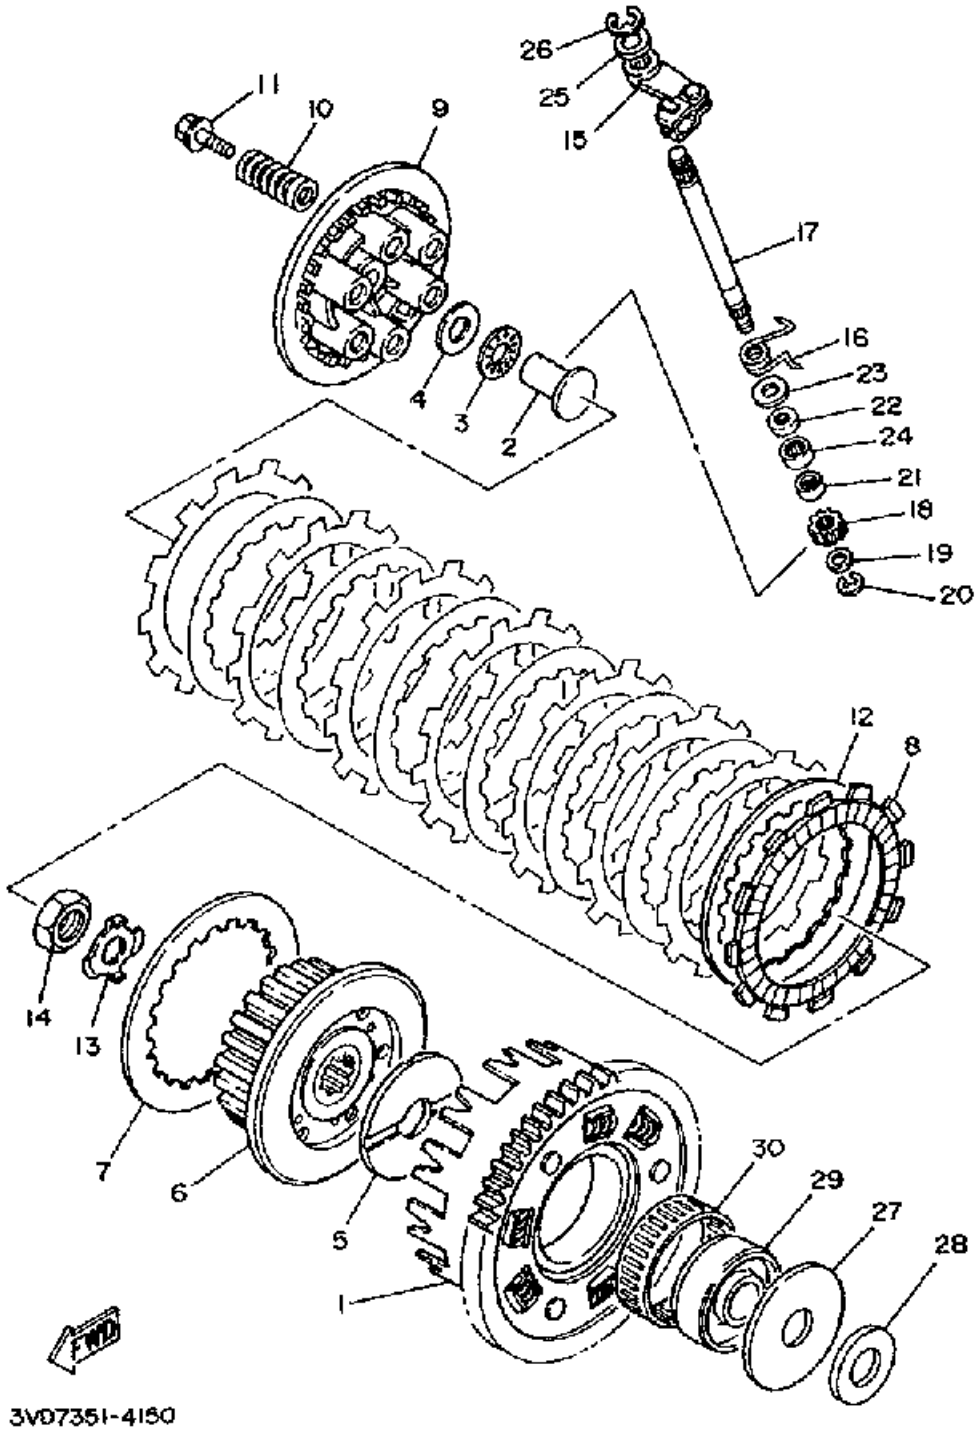


Ref No	Part No	Description
01	3LD-16150-10-00	Primary Driven Gear Comp.
02	3LD-1637A-01-00	Rod Push Assy
03	93340-21505-00	Bearing
04	90201-150H2-00	Washer, Plate
05	4H7-16154-00-00	Plate, Thrust 1
06	3VD-16371-02-00	Boss, Clutch
07	168-16324-00-00	Plate, Clutch 1
08	4H7-16321-01-00	Plate, Friction
09	3LD-16351-00-00	Plate, Pressure 1
10	90501-224A8-00	Spring, Compression
11	90159-06092-00	Screw, With Washer
12	31A-16325-00-00	Plate, Clutch 2
13	90215-20231-00	Washer, Lock
14	90170-20327-00	Nut
15	3LD-16340-01-00	Push Lever Assy
16	90508-16791-00	Spring, Torsion
17	3LD-16382-00-00	Axle, Push Lever
18	3LD-16398-00-00	Pinion, Releas
19	92907-08600-00	Washer, Plate
20	99080-07600-00	Circlip
21	93317-11020-00	Bearing
22	93102-12224-00	Oil Seal
23	90201-12M34-00	Washer, Plate
24	93315-11206-00	Bearing
25	90201-10119-00	Washer, Plate
26	99009-10400-00	Circlip
27	3VD-16164-00-00	Plate, Thrust 2
28	3VD-16154-00-00	Plate, Thrust 1
29	3LD-16181-00-00	Spacer 1
30	93310-365B8-00	Bearing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

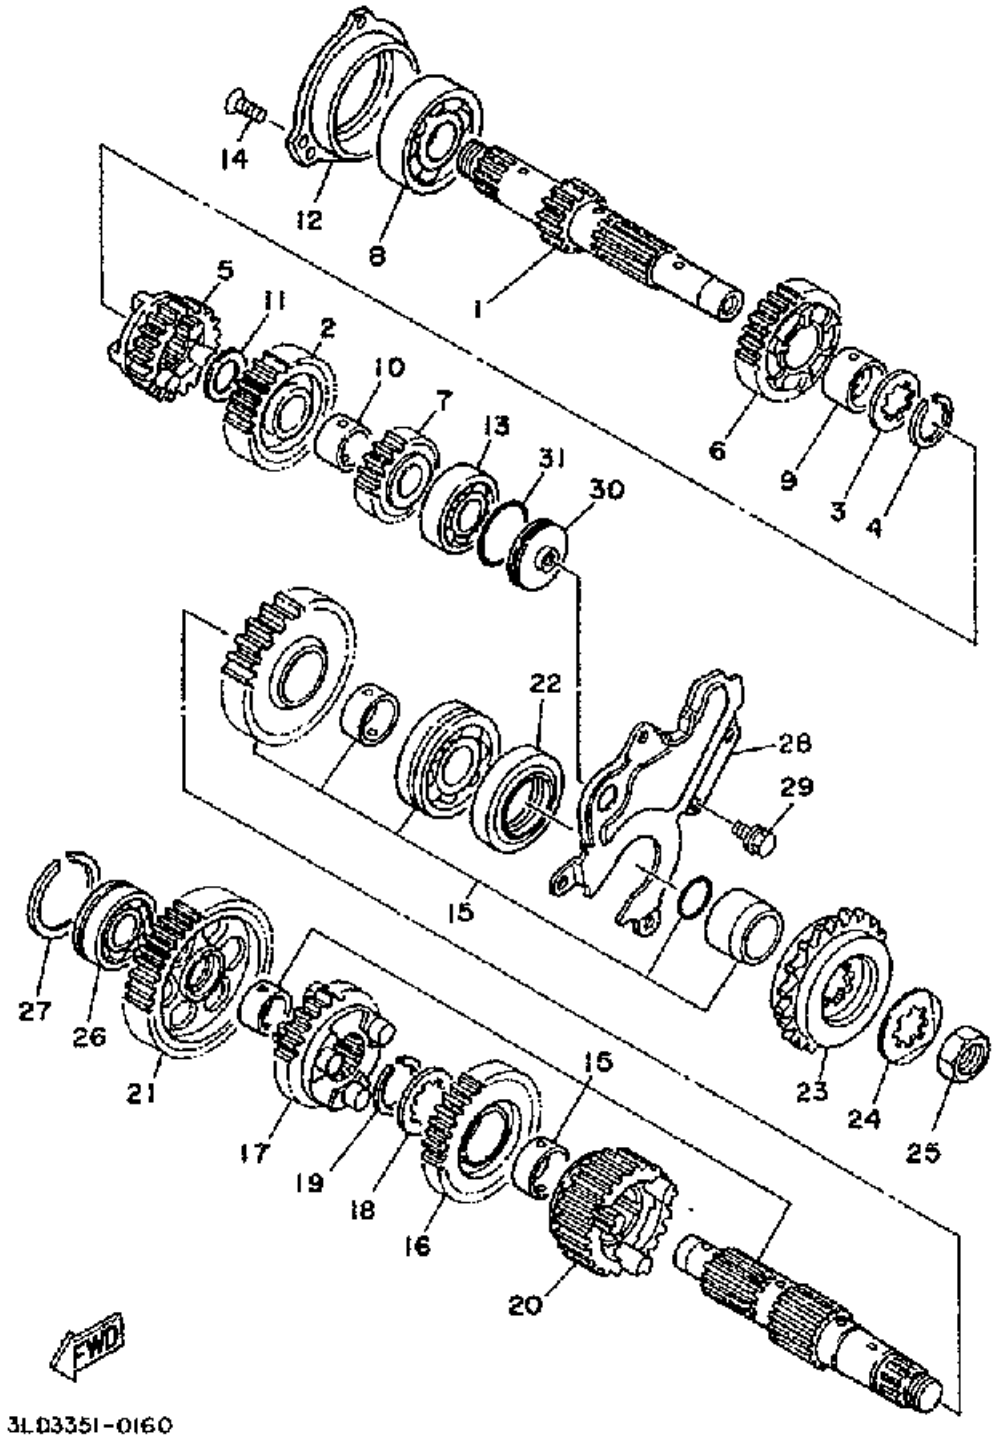


Ref No	Part No	Description
01	3LD-17411-00-00	Axle, Main (13z)
02	2GH-17151-00-00	Gear, 5th Pinion (27z)
03	90209-22191-00	Washer
04	93440-25084-00	Circlip
05	3LD-17131-00-00	Gear, 3rd Pinion (21z)
06	2GH-17141-00-00	Gear, 4th Pinion (23z)
07	3LD-17121-00-00	Gear, 2nd Pinion (21z)
08	93306-30525-00	Bearing (b6305)
09	90387-253M6-00	Collar
10	90387-203M7-00	Collar
11	90201-200K3-00	Washer, Plate
12	3LD-15163-00-00	Housing, Bearing 1
13	93306-20464-00	Bearing
14	90149-06286-00	Screw
15	3LD-17402-00-00	Drive Axle Assy
16	3LD-17231-00-00	Gear, 3rd Wheel (30z)
17	2GH-17241-00-00	Gear, 4th Wheel (27z)
18	90209-25196-00	Washer
19	93440-28062-00	Circlip
20	2GH-17251-00-00	Gear, 5th Wheel (28z)
21	3LD-17211-00-00	Gear, 1st Wheel (37z)
22	93102-35381-00	Oil Seal (sd6-35-5-1l-hs)
23	3LD-17460-00-00	Sprocket, Drive (13z)
24	90215-21022-00	Washer, Lock
25	90179-18020-00	Nut
26	93306-20455-00	Bearing
27	93440-45144-00	Circlip
28	3LD-17471-01-00	Plate, Cover
29	95827-06012-00	Bolt, Flange
30	3LD-15414-00-00	Cover, Air Cleaner
31	93210-33133-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

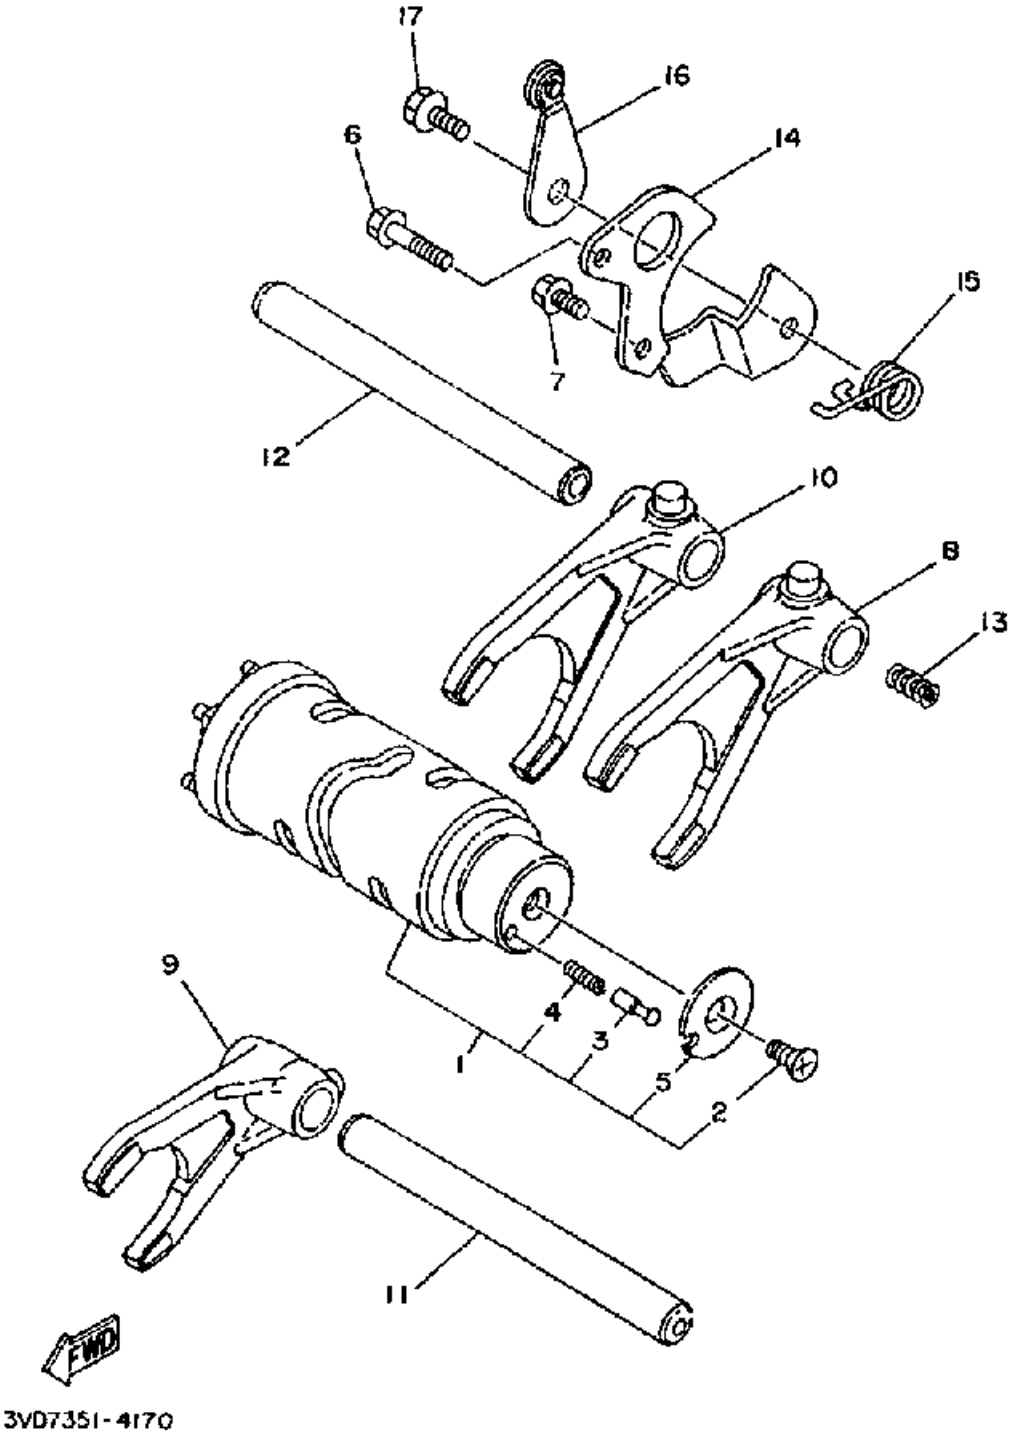


Ref No	Part No	Description
01	3VD-18540-00-00	Shift Cam Assy
02	98707-05012-00	• . Screw, Flat Head
03	278-18542-00-00	• . Point, Neutral
04	90501-06022-00	• . Spring, Compression
05	278-18566-00-00	• . Plate, Side 2
06	90105-06597-00	Bolt, Washer Based
07	90105-06397-00	Bolt, Washer Based
08	3VD-18511-00-00	Fork, Shift 1 (l)
09	3VD-18512-00-00	Fork, Shift 2 (c)
10	3VD-18513-00-00	Fork, Shift 3 (r)
11	3VD-18531-00-00	Bar, Shift Fork Guide 1
12	3VD-18535-00-00	Bar, Shift Fork Guide 2
13	90501-071F1-00	Spring, Compression
14	3LD-18536-00-00	Stopper, Shift Bar
15	90508-265A4-00	Spring, Torsion
16	36Y-18140-00-00	Stopper Lever Assy
17	90109-063F8-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

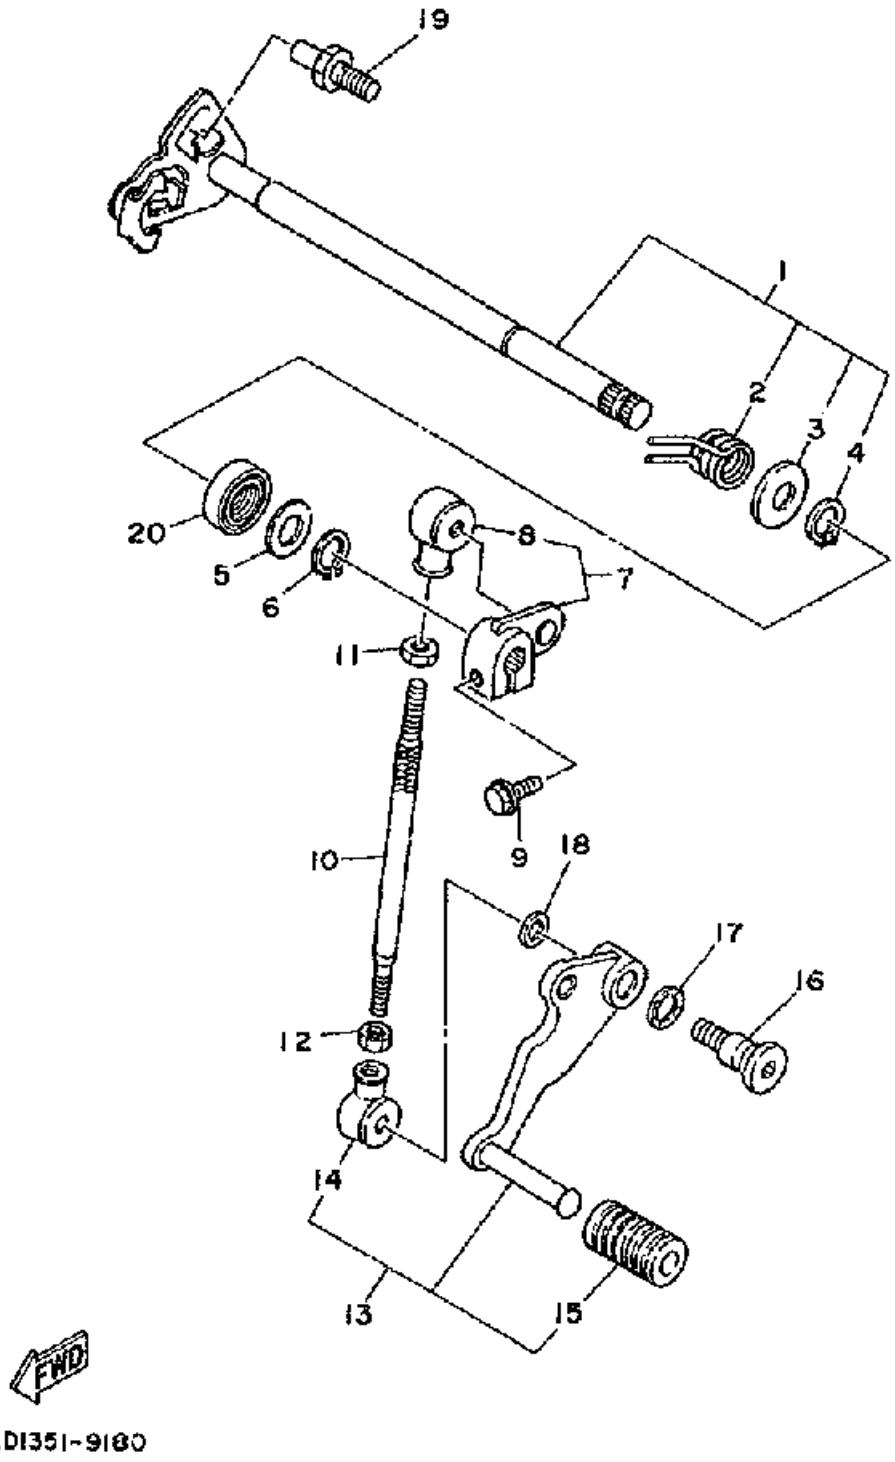


Ref No	Part No	Description
01	3LD-18101-02-00	Shift Shaft Assy
02	90508-32682-00	• . Spring, Torsion
03	90201-191J4-00	• . Washer, Plate
04	99009-19400-00	• . Circlip
05	90201-12575-00	Washer, Plate
06	99006-10600-00	Circlip
07	3LD-18130-00-00	Shift Shaft Assy
08	2H9-18154-00-00	• . Cover, Dust
09	95827-06020-00	Bolt, Flange
10	46X-18115-00-00	Rod, Shift
11	90170-06228-00	Nut
12	95304-06700-00	Nut
13	3LD-18110-00-00	Shift Pedal Assy
14	2H9-18154-00-00	• . Cover, Dust
15	132-18113-01-00	• . Cover, Shift Pedal
16	2YK-27434-01-00	Bolt
17	90206-12074-00	Washer, Wave
18	90201-08326-00	Washer, Plate
19	4G0-18127-00-00	Stopper, Screw
20	93102-12106-00	Oil Seal (sd 12-22-5 Hs)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

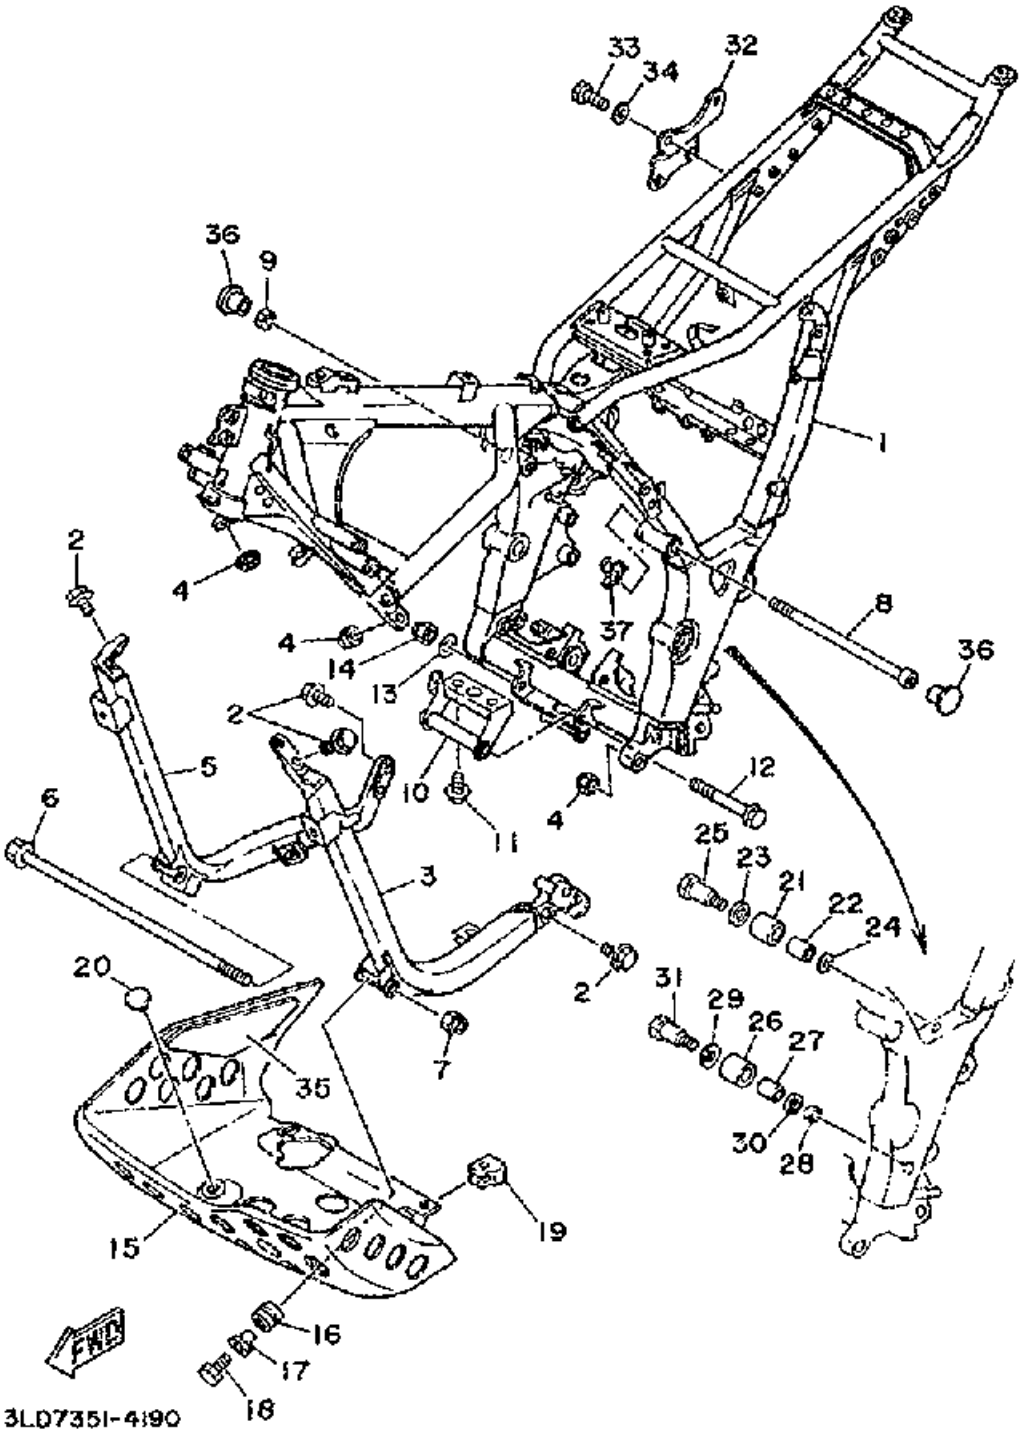


Ref No	Part No	Description
01	3LD-21110-04-7B	Frame Comp.
02	90105-10393-00	Bolt, Washer Based
03	3LD-21140-00-7B	Down Tube Comp.
04	95607-10200-00	Nut, Self-locking
05	3LD-21150-00-7B	Down Tube Comp.2
06	90105-10570-00	Bolt, Washer Based
07	95607-10200-00	Nut, Self-locking
08	90110-10229-00	Bolt, Hexagon Socket Head
09	90179-10377-00	Nut
10	3LD-21489-00-00	Bracket, Engine Lower
11	90105-08752-00	Bolt, Washer Based
12	90105-10119-00	Bolt, Washer Based
13	90201-10131-00	Washer, Plate
14	95607-10200-00	Nut, Self-locking
15	3LD-21471-00-00	Protector, Engine
16	90480-14023-00	Grommet
17	90387-07391-00	Collar
18	97007-06025-00	Bolt
19	36X-21485-00-00	Damper, Rubber 1
20	2J5-21732-00-00	Seal 1
21	30X-22178-00-00	Tensioner
22	4V4-22184-00-00	Bush
23	90201-13409-00	Washer, Plate
24	90201-08753-00	Washer, Plate
25	90109-08705-00	Bolt
26	30X-22178-00-00	Tensioner
27	4V4-22184-00-00	Bush
28	90387-085E1-00	Collar
29	90201-13409-00	Washer, Plate
30	90201-08753-00	Washer, Plate
31	90109-08705-00	Bolt
32	3LD-21445-00-00	Stay, Muffler 1
33	90109-085E3-00	Bolt
34	90201-08326-00	Washer, Plate
35	3LD-2174A-00-00	Insulator, Side Cover
36	3LD-2143A-00-00	Cap
37	90214-11064-00	Washer, Claw

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

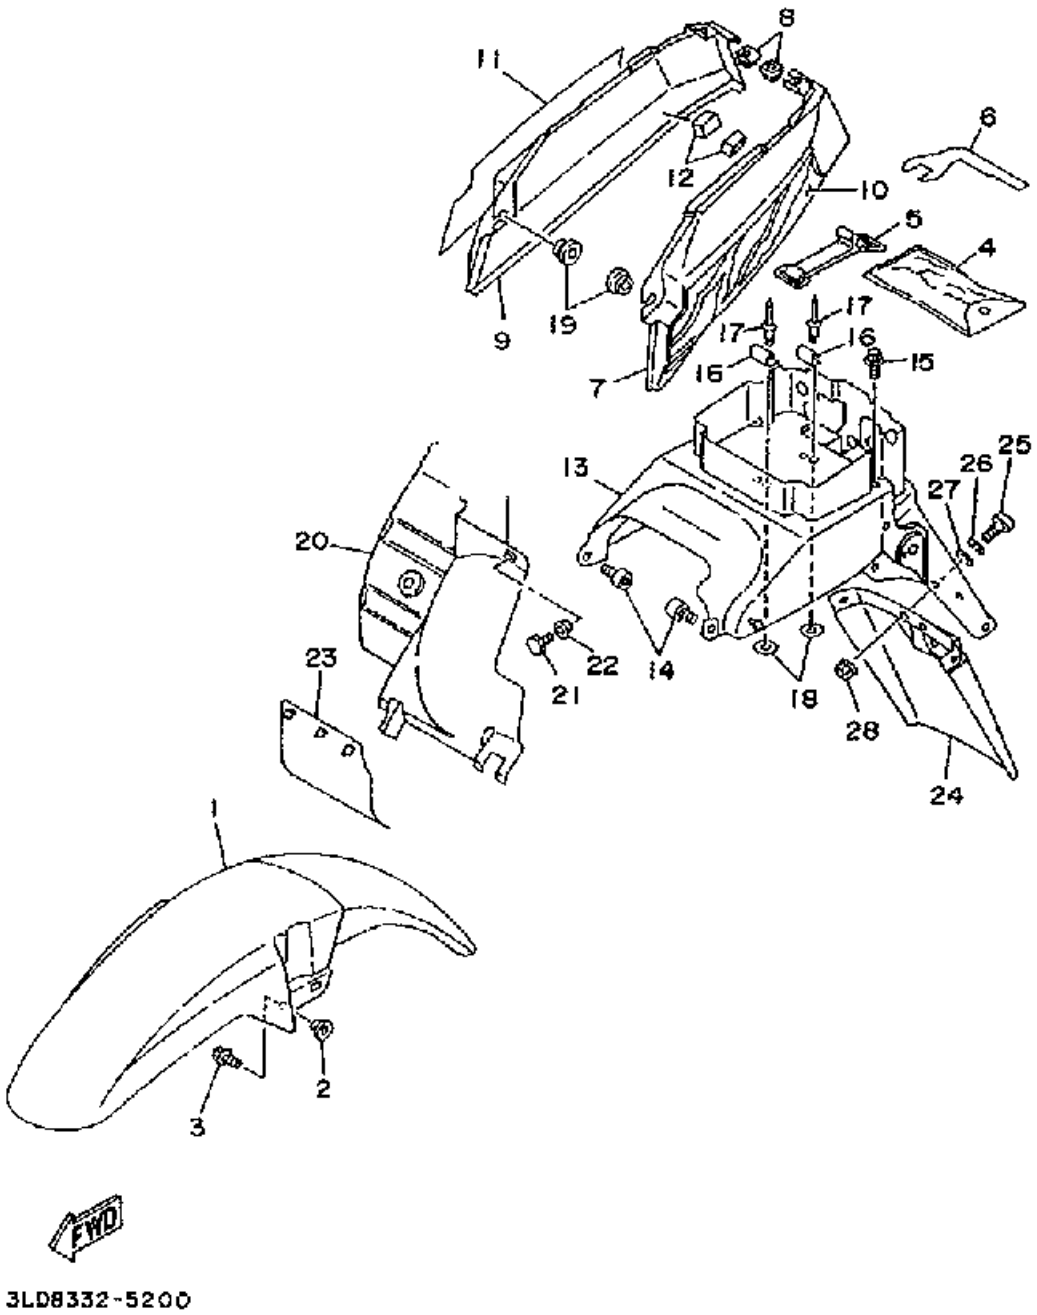

Ref No	Part No	Description
01	3LD-21511-00-JY	Fender, Front
02	90387-061F9-00	Collar
03	90119-06063-00	Bolt, With Washer
04	3LD-28100-00-00	Tool Kit
05	36X-2811G-00-00	Band
06	2KT-28135-00-00	Spanner, Special
07	3LD-2163A-00-JY	Cover, Rear Fender 1
08	90183-05024-00	Nut, Spring
09	3LD-2163E-00-JY	Cover, Rear Fender 2
10	3LD-21611-20-00	Fender, Rear (l)
11	3LD-21662-20-00	Graphic, R.fender Cover (r.h) (r)
12	4J2-21778-00-00	Damper, Locating 1
13	3LD-21685-10-00	Bracket, License
14	90109-086A0-00	Bolt
15	95807-06020-00	Bolt, Flange
16	43G-14436-00-00	Hook
17	90267-40073-00	Rivet, Blind
18	92907-04200-00	Washer
19	90480-13398-00	Grommet
20	3LD-21619-00-00	Stripe, Rear Fender
21	97007-06012-00	Bolt
22	90387-062M9-00	Collar
23	30X-21621-00-00	Flap
24	3LD-21621-01-00	Flap
25	98507-04018-00	Screw, Pan Head
26	92907-04100-00	Washer, Spring
27	92907-04600-00	Washer
28	95707-04500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

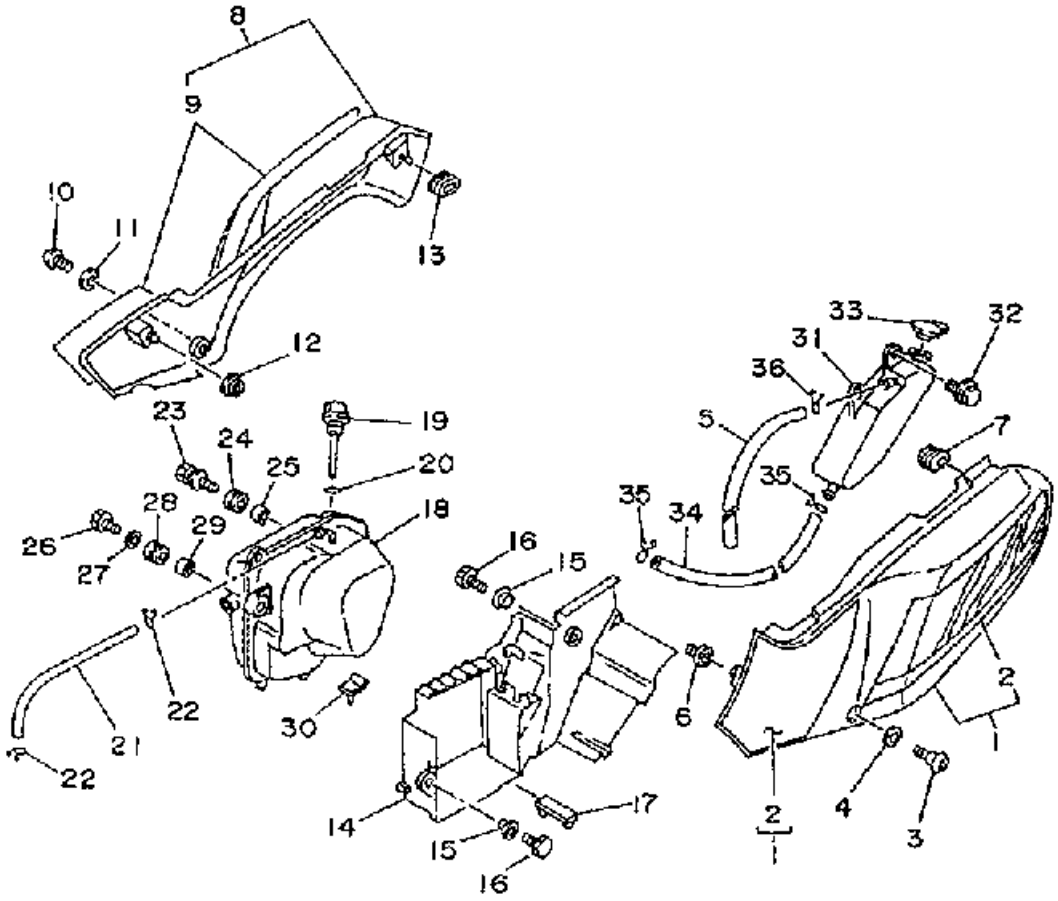




3LD8351-5210

Ref No	Part No	Description
01	3LD-Y2171-N0-JY	Cover, Side 1
02	3LD-2173L-20-00	• . Graphic Set 1
03	3LD-28331-01-00	Bolt, Leg Shield
04	90202-08146-00	Washer, Plate
05	90445-090F6-00	Hose
06	90480-13426-00	Grommet
07	90480-01401-00	Grommet
08	3LD-Y2172-J0-JY	Cover, Side 2
09	3LD-2174L-20-00	• . Graphic Set 2
10	3LD-28331-01-00	Bolt, Leg Shield
11	90202-08146-00	Washer, Plate
12	90480-13426-00	Grommet
13	90480-01401-00	Grommet
14	3LD-2177G-00-00	Box, Battery
15	90387-06500-00	Collar
16	97007-06012-00	Bolt
17	364-24182-71-00	Damper, Locating 2
18	3LD-21750-01-00	Oil Tank Assy
19	1JK-21761-01-00	Gauge, Level
20	93210-21190-00	O-ring
21	90445-112G5-00	Hose
22	90467-10008-00	Clip
23	90119-06063-00	Bolt, With Washer
24	90480-16233-00	Grommet
25	90387-060A7-00	Collar
26	97007-06030-00	Bolt
27	90201-065F3-00	Washer, Plate
28	90480-18354-00	Grommet
29	90387-06028-00	Collar
30	3LD-21747-00-00	Damper
31	3LD-21871-00-00	Tank, Recovery
32	90119-06056-00	Bolt, With Washer
33	10V-21875-00-00	Cap
34	90445-093F7-00	Hose
35	90467-08017-00	Clip
36	90467-08017-00	Clip


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

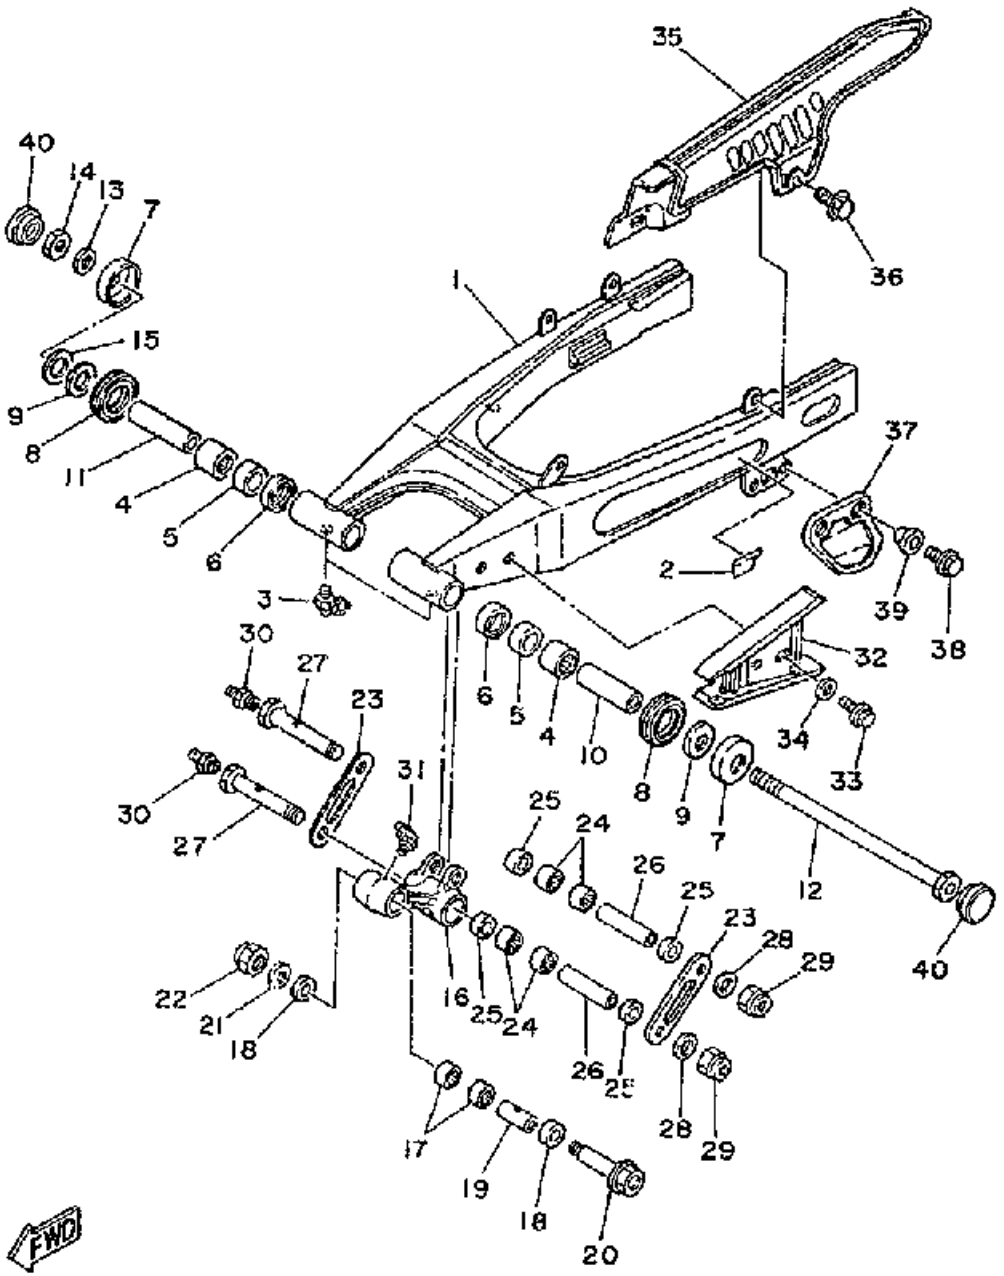

3LD8351-5220

Ref No	Part No	Description
01	3LD-22110-00-35	Rear Arm Comp.
02	3EN-2218A-51-00	Emblem, Rear Arm
03	93700-06005-00	Nipple, Grease
04	93317-32231-00	Bearing
05	90380-22111-00	Bush, Solid
06	93106-22019-00	Oil Seal (dc 22-28-8)
07	2K6-22128-01-00	Cover, Thrust 1
08	93108-35004-00	Oil Seal (35-41-8)
09	90201-244A8-00	Washer, Plate (1.95t)
10	90387-160W0-00	Collar
11	90387-160W1-00	Collar
12	1UY-22141-00-00	Shaft, Pivot
13	90201-160F6-00	Washer, Plate
14	90185-16127-00	Nut, Self-locking
15	90201-251F6-00	Washer, Plate (0.3d)
16	3LD-2217A-00-00	Arm, Relay
17	93315-32044-00	Bearing (yt2015)
18	93109-20029-00	Oil Seal
19	90387-164U7-00	Collar
20	90401-14144-00	Bolt, Union
21	90201-160F6-00	Washer, Plate
22	90185-14070-00	Nut, Self-locking
23	3LD-2217F-00-00	Rod, Connecting 1
24	93315-22045-00	Bearing (yt202720e01)
25	93109-20029-00	Oil Seal
26	90387-164U8-00	Collar
27	90401-14136-00	Bolt, Union
28	90201-160F6-00	Washer, Plate
29	90185-14070-00	Nut, Self-locking
30	93700-06004-00	Nipple, Grease
31	93700-06005-00	Nipple, Grease
32	3LD-22151-00-00	Seal, Guard
33	97007-06012-00	Bolt
34	90209-06223-00	Washer
35	3TB-22311-00-00	Case, Chain
36	90119-06117-00	Bolt, With Washer
37	38V-22199-00-00	Support, Chain
38	97007-06020-00	Bolt
39	90387-06737-00	Collar
40	3LD-2219X-01-00	Cover


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

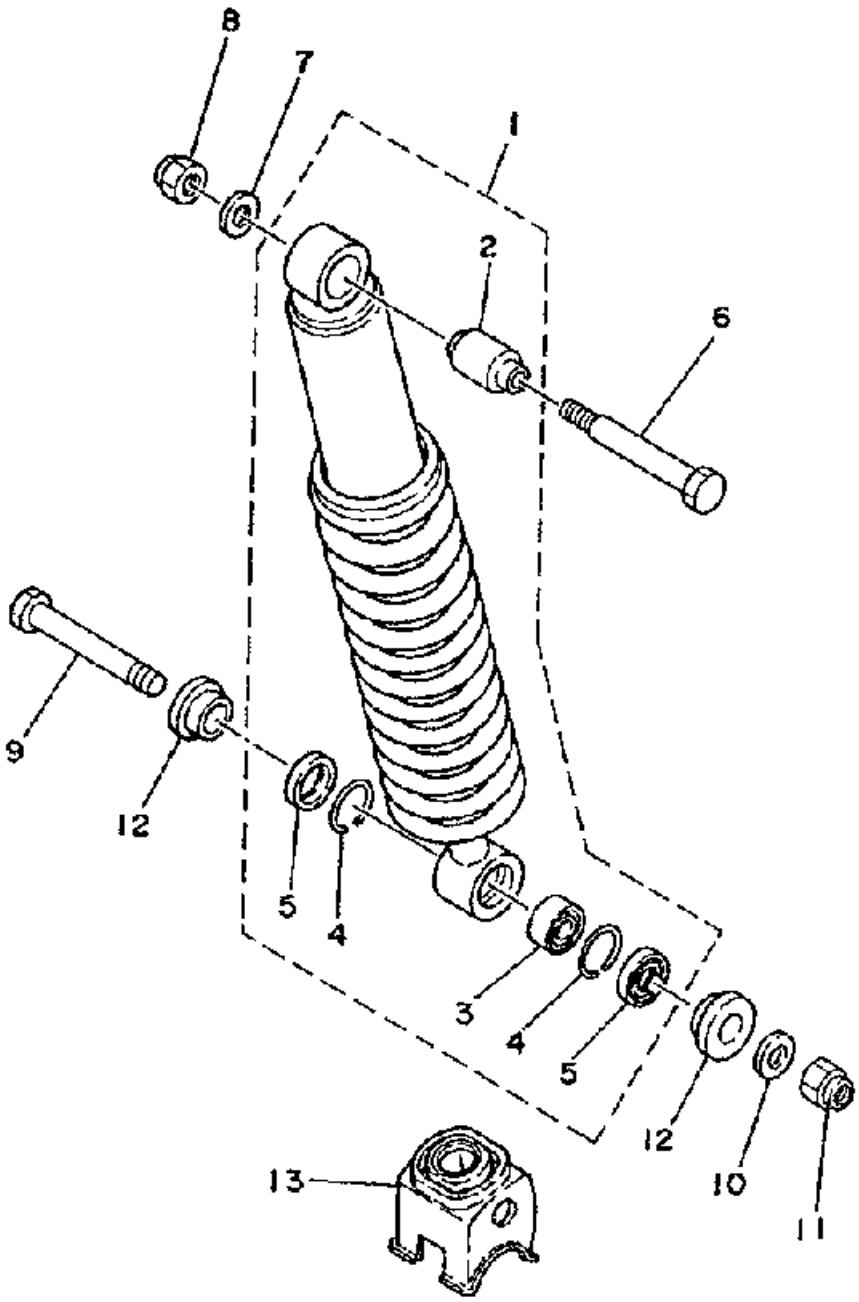

3LD3351-0230


Ref No	Part No	Description
01	3LD-22210-30-33	Shock Absorber Assy, Rear
02	1YW-22216-00-00	• . Bush, Rear Shock Absorber
03	93399-99934-00	• . Bearing
04	93440-30113-00	• . Circlip
05	93104-18077-00	• . Oil Seal
06	90109-10554-00	Bolt
07	90201-100E9-00	Washer, Plate
08	90185-10120-00	Nut, Self-locking
09	90109-10704-00	Bolt
10	90201-100E9-00	Washer, Plate
11	90185-10120-00	Nut, Self-locking
12	90387-126H8-00	Collar
13	3LD-22189-00-00	Boot, Rubber

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

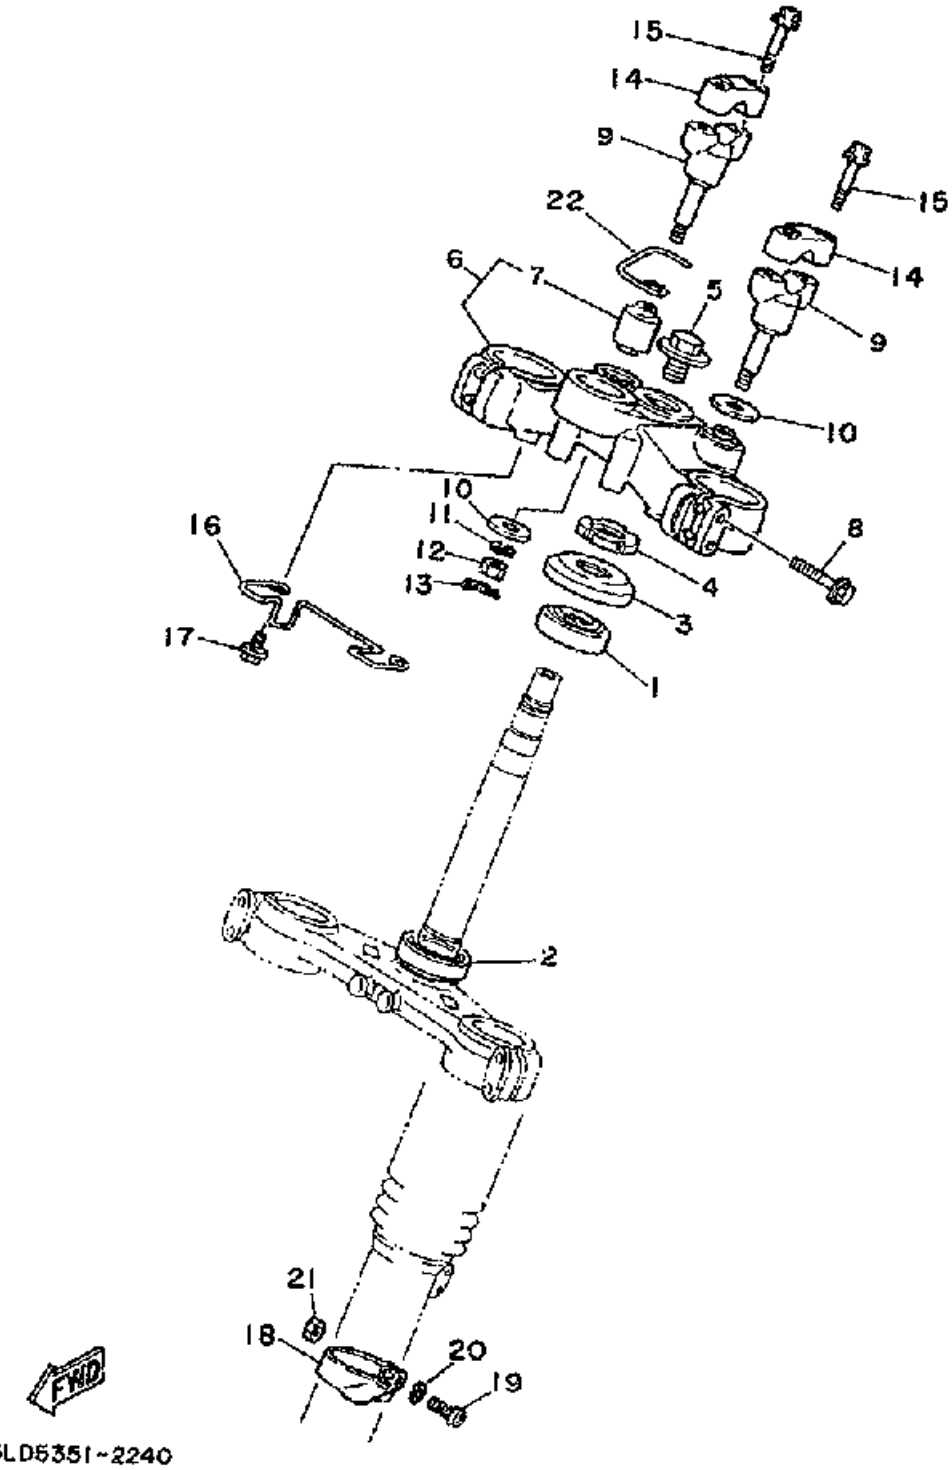


Ref No	Part No	Description
01	93332-00001-00	Bearing
02	93332-00008-00	Bearing
03	3LD-23416-00-00	Cover, Ball Race 2
04	90179-25033-00	Nut
05	90105-14102-00	Bolt, Washer Based
06	3LD-W2341-00-98	Crown, Handle
07	3Y6-23434-00-00	• . Holder, Damper
08	98527-08040-00	Screw, Pan Head
09	3AJ-23442-00-98	Holder, Handle Lower
10	90201-100A1-00	Washer, Plate
11	92907-10100-00	Washer, Spring
12	95307-10700-00	Nut
13	90468-12006-00	Clip
14	1E6-23441-00-00	Holder, Handle Upper
15	95027-08035-00	Bolt, Flange
16	3LD-2331E-00-00	Guide, Cable
17	95807-06012-00	Bolt, Flange
18	3LD-23318-00-00	Holder, Cable 1
19	98507-05020-00	Screw, Pan Head
20	92907-05600-00	Washer, Plate
21	95307-05600-00	Nut
22	3AJ-23389-00-00	Guide, Cable

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

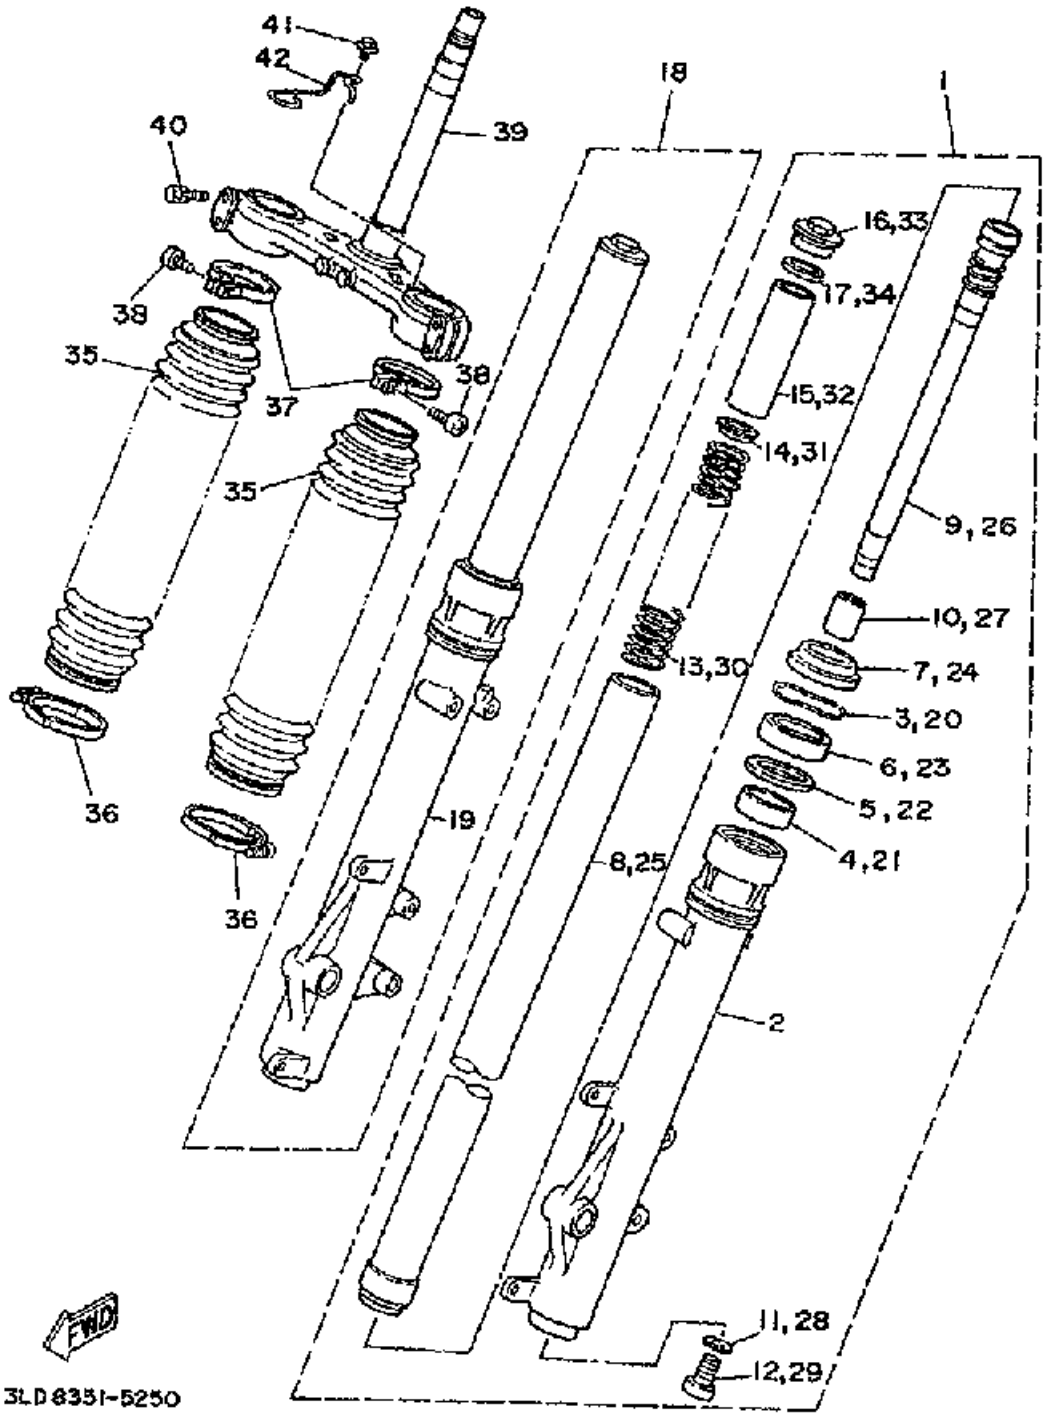


Ref No	Part No	Description
01	3LD-23102-00-00	Front Fork Assy (l.h)
02	3LD-23126-00-00	• . Tube, Outer (left)
03	4V4-23153-L0-00	• . Ring, Snap
04	3XJ-23125-L0-00	• . Metal, Slide 1
05	4V4-23146-L0-00	• . Washer, Oil Seal
06	23X-23145-L0-00	• . Oil Seal
07	23X-23144-L0-00	• . Seal, Dust
08	3LD-23110-00-00	• . Inner Tube Comp.1
09	3LD-23170-00-00	• . Cylinder Comp., Front Fork
10	3GM-23173-00-00	• . Spindle, Taper
11	4V4-23158-00-00	• . Gasket
12	4V4-23181-L0-00	• . Bolt, Hexagon Socket Head
13	3LD-23141-00-00	• . Spring, Front Fork
14	4V4-23142-L0-00	• . Seat, Spring Upper
15	5X6-23118-M0-00	• . Spacer
16	3LD-23111-00-00	• . Bolt, Cap
17	4V4-23188-L0-00	• . O-ring
18	3LD-23103-00-00	• . Front Fork Assy (r.h)
19	3LD-23136-00-00	• . Tube, Outer (right)
20	4V4-23153-L0-00	• . Ring, Snap
21	3X7-23125-L0-00	• . Metal, Slide 1
22	4V4-23146-L0-00	• . Washer, Oil Seal
23	23X-23145-L0-00	• . Oil Seal
24	23X-23144-L0-00	• . Seal, Dust
25	3LD-23110-00-00	• . Inner Tube Comp.1
26	3LD-23170-00-00	• . Cylinder Comp., Front Fork
27	3GM-23173-00-00	• . Spindle, Taper
28	4V4-23158-L0-00	• . Gasket
29	4V4-23181-L0-00	• . Bolt, Hexagon Socket Head
30	3LD-23141-00-00	• . Spring, Front Fork
31	4V4-23142-L0-00	• . Seat, Spring Upper
32	5X6-23118-M0-00	• . Spacer
33	3LD-23111-00-00	• . Bolt, Cap
34	4V4-23188-L0-00	• . O-ring
35	3YF-23191-20-00	Boot
36	3LD-23489-00-00	Band
37	43M-23192-L0-00	Band
38	98506-04018-00	Screw, Pan Head
39	3LD-23340-00-00	Under Bracket Comp.
40	3YF-23181-00-00	Bolt, Hexagon Socket Head
41	95817-06012-00	Bolt, Flange
42	3LD-23389-00-00	Guide, Cable

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

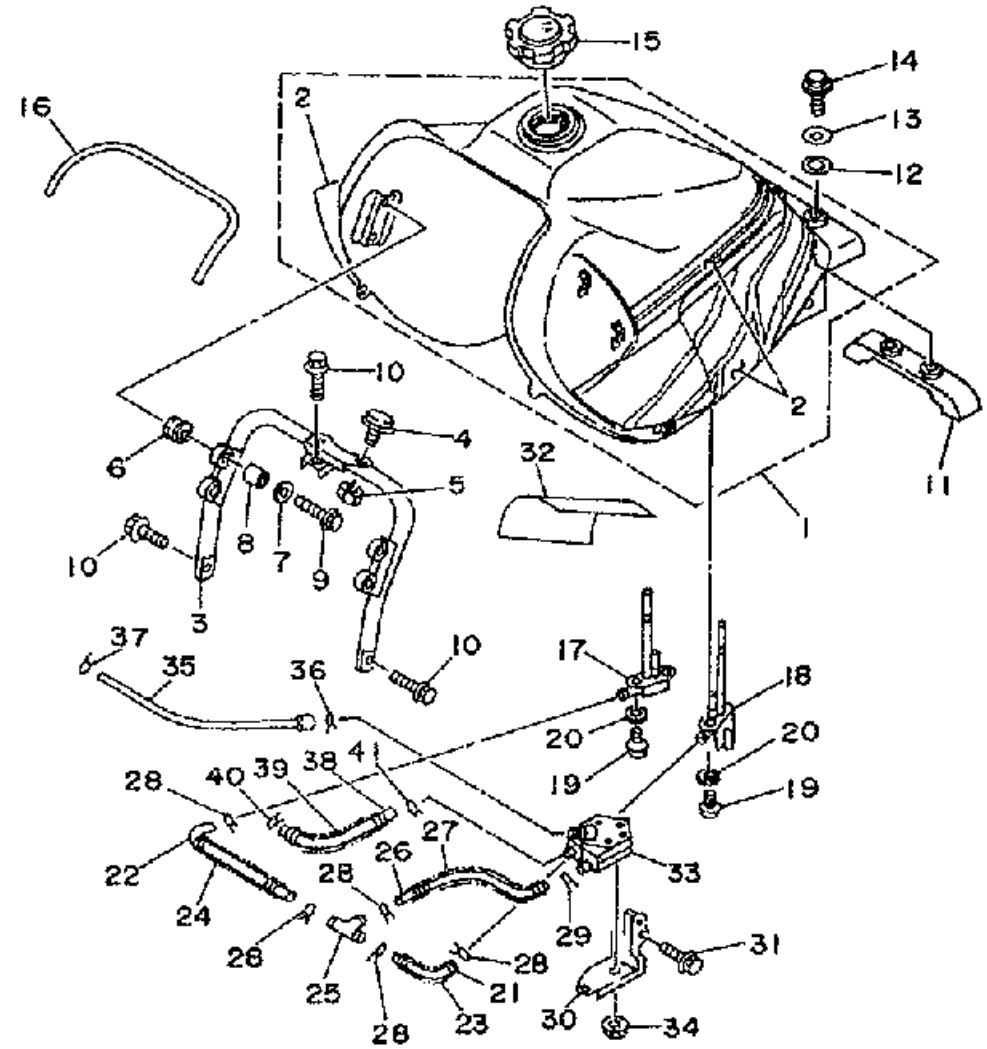

Ref No	Part No	Description
01	3LD-24110-10-W2	Fuel Tank Comp.
02	3LD-24240-H0-00	• . Graphic Set
03	3LD-24291-00-00	Bracket, Fuel Tank 1
04	3AJ-24185-00-00	Damper, Locating 5
05	95307-08600-00	Nut
06	90480-18354-00	Grommet
07	90201-065F3-00	Washer, Plate
08	90387-06387-00	Collar
09	95807-06030-00	Bolt, Flange
10	90119-08197-00	Bolt, With Washer
11	3LD-24182-00-00	Damper, Locating 2
12	34L-24183-00-00	Damper, Locating 3
13	90201-065G8-00	Washer, Plate
14	95807-06012-00	Bolt, Flange
15	48Y-24602-00-00	Cap Assy
16	3AJ-24188-00-00	Mold, Fuel Tank
17	3LD-24510-00-00	Fuel Cock Assy 2
18	3LD-24500-00-00	Fuel Cock Assy 1
19	90149-06011-00	Screw
20	90202-05193-00	Washer, Plate
21	3LD-24311-00-00	Pipe, Fuel 1
22	3LD-24312-01-00	Pipe 2
23	90501-085G0-00	Spring, Compression
24	90501-084G9-00	Spring, Compression
25	90413-07023-00	Way 3
26	3LD-24313-00-00	Pipe 3
27	90501-101J5-00	Spring, Compression
28	90467-10008-00	Clip
29	90467-10008-00	Clip
30	3LD-24216-00-00	Stay
31	95807-06010-00	Bolt, Flange
32	3LD-2414H-00-00	Damper, Plate 1
33	3LD-13910-00-00	Fuel Pump Assy
34	95706-05500-00	Nut, Flange
35	1VJ-13929-00-00	Pipe, Impulse
36	90467-08017-00	Clip
37	90467-08021-00	Clip
38	3LD-14294-00-00	Hose
39	90501-08486-00	Spring, Compression
40	90467-11102-00	Clip
41	90467-10008-00	Clip


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

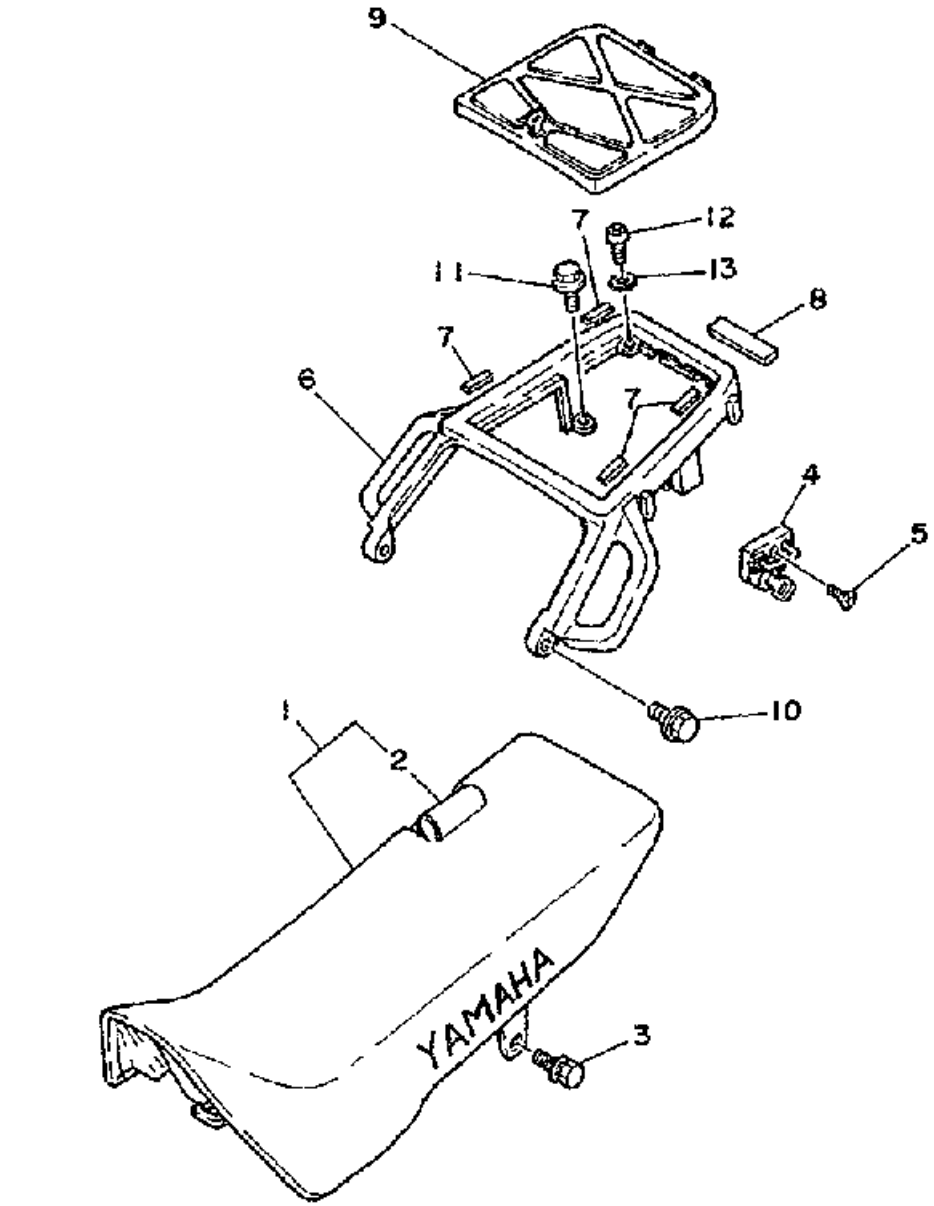

3LD3351-0270


Ref No	Part No	Description
01	3LD-24770-01-00	Semi-double Seat Assy
02	3LD-24731-01-00	• . Cover, Seat
03	90119-06043-00	Bolt, With Washer
04	5A8-21308-00-00	Helmet Hanger Assy
05	90151-06017-00	Screw, Countersunk
06	3LD-24830-00-00	Sub Carrier Assy
07	3LD-24854-00-00	Damper
08	18A-26113-00-00	Damper
09	3LD-W2484-00-00	Carrier Assy
10	95827-08020-00	Bolt, Flange
11	95807-06016-00	Bolt, Flange
12	98507-05012-00	Screw, Pan Head
13	92907-05600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

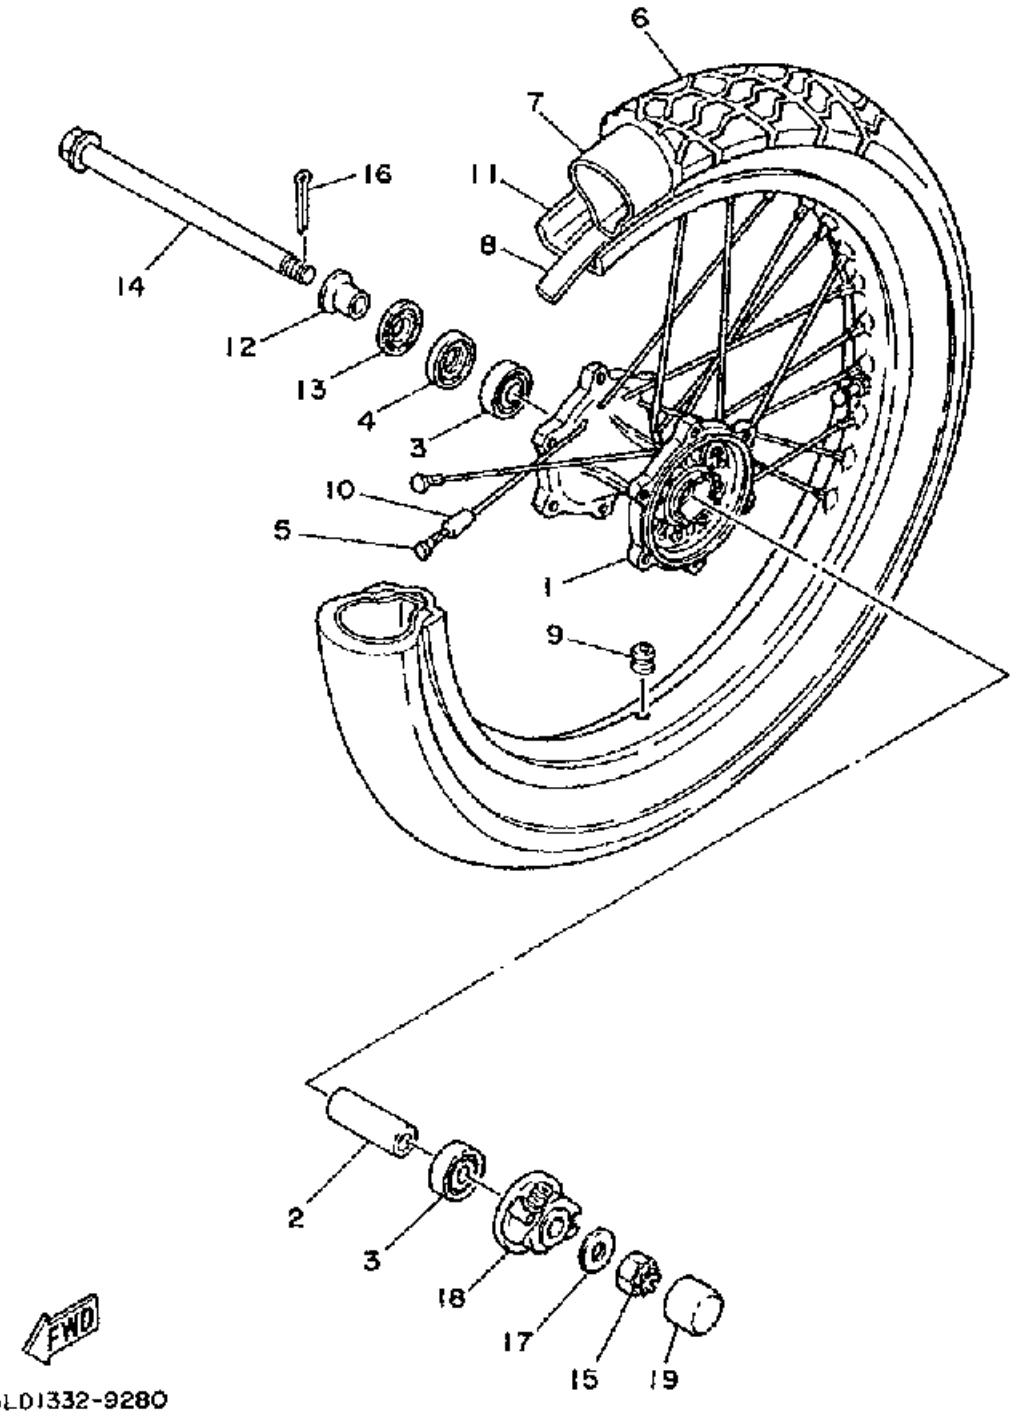


Ref No	Part No	Description
01	3LD-25111-00-98	Hub, Front
02	90560-15116-00	Spacer
03	93306-30203-00	Bearing (b6302z)
04	93102-22014-00	Oil Seal
05	3LD-25104-00-00	Spoke Set, Front
09	90480-10068-00	Grommet
10	156-25398-00-00	Balancer, Wheel
11	94418-21488-00	Rim (1.85-21)
12	90387-151L5-00	Collar
13	38W-25118-00-00	Cover, Hub Dust
14	401-25381-00-00	Axle, Wheel
15	90171-14029-00	Nut, Castle
16	91401-30030-00	Pin, Cotter
17	90201-15785-00	Washer, Plate
18	3LD-25190-00-00	Gear Unit Assy
19	4E7-25188-00-00	Cap

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

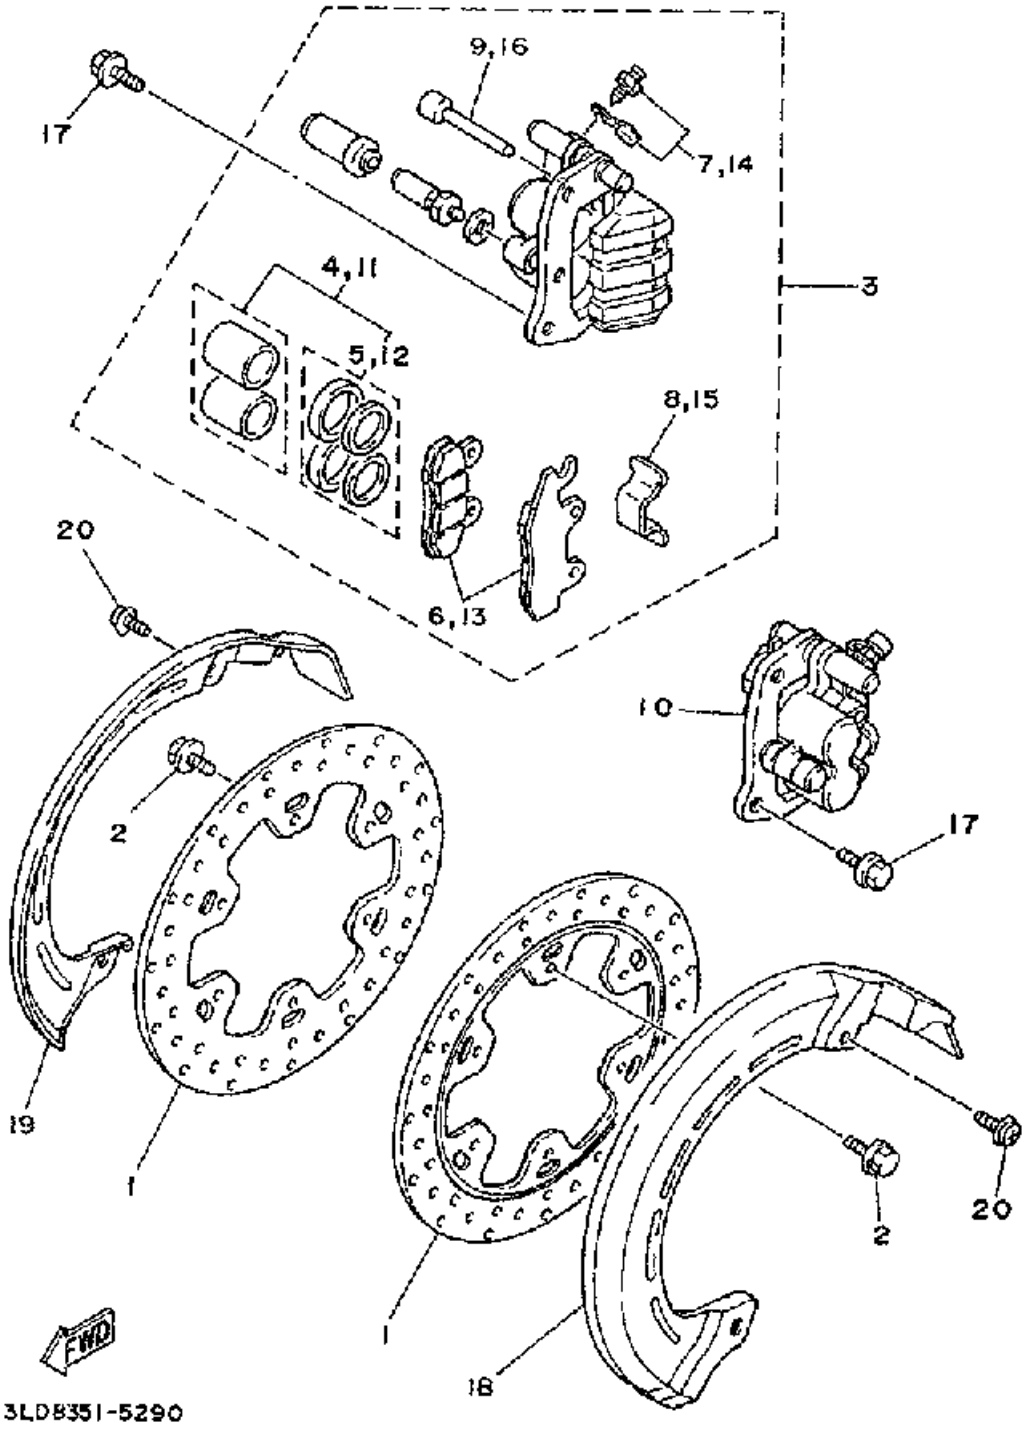


Ref No	Part No	Description
01	3LD-25831-00-00	Disc, Brake (rechts)
02	90109-06757-00	Bolt
03	3LD-2580U-01-00	Caliper Assy (right)
04	3LD-W0057-00-00	• . Piston Assy, Caliper
05	3JD-W0047-00-00	•• .. Caliper Seal Kit
06	3LD-W0045-10-00	• . Brake Pad Kit
07	1UY-W0048-50-00	• . Bleed Screw Kit
08	3LD-25934-01-00	• . Spring, Pad
09	3LD-25924-00-00	• . Pin, Pad
10	3LD-2580T-01-00	Caliper Assy (left)
11	3LD-W0057-00-00	• . Piston Assy, Caliper
12	3JD-W0047-00-00	•• .. Caliper Seal Kit
13	3LD-W0045-00-00	• . Brake Pad Kit
14	1UY-W0048-50-00	• . Bleed Screw Kit
15	3LD-25934-01-00	• . Spring, Pad
16	3LD-25924-00-00	• . Pin, Pad
17	90105-10316-00	Bolt, Washer Based
18	3LD-25715-70-00	Cover 1
19	3LD-25716-70-00	Cover 2
20	90159-06181-00	Screw, With Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

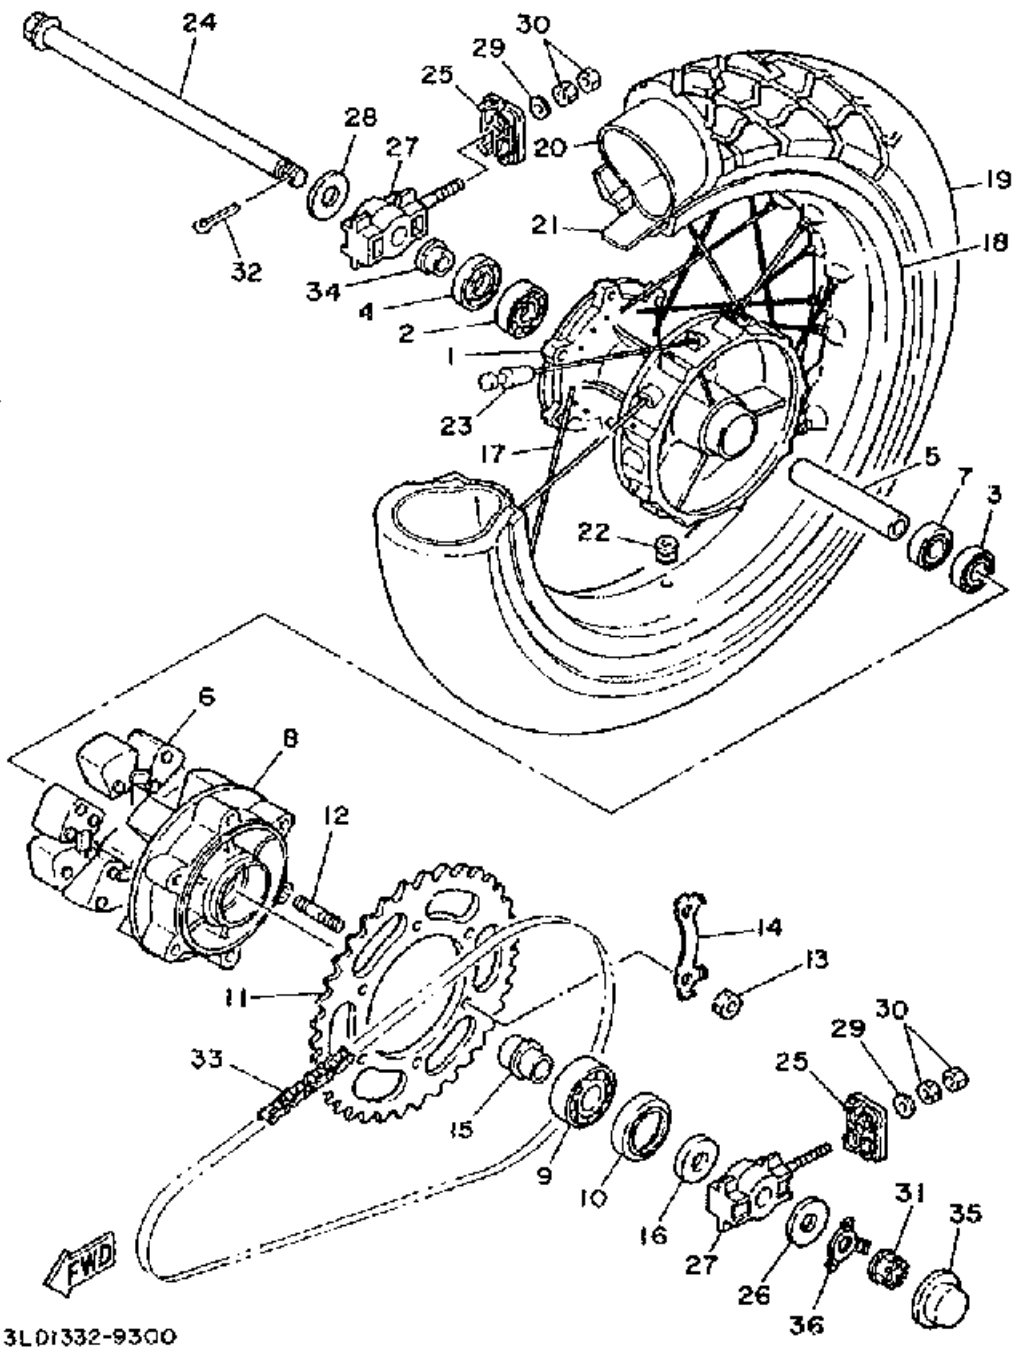


Ref No	Part No	Description
01	3LD-25311-00-98	Hub, Rear
02	93306-30309-00	Bearing
03	93306-20310-00	Bearing (b6203du)
04	93102-25044-00	Oil Seal
05	90387-173M5-00	Collar
06	1UF-25364-00-00	Damper
07	93306-20310-00	Bearing (b6203du)
08	1UF-25366-00-00	Clutch, Hub
09	93306-37207-00	Bearing
10	93105-42024-00	Oil Seal
11	3LD-25446-01-00	Sprocket, Driven (46z)
12	90106-10482-00	Bolt
13	90170-10219-00	Nut
14	1UF-25412-00-00	Washer
15	90387-177K0-00	Collar
16	90387-171W1-00	Collar
17	3LD-25304-00-00	Spoke Set, Rear
18	94430-17487-00	Rim
22	90480-10068-00	Grommet
23	156-25398-00-00	Balancer, Wheel
24	1AE-25381-00-00	Axle, Wheel
25	3LD-25389-00-00	Puller, Chain 2
26	90201-165L8-00	Washer, Plate
27	3LD-25388-00-00	Puller, Chain 1
28	90201-177K7-00	Washer, Plate
29	92907-08600-00	Washer, Plate
30	95307-08600-00	Nut
31	90171-16024-00	Nut, Castle
32	91401-30030-00	Pin, Cotter
33	94581-30112-00	Chain (did520vl2-112le)
34	90387-177Y4-00	Collar
35	521-25188-00-00	Cap
36	90209-16138-00	Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

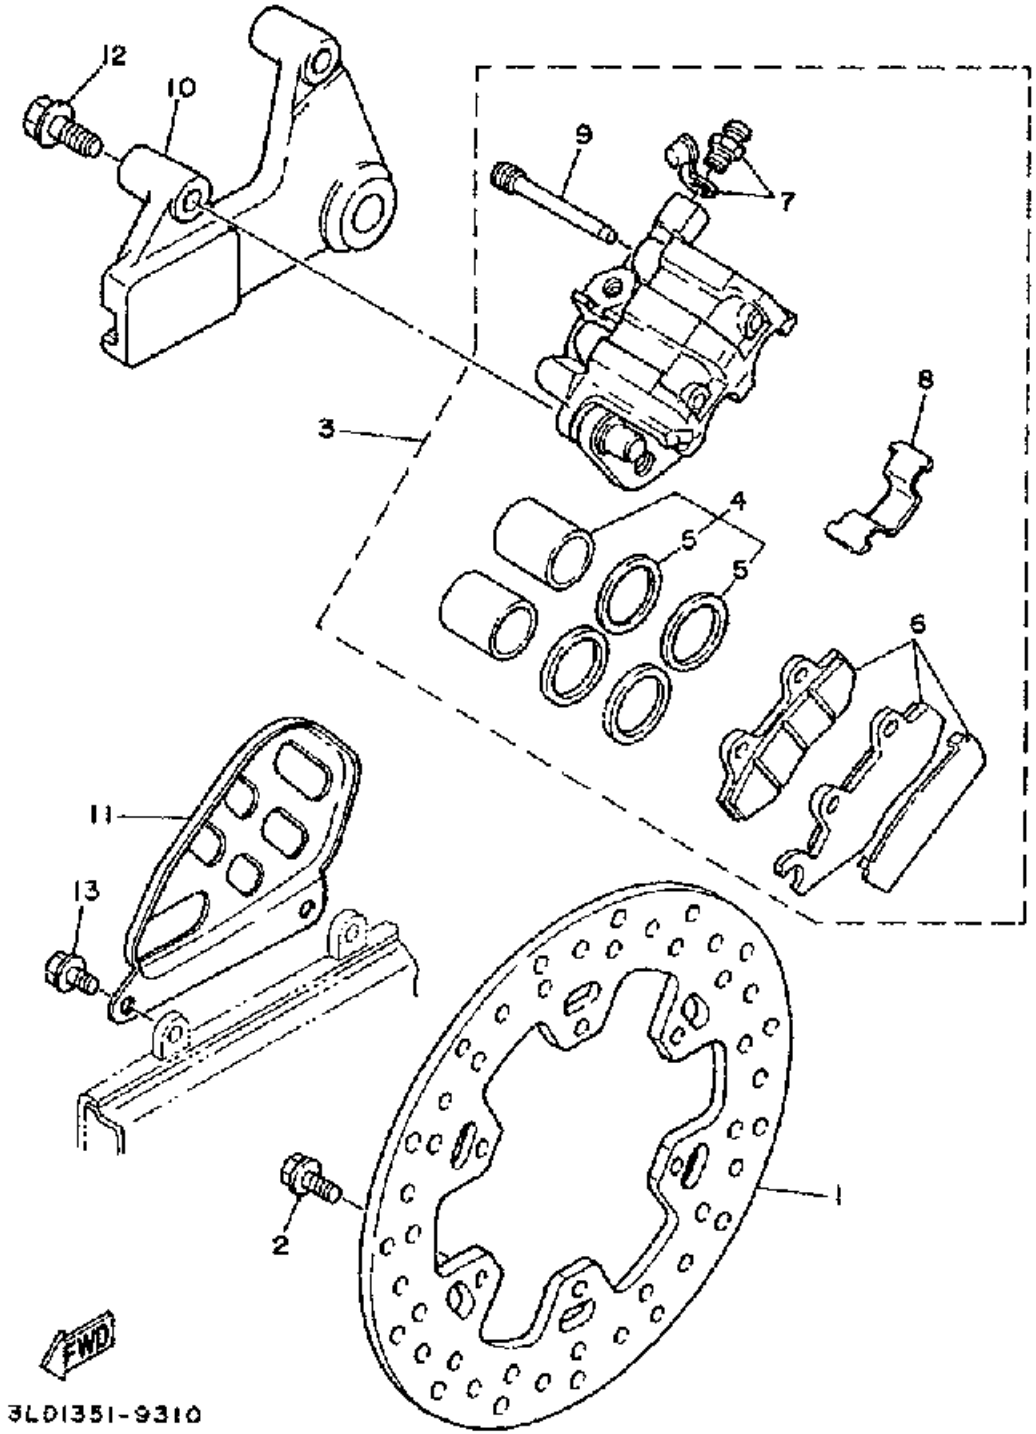


Ref No	Part No	Description
01	3LD-2582W-00-00	Disc, Rear Brake 2
02	90109-06757-00	Bolt
03	3LD-2580W-02-00	Caliper Assy, Rear 2
04	3LD-W0057-50-00	• . Piston Assy, Caliper
05	3JD-W0047-00-00	•• .. Caliper Seal Kit
06	3LD-W0046-01-00	• . Brake Pad Kit 2
07	1UY-W0048-50-00	• . Bleed Screw Kit
08	3LD-25934-01-00	• . Spring, Pad
09	3LD-25924-00-00	• . Pin, Pad
10	3LD-25819-10-00	Bracket, Caliper
11	3LD-2583E-00-00	Protector, Caliper 2
12	90105-10308-00	Bolt, Washer Based
13	95804-06012-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

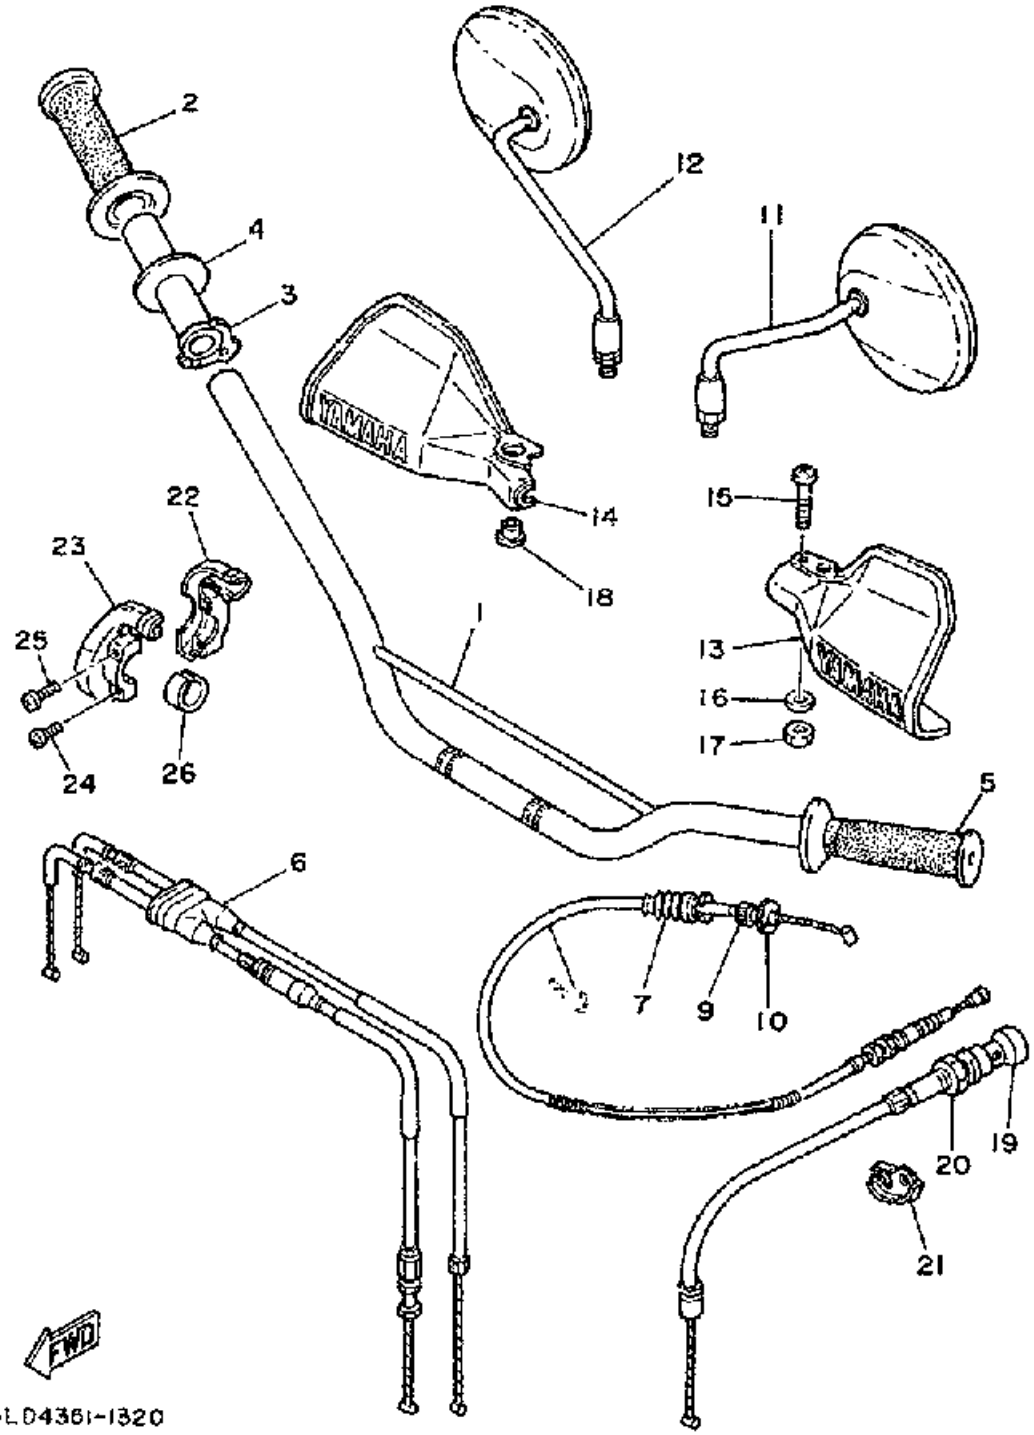


Ref No	Part No	Description
01	3LD-26111-02-00	Handlebar
02	1VJ-26242-00-00	Grip (right)
03	3Y1-26243-01-00	Tube, Throttle Guide
04	3Y1-26249-00-00	Ring, Leaf
05	1VJ-26241-00-00	Grip (left)
06	3LD-26302-00-00	Throttle Cable Assy
07	1E6-26342-00-00	Boot, Cable
08	3LD-26335-10-00	Cable, Clutch
09	90123-08046-00	Bolt
10	90179-08148-00	Nut
11	3LD-26280-00-00	Rear View Mirror Assy(left)
12	55V-26290-00-00	Rear View Mirror Assy(right)
13	2KF-26141-00-00	Guard, Brush 1
14	2YK-26142-10-00	Guard, Brush 2
15	98507-06035-00	Screw, Pan Head
16	92907-06600-00	Washer, Plate
17	95307-06700-00	Nut
18	90387-06500-00	Collar
19	3LD-26331-00-00	Cable, Starter 1
20	1VJ-26333-00-00	Nut
21	3LD-2637G-00-00	Holder, Wire
22	34K-26281-00-00	Cap, Grip Upper
23	1VJ-26282-00-00	Cap, Grip Lower
24	98507-05020-00	Screw, Pan Head
25	98507-05025-00	Screw, Pan Head
26	90387-22660-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

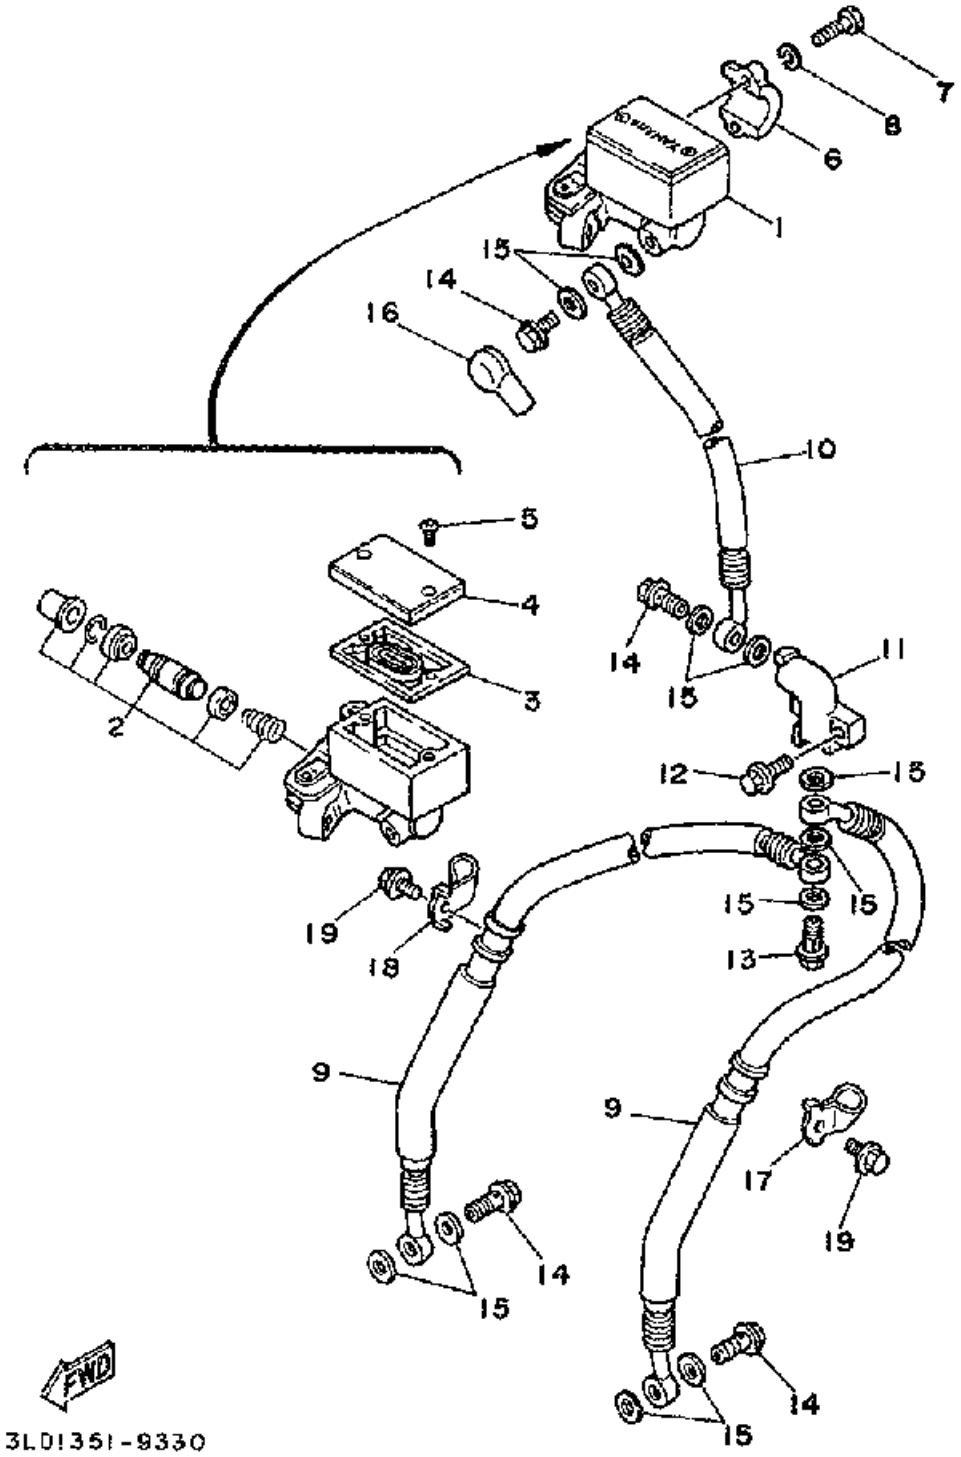


Ref No	Part No	Description
01	2GV-25850-01-00	Master Cylinder Assy
02	4H7-W0041-00-00	• . Cylinder Kit, Master
03	4K0-25854-00-00	• . Diaphragm, Reservoir
04	3GM-25852-01-00	• . Cap, Reservoir
05	98707-04012-00	• . Screw, Flat Head
06	4L0-25867-00-00	Bracket, Master Cylinder
07	97007-06025-00	Bolt
08	92907-06600-00	Washer, Plate
09	3LD-25872-11-00	Hose, Brake 1
10	3LD-2581J-11-00	Hose, Brake 4
11	1J7-25885-01-00	Joint
12	95807-06025-00	Bolt, Flange
13	90401-10160-00	Bolt, Union
14	90401-10159-00	Bolt, Union
15	90201-10118-00	Washer, Plate
16	4L0-25862-00-00	Boot, Master Cylinder
17	3LD-25875-00-00	Holder, Brake Hose 1
18	3LD-25876-00-00	Holder, Brake Hose 2
19	95807-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

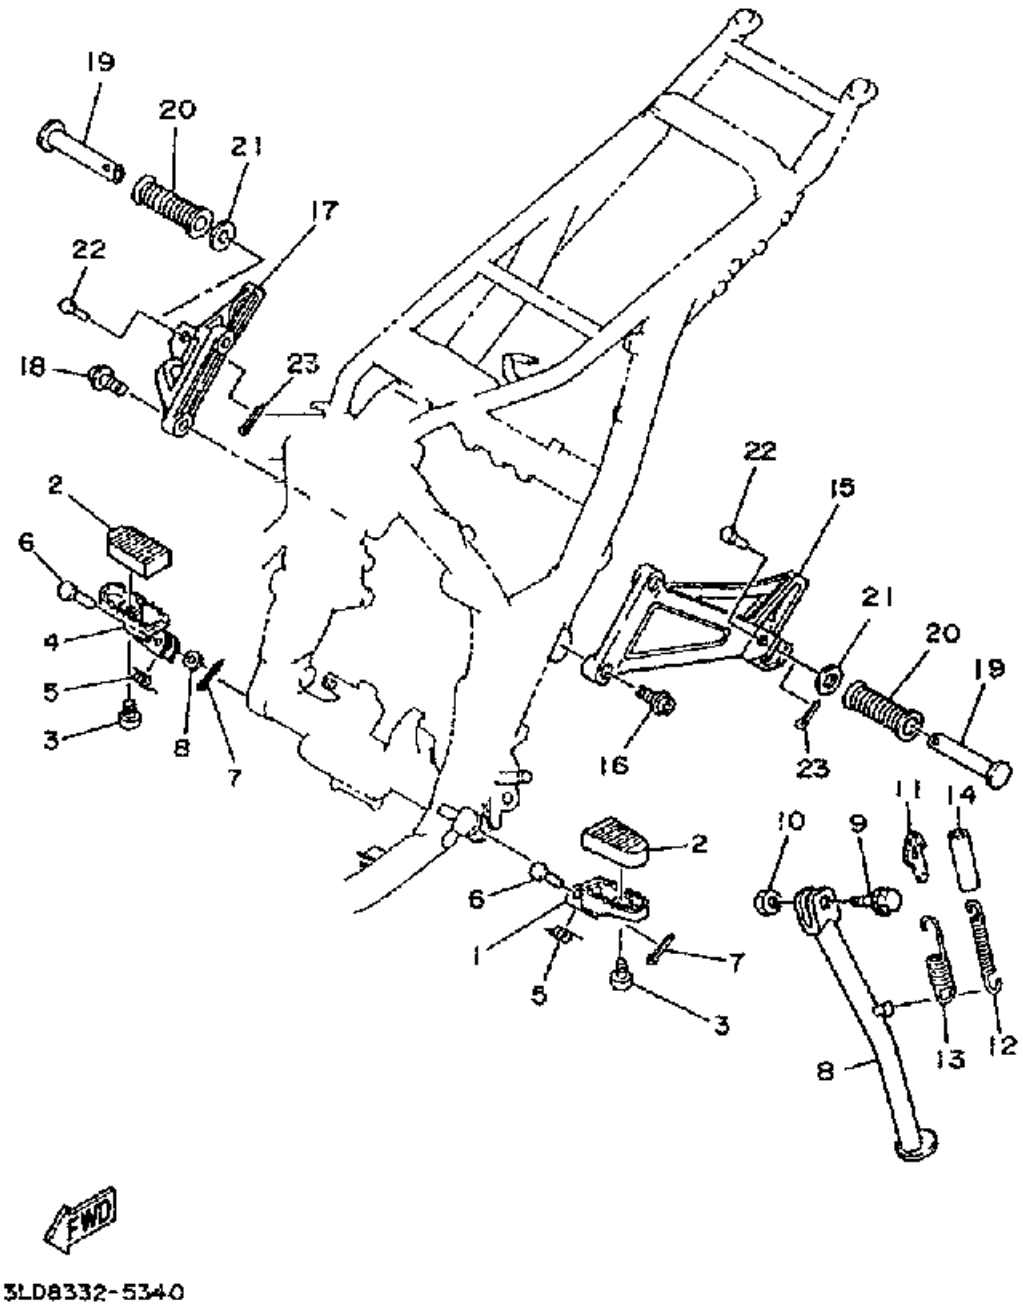


Ref No	Part No	Description
01	3LD-27411-00-00	Footrest 1
02	3LD-27413-00-00	Cover, Footrest
03	91317-06010-00	Bolt
04	3LD-27421-00-00	Footrest 2
05	90508-20583-00	Spring, Torsion
06	90240-10101-00	Pin, Clevis
07	91401-25020-00	Pin, Cotter
08	3LD-27311-01-00	Stand, Side
09	90105-12616-00	Bolt, Washer Based
10	90185-12119-00	Nut, Self-locking
11	3GJ-27315-00-00	Link, Side Stand
12	90506-18224-00	Spring, Tension
13	90506-26225-00	Spring, Tension
14	1TX-27351-00-00	Guide, Side Stand
15	3LD-2741L-11-00	Bracket 4
16	90109-087F1-00	Bolt
17	3LD-27421-11-00	Footrest 2
18	90109-087F1-00	Bolt
19	120-27431-00-00	Footrest, Rear 1
20	120-27433-00-00	Cover, Rear Footrest
21	90201-20279-00	Washer, Plate
22	91701-06038-00	Pin, Clevis
23	91490-20020-00	Pin, Cotter

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

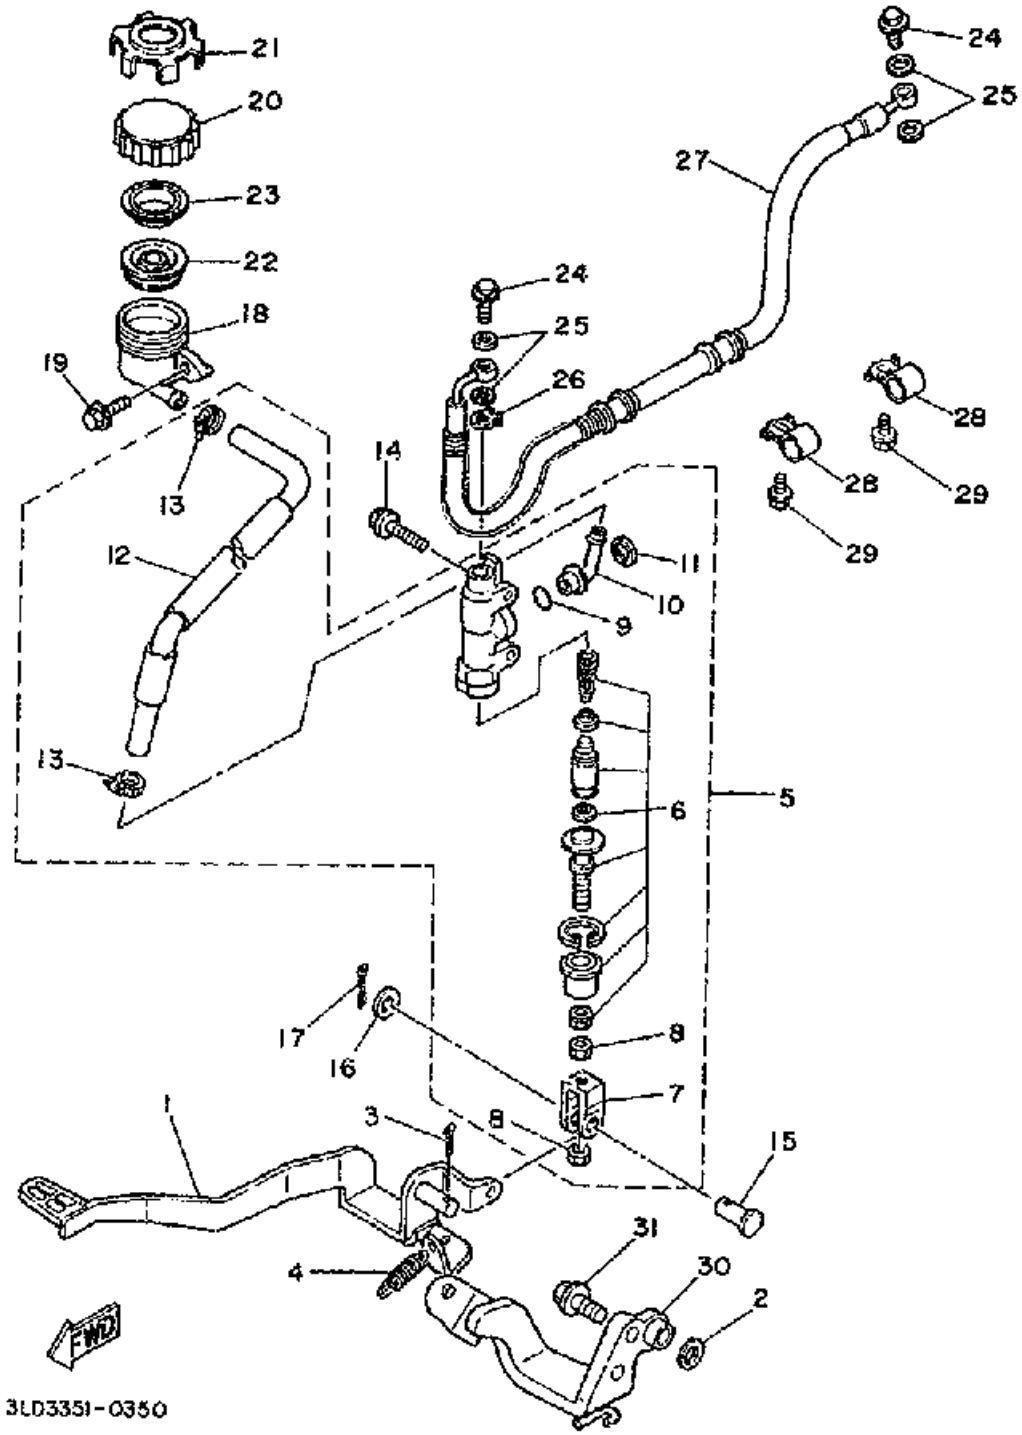

Ref No	Part No	Description
01	3LD-27211-02-00	Pedal, Brake
02	90201-14215-00	Washer, Plate
03	91401-30020-00	Pin, Cotter
04	90506-18305-00	Spring, Tension
05	3LD-2580E-00-00	Rear Master Cylinder Assy
06	3LD-W0042-50-00	• . Cylinder Kit, Master
07	2YK-27222-00-00	• . Joint
08	95303-08600-00	• . Nut
09	93210-15620-00	• . O-ring
10	3LD-2582A-00-00	• . Joint
11	2VN-25866-00-00	• . Circlip
12	3LD-25895-00-00	• . Hose, Reservoir
13	2YK-24356-00-00	• . Clip, Pipe 1
14	95027-08035-00	Bolt, Flange
15	90240-08124-00	Pin, Clevis
16	90201-08083-00	Washer, Plate
17	91401-16015-00	Pin, Cotter
18	47X-25894-00-00	Tank, Reservoir
19	95807-06025-00	Bolt, Flange
20	2KF-25852-20-00	Cap, Reservoir
21	3LD-25388-00-00	Puller, Chain 1
22	360-25854-00-00	Diaphragm, Reservoir
23	2GU-25855-00-00	Bush,diaphragm
24	90401-10159-00	Bolt, Union
25	90201-10118-00	Washer, Plate
26	3LD-25844-00-00	Washer, Lock
27	3LD-25873-02-00	Hose, Brake 2
28	90461-10121-00	Clamp
29	95807-06012-00	Bolt, Flange
30	3LD-27422-01-00	Bracket, Footrest 2
31	95827-10025-00	Bolt, Flange


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

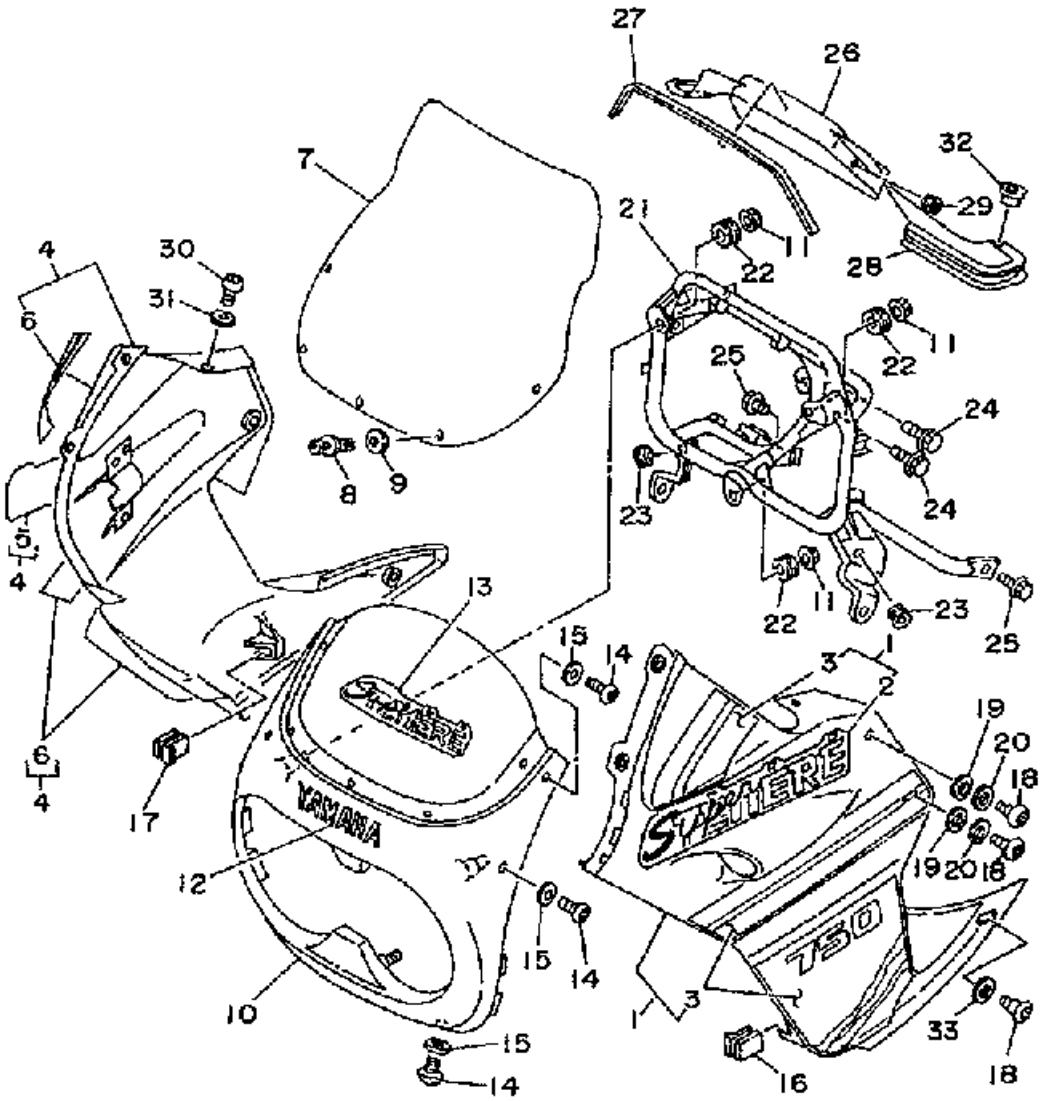

3LD7351-4360


Ref No	Part No	Description
01	3LD-Y283U-33-8X	Panel Assembly 1
02	3LD-28328-H0-00	• . Emblem
03	3LD-28301-H0-00	• . Graphic Set, Lower Cover 1
04	3LD-Y283V-33-8X	Panel Assembly 2
05	3LD-28328-H0-00	• . Emblem
06	3LD-28303-H0-00	• . Graphic Set,lower Cover 2
07	3LD-28381-01-00	Windshield
08	90269-05049-00	Rivet
09	92907-05600-00	Washer, Plate
10	3LD-28351-00-JY	Body, Cowling
11	90179-06009-00	Nut
12	99236-00100-00	Emblem, Yamaha
13	3LD-28315-H0-00	Emblem
14	90149-05299-00	Screw
15	90202-05180-00	Washer, Plate
16	90480-16515-00	Grommet
17	90480-16515-00	Grommet
18	3LD-28331-01-00	Bolt, Leg Shield
19	3LD-28319-00-00	Washer
20	90201-087H6-00	Washer, Plate
21	3LD-28356-01-00	Stay 1
22	90480-14229-00	Grommet
23	90480-13163-00	Grommet
24	95827-08030-00	Bolt, Flange
25	95827-08012-00	Bolt, Flange
26	3LD-2837M-00-00	Panel, Console 2
27	3LD-28371-00-00	Damper
28	3LD-28345-00-00	Mole 1
29	90480-13398-00	Grommet
30	90149-05299-00	Screw
31	90202-05180-00	Washer, Plate
32	90179-05523-00	Nut
33	90202-08146-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

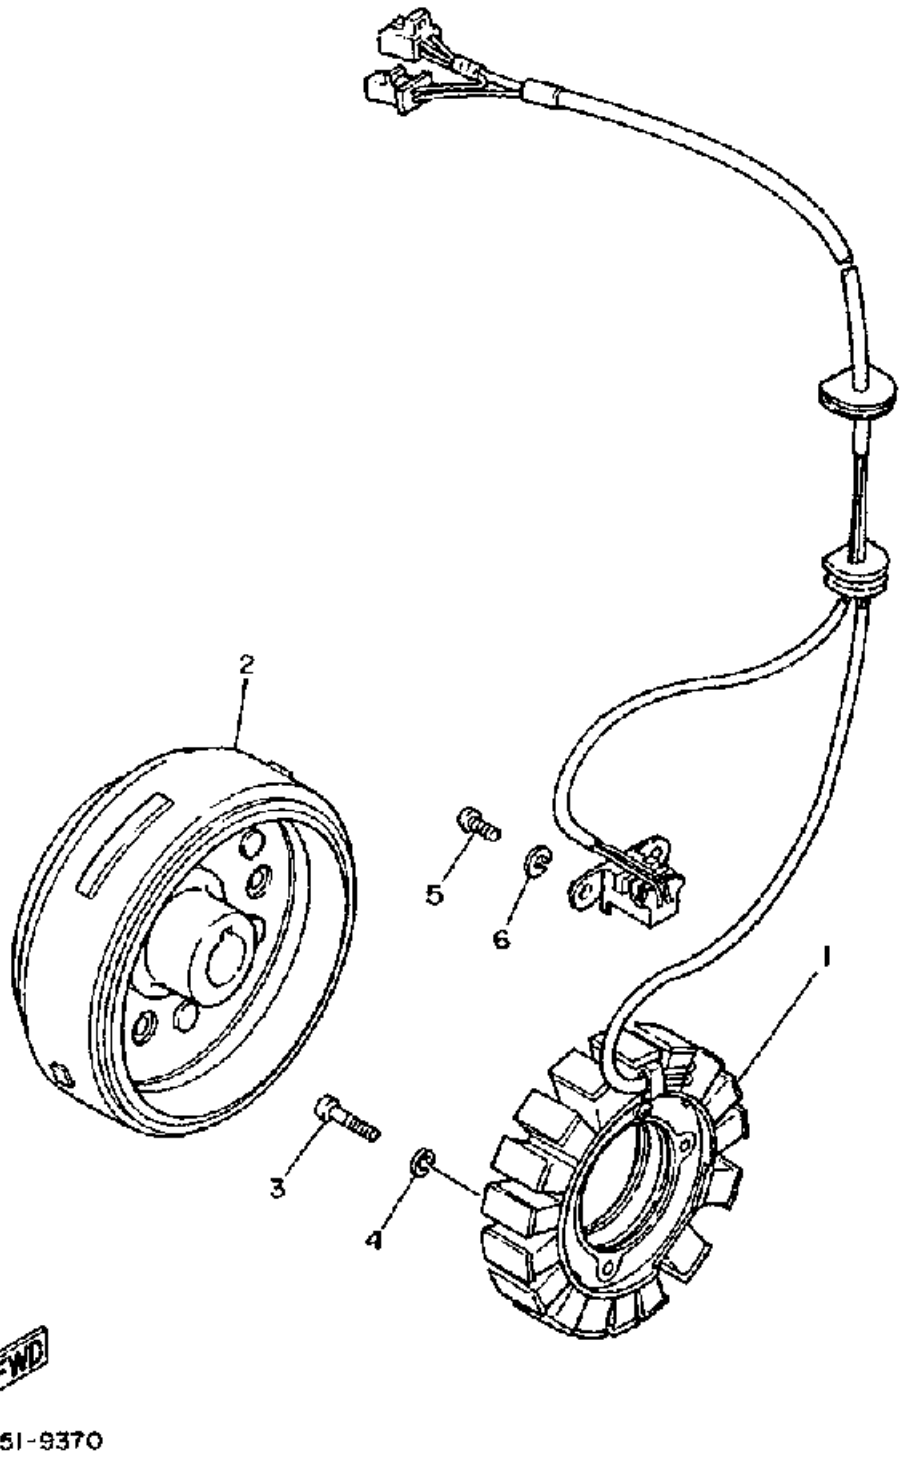


Ref No	Part No	Description
01	3LD-81410-00-00	Stator Assy
02	3LD-81450-01-00	Rotor Assy
03	98507-06030-00	Screw, Pan Head
04	92907-06100-00	Washer, Spring
05	98507-05016-00	Screw, Pan Head
06	92907-05100-00	Washer, Spring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

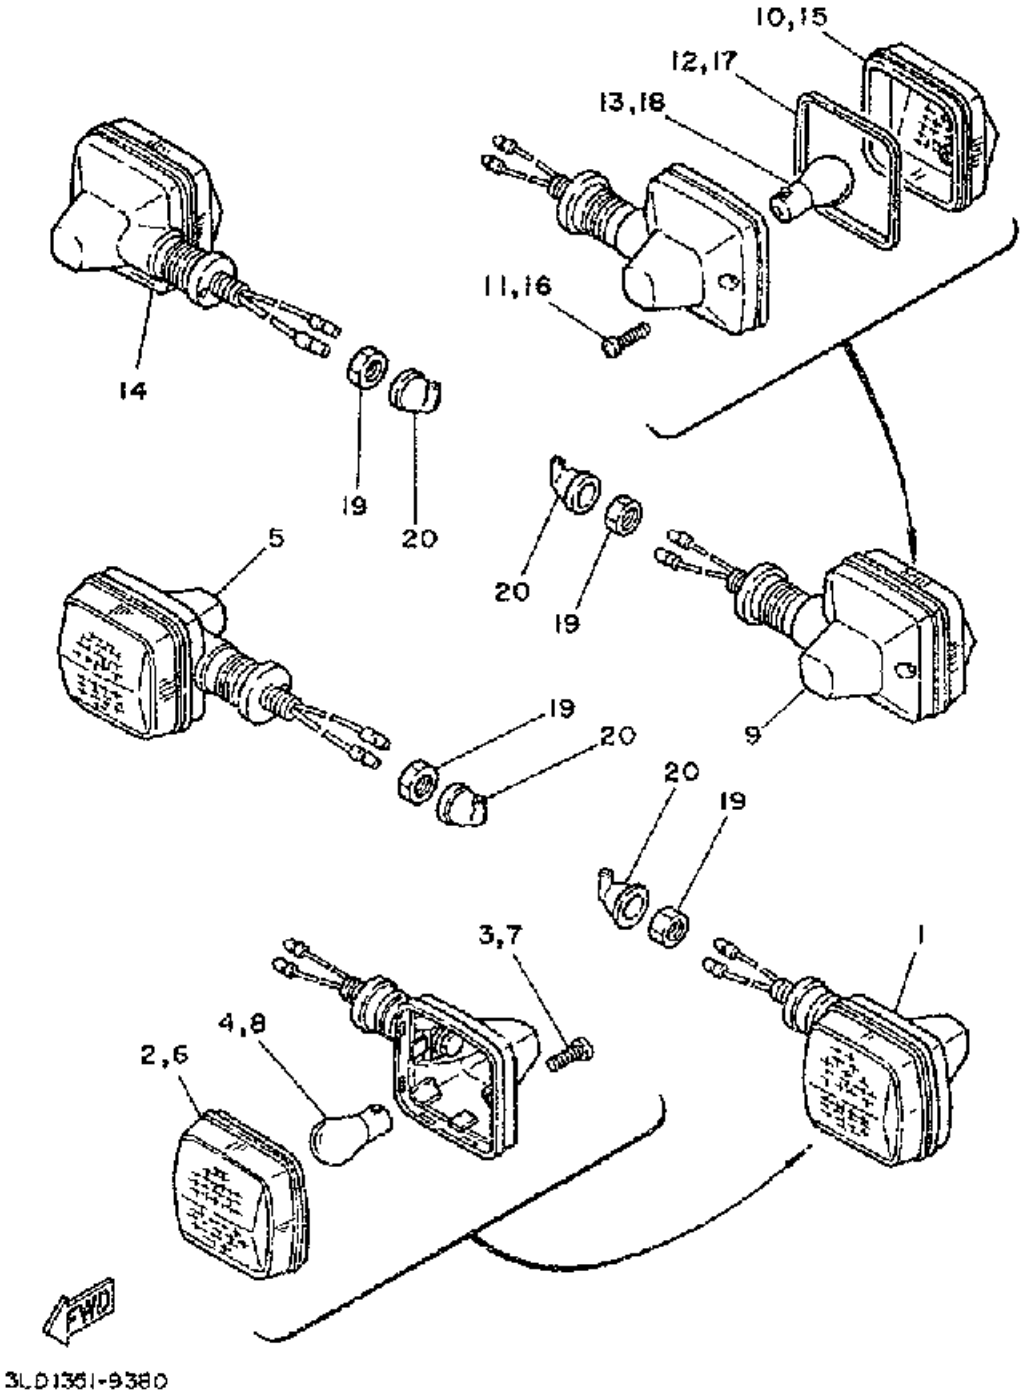


Ref No	Part No	Description
01	3BN-83310-00-00	Front Flasher Light Assy 1
02	47J-83312-00-00	• . Lens, Flasher
03	97707-40620-00	• . Screw, Tapping
04	306-83311-40-00	• . Bulb, Flasher (12v-21w)
05	3BN-83320-00-00	Front Flasher Light Assy 2
06	47J-83322-00-00	• . Lens, Flasher 2
07	97707-40620-00	• . Screw, Tapping
08	306-83311-40-00	• . Bulb, Flasher (12v-21w)
09	3LD-83330-00-00	Rear Flasher Light Assy 1
10	2KF-83332-00-00	• . Lens, Flasher
11	97707-40620-00	• . Screw, Tapping
12	47J-83313-00-00	• . Gasket, Flasher Lens
13	306-83311-40-00	• . Bulb, Flasher (12v-21w)
14	3LD-83340-00-00	Flasher Light Assy 2
15	2KF-83342-00-00	• . Lens, Flasher 2
16	97707-40620-00	• . Screw, Tapping
17	47J-83313-00-00	• . Gasket, Flasher Lens
18	306-83311-40-00	• . Bulb, Flasher (12v-21w)
19	95307-12700-00	Nut
20	18G-83365-00-00	Cap

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

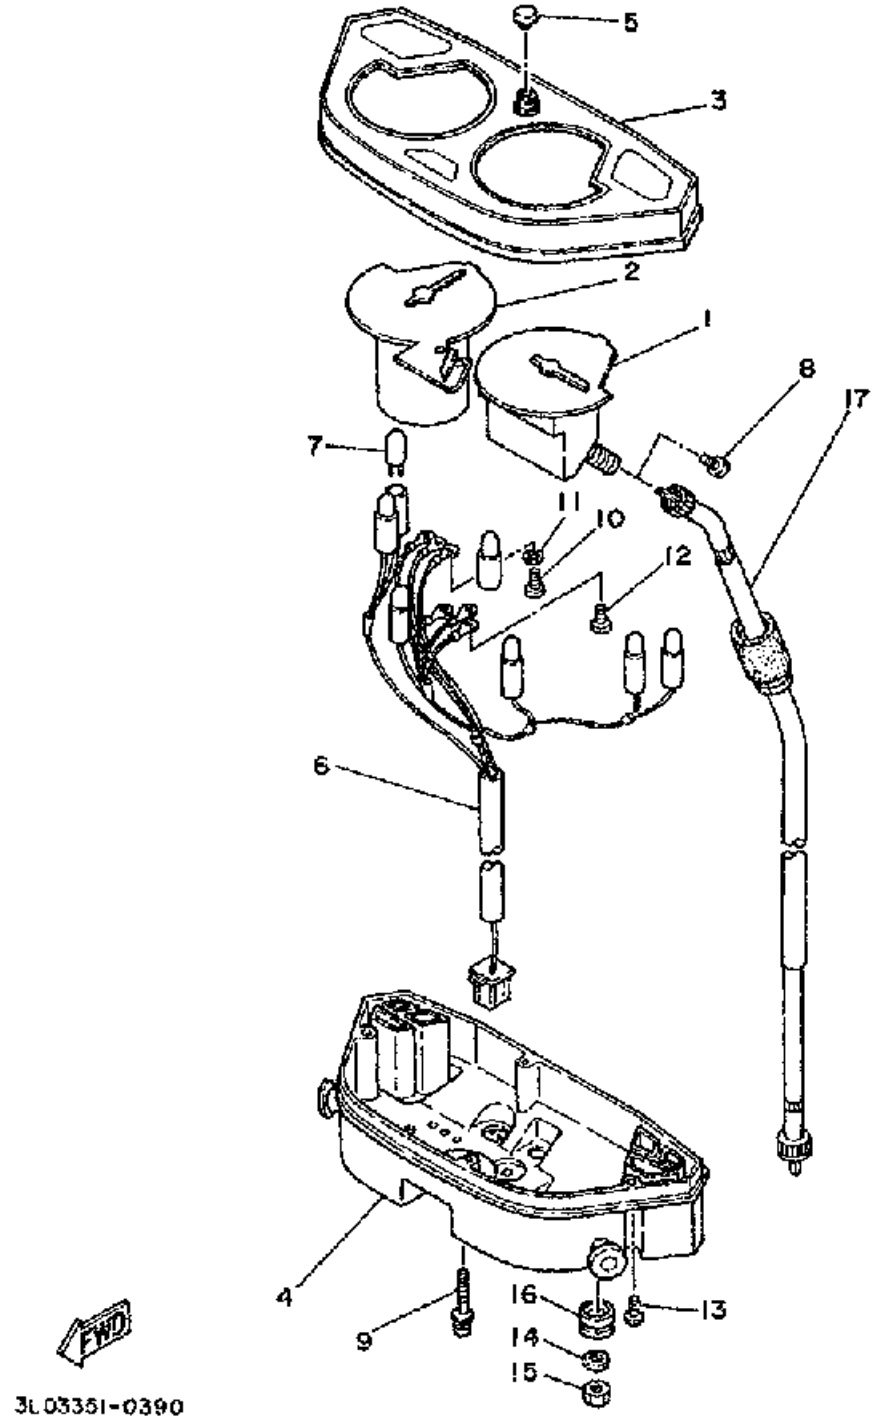


Ref No	Part No	Description
01	3LD-83570-00-00	Speedometer Assy
02	3LD-83540-00-00	Tachometer Assy
03	3LD-83559-10-00	Cover, Meter
04	3LD-8353H-10-00	Case, Under
05	29L-83578-00-00	Knob, Trip Meter
06	3LD-83509-00-00	Socket Cord Assy
07	4G1-84744-00-00	Bulb (12v-3.4w)
08	90167-04021-00	Screw, Tapping
09	90159-04114-00	Screw, With Washer
10	98507-03010-00	Screw, Pan Head
11	92907-03100-00	Washer
12	90159-03102-00	Screw, With Washer
13	90164-04009-00	Screw, Tapping
14	90201-06765-00	Washer, Plate
15	95307-06600-00	Nut
16	5J0-83513-00-00	Damper
17	3LD-83550-00-00	Speedometer Cable Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

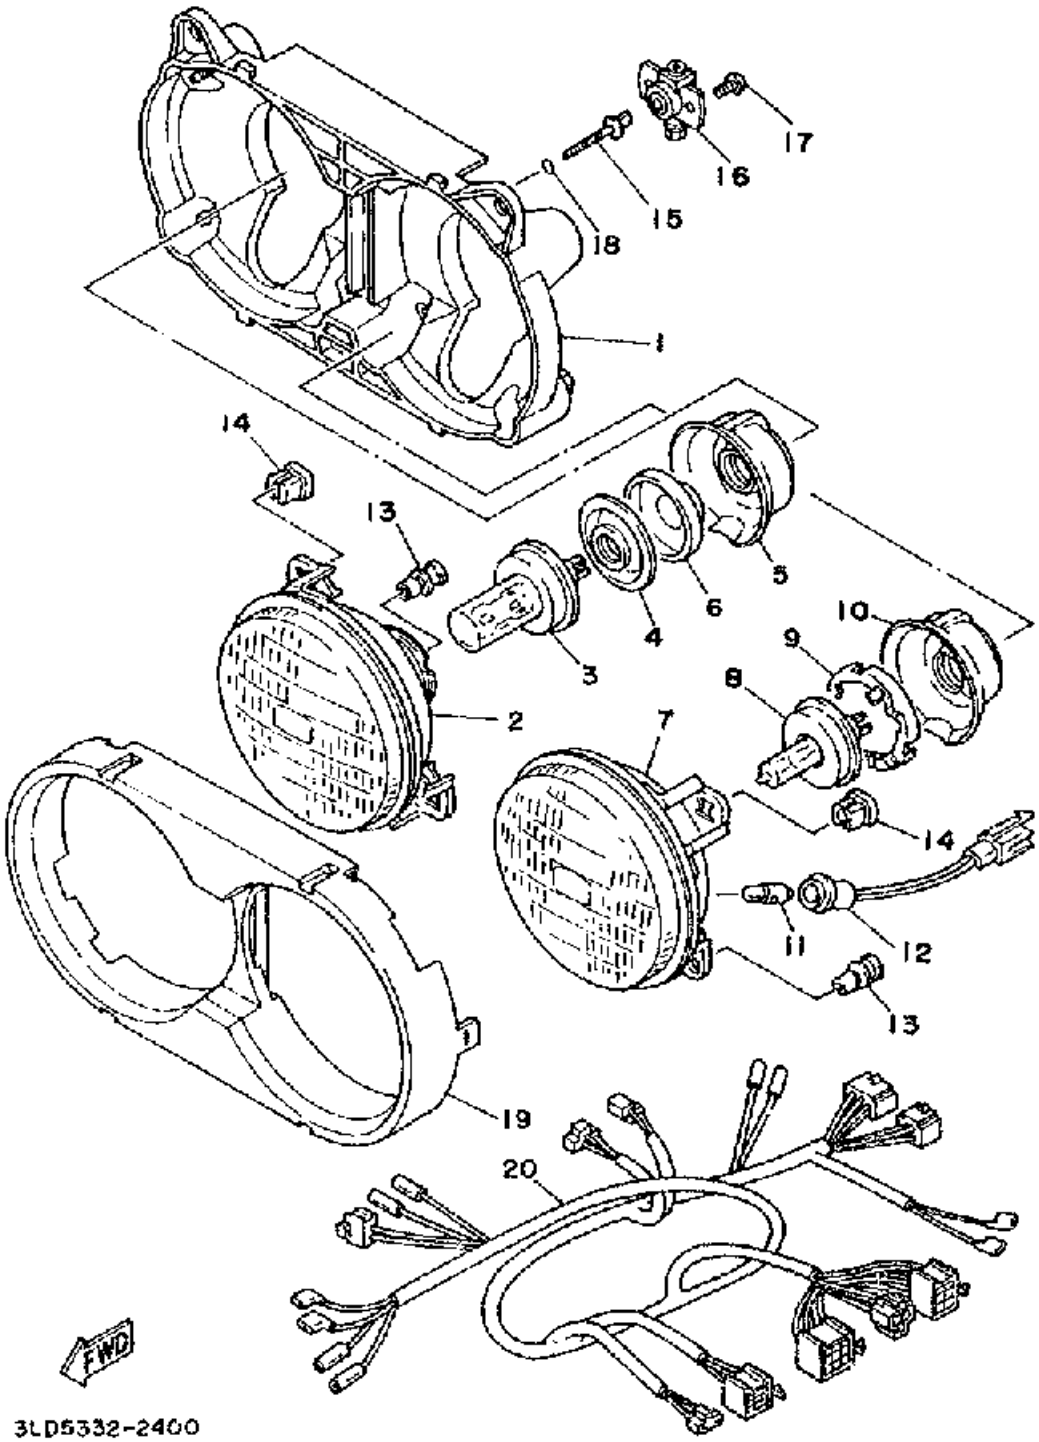


Ref No	Part No	Description
01	3LD-84330-00-00	Body Assy
02	2LA-8432A-G0-00	Lens Assy
04	2LA-84375-00-00	Fitting Plate, Bulb
05	2GH-84397-00-00	Cover, Socket
06	2LA-84393-00-00	Holder, Bulb
07	2HW-84320-F0-00	Lens Assy
08	2F9-84314-00-00	Bulb, Headlight (12v-60/55w)
09	2F9-84375-00-00	Fitting Plate, Bulb
10	2F9-84397-01-00	Cover, Socket
11	4E2-84347-00-00	Bulb (12v-4w)
12	2LA-84312-00-00	Holder, Socket
13	51L-8431U-00-00	Holder
14	51L-84334-00-00	Nut, Adjusting
15	2AX-84331-00-00	Screw, Rim Adjusting
16	3LD-8430M-00-00	Gear Unit Assy
17	97707-40616-00	Screw, Tapping
18	93210-06632-00	O-ring
19	3LD-84396-10-00	Cover
20	3LD-84359-60-00	Cord, Headlight

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

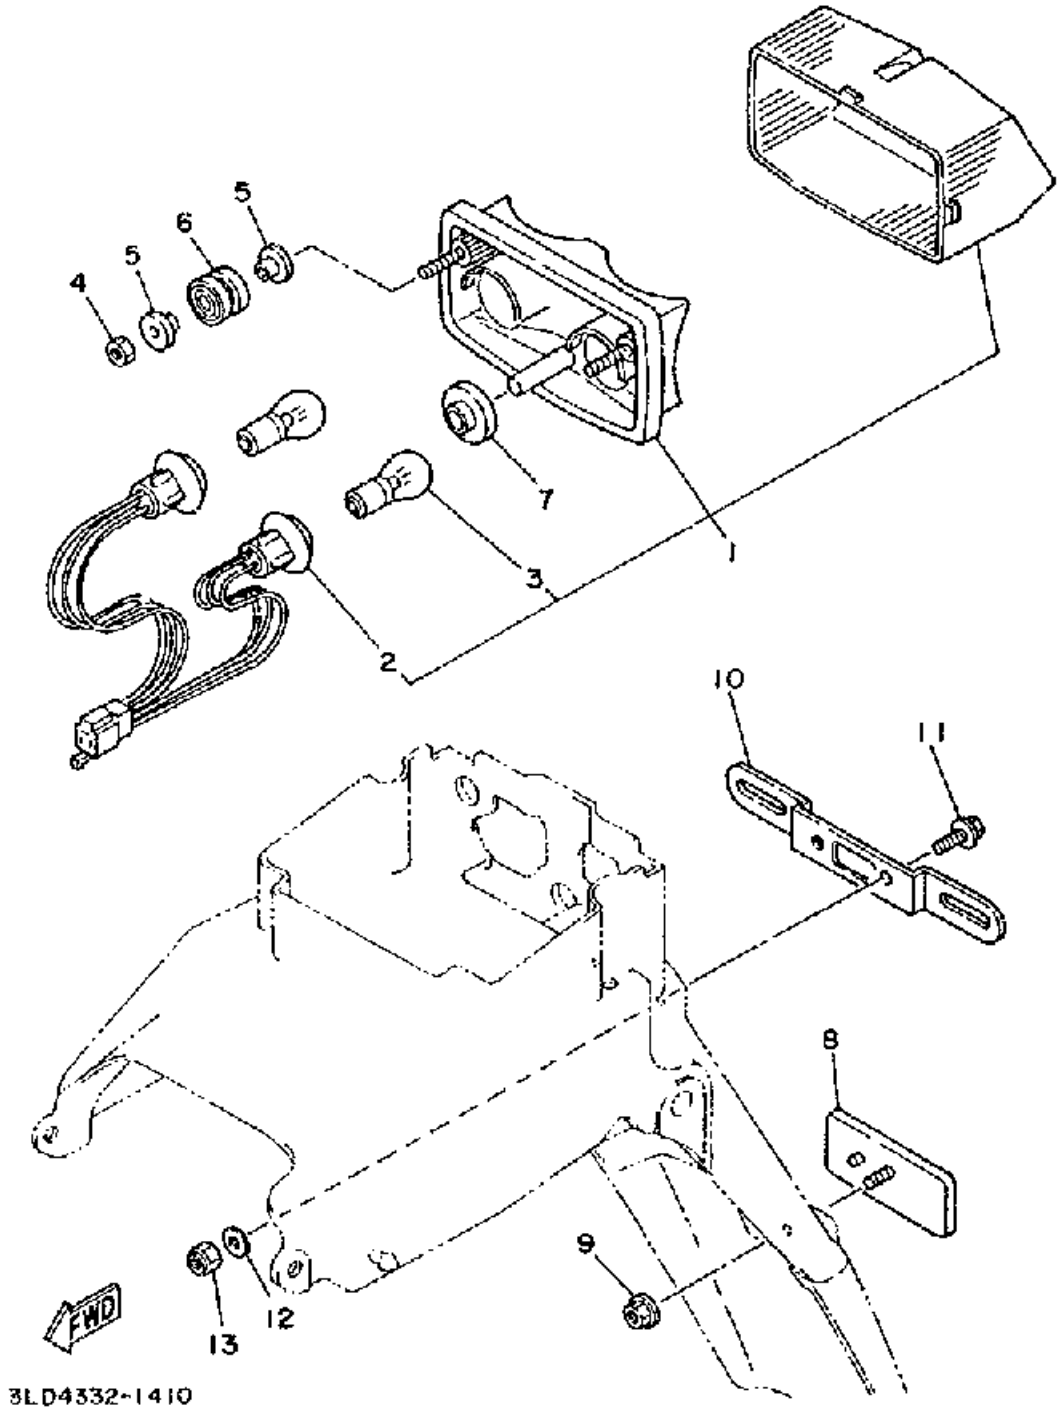

Ref No	Part No	Description
01	3LD-84710-10-00	Taillight Unit Assy
02	3LK-8473A-00-00	• . Cord Assy
03	31L-84714-00-00	• . Bulb (12v-21/5w)
04	95307-06600-00	Nut
05	90387-07037-00	Collar
06	16G-84736-00-00	Damper, Tail 1
07	90480-15259-00	Grommet
08	3G1-85130-01-00	Rear Reflector Assy
09	95707-05500-00	Nut, Flange
10	36A-84551-00-00	Bracket, Licence
11	95027-06012-00	Bolt, Flange
12	90201-06765-00	Washer, Plate
13	95307-06700-00	Nut


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

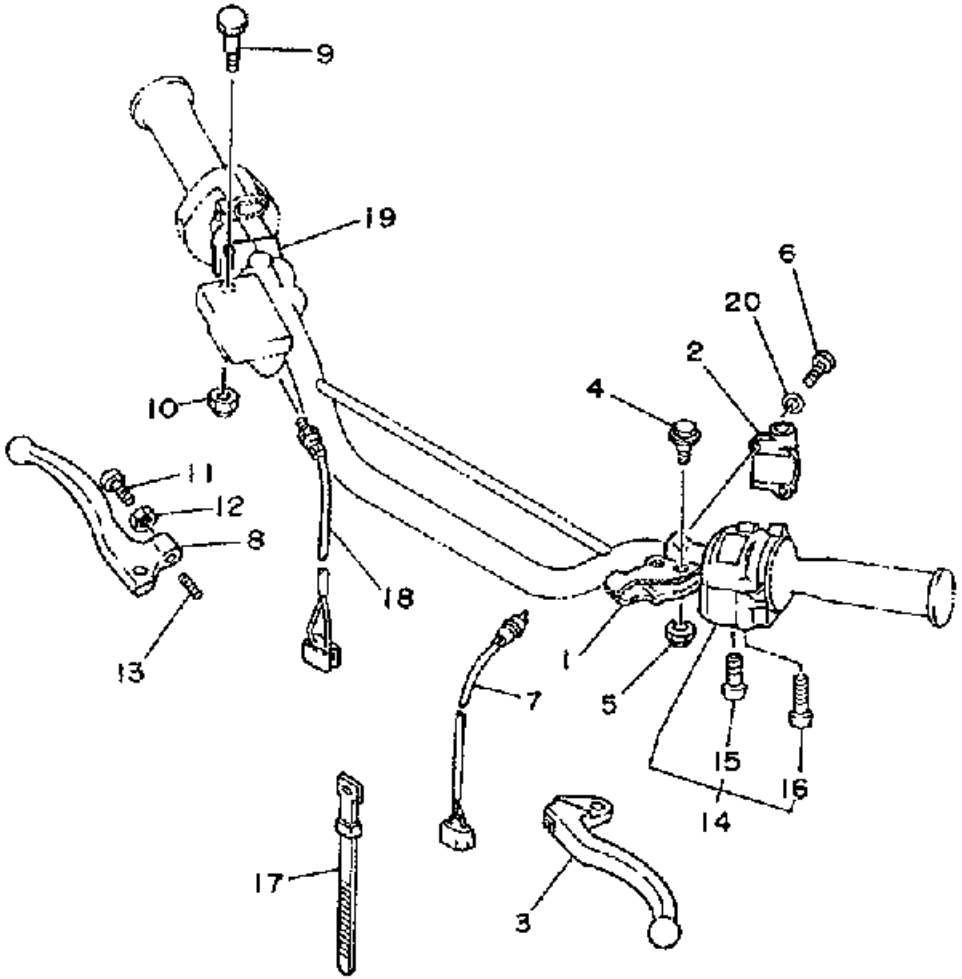

3LD7351-4420


Ref No	Part No	Description
01	1LN-82911-00-00	Holder, Lever 1
02	33G-82913-00-00	Holder, Lever Lower 1
03	3FY-83912-01-00	Lever 1
04	90109-06799-00	Bolt
05	95607-06100-00	Nut, U
06	98507-05020-00	Screw, Pan Head
07	3LD-82917-00-00	Switch
08	3FY-83922-00-00	Lever 2
09	90109-062A8-00	Bolt
10	95607-06100-00	Nut, U
11	90149-06153-00	Screw
12	90170-06010-00	Nut
13	90501-10312-00	Spring, Compression
14	3LD-83969-01-00	Switch, Handle 5
15	98507-05030-00	• . Screw, Pan Head
16	98507-05040-00	• . Screw, Pan Head
17	437-83936-01-00	Band, Switch Cord
18	3LD-83980-00-00	Front Stop Switch Assy
19	3LD-83975-11-00	Switch, Handle 2
20	92907-05100-00	Washer, Spring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

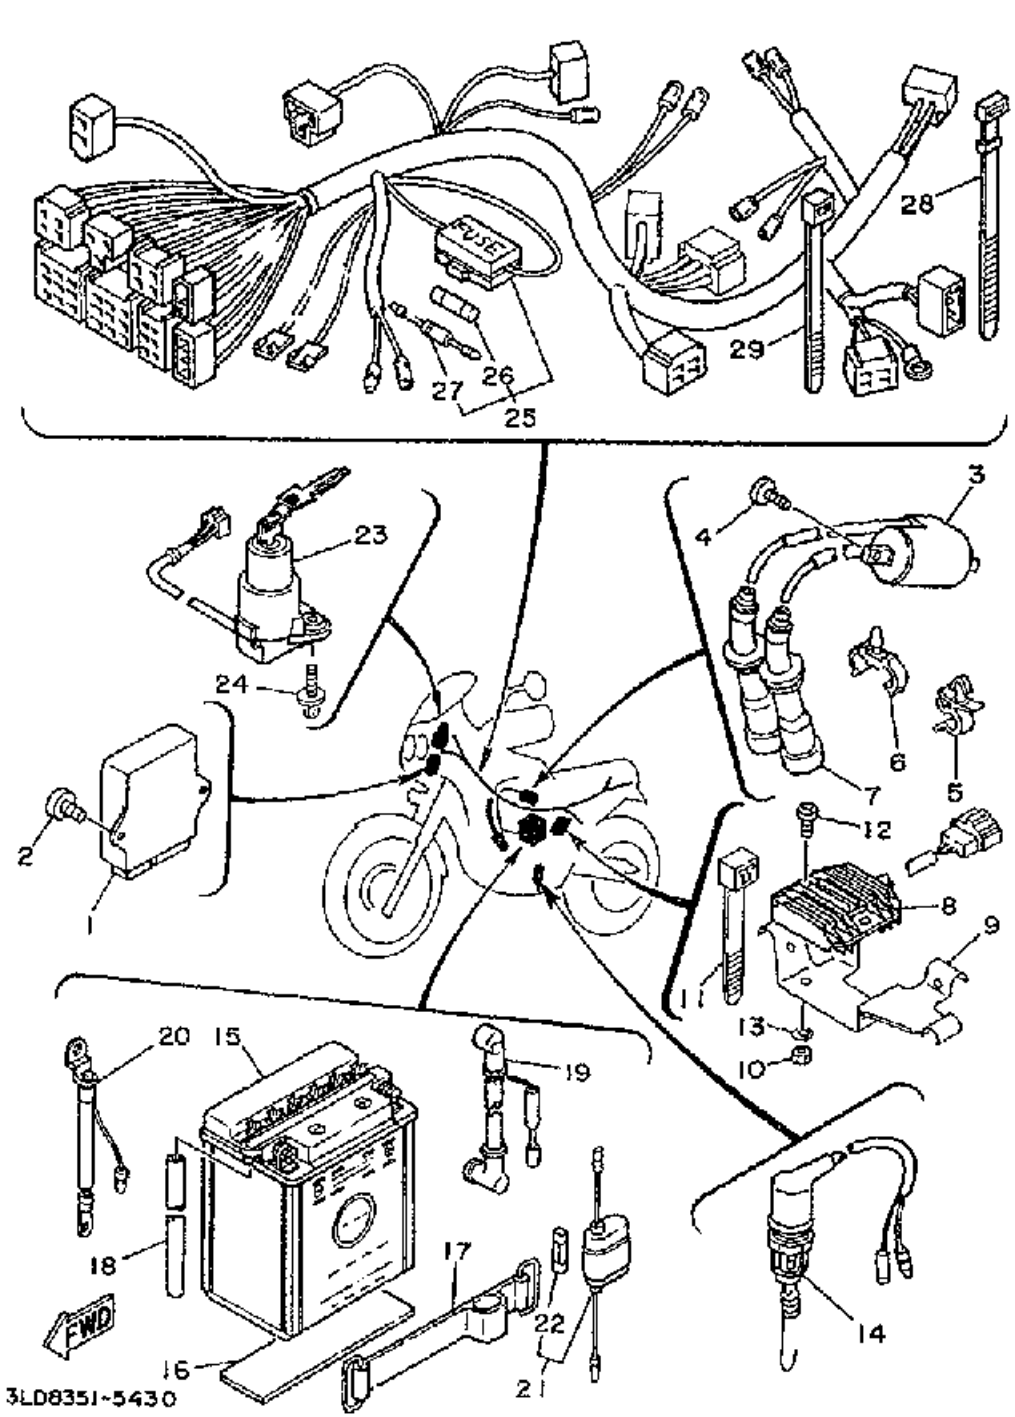

Ref No	Part No	Description
01	3LD-82305-00-00	Ignitor Unit Assy
02	98507-06012-00	Screw, Pan Head
03	3LD-82310-00-00	Ignition Coil Assy
04	98507-06020-00	Screw, Pan Head
05	90464-09129-00	Clamp
06	90464-09130-00	Clamp
07	3LD-82370-00-00	Plug Cap Assy
08	3LS-81960-00-00	Rectifier & Regulator Assy
10	90179-06524-00	Nut
11	90464-35132-00	Clamp
12	98507-06035-00	Screw, Pan Head
13	92907-06600-00	Washer, Plate
14	3LD-82530-01-00	Stop Switch Assy
15	3LD-82110-00-00	Battery Assy (yb14l-a, 2v-14a)
16	5Y1-82122-00-00	Seat, Battery
17	34U-82131-01-00	Band, Battery
18	90445-080F4-00	Hose
19	3LD-82115-00-00	Wire, Plus Lead
20	3LD-82116-00-00	Wire, Minus Lead
21	2UJ-82150-01-00	Fuse Holder Assy
22	148-82151-00-00	• . Fuse (20a)
23	3LD-82501-00-00	Main Switch Steering Lock
24	90109-060G4-00	Bolt
25	3LD-82590-20-00	Wire Harness Assy
26	1E6-82151-00-00	• . Fuse (10a)
27	3K7-81980-00-00	• . Diode Assy
28	25G-83936-01-00	Band, Switch Cord
29	341-26397-01-00	Band

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

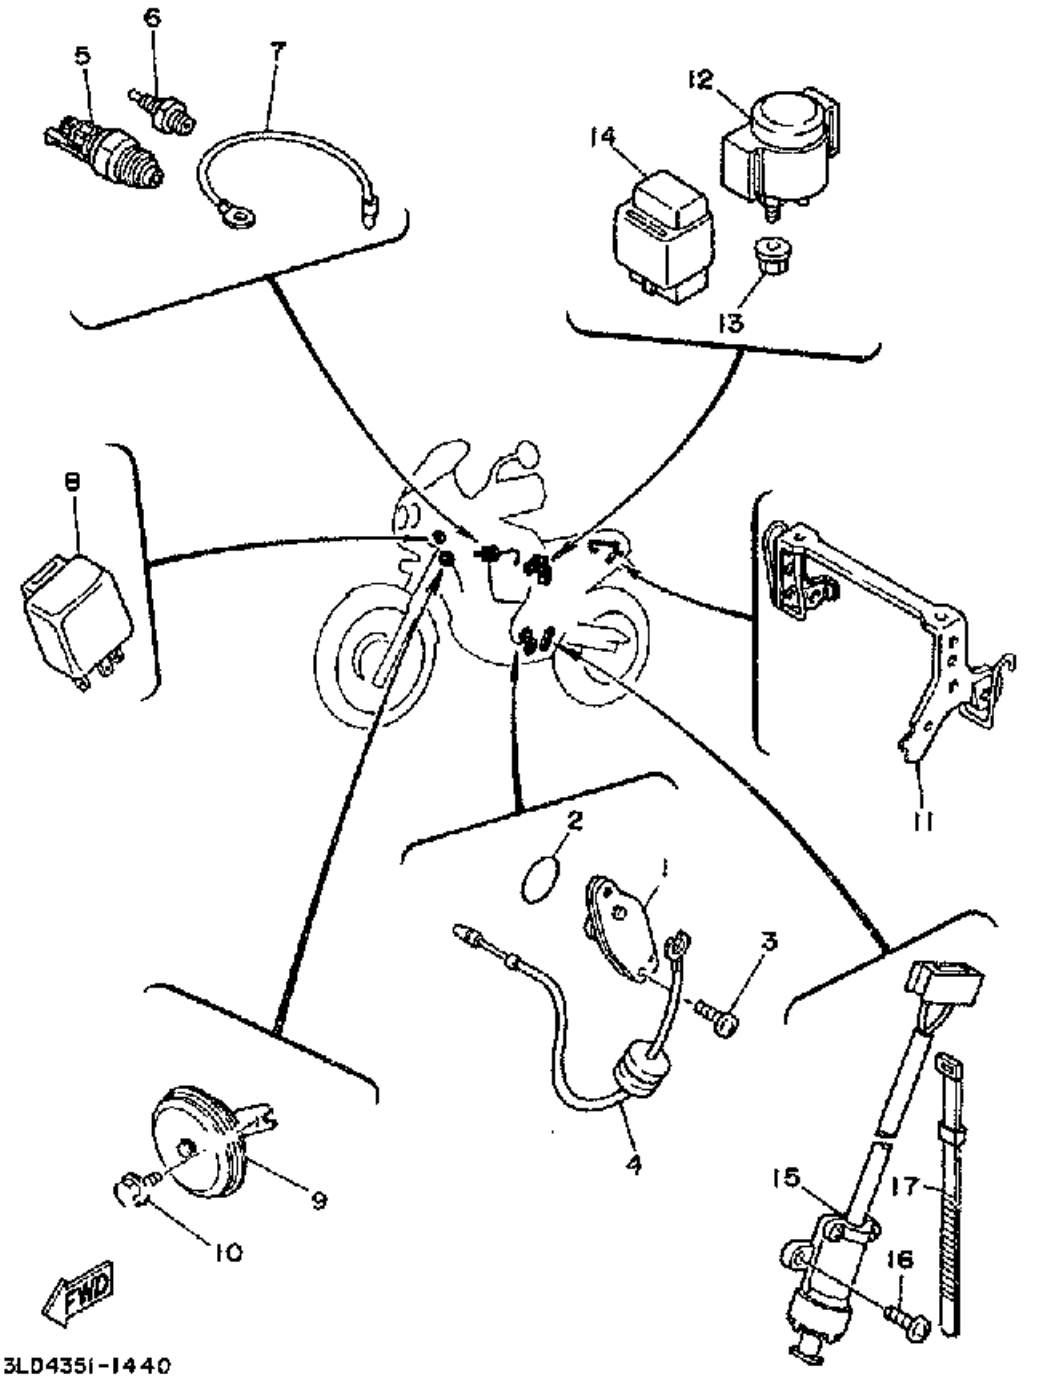

Ref No	Part No	Description
01	1AE-82540-00-00	Neutral Switch Assy
02	93210-29196-00	O-ring
03	98507-06016-00	Screw, Pan Head
04	3LD-82541-00-00	Wire, Lead
05	3LN-82560-00-00	Thermo Switch Assy
06	11H-83591-00-00	Thermo Unit
07	1VJ-82519-00-00	Wire, Earth Lead
08	1U3-83350-40-00	Flasher Relay Assy
09	3BN-83371-00-00	Horn
10	95807-06010-00	Bolt, Flange
11	3LD-83318-10-00	Stay, Flasher 1
12	3AY-81940-00-00	Starter Relay Assy
13	95707-06500-00	Nut, Flange
14	12R-81950-01-00	Relay Assy
15	3LD-82566-40-00	Switch, Side Stand
16	98507-05016-00	Screw, Pan Head
17	3TB-83936-00-00	Band, Switch Cord

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.