
XS750F, XS750SF, XS1100SF
FAIRING QUARTZ HEAD LAMP CONVERSION

The standard quartz halogen head lamp in the motorcycle models listed under "Affected Models" can be easily installed on the YPDI accessory fairing by following the directions given below.

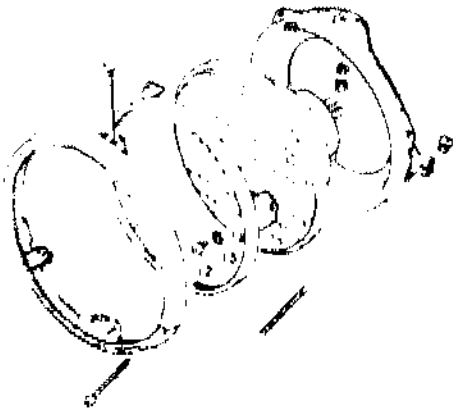

AFFECTED MODELS

XS750F
XS750SF
XS1100SF

ON THE MOTORCYCLE:

1. From the bottom of the head lamp shell, remove the two Phillips head screws holding the head lamp unit assembly into the shell. Carefully unplug the head lamp unit assembly and remove it.

   NOTE: Do not remove the bulb from the head lamp unit assembly.

2. Remove the head lamp aim adjusting screw, tension spring, and nylon nut from the head lamp unit.

3. Remove the two pivot screws and their nuts and separate the head lamp rim from the mounting ring and lens assembly.

4. Remove the three Phillips head screws holding the chrome retaining ring to the mounting ring. Separate and remove the lens assembly from the retaining and mounting rings.

ON THE FAIRING:

5. At the bottom of the head lamp rim, remove the Phillips head screw holding the head lamp rim to the head lamp fixture. Pop the bottom of the head lamp rim free and lift the rim off the head lamp fixture.

6. Remove the three Phillips head screws holding the chrome retaining ring to the head lamp fixture.

   NOTE: a) Do not remove the head lamp aiming screws located next to the retaining ring screws.

   b) Do not allow the sealed beam bulb to fall from the unit.

7. Unplug and remove the sealed beam bulb.

8. Fit the chrome retaining ring on the quartz lens assembly.

   NOTE: a) The joint in the retaining ring must be placed at the bottom of the lens assembly to align the mounting tabs.

   "TOP" is cast into the quartz unit lens to identify the top of the lens assembly.

9. Plug in the quartz lens assembly and align each of the three locating tabs on the lens assembly with its corresponding notch in the mounting ring. Align the chrome retaining ring tabs and replace the three retaining screws.

10. Aim the head lamp with the motorcycle carrying its normal rider and equipment load.

11. Locate the wire clip at the top of the chrome head lamp rim in the slot in the top of the head lamp fixture. Snap the bottom of the rim back into place and replace the bottom holding screw.