Kawasaki

MICRO-

PARTS CATALOG

Z1B *900ccm* *1975*

Rahmen Nr. Z1F-047500 ~ 085700
Motor Nr. Z1E 047500 ~ 086000

Farbe: Candy Sky Blue, Candy Super Red



Left Side View



Right Side View

Kawasaki Z1B (Z900) 1975

Index **page**


1.	Cylinder Head	8
2.	Cam Shaft, Valve	10
3.	Cylinder, Piston, Crank Shaft	12
4.	Cam Chain, Tensioner	14
5.	Crank Case	16
6.	Crank Case Bolt & Stud Pattern	18
7.	Clutch	20
8.	Transmission Gears	22
9.	Gear Change Mechanism	26
10.	Kickstarter	28
11.	Engine Covers	30
12.	Carburetors	32
13.	Oil Pump, Oil Filter	38
14.	Mufflers, Air Cleaner	40
15.	Contact Breaker	42
16.	Starter Motor, Dynamo	44
17.	Frame	46
18.	Swinging Arm, Rear Shock Absorber	50
19.	Footrests, Stands, Brake Pedal	52
20.	Handlebar, Grips	54
21.	Fenders	56
22.	Wheels	58
23.	Front Hub	60
24.	Rear Hub	62
25.	Disc Brake Equipments A	64
26.	Disc Brake Equipments B	66
27.	Front Fork	68
28.	Fuel Tank	70
29.	Oil Tank, Side Covers	72
30.	Dual Seat, Chain Cover	74
31.	Cables	76
32.	Electrical Equipments A	78
33.	Electrical Equipments B	82
34.	Electrical Equipments C	84
35.	Tools	86
36.	Special Service Tools	88
37.	N° Verzeichnis	90

NLA = nicht mehr lieferbar
NLA = n'est plus livrable
NLA = non è più disponibile


Next >>

Pictorial Index 1/5


1. Cylinder Head

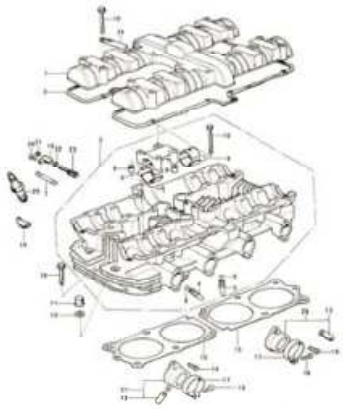


2. Cam Shaft, Valve

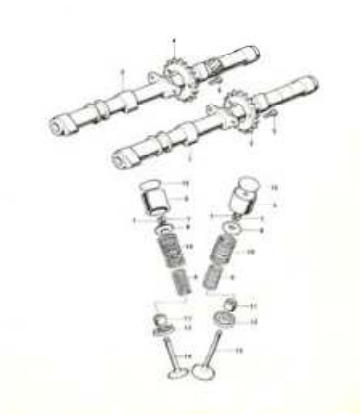


3. Cylinder, Piston, Crank Shaft

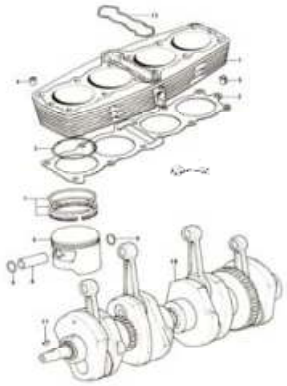


4. Cam Chain, Tensioner

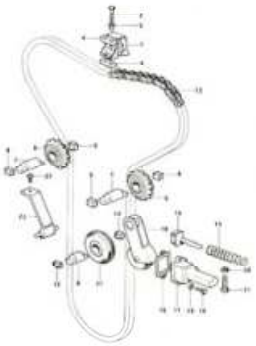


5. Crank Case

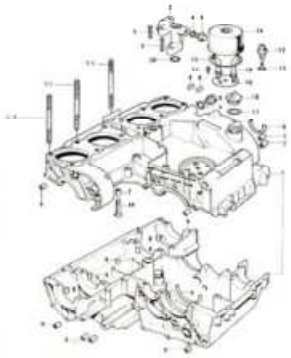

6. Crank Case Bolt & Stud Pattern

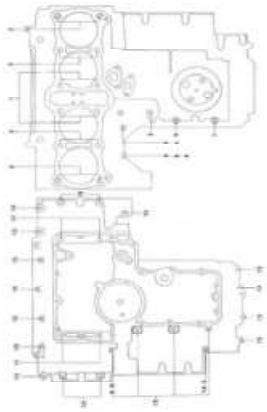

7. Clutch

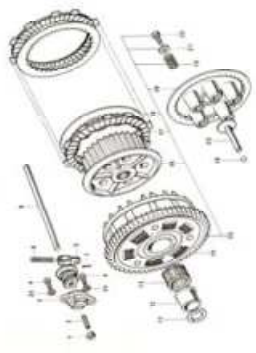

8. Transmission Gears 1/2




8. Transmission Gears 2/2



Pictorial Index 2/5


9. Gear Change Mechanism

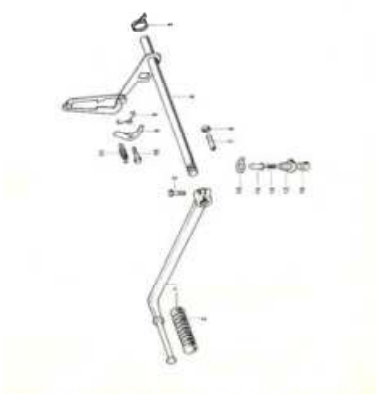


10. Kickstarter




11. Engine Covers

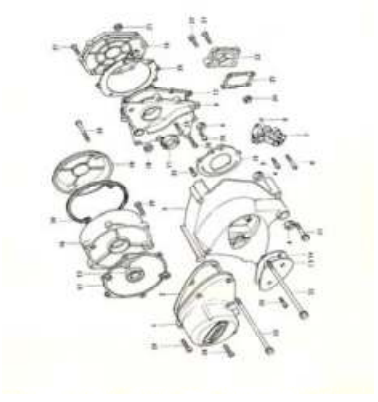


12. Carburetors 1/3

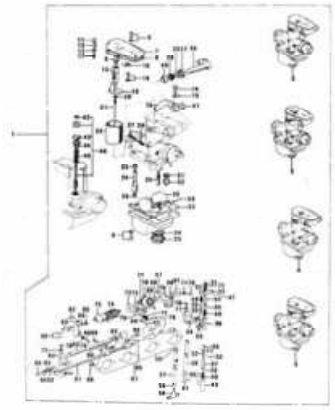


12. Carburetors 2/3

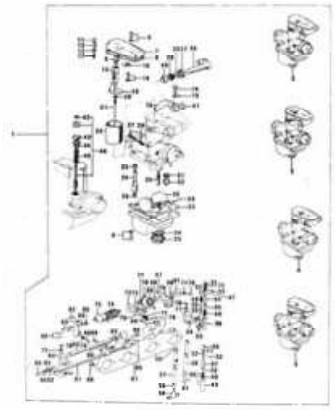


12. Carburetors 3/3

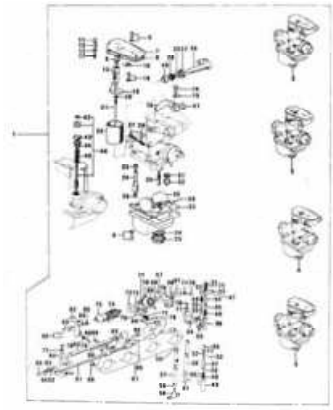


13. Oil Pump, Oil Filter

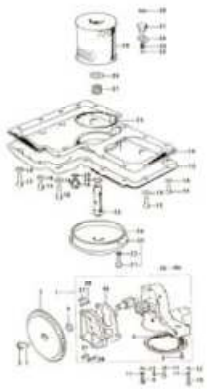

14. Mufflers, Air Cleaner

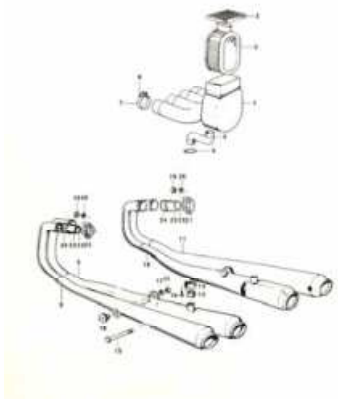


15. Contact Breaker

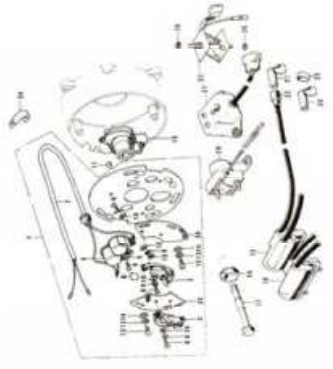


Next >>

Pictorial Index 3/5


16. Starter Motor, Dynamo

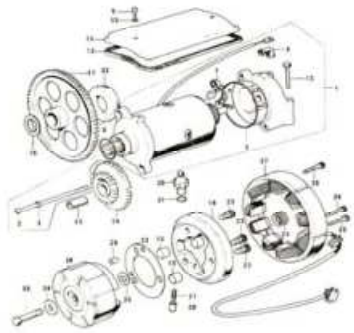


17. Frame 1/2

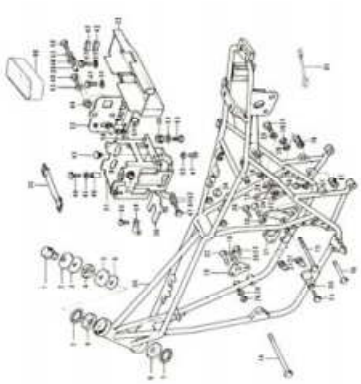


17. Frame 1/2

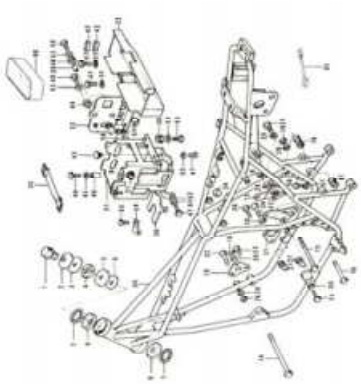


18. Swinging Arm, Rear Shock Abs.

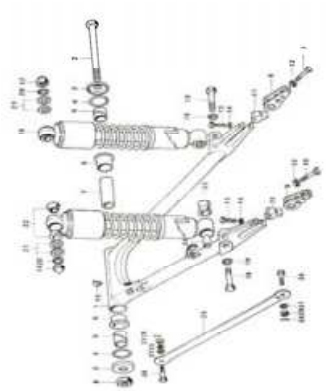


19. Footrests, Stands, Brake Pedal

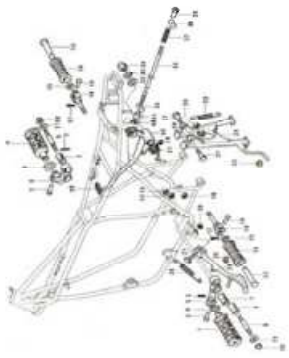

20. Handlebar, Grips

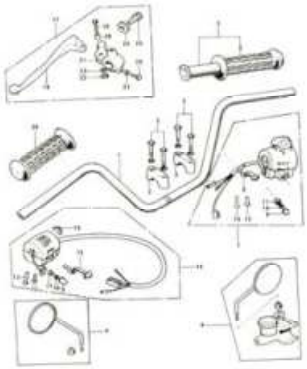


21. Fenders

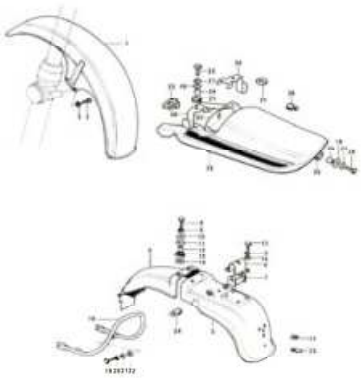

22. Wheels




23. Front Hub

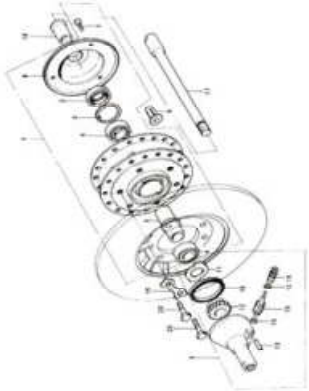


<< Back

Pictorial Index 4/5


24. Rear Hub

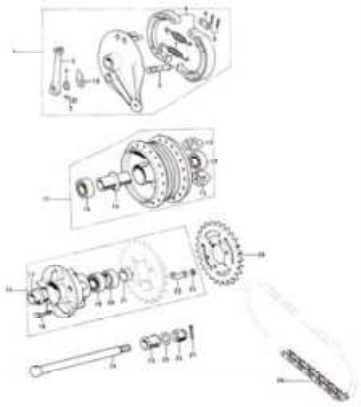


25. Disc Brake Equipments A

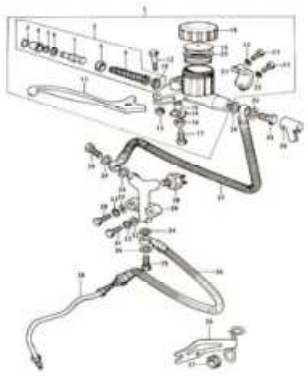

26. Disc Brake Equipments B

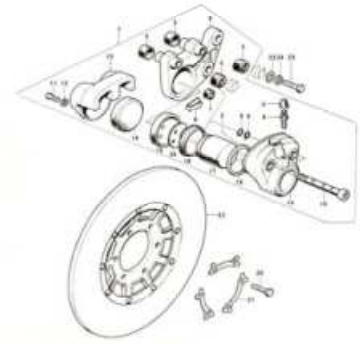


27. Front Fork

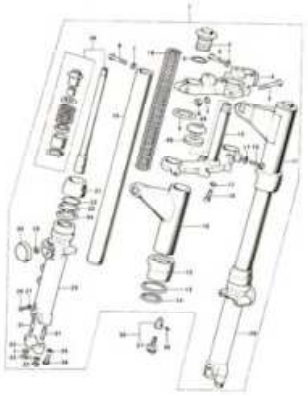


28. Fuel Tank




29. Oil Tank, Side Covers

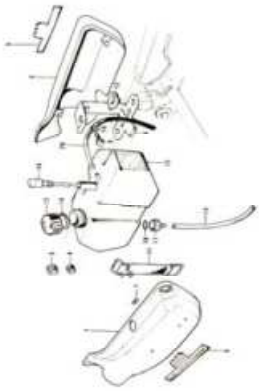


30. Dual Seat, Chain Covers

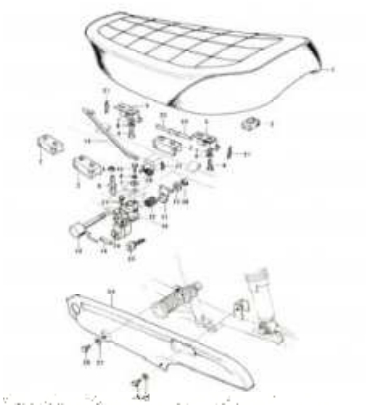

31. Cables

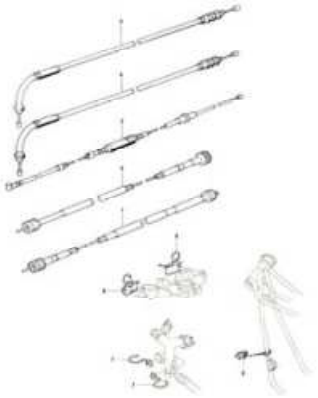


32. Electrical Equipments A 1/2

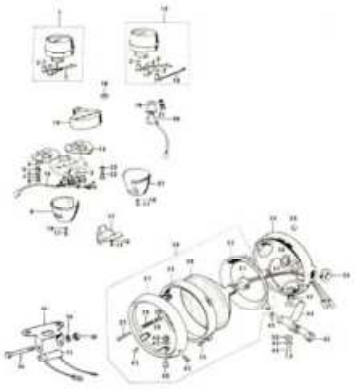


Next >>

Pictorial Index 5/5

32. Electrical Equipments A 2/2

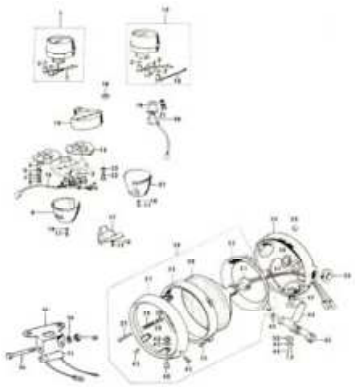

33. Electrical Equipments B

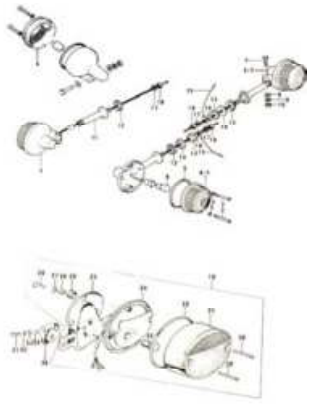

34. Electrical Equipments C




35. Tools



36. Special Service Tools




1. Cylinder Head

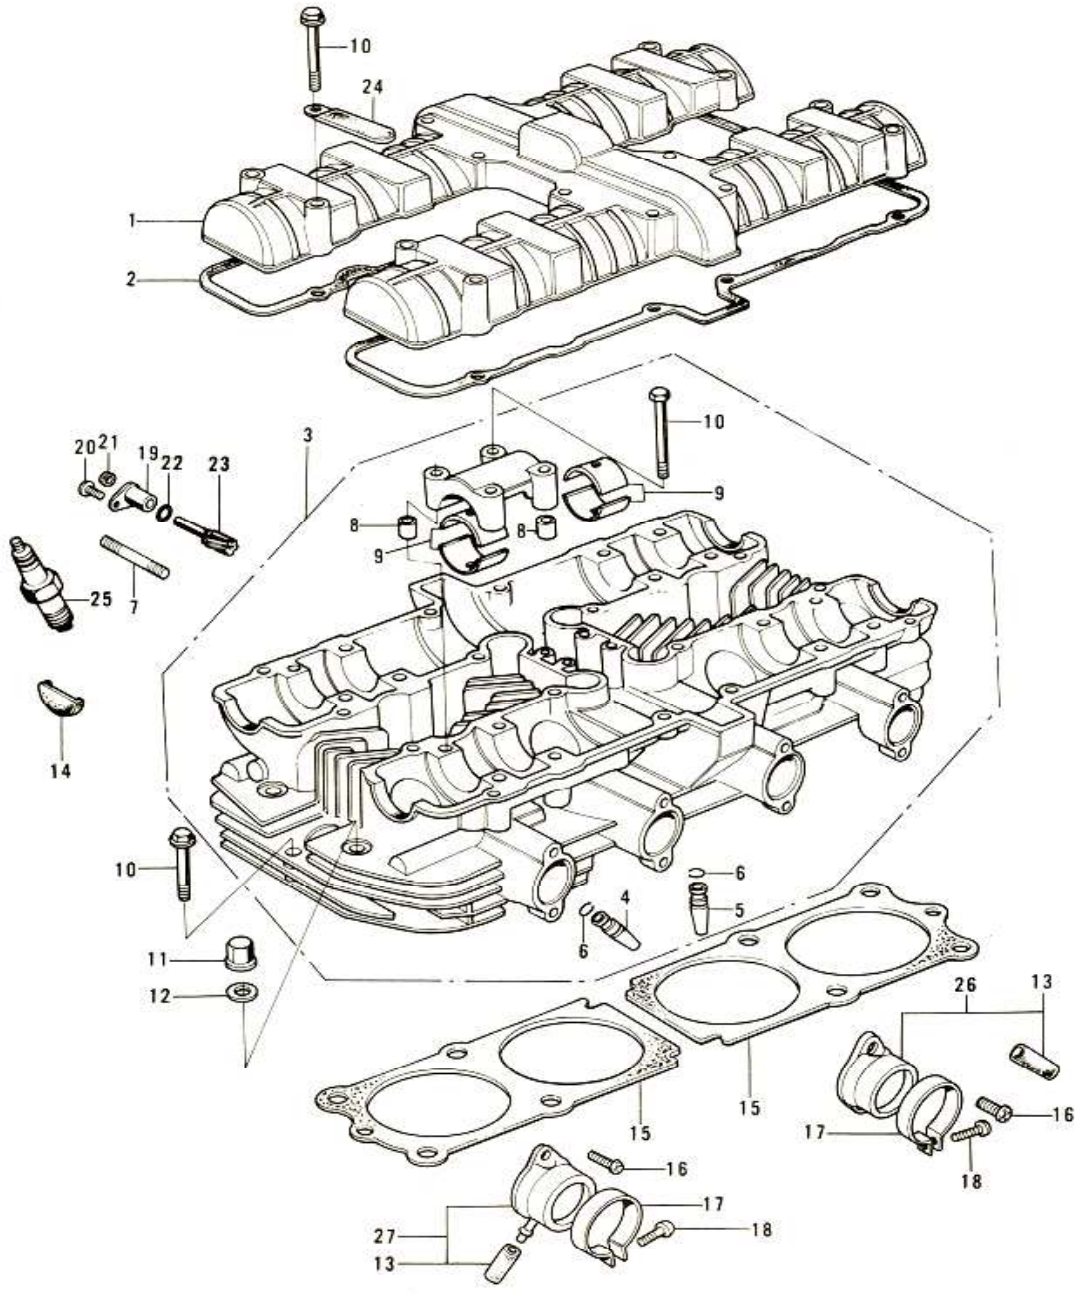

1. Cylinder Head

No.	Part No.	Q'TY	PART NAME	
1	~~11022-0052-H~~	1	COVER, cylinder head	**NLA**
2	11023-006	1	GASKET, cylinder head cover	
3	~~11002-0162-H~~	1	CYLINDER HEAD	**NLA**
4	12006-010	4	GUIDE, inlet valve	
5	12006-011	4	GUIDE, exhaust valve	
6	92036-023	8	CIRCLIP, valve guide	
7	92004-049	8	STUD, 6x30	
8	92042-007	8	PIN, dowel	
9	13034-030	16	BEARING, cam shaft	
10	92003-092	35	BOLT, hex head, 6x45	
11	92015-070	12	NUT, cylinder head	
12	92022-215	12	WASHER, plain, 10mm	
13	92068-006	4	PLUG	
14	92066-017	4	PLUG, cylinder head cover	
15	11004-066	2	GASKET, cylinder head	
16	220B0-618	8	SCREW, pan head, 6x18	
17	92123-001	4	CLAMP, carburetor holder	
18	220B0-520	4	SCREW, pan head, 5x20	
19	~~92087-006~~	1	GUIDE, tachometer cable	**NLA**
20	220B0-612	1	SCREW, pan head, 6x12	
21	92050-050	1	OIL SEAL, S06135	
22	670B1-510	1	O-RING, 10mm	
23	13223-006	1	GEAR, tachometer	
24	21126-007	4	CLAMP, ignition cord	
25	92070-037	4	SPARK PLUG, NGK B-8ES	
26	16065-028	2	HOLDER, carburetor RH	
27	16065-029	2	HOLDER, carburetor LH	


2. Cam Shaft, Valve

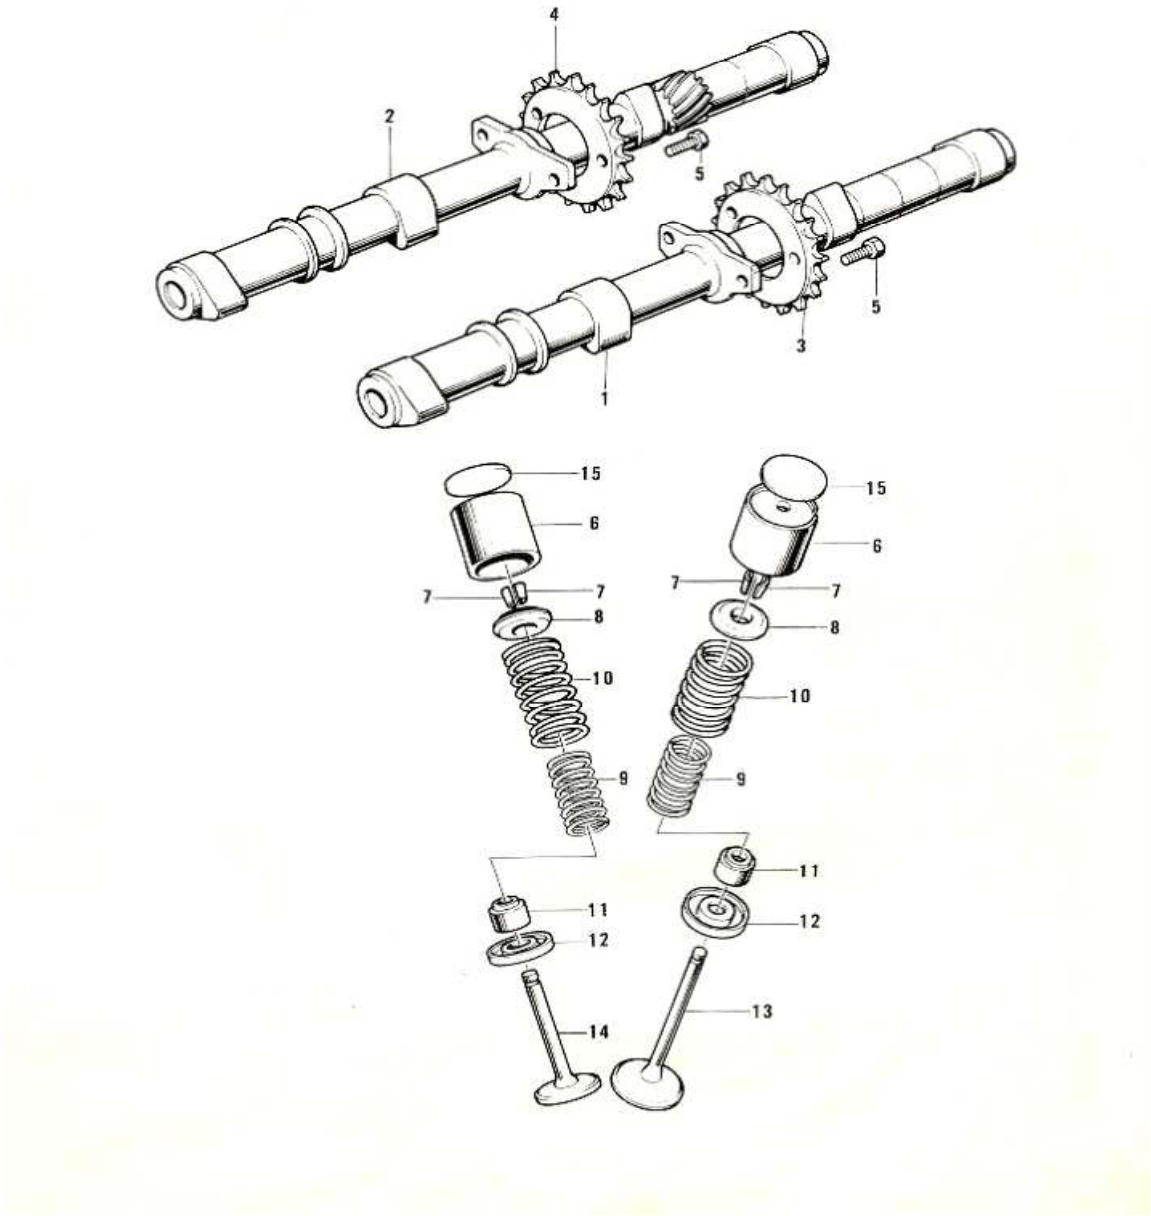

2. Cam Shaft, Valve

No.	Part No.	Q'TY	PART NAME	
1	~~12044-004~~	1	CAM SHAFT, inlet	**NLA**
2	12044-005	1	CAM SHAFT, exhaust	
3	~~12046-001~~	1	SPROCKET, inlet cam shaft	**NLA**
4	~~12046-002~~	1	SPROCKET, exhaust cam shaft	**NLA**
5	92003-141	6	BOLT, hex head, 6x10	
6	12032-005	8	TAPPET	
7	12011-002	16	COLLAR, valve spring	
8	12009-005	8	RETAINER, valve spring	
9	12007-011	8	SPRING, inner valve	
10	12007-012	8	SPRING, outer valve	
11	92049-016	8	OIL SEAL, RV371295	
12	12010-004	8	SEAT, valve spring	
13	12004-012	4	VALVE, inlet	
14	12005-005	4	VALVE, exhaust	
15	12037-001	AR	SHIM, tappet 2.00 t	
15	12037-002	AR	SHIM, tappet 2.05 t	
15	12037-003	AR	SHIM, tappet 2.10 t	
15	12037-004	AR	SHIM, tappet 2.15 t	
15	12037-005	AR	SHIM, tappet 2.20 t	
15	12037-006	AR	SHIM, tappet 2.25 t	
15	12037-007	AR	SHIM, tappet 2.30 t	
15	12037-008	AR	SHIM, tappet 2.35 t	
15	12037-009	AR	SHIM, tappet 2.40 t	
15	12037-010	AR	SHIM, tappet 2.45 t	
15	12037-011	AR	SHIM, tappet 2.50 t	
15	12037-012	AR	SHIM, tappet 2.55 t	
15	12037-013	AR	SHIM, tappet 2.60 t	
15	12037-014	AR	SHIM, tappet 2.65 t	
15	12037-015	AR	SHIM, tappet 2.70 t	
15	12037-016	AR	SHIM, tappet 2.75 t	
15	12037-017	AR	SHIM, tappet 2.80 t	
15	12037-018	AR	SHIM, tappet 2.85 t	
15	12037-019	AR	SHIM, tappet 2.90 t	
15	12037-020	AR	SHIM, tappet 2.95 t	
15	12037-021	AR	SHIM, tappet 3.00 t	
15	12037-022	AR	SHIM, tappet 3.05 t	
15	12037-023	AR	SHIM, tappet 3.10 t	
15	12037-024	AR	SHIM, tappet 3.15 t	
15	12037-025	AR	SHIM, tappet 3.20 t	


3. Cylinder, Piston, Crankshaft

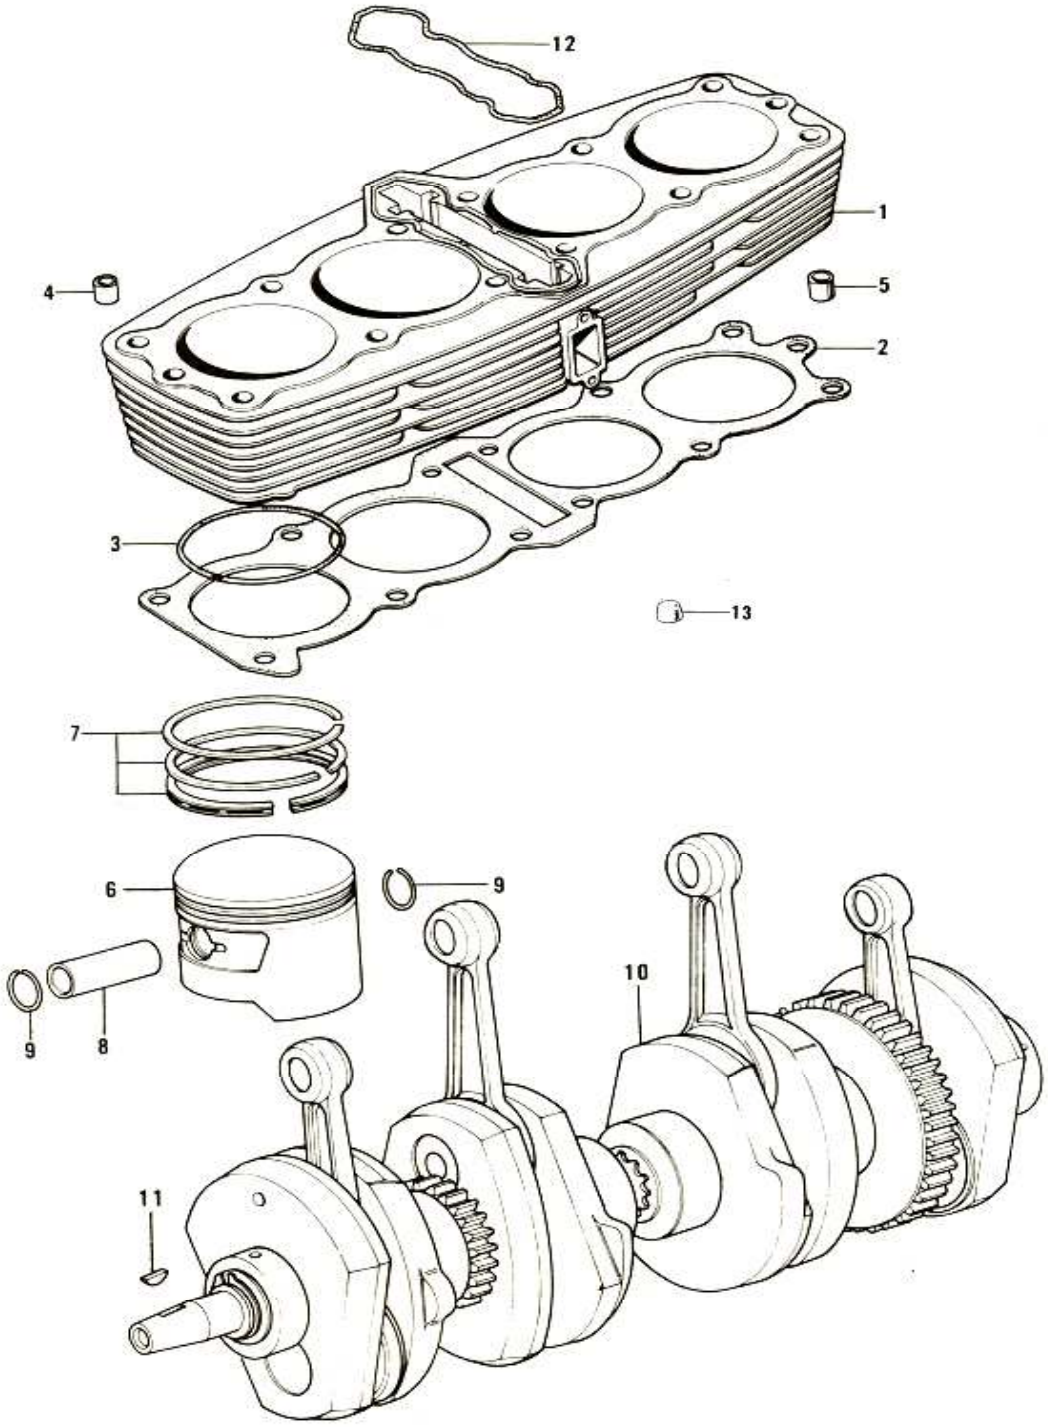

3. Cylinder, Piston, Crankshaft

No.	Part No.	Q'TY	PART NAME	
1	~~11005-1362 H~~	1	CYLINDER	**NLA**
2	11009-030	1	GASKET, cylinder base	
3	92055-054	4	O-RING, 73mm	
4	552A1-014	2	PIN, dowel, 10x14	
5	92042-028	2	PIN, dowel,	
6	~~13001-054~~	4	PISTON, STD.	**NLA**
6	13029-058	4	PISTON, 0.50 (1.Übermass)	
6	~~13027-056~~	4	PISTON, 1.00 (2.Übermass)	**NLA**
7	13008-038	4	RING SET, STD	
7	13025-046	4	RING SET 0.50 (1.Übermass)	
7	13024-046	4	RING SET 1.00 (2.Übermass)	
8	13002-022	4	PIN, piston	
9	92036-021	8	CIRCLIP, piston pin	
10	~~13031-043~~	1	CRANK SHAFT ASSY	**NLA**
11	92038-001	1	KEY, woodruff	
12	92055-062	1	O-RING, cylinder	
13	92074-030	8	RUBBER PLUG, cylinder	


4. Cam Chain, Tensioner

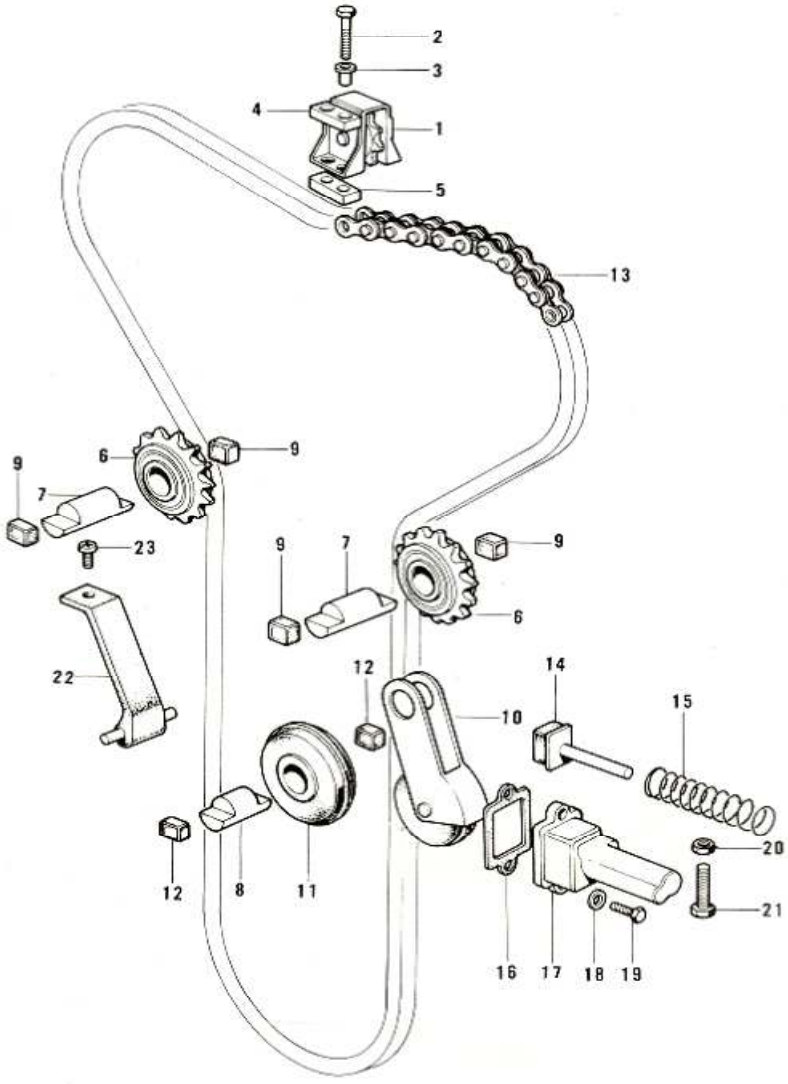

4. Cam Chain, Tensioner

No.	Part No.	Q'TY	PART NAME	
1	12057-001	1	IDLER ASSY, cam chain	
2	110G0-635	4	BOLT, hex head, 6x35	
3	92027-155	4	COLLAR, idler	
4	92075-119	2	RUBBER, idler	
5	92075-120	2	RUBBER, idler	
6	12057-002	2	IDLER ASSY, cam chain	
7	12052-005	2	SHAFT, guide roller	
8	12052-003	1	SHAFT	
9	92075-232	4	RUBBER, guide roller	
10	12048-001	1	TENSIONER ASSY, cam chain	
11	12055-002	1	ROLLER, cam chain guide	
12	92075-123	2	RUBBER, guide roller	
13	21070-003	1	CHAIN, cam shaft	
14	~~12054-001~~	1	ROD ASSY, push	**NLA**
15	92081-107	1	SPRING, tensioner	
16	12056-001	1	GASKET, tensioner holder	
17	~~12047-003~~	1	HOLDER, cam chain tensioner	**NLA**
18	410B0-600	2	WASHER, plain, 6mm	
19	110B0-620	2	BOLT, hex head, 6x20	
20	310B0-600	1	NUT, 6mm	
21	~~92003-093~~	1	BOLT, tensioner adjusting	**NLA**
22	12053-001	1	GUIDE, cam chain	
23	220B0-610	1	SCREW, pan head 6x10	

5. Crank Case

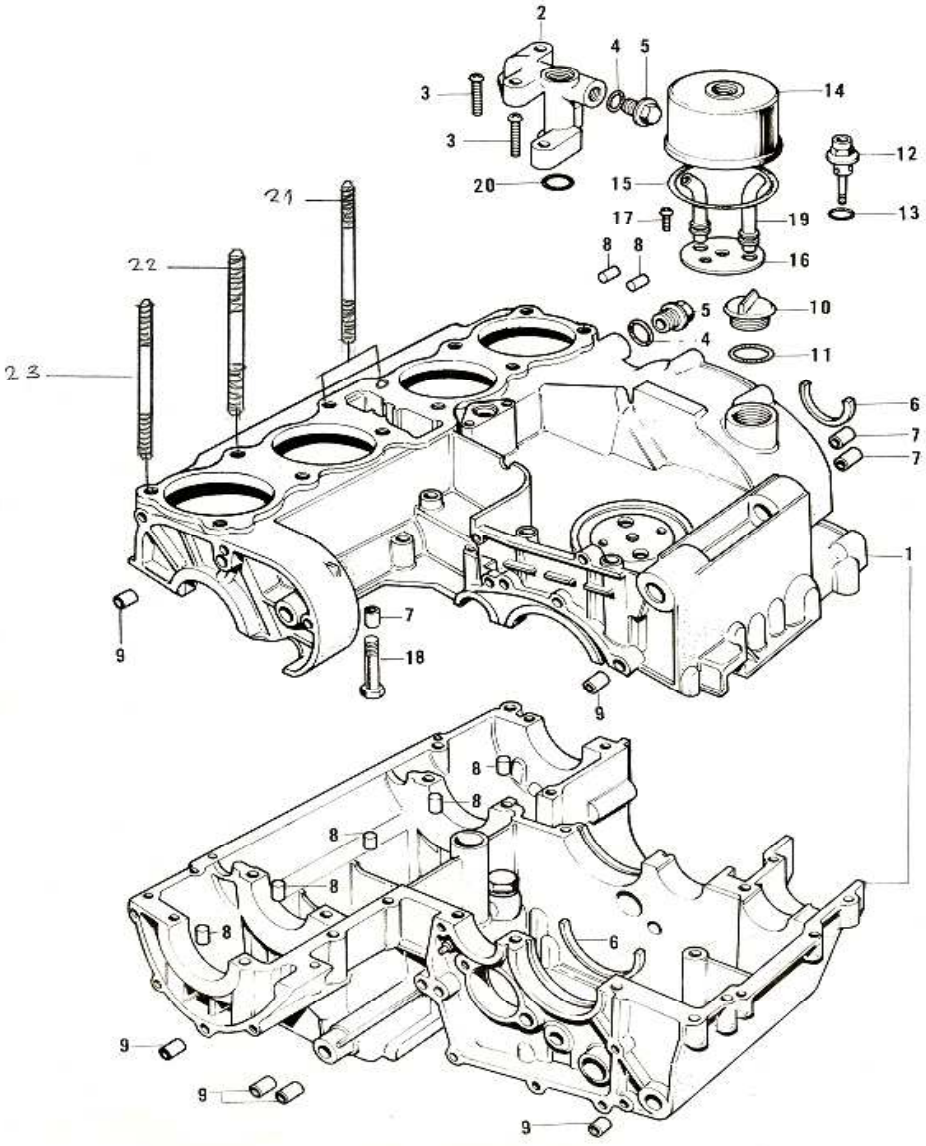

2
4
5
3
14
3
12
20
15
21
17
19
13
8
8
16
22
5
10
4
11
23
6
7
7
1
9
7
18
9
8
8
8
8
8
6
9
9
9

Next >>

5. Crank Case

No.	Part No.	Q'TY	PART NAME	
1	~~14001-0522 J~~	1	CRANK CASE SET	**NLA**
2	~~16109-003~~	1	PIPE	**NLA**
3	92001-164	4	SCREW, hex head, 6x35	
4	670B2-015	2	O-RING, 15mm	
5	92066-021	2	PLUG	
6	14013-001	2	RING, bearing set, 62mm	
7	552A1-014	4	PIN, dowel, 10x14	
8	~~610A0-614~~	8	PIN, dowel, 6x14	**NLA**
9	92042-007	6	PIN, dowel	
10	16115-013	1	PLUG, oil filler	
11	92055-049	1	O-Ring	
12	~~92003-098~~	1	BOLT, breather	**NLA**
13	670B2-016	1	O-RING, 16mm	
14	~~14070-003~~	1	BODY, breather	**NLA**
15	92055-052	1	O-RING, breather body	
16	14068-003	1	PLATE, breather	
17	220B0-618	2	SCREW, pan head, 6x18	
18	92003-107	4	BOLT, hex head, 8x72	
19	~~92059-081~~	2	TUBE	**NLA**
20	670B2-018	2	O-RING, 18mm	
21	92004-045	4	STUD, 10x190	
22	92004-047	4	STUD, 10x153	
23	92004-046	4	STUD, 10x184	


6. Crank Case Bolt & Stud Pattern

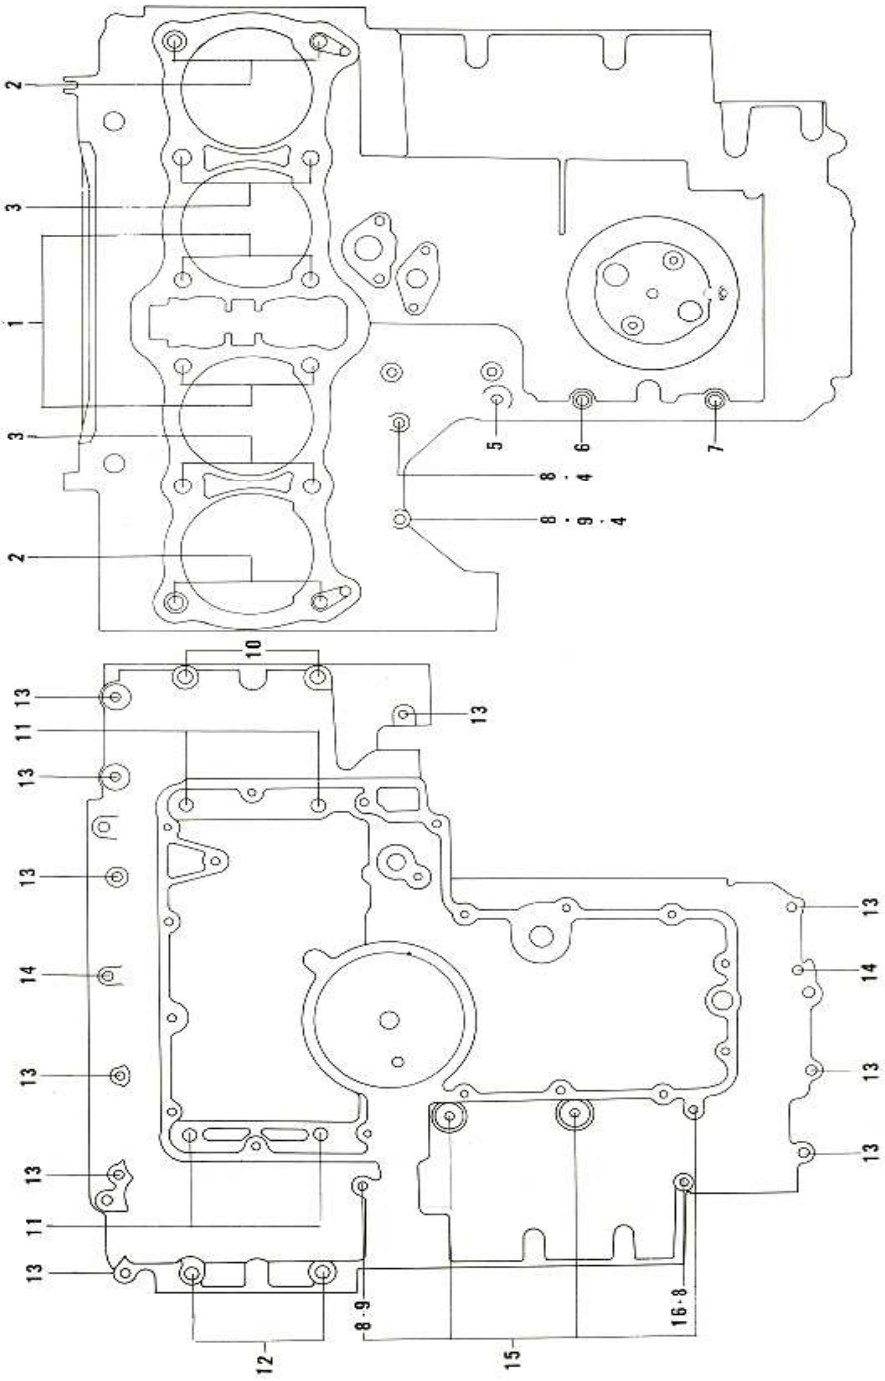

6. Crank Case Bolt & Stud Pattern

No.	Part No.	Q'TY	PART NAME	
1	92004-045	4	STUD, 10x190	
2	92004-047	4	STUD, 10x153	
3	92004-046	4	STUD, 10x184	
4	92003-109	2	BOLT, hex head, 6x41	
5	~~92003-110~~	1	BOLT, hex head, 6x54	**NLA**
6	~~92003-111~~	1	BOLT, hex head, 6x99	**NLA**
7	~~92003-113~~	1	BOLT, hex head, 6x116	**NLA**
8	21126-007	2	CLAMP, wiring harness	
9	410B0-600	1	WASHER, plain, 6mm	
10	92003-106	2	BOLT, hex head, 8x95	
11	92003-107	4	BOLT, hex head, 8x72	
12	92003-108	2	BOLT, hex head, 8x81	
13	92003-109	10	BOLT, hex head, 6x41	
14	~~92003-110~~	2	BOLT, hex head, 6x54	**NLA**
15	92003-112	4	BOLT, hex head, 6x94	
16	~~92003-114~~	1	BOLT, hex head, 6x72	**NLA**


7. Clutch

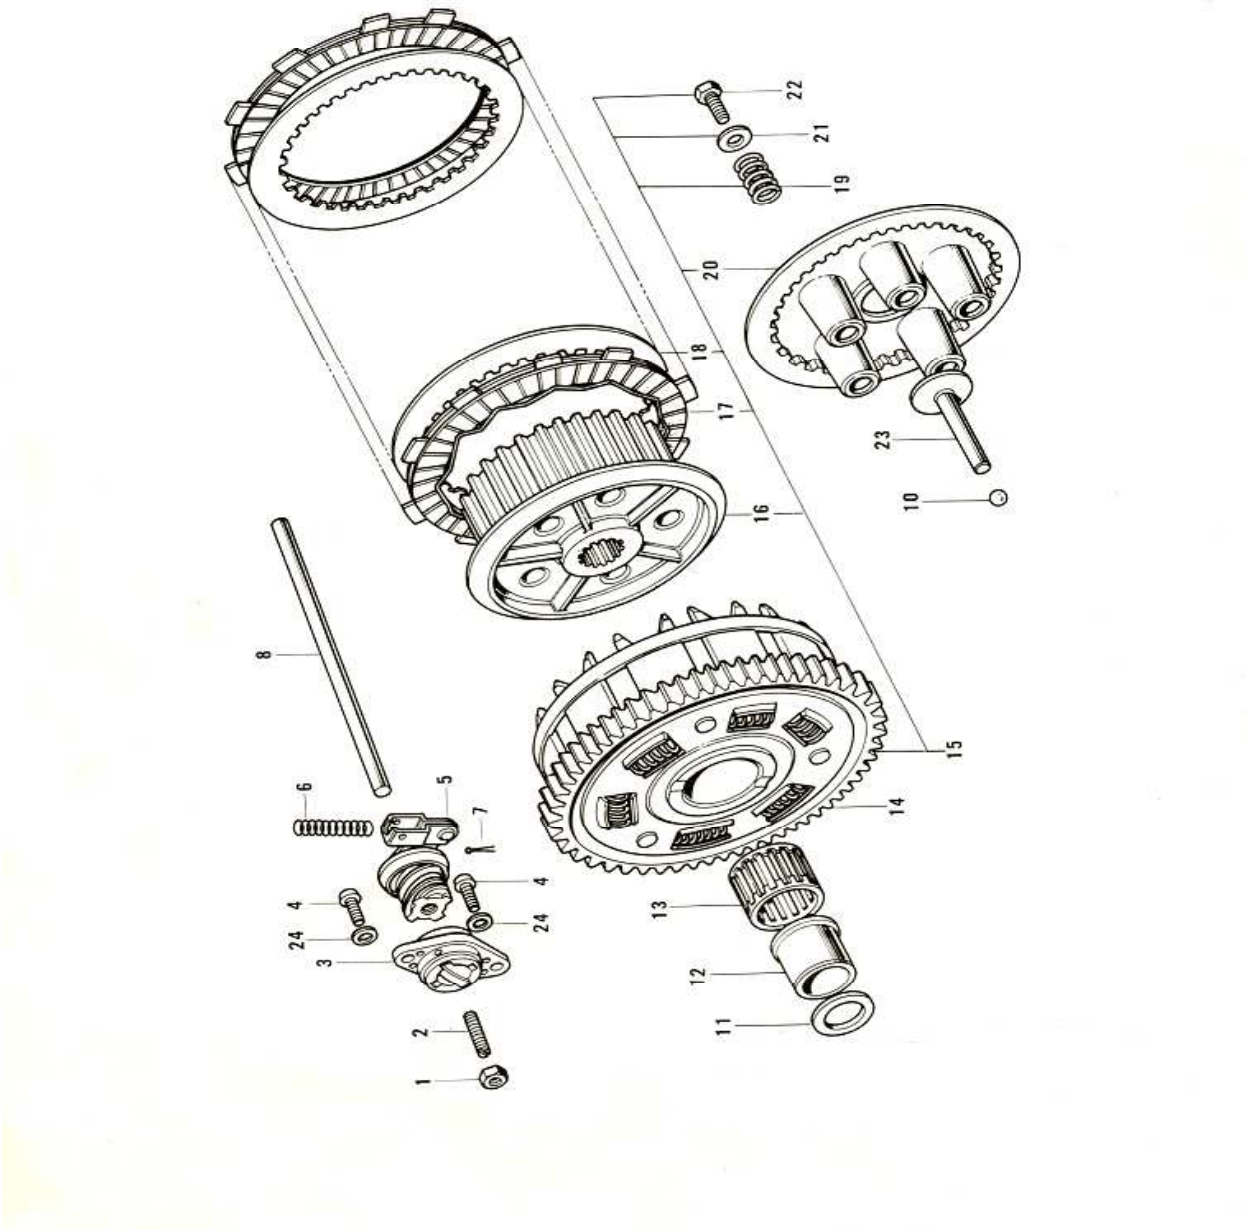

7. Clutch

No.	Part No.	Q'TY	PART NAME	
1	315B0-800	1	NUT, 8mm	
2	~~92014-014~~	1	SCREW, slotted, 8x25	**NLA**
3	~~13102-013~~	1	INNER, clutch release	**NLA**
4	220B0-616	2	SCREW, pan head, 6x16	
5	~~13118-007~~	1	OUTER, clutch release	**NLA**
6	92081-069	1	SPRING, clutch release	
7	550D1-615	1	PIN, cotter, 1.6x15	
8	13116-021	1	ROD, clutch push	
9	670B1-507	1	O-RING, 7mm	
10	600A1-200	1	BALL, steel, 3/8"	
11	92026-022	1	WASHER, clutch thrust	
12	~~92028-135~~	1	BUSHING, clutch	**NLA**
13	92046-028	1	NEEDLE BEARING, clutch	
14	~~13095-036~~	1	HOUSING, clutch	**NLA**
15	~~13081-045~~	1	CLUTCH ASSY	**NLA**
16	~~13087-031~~	1	HUB, clutch	**NLA**
17	13088-030	8	PLATE, clutch friction	
18	13089-022	7	PLATE, clutch steel	
19	92081-105	5	SPRING, clutch	
20	13187-006	1	PLATE, clutch spring	
21	13091-011	5	HOLDER, clutch spring	
22	116B0-618	5	BOLT, hex head, 6x18	
23	13116-022	1	PUSHER, clutch spring plate	
24	411B0-600	2	WASHER, plain, 6mm	

8. Transmission Gears 1/2

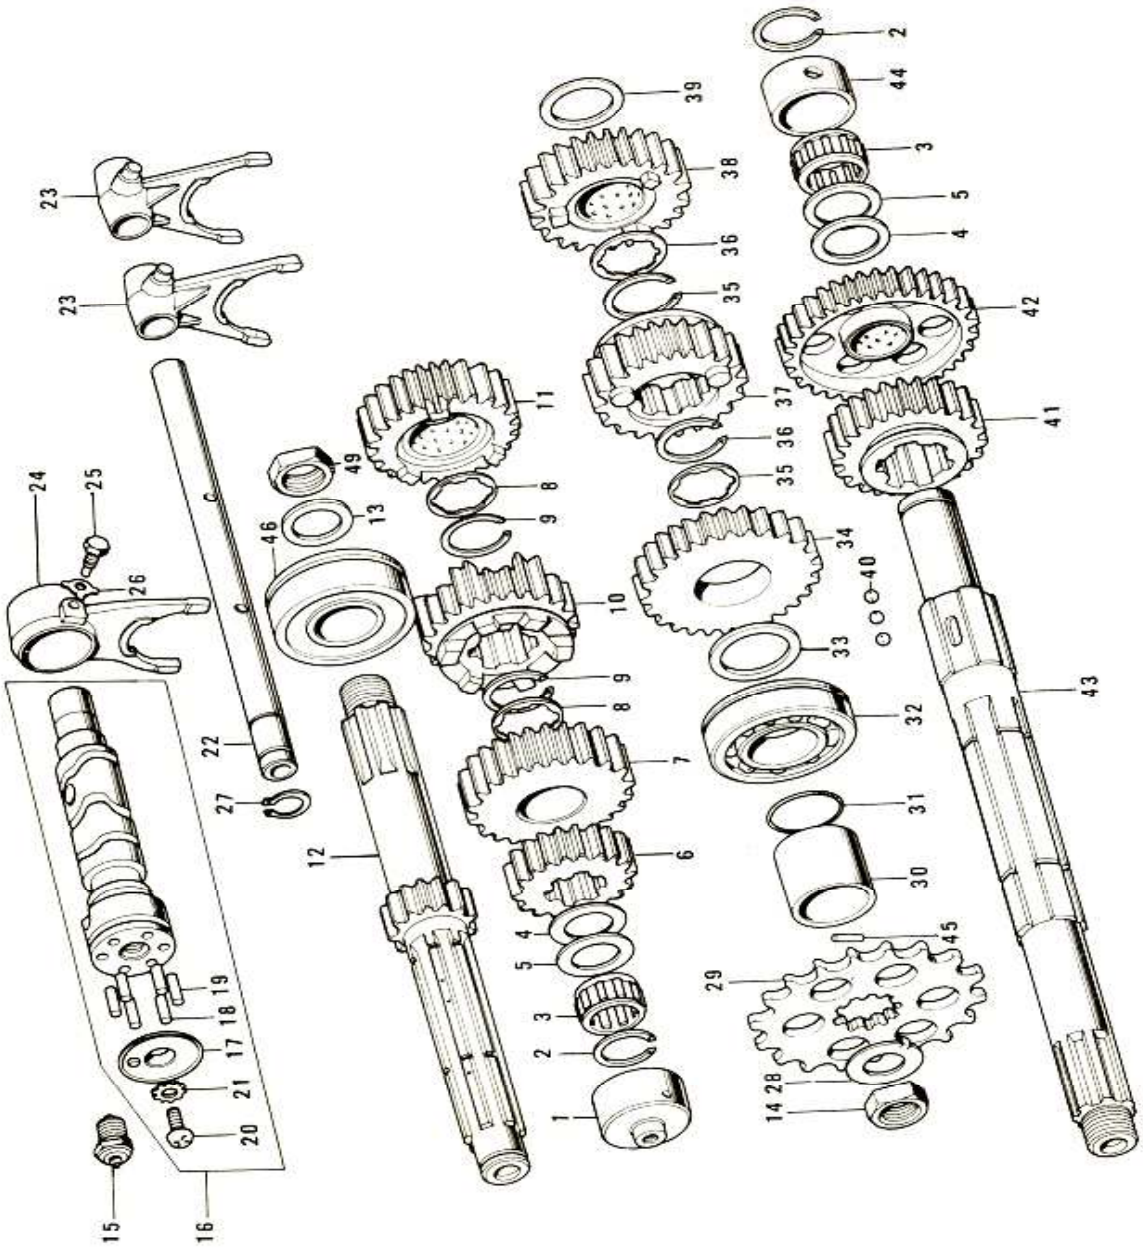


Next >>

8. Transmission Gears 1/2

No.	Part No.	Q'TY	PART NAME	
1	92028-122	1	BUSHING, drive shaft	
2	92033-025	2	CIRCLIP, drive shaft	
3	92046-031	2	NEEDLE BEARING PK223013.8	
4	92022-211	2	WASHER, thrust 1.0 t	
5	92022-212	2	WASHER, thrust 1.6 t	
5	92022-213	2	WASHER, thrust 1.2 t	
6	~~13130-032~~	1	2ND GEAR, drive shaft	**NLA**
7	~~13136-042~~	1	TOP GEAR, drive shaft	**NLA**
8	92024-042	2	WASHER, thrust 1.5 t	
9	480J2-800	2	CIRCLIP, 28mm	
10	~~13132-030~~	1	3RD GEAR, drive shaft	**NLA**
11	13134-016	1	4TH GEAR, drive shaft 21 T	
12	~~13127-042~~	1	SHAFT, drive	**NLA**
13	~~92125-002~~	1	WASHER 3.0 t	**NLA**
14	92016-028	2	NUT, 20mm	
15	13151-018	1	SWITCH, neutral indicator	
16	~~13239-010~~	1	DRUM ASSY, gear change	**NLA**
17	13142-013	1	PLATE, change drum pin	
18	92042-020	1	PIN, change drum	
19	92042-014	5	PIN, change drum	
20	220B0-612	1	SCREW, pan head, 6x12	
21	464G0-600	1	WASHER, lock, 6mm	
22	~~13209-011~~	1	ROD, shift	**NLA**
23	13140-045	2	FORK, selector	
24	~~13140-046~~	1	FORK, selector	**NLA**
25	92043-016	1	PIN, selector fork	
26	92031-001	1	WASHER, lock	
27	480J1-200	1	CIRCLIP, 12mm	
28	92024-044	1	WASHER, lock, 20mm	
29	13144-062	1	ENGINE SPROCKET 15T	
30	92027-152	1	COLLAR, engine sprocket	
31	92055-035	1	O-RING, output shaft	
32	92045-021	1	BALL BEARING	
33	~~92022-210~~	1	WHASHER, thrust	**NLA**
34	13131-038	1	2ND GEAR, output shaft 35 T	
35	92024-043	2	WASHER, thrust	
36	480J3-000	2	CIRCLIP, 30mm	
37	13137-025	1	TOP GEAR, output shaft 28 T	
38	13133-031	1	3RD GEAR, output shaft 35 T	
39	~~92022-209~~	1	WHASHER, thrust	**NLA**
40	600A0-600	3	BALL, steel, 3/16"	
41	~~13135-020~~	1	4TH GEAR, output shaft 29 T	**NLA**
42	~~13129-046~~	1	LOW GEAR, output shaft 38 T	**NLA**


8. Transmission Gears 2/2

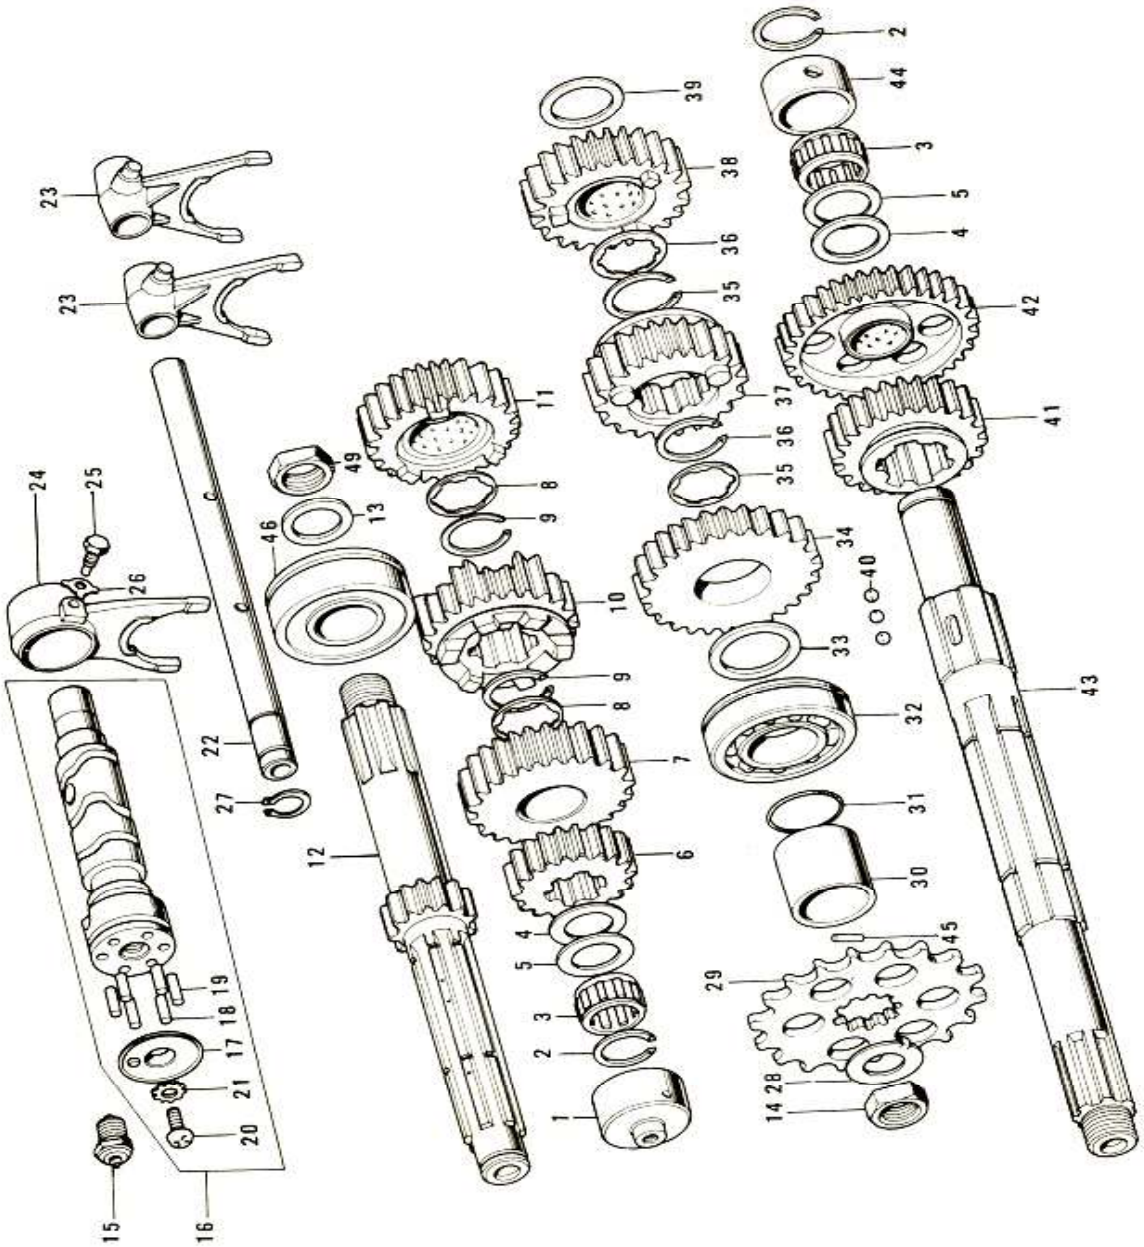

8. Transmission Gears 2/2

No.	Part No.	Q'TY	PART NAME	
43	~~13128-037~~	1	SHAFT, output	**NLA**
44	92028-123	1	BUSHING, output shaft	
45	92043-089	1	PIN	
46	92045-022	1	BEARING, ball, 5305NB	
47	~~92028-117~~	1	BUSHING, 2nd gear	**NLA**
48	92028-118	1	BUSHING, top gear	
49	92019-015	1	NUT, lock, 20mm	


9. Gear Change Mechanism

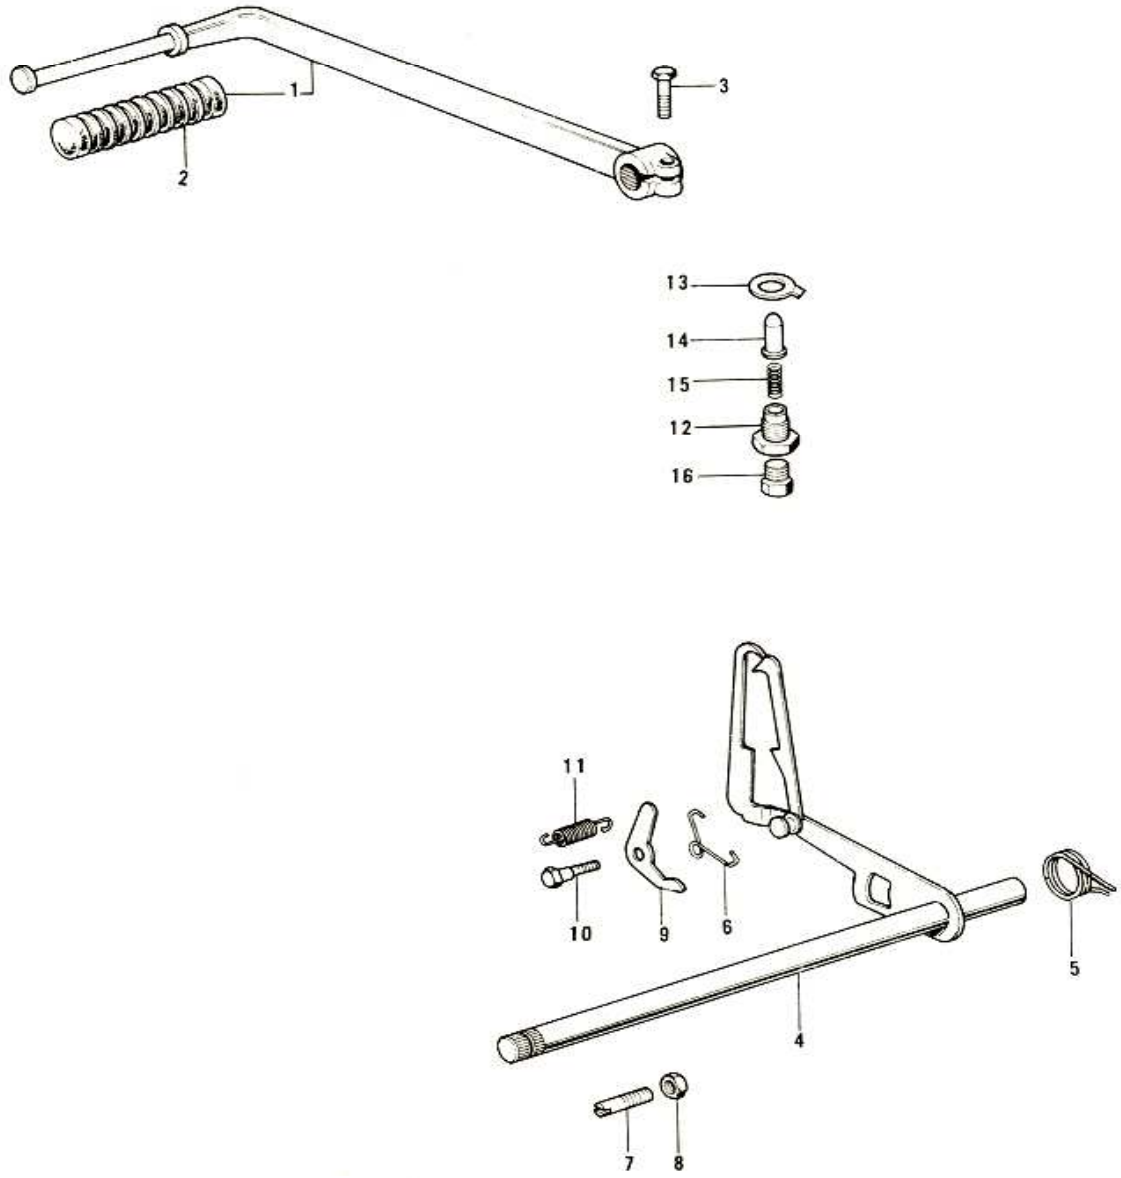

9. Gear Change Mechanism

No.	Part No.	Q'TY	PART NAME	
1	13242-006	1	PEDAL ASSY, gear change	
2	13157-004	1	RUBBER, change pedal	
3	110N0-620	1	BOLT, hex head, 6x20	
4	13161-029	1	LEVER ASSY, gear change	
5	92083-021	1	SPRING, change pedal return	
6	92083-018	1	SPRING, change lever	
7	~~92043-058~~	1	PIN, change drum return spring	**NLA**
8	312B0800	1	NUT, 8mm	
9	~~13168-024~~	1	LEVER, change drum	**NLA**
10	92001-012	1	BOLT, change drum lever	
11	92081-051	1	SPRING, change drum lever	
12	~~92001-112~~	1	BOLT, change drum positioning	**NLA**
13	~~92024-047~~	1	WASHER, lock	**NLA**
14	~~92043-085~~	1	PIN	**NLA**
15	92081-106	1	SPRING, change drum positioning	
16	92001-119	1	BOLT	


10. Kickstarter

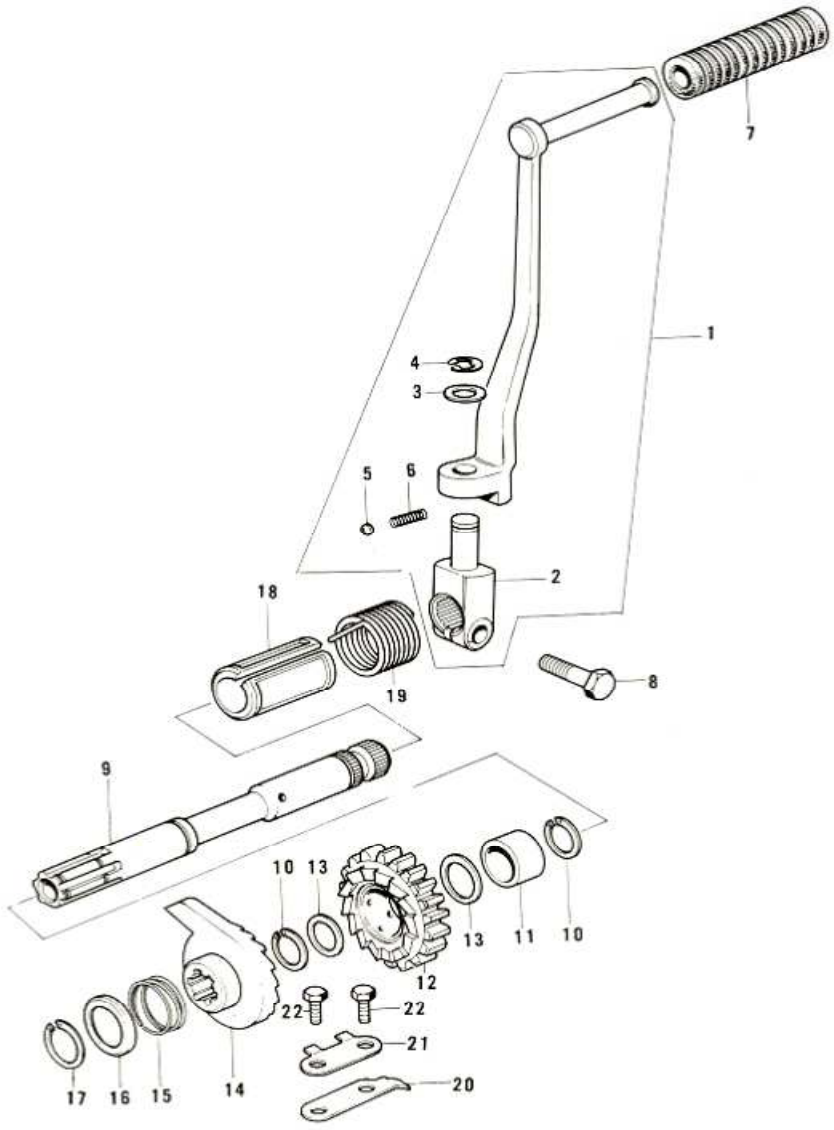

10. Kickstarter

No.	Part No.	Q'TY	PART NAME	
1	~~13058-044~~	1	PEDAL ASSY, kickstarter	**NLA**
2	~~13061-017~~	1	BOSS, kick pedal	**NLA**
3	92022-085	1	WAHSER, plain	
4	482J0-100	1	CIRCLIP, 10mm	
5	600A0-800	1	BALL, steel, 1/4"	
6	92081-020	1	SPRING, kick pedal	
7	13063-004	1	RUBBER, kick peal	
8	~~114B1-025~~	1	BOLT, hex head, 10x25	**NLA**
9	~~13066-029~~	1	SHAFT, kickstarter	**NLA**
10	92033-025	2	CIRCLIP, 19mm	
11	~~92028-126~~	1	COLLAR, Kickshaft	**NLA**
12	13068-028	1	GEAR, kickstarter	
13	~~92022-207~~	1	WASHER, thrust	**NLA**
14	13078-006	1	RATCHET	
15	92081-104	1	SPRING, ratchet	
16	~~92102-008~~	1	HOLDER, ratchet spring	**NLA**
17	480J1-900	1	CIRCLIP, 19mm	
18	~~13070-005~~	1	GUIDE, kick spring	**NLA**
19	~~92082-004~~	1	SPRING, kickstarter	**NLA**
20	13072-012	1	STOPPER, kickshaft	
21	~~92024-036~~	1	WASHER, lock, 6mm	**NLA**
22	116B0-614	2	BOLT, hex head, 6x14	


11. Engine Covers

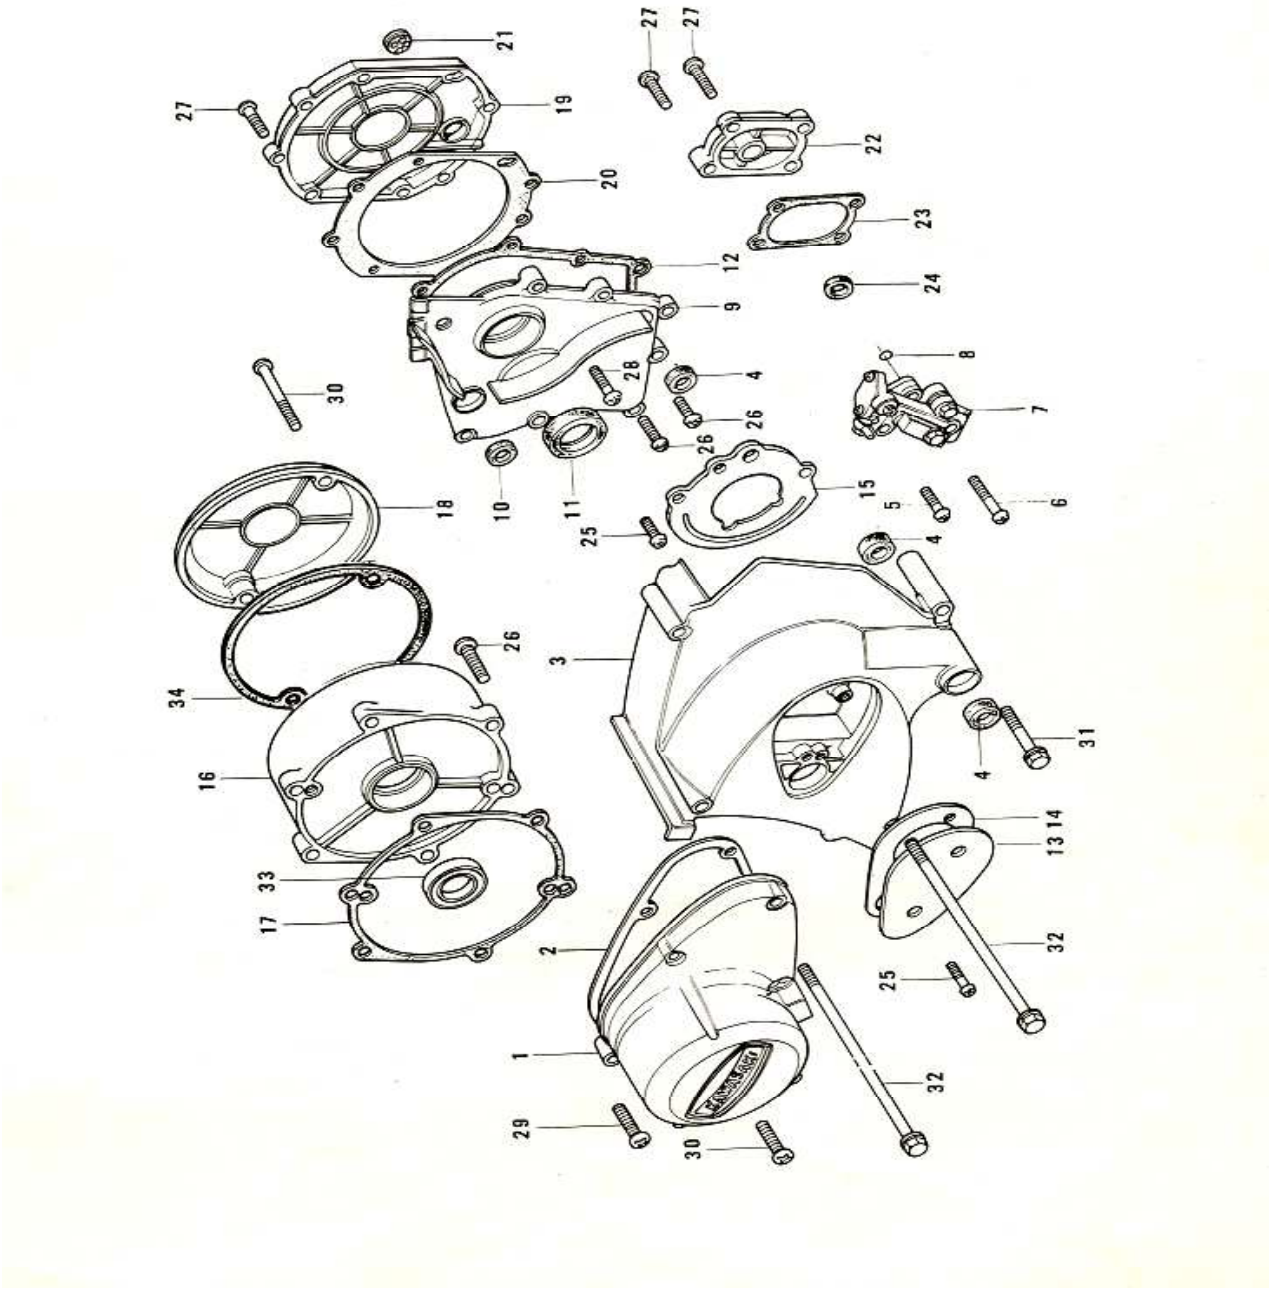

11. Engine Covers

No.	Part No.	Q'TY	PART NAME	
1	14031-053	1	COVER, LH, engine	
2	14045-014	1	GASKET, LH, engine cover	
3	~~14026-026~~	1	COVER, front chain	**NLA**
4	92049-004	3	OIL SEAL, SB12205	
5	220B0-512A	1	SCREW, pan head, 5x12	
6	~~220B0-528~~	1	SCREW, pan head, 5x28	**NLA**
7	~~16082-037~~	1	OIL PUMP ASSY	**NLA**
8	~~92055-053~~	1	O-RING, oil pump	**NLA**
9	14024-007	1	COVER, transmission	
10	92050-048	1	OIL SEAL, TC7187	
11	92050-024	1	OIL SEAL, SC325210	
12	14058-004	1	GASKET, transmission cover	
13	~~14026-012~~	1	COVER, oil pump	**NLA**
14	~~14045-015~~	1	GASKET, oil pump cover	**NLA**
15	~~14024-008~~	1	COVER, engine sprocket	**NLA**
16	14032-083	1	COVER, RH, engine	
17	14046-023	1	GASKET, RH, engine cover	
18	14027-015	1	CAP, contact breaker	
19	~~14032-082~~	1	COVER, clutch	**NLA**
20	14046-024	1	GASKET, clutch cover	
21	52015-004	1	GAUGE, oil level	
22	~~14032-0752-H~~	1	COVER, kickshaft	**NLA**
23	14046-025	1	GASKET, kickshaft cover	
24	92049-001	1	OIL SEAL, SB22325.5	
25	220B0-612	4	SCREW, pan head, 6x12	
26	220B0-622	11	SCREW, pan head, 6x22	
27	220B0-625	11	SCREW, pan head, 6x25	
28	220B0-628	1	SCREW, pan head, 6x28	
29	220B0-630	7	SCREW, pan head, 6x30	
30	220B0-640	8	SCREW, pan head, 6x40	
31	110G0-671	2	BOLT, hex head, 6x71	
32	110G0-6125	2	BOLT, hex head, 6x125	
33	92050-047	1	OIL SEAL	
34	14050-006	1	GASKET, contact breaker cap	


12. Carburetors 1/3

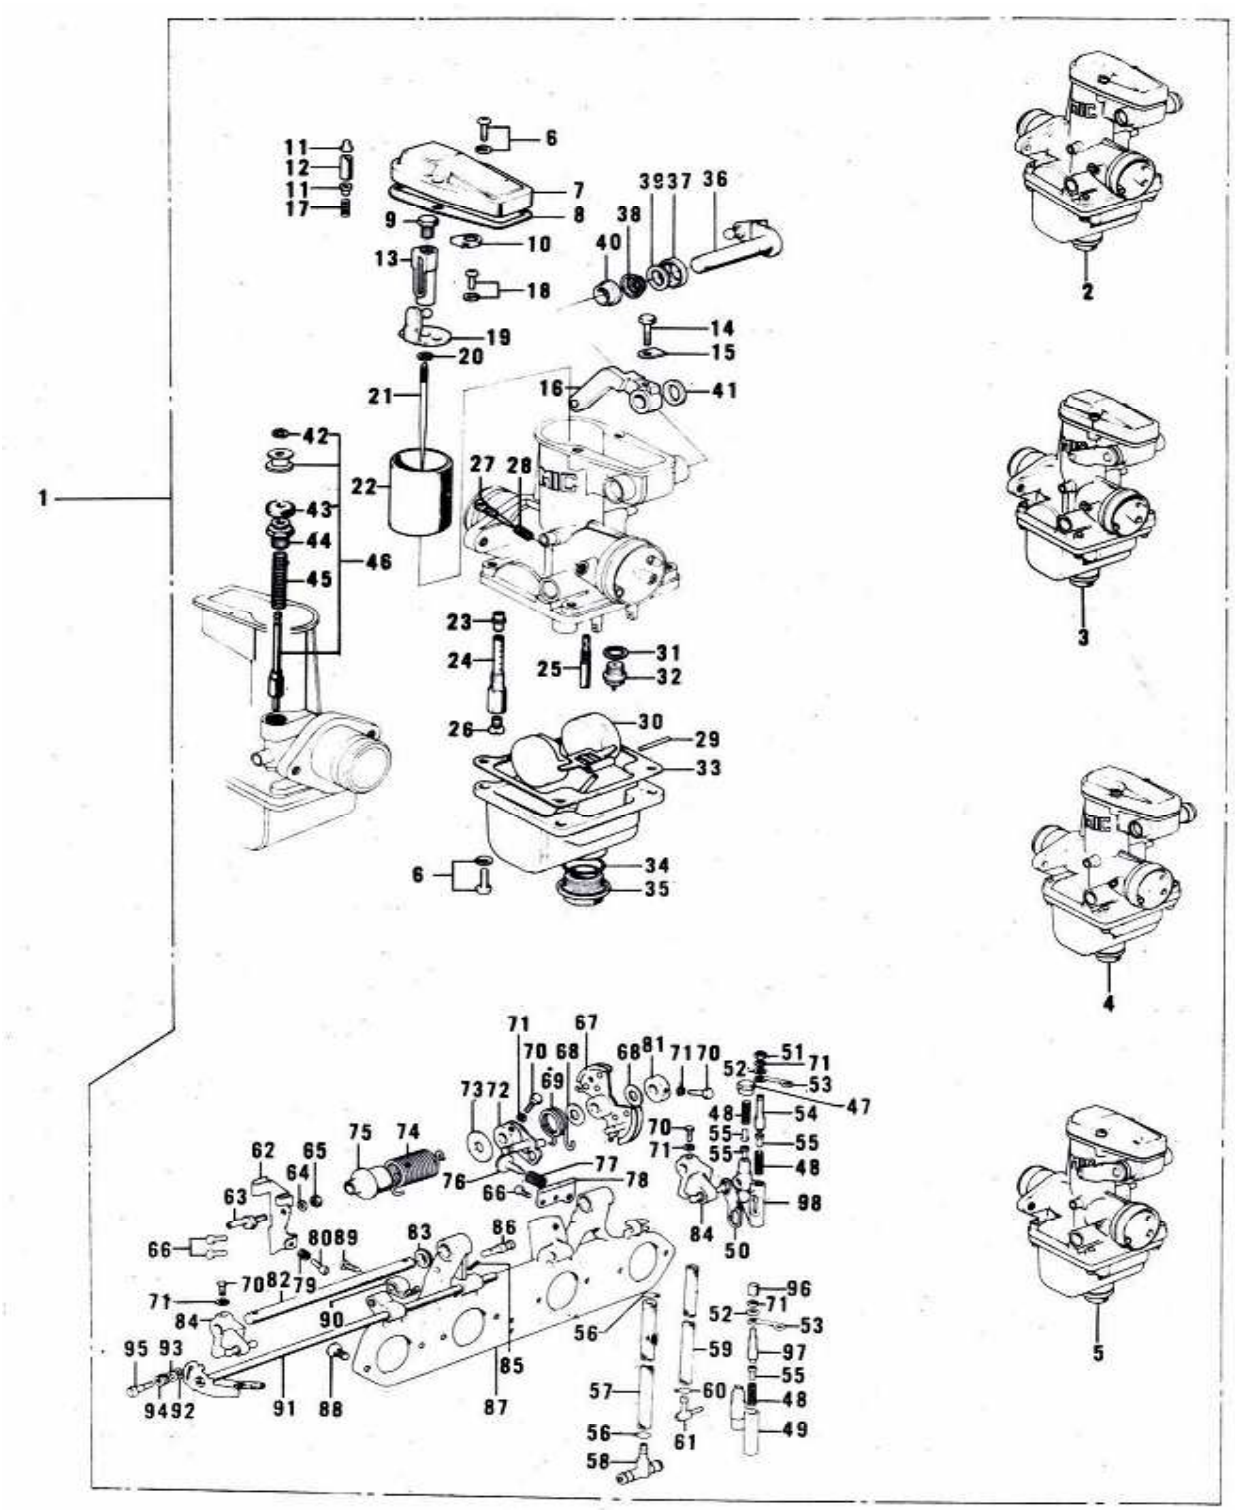

12. Carburetors 1/3

No.	Part No.	Q'TY	PART NAME	
1	~~16001-217~~	1	CARBURETOR ASSY	**NLA**
2	~~16001-226~~	1	CARBURETOR, A	**NLA**
3	~~16001-227~~	1	CARBURETOR, B	**NLA**
4	~~16001-228~~	1	CARBURETOR, C	**NLA**
5	~~16001-229~~	1	CARBURETOR, D	**NLA**
6	16033-009	24	SCREW, float chamber fitting	
7	~~16005-023~~	4	TOP, mixing chamber	**NLA**
8	16019-018	4	GASKET, mixing chamber top	
9	16067-003	4	BOLT, A	
10	16054-003	4	WASHER, lock, A	
11	16057-002	8	SEAT, spring	
12	~~16065-017~~	4	HOLDER, throttle shaft	**NLA**
13	16052-003	4	SHAFT, throttle valve	
14	16067-004	4	BOLT, B	
15	16054-004	4	WASHER, lock, B	
16	16068-007	4	LEVER, A	
17	~~16040-004~~	4	SPRING, A	**NLA**
18	16033-015	8	SCREW, pan head, 3x10	
19	~~16007-018~~	4	PLATE, throttle valve	**NLA**
20	16008-004	4	CLIP, jet needle	
21	~~16009-055~~	4	JET NEEDLE 5J9	**NLA**
22	~~16025-075~~	4	VALVE, throttle CA 2.5	**NLA**
23	~~16017-086~~	4	NEEDLE JET 0-8	**NLA**
24	~~16047-003~~	4	HOLDER, needle jet	**NLA**
25	92064-042	4	PILOT JET PJ-17.5	
26	92063-075	4	MAIN JET # 112.5	**STD**
26	92063-073	4	MAIN JET # 107.5	
26	92063-074	4	MAIN JET # 110.0	
26	92063-077	4	MAIN JET # 117.5	
27	~~16014-012~~	4	SCREW, pilot air adjusting	**NLA**
28	16022-007	4	SPRING, pilot air adjusting	
29	16032-003	4	PIN, float	
30	~~16031-028~~	4	FLOAT	**NLA**
31	16029-004	4	WASHER, float valve seat	
32	16030-017	4	FLOAT VALVE ASSY	
33	16019-025	4	GASKET, float chamber	
34	16038-016	4	O-RING, main jet cover	
35	~~16049-005~~	4	COVER, main jet	**NLA**
36	~~16068-008~~	4	LEVER, B	**NLA**
37	~~16073-002~~	4	COLLAR, A	**NLA**
38	16040-005	4	SPRING, B	
39	~~16039-012~~	4	WASHER, plain	**NLA**
40	~~16073-003~~	4	COLLAR, B	**NLA**


12. Carburetors 2/3

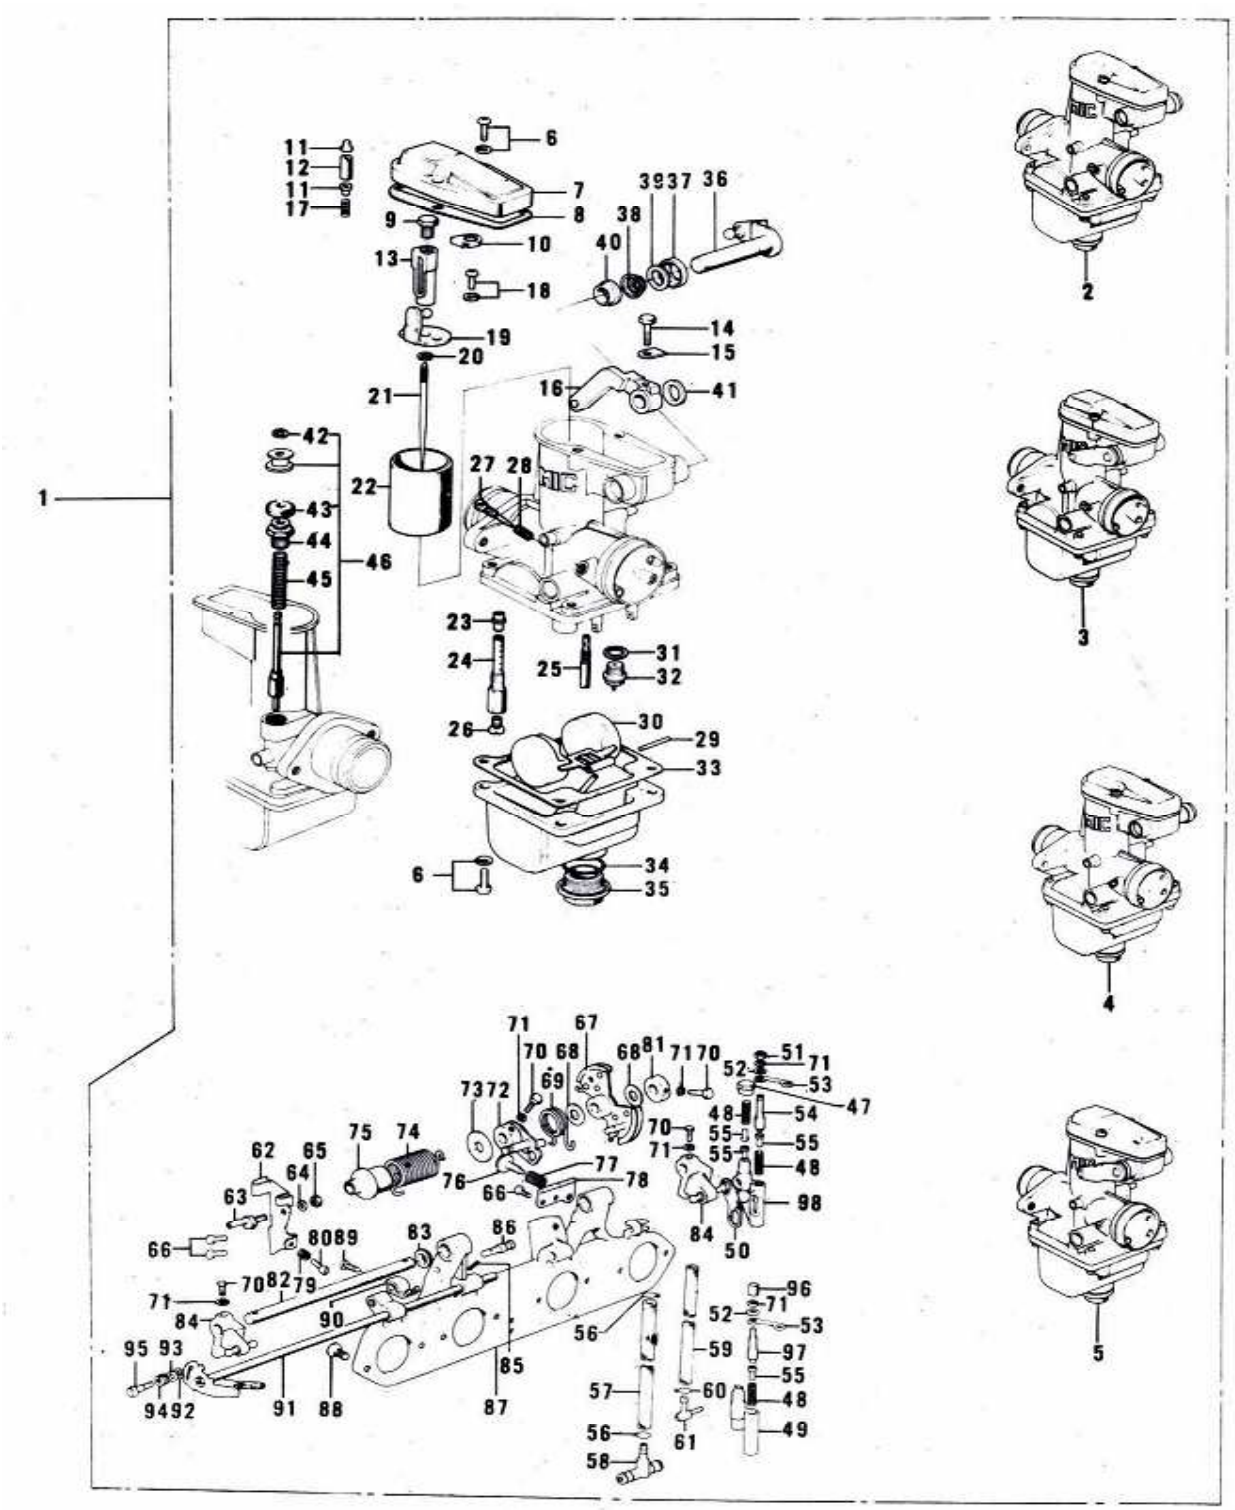

12. Carburetors 2/3

No.	Part No.	Q'TY	PART NAME	
41	~~16039-013~~	4	WASHER, plain	**NLA**
42	16067-003	4	CIRCLIP	
43	16039-015	4	WASHER, plain	
44	16012-015	4	CAP, starter plunger	
45	16013-008	4	SPRING, starter plunger	
46	~~16016-016~~	4	PLUNGER, starter	**NLA**
47	~~16067-005~~	4	BOLT, C	**NLA**
48	16013-003	8	SPRING, C	
49	~~16065-018~~	2	HOLDER	**NLA**
50	~~16055-002~~	4	PLATE, dust	**NLA**
51	~~16003-007~~	3	NUT, 6mm	**NLA**
52	16039-016	4	WASHER, plain	
53	16054-005	2	WASHER, lock, C	
54	~~16021-018~~	3	ADJUSTER, throttle	**NLA**
55	~~16057-003~~	12	SEAT, spring	**NLA**
56	92037-072	6	CLAMP, fuel pipe	
57	92059-109	2	PIPE,fuel	
58	16046-002	2	JOINT, fuel pipe	
59	92059-084	2	PIPE, over flow	
60	92037-072	4	CLAMP, over flow pipe	
61	~~16046-003~~	2	JOINT, over flow pipe	**NLA**
62	~~16077-007~~	1	GUIDE, control cable	**NLA**
63	~~16042-005~~	1	PIN, screw stopper	**NLA**
64	461F0-600	1	WASHER, spring 6mm	
65	312B0-600	1	NUT, 6mm	
66	~~16033-016~~	6	SCREW, pan head, 5x14	**NLA**
67	~~16074-002~~	1	WHEEL, control cable	**NLA**
68	~~16039-017~~	2	WASHER, plain	**NLA**
69	~~16040-007~~	1	SPRING, D	**NLA**
70	110N0-516	4	BOLT, hex head, 5x14	
71	416F0-500	4	WASHER, spring , 5mm	
72	~~16063-005~~	1	LEVER, A	**NLA**
73	~~16039-018~~	1	WASHER, plain	**NLA**
74	~~16040-010~~	1	SPRING, E	**NLA**
75	~~16073-009~~	1	COLLAR, D	**NLA**
76	~~16021-019~~	1	SCREW, throttle stop	**NLA**
77	~~16022-009~~	1	SPRING, throttle stop screw	**NLA**
78	~~16055-003~~	1	PLATE, throttle stop	**NLA**
79	16022-010	1	SPRING, throttle adjuster	
80	~~16021-020~~	1	ADJUSTER, throttle lever	**NLA**
81	~~16073-006~~	1	COLLAR, E	**NLA**
82	~~16041-004~~	1	SHAFT	**NLA**
83	~~16073-007~~	1	COLLAR, F	**NLA**


12. Carburetors 3/3

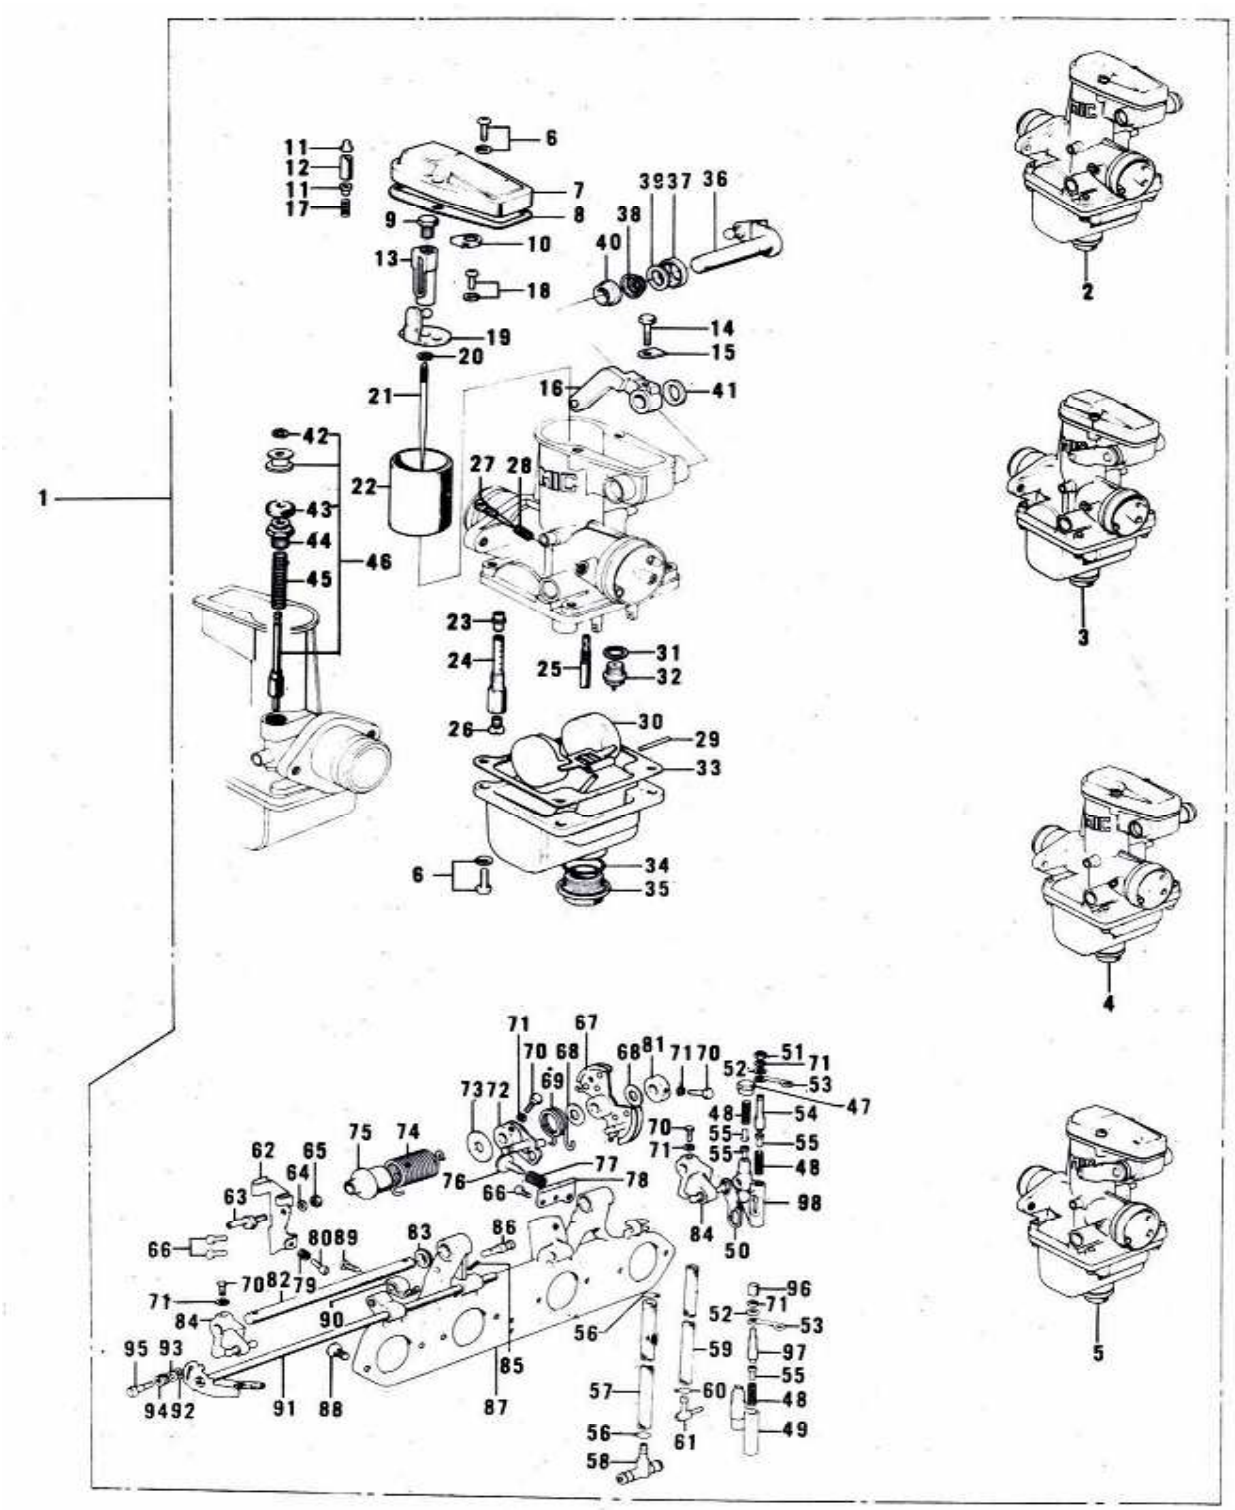

12. Carburetors 3/3

No.	Part No.	Q'TY	PART NAME	
84	~~16063-002~~	2	LEVER, B	**NLA**
85	~~16023-004~~	1	PIN, cotter	**NLA**
86	~~16042-006~~	1	PIN, spring hook	**NLA**
87	~~16065-019~~	1	HOLDER, carburetor	**NLA**
88	221B0-612	8	SCREW, countersunk head, 6x12	
89	~~16046-007~~	4	SCREW, slotted	**NLA**
90	~~16063-003~~	4	LEVER, starter plunger	**NLA**
91	~~16041-012~~	1	SHAFT, starter plunger	**NLA**
92	16039-019	1	WASHER, plain	
93	~~16039-020~~	1	WASHER, plain	**NLA**
94	16040-009	1	SPRING, F	
95	~~16046-005~~	1	SCREW, starter lever	**NLA**
96	~~16003-008~~	1	NUT, lock	**NLA**
97	~~16021-021~~	1	ADJUSTER, throttle stop	**NLA**
98	~~16065-020~~	2	HOLDER	**NLA**


13. Oil Pump, Oil Filter

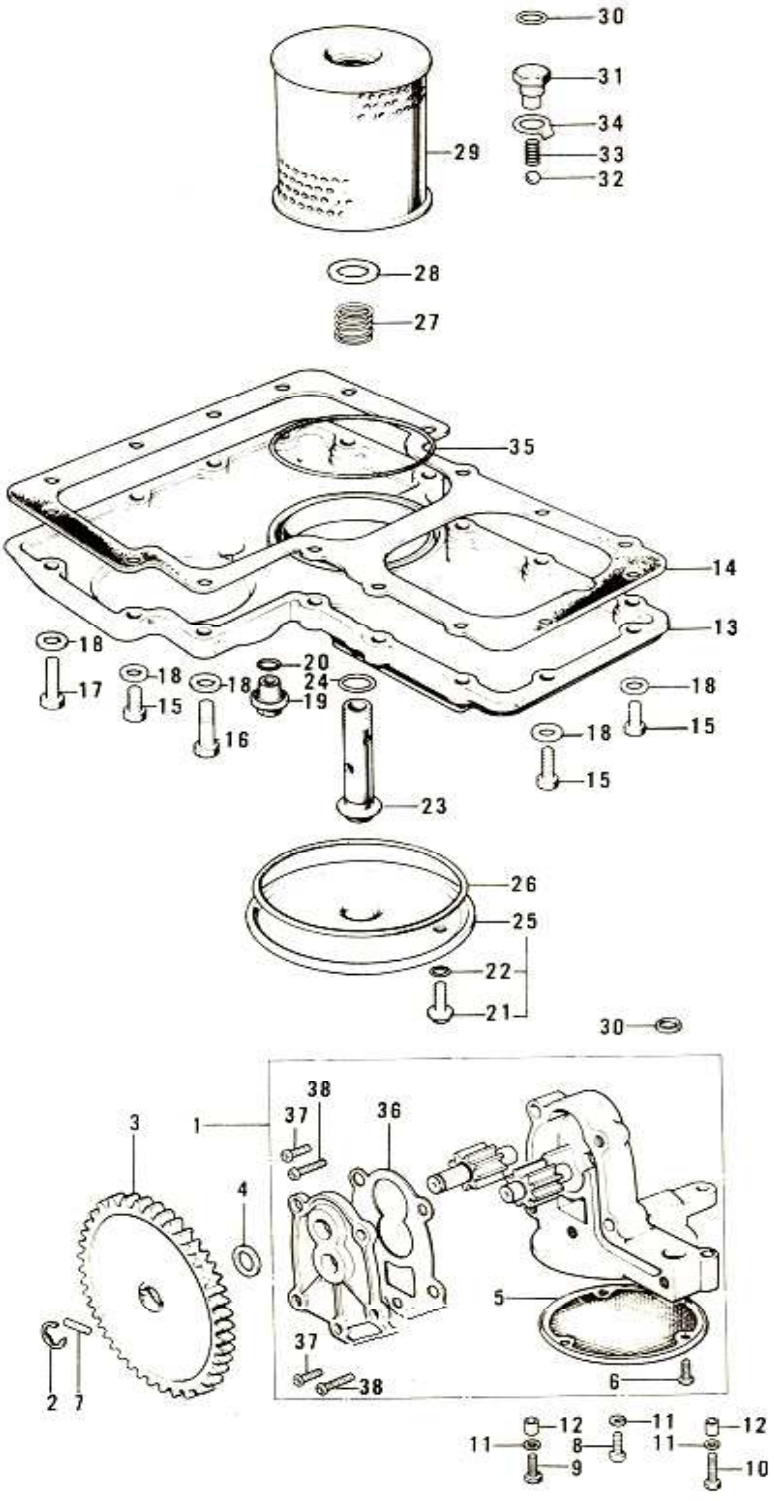

13. Oil Pump, Oil Filter

No.	Part No.	Q'TY	PART NAME	
1	~~16082-059~~	1	OIL PUMP ASSY	**NLA**
2	482K7-000	1	CIRCLIP, 7mm	
3	16085-019	1	GEAR, oil pump 49T	
4	92022-080	1	WASHER, oil pump	
5	16111-004	1	STRAINER, oil pump	
6	220B0-508A	3	SCREW, pan head, 5x8	
7	551A0-314	1	PIN, dowel, 3x14	
8	92001-152	1	BOLT, hex head, 6x22	
9	92001-153	1	BOLT, hex head, 6x35	
10	92001-154	1	BOLT, hex head, 6x45	
11	410B0-600	3	WASHER, plain, 6mm	
12	92042-007	2	PIN, dowel, 3x14	
13	~~16110-003~~	1	PAN, oil	**NLA**
14	16112-002	1	GASKET, oil pan	
15	92003-178	13	BOLT, hex head, 6x25	
16	~~92003-159~~	3	BOLT, hex head, 6x35	**NLA**
17	92003-179	1	BOLT, hex head, 6x50	
18	410B0-600	17	WASHER, plain, 6mm	
19	92066-026	1	PLUG, oil drain	
20	670B2-022	1	O-RING, 22mm	
21	92066-024	1	PLUG, oil drain	
22	670B1-508	1	O-RING, 8mm	
23	92003-094	1	BOLT, oil filter	
24	670B2-016	1	O-RING, 16mm	
25	~~16101-002~~	1	COVER, oil filter	**NLA**
26	671B2-5105	1	O-RING, 105mm	
27	92081-108	1	SPRING, oil filter	
28	92022-220	1	WASHER, plain	
29	16099-002	1	ELEMENT, oil filter	
30	92055-048	2	O-RING	
31	92003-095	1	BOLT, check valve	
32	600A1-200	1	BALL, steel, 3/8"	
33	92081-109	1	SPRING, check valve	
34	~~92024-048~~	1	WASHER, lock	**NLA**
35	92055-052	1	O-RING, 91mm	
36	16145-002	1	GASKET, oil pump	
37	220B0-616	4	SCREW, pan head, 6x16	
38	220B0-626	2	SCREW, pan head, 6x26	**NLA**


14. Muffler, Air Cleaner

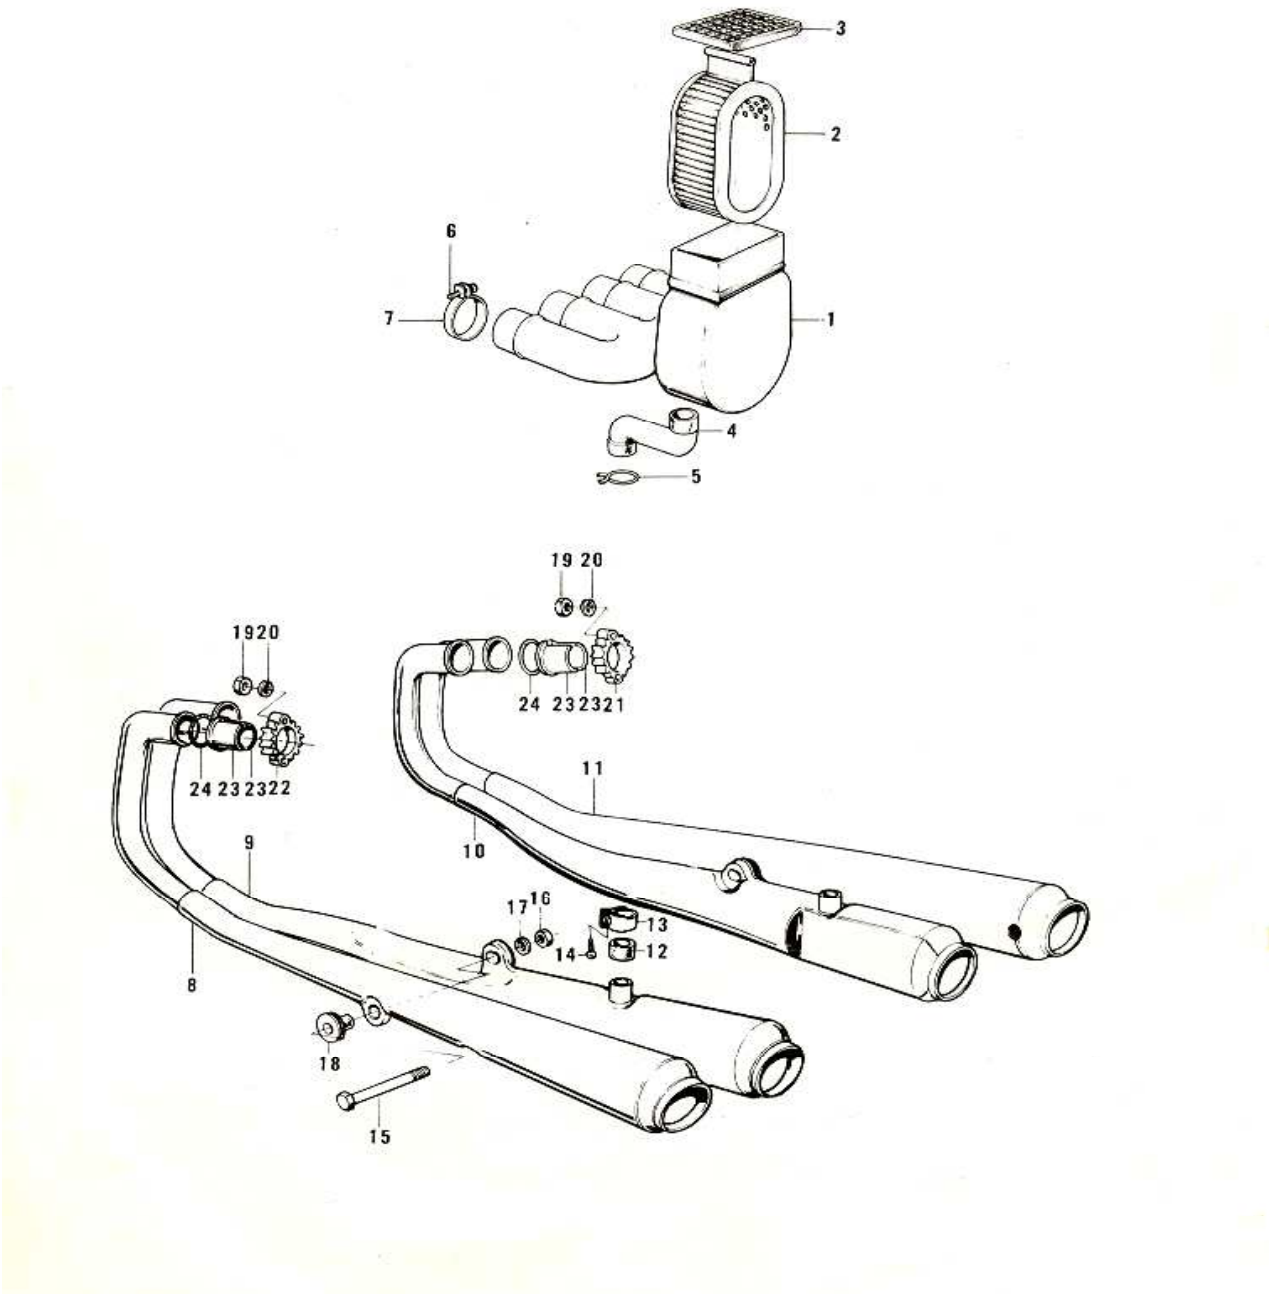

14. Muffler, Air Cleaner

No.	Part No.	Q'TY	PART NAME	
1	11011-022	1	CASE, air cleaner	
2	11013-034	1	ELEMENT, air cleaner	
3	~~11012-030~~	1	CAP, air cleaner	**NLA**
4	~~92059-078~~	1	PIPE, breather	**NLA**
5	92037-028	1	CLAMP, breather pipe	
6	~~92123-002~~	4	CLAMP, air inlet	**NLA**
7	220B0-535	4	SCREW, pan head, 5x35	
8	18001-127	1	MUFFLER ASSY, LH, UPPER	
9	18001-128	1	MUFFLER ASSY, LH, LOWER	
10	18001-129	1	MUFFLER ASSY, RH, LOWER	
11	18001-130	1	MUFFLER ASSY, RH, UPPER	
12	92059-079	2	PIPE, muffler connection	
13	92037-103	2	CLAMP, connection pipe	
14	220B0-616	2	SCREW, pan head, 6x16	
15	92003-180	2	BOLT, 10x104	
16	92019-021	2	NUT, lock, 10mm	
17	410B1-000	2	WASHER, plain, 10mm	
18	92092-010	4	BUSHING, muffler fitting	
19	310B0-600	8	NUT, 6mm	
20	461F0-600	8	WASHER, spring, 6mm	
21	18069-045	2	HOLDER, exhaust pipe	
22	18069-046	2	HOLDER, exhaust pipe	
23	92027-170	8	INSERT, exhaust pipe	
24	18067-018	4	GASKET, exhaust pipe	

15. Contact Breaker, Spark Advancer

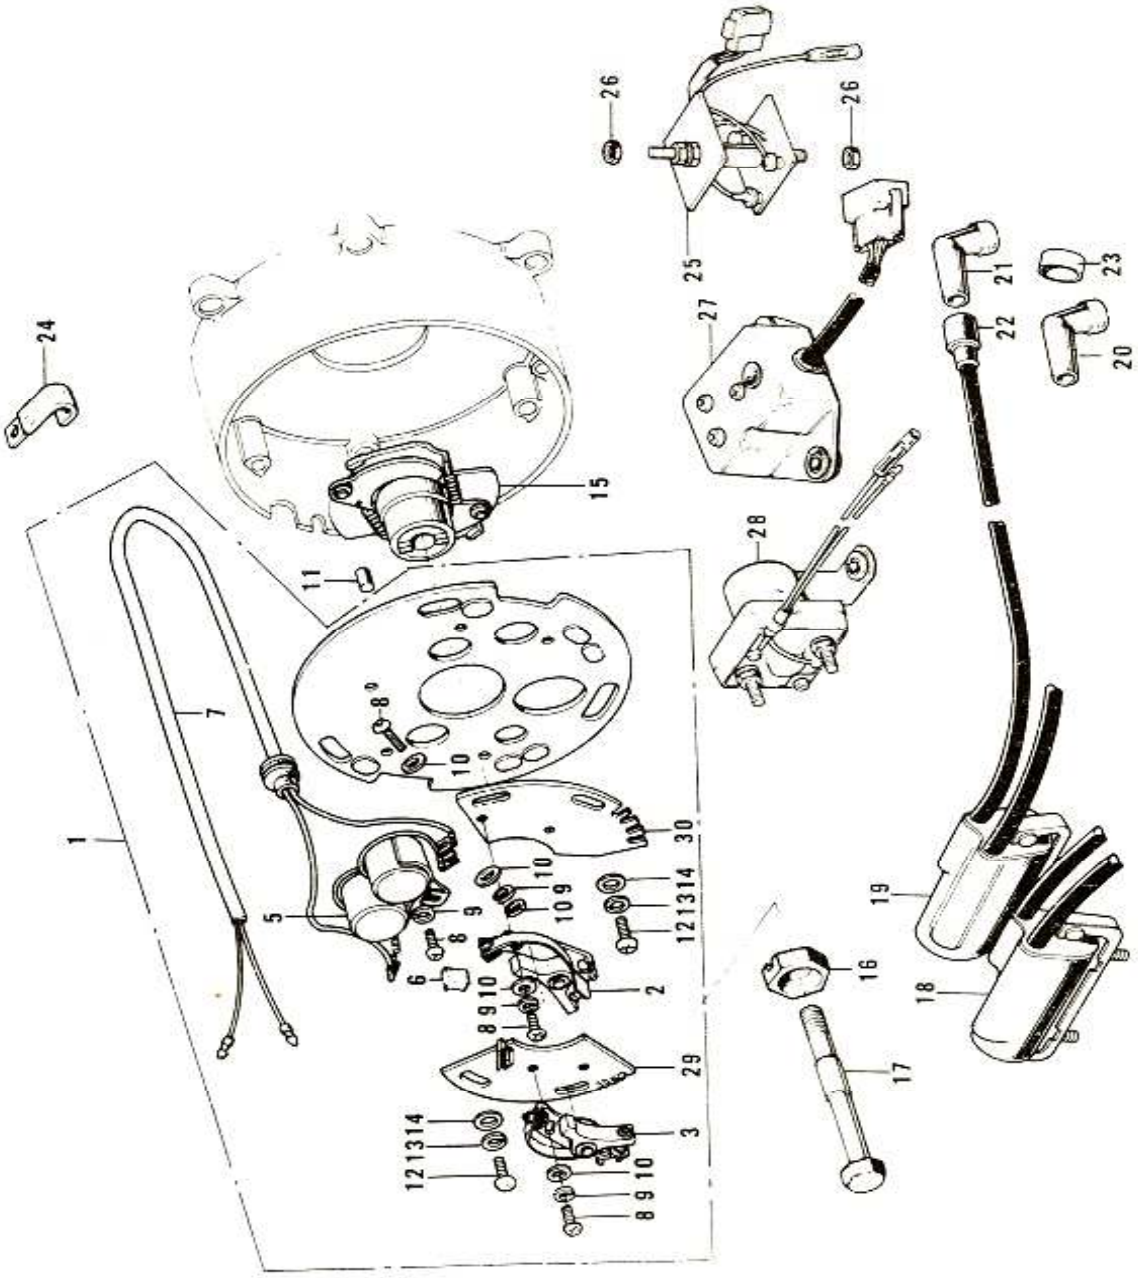


15. Contact Breaker, Spark Advancer

No.	Part No.	Q'TY	PART NAME	
1	21135-007	1	BREAKER ASSY, contact	
2	21008-021	1	BREAKER, contact	
3	21008-022	1	BREAKER, contact	
4	~~21021-003~~	1	PLATE, contact breaker	**NLA**
5	21013-029	1	CONDENSER	
6	~~21019-018~~	1	FELT, oil	**NLA**
7	~~21029-024~~	1	WIRING HARNESS, contact breaker	**NLA**
8	220B0-406	9	SCREW, pan head, 4x6	
9	461F0-400	5	WASHER, spring, 4mm	
10	410B0-400	4	WASHER, plain, 4mm	
11	551A0-408	1	PIN, dowel, 4x8	
12	220B0-512	3	SCREW, pan head, 5x12	
13	461F0-500	3	WASHER, Spring, 5mm	
14	410B0-500	3	WASHER, plain, 5mm	
15	21148-005	1	ADVANCER ASSY, spark	
16	92022-244	1	WASHER, spark advancer	
17	92001-113	1	BOLT, spark advancer	
18	21121-058	1	COIL, ignition #1+4	
19	21121-060	1	COIL, ignition #2+3	
20	21160-005	2	CAP, spark plug	
21	21130-020 *	2	CAP, spark plug	
22	21131-005	4	GROMMET, high tension cord	
23	21131-006	4	GROMMET, spark plug cap	
24	21126-007	8	CLAMP, high tension coard	
25	~~21061-019~~	1	RECTIFIER	**NLA**
26	310B0-600	2	NUT, 6mm	
27	21066-019	1	REGULATOR, voltage	
28	21164-001	1	SWITCH ASSY, magnetic	
29	21156-008	1	PLATE, contact breaker	
30	~~21156-009~~	1	PLATE, contact breaker	**NLA**

***	*21160-005*	*4*	*CAP, spark plug*	***(entstört)***


16. Starting Motor, Dynamo

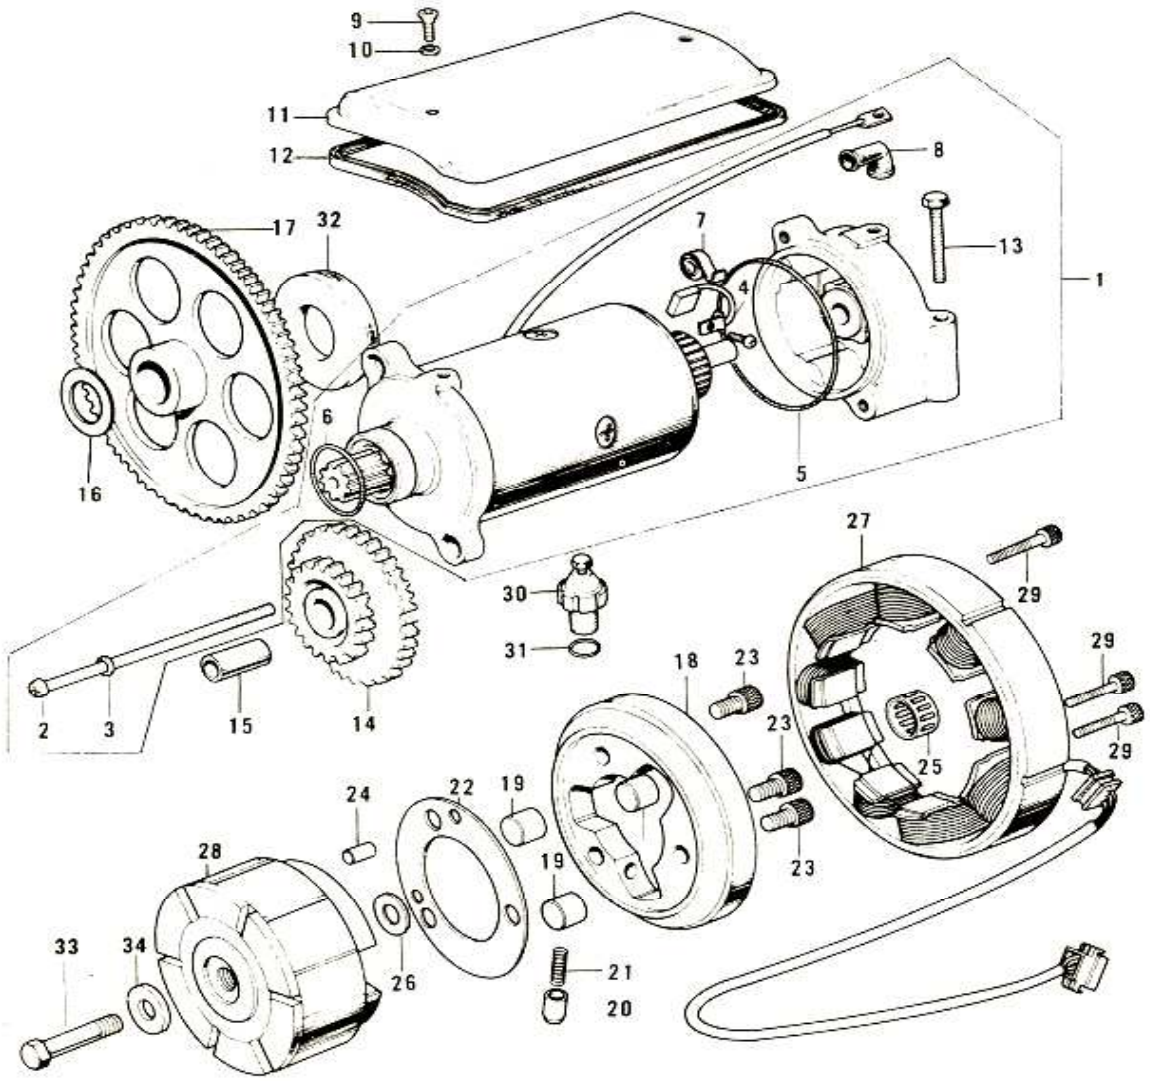

16. Starting Motor, Dynamo

No.	Part No.	Q'TY	PART NAME	
1	~~21163-001~~	1	MOTOR ASSY, starting	**NLA**
2	~~21015-005~~	2	SCREW, pan head, 6x110	**NLA**
3	461F0-600	2	WASHER, spring, 6mm	
4	21039-003	2	BRUSH, carbon	
5	21027-003	1	O-RING	
6	21027-004	1	O-RING, 24mm	
7	21040-003	2	SPRING, carbon brush	
8	21017-017	1	CAP, starting motor terminal	
9	110N0-610	2	BOLT, hex head, 6x10	
10	410B0-600	2	WASHER, plain, 6mm	
11	~~21165-001~~	1	COVER, starting motor	**NLA**
12	21166-001	1	GASKET, starting motor cover	
13	110B0-656	2	BOLT, hex head, 6x56	
14	21167-002	1	GEAR, starting motor	
15	13002-007	1	PIN, piston	
16	~~92026-091~~	1	WASHER, thrust, 22mm	**NLA**
17	21167-003	1	GEAR , starting clutch 71 T	
18	13194-003	1	CLUTCH, starting	
19	92122-001	3	ROLLER, 15mm	
20	92043-087	3	PLUG	
21	92081-110	3	SPRING	
22	~~92026-082~~	1	PLATE, clutch starting	**NLA**
23	92003-104	3	BOLT, 8x16	
24	~~551A0-622~~	1	PIN, dowel, 6x22	**NLA**
25	~~92046-033~~	1	NEEDLE BEARING, K222620	**NLA**
26	92026-092	1	WASHER, plain, 22mm	
27	~~21001-024~~	1	DYNAMO ASSY	**NLA**
28	~~21007-014~~	1	STATOR ASSY	**NLA**
29	~~21007-023~~	1	ROTOR	**NLA**
30	120S0-635	3	BOLT, 6x35	
31	16144-002	1	SWITCH ASSY, oil pressure	
32	92055-055	1	O-RING, oil pressure switch	
33	92075-193	AR	DAMPER RUBBER 7.3t	
34	114G0-840	1	BOLT, hex head, 8x40	
35	~~92022-218~~	1	WASHER, plain, 8mm	**NLA**


17. Frame 1/2

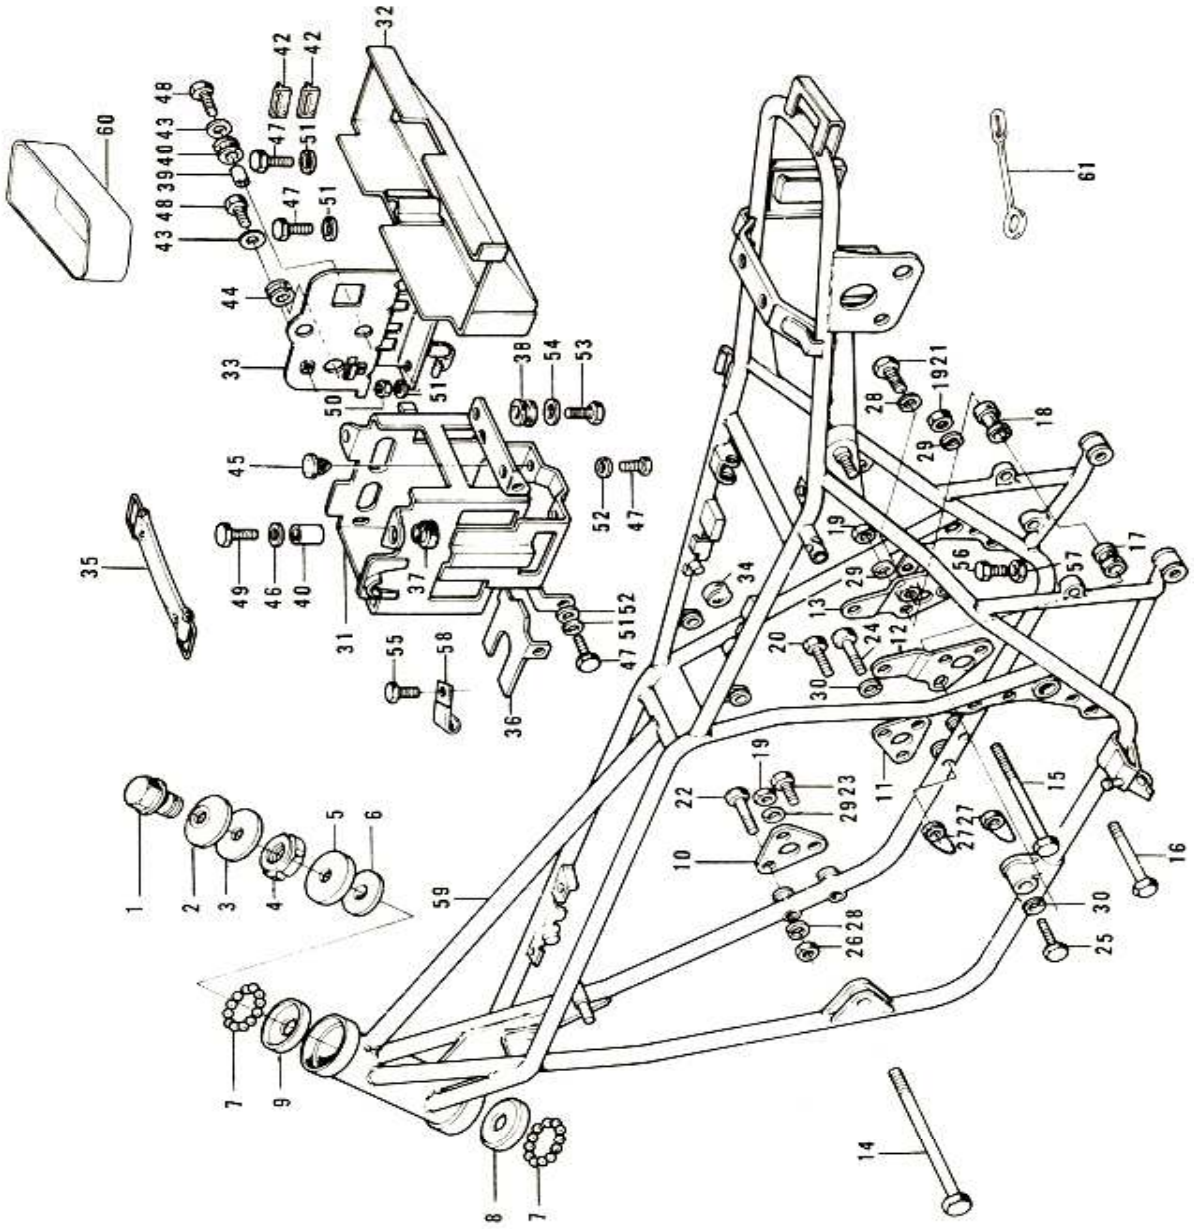
60
48
43
39
40
42
42
32
47
51
47
51
44
33
38
54
53
50
51
45
52
47
49
46
40
35
37
31
55
58
36
47
51
52
34
19
29
13
12
24
20
30
56
57
17
18
1921
28
29
61
22
19
2923
10
11
15
2727
16
30
25
2628
59
1
2
3
4
5
6
7
9
8
7
14

17. Frame 1/2

No.	Part No.	Q'TY	PART NAME	
1	92007-031	1	BOLT, steering stem head	
2	92022-230	1	WASHER, steering stem head	
3	46100-003	1	WASHER, wave	
4	92090-007	1	NUT, steering stem head	
5	46098-010	1	CAP, steering stem head	
6	92047-011	1	CONE, steering stem head upper	
7	600A0-800	39	BALL, steel, 1/4"	
8	92048-008	1	RACE, steering stem head upper	
9	92048-006	1	RACE, steering stem head lower	
10	~~32030-025~~	1	PLATE, engine mounting, front	**NLA**
11	~~32030-026~~	1	PLATE, engine mounting, lower	**NLA**
12	~~32030-046~~	1	PLATE, engine mounting, LH	**NLA**
13	~~32030-045~~	1	PLATE, engine mounting, RH	**NLA**
14	92091-022	1	BOLT, engine mounting, 310mm	
15	92091-023	1	BOLT, engine mounting, 250mm	
16	92003-099	1	BOLT, engine mounting, 165mm	
17	~~92027-159~~	1	COLLAR, engine mounting, 52mm	**NLA**
18	92027-160	1	COLLAR, engine mounting, 31mm	
19	92019-004	3	NUT, self locking, 10mm	
20	110B0-818	2	BOLT, hex head, 8x18	
21	110G0-836	4	BOLT, hex head, 8x36	
22	~~110G0-856~~	1	BOLT, hex head, 8x56	**NLA**
23	110G0-863	1	BOLT, hex head, 8x63	
24	~~113B1-256A~~	1	BOLT, hex head, 12x56	**NLA**
25	~~113B1-271A~~	1	BOLT, hex head, 12x71	**NLA**
26	311B0-800	2	NUT, 8mm	
27	92016-045	2	NUT, 12mm	
28	461F0-800	6	WASHER, spring, 8mm	
29	461F1-000	3	WASHER, spring, 10mm	
30	461F1-200	2	WASHER, spring, 12mm	
31	~~32097-022~~	1	CASE, battery	**NLA**
32	~~32098-019~~	1	CASE, tool	**NLA**
33	~~32129-001~~	1	BRACKET, electric case	**NLA**
34	~~92075-141~~	2	RUBBER, battery case	**NLA**
35	92072-045	1	BAND, battery	
36	~~32105-005~~	1	STAY, air cleaner	**NLA**
37	~~92075-146~~	2	RUBBER, battery case	**NLA**
38	92075-161	2	DAMPER RUBBER	
39	92027-165	2	COLLAR, electric base bracket	
40	92027-156	2	COLLAR, battery case	
41	92075-149	2	RUBBER, electric base bracket	
42	32103-003	2	SEAT, rectifier rubber	
43	92022-125	4	WASHER, plain, 6mm	


17. Frame 2/2

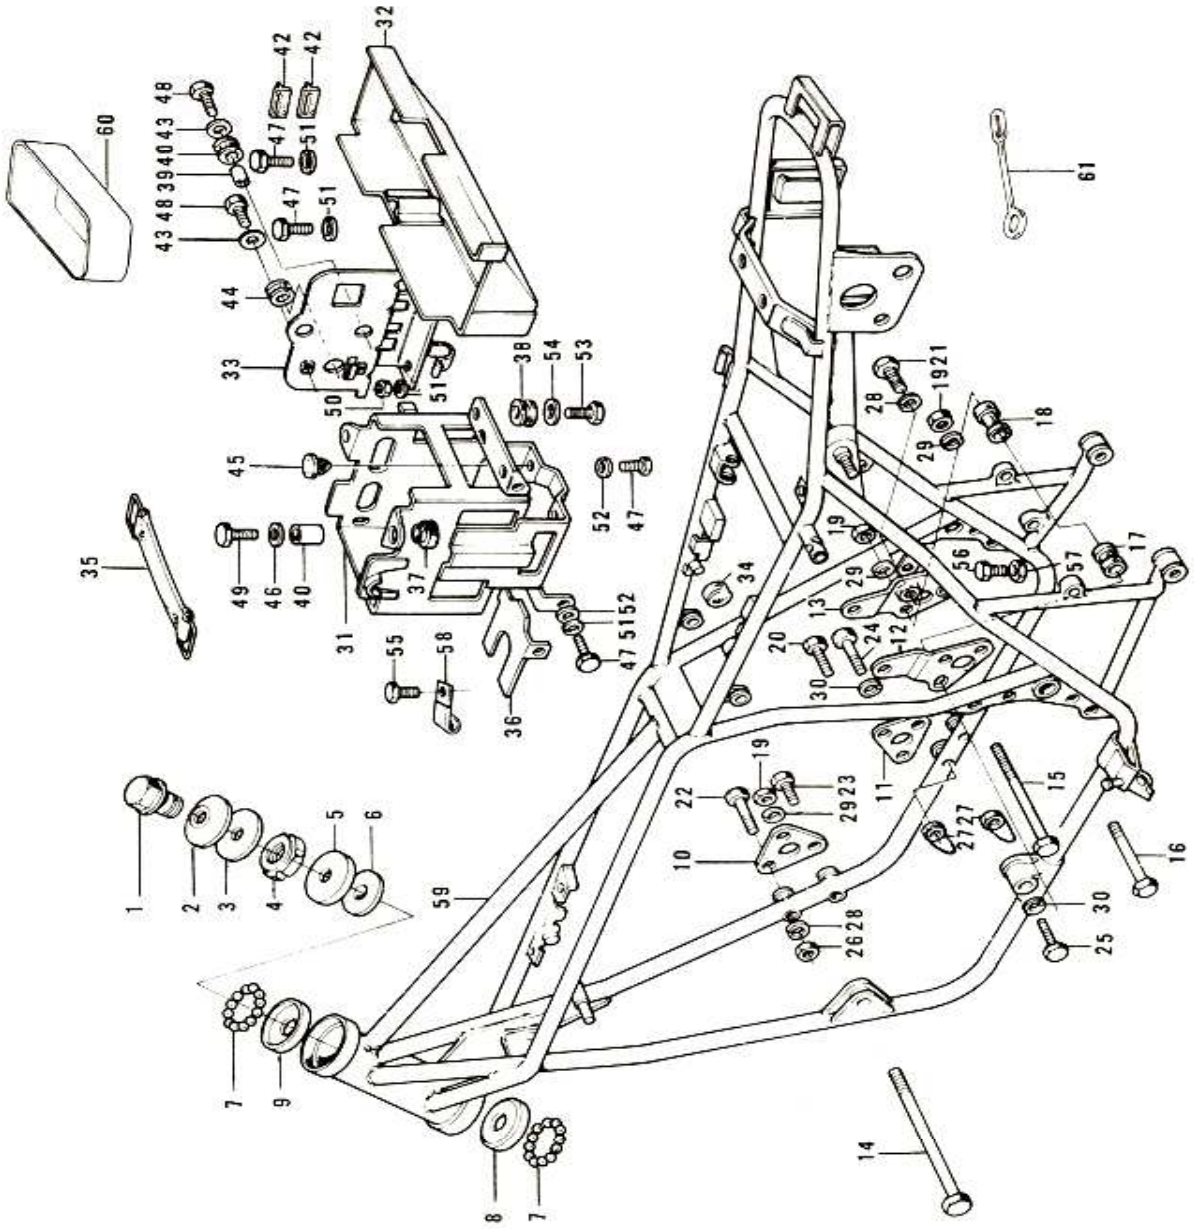
60
48
43
39
40
47
51
42
32
44
33
38
54
53
50
45
52
49
46
40
35
37
31
55
58
36
47 51 52
34
19
29
13
24
12
20
30
56
57
17
18
28
1921
29
61
11
15
16
22
2923
10
2727
30
25
2628
59
1
2
3
4
5
6
7
9
8
7
14

17. Frame 2/2

No.	Part No.	Q'TY	PART NAME	
44	92075-051	1	DAMPER RUBBER	
45	92075-078	4	RUBBER, battery case	
46	92022-024	2	WASHER, plain, 6mm	
47	116B0-614	6	BOLT, hex head, 6x14	
48	116B0-616	4	BOLT, hex head, 6x16	
49	112G0-625	2	BOLT, hex head, 6x25	
50	312B0-600	2	NUT, 6mm	
51	461F0-600	6	WASHER, spring, 6mm	
52	411B0-600	2	WASHER, plain, 6mm	
53	92001-115	2	BOLT, hex head, 6x14	
54	410B0-800	2	WASHER, plain, 8mm	
55	116B0-610	1	BOLT, hex head, 6x10	
56	116B0-620	1	BOLT, hex head, 6x20	
57	310B0-600	1	NUT, 6mm	
58	21126-007	1	CLAMP	
59	~~32002-094~~	1	FRAME	**NLA**
60	~~32099-015~~	1	PROTECTOR, battery	**NLA**
61	92037-134	1	CLAMP, overflow pipe	


18. Swinging Arm, Rear Shock Absorber

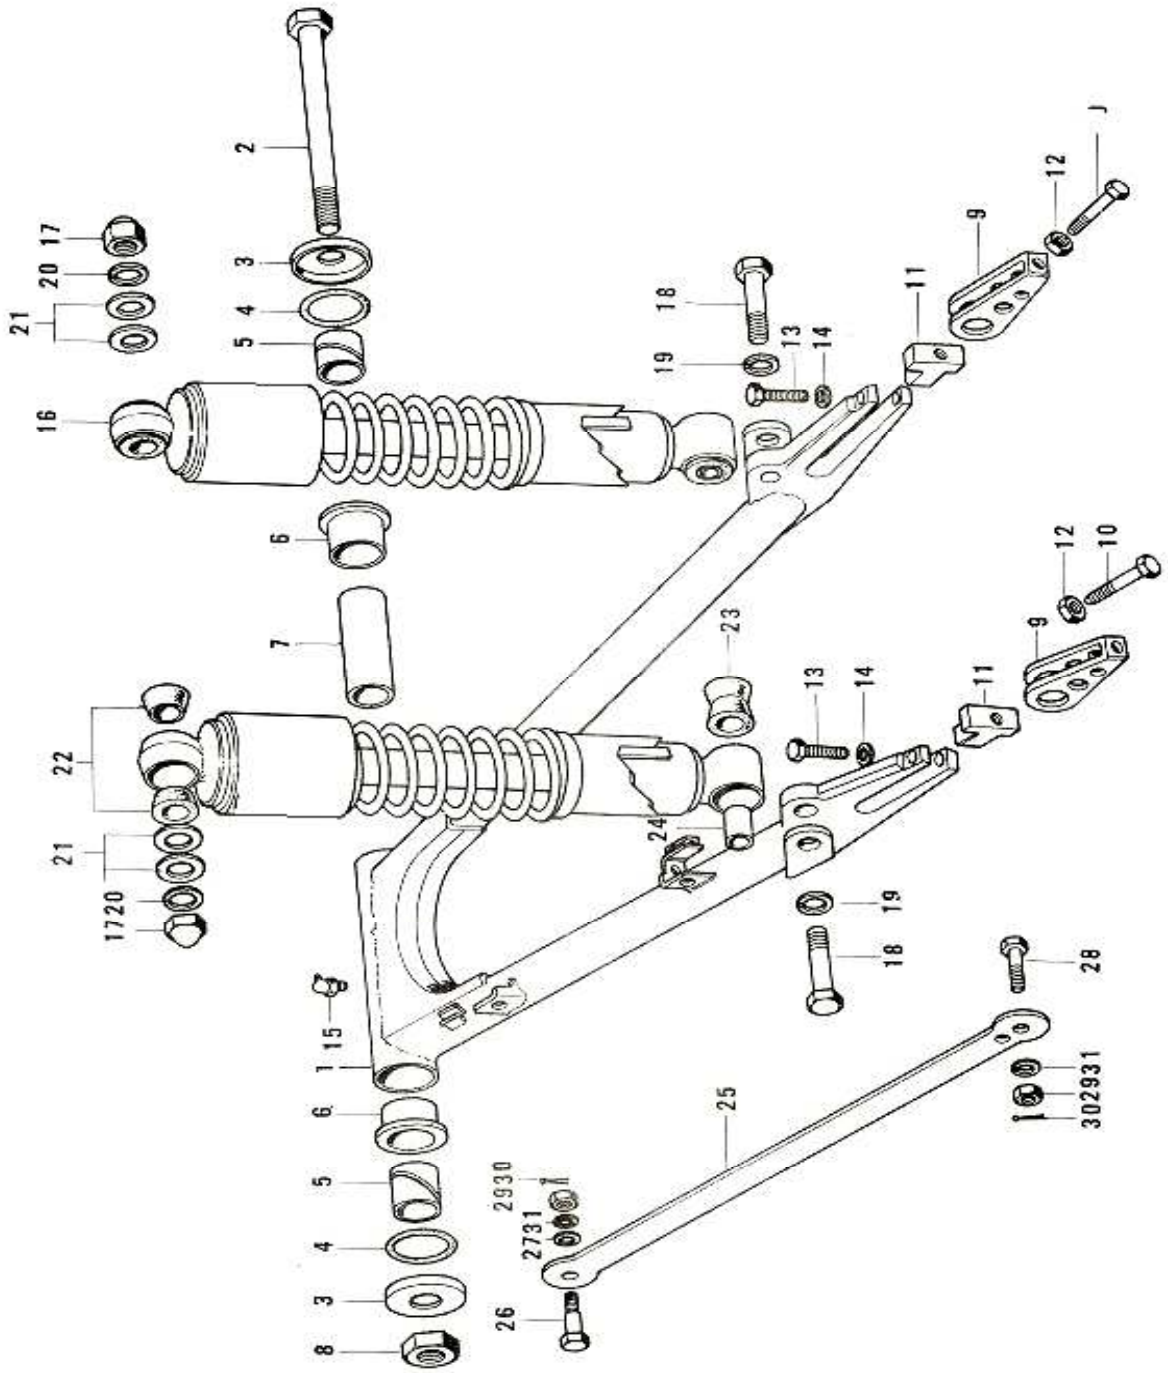

18. Swinging Arm, Rear Shock Absorber

No.	Part No.	Q'TY	PART NAME	
1	~~33001-046~~	1	SWINGING ARM	**NLA**
2	33032-036	1	SHAFT, swinging arm pivot	
3	33035-003	2	CAP, swinging arm	
4	671B2-530	2	O-RING, 30mm	
5	33034-009	2	SLEEVE, swinging arm	
6	33033-009	2	BUSHING, swinging arm	
7	33036-005	1	COLLAR, swinging arm	
8	92019-012	1	NUT, lock 16mm	
9	33040-066	1	ADJUDUSTER, chain	
10	92001-143	2	BOLT, chain adjuster, 10mm	
11	33044-001	2	STOPPER, chain adjuster	
12	315B1-000	2	NUT, 10mm	
13	110G0-840	2	BOLT, hex head, 8x40	
14	416F0-800	2	WASHER, spring, 8mm	
15	92005-002	1	NIPPLE, grease	
16	~~45014-083~~	2	SHOCK ABSORBER	**NLA**
17	92020-014	2	NUT, shock absorber fitting	
18	113N1-035	2	BOLT, hex head, 10x35	
19	461F1-000	2	WASHER, spring, 10mm	
20	461F1-200	2	WASHER, spring, 12mm	
21	410B1-200	4	WASHER, plain, 12mm	
22	45017-001	4	BUSHING, shock absorber rubber	
23	45017-011	2	BUSHING, shock absorber rubber	
24	45016-003	2	BUSHING, shock absorber pivot shaft	
25	~~43007-032~~	1	TORQUE LINK, rear brake	**NLA**
26	~~92003-103~~	1	BOLT, hex head, 8x28	**NLA**
27	411B1-000	1	WASHER, plain, 10mm	
28	~~92003-147~~	1	BOLT, hex head, 10x45	**NLA**
29	313B1-000	2	NUT, 10mm	
30	92041-005	2	PIN, cotter	
31	461F1-000	2	WASHER, spring, 10mm	


19. Footrests, Stands, Brake Pedal

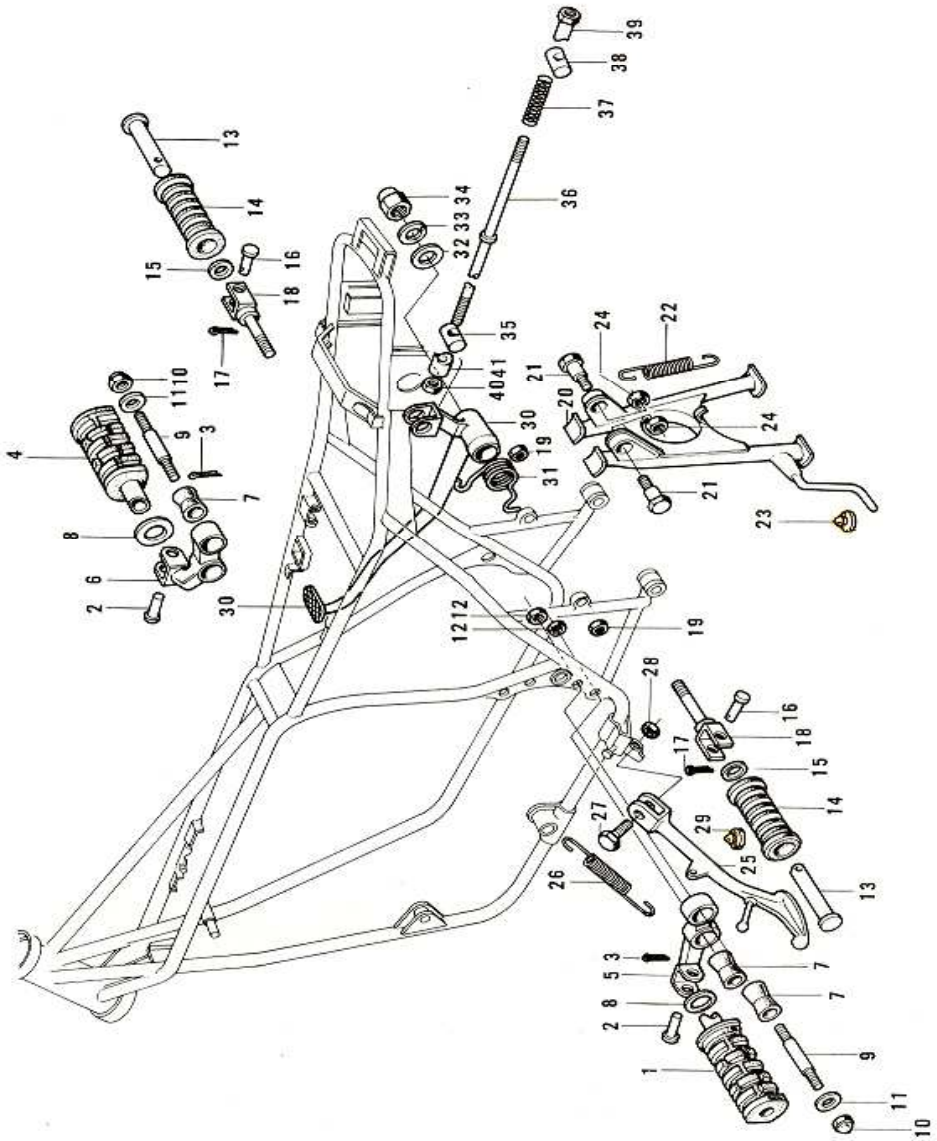

19. Footrests, Stands, Brake Pedal

No.	Part No.	Q'TY	PART NAME	
1	~~34028-011~~	1	BAR, footrest, LH	**NLA**
2	92043-080	2	PIN, footrest bar fitting	
3	550D2-515	2	PIN, cotter, 2.5x15	
4	~~34028-012~~	1	BAR, footrest, RH	**NLA**
5	~~34003-036~~	1	BRACKET, footrest bar, LH	**NLA**
6	~~34003-037~~	1	BRACKET, footrest bar, RH	**NLA**
7	92075-140	4	RUBBER, footrest bar	
8	~~92022-204~~	2	WASHER, plain	**NLA**
9	~~92004-048~~	4	STUD, footrest bar fitting	**NLA**
10	92019-013	4	NUT, lock, 8mm	
11	92102-010	4	CAP, footrest bar	
12	315B1-000	4	NUT, 10mm	
13	34028-010	2	BAR, rear footrest	
14	92076-024	2	RUBBER, rear footrest	
15	92022-199	2	WASHER, plain	
16	92043-079	2	PIN, rear footrest fitting	
17	550D2-012	2	PIN, cotter, 2.0x12	
18	~~33028-011~~	2	BRACKET, rear footrest	**NLA**
19	315B1-200	2	NUT, 12mm	
20	34011-029	1	STAND, main	
21	~~34019-014~~	2	SHAFT, main stand	**NLA**
22	~~34023-012~~	1	SPRING, main stand	**NLA**
23	92075-015	1	RUBBER, main stand	
24	92016-044	2	NUT, 12mm	
25	~~34024-038~~	1	STAND, side	**NLA**
26	34025-005	1	SPRING, side stand	
27	92003-079	1	BOLT, side stand	
28	315B1-000	1	NUT, 10mm	
29	92075-157	1	RUBBER, side stand	
30	~~43001-044~~	1	PEDAL, brake	**NLA**
31	43005-021	1	SPRING, brake pedal	
32	92022-195	1	WASHER, plain	
33	461F0-800	1	WASHER, spring, 8mm	
34	92019-013	1	NUT, lock, 8mm	
35	92043-095	1	PIN, brake rod	
36	~~43011-017~~	1	ROD, brake	**NLA**
37	43012-002	1	SPRING, brake rod	
38	92043-065	1	PIN, brake rod	
39	92015-056	1	NUT, brake rod adjuster	
40	92019-008	1	NUT, lock	
41	92027-177	1	PIN, brake rod	


20. Handlebar, Grips

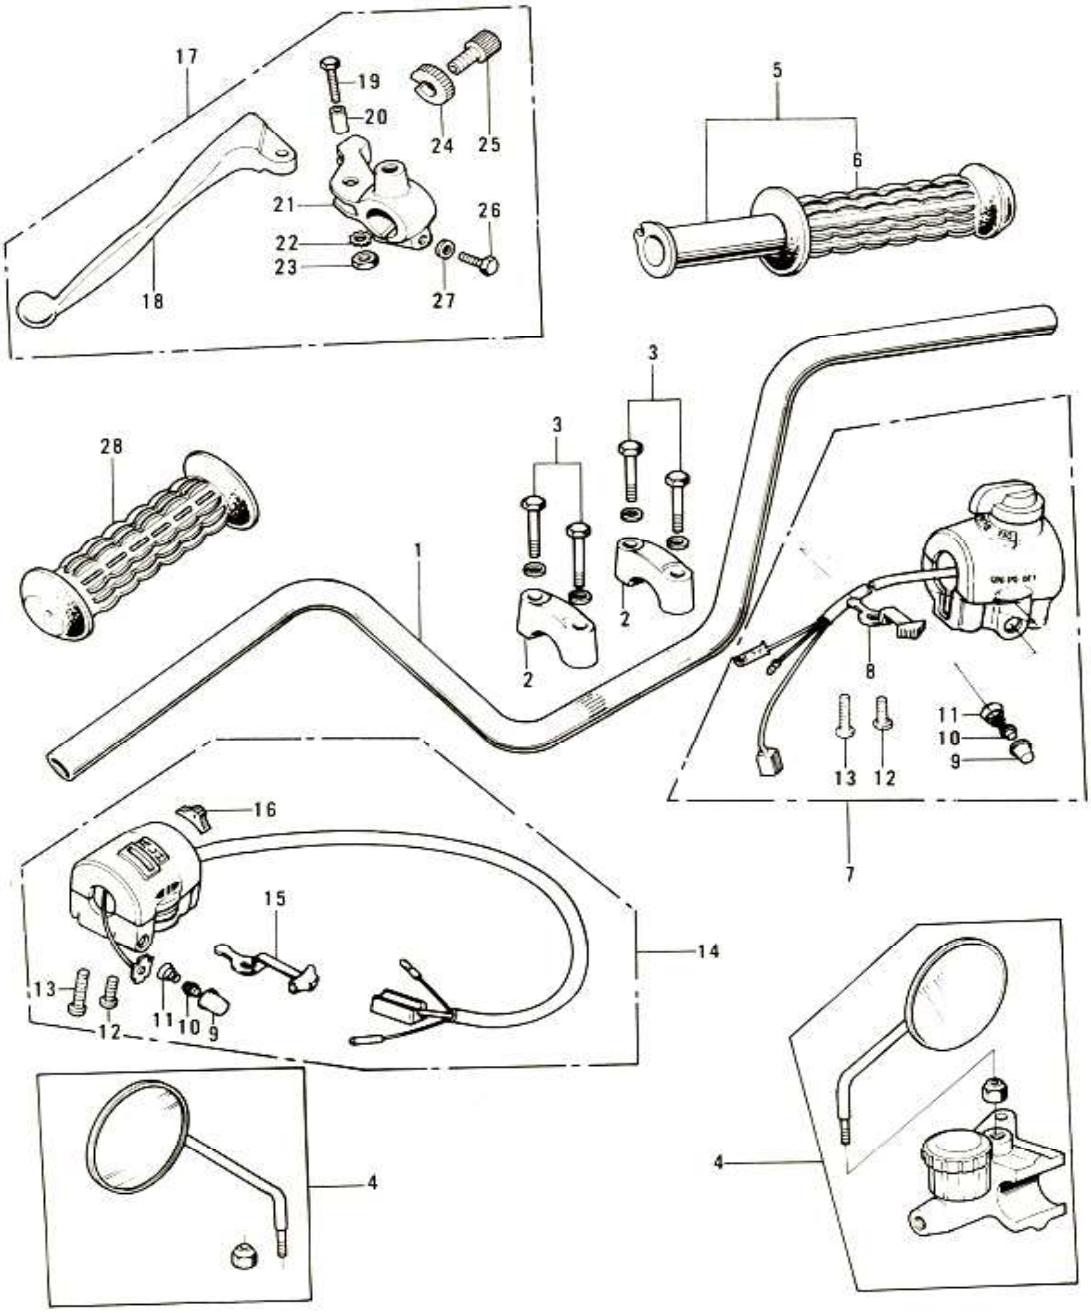

20. Handlebar, Grips

No.	Part No.	Q'TY	PART NAME	
1	46003-029	1	HANDLEBAR	
2	46012-008	2	HOLDER, handlebar	
3	92007-002	4	BOLT, handlebar fitting	
4	56002-021	2	REAR VIEW MIRROR ASSY	
5	~~46018-025~~	1	GRIP ASSY, throttle	**NLA**
6	46061-012	1	RUBBER, throttle grip	
7	~~46132-001~~	1	CASE ASSY, RH	**NLA**
8	~~46043-004~~	1	KNOB ASSY, lighting switch	**NLA**
9	46028-003	2	BUTTON, horn push	
10	46079-003	2	CONTACT, horn button	
11	46031-005	2	SPRING, horn button	
12	220B0-520	2	SCREW, pan head, 5x20	
13	220B0-530	2	SCREW, pan head, 5x30	
14	46091-034	1	CASE ASSY, LH	
15	~~46043-005~~	1	KNOB ASSY, lighting switch	**NLA**
16	46043-013	1	KNOB ASSY, lighting switch	
17	~~46076-025~~	1	LEVER ASSY, clutch	**NLA**
18	46092-016	1	LEVER, clutch	
19	92007-020	1	BOLT, hex head, 5x20	
20	46059-011	1	COLLAR, lever	
21	46094-0112-1	1	HOLDER, clutch lever, Flat Black	
22	~~464H0-500~~	1	WASHER, lock	**NLA**
23	312B0-500	1	NUT, 5mm	
24	46056-005	1	NUT, cable adjuster lock	
25	46055-006	1	SCREW, cable adjuster	
26	110N0-625	1	BOLT, hex head, 6x25	
27	410B0-600	1	WASHER, plain, 6mm	
28	46075-017	1	RUBBER, LH, grip	


21. Fenders

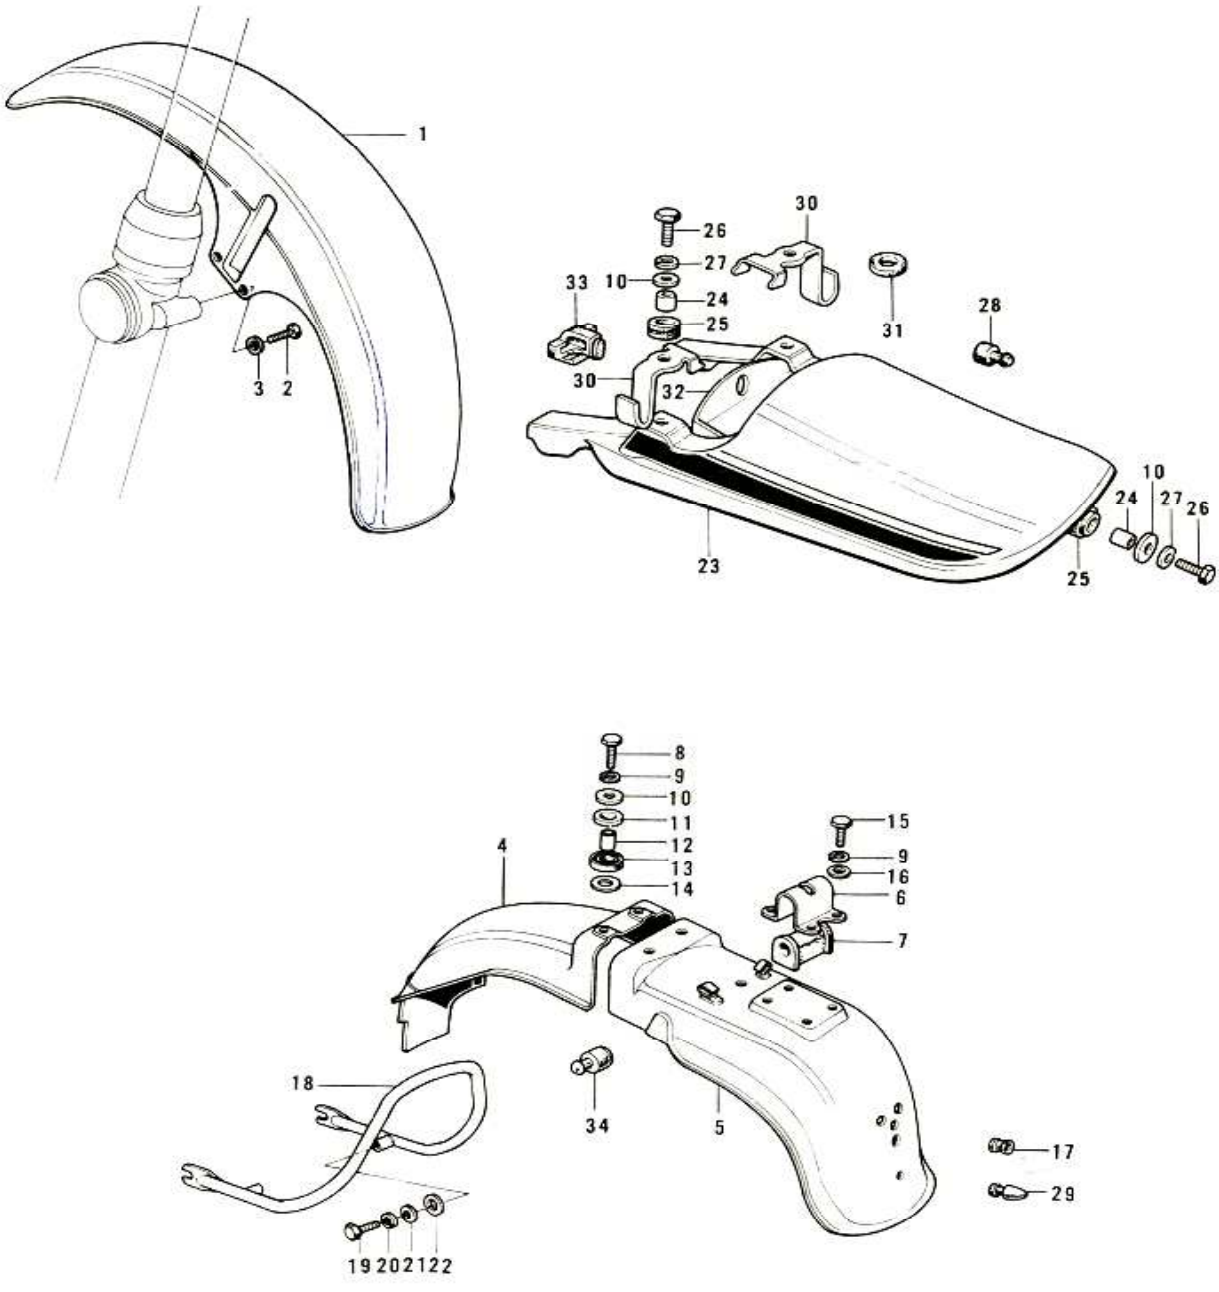
1
3
2
26
27
33
10
24
25
30
32
23
30
31
28
10
24
27
26
25
8
9
10
11
12
13
14
4
15
9
16
6
7
18
34
5
17
29
19
20
21
22

21. Fenders

No.	Part No.	Q'TY	PART NAME	
1	35003-015	1	FENDER, front	
2	110B0-816	4	BOLT, hex head, 8x16	
3	461F0-800	4	WASHER, spring, 8mm	
4	~~35022-071~~	1	FENDER, rear	**NLA**
5	35022-087	1	FENDER, rear	
6	~~35026-006~~	1	BRACKET, rear fender	**NLA**
7	92075-132	1	RUBBER, rear fender	
8	~~110B0-632~~	2	BOLT, hex head, 6x32	**NLA**
9	461F0-600	6	WASHER, spring, 6mm	
10	92022-228	4	WASHER, plain, 6mm	
11	92075-121	2	RUBBER, rear fender	
12	92027-162	2	COLLAR, rear fender	
13	92075-133	2	RUBBER, rear fender	
14	92022-227	2	WASHER, plain, 6mm	
15	116B0-616	4	BOLT, hex head, 6x16	
16	411B0-600	4	WASHER, plain, 6mm	
17	92071-019	1	GROMMET, harness, 10mm	
18	35032-022	1	STAY, rear fender	
19	113B1-022	2	BOLT, hex head, 10x22	
20	461F1-000	2	WASHER, spring, 10mm	
21	411B1-000	2	WASHER, plain, 10mm	
22	92022-044	2	WASHER, plain, 10mm	
23	~~53043-0042-R~~	1	COVER, RR fender, Candyt. Super Red	**NLA**
23	~~53043-0042-S~~	1	COVER, RR fender, Candytone Sky Blue	**NLA**
24	92027-162	4	COLLAR, fender cover	
25	92075-174	4	RUBBER, fender cover	
26	116B0-625	4	BOLT, hex head, 6x25	
27	416F0-600	4	WASHER, spring, 6mm	
28	92074-022	2	PLUG, rear fender cover	
29	92075-176	1	RUBBER, rear fender	
30	~~33122-010~~	2	BRACKET, helmet holder	**NLA**
31	92075-175	4	DAMPER RUBBER	
32	~~32099-010~~	1	CASE	**NLA**
33	~~92074-024~~	1	PLUG	**NLA**
34	92075-135	2	RUBBER	


22. Wheels

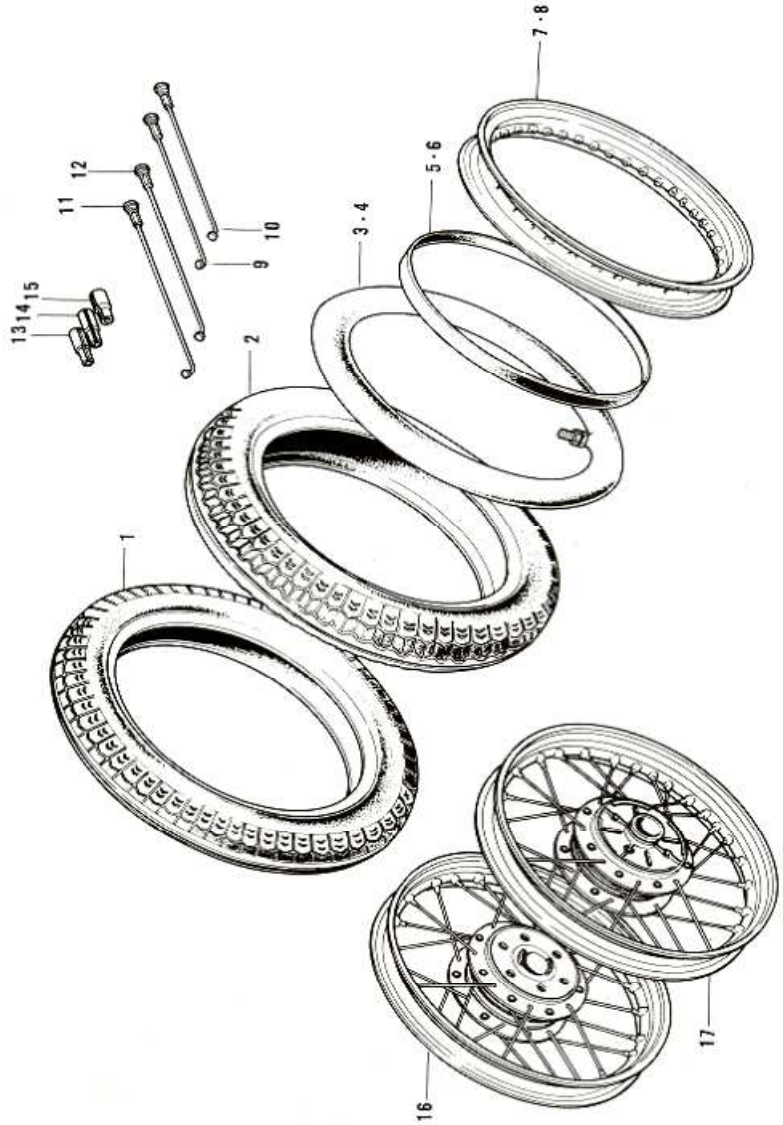

22. Wheels

No.	Part No.	Q'TY	PART NAME	
1	-	1	TIRE, front 3.25-19	**NLA**
2	-	1	TIRE, rear 4.00-18	**NLA**
3	-	1	TUBE, front tire 3.24-19	**NLA**
4	-	1	TUBE, rear tire 4.00-18	**NLA**
5	41023-015	1	BAND, front rim	
6	41023-016	1	BAND, rear rim	
7	~~41025-051~~	1	RIM, front 1.85Bx19W	**NLA**
8	41025-049	1	RIM, rear 2.15Bx18W	
9	41027-042	20	SPOKE ASSY, front inner	177,0mm 100°
10	41057-041	20	SPOKE ASSY, front outer	176,5mm 84°
11	41027-057	20	SPOKE ASSY, rear inner	143,0mm 101°
12	41028-057	20	SPOKE ASSY, rear outer	142,0mm 73°
13	41075-001	AR	WEIGHT, wheel balance, 10g	
14	41075-002	AR	WEIGHT, wheel balance, 20g	
15	41075-003	AR	WEIGHT, wheel balance, 30g	
16	~~41074-022~~	1	WHEEL ASSY, front	**NLA**
17	~~42048-023~~	1	WHEEL ASSY, rear	**NLA**


23. Front Hub

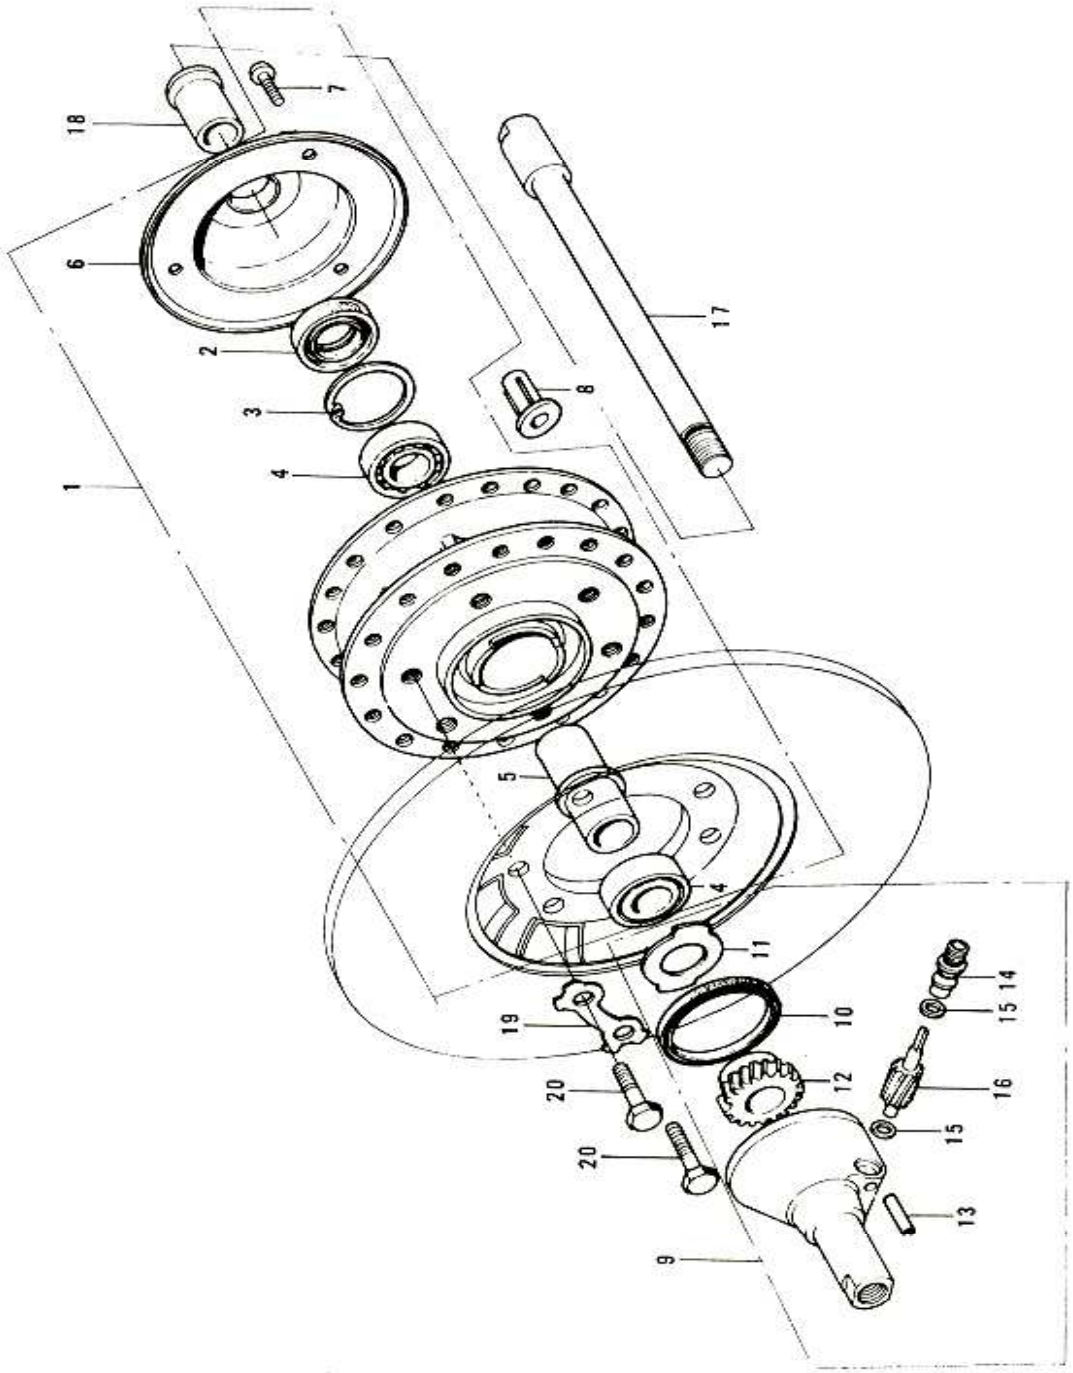

23. Front Hub

No.	Part No.	Q'TY	PART NAME	
1	~~41034-0212-1~~	1	DRUM ASSY, front brake, Flat black	**NLA**
2	~~92050-003~~	1	OIL SEAL, front drum	**NLA**
3	481J4-000	1	CIRCLIP, 40mm	
4	601B6-203	2	BEARING, ball, #6203	
5	~~41039-019~~	1	SPACER, front hub bearing	**NLA**
6	~~41042-009~~	1	COVER, brake drum dust	**NLA**
7	222E0-508	3	SCREW, oval countersunk head, 5x8	
8	~~92102-006~~	6	CAP, front drum hole	**NLA**
9	~~41078-001~~	1	GEAR BOX ASSY	**NLA**
10	~~92050-046~~	1	OIL SEAL, VC50656	**NLA**
11	~~41064-007~~	1	RECEIVER, speedometer gear	**NLA**
12	~~41059-016~~	1	GEAR, speedometer	**NLA**
13	41082-001	1	PIN, bushing set	
14	41062-005	1	BUSHING, speedometer cable	
15	41063-001	2	WASHER, thrust	
16	~~41060-012~~	1	PINION, speedometer	**NLA**
17	~~41068-036~~	1	AXLE, front	**NLA**
18	~~41069-018~~	1	COLLAR, front axle	**NLA**


24. Rear Hub

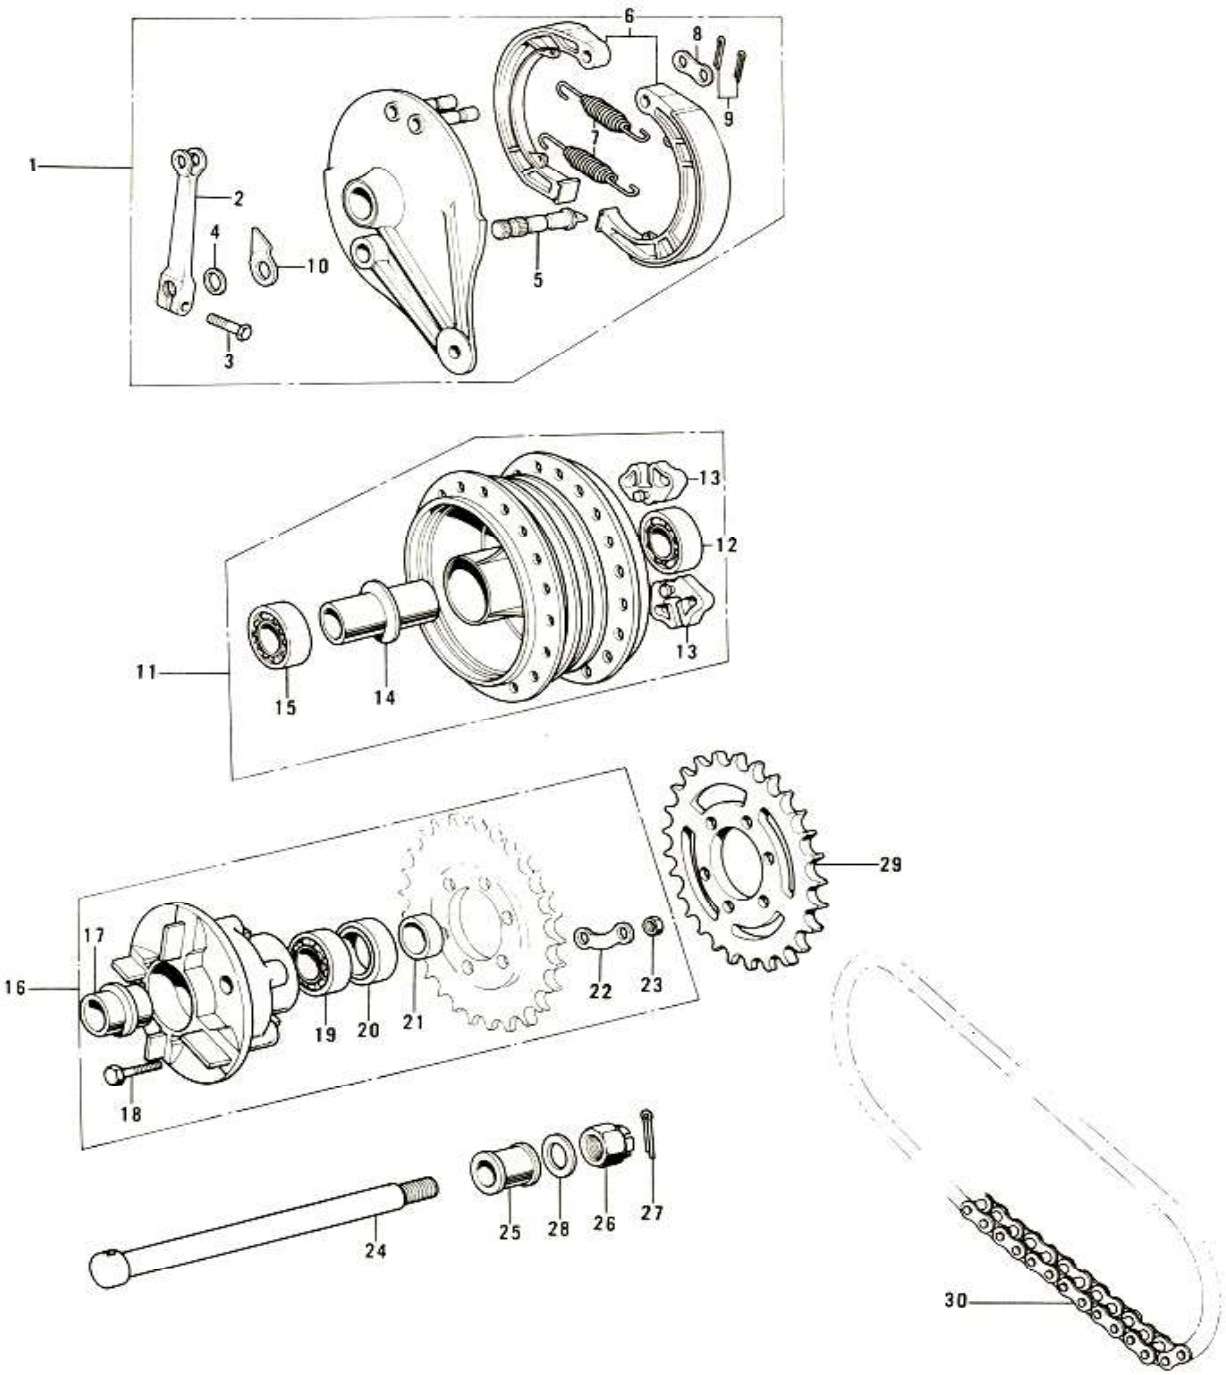
1
2
3
4
5
6
7
8
9
10
11
12
13
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

24. Rear Hub

No.	Part No.	Q'TY	PART NAME	
1	~~42006-053~~	1	PANEL ASSY, rear brake, Flat black	**NLA**
2	~~42029-033~~	1	LEVER, rear brake cam	**NLA**
3	116B0-825	1	BOLT, hex head, 8x25	
4	41051-003	1	DUST SHIELD, brale cam	
5	41050-017	1	CAM SHAFT, rear brake	
6	~~41048-016~~	2	SHOE, brake	**NLA**
7	41049-007	2	SPRING, brake shoe	
8	~~41045-006~~	1	WASHER, brake shoe	**NLA**
9	550D3-025	2	PIN, cotter, 3.0x25	
10	41085-004	1	INDICATOR, rear brake	
11	~~42005-030~~	1	DRUM ASSY, rear brake	**NLA**
12	601B6-304	1	BEARING, ball, #6304	
13	42014-021	6	SHOCK DAMPER, rear hub	
14	~~42010-021~~	1	SPACER, rear hub bearing	**NLA**
15	~~601B6-304Z~~	1	BEARING, ball, #6304Z	**NLA**
16	~~42008-013~~	1	COUPLING ASSY, rear hub	**NLA**
17	~~42036-015~~	1	SLEEVE, rear hub coupling	**NLA**
18	92003-015	6	BOLT, rear sprocket fitting	
19	601B6-206	1	BEARING, ball, #6206	
20	92050-027	1	OIL SEAL	
21	~~42037-023~~	1	COLLAR, rear axle sleeve	**NLA**
22	92088-013	3	WASHER, lock, 10mm	
23	42025-005	6	NUT, 10mm	
24	42031-034	1	AXLE, rear	
25	~~42032-037~~	1	COLLAR, rear axle	**NLA**
26	42045-018	1	NUT, castle, 18mm	
27	550D4-035	1	PIN, cotter, 4.0x35	
28	92022-248	1	WASHER, plain, 20mm	
29	~~42041-118~~	1	REAR SPROCKET 35T	**NLA**
30	~~92057-096~~	1	CHAIN ASSY, EK630 - 92 Link	**NLA**


25. Disc Brake Equipment A

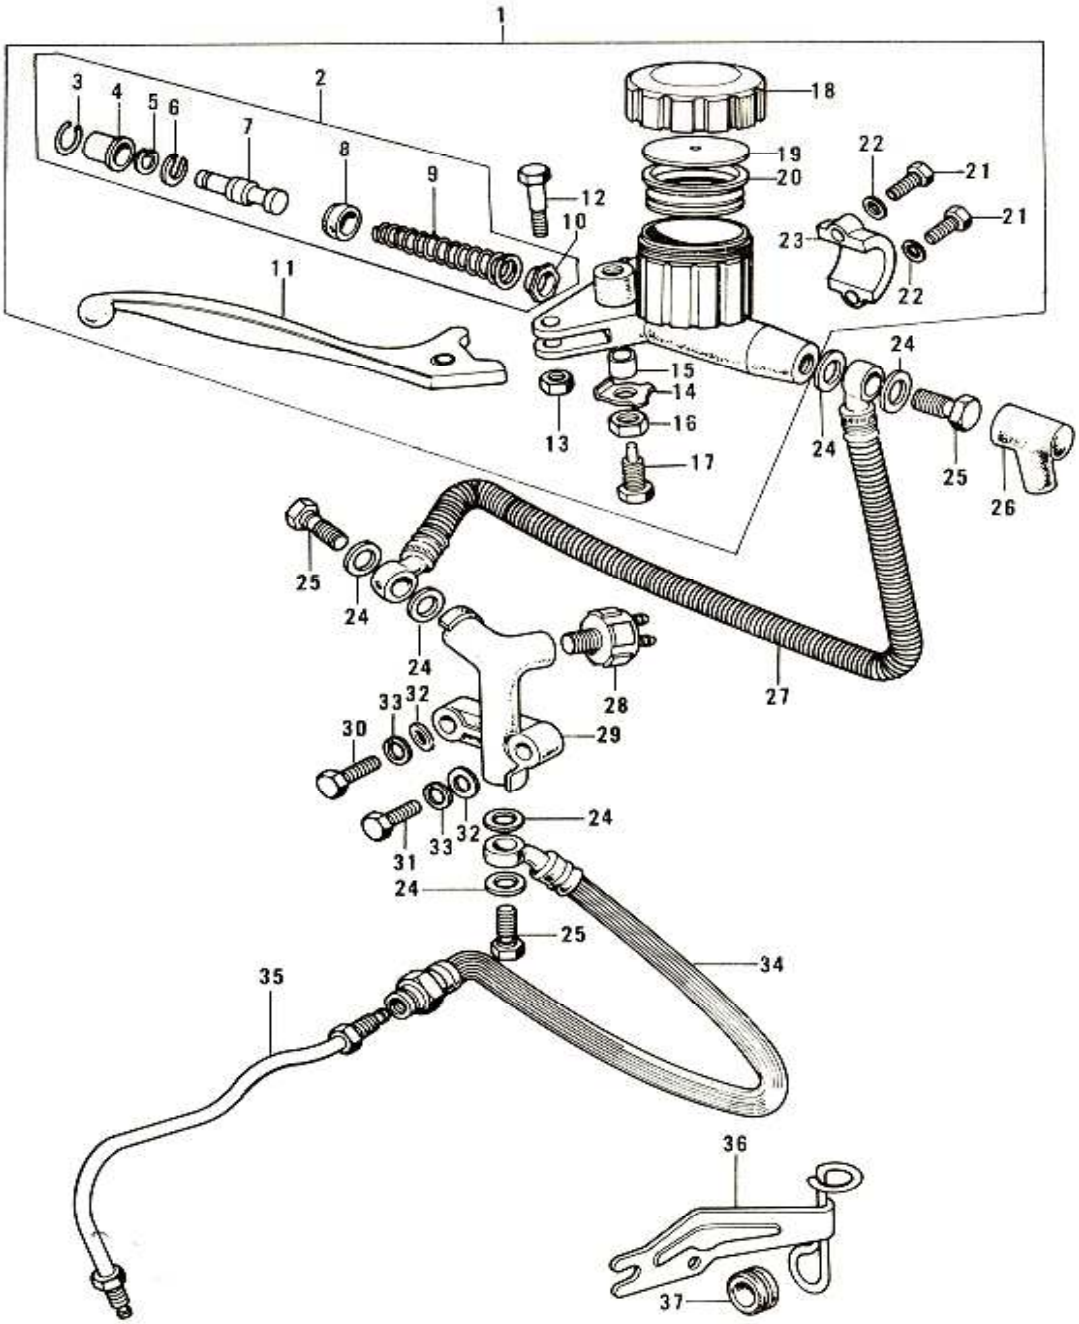

25. Disc Brake Equipment A

No.	Part No.	Q'TY	PART NAME	
1	~~43015-009~~	1	CYLINDER ASSY, master	**NLA**
2	43073-001	1	REPAIR SET, master cylinder	
3	~~43025-001~~	1	STOPPER, boots	**NLA**
4	~~43024-001~~	1	BOOTS	**NLA**
5	481J1-800	1	CIRCLIP, 18mm	
6	~~43022-001~~	1	STOPPER, piston	**NLA**
7	~~43072-001~~	1	PISTON ASSY	**NLA**
8	43019-001	1	CUP, primary	
9	~~43018-001~~	1	SPRING ASSY, return	**NLA**
10	~~43017-001~~	1	VALVE ASSY, check	**NLA**
11	43029-002	1	LEVER, front brake	
12	~~43003-001~~	1	BOLT, lever fitting	**NLA**
13	312B0-600	1	NUT, 6mm	
14	43031-001	1	WASHER, lock, 8mm	
15	~~43074-001~~	1	TUBE	**NLA**
16	311B0-800	1	NUT, 8mm	
17	~~43030-002~~	1	BOLT, lever adjusting	**NLA**
18	43026-003	1	CAP, oil cup	
19	43027-001	1	PLATE, master cylinder	
20	43028-001	1	DIAPHRAGM	
21	110N0-625	2	BOLT, hex head, 6x25	
22	411B0-600	2	WASHER, plain, 6mm	
23	~~43034-001~~	1	HOLDER, master cylinder	**NLA**
24	43067-001	6	WASHER, oil bolt	
25	43066-001	3	BOLT, oil	
26	43069-001	1	COVER, dust	
27	43059-007	1	HOSE, front brake	
28	43065-001	1	SWITCH, front brake	
29	~~43061-002~~	1	JOINT, three way	**NLA**
30	~~110N0-632~~	1	BOLT, hex head, 6x32	**NLA**
31	110N0-640	1	BOLT, hex head, 6x40	
32	461F0-600	2	WASHER, spring, 6mm	
33	411B0-600	2	WASHER, plain, 6mm	
34	43059-011	1	HOSE, front brake	
35	~~43060-009~~	1	PIPE, front brake	**NLA**
36	43063-001	1	BRACKET, brake hose	
37	43064-001	1	GROMMET, hose bracket	


26. Disc Brake Equipment B

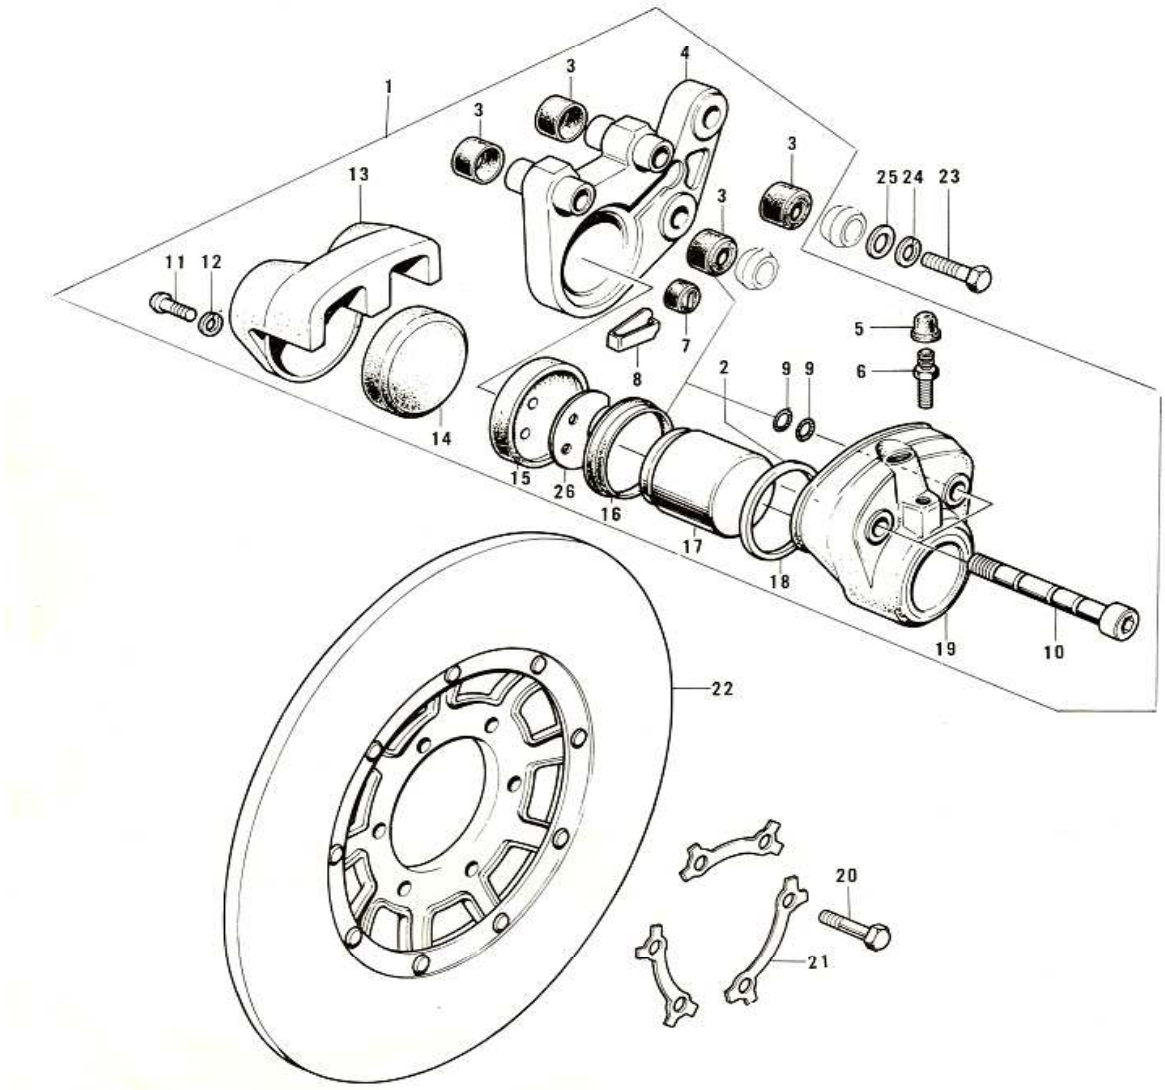

26. Disc Brake Equipment B

No.	Part No.	Q'TY	PART NAME	
1	~~43041-004~~	1	CALIPER ASSY	**NLA**
2	~~43073-004~~	1	REPAIR SET, caliper	**NLA**
3	43052-003	4	DUST SEAL, shaft	
4	~~43044-004~~	1	HOLDER, caliper	**NLA**
5	43057-002	1	CAP, breeder	
6	43056-002	1	BREEDER	
7	43047-001	1	BUSHING, rubber	
8	~~43046-001~~	1	STOPPER, pad A	**NLA**
9	43053-002	4	O-RING, shaft	
10	~~43045-003~~	2	SHAFT	**NLA**
11	220B0-612	1	SCREW, pan head, 6x12	
12	461F0-600	1	WASHER, spring, 6mm	
13	~~43043-003~~	1	CALIPER B	**NLA**
14	~~43051-001~~	1	PAD B	**NLA**
15	~~43050-002~~	1	PAD A	**NLA**
16	43054-002	1	DUST SEAL, piston	
17	~~43048-002~~	1	PISTON, caliper	**NLA**
18	43049-002	1	RING, piston seal	
19	~~43042-004~~	1	CALIPER A	**NLA**
20	~~92001-104~~	6	BOLT, hex head, 8x28	**NLA**
21	~~92088-014~~	3	WHASER, lock, 8mm	**NLA**
22	~~41080-001~~	1	DISC PLATE, front brake	**NLA**
23	~~43070-001~~	2	BOLT, hex head, 10x43	**NLA**
24	461F1-000	2	WASHER, spring, 10mm	
25	410B1-000	2	WASHER, plain, 10mm	
26	~~43076-001~~	1	SHIM	**NLA**


27. Front Fork

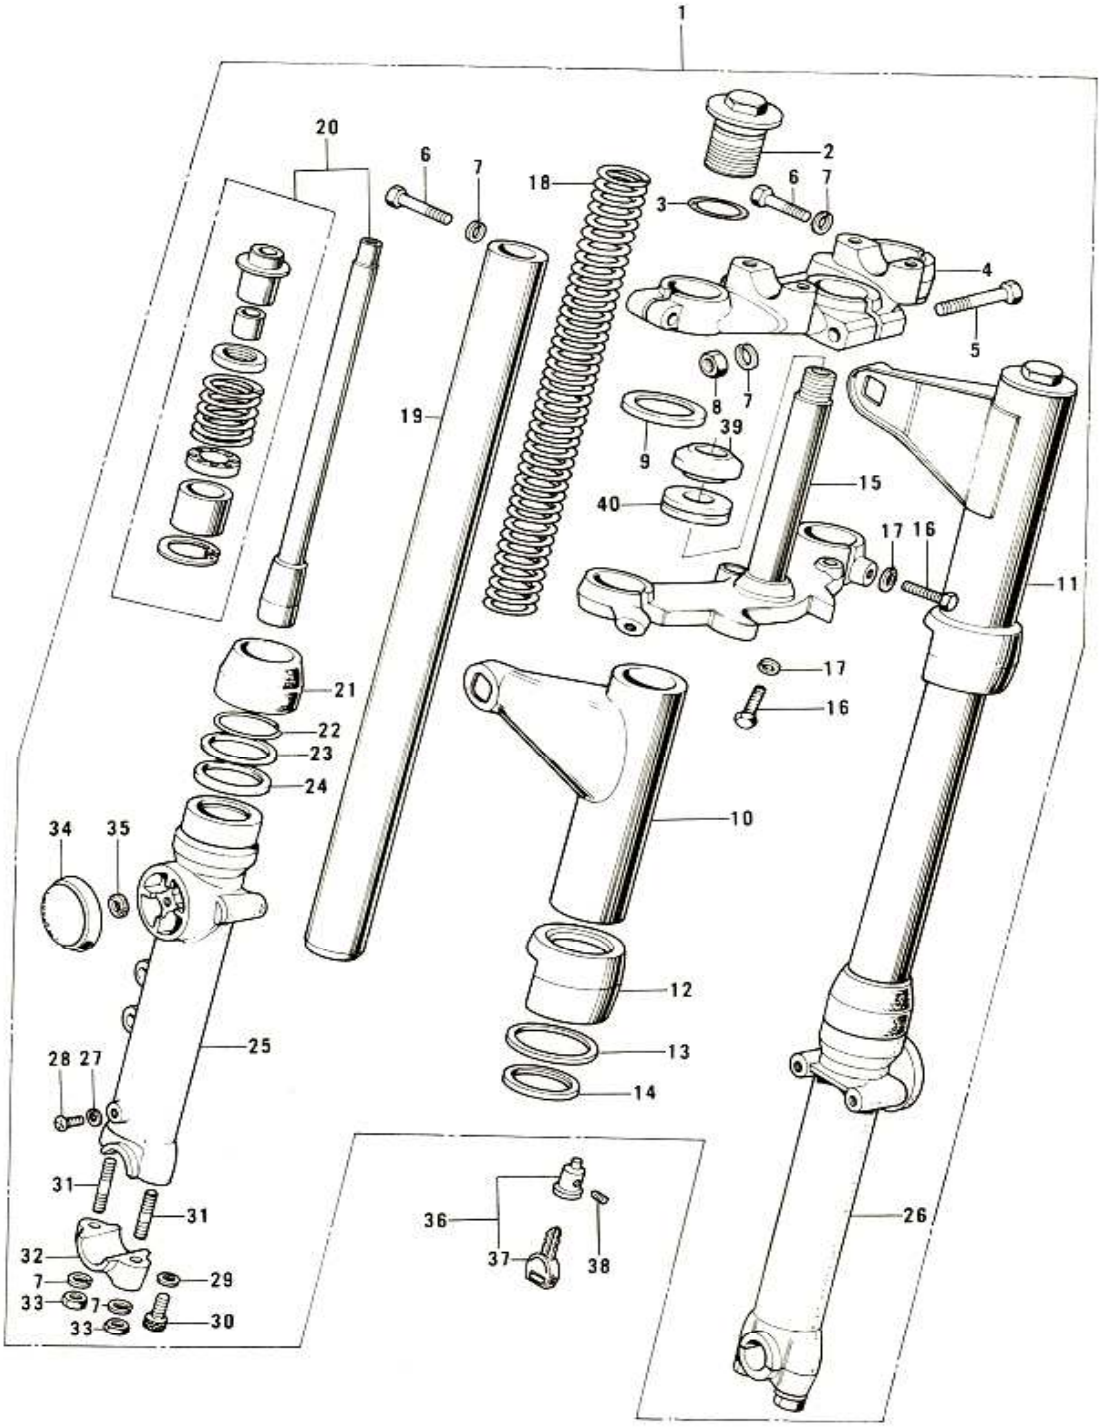


27. Front Fork

No.	Part No.	Q'TY	PART NAME	
1	~~44001-163~~	1	FRONT FORK ASSY	**NLA**
2	~~44062-003~~	2	BOLT, fork top	**NLA**
3	~~44046-015~~	2	O-RING, fork top	**NLA**
4	~~44039-045~~	1	HEAD, steering stem	**NLA**
5	44041-038	1	BOLT, hex head, 8x56	
6	44041-048	2	BOLT, hex head, 8x35	
7	461F0-800	7	WASHER, spring, 8mm	
8	~~310N0-800~~	1	NUT, 8mm	**NLA**
9	44064-005	2	WASHER, fork cover	
10	~~44033-072~~	1	COVER, LH fork	**NLA**
11	~~44034-072~~	1	COVER, RH fork	**NLA**
12	~~44064-006~~	2	GUIDE, fork cover	**NLA**
13	~~44064-008~~	2	WASHER, fork cover guide	**NLA**
14	44045-038	2	GASKET, fork cover	
15	~~44037-063~~	1	STEM, steering	**NLA**
16	92003-064	2	BOLT, hex head, 12x36	
17	461F1-200	2	WASHER, spring, 12mm	
18	~~44026-042~~	2	SPRING, fork	**NLA**
19	44013-037	2	TUBE, fork inner	
20	~~44022-028~~	2	CYLINDER, fork	**NLA**
21	44010-018	2	DUST SHIELD, fork	
22	44044-012	2	CIRCLIP	
23	44043-044	2	WASHER, plain	
24	44009-014	2	OIL SEAL	
25	~~44005-045~~	1	TUBE, LH fork outer	**NLA**
26	~~44006-043~~	1	TUBE, RH fork outer	**NLA**
27	44045-002	2	GASKET, fork drain	
28	220B0-408	2	SCREW, pan head, 4x8	
29	44045-034	2	GASKET, fork cylinder bolt	
30	44041-040	2	BOLT, fork cylinder	
31	172G0-835	4	STUD, 8x35	
32	~~44063-003~~	2	HOLDER, front axle	**NLA**
33	311B0-800	4	NUT, 8mm	
34	~~44062-005~~	2	CAP, fork outer tube	**NLA**
35	92094-011	2	RUBBER, reflector	
36	27016-027	1	LOCK ASSY, steering	
37	~~27008-0465-1~~	1	KEY SET, #751	**NLA**
37	~~27008-0465-2~~	1	KEY SET, #752	**NLA**
37	~~27008-0465-3~~	1	KEY SET, #753	**NLA**
37	~~27008-0465-4~~	1	KEY SET, #754	**NLA**
37	~~27008-0465-5~~	1	KEY SET, #755	**NLA**
38	92014-012	1	SCREW, steering lock fitting	
39	92047-012	1	CONE, steering stem	
40	92056-003	1	OIL SEAL, steering stem	

28. Fuel Tank

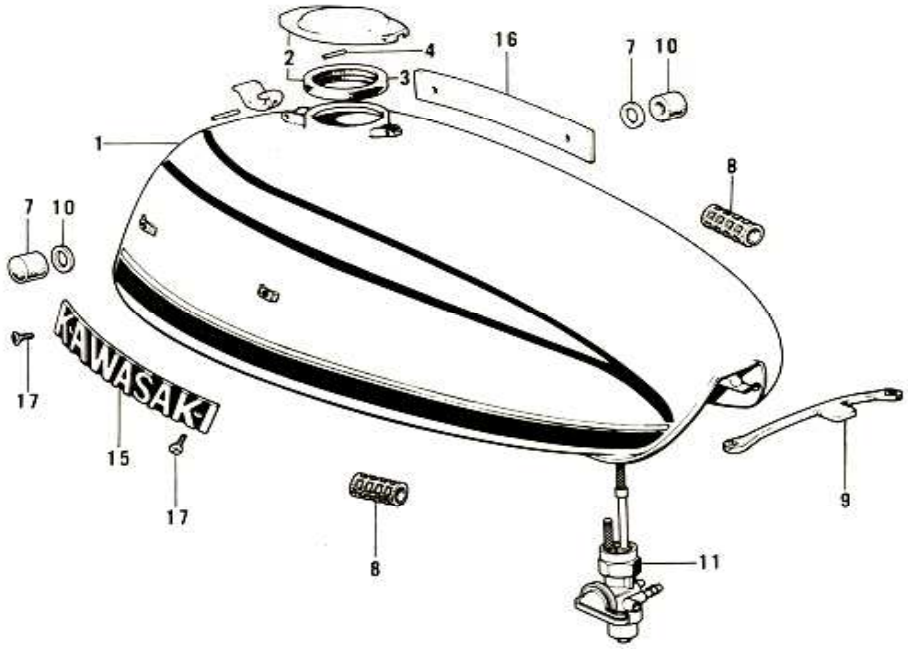


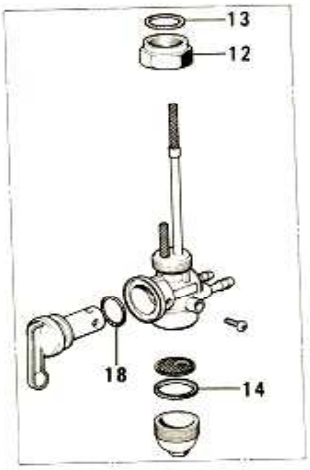

28. Fuel Tank

No.	Part No.	Q'TY	PART NAME	
1	~~51001-096-2R~~	1	TANK, fuel, Candyt. Super Red	**NLA**
1	~~51001-096-2S~~	1	TANK, fuel, Candytone Sky Blue	**NLA**
2	51048-007	1	CAP ASSY, fuel tank	
3	51059-008	1	GASKET, fuel tank cap	
4	~~92043-096~~	1	PIN, fuel tank cap fitting	**NLA**
5	~~92043-091~~	1	PIN, hook	**NLA**
6	~~51063-002~~	1	HOOK, fuel tank	**NLA**
7	92022-044	2	WASHER, plain, 25mm	
8	92075-084	2	RUBBER, fuel tank rear	
9	92072-042	1	BAND, fuel tank	
10	92075-125	2	RUBBER, fuel tank front	
11	51023-043	1	COCK ASSY, fuel	
12	51035-009	1	NUT, fuel cock joint	
13	92065-081	1	GASKET, fuel cock joint	
14	51037-010	1	GASKET, fuel cock cup	
15	56013-054	1	EMBLEM, fuel tank LH	
16	56014-049	1	EMBLEM, fuel tank RH	
17	92012-003	4	SCREW, coutersunk head 3x6	
18	670B0-214	1	O-RING, 14mm	


29. Oil Tank, Side Covers

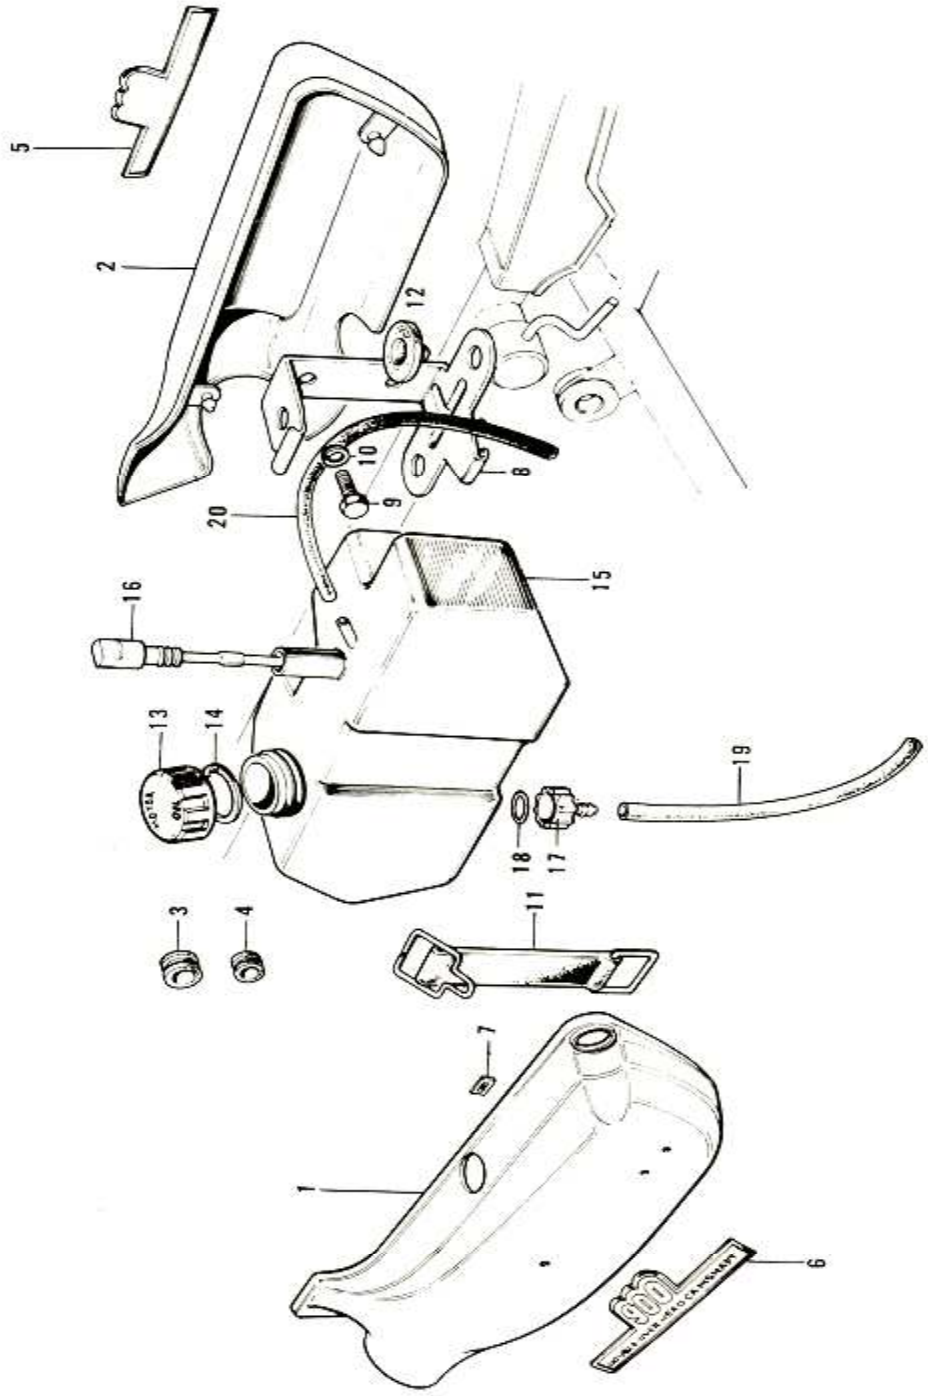

29. Oil Tank, Side Covers

No.	Part No.	Q'TY	PART NAME	
1	~~36001-0362-R~~	1	COVER, LH side, Candyt. Super Red	**NLA**
1	~~36001-0362-S~~	1	COVER, LH side, Candytone Sky Blue	**NLA**
2	~~36007-0302-R~~	1	COVER, RH side, Candyt. Super Red	**NLA**
2	~~36007-0302-S~~	1	COVER, RH side, Candytone Sky Blue	**NLA**
3	92071-056	5	GROMMET, side cover	
4	92071-064	1	GROMMET, side cover	
5	56018-198	1	EMBLEM, side cover, RH	
6	56018-197	1	EMBLEM, side cover, LH	
7	92018-005	6	NUT, 3mm	
8	~~32131-001~~	1	BRACKET, oil tank	**NLA**
9	116B0-612	2	BOLT, hex head, 6x12	
10	461F0-600	2	WASHER, spring, 6mm	
11	92072-045	1	BAND, oil tank	
12	92075-078	3	RUBBER, oil tank bracket	
13	52003-020	1	CAP, oil tank	
14	92065-086	1	GASKET, oil tank cap	
15	~~52001-031~~	1	TANK, oil	**NLA**
16	~~52005-005~~	1	GAUGE, oil level	**NLA**
17	52020-001	1	FILTER, oil tank	
18	670B2-015	1	O-RING, 15mm	
19	92059-071	1	PIPE, oil	
20	92059-057	1	PIPE, oil tank breather	


30. Dual Seat, Chain Cover

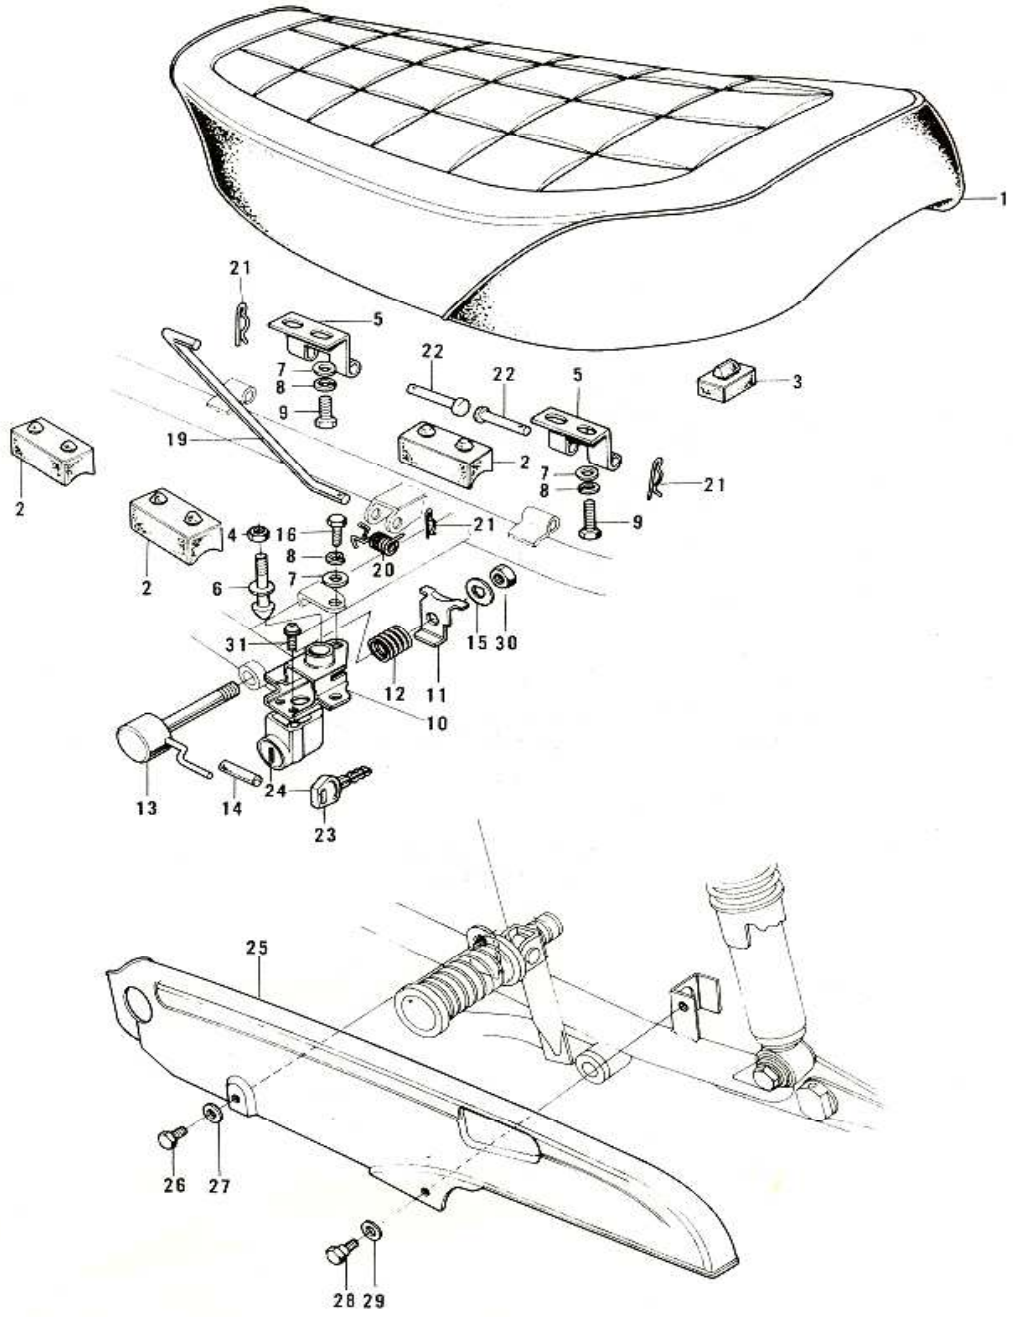

30. Dual Seat, Chain Cover

No.	Part No.	Q'TY	PART NAME	
1	53001-083	1	SEAT ASSY, dual	
2	92075-139	4	DAMPER RUBBER, seat	
3	92075-099	1	DAMPER RUBBER, seat	
4	312B0-800	1	NUT, 8mm	
5	~~53009-017~~	2	HINGE, seat	**NLA**
6	53056-001	1	CATCH, seat	
7	411B0-600	4	WASHER, plain, 6mm	
8	461F0-600	4	WASHER, spring, 6mm	
9	110B0-614	4	BOLT, hex head, 6x14	
10	~~53050-001~~	1	HOUSING, seat catch	**NLA**
11	~~53051-001~~	1	PLATE, seat catch	**NLA**
12	~~53053-001~~	1	SPRING, lever	**NLA**
13	53052-001	1	LEVER, seat catch	
14	~~92102-011~~	1	CAP, lever	**NLA**
15	~~92088-017~~	1	WASHER, lock	**NLA**
16	110N0-616	2	BOLT, hex head, 6x16	
17	461F0-600	2	WASHER, spring, 6mm	
18	411B0-600	2	WASHER, plain, 6mm	
19	53054-001	1	STOPPER, seat	
20	53055-001	1	SPRING, seat stopper	
21	92041-003	3	PIN, cotter	
22	53011-002	2	PIN, seat pivot	
23	27030-001	1	LOCK ASSY, seat	
24	~~27008-0465-1~~	1	KEY SET, #751	**NLA**
24	~~27008-0465-2~~	1	KEY SET, #752	**NLA**
24	~~27008-0465-3~~	1	KEY SET, #753	**NLA**
24	~~27008-0465-4~~	1	KEY SET, #754	**NLA**
24	~~27008-0465-5~~	1	KEY SET, #755	**NLA**
25	36014-061	1	COVER, chain	
26	~~110N0-618~~	1	BOLT, hex head, 6x18	**NLA**
27	92022-125	1	WASHER, plain, 6mm	
28	92001-115	1	BOLT, hex head, 6x14	
29	92022-195	1	WASHER, plain, 6mm	
30	312B0-600	1	NUT, 6mm	
31	220B0-514	2	SCREW-pan head, 5x14	


31. Cables

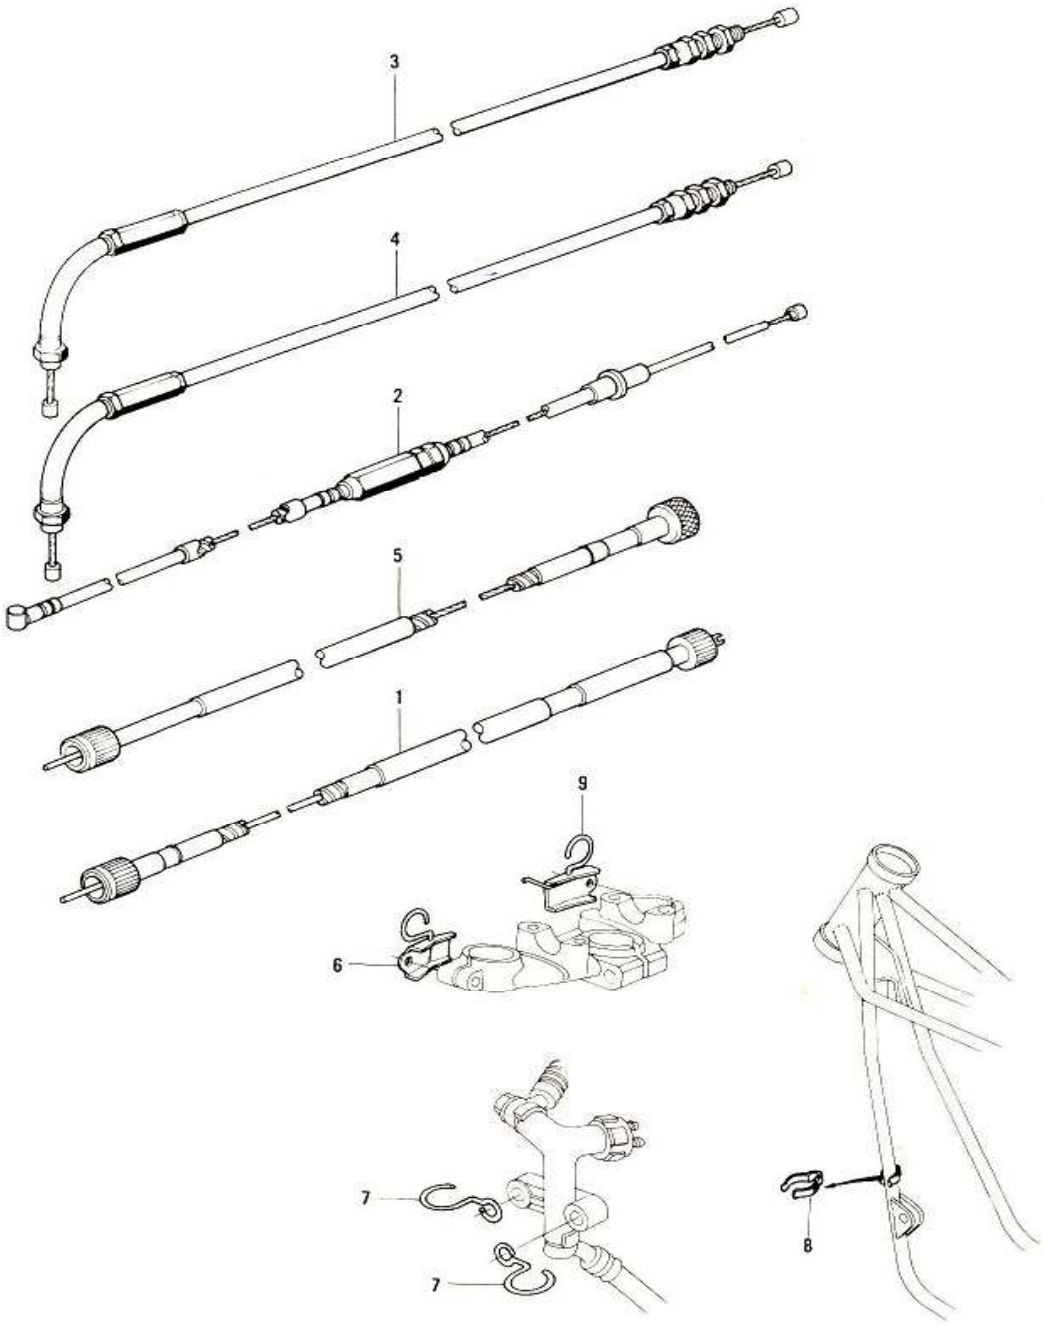

31. Cables

No.	Part No.	Q'TY	PART NAME	
1	54001-040	1	CABLE, speedometer	
1	54001-1005	1	CABLE, speedometer	**+ 5cm**
2	54011-048	1	CABLE, clutch	
3	54012-081	1	CABLE, control closing	
4	~~54012-087~~	1	CABLE, control opening	**NLA**
5	54018-015	1	CABLE, tachometer	
6	~~92037-090~~	1	CLAMP, cable	**NLA**
7	92037-092	2	CLAMP, cable	
8	92037-093	1	CLAMP, cable	
9	~~92037-104~~	1	CLAMP, cable	**NLA**


32. Electrical Equipments A 1/2

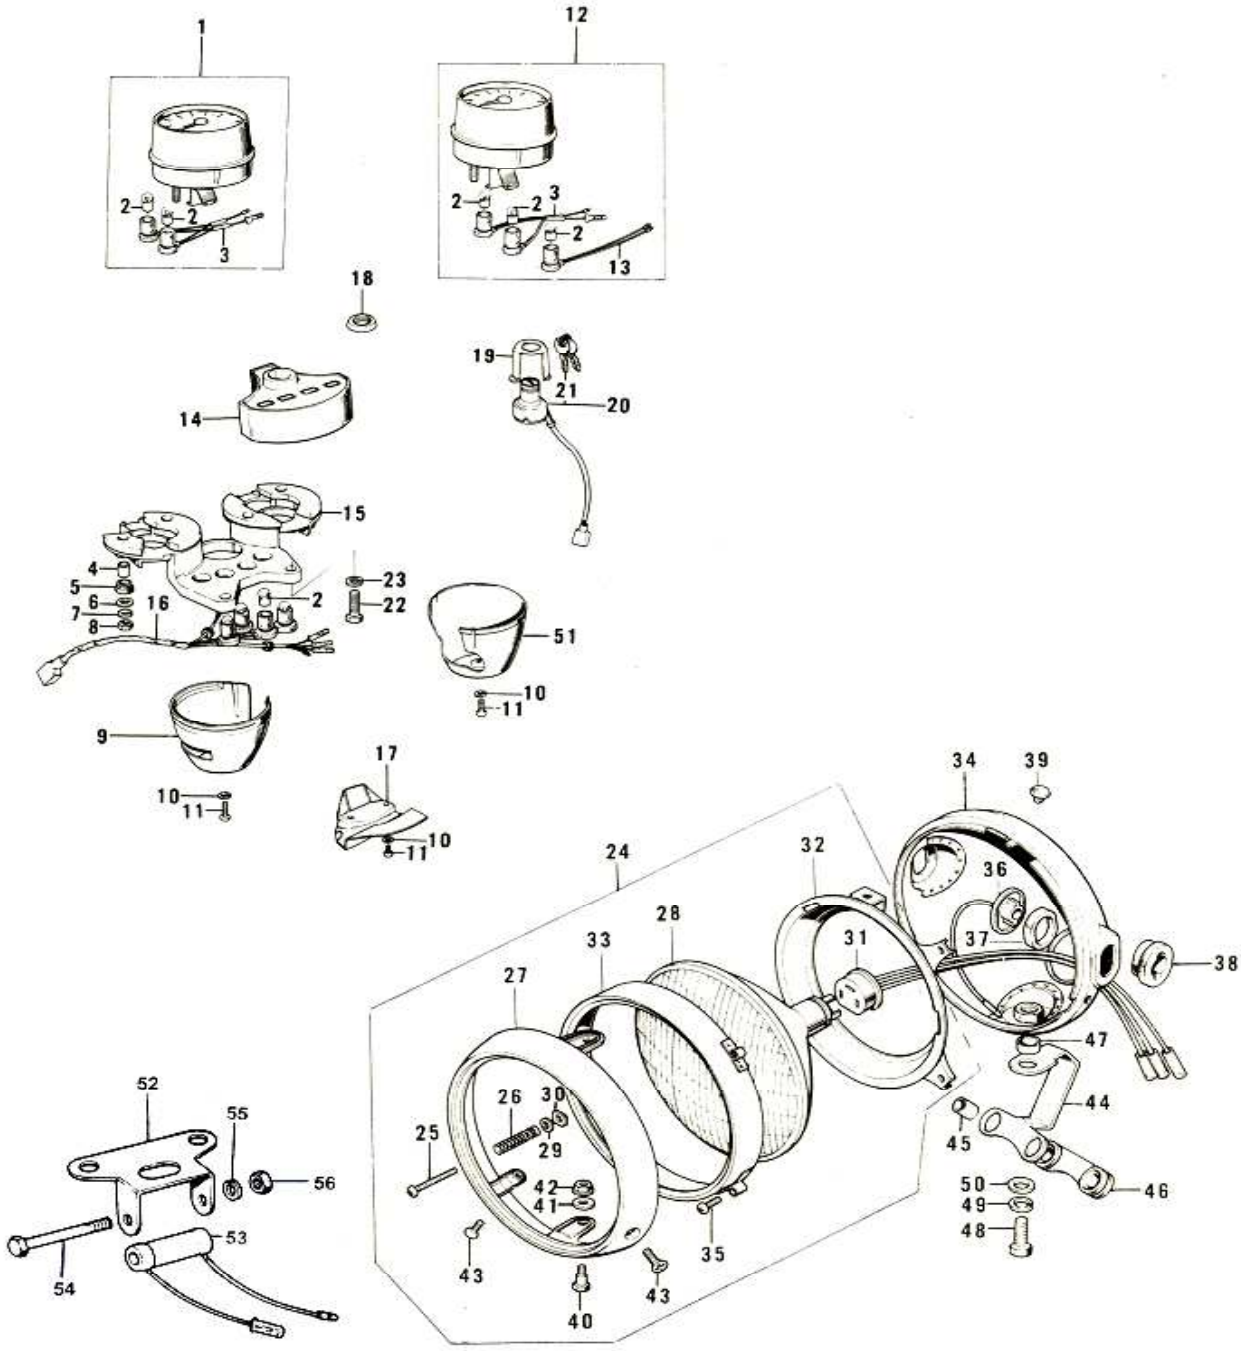

32. Electrical Equipments A 1/2

No.	Part No.	Q'TY	PART NAME	
1	25002-065	1	SPEEDOMETER ASSY, KMH	
2	92069-018	9	BULB, 12V-3W (10-12929)	
3	25011-027	2	SOCKET ASSY, meter	
4	92027-174	4	COLLAR, meter	
5	92075-172	4	DAMPER RUBBER, meter	
6	92022-241	4	WASHER, plain, 5mm	
7	461F0-500	4	WASHER, spring, 5mm	
8	312B0-500	4	NUT, 5mm	
9	25012-010	1	COVER, speedometer	
10	461F0-300	5	WASHER, spring, 3mm	
11	220B0-308	5	SCREW, pan head, 3x8	
12	25015-025	1	TACHOMETER ASSY	
13	~~25011-043~~	1	SOCKET ASSY, tachometer	**NLA**
14	~~25023-011~~	1	COVER, indicator lamp	**NLA**
15	25008-036	1	BRACKET , meter	
16	~~25011-042~~	1	SOCKET ASSY, indicator lamp	**NLA**
17	~~25024-001~~	1	COVER, wiring harness	**NLA**
18	~~27007-004~~	1	NUT, ignition switch lock	**NLA**
19	~~27019-003~~	1	HOLDER, igniton switch	**NLA**
20	~~27005-042~~	1	SWITCH ASSY, ignition	**NLA**
21	~~27008-0465-1~~	1	KEY SET, #751	**NLA**
21	~~27008-0465-2~~	1	KEY SET, #752	**NLA**
21	~~27008-0465-3~~	1	KEY SET, #753	**NLA**
21	~~27008-0465-4~~	1	KEY SET, #754	**NLA**
21	~~27008-0465-5~~	1	KEY SET, #755	**NLA**
22	~~110N0-832~~	2	BOLT, hex head, 8x32	**NLA**
23	461F0-800	2	WASHER, spring, 8mm	
24	~~23004-058~~	1	LAMP UNIT, head	**NLA**
25	23019-021	1	SCREW, focus adjusting	
26	23014-005	1	SPRING, focus adjusting	
27	23006-038	1	RIM, head lamp	
28	23007-041	1	SEALD BEAM UNIT	
29	23021-004	1	WASHER, plain, 5mm	
30	23020-018	1	NUT, 5mm	
31	~~23008-037~~	1	SOCKET, head lamp	**NLA**
32	23074-001	1	RING, head lamp mounting	
33	23072-001	1	RING, head lamp mounting	
34	~~23005-0372-1~~	1	BODY, head lamp	**NLA**
35	220B0-306	2	SCREW, pan head, 3x6	
36	23076-005	2	COLLAR, head lamp body	
37	23066-016	2	DAMPER RUBBER, lamp body	
38	23066-015	2	DAMPER RUBBER, lamp body	
39	92074-006	1	PLUG, rubber	


32. Electrical Equipments A 2/2

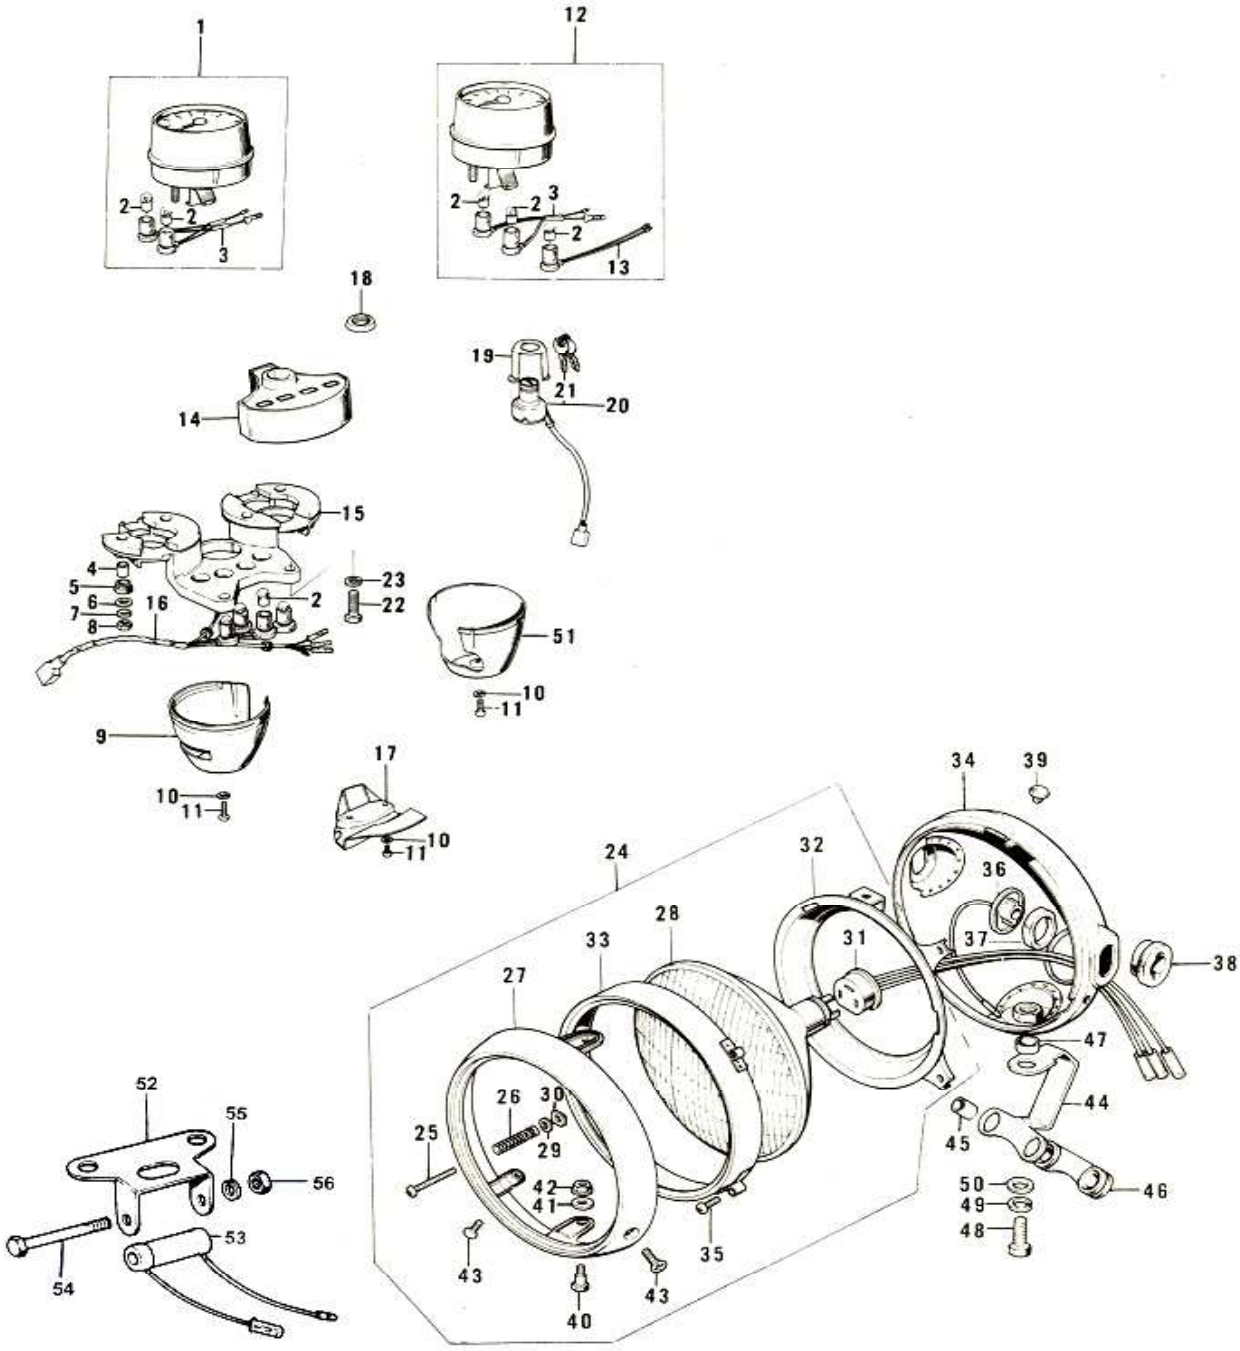


32. Electrical Equipments A 2/2

No.	Part No.	Q'TY	PART NAME	
40	23019-023	2	SCREW, pan head, 5x12	
41	23021-012	2	WASHER, plain, 5mm	
42	23020-020	2	NUT, 5mm	
43	23019-022	2	SCREW, pan head, 5mm	
44	~~23064-009~~	1	BRACKET, head lamp body	**NLA**
45	92027-241	2	COLLAR	
46	~~92075-127~~	1	DAMPER RUBBER, head lamp	**NLA**
47	~~92027-167~~	1	COLLAR, head lamp	**NLA**
48	116B0-818	1	BOLT, hex head, 8x18	
49	461F0-800	1	WASHER, spring, 8mm	
50	411B0-800	1	WASHER, plain, 8mm	
51	25012-011	1	COVER, tachometer	
52	~~32122-034~~	1	BRACKET, resistor	**NLA**
53	26019-005	1	RESISTOR, 20W-0.5	
54	~~110B0-863~~	1	BOLT, hex head, 8x63	**NLA**
55	461F0-800	1	WASHER, spring, 8mm	
56	310B0-800	1	NUT, 8mm	

33. Electrical Equipments B

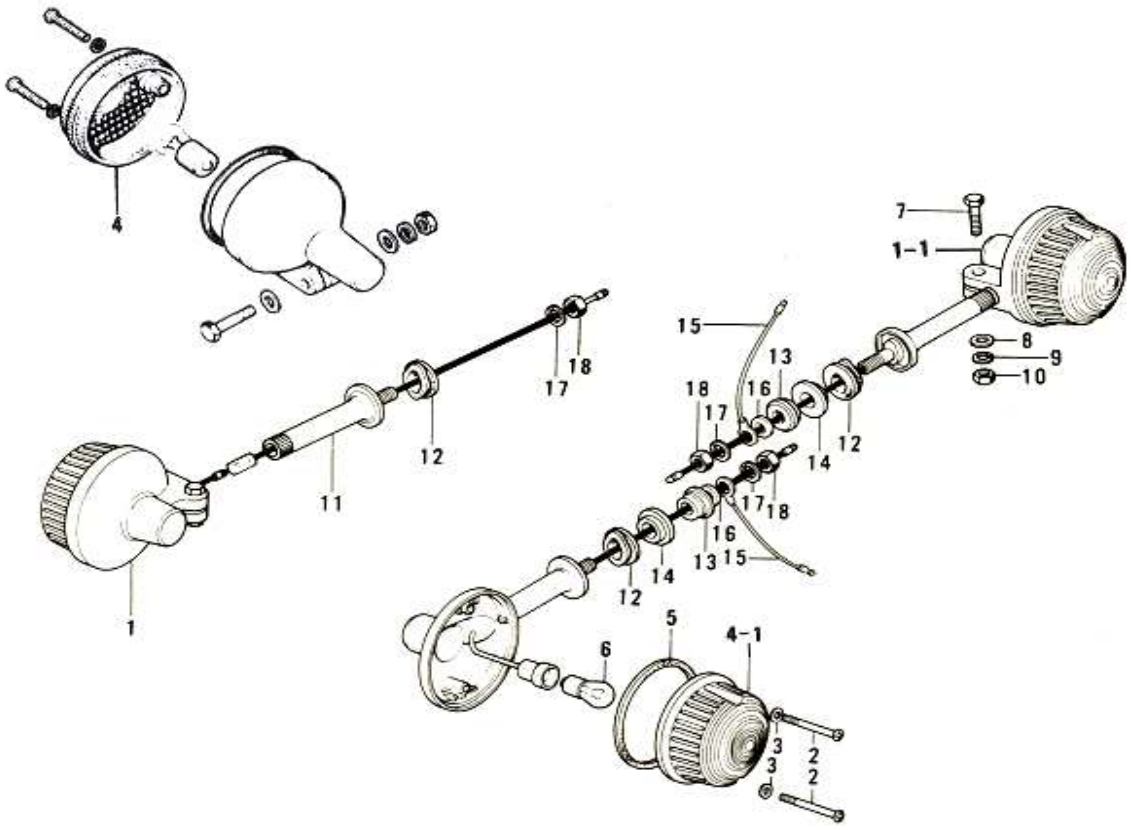


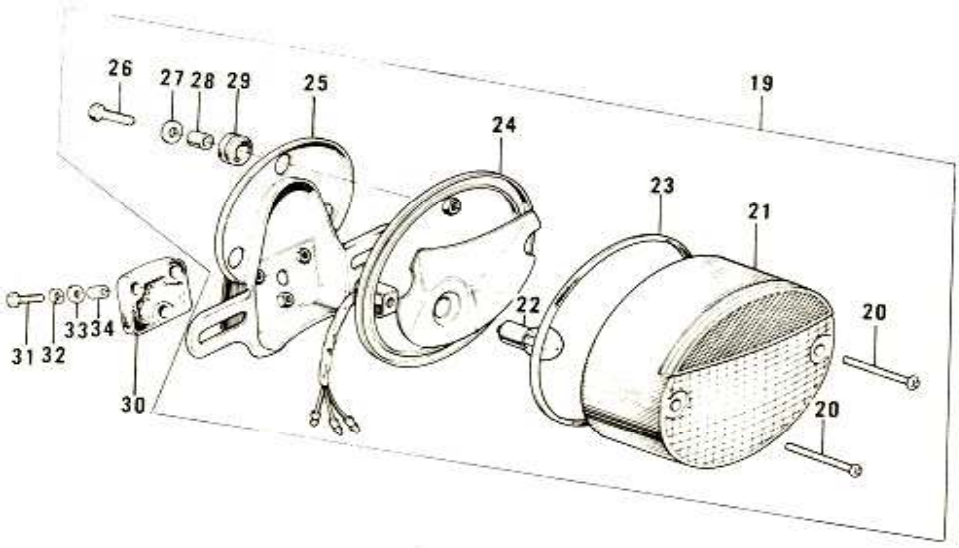

33. Electrical Equipments B

No.	Part No.	Q'TY	PART NAME	
1	23040-047	2	LAMP ASSY, turn signal front	
1-1	~~23040-048~~	2	LAMP ASSY, turn signal rear	**NLA**
2	220B0-430	8	SCREW, pan head, 4x30	
3	23058-002	8	WASHER, plain, 4mm	
4	23048-012	2	LENS, turn signal lamp front	
4-1	23048-015	2	LENS, turn signal lamp rear	
5	23050-002	4	GASKET, turn signal lamp lens	
6	92069-055	4	BULB, 12V-32cp	
7	110N0-630	4	BOLT, hex head, 6x30	
8	411B0-600	4	WASHER, plain, 6mm	
9	461F0-600	4	WASHER, spring, 6mm	
10	311B0-600	4	NUT, 6mm	
11	23078-001	4	BRACKET, turn signal lamp	
12	92075-128	4	RUBBER, turn signal lamp	
13	92027-147	2	COLLAR	
14	92075-158	2	RUBBER, turn signal lamp	
15	26011-063	2	WIRE, turn signal lamp lead	
16	92022-239	2	WASHER, plain	
17	461F1-000	4	WASHER, spring, 10mm	
18	315B1-000	4	NUT, 10mm	
19	~~23024-043~~	1	LAMP ASSY, tail	**NLA**
20	220E0-435A	2	SCREW, pan head, 4x35	
21	23026-027	1	LENS, tail lamp	
22	92069-039	1	BULB, 12V-32/4cp	
23	23028-018	1	GASKET, tail lamp	
24	~~23027-036~~	1	CASE, tail lamp	**NLA**
25	~~23036-033~~	1	BRACKET, license plate	**NLA**
26	110B0-622	3	BOLT, hex head, 6x22	
27	92022-125	3	WASHER, plain, 6mm	
28	92027-129	3	COLLAR	
29	92075-076	3	DAMPER RUBBER	
30	35039-004	1	SHOCK DAMPER, tail lamp	
31	110B0-625	3	BOLT, hex head, 6x25	
32	461F0-600	3	WASHER, plain, 6mm	
33	92027-156	3	COLLAR	
34	92075-121	3	DAMPER RUBBER	


34. Electrical Equipments C

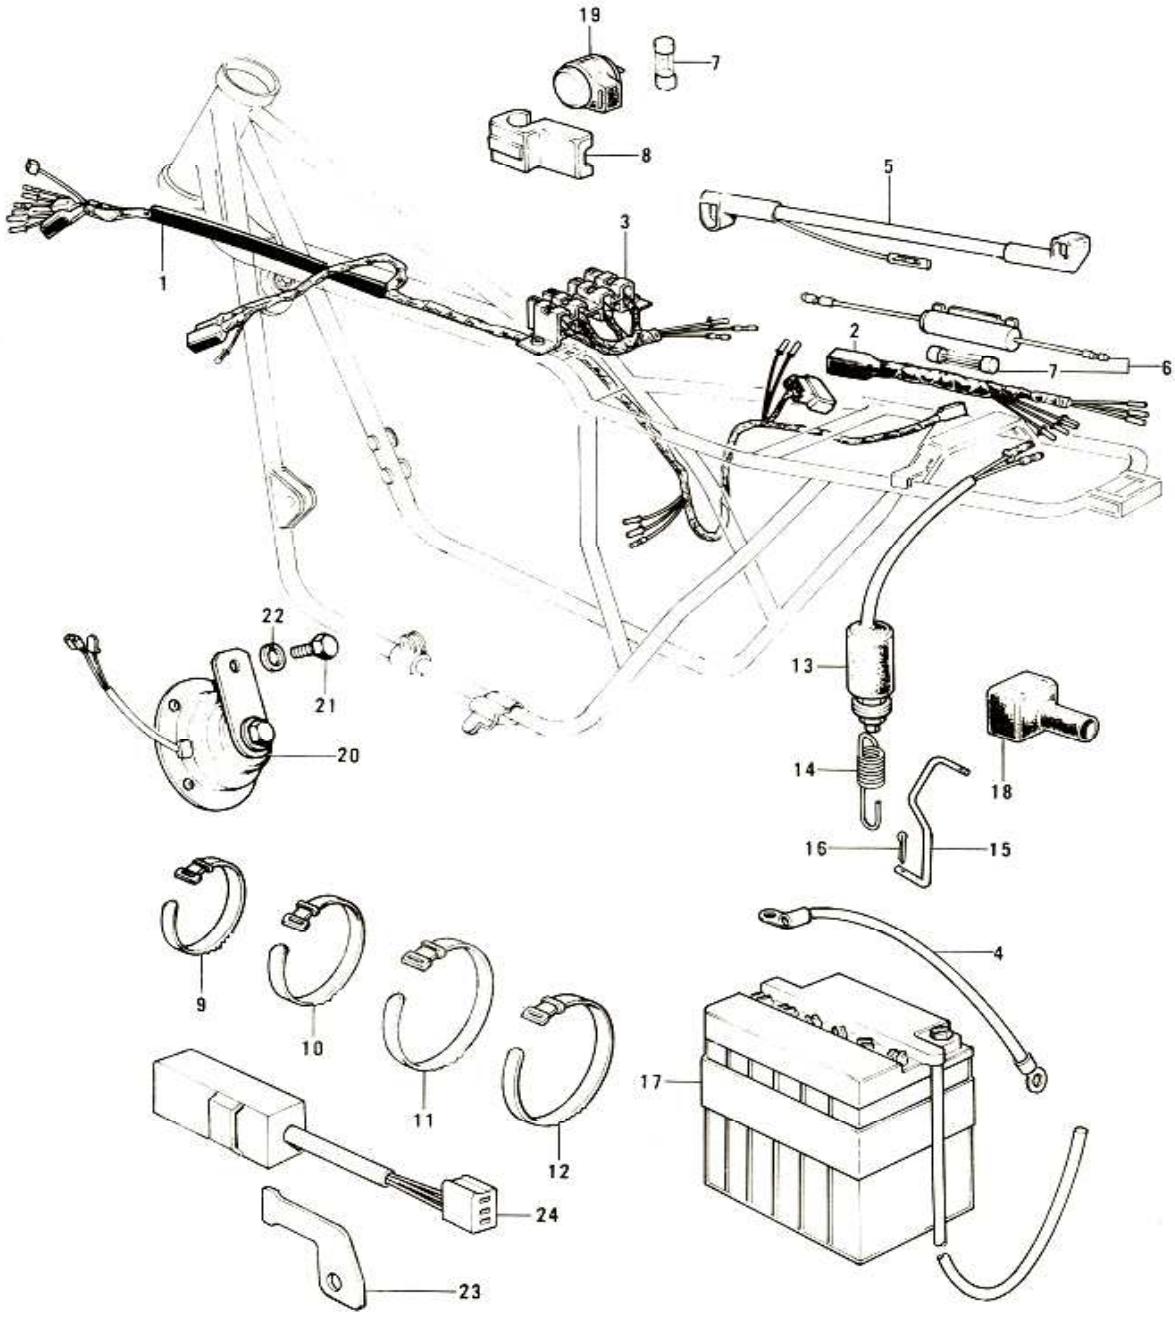

34. Electrical Equipments C

No.	Part No.	Q'TY	PART NAME	
1	~~26001-111~~	1	WIRING HARNESS, main	**NLA**
2	~~26002-031~~	1	WIRING HARNESS, rear	**NLA**
3	~~26002-035~~	1	WIRING HARNESS, center	**NLA**
4	~~26010-028~~	1	WIRE, battery ground	**NLA**
5	26010-027	1	WIRE, starter	
6	26004-013	1	FUSE ASSY	
7	26006-002	1	FUSE 20A	
8	~~26016-002~~	1	HOLDER, spare fuse	**NLA**
9	92072-030	10	BAND, rubber, small	
10	92072-031	4	BAND, rubber, middle	
11	~~92072-032~~	2	BAND, rubber, large	**NLA**
12	92072-056	4	BAND, rubber	
13	~~27010-017~~	1	SWITCH, brake lamp	**NLA**
14	27011-009	1	SPRING, brake lamp switch	
15	27012-010	1	HOOK, brake lamp switch	
16	550D1-610	1	PIN, cotter, 1.6x10	
17	26012-027	1	BATTERY, 12V-14AH	
18	~~92075-162~~	1	RUBBER, battery	**NLA**
19	27002-011	1	RELAY, turn signal	
20	~~27003-046~~	1	HORN	**NLA**
21	110B0-814	1	BOLT, hex head, 8x14	
22	461F0-800	1	WASHER, spring, 8mm	
23	32060-014	1	BRACKET, outage switch	
24	~~28019-001~~	1	SWITCH, outage indicator	**NLA**


35. Tools

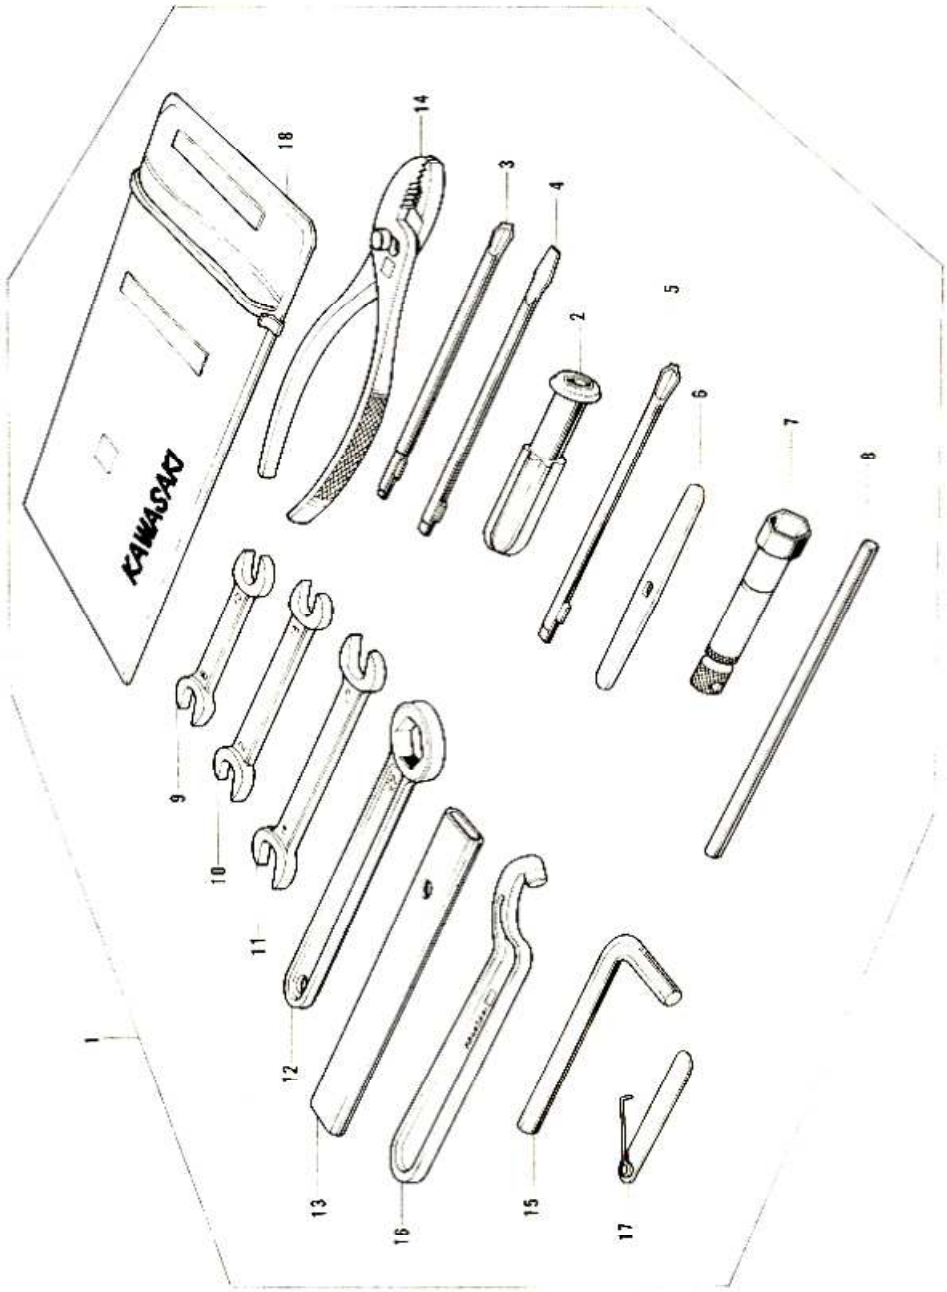

35. Tools

No.	Part No.	Q'TY	PART NAME	
1	~~56007-029~~	1	TOOL KIT	**NLA**
2	92106-004	1	GRIP, screw driver	
3	92107-006	1	SCREW DRIVER, #2 phillips	
4	92107-007	1	SCREW DRIVER, #3 slot	
5	92107-008	1	SCREW DRIVER, #3 phillips	
6	92110-1009	1	LEVER, screw driver	
7	92110-1050	1	WRENCH, spark plug	
8	92111-005	1	BAR, spark plug wrench	
9	92126-001	1	WRENCH, open end, 8x10	
10	~~92126-002~~	1	WRENCH, open end, 12x13	**NLA**
11	92110-1153	1	WRENCH, open end, 14x17	
12	92110-1147	1	WRENCH, box, 27mm	
13	92111-1052	1	BAR, wrench	
14	92112-003	1	PLIERS, 150mm	
15	~~92127-001~~	1	WRENCH, allen, 10mm	**NLA**
16	~~92108-007~~	1	ADJUSTER, rear shock absorber	**NLA**
17	~~92128-001~~	1	GAUGE, filler	**NLA**
18	56008-006	1	BAG, tool	

36. Special Service Tools

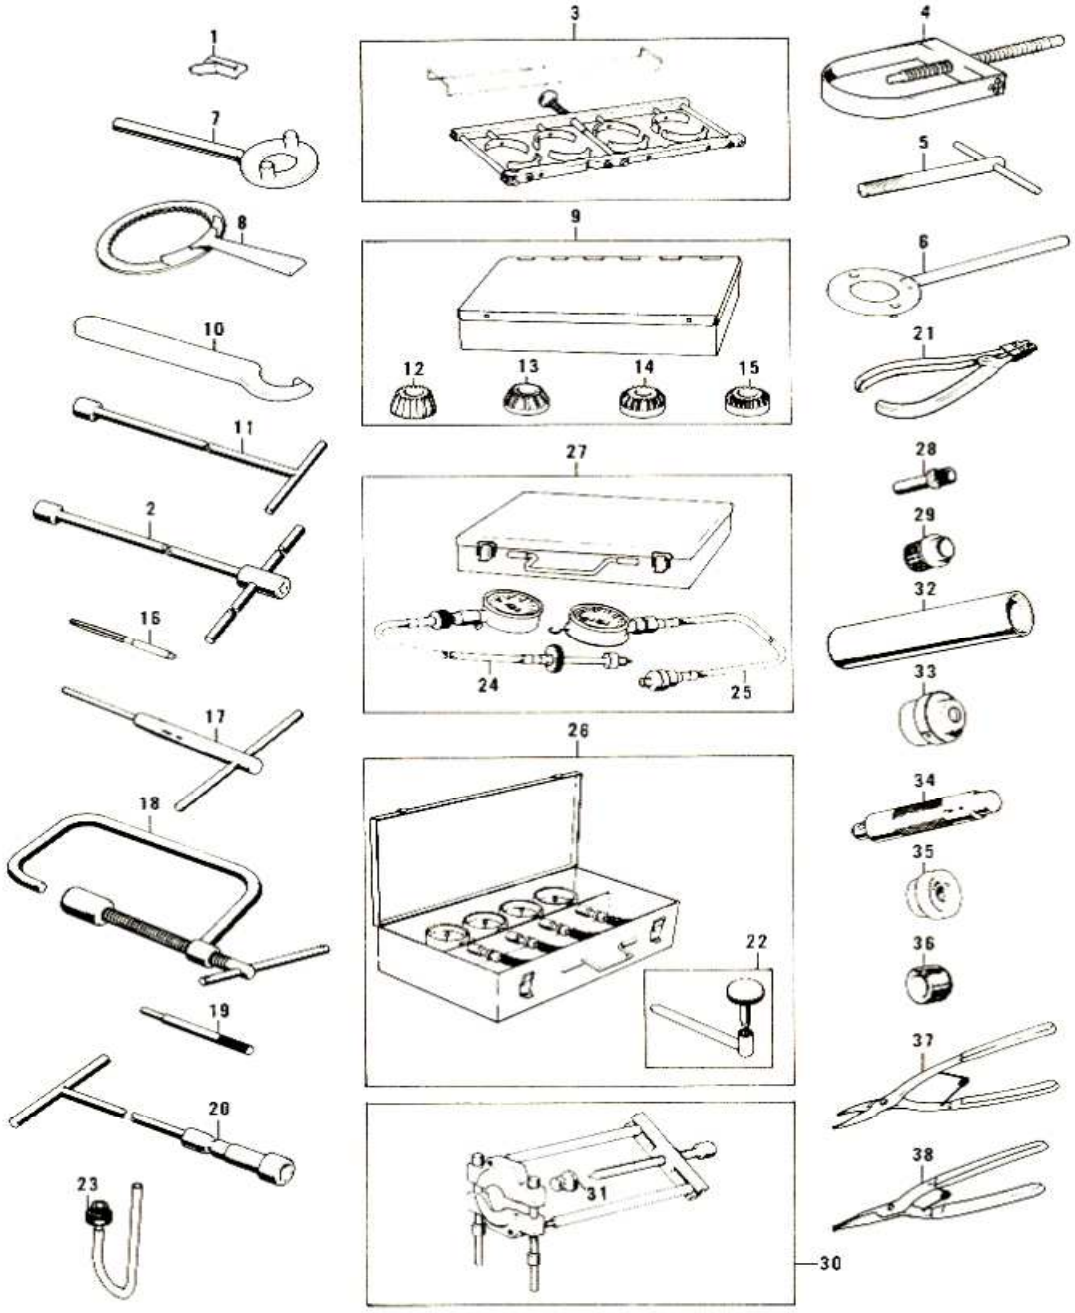

36. Special Service Tools

No.	Part No.	Q'TY	PART NAME	
1	57001-109	1	HOLDER, tappet	
2	~~57001-111~~	1	WRENCH, cylinder head bolt	**NLA**
3	~~57001-112~~	1	COMPRESSOR SET, piston ring	**NLA**
4	57001-114	1	PULLER, piston pin	
5	57001-1099	1	PULLER, dynamo rotor	
6	~~57001-117~~	1	HOLDER, dynamo rotor	**NLA**
7	~~57001-118~~	1	HOLDER, engine sprocket	**NLA**
8	57001-1243	1	HOLDER, clutch hub	
9	~~57001-128~~	1	CUTTER SET, valve seat	**NLA**
10	57001-134	1	WRENCH, stem nut	
11	~~57001-142~~	1	SOCKET, front fork piston	**NLA**
12	~~57001-101~~	1	CUTTER, valve seat, 30°	**NLA**
13	~~57001-102~~	1	CUTTER, valve seat, 45°	**NLA**
14	~~57001-103~~	1	CUTTER, valve seat, 60°	**NLA**
15	~~57001-104~~	1	CUTTER, valve seat, 60°	**NLA**
16	57001-162	1	REAMER, valve guide	
17	57001-106	1	HOLDER, valve seat cutter	
18	~~57001-107~~	1	COMPRESSOR, valve spring	**NLA**
19	57001-108	1	ARBOR, valve guide	
20	57001-110	1	WRENCH, spark plug	
21	57001-115	1	PLIERS, piston ring	
22	57001-120	1	ADJUSTER, throttle valve	
23	57001-122	1	GAUGE, float level	
24	57001-123	1	GAUGE, compression	
25	57001-125	1	GAUGE, oil pressure	
26	~~57001-127~~	1	GAUGE, vacuum	**NLA**
27	~~57001-129~~	1	GAUGE SET, oil & compression	**NLA**
28	~~57001-130~~	1	GUIDE, change shaft oil seal	**NLA**
29	57001-131	1	GUIDE, kickshaft oil seal	
30	57001-135	1	PULLER, stem bearing	
31	~~57001-136~~	1	ADAPTER, stem bearing	**NLA**
32	57001-137	1	DRIVER, stem bearing	
33	57001-138	1	DRIVER, stem cup	
34	~~57001-139~~	1	HOLDER, bearing driver	**NLA**
35	57001-140	1	DRIVER, wheel bearing	
36	57001-141	1	DRIVER, fork oil seal	
37	57001-143	1	PLIERS, circlip, inside	
38	57001-144	1	PLIERS, circlip, outside	

No.	Part No.	Picture
3	~~11002-0162-H~~	1.
15	11004-066	1.
1	~~11005-1362-H~~	3.
2	11009-030	3.
1	11011-022	14.
3	~~11012-030~~	14.
2	11013-034	14.
1	~~11022-0052-H~~	1.
2	11023-006	1.
9	110B0-614	30.
19	110B0-620	4.
26	110B0-622	33.
31	110B0-625	33.
8	~~110B0-632~~	21.
13	110B0-656	16.
21	110B0-814	34.
2	110B0-816	21.
20	110B0-818	17.
54	~~110B0-863~~	32.
32	110G0-6125	11.
2	110G0-635	4.
31	110G0-671	11.
21	110G0-836	17.
13	110G0-840	18.
22	~~110G0-856~~	17.
23	110G0-863	17.
70	110N0-516	12.
9	110N0-610	16.
16	110N0-616	30.
26	~~110N0-618~~	30.
3	110N0-620	9.
26	110N0-625	20.
21	110N0-625	25.
7	110N0-630	33.
30	~~110N0-632~~	25.
31	110N0-640	25.
22	~~110N0-832~~	32.
49	112G0-625	17.
19	113B1-022	21.
24	~~113B1-256A~~	17.
25	~~113B1-271A~~	17.
18	113N1-035	18.
8	~~114B1-025~~	10.
34	114G0-840	16.
55	116B0-610	17.

No.	Part No.	Picture
9	116B0-612	29.
22	116B0-614	10.
47	116B0-614	17.
48	116B0-616	17.
15	116B0-616	21.
22	116B0-618	7.
56	116B0-620	17.
26	116B0-625	21.
48	116B0-818	32.
3	116B0-825	24.
13	12004-012	2.
14	12005-005	2.
4	12006-010	1.
5	12006-011	1.
9	12007-011	2.
10	12007-012	2.
8	12009-005	2.
12	12010-004	2.
7	12011-002	2.
6	12032-005	2.
15	12037-001	2.
15	12037-002	2.
15	12037-003	2.
15	12037-004	2.
15	12037-005	2.
15	12037-006	2.
15	12037-007	2.
15	12037-008	2.
15	12037-009	2.
15	12037-010	2.
15	12037-011	2.
15	12037-012	2.
15	12037-013	2.
15	12037-014	2.
15	12037-015	2.
15	12037-016	2.
15	12037-017	2.
15	12037-018	2.
15	12037-019	2.
15	12037-020	2.
15	12037-021	2.
15	12037-022	2.
15	12037-023	2.
15	12037-024	2.
15	12037-025	2.

Next >>

No.	Part No.	Picture
1	~~12044-004~~	2.
2	12044-005	2.
3	~~12046-001~~	2.
4	~~12046-002~~	2.
17	~~12047-003~~	4.
10	12048-001	4.
8	12052-003	4.
7	12052-005	4.
22	12053-001	4.
14	~~12054-001~~	4.
11	12055-002	4.
16	12056-001	4.
1	12057-001	4.
6	12057-002	4.
30	120S0-635	16.
6	~~13001-054~~	3.
15	13002-007	16.
8	13002-022	3.
7	13008-038	3.
7	13024-046	3.
7	13025-046	3.
6	~~13027-056~~	3.
6	13029-058	3.
10	~~13031-043~~	3.
9	13034-030	1.
1	~~13058-044~~	10.
2	~~13061-017~~	10.
7	13063-004	10.
9	~~13066-029~~	10.
12	13068-028	10.
18	~~13070-005~~	10.
20	13072-012	10.
14	13078-006	10.
15	~~13081-045~~	7.
16	~~13087-031~~	7.
17	13088-030	7.
18	13089-022	7.
21	13091-011	7.
14	~~13095-036~~	7.
3	~~13102-013~~	7.
8	13116-021	7.
23	13116-022	7.
5	~~13118-007~~	7.
12	~~13127-042~~	8.
43	~~13128-037~~	8.

No.	Part No.	Picture
42	~~13129-046~~	8.
6	~~13130-032~~	8.
34	13131-038	8.
10	~~13132-030~~	8.
38	13133-031	8.
11	13134-016	8.
41	~~13135-020~~	8.
7	~~13136-042~~	8.
37	13137-025	8.
23	13140-045	8.
24	~~13140-046~~	8.
17	13142-013	8.
29	13144-062	8.
15	13151-018	8.
2	13157-004	9.
4	13161-029	9.
9	~~13168-024~~	9.
20	13187-006	7.
18	13194-003	16.
22	~~13209-011~~	8.
23	13223-006	1.
16	~~13239-010~~	8.
1	13242-006	9.
1	~~14001-0522-J~~	5.
6	14013-001	5.
9	14024-007	11.
15	~~14024-008~~	11.
13	~~14026-012~~	11.
3	~~14026-026~~	11.
18	14027-015	11.
1	14031-053	11.
22	~~14032-0752-H~~	11.
19	~~14032-082~~	11.
16	14032-083	11.
2	14045-014	11.
14	~~14045-015~~	11.
17	14046-023	11.
20	14046-024	11.
23	14046-025	11.
34	14050-006	11.
12	14058-004	11.
16	14068-003	5.
14	~~14070-003~~	5.
1	~~16001-217~~	12.
2	~~16001-226~~	12.

No.	Part No.	Picture
3	~~16001-227~~	12.
4	~~16001-228~~	12.
5	~~16001-229~~	12.
51	~~16003-007~~	12.
96	~~16003-008~~	12.
7	~~16005-023~~	12.
19	~~16007-018~~	12.
20	16008-004	12.
21	~~16009-055~~	12.
44	16012-015	12.
48	16013-003	12.
45	16013-008	12.
27	~~16014-012~~	12.
46	~~16016-016~~	12.
23	~~16017-086~~	12.
8	16019-018	12.
33	16019-025	12.
54	~~16021-018~~	12.
76	~~16021-019~~	12.
80	~~16021-020~~	12.
97	~~16021-021~~	12.
28	16022-007	12.
77	~~16022-009~~	12.
79	16022-010	12.
85	~~16023-004~~	12.
22	~~16025-075~~	12.
31	16029-004	12.
32	16030-017	12.
30	~~16031-028~~	12.
29	16032-003	12.
6	16033-009	12.
18	16033-015	12.
66	~~16033-016~~	12.
34	16038-016	12.
39	~~16039-012~~	12.
41	~~16039-013~~	12.
43	16039-015	12.
52	16039-016	12.
68	~~16039-017~~	12.
73	~~16039-018~~	12.
92	16039-019	12.
93	~~16039-020~~	12.
17	~~16040-004~~	12.
38	16040-005	12.
69	~~16040-007~~	12.

No.	Part No.	Picture
94	16040-009	12.
74	~~16040-010~~	12.
82	~~16041-004~~	12.
91	~~16041-012~~	12.
63	~~16042-005~~	12.
86	~~16042-006~~	12.
58	16046-002	12.
61	~~16046-003~~	12.
95	~~16046-005~~	12.
89	~~16046-007~~	12.
24	~~16047-003~~	12.
35	~~16049-005~~	12.
13	16052-003	12.
10	16054-003	12.
15	16054-004	12.
53	16054-005	12.
50	~~16055-002~~	12.
78	~~16055-003~~	12.
11	16057-002	12.
55	~~16057-003~~	12.
84	~~16063-002~~	12.
90	~~16063-003~~	12.
72	~~16063-005~~	12.
12	~~16065-017~~	12.
49	~~16065-018~~	12.
87	~~16065-019~~	12.
98	~~16065-020~~	12.
26	16065-028	1.
27	16065-029	1.
9	16067-003	12.
42	16067-003	12.
14	16067-004	12.
47	~~16067-005~~	12.
16	16068-007	12.
36	~~16068-008~~	12.
37	~~16073-002~~	12.
40	~~16073-003~~	12.
81	~~16073-006~~	12.
83	~~16073-007~~	12.
75	~~16073-009~~	12.
67	~~16074-002~~	12.
62	~~16077-007~~	12.
7	~~16082-037~~	11.
1	~~16082-059~~	13.
3	16085-019	13.

Next >>

No.	Part No.	Picture
29	16099-002	13.
25	~~16101-002~~	13.
2	~~16109-003~~	5.
13	~~16110-003~~	13.
5	16111-004	13.
14	16112-002	13.
10	16115-013	5.
31	16144-002	16.
36	16145-002	13.
31	172G0-835	27.
8	18001-127	14.
9	18001-128	14.
10	18001-129	14.
11	18001-130	14.
24	18067-018	14.
21	18069-045	14.
22	18069-046	14.
27	~~21001-024~~	16.
28	~~21007-014~~	16.
29	~~21007-023~~	16.
2	21008-021	15.
3	21008-022	15.
5	21013-029	15.
2	~~21015-005~~	16.
8	21017-017	16.
6	~~21019-018~~	15.
4	~~21021-003~~	15.
5	21027-003	16.
6	21027-004	16.
7	~~21029-024~~	15.
4	21039-003	16.
7	21040-003	16.
25	~~21061-019~~	15.
27	21066-019	15.
13	21070-003	4.
18	21121-058	15.
19	21121-060	15.
24	21126-007	1.
8	21126-007	6.
24	21126-007	15.
58	21126-007	17.
21	21130-020	15.
22	21131-005	15.
23	21131-006	15.
1	21135-007	15.

No.	Part No.	Picture
15	21148-005	15.
29	21156-008	15.
30	21156-009	15.
20	21160-005	15.
1	~~21163-001~~	16.
28	21164-001	15.
11	~~21165-001~~	16.
12	21166-001	16.
14	21167-002	16.
17	21167-003	16.
35	220B0-306	32.
11	220B0-308	32.
8	220B0-406	15.
28	220B0-408	27.
2	220B0-430	33.
6	220B0-508A	13.
12	220B0-512	15.
5	220B0-512A	11.
31	220B0-514	30.
18	220B0-520	1.
12	220B0-520	20.
6	~~220B0-528~~	11.
13	220B0-530	20.
7	220B0-535	14.
23	220B0-610	4.
20	220B0-612	1.
20	220B0-612	8.
25	220B0-612	11.
11	220B0-612	26.
4	220B0-616	7.
37	220B0-616	13.
14	220B0-616	14.
16	220B0-618	1.
17	220B0-618	5.
26	220B0-622	11.
27	220B0-625	11.
38	220B0-626	13.
28	220B0-628	11.
29	220B0-630	11.
30	220B0-640	11.
20	220E0-435A	33.
88	221B0-612	12.
7	222E0-508	23.
24	~~23004-058~~	32.
34	~~23005-0372-1~~	32.

No.	Part No.	Picture
27	23006-038	32.
28	23007-041	32.
31	~~23008-037~~	32.
26	23014-005	32.
25	23019-021	32.
43	23019-022	32.
40	23019-023	32.
30	23020-018	32.
42	23020-020	32.
29	23021-004	32.
41	23021-012	32.
19	~~23024-043~~	33.
21	23026-027	33.
24	~~23027-036~~	33.
23	23028-018	33.
25	~~23036-033~~	33.
1	23040-047	33.
1-1	~~23040-048~~	33.
4	23048-012	33.
4-1	23048-015	33.
5	23050-002	33.
3	23058-002	33.
44	~~23064-009~~	32.
38	23066-015	32.
37	23066-016	32.
33	23072-001	32.
32	23074-001	32.
36	23076-005	32.
11	23078-001	33.
1	25002-065	32.
15	25008-036	32.
3	25011-027	32.
16	~~25011-042~~	32.
13	~~25011-043~~	32.
9	25012-010	32.
51	25012-011	32.
12	25015-025	32.
14	~~25023-011~~	32.
17	~~25024-001~~	32.
1	~~26001-111~~	34.
2	~~26002-031~~	34.
3	~~26002-035~~	34.
6	26004-013	34.
7	26006-002	34.
5	26010-027	34.

No.	Part No.	Picture
4	~~26010-028~~	34.
15	26011-063	33.
17	26012-027	34.
8	~~26016-002~~	34.
53	26019-005	32.
19	27002-011	34.
20	~~27003-046~~	34.
20	~~27005-042~~	32.
18	~~27007-004~~	32.
37	~~27008-0465-1~~	27.
24	~~27008-0465-1~~	30.
21	~~27008-0465-1~~	32.
37	~~27008-0465-2~~	27.
24	~~27008-0465-2~~	30.
21	~~27008-0465-2~~	32.
37	~~27008-0465-3~~	27.
24	~~27008-0465-3~~	30.
21	~~27008-0465-3~~	32.
37	~~27008-0465-4~~	27.
24	~~27008-0465-4~~	30.
21	~~27008-0465-4~~	32.
37	~~27008-0465-5~~	27.
24	~~27008-0465-5~~	30.
21	~~27008-0465-5~~	32.
13	~~27010-017~~	34.
14	27011-009	34.
15	27012-010	34.
36	27016-027	27.
19	~~27019-003~~	32.
23	27030-001	30.
34	~~28019-001~~	34.
20	310B0-600	4.
19	310B0-600	14.
26	310B0-600	15.
57	310B0-600	17.
56	310B0-800	32.
8	~~310N0-800~~	27.
10	311B0-600	33.
26	311B0-800	17.
16	311B0-800	25.
33	311B0-800	27.
23	312B0-500	20.
8	312B0-500	32.
65	312B0-600	12.
50	312B0-600	17.

Next >>

No.	Part No.	Picture
13	312B0-600	25.
30	312B0-600	30.
8	312B0800	9.
4	312B0-800	30.
29	313B1-000	18.
1	315B0-800	7.
12	315B1-000	18.
12	315B1-000	19.
28	315B1-000	19.
18	315B1-000	33.
19	315B1-200	19.
59	~~32002-094~~	17.
10	~~32030-025~~	17.
11	~~32030-026~~	17.
13	~~32030-045~~	17.
12	~~32030-046~~	17.
23	32060-014	34.
31	~~32097-022~~	17.
32	~~32098-019~~	17.
32	~~32099-010~~	21.
60	~~32099-015~~	17.
42	32103-003	17.
36	~~32105-005~~	17.
52	~~32122-034~~	32.
33	~~32129-001~~	17.
8	~~32131-001~~	29.
1	~~33001-046~~	18.
18	~~33028-011~~	19.
2	33032-036	18.
6	33033-009	18.
5	33034-009	18.
3	33035-003	18.
7	33036-005	18.
9	33040-066	18.
11	33044-001	18.
30	~~33122-010~~	21.
5	~~34003-036~~	19.
6	~~34003-037~~	19.
20	34011-029	19.
21	34019-014	19.
22	34023-012	19.
25	~~34024-038~~	19.
26	34025-005	19.
13	34028-010	19.
1	~~34028-011~~	19.

No.	Part No.	Picture
4	~~34028-012~~	19.
1	35003-015	21.
4	~~35022-071~~	21.
5	35022-087	21.
6	~~35026-006~~	21.
18	35032-022	21.
30	35039-004	33.
1	~~36001-0362-R~~	29.
1	~~36001-0362-S~~	29.
2	~~36007-0302-R~~	29.
2	~~36007-0302-S~~	29.
25	36014-061	30.
5	41023-015	22.
6	41023-016	22.
8	41025-049	22.
7	~~41025-051~~	22.
9	41027-042	22.
11	41027-057	22.
12	41028-057	22.
5	~~41039-019~~	23.
6	~~41042-009~~	23.
8	~~41045-006~~	24.
6	~~41048-016~~	24.
7	41049-007	24.
5	41050-017	24.
4	41051-003	24.
10	41057-041	22.
12	~~41059-016~~	23.
16	~~41060-012~~	23.
14	41062-005	23.
15	41063-001	23.
11	~~41064-007~~	23.
17	~~41068-036~~	23.
18	~~41069-018~~	23.
16	~~41074-022~~	22.
13	41075-001	22.
14	41075-002	22.
15	41075-003	22.
9	~~41078-001~~	23.
22	~~41080-001~~	26.
13	41082-001	23.
10	41085-004	24.
10	410B0-400	15.
14	410B0-500	15.
18	410B0-600	4.

No.	Part No.	Picture
9	410B0-600	6.
11	410B0-600	13.
18	410B0-600	13.
10	410B0-600	16.
27	410B0-600	20.
54	410B0-800	17.
17	410B1-000	14.
25	410B1-000	26.
21	410B1-200	18.
24	411B0-600	7.
52	411B0-600	17.
16	411B0-600	21.
22	411B0-600	25.
33	411B0-600	25.
7	411B0-600	30.
18	411B0-600	30.
8	411B0-600	33.
50	411B0-800	32.
27	411B1-000	18.
21	411B1-000	21.
71	416F0-500	12.
27	416F0-600	21.
14	416F0-800	18.
11	~~42005-030~~	24.
1	~~42006-053~~	24.
16	~~42008-013~~	24.
14	~~42010-021~~	24.
13	42014-021	24.
23	42025-005	24.
2	~~42029-033~~	24.
24	42031-034	24.
25	~~42032-037~~	24.
17	~~42036-015~~	24.
21	~~42037-023~~	24.
29	~~42041-118~~	24.
26	42045-018	24.
17	~~42048-023~~	22.
30	~~43001-044~~	19.
12	~~43003-001~~	25.
31	43005-021	19.
25	~~43007-032~~	18.
36	~~43011-017~~	19.
37	43012-002	19.
1	~~43015-009~~	25.
10	~~43017-001~~	25.

No.	Part No.	Picture
9	~~43018-001~~	25.
8	43019-001	25.
6	~~43022-001~~	25.
4	~~43024-001~~	25.
3	~~43025-001~~	25.
18	43026-003	25.
19	43027-001	25.
20	43028-001	25.
11	43029-002	25.
17	~~43030-002~~	25.
14	43031-001	25.
23	~~43034-001~~	25.
1	~~43041-004~~	26.
19	~~43042-004~~	26.
13	~~43043-003~~	26.
4	~~43044-004~~	26.
10	~~43045-003~~	26.
8	~~43046-001~~	26.
7	43047-001	26.
17	~~43048-002~~	26.
18	43049-002	26.
15	~~43050-002~~	26.
14	~~43051-001~~	26.
3	43052-003	26.
9	43053-002	26.
16	43054-002	26.
6	43056-002	26.
5	43057-002	26.
27	43059-007	25.
34	43059-011	25.
35	~~43060-009~~	25.
29	~~43061-002~~	25.
36	43063-001	25.
37	43064-001	25.
28	43065-001	25.
25	43066-001	25.
24	43067-001	25.
26	43069-001	25.
23	~~43070-001~~	26.
7	~~43072-001~~	25.
2	43073-001	25.
2	~~43073-004~~	26.
15	~~43074-001~~	25.
26	~~43076-001~~	26.
1	~~44001-163~~	27.

Next >>

No.	Part No.	Picture
25	~~44005-045~~	27.
26	~~44006-043~~	27.
24	44009-014	27.
21	44010-018	27.
19	44013-037	27.
20	~~44022-028~~	27.
18	~~44026-042~~	27.
10	~~44033-072~~	27.
11	~~44034-072~~	27.
15	~~44037-063~~	27.
4	~~44039-045~~	27.
5	44041-038	27.
30	44041-040	27.
6	44041-048	27.
23	44043-044	27.
22	44044-012	27.
27	44045-002	27.
29	44045-034	27.
14	44045-038	27.
3	~~44046-015~~	27.
2	~~44062-003~~	27.
34	~~44062-005~~	27.
32	~~44063-003~~	27.
9	44064-005	27.
12	~~44064-006~~	27.
13	~~44064-008~~	27.
16	~~45014-083~~	18.
24	45016-003	18.
22	45017-001	18.
23	45017-011	18.
1	46003-029	20.
2	46012-008	20.
5	~~46018-025~~	20.
9	46028-003	20.
11	46031-005	20.
8	~~46043-004~~	20.
15	~~46043-005~~	20.
16	46043-013	20.
25	46055-006	20.
24	46056-005	20.
20	46059-011	20.
6	46061-012	20.
28	46075-017	20.
17	~~46076-025~~	20.
10	46079-003	20.

No.	Part No.	Picture
14	46091-034	20.
18	46092-016	20.
21	46094-0112-1	20.
5	46098-010	17.
3	46100-003	17.
7	~~46132-001~~	20.
10	461F0-300	32.
9	461F0-400	15.
13	461F0-500	15.
7	461F0-500	32.
64	461F0-600	12.
20	461F0-600	14.
3	461F0-600	16.
51	461F0-600	17.
9	461F0-600	21.
32	461F0-600	25.
12	461F0-600	26.
10	461F0-600	29.
8	461F0-600	30.
17	461F0-600	30.
9	461F0-600	33.
32	461F0-600	33.
28	461F0-800	17.
33	461F0-800	19.
3	461F0-800	21.
7	461F0-800	27.
23	461F0-800	32.
49	461F0-800	32.
55	461F0-800	32.
22	461F0-800	34.
29	461F1-000	17.
19	461F1-000	18.
31	461F1-000	18.
20	461F1-000	21.
24	461F1-000	26.
17	461F1-000	33.
30	461F1-200	17.
20	461F1-200	18.
17	461F1-200	27.
21	464G0-600	8.
22	~~464H0-500~~	20.
27	480J1-200	8.
17	480J1-900	10.
9	480J2-800	8.
36	480J3-000	8.

No.	Part No.	Picture
5	481J1-800	25.
3	481J4-000	23.
4	482J0-100	10.
2	482K7-000	13.
1	~~51001-096-2R~~	28.
1	~~51001-096-2S~~	28.
11	51023-043	28.
12	51035-009	28.
14	51037-010	28.
2	51048-007	28.
3	51059-008	28.
6	~~51063-002~~	28.
15	~~52001-031~~	29.
13	52003-020	29.
16	~~52005-005~~	29.
21	52015-004	11.
17	52020-001	29.
1	53001-083	30.
5	~~53009-017~~	30.
22	53011-002	30.
23	~~53043-0042-R~~	21.
23	~~53043-0042-S~~	21.
10	~~53050-001~~	30.
11	~~53051-001~~	30.
13	53052-001	30.
12	~~53053-001~~	30.
19	53054-001	30.
20	53055-001	30.
6	53056-001	30.
1	54001-040	31.
1	54001-1005	31.
2	54011-048	31.
3	54012-081	31.
4	~~54012-087~~	31.
5	54018-015	31.
16	550D1-610	34.
7	550D1-615	7.
17	550D2-012	19.
3	550D2-515	19.
9	550D3-025	24.
27	550D4-035	24.
7	551A0-314	13.
11	551A0-408	15.
24	~~551A0-622~~	16.
4	552A1-014	3.

No.	Part No.	Picture
7	552A1-014	5.
4	56002-021	20.
1	~~56007-029~~	35.
18	56008-006	35.
15	56013-054	28.
16	56014-049	28.
6	56018-197	29.
5	56018-198	29.
12	~~57001-101~~	36.
13	~~57001-102~~	36.
14	~~57001-103~~	36.
15	~~57001-104~~	36.
17	57001-106	36.
18	~~57001-107~~	36.
19	57001-108	36.
1	57001-109	36.
5	57001-1099	36.
20	57001-110	36.
2	~~57001-111~~	36.
3	~~57001-112~~	36.
4	57001-114	36.
21	57001-115	36.
6	~~57001-117~~	36.
7	~~57001-118~~	36.
22	57001-120	36.
23	57001-122	36.
24	57001-123	36.
8	57001-1243	36.
25	57001-125	36.
26	~~57001-127~~	36.
9	~~57001-128~~	36.
27	~~57001-129~~	36.
28	~~57001-130~~	36.
29	57001-131	36.
10	57001-134	36.
30	57001-135	36.
31	~~57001-136~~	36.
32	57001-137	36.
33	57001-138	36.
34	~~57001-139~~	36.
35	57001-140	36.
36	57001-141	36.
11	~~57001-142~~	36.
37	57001-143	36.
38	57001-144	36.

No.	Part No.	Picture
16	57001-162	36.
40	600A0-600	8.
5	600A0-800	10.
7	600A0-800	17.
10	600A1-200	7.
32	600A1-200	13.
4	601B6-203	23.
19	601B6-206	24.
12	601B6-304	24.
15	~~601B6-304Z~~	24.
8	~~610A0-614~~	5.
18	670B0-214	28.
9	670B1-507	7.
22	670B1-508	13.
22	670B1-510	1.
4	670B2-015	5.
18	670B2-015	29.
13	670B2-016	5.
24	670B2-016	13.
20	670B2-018	5.
20	670B2-022	13.
26	671B2-5105	13.
4	671B2-530	18.
10	92001-012	9.
20	~~92001-104~~	26.
12	~~92001-112~~	9.
17	92001-113	15.
53	92001-115	17.
28	92001-115	30.
16	92001-119	9.
10	92001-143	18.
8	92001-152	13.
9	92001-153	13.
10	92001-154	13.
3	92001-164	5.
18	92003-015	24.
16	92003-064	27.
27	92003-079	19.
10	92003-092	1.
21	~~92003-093~~	4.
23	92003-094	13.
31	92003-095	13.
12	~~92003-098~~	5.
16	92003-099	17.
26	~~92003-103~~	18.

No.	Part No.	Picture
23	92003-104	16.
10	92003-106	6.
18	92003-107	5.
11	92003-107	6.
12	92003-108	6.
4	92003-109	6.
13	92003-109	6.
5	~~92003-110~~	6.
14	~~92003-110~~	6.
6	~~92003-111~~	6.
15	92003-112	6.
7	~~92003-113~~	6.
16	~~92003-114~~	6.
5	92003-141	2.
28	~~92003-147~~	18.
16	~~92003-159~~	13.
15	92003-178	13.
17	92003-179	13.
15	92003-180	14.
21	92004-045	5.
1	92004-045	6.
23	92004-046	5.
3	92004-046	6.
22	92004-047	5.
2	92004-047	6.
9	~~92004-048~~	19.
7	92004-049	1.
15	92005-002	18.
3	92007-002	20.
19	92007-020	20.
1	92007-031	17.
17	92012-003	28.
38	92014-012	27.
2	~~92014-014~~	7.
39	92015-056	19.
11	92015-070	1.
14	92016-028	8.
24	92016-044	19.
27	92016-045	17.
7	92018-005	29.
19	92019-004	17.
40	92019-008	19.
8	92019-012	18.
10	92019-013	19.
34	92019-013	19.

No.	Part No.	Picture
49	92019-015	8.
16	92019-021	14.
17	92020-014	18.
46	92022-024	17.
22	92022-044	21.
7	92022-044	28.
4	92022-080	13.
3	92022-085	10.
43	92022-125	17.
27	92022-125	30.
27	92022-125	33.
32	92022-195	19.
29	92022-195	30.
15	92022-199	19.
8	~~92022-204~~	19.
13	~~92022-207~~	10.
39	~~92022-209~~	8.
33	~~92022-210~~	8.
4	92022-211	8.
5	92022-212	8.
5	92022-213	8.
12	92022-215	1.
35	~~92022-218~~	16.
28	92022-220	13.
14	92022-227	21.
10	92022-228	21.
2	92022-230	17.
16	92022-239	33.
6	92022-241	32.
16	92022-244	15.
28	92022-248	24.
21	~~92024-036~~	10.
8	92024-042	8.
35	92024-043	8.
28	92024-044	8.
13	~~92024-047~~	9.
34	~~92024-048~~	13.
11	92026-022	7.
22	~~92026-082~~	16.
16	~~92026-091~~	16.
26	92026-092	16.
28	92027-129	33.
13	92027-147	33.
30	92027-152	8.
3	92027-155	4.

No.	Part No.	Picture
40	92027-156	17.
33	92027-156	33.
17	~~92027-159~~	17.
18	92027-160	17.
12	92027-162	21.
24	92027-162	21.
39	92027-165	17.
47	~~92027-167~~	32.
23	92027-170	14.
4	92027-174	32.
41	92027-177	19.
45	92027-241	32.
47	~~92028-117~~	8.
48	92028-118	8.
1	92028-122	8.
44	92028-123	8.
11	~~92028-126~~	10.
12	~~92028-135~~	7.
26	92031-001	8.
2	92033-025	8.
10	92033-025	10.
9	92036-021	3.
6	92036-023	1.
5	92037-028	14.
56	92037-072	12.
60	92037-072	12.
6	~~92037-090~~	31.
7	92037-092	31.
8	92037-093	31.
13	92037-103	14.
9	~~92037-104~~	31.
61	92037-134	17.
11	92038-001	3.
21	92041-003	30.
30	92041-005	18.
8	92042-007	1.
9	92042-007	5.
12	92042-007	13.
19	92042-014	8.
18	92042-020	8.
5	92042-028	3.
25	92043-016	8.
7	~~92043-058~~	9.
38	92043-065	19.
16	92043-079	19.

Next >>

No.	Part No.	Picture
2	92043-080	19.
14	~~92043-085~~	9.
20	92043-087	16.
45	92043-089	8.
5	~~92043-091~~	28.
35	92043-095	19.
4	~~92043-096~~	28.
32	92045-021	8.
46	92045-022	8.
13	92046-028	7.
3	92046-031	8.
25	~~92046-033~~	16.
6	92047-011	17.
39	92047-012	27.
9	92048-006	17.
8	92048-008	17.
24	92049-001	11.
4	92049-004	11.
11	92049-016	2.
2	~~92050-003~~	23.
11	92050-024	11.
20	92050-027	24.
10	~~92050-046~~	23.
33	92050-047	11.
10	92050-048	11.
21	92050-050	1.
31	92055-035	8.
30	92055-048	13.
11	92055-049	5.
15	92055-052	5.
35	92055-052	13.
8	~~92055-053~~	11.
3	92055-054	3.
32	92055-055	16.
12	92055-062	3.
40	92056-003	27.
30	~~92057-096~~	24.
20	92059-057	29.
19	92059-071	29.
4	~~92059-078~~	14.
12	92059-079	14.
19	~~92059-081~~	5.
59	92059-084	12.
57	92059-109	12.
26	92063-073	12.

No.	Part No.	Picture
26	92063-074	12.
26	92063-075	12.
26	92063-077	12.
25	92064-042	12.
13	92065-081	28.
14	92065-086	29.
14	92066-017	1.
5	92066-021	5.
21	92066-024	13.
19	92066-026	13.
13	92068-006	1.
2	92069-018	32.
22	92069-039	33.
6	92069-055	33.
25	92070-037	1.
17	92071-019	21.
3	92071-056	29.
4	92071-064	29.
9	92072-030	34.
10	92072-031	34.
11	~~92072-032~~	34.
9	92072-042	28.
35	92072-045	17.
11	92072-045	29.
12	92072-056	34.
39	92074-006	32.
28	92074-022	21.
33	~~92074-024~~	21.
13	92074-030	3.
23	92075-015	19.
44	92075-051	17.
29	92075-076	33.
45	92075-078	17.
12	92075-078	29.
8	92075-084	28.
3	92075-099	30.
4	92075-119	4.
5	92075-120	4.
11	92075-121	21.
34	92075-121	33.
12	92075-123	4.
10	92075-125	28.
46	~~92075-127~~	32.
12	92075-128	33.
7	92075-132	21.

No.	Part No.	Picture
13	92075-133	21.
34	92075-135	21.
2	92075-139	30.
7	92075-140	19.
34	~~92075-141~~	17.
37	~~92075-146~~	17.
41	92075-149	17.
29	92075-157	19.
14	92075-158	33.
38	92075-161	17.
18	~~92075-162~~	34.
5	92075-172	32.
25	92075-174	21.
31	92075-175	21.
29	92075-176	21.
33	92075-193	16.
9	92075-232	4.
14	92076-024	19.
6	92081-020	10.
11	92081-051	9.
6	92081-069	7.
15	92081-104	10.
19	92081-105	7.
15	92081-106	9.
15	92081-107	4.
27	92081-108	13.
33	92081-109	13.
21	92081-110	16.
19	~~92082-004~~	10.
6	92083-018	9.
5	92083-021	9.
19	~~92087-006~~	1.
22	92088-013	24.
21	~~92088-014~~	26.
15	~~92088-017~~	30.
4	92090-007	17.
14	92091-022	17.
15	92091-023	17.
18	92092-010	14.
35	92094-011	27.
8	~~92102-006~~	23.
16	~~92102-008~~	10.
11	92102-010	19.
14	~~92102-011~~	30.
2	92106-004	35.

No.	Part No.	Picture
3	92107-006	35.
4	92107-007	35.
5	92107-008	35.
16	~~92108-007~~	35.
6	92110-1009	35.
7	92110-1050	35.
12	92110-1147	35.
11	92110-1153	35.
8	92111-005	35.
13	92111-1052	35.
14	92112-003	35.
19	92122-001	16.
17	92123-001	1.
6	~~92123-002~~	14.
13	~~92125-002~~	8.
9	92126-001	35.
10	~~92126-002~~	35.
15	~~92127-001~~	35.
17	~~92128-001~~	35.