Kawasaki

MICRO-

PARTS CATALOG

(K)Z900 - A4 1976

Rahmen Nr. Z1F-085701 ~ . . . . . .
Motor Nr. Z1E 086001 ~ . . . . . .

Farbe: Diamond Dark Green, Diamond Brown



Right Side View



Left Side View

<< Back

Kawasaki (K)Z900-A4 1976

Index **page**

1.	Cylinder Head	8
2.	Cam Shaft, Valve	10
3.	Cylinder, Piston, Crank Shaft	12
4.	Cam Chain, Tensioner	14
5.	Crank Case	16
6.	Crank Case Bolt & Stud Pattern	18
7.	Clutch	20
8.	Transmission Gears	22
9.	Gear Change Mechanism	26
10.	Kickstarter	28
11.	Engine Covers	30
12.	Carburetors	32
13.	Oil Pump, Oil Filter	38
14.	Mufflers, Air Cleaner	40
15.	Contact Breaker, Spark Advancer	42
16.	Starting Motor, Dynamo	44
17.	Frame	46
18.	Swinging Arm, Rear Shock Absorber	50
19.	Footrests, Stands, Brake Pedal	52
20.	Handlebar, Grips	54
21.	Fenders	56
22.	Wheels	60
23.	Front Hub	62
24.	Rear Hub	64
25.	Disc Brake Equipments A	66
26.	Disc Brake Equipments B	68
27.	Front Fork	70
28.	Fuel Tank	74
29.	Side Covers	76
30.	Dual Seat, Chain Cover	78
31.	Cables	80
32.	Electrical Equipments A	82
33.	Electrical Equipments B	84
34.	Electrical Equipments C	86
35.	Electrical Equipments D	88
36.	Tools	90
37.	Special Service Tools	92
38.	N° Verzeichnis	94




NLA = nicht mehr lieferbar
NLA = n'est plus livrable
NLA = non è più disponibile


Next >>

Pictorial Index 1/5


1. Cylinder Head

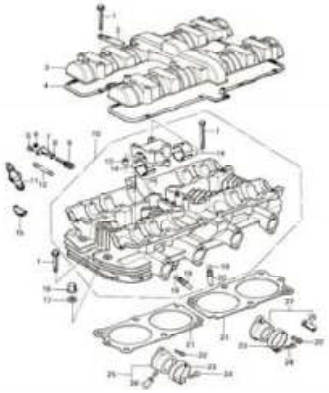


2. Cam Shaft, Valve

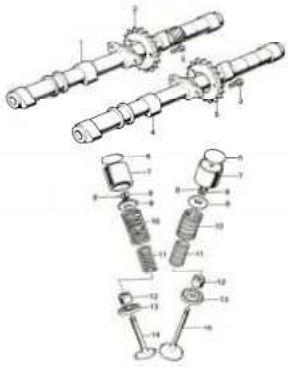


3. Cylinder, Piston, Crank Shaft

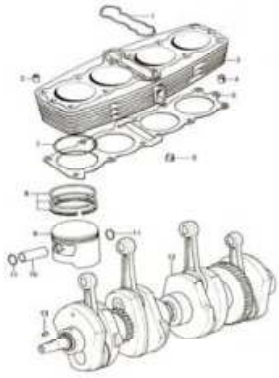


4. Cam Chain, Tensioner

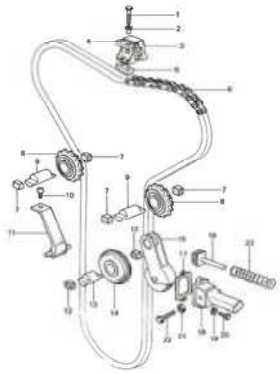


5. Crank Case

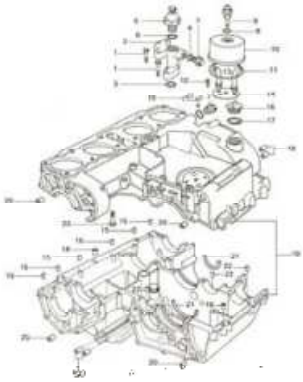


6. Crank Case Bolt & Stud Pattern

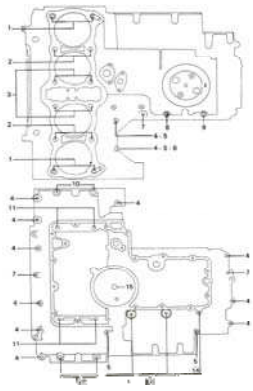


7. Clutch

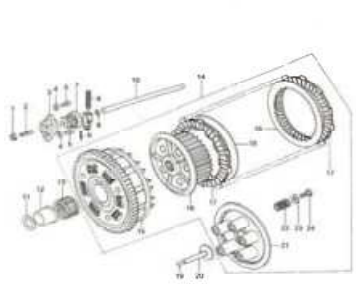

8. Transmission Gears 1/2

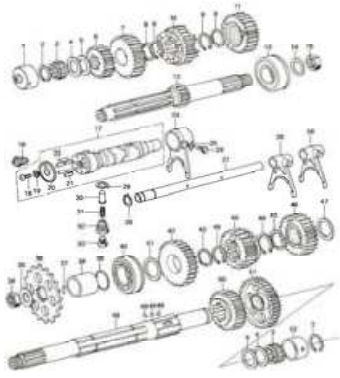


8. Transmission Gears 2/2

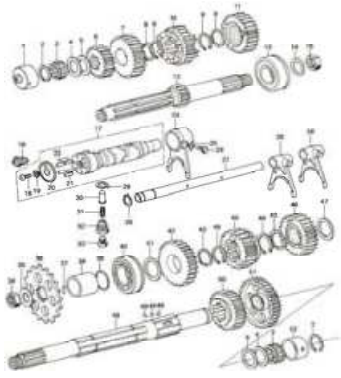

Pictorial Index 2/5


9. Gear Change Mechanism

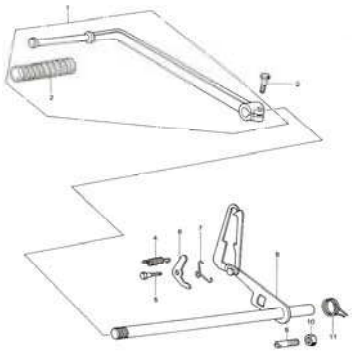


10. Kickstarter




11. Engine Covers

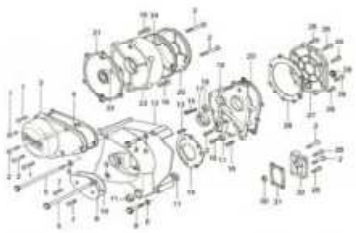


12. Carburetors 1/3

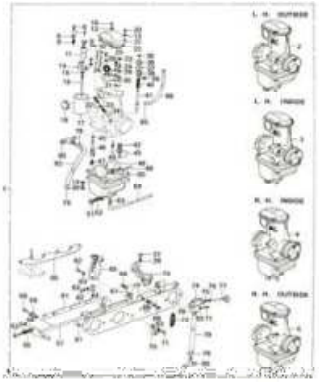


12. Carburetors 2/3

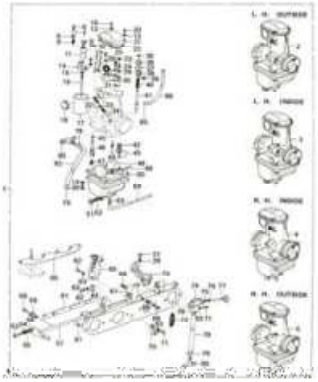


12. Carburetors 3/3

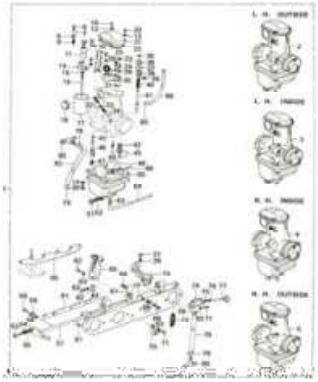


13. Oil Pump, Oil Filter

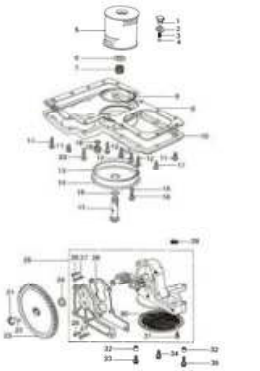

14. Mufflers, Air Cleaner

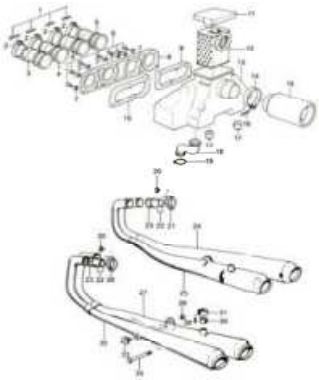


15. Contact Breaker

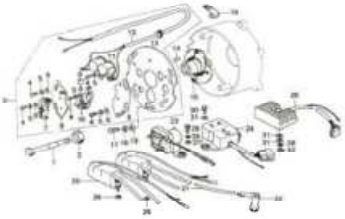

Next >>

Pictorial Index 3/5

16. Starter Motor, Dynamo

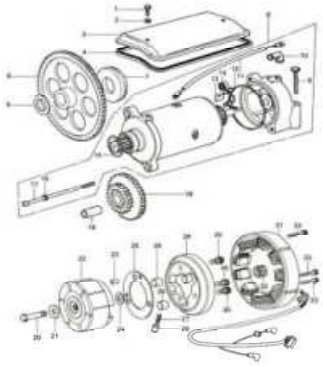


17. Frame 1/2




17. Frame 1/2




18. Swinging Arm, Rear Shock Abs.

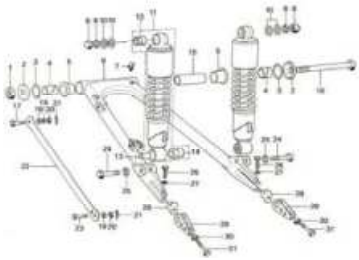


19. Footrests, Stands, Brake Pedal

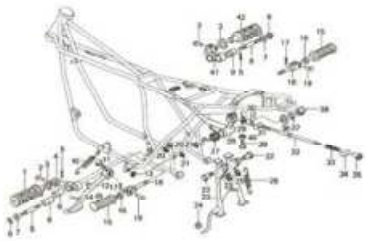

20. Handlebar, Grips

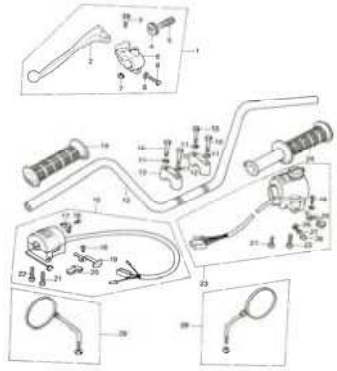


21. Fenders

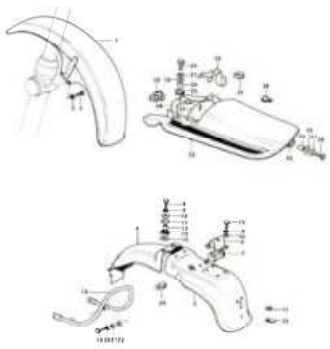

22. Wheels




23. Front Hub

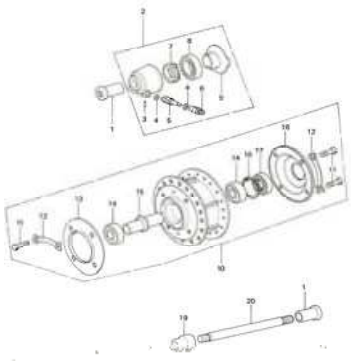


Pictorial Index 4/5


24. Rear Hub

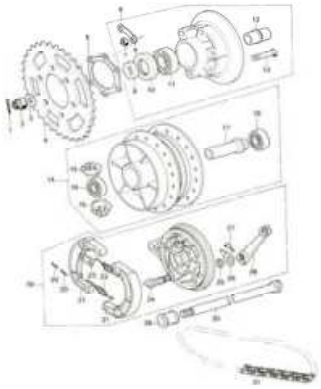


25. Disc Brake Equipments A

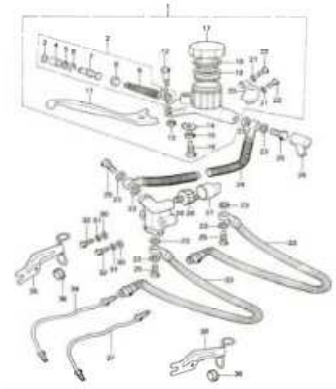


26. Disc Brake Equipments B

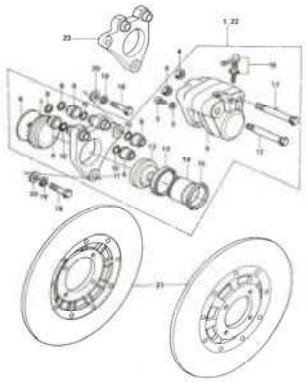

27. Front Fork1/2

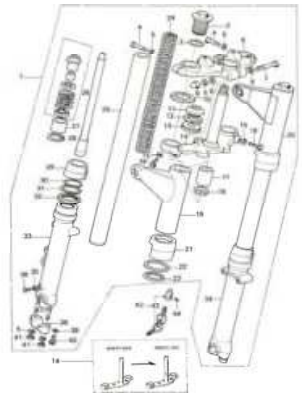


27. Front Fork2/2

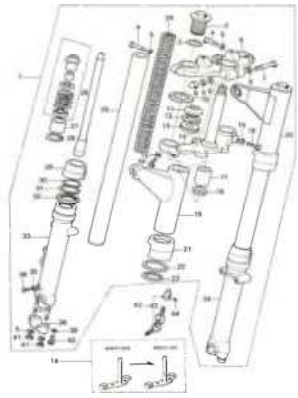


28. Fuel Tank




29. Side Covers

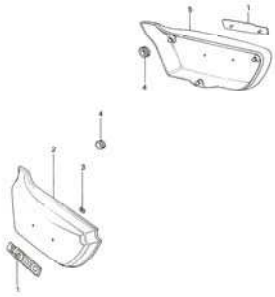

30. Dual Seat, Chain Covers

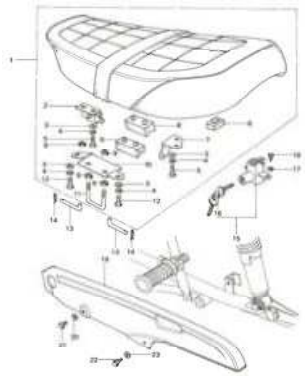


31. Cables

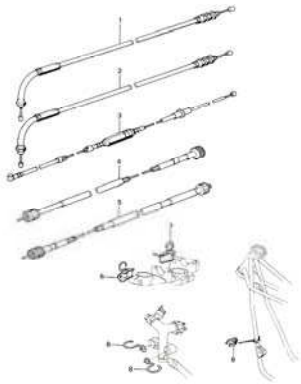


Next >>

Pictorial Index 5/5


32. Electrical Equipments A 1

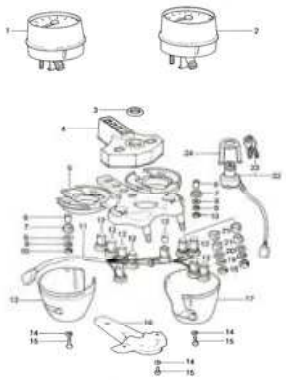


33. Electrical Equipments B

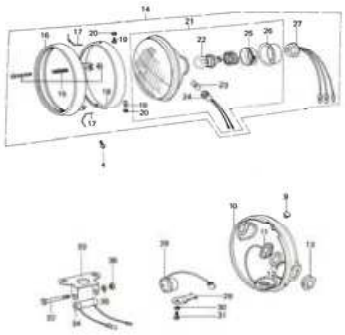


34. Electrical Equipments C

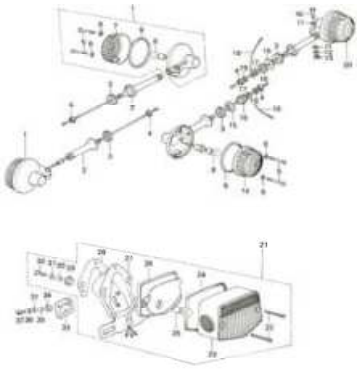


35. Electrical Equipments D

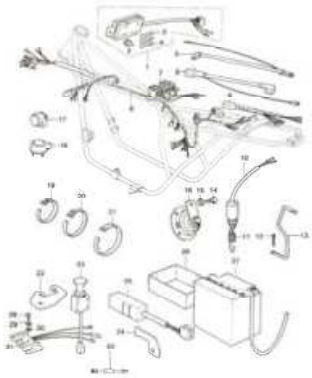


36. Tools

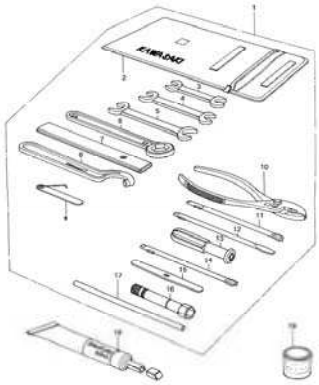

37. Special Service Tools

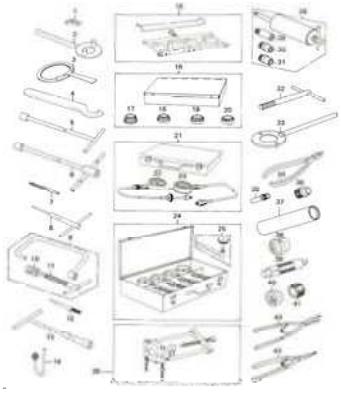


1. Cylinder Head

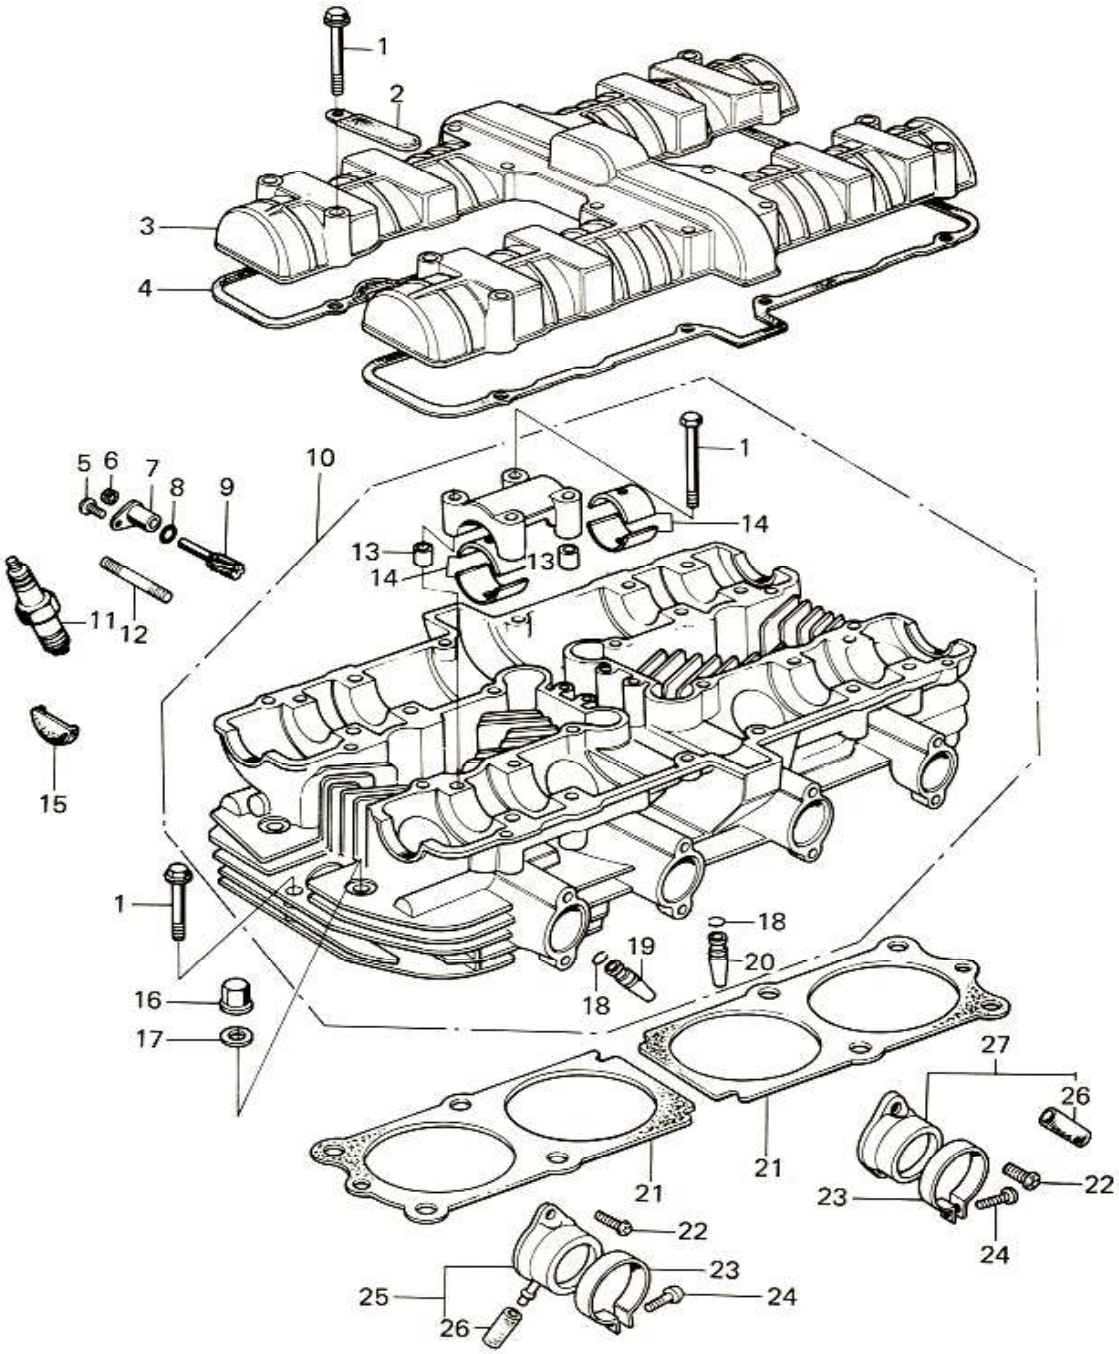

1. Cylinder Head

No.	Part No.	Q'TY	PART NAME	
1	92003-092	34	BOLT, hex head, 6x45	
2	21126-007	4	CLAMP, ignition coil	
3	~~11022-0052-H~~	1	COVER, cylinder head	**NLA**
4	11023-006	1	GASKET, cylinder head cover	
5	220B0-612	1	SCREW, pan head, 6x12	
6	92050-050	1	OIL SEAL	
7	~~92087-006~~	1	GUIDE, tachometer cable	**NLA**
8	670B1-510	1	O-RING, 10mm	
9	13223-006	1	GEAR, tachometer	
10	~~11002-0162-H~~	1	CYLINDER HEAD	**NLA**
11	92070-037	4	SPARK PLUG, NGK B8ES	
12	92004-049	8	STUD, 6x30	
13	92042-007	8	PIN, dowel	
14	13034-030	16	BEARING, cam shaft	
15	92066-017	4	PLUG, cylinder head cover	
16	92015-076	12	NUT, cylinder head	
17	92022-215	12	WASHER, plain	
18	92036-023	8	CIRCLIP, valve guide	
19	12006-010	4	GUIDE, inlet valve	
20	12006-011	4	GUIDE, exhaust valve	
21	11004-066	2	GASKET, cylinder head	
22	220B0-618	8	SCREW, pan head, 6x18	
23	92123-001	4	CLAMP, carburetor holder	
24	220B0-525	4	SCREW, pan head, 5x25	
25	16065-029	2	HOLDER, LH, carburetor	
26	92068-006	4	PLUG	
27	16065-028	2	HOLDER, RH, carburetor	

2. Cam Shaft, Valve

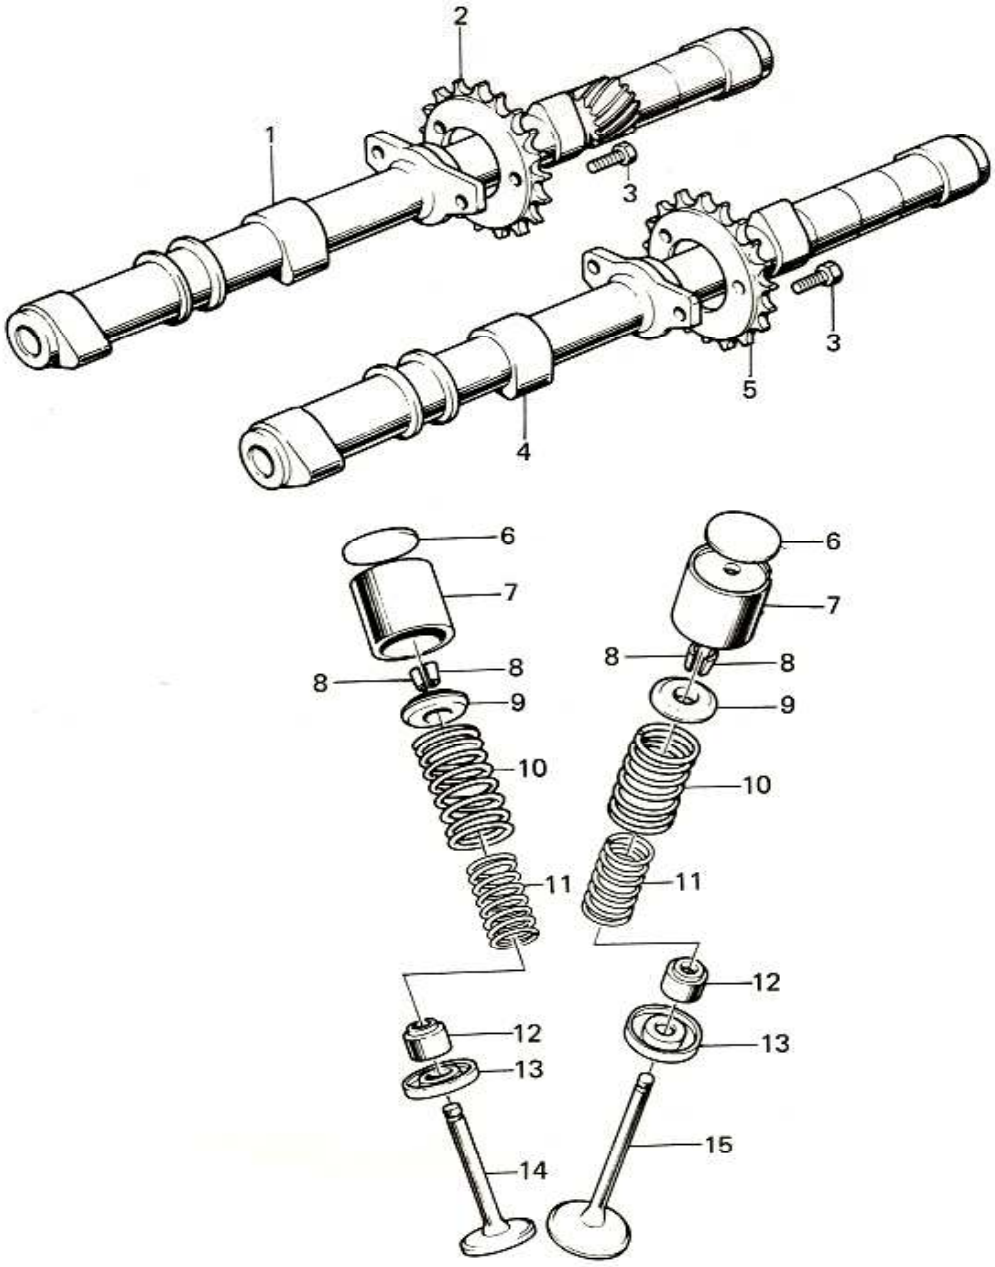


Next >>

2. Cam Shaft, Valve

No.	Part No.	Q'TY	PART NAME	
1	12044-005	1	CAM SHAFT, exhaust	
2	~~12046-002~~	1	SPROCKET, exhaust cam shaft	**NLA**
3	92003-141	6	BOLT, hex head, 6x10	
4	~~12044-004~~	1	CAM SHAFT, inlet	**NLA**
5	~~12046-001~~	1	SPROCKET, inlet cam shaft	**NLA**
6	12037-001	AR	SHIM, tappet 2.00 t	
6	12037-002	AR	SHIM, tappet 2.05 t	
6	12037-003	AR	SHIM, tappet 2.10 t	
6	12037-004	AR	SHIM, tappet 2.15 t	
6	12037-005	AR	SHIM, tappet 2.20 t	
6	12037-006	AR	SHIM, tappet 2.25 t	
6	12037-007	AR	SHIM, tappet 2.30 t	
6	12037-008	AR	SHIM, tappet 2.35 t	
6	12037-009	AR	SHIM, tappet 2.40 t	
6	12037-010	AR	SHIM, tappet 2.45 t	
6	12037-011	AR	SHIM, tappet 2.50 t	
6	12037-012	AR	SHIM, tappet 2.55 t	
6	12037-013	AR	SHIM, tappet 2.60 t	
6	12037-014	AR	SHIM, tappet 2.65 t	
6	12037-015	AR	SHIM, tappet 2.70 t	
6	12037-016	AR	SHIM, tappet 2.75 t	
6	12037-017	AR	SHIM, tappet 2.80 t	
6	12037-018	AR	SHIM, tappet 2.85 t	
6	12037-019	AR	SHIM, tappet 2.90 t	
6	12037-020	AR	SHIM, tappet 2.95 t	
6	12037-021	AR	SHIM, tappet 3.00 t	
6	12037-022	AR	SHIM, tappet 3.05 t	
6	12037-023	AR	SHIM, tappet 3.10 t	
6	12037-024	AR	SHIM, tappet 3.15 t	
6	12037-025	AR	SHIM, tappet 3.20 t	
7	12032-005	8	TAPPET	
8	12011-002	16	COLLAR, valve spring	
9	12009-005	8	RETAINER, valve spring	
10	12007-012	8	SPRING, outer valve	
11	12007-011	8	SPRING, inner valve	
12	92049-016	8	OIL SEAL, RV371295	
13	12010-004	8	SEAT, valve spring	
14	12005-005	4	VALVE, exhaust	
15	12004-012	4	VALVE, inlet	


3. Cylinder, Piston, Crankshaft

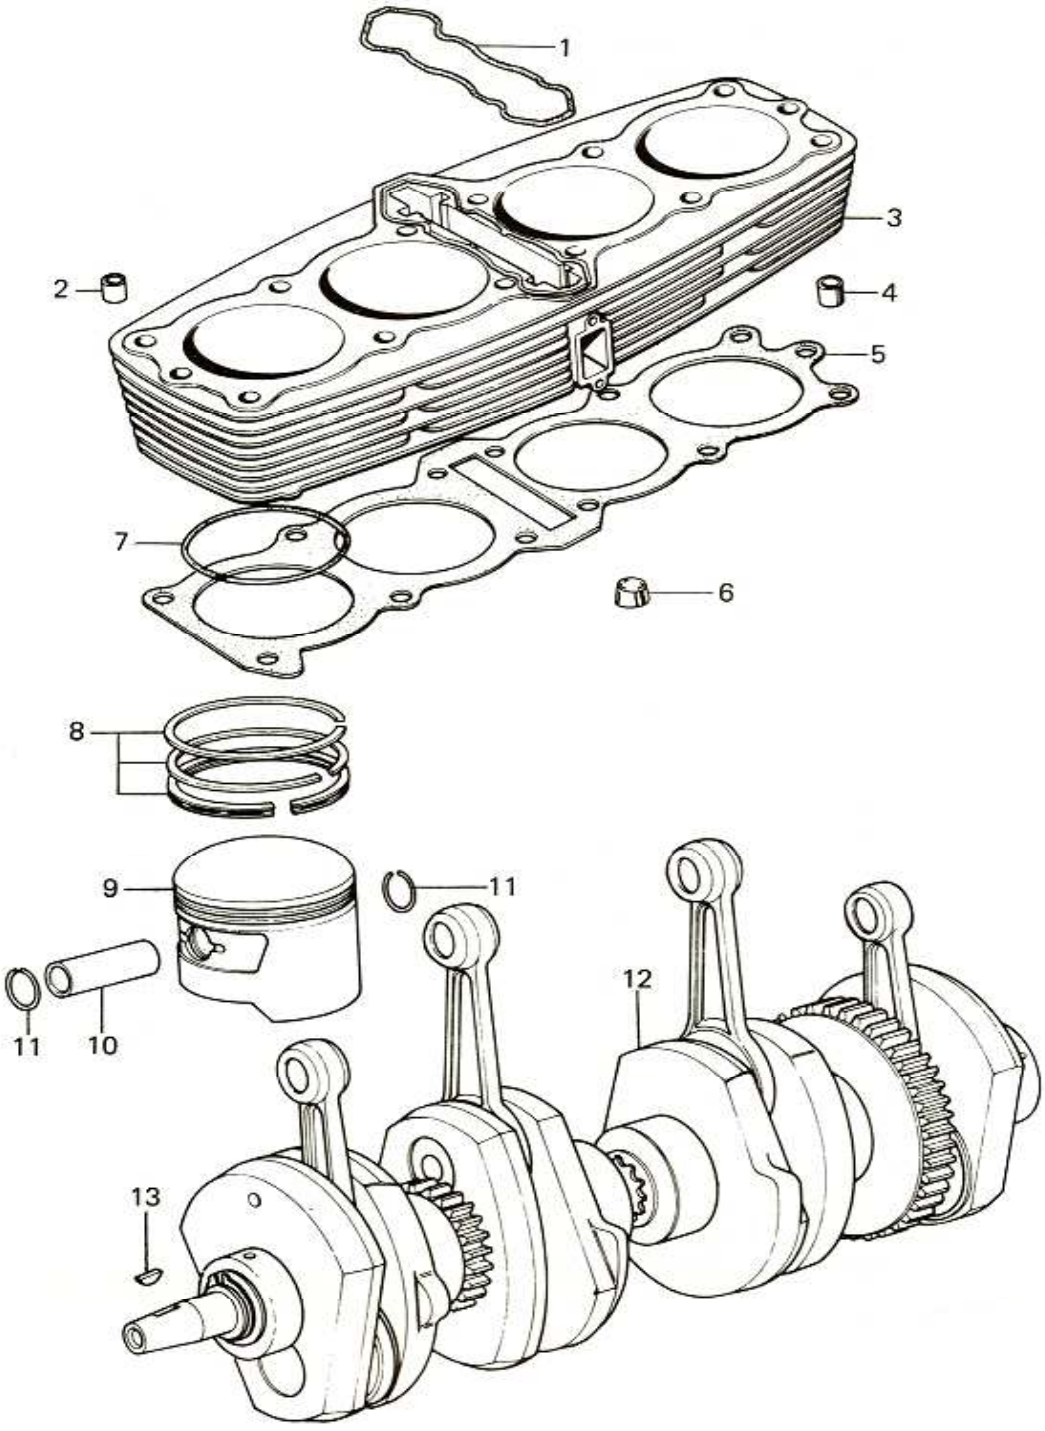

3. Cylinder, Piston, Crankshaft

No.	Part No.	Q'TY	PART NAME	
1	92055-062	1	O-RING, cylinder	
2	552A1-014	2	PIN, dowel, 10x14	
3	~~11005-1362-H~~	1	CYLINDER	**NLA**
4	92042-028	2	PIN, dowel	
5	11009-030	1	GASKET, cylinder base	
6	92074-030	8	RUBBER PLUG, cylinder	
7	92055-054	4	O-RING, 73mm	
8	13008-038	4	RING SET, STD	
8	13025-046	4	RING SET, 0.020	
8	13024-046	4	RING SET, 0,040	
9	~~13001-054~~	4	PISTON, STD	**NLA**
9	13029-058	4	PISTON, 0,020	
9	~~13027-056~~	4	PISTON, 0.040	**NLA**
10	13002-022	4	PIN, piston	
11	92036-021	8	CIRCLIP, piston pin	
12	~~13031-043~~	1	CRANKSHAFT ASSY	**NLA**
13	92038-001	1	WOODRUFF KEY	


4. Cam Chain, Tensioner

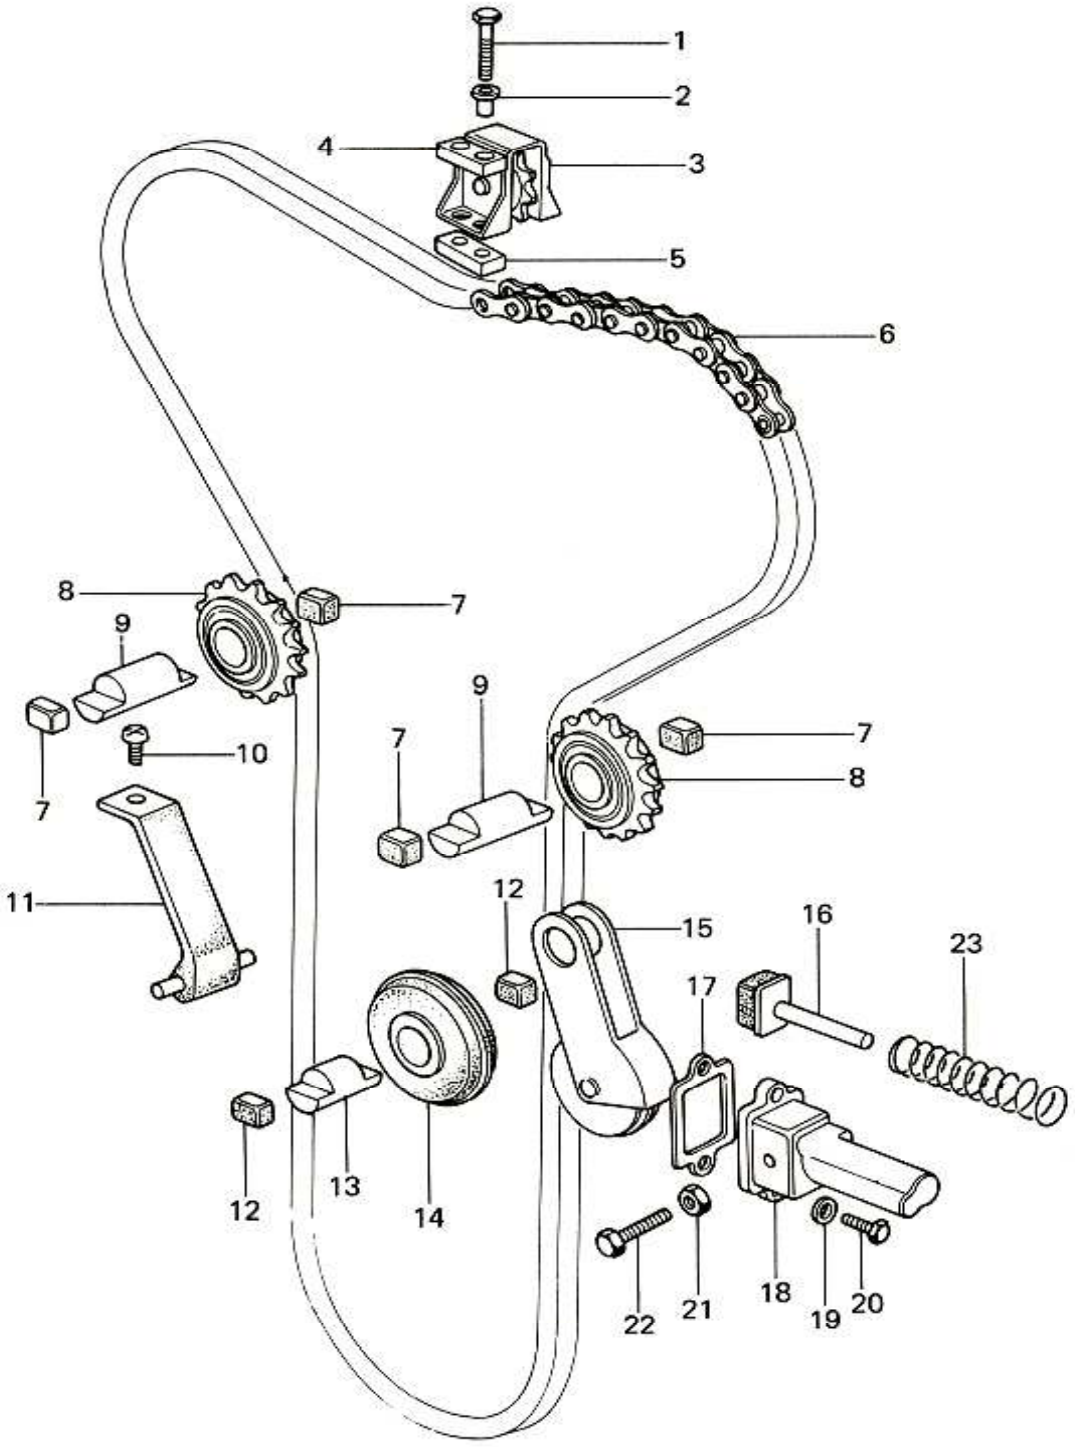

4. Cam Chain, Tensioner

No.	Part No.	Q'TY	PART NAME	
1	110G0-635	1	BOLT, hex head, 6x35	
2	92027-155	1	COLLAR, idler	
3	12057-001	1	IDLER ASSY, cam chain	
4	92075-119	2	DAMPER RUBBER, idler upper	
5	92075-120	2	DAMPER RUBBER, idler lower	
6	21070-003	1	CHAIN, cam	
7	92075-232	4	DAMPER RUBBER, guide roller	
8	12057-002	2	IDLER ASSY, cam chain	
9	12057-005	2	SHAFT, guide roller	
10	220B0-610	1	SCREW, pan head, 6x10	
11	12053-019	1	GUIDE, cam chain	
12	92075-123	2	DAMPER RUBBER, guide roller	
13	12052-003	1	SHAFT	
14	12055-002	1	ROLLER, cam chain guide	
15	12048-001	1	TENSIONER ASSY, cam chain	
16	~~12054-001~~	1	ROD ASSY, push	**NLA**
17	12056-001	1	GASKET, tensioner holder	
18	12047-003	1	HOLDER, cam chain tensioner	
19	410B0-600	2	WASHER, plain, 6mm	
20	110B0-620	2	BOLT, hex head, 6x20	
21	311B0-600	1	NUT, 6mm	
22	~~92003-093~~	1	BOLT, tensioner adjusting	**NLA**
23	~~92081-107~~	1	SPRING, tensioner	**NLA**


5. Crank Case

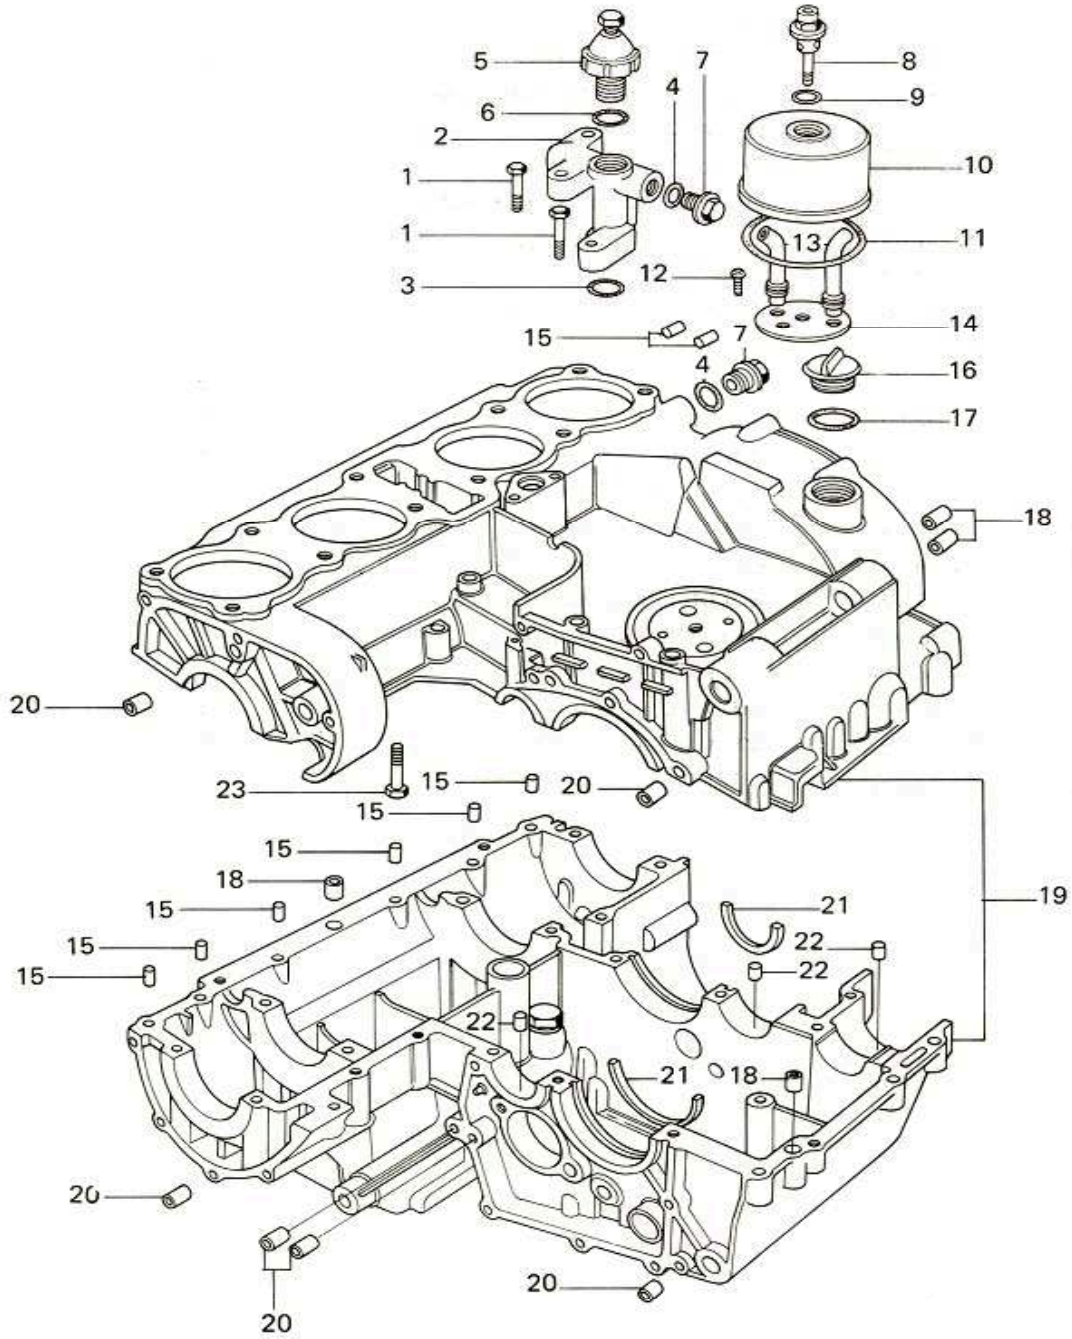
5
7
8
4
9
6
2
10
1
1
13
11
3
12
15
7
14
4
16
17
18
20
23
15
20
15
15
18
19
15
21
15
22
15
22
22
21
18
20
20
20

5. Crank Case

No.	Part No.	Q'TY	PART NAME	
1	92001-153	4	BOLT, oil pipe	
2	~~16109-003~~	1	PIPE, oil	**NLA**
3	670B2-018	2	O-Ring, 18mm	
4	670B2-015	2	O-Ring, 15mm	
5	16144-004	1	SWITCH ASSY, oil pressure	
6	92055-055	1	O-Ring, oil pressure	
7	92066-021	2	PLUG, oil pipe	
8	~~92003-098~~	1	BOLT, breather	**NLA**
9	670B2-016	1	O-RING, 16mm	
10	~~14070-003~~	1	BODY, breather	**NLA**
11	92055-052	1	O-RING, breather body	
12	220B0-618	2	SCREW, pan head, 6x18	
13	~~92059-118~~	2	TUBE, breather	**NLA**
14	14068-007	2	PLATE, breather	
15	~~610A0-614~~	8	PIN, dowel, 6x14	**NLA**
16	16115-013	1	PLUG, oil filler	
17	92055-049	1	O-RING, oil filler plug	
18	552A1-014	4	PIN, dowel, 10x14	
19	~~14001-0522-J~~	1	CRANKCASE SET	**NLA**
20	92042-007	6	PIN, dowel, 8x14	
21	14013-001	2	RING, bearing setting, 62mm	
22	92042-016	3	PIN, dowel, 6x16	
23	92003-107	4	BOLT, hex head, 8x72	


6. Crank Case Bolt & Stud Pattern

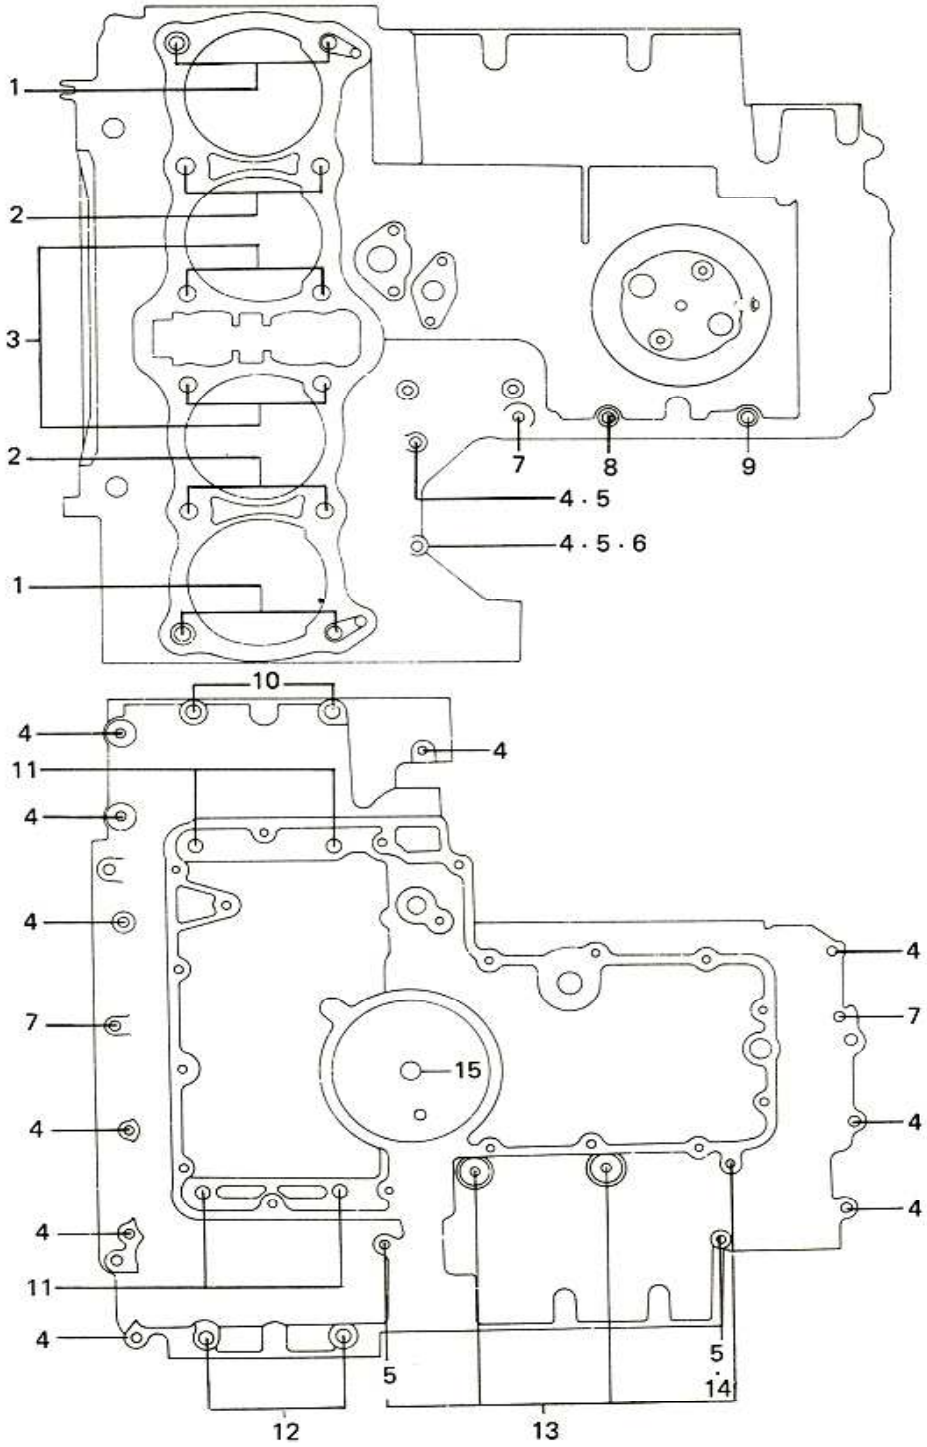

6. Crank Case Bolt & Stud Pattern

No.	Part No.	Q'TY	PART NAME	
1	92004-046	4	STUD, 10x184	
2	92004-047	4	STUD, 10x158	
3	92004-045	4	STUD, 10x192	
4	92003-109	12	BOLT, hex head, 6x41	
5	21126-007	4	CLAMP, wiring harness	
6	410B0-600	1	WASHER, plain, 6mm	
7	~~92003-110~~	3	BOLT, hex head, 6x54	**NLA**
8	~~92003-111~~	1	BOLT, hex head, 6x99	**NLA**
9	~~92003-113~~	1	BOLT, hex head, 6x116	**NLA**
10	92003-106	2	BOLT, hex head, 8x95	
11	92003-107	4	BOLT, hex head, 8x72	
12	92003-108	2	BOLT, hex head, 8x81	
13	92003-112	4	BOLT, hex head, 6x94	
14	~~92003-114~~	1	BOLT, hex head, 6x72	**NLA**
15	92055-048	1	O-RING	


7. Clutch

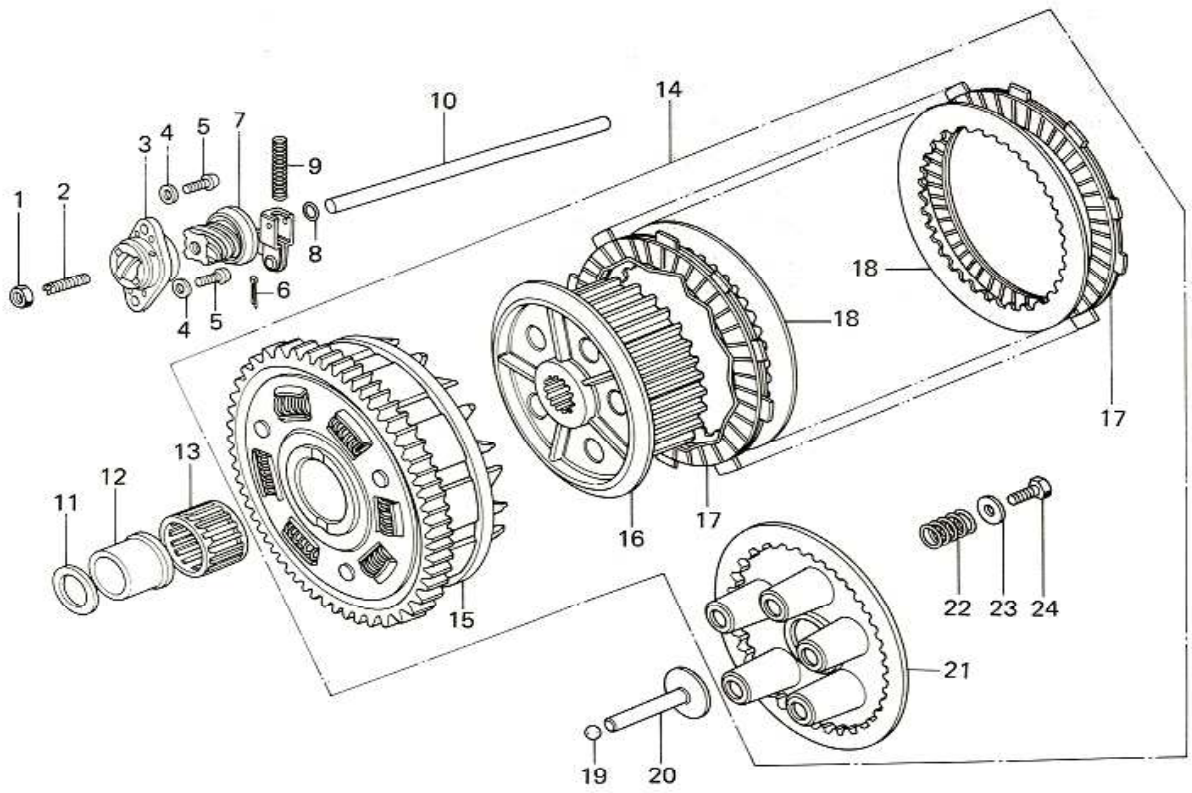

7. Clutch

No.	Part No.	Q'TY	PART NAME	
1	315B0-800	1	NUT, 8mm	
2	~~92014-014~~	1	SCREW, slotted, 8x25	**NLA**
3	~~13118-007~~	1	OUTER, clutch release	**NLA**
4	411B0-600	2	WASHER, plain, 6mm	
5	220B0-616	2	SCREW, pan head, 6x16	
6	550D1-615	1	PIN, cotter, 1.6x15	
7	~~13102-013~~	1	INNER, clutch release	**NLA**
8	670B1-507	1	O-RING, 7mm	
9	92081-069	1	SPRING, clutch release	
10	13116-021	1	ROD, clutch push	
11	92026-022	1	WASHER, clutch thrust	
12	~~92028-135~~	1	BUSHING, clutch	**NLA**
13	92046-028	1	NEEDLE BEARING, clutch	
14	~~13081-045~~	1	CLUTCH ASSY	**NLA**
15	~~13095-036~~	1	HOUSING, clutch	**NLA**
16	~~13087-031~~	1	HUB, clutch	**NLA**
17	13088-030	8	PLATE, clutch friction	
18	13089-022	7	PLATE, clutch steel	
19	600A1-200	1	BALL, steel, 3/8"	
20	13116-022	1	PUSHER, clutch spring plate	
21	13187-006	1	PLATE, clutch spring	
22	92081-105	5	SPRING, clutch	
23	13091-011	5	HOLDER, clutch spring	
24	110B0-618	5	BOLT, hex head, 6x18	


8. Transmission Gears 1/2

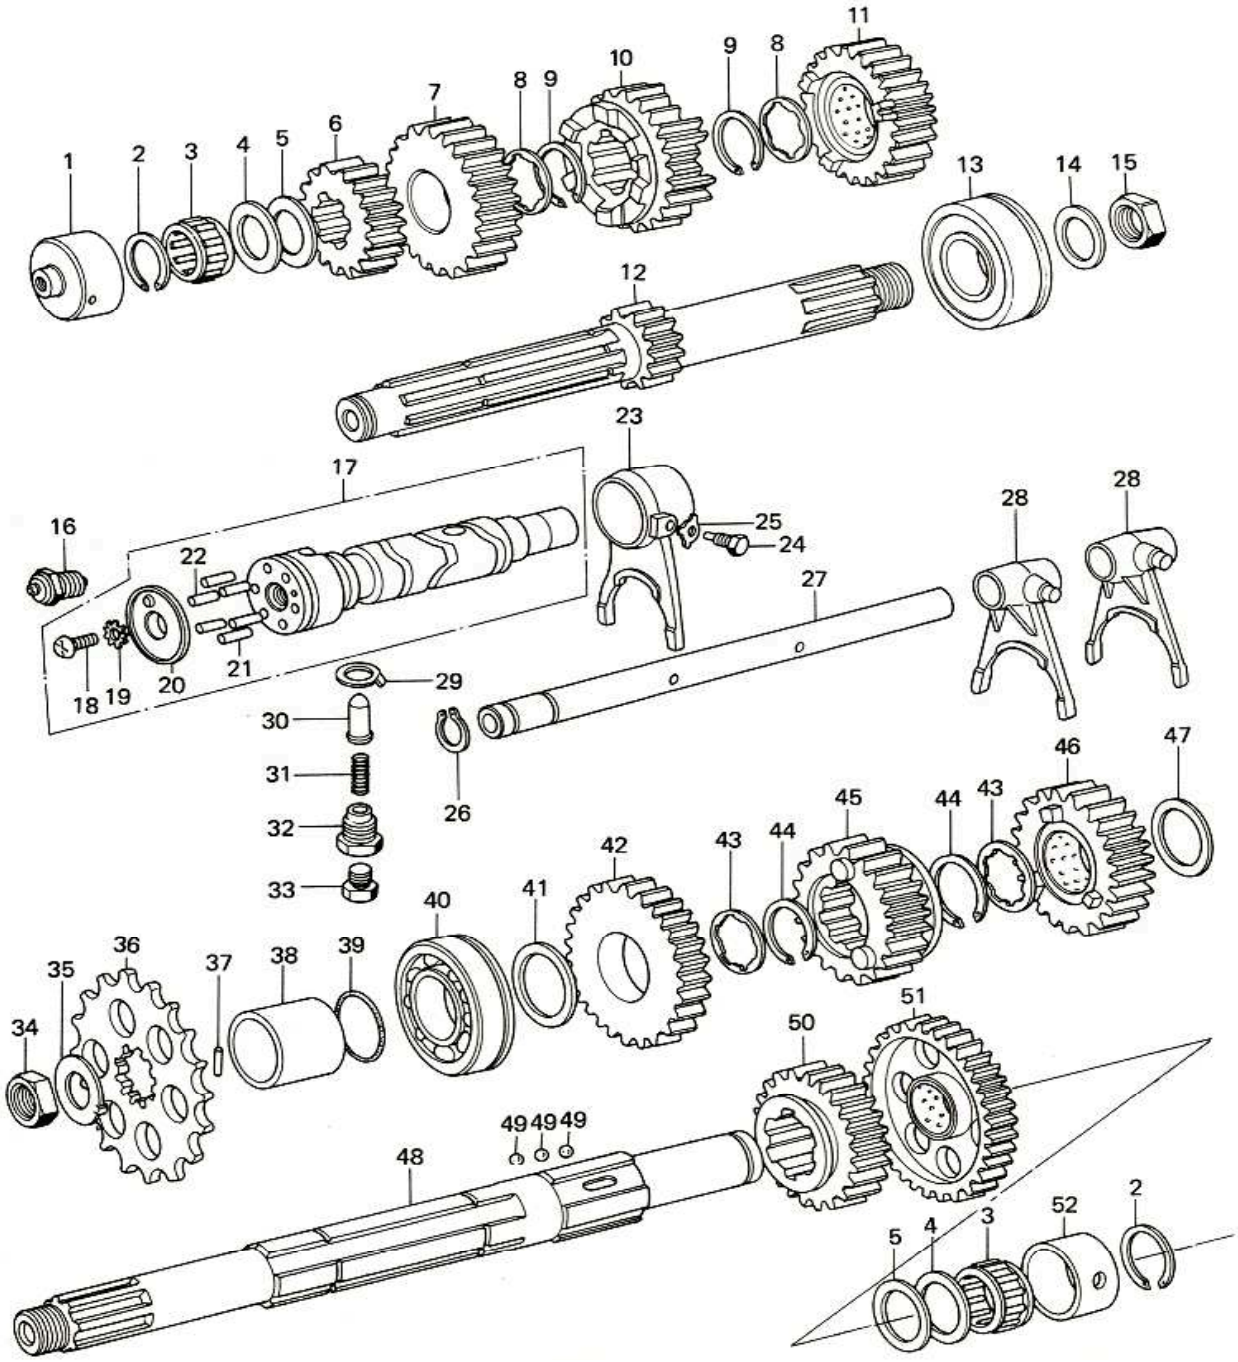

8. Transmission Gears 1/2

No.	Part No.	Q'TY	PART NAME	
1	92028-122	1	BUSHING, drive shaft	
2	92033-025	2	CIRCLIP, drive shaft	
3	92046-031	2	NEEDLE BEARING PK223013.8	
4	92022-212	2	WASHER, thrust 1.6 t	
5	92022-213	2	WASHER, thrust 1.2 t	
5	92022-211	2	WASHER, thrust 1.0 t	
6	~~13130-032~~	1	2ND GEAR, drive shaft	**NLA**
7	~~13136-042~~	1	TOP GEAR, drive shaft	**NLA**
8	92024-042	2	WASHER, lock	
9	480J2-800	2	CIRCLIP, 28mm	
10	~~13132-030~~	1	3RD GEAR, drive shaft	**NLA**
11	13134-016	1	4TH GEAR, drive shaft 21T	
12	~~13127-042~~	1	SHAFT, drive	**NLA**
13	92045-022	1	BEARING, ball, #5305NB	
14	~~92125-002~~	1	WASHER	**NLA**
15	92019-015	1	NUT, lock, 20mm	
16	13151-022	1	SWITCH, neutral indicator	
17	~~13239-010~~	1	DRUM ASSY, gear change	**NLA**
18	220B0-614	1	SCREW, pan head, 6x14	
19	464G0-600	1	WASHER, lock, 6mm	
20	13142-013	1	PLATE, change drum pin	
21	92042-014	1	PIN, change drum, L=15.8mm	
22	92042-020	5	PIN, change drum, L=17.8mm	
23	~~13140-046~~	1	SHIFT FORK	**NLA**
24	92043-016	1	PIN, shift fork	
25	92031-001	1	WASHER, lock	
26	480J1-200	1	CIRCLIP, 12mm	
27	~~13209-011~~	1	ROD, shift	**NLA**
28	13140-045	2	SHIFT FORK	
29	~~92024-047~~	1	WASHER, lock	**NLA**
30	~~92043-085~~	1	PIN, selector fork	**NLA**
31	92081-106	1	SPRING, change drum positioning	
32	~~92001-112~~	1	BOLT, change drum positioning	**NLA**
33	92001-119	1	BOLT	
34	92016-028	1	NUT, 20mm	
35	92024-044	1	WASHER, lock, 12mm	
36	13144-062	1	ENGINE SPROCKET 15T	
37	92043-109	1	PIN	
38	92027-152	1	COLLAR, engine sprocket	
39	92055-035	1	O-RING	
40	92045-021	1	BALL BEARING, BL305	
41	~~92022-210~~	1	WHASHER, thrust	**NLA**
42	13131-038	1	2ND GEAR, output shaft 35T	


8. Transmission Gears 2/2

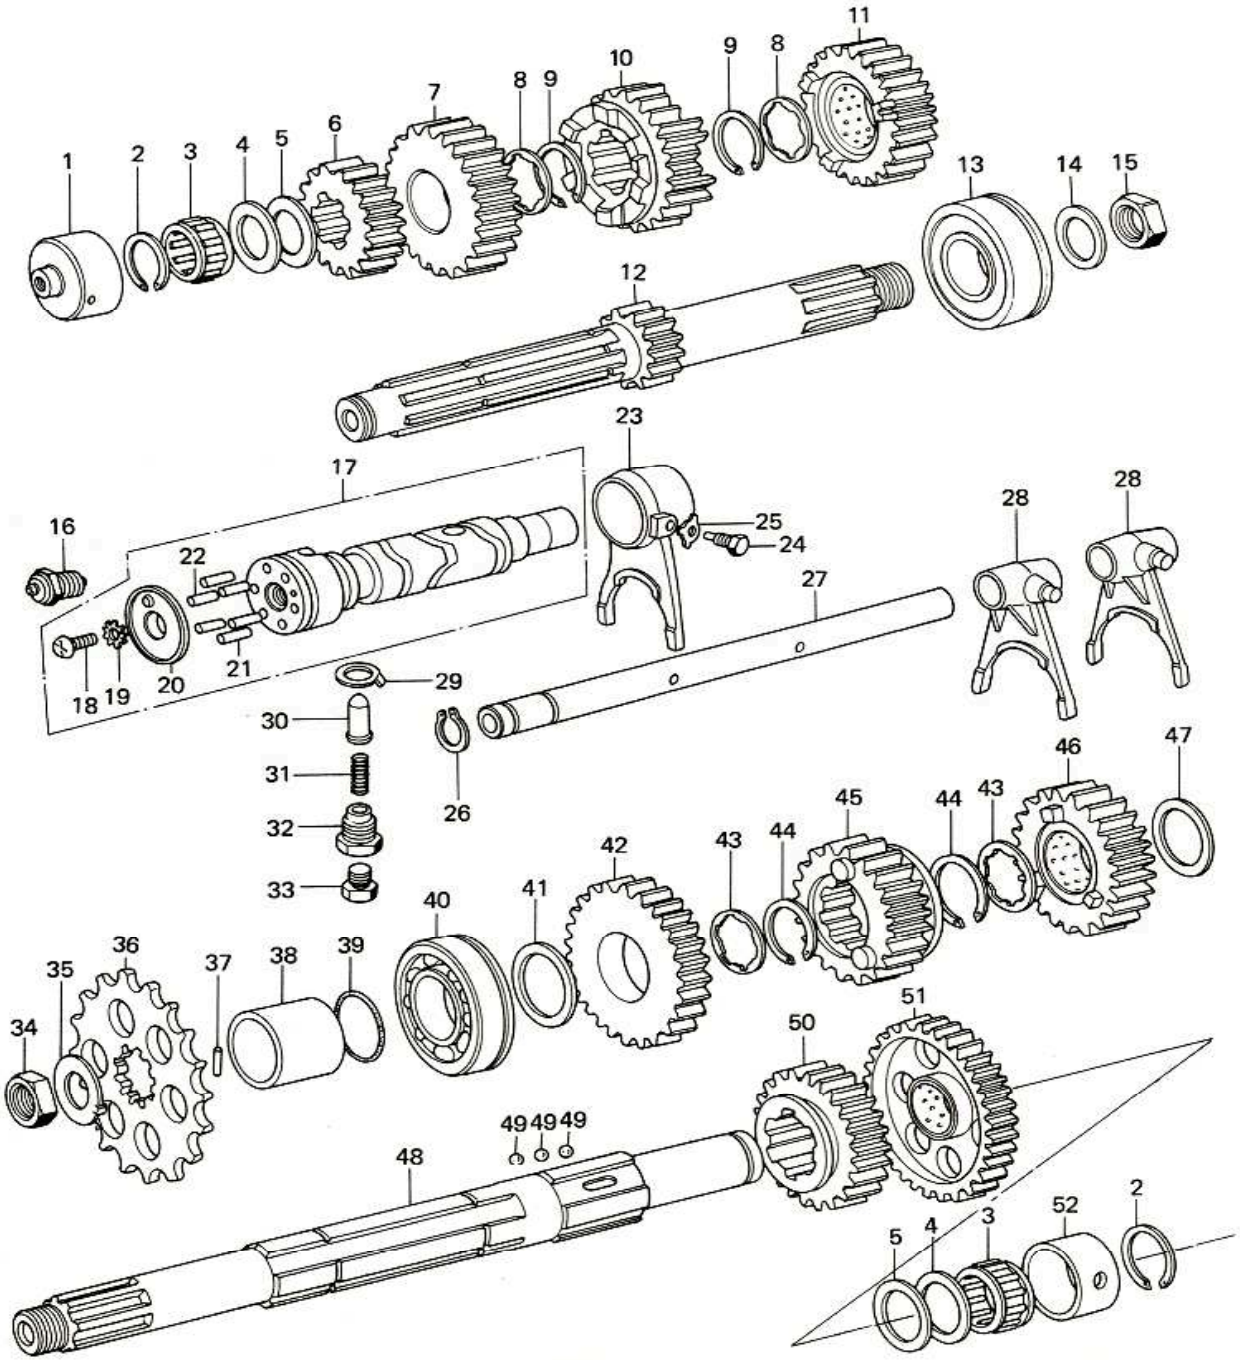

8. Transmission Gears 2/2

No.	Part No.	Q'TY	PART NAME	
43	92024-043	2	WASHER, lock	
44	480J3-000	2	CIRCLIP, 30mm	
45	13137-025	1	TOP GEAR, output shaft 28T	
46	13133-031	1	3RD GEAR, output shaft 35T	
47	~~92022-209~~	1	WHASHER, thrust	**NLA**
48	~~13128-037~~	1	SHAFT, output	
49	600A0-600	3	BALL, steel, 3/16"	
50	~~13135-020~~	1	4TH GEAR, output shaft 29T	**NLA**
51	~~13129-046~~	1	LOW GEAR, output shaft 38T	**NLA**
52	92028-123	1	BUSHING, output shaft	


9. Gear Change Mechanism

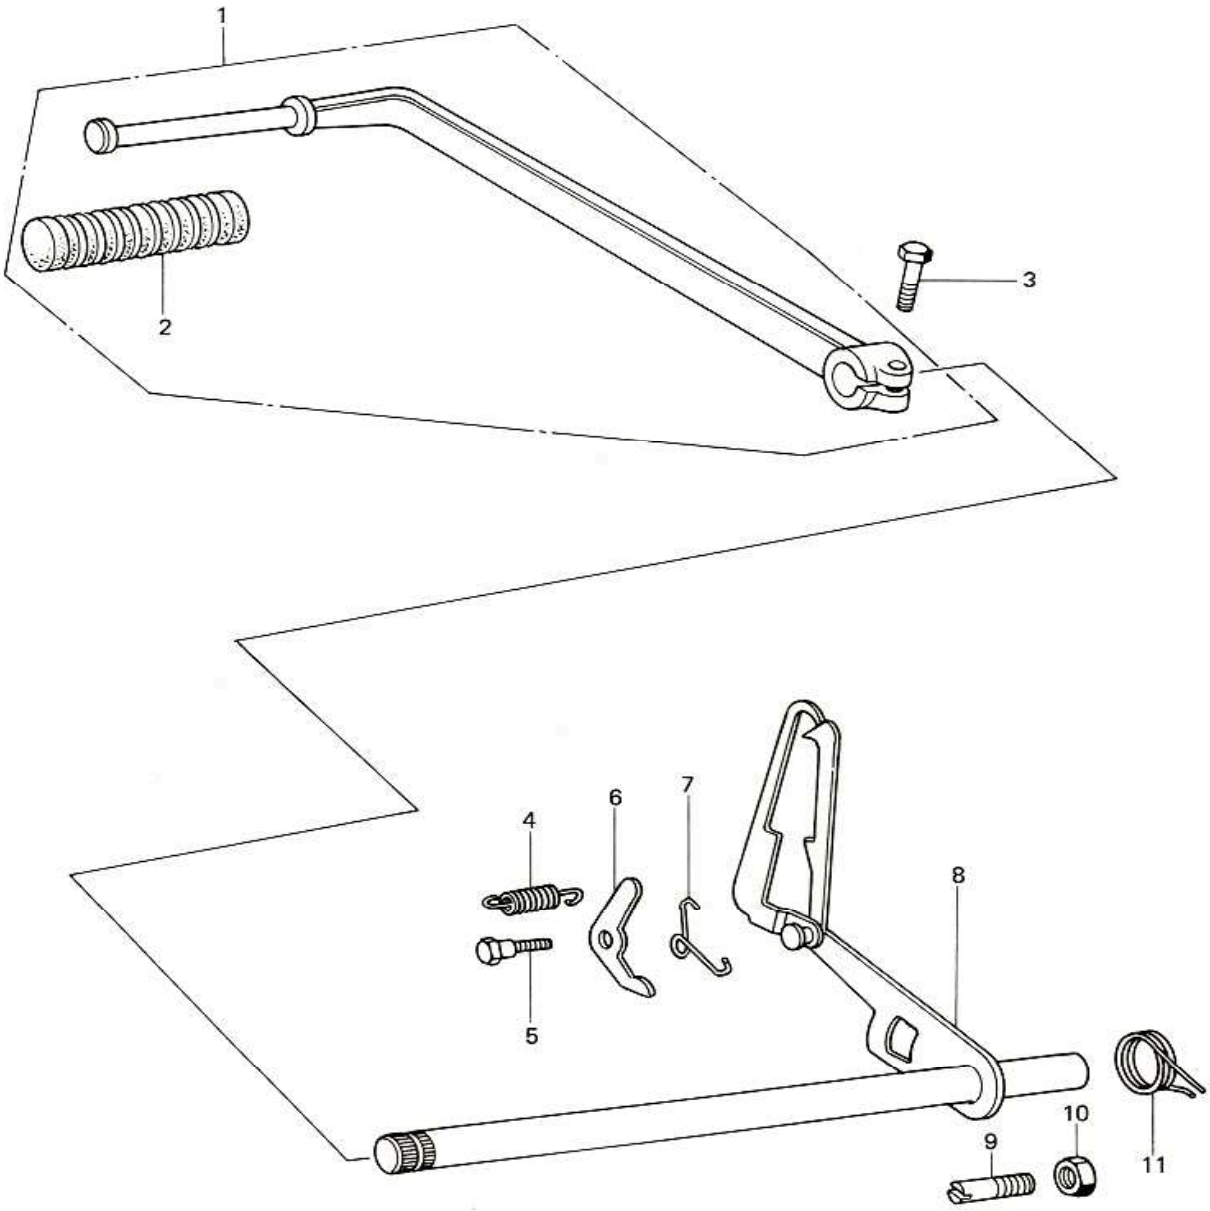

9. Gear Change Mechanism

No.	Part No.	Q'TY	PART NAME	
1	13242-006	1	PEDAL ASSY, gear change	
2	13157-004	1	RUBBER, change pedal	
3	110N0-620	1	BOLT, hex head, 6x20	
4	92081-051	1	SPRING, change drum lever	
5	92001-012	1	BOLT, change drum lever	
6	~~13168-024~~	1	LEVER, change drum	**NLA**
7	92083-018	1	SPRING, change lever	
8	13161-029	1	LEVER ASSY, gear change	
9	~~92043-057~~	1	PIN, change drum return spring	**NLA**
10	312B0-800	1	NUT, 8mm	
11	92083-028	1	SPRING, change pedal return	


10. Kickstarter

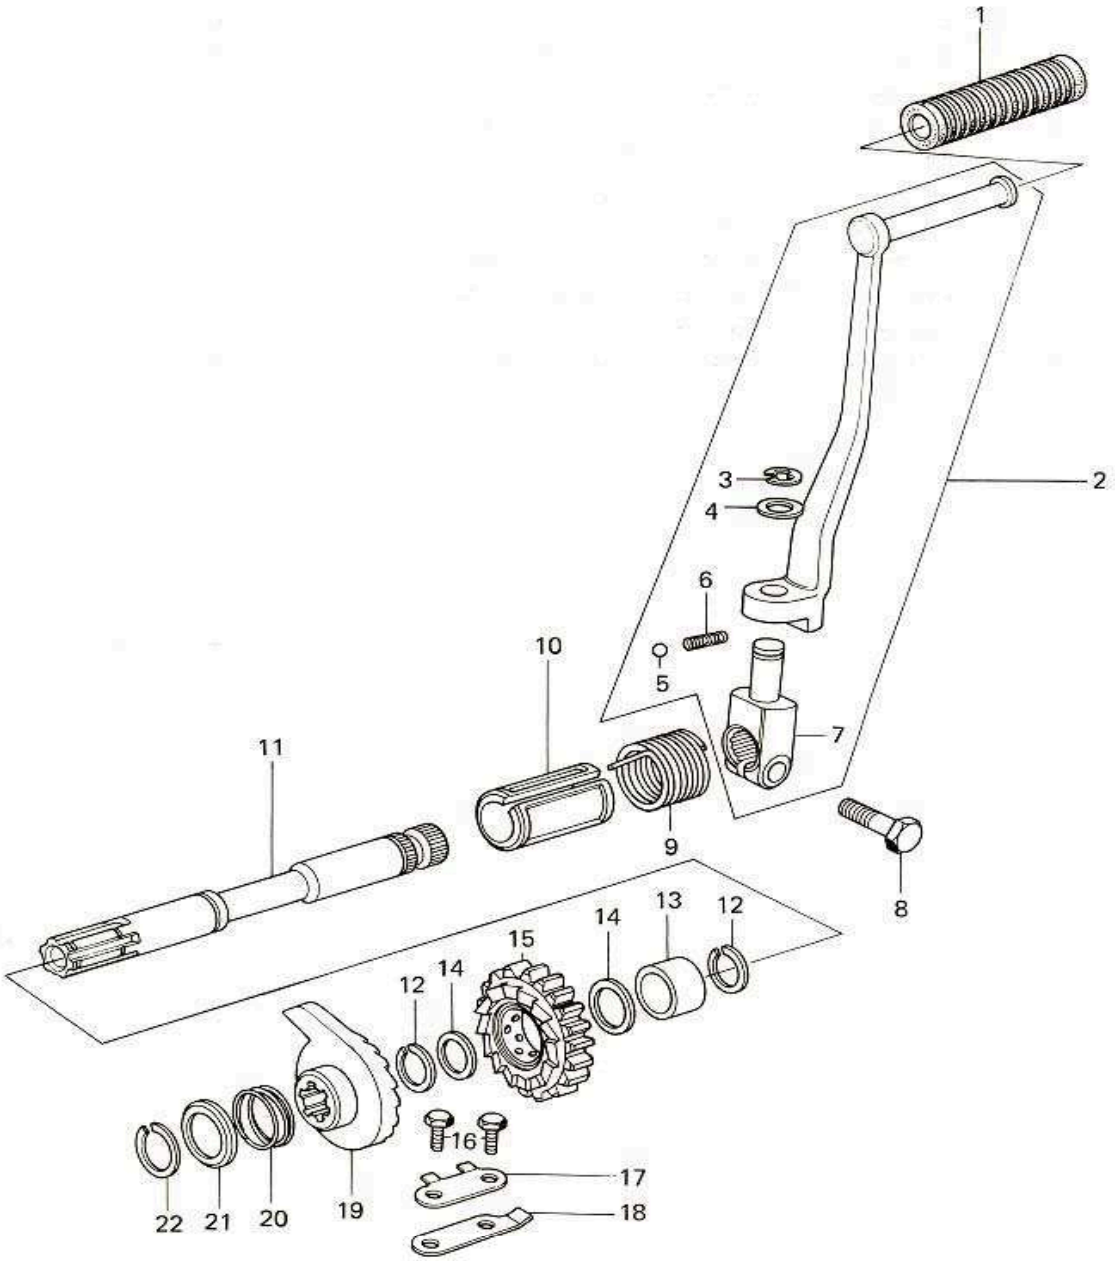

10. Kickstarter

No.	Part No.	Q'TY	PART NAME	
1	13063-004	1	RUBBER, kick peal	
2	~~13058-044~~	1	PEDAL ASSY, kickstarter	**NLA**
3	482J0-100	1	CIRCLIP, 10mm	
4	92022-085	1	WAHSER, plain	
5	600A0-800	1	BALL, steel, 1/4"	
6	92081-020	1	SPRING, kick pedal	
7	~~13061-017~~	1	BOSS, kick pedal	**NLA**
8	~~114B1-025~~	1	BOLT, hex head, 10x25	**NLA**
9	~~92082-004~~	1	SPRING, kickstarter	**NLA**
10	~~13070-005~~	1	GUIDE, kick spring	**NLA**
11	~~13066-029~~	1	SHAFT, kickstarter	**NLA**
12	92033-025	2	CIRCLIP, 19mm	
13	~~92028-126~~	1	COLLAR, Kickshaft	**NLA**
14	~~92022-207~~	1	WASHER, thrust	**NLA**
15	13068-028	1	GEAR, kickstarter	
16	116B0-614	2	BOLT, hex head, 6x14	
17	~~92024-036~~	1	WASHER, lock, 6mm	**NLA**
18	13072-012	1	STOPPER, kickshaft	
19	13078-006	1	RATCHET	
20	92081-104	1	SPRING, ratchet	
21	~~92102-008~~	1	HOLDER, ratchet spring	**NLA**
22	480J1-900	1	CIRCLIP, 19mm	


11. Engine Covers

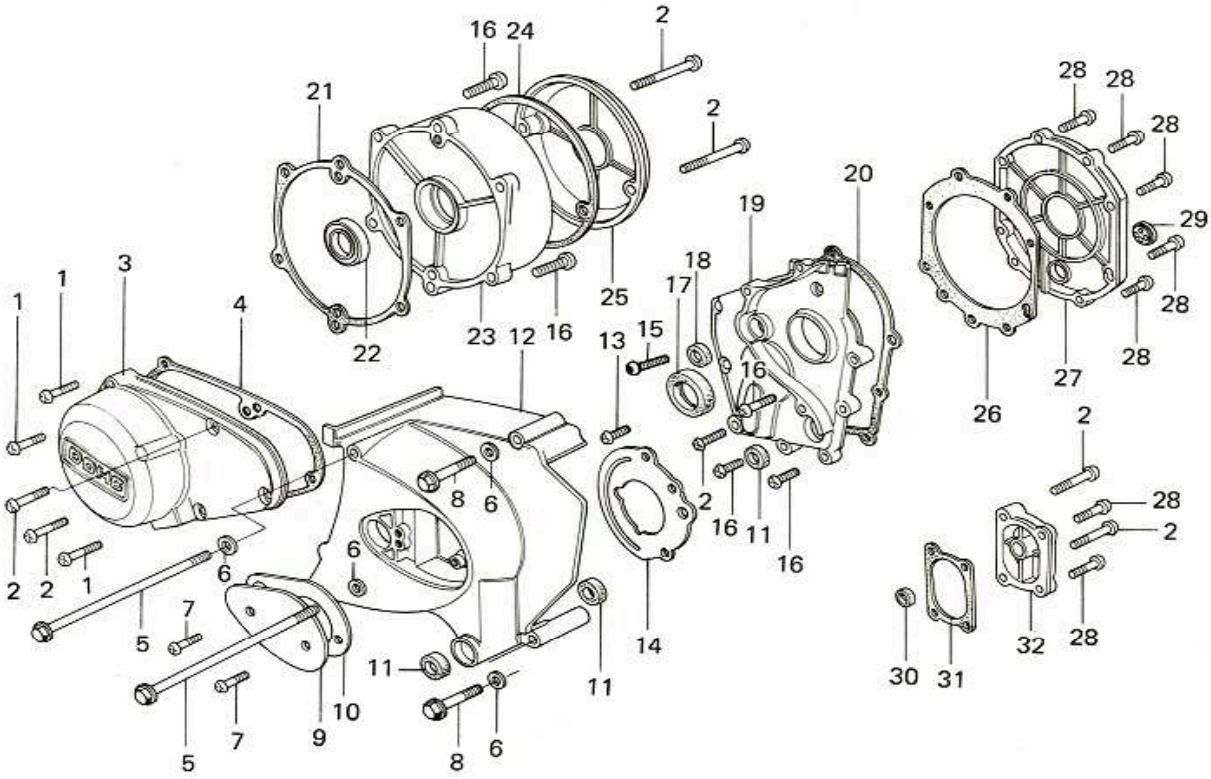

11. Engine Covers

No.	Part No.	Q'TY	PART NAME	
1	220B0-630	7	SCREW, pan head, 6x30	
2	220B0-640	8	SCREW, pan head, 6x40	
3	14031-053	1	COVER, LH, engine	
4	14045-014	1	GASKET, LH, engine cover	
5	110G0-6125	2	BOLT, hex head, 6x125	
6	410B0-600	4	WASHER, plain, 6mm	
7	220B0-616	2	SCREW, pan head, 6x16	
8	110G0-671	2	BOLT, hex head, 6x71	
9	~~14026-012~~	1	COVER, oil pump	**NLA**
10	~~14045-015~~	1	GASKET, oil pump cover	**NLA**
11	92049-004	3	OIL SEAL, SB12205	
12	~~14026-026~~	1	COVER, front chain	**NLA**
13	220B0-612	2	SCREW, pan head, 6x12	
14	~~14024-008~~	1	COVER, engine sprocket	**NLA**
15	220B0-628	1	SCREW, pan head, 6x28	
16	220B0-622	11	SCREW, pan head, 6x22	
17	92050-024	1	OIL SEAL, SC325210	
18	92050-048	1	OIL SEAL, TC7187	
19	14024-007	1	COVER, transmission	
20	14058-004	1	GASKET, transmission cover	
21	14046-023	1	GASKET, RH, engine cover	
22	92050-047	1	OIL SEAL	
23	14032-083	1	COVER, RH, engine	
24	14050-006	1	GASKET, contact breaker cap	
25	14027-015	1	CAP, contact breaker	
26	14046-024	1	GASKET, clutch cover	
27	~~14032-082~~	1	COVER, clutch	**NLA**
28	220B0-625	11	SCREW, pan head, 6x25	
29	52015-004	1	GAUGE, oil level	
30	92049-001	1	OIL SEAL, SB22325.5	
31	14046-025	1	GASKET, kickshaft cover	
32	~~14032-0752-H~~	1	COVER, kickstarter	**NLA**


12. Carburetors 1/3

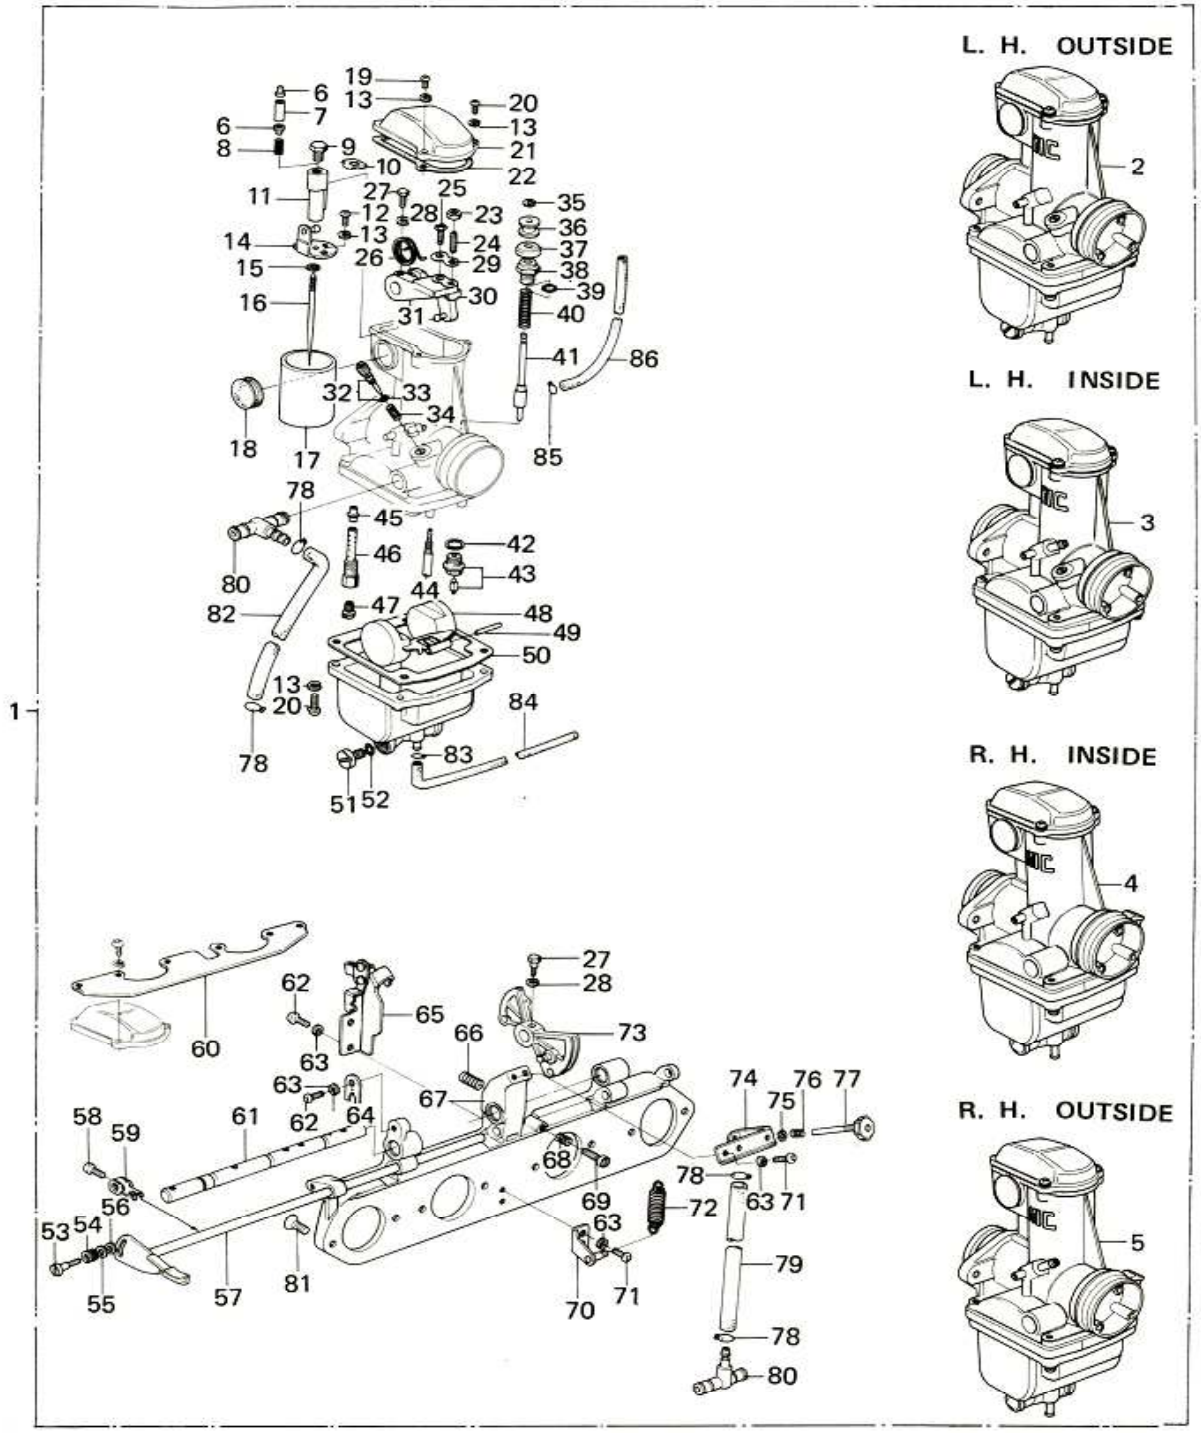

12. Carburetors 1/3

No.	Part No.	Q'TY	PART NAME	
1	~~16001-255~~	1	CARBURETOR ASSY	**NLA**
2	~~16001-268~~	1	CARBURETOR LH, outside	**NLA**
3	~~16001-269~~	1	CARBURETOR LH, inside	**NLA**
4	~~16001-270~~	1	CARBURETOR RH, inside	**NLA**
5	~~16001-271~~	1	CARBURETOR RH, outside	**NLA**
6	16057-002	8	SEAT, spring	
7	~~16042-009~~	4	PIN	**NLA**
8	~~16040-004~~	4	SPRING	**NLA**
9	~~16067-008~~	4	BOLT	**NLA**
10	16054-003	4	WASHER, lock	
11	16052-003	4	SHAFT, throttle valve	
12	16033-015	8	SCREW, pan head, 4x12	
13	461F0-400	36	WASHER, spring, 4mm	
14	~~16007-018~~	4	BRACKET, throttle valve	**NLA**
15	16008-004	4	CIRCLIP, jet needle	
16	16009-071	4	JET NEEDLE, 5DL3	
17	~~16025-075~~	4	VALVE, throttle CA1.5	**NLA**
18	~~16039-042~~	2	CAP, rubber	**NLA**
19	16033-013	6	SCREW, pan head, 4x14	
20	16033-009	22	SCREW, pan head, 4x16	
21	~~16005-027~~	4	TOP, mixing chamber	**NLA**
22	16019-031	4	GASKET, mixing chamber top	
23	16003-013	4	NUT, 5mm	
24	~~16046-009~~	4	SCREW, slotted	**NLA**
25	~~16067-009~~	4	BOLT, 4x16	**NLA**
26	~~16040-021~~	4	SPRING, lever	**NLA**
27	16067-006	5	BOLT, throttle lever	
28	461F0-500	5	WASHER, spring, 5mm	
29	~~16054-008~~	4	WASHER, plate	**NLA**
30	~~16068-013~~	4	LEVER, throttle	**NLA**
31	~~16068-012~~	4	LEVER	**NLA**
32	16014-017	4	SCREW, pilot air adjusting	
33	16038-022	4	O-RING	
34	16022-007	4	SPRING, pilot air screw	
35	16076-003	4	CIRCLIP	
36	16073-014	4	COLLAR	
37	16039-015	4	RUBBER CAP	
38	16012-015	4	CAP, starter plunger	
39	670B1-509	4	O-RING, 9mm	
40	16013-008	4	SPRING, starter plunger	
41	~~16016-017~~	4	PLUNGER, starter	**NLA**
42	16029-004	4	GASKET, float valve seat	
43	16030-027	4	FLOAT VALVE ASSY	


12. Carburetors 2/3

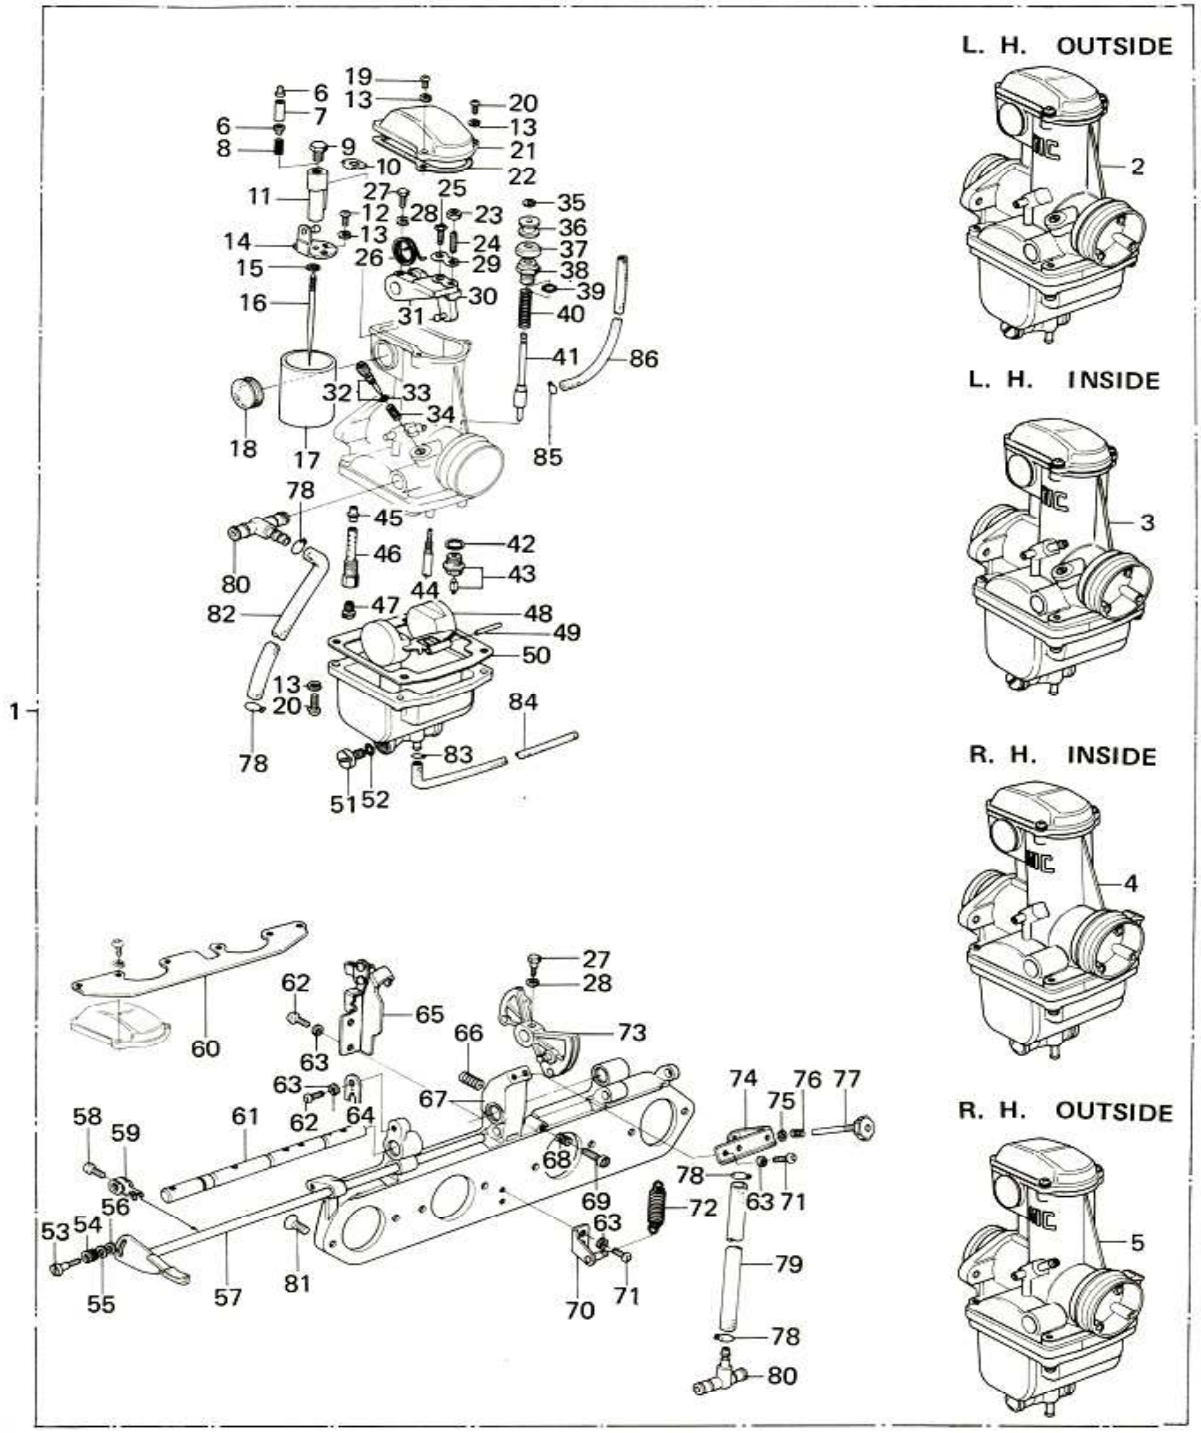

12. Carburetors 2/3

No.	Part No.	Q'TY	PART NAME	
44	92064-042	4	PILOT JET, 17.5	
45	16017-093	4	NEEDLE JET, 0-6	
46	~~16047-004~~	4	HOLDER, needle jet	**NLA**
47	~~92063-076~~	4	MAIN JET, #115 STD	**NLA**
47	92063-074	(4)	MAIN JET, #110 OPTION	
47	92063-075	(4)	MAIN JET, #112.5 OPTION	
47	92063-077	(4)	MAIN JET, #117.5 OPTION	
47	92063-078	(4)	MAIN JET, #120 OPTION	
48	16031-031	4	FLOAT	
49	16032-003	4	PIN, float	
50	16019-030	4	GASKET, float chamber	
51	~~16049-005~~	4	SCREW, guide	**NLA**
52	16038-016	4	O-RING, guide screw	
53	~~16046-005~~	1	SCREW, starter lever	**NLA**
54	16040-009	1	SPRING, starter lever screw	
55	~~16039-020~~	1	WASHER, plain	**NLA**
56	~~16039-019~~	1	WASHER, plain	**NLA**
57	~~16041-016~~	1	SHAFT, starter plunger	**NLA**
58	16046-007	4	SCREW, pan head	
59	16068-014	4	LEVER, starter plunger	
60	16065-040	1	PLATE, carburetor connection	
61	16041-017	1	SHAFT, carburetor connection	
62	~~16033-016~~	5	SCREW, pan head, 5x14	**NLA**
63	461F0-500	7	WASHER, spring, 5mm	
64	~~16055-012~~	1	PLATE, shaft stopper	**NLA**
65	~~16077-014~~	1	BRACKET, throttle cable pully	**NLA**
66	16040-022	1	SPRING, throttle cable pully braket	
67	~~16065-039~~	1	HOLDER, carburetor mounting	**NLA**
68	16022-010	1	SPRING	
69	~~16021-020~~	1	SCREW	**NLA**
70	~~16077-012~~	1	BRACKET, throttle cable pully	**NLA**
71	~~16033-016~~	2	SCREW, bracket fitting	**NLA**
72	~~16040-020~~	1	SPRING, throttle cable pully	**NLA**
73	~~16068-011~~	1	PULLY, throttle cable	**NLA**
74	~~16077-013~~	1	HOLDER, throttle cable	**NLA**
75	~~464H0-500~~	1	WASHER, lock, 5mm	**NLA**
76	~~16022-009~~	1	SPRING, throttle stop screw	**NLA**
77	~~16021-028~~	1	SCREW, throttle stop	**NLA**
78	92037-072	4	CLAMP, fuel hose	
79	92059-084	2	HOSE, fuel L=260mm	
80	16046-002	2	NIPPLE, fuel hose	
81	~~16033-029~~	8	SCREW, countersunk head, 6x14	**NLA**
82	92037-173	4	CLAMP, overflow hose	


12. Carburetors 3/3

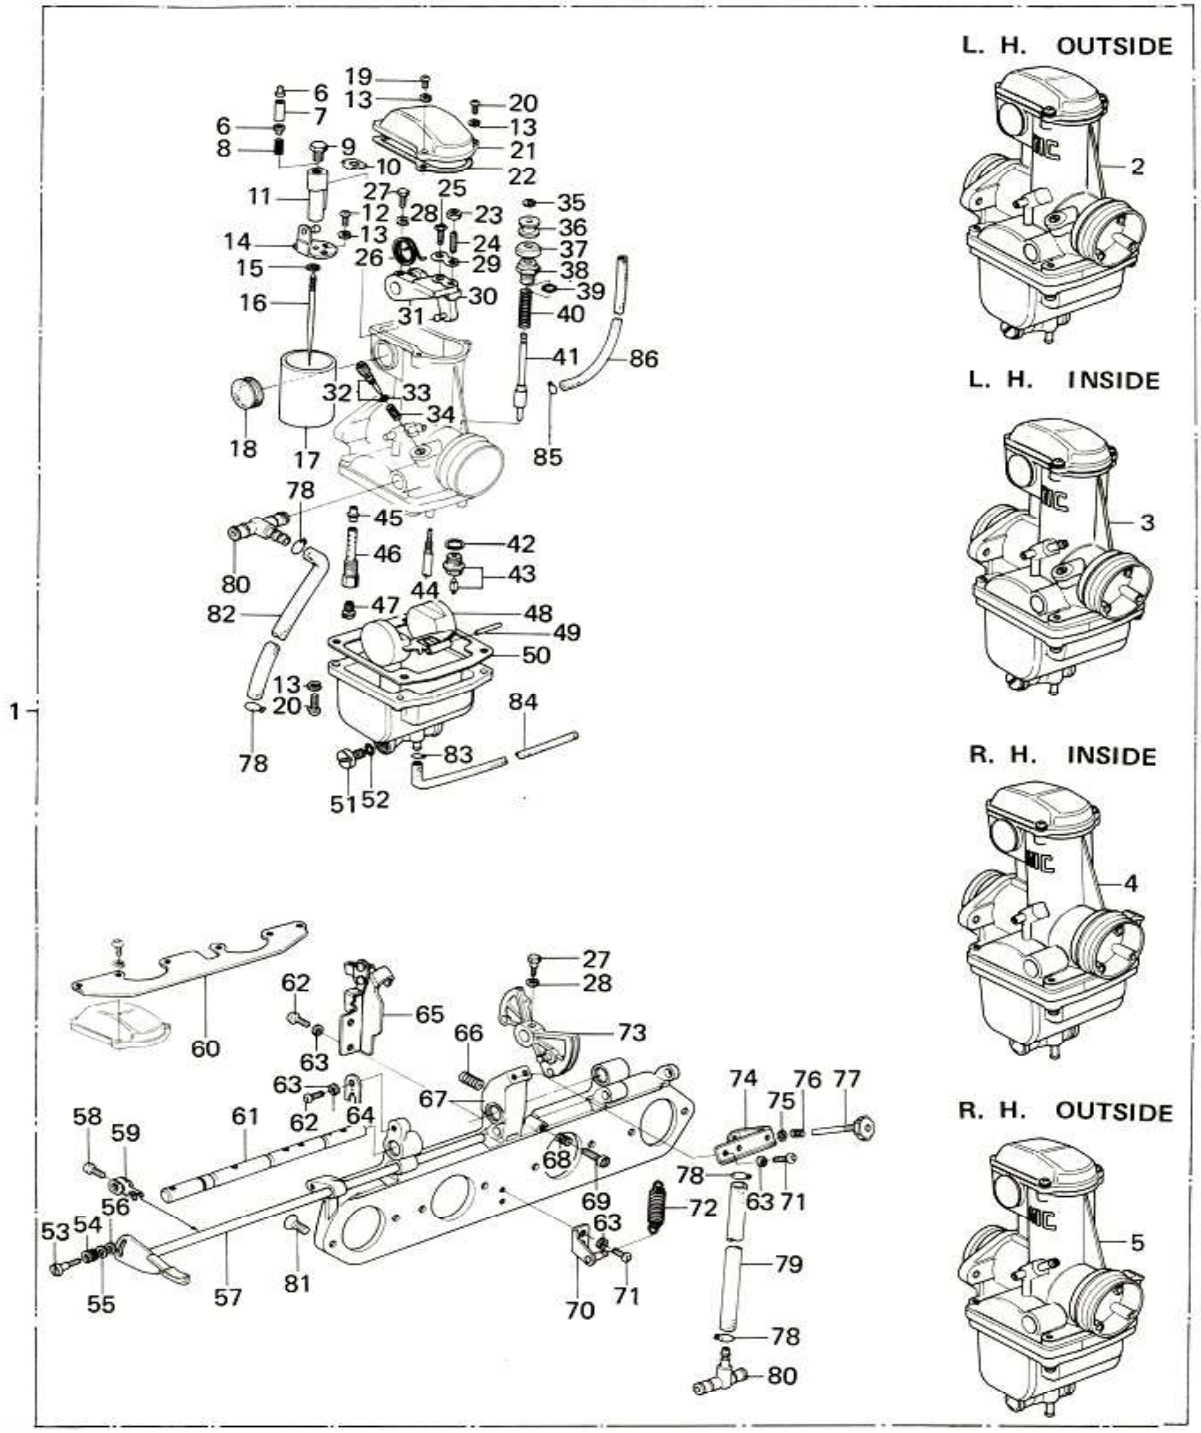

12. Carburetors 3/3

No.	Part No.	Q'TY	PART NAME	
83	92059-134	4	HOSE, fuel overflow	
84	92037-174	2	CLAMP, breather hose	
85	~~92059-135~~	2	HOSE, breather	**NLA**


13. Oil Pump, Oil Filter

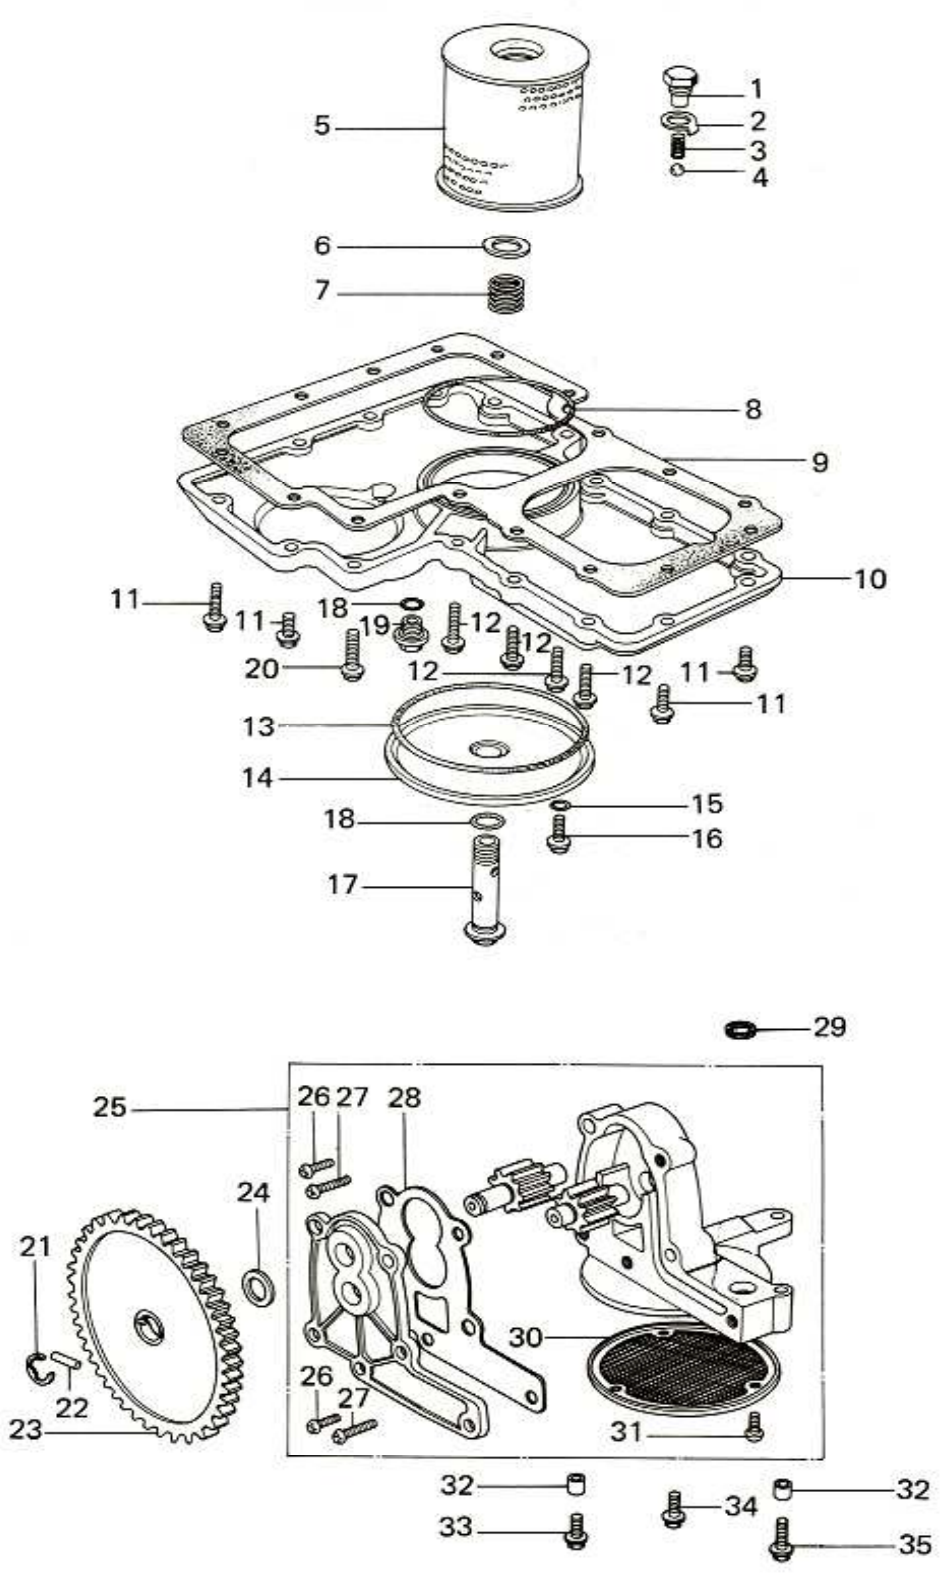

13. Oil Pump, Oil Filter

No.	Part No.	Q'TY	PART NAME	
1	92003-095	1	BOLT, check valve	
2	~~92024-048~~	1	WASHER, lock	**NLA**
3	92081-109	1	SPRING, check valve	
4	600A1-200	1	BALL, steel, 3/8"	
5	16099-002	1	ELEMENT, oil filter	
6	92022-220	1	WASHER, plain	
7	92081-108	1	SPRING, oil filter	
8	92055-052	1	O-RING, 91mm	
9	16112-002	1	GASKET, oil pan	
10	~~16110-003~~	1	PAN, oil	**NLA**
11	92003-178	13	BOLT, hex head, 6x25	
12	~~92003-159~~	3	BOLT, hex head, 6x35	**NLA**
13	671B2-5105	1	O-RING, 105mm	
14	~~16146-001~~	1	COVER, oil filter	**NLA**
15	670B1-508	1	O-RING, 8mm	
16	92066-024	1	PLUG, oil drain	
17	92003-193	1	BOLT, oil filter	
18	670B2-022	1	O-RING, 22mm	
19	92066-026	1	PLUG, oil drain	
20	92003-179	1	BOLT, hex head, 6x50	
21	482K7-000	1	CIRCLIP, 7mm	
22	551A0-314	1	PIN, dowel, 3x14	
23	16085-019	1	GEAR, oil pump 49T	
24	92022-080	1	WASHER, oil pump	
25	~~16082-059~~	1	OIL PUMP ASSY	**NLA**
26	220B0-618	4	SCREW, pan head, 6x18	
27	220B0-628	2	SCREW, pan head, 6x28	
28	16145-002	1	GASKET, oil pump	
29	92055-048	2	O-RING	
30	16111-004	1	STRAINER, oil pump	
31	220B0-508	3	SCREW, pan head, 5x8	
32	92042-038	2	PIN, dowel	
33	92001-164	1	BOLT, hex head, 6x35	
34	92001-163	1	BOLT, hex head, 6x22	
35	92001-165	1	BOLT, hex head, 6x45	


14. Mufflers, Air Cleaner

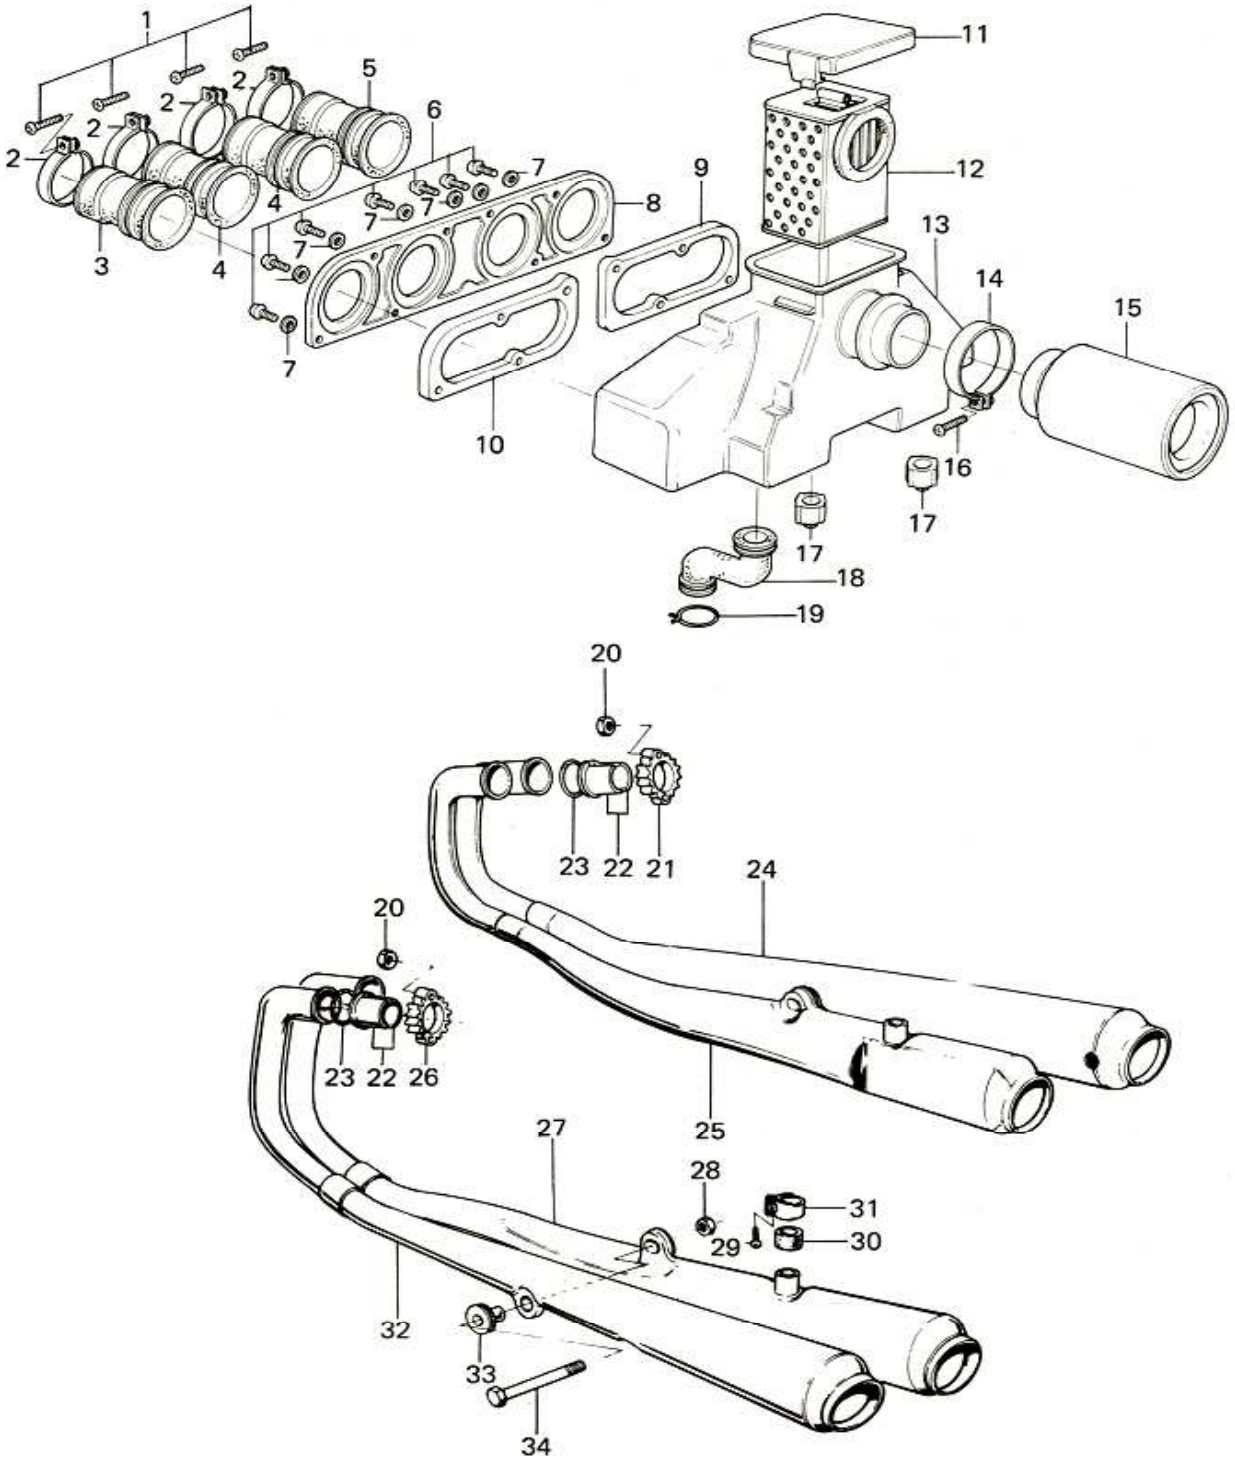

14. Mufflers, Air Cleaner

No.	Part No.	Q'TY	PART NAME	
1	220B0-535	4	SCREW, pan head, 5x35	
2	92037-061	4	CLAMP, air inlet	
3	11015-050	1	INLET PIPE, LH outside	
4	11015-051	2	INLET PIPE, LH inside, RH outside	
5	11015-053	1	INLET PIPE, RH outside	
6	220B0-416	8	SCREW, pan head, 4x16	
7	410B0-400	8	WASHER, plain, 4mm	
8	~~11040-001~~	1	HOLDER, inlet pipe	**NLA**
9	~~11040-003~~	1	PLATE RH	**NLA**
10	~~11040-002~~	1	PLATE LH	**NLA**
11	~~11012-070~~	1	CAP, air cleaner	**NLA**
12	11013-054	1	ELEMENT, air cleaner	
13	11011-054	1	BODY, air cleaner	
14	~~92037-106~~	1	CLAMP, silencer	**NLA**
15	~~11016-008~~	1	SILENCER	**NLA**
16	~~220B0-550A~~	1	SCREW, pan head, 5x50	**NLA**
17	11012-063	2	CAP, drain	
18	92059-124	1	TUBE, drain	
19	92037-028	1	CLAMP, drain tube	
20	92017-014	8	NUT, 6mm	
21	18069-045	2	HOLDER, exhaust pipe	
22	92027-170	8	INSERT, exhaust pipe	
23	18067-018	4	GASKET, exhaust pipe	
24	18001-206	1	MUFFLER ASSY, RH, UPPER	
25	18001-205	1	MUFFLER ASSY, RH, LOWER	
26	18069-046	2	HOLDER, exhaust pipe	
27	18001-204	1	MUFFLER ASSY, LH, LOWER	
28	92019-021	2	NUT, lock, 10mm	
29	220B0-616	2	SCREW, pan head, 6x16	
30	92059-120	2	PIPE, muffler connection	
31	92037-103	2	CLAMP, connection pipe	
32	18001-203	1	MUFFLER ASSY, LH, UPPER	
33	92092-010	4	BUSHING, muffler fitting	
34	92003-180	2	BOLT, hex head, 10x104	


15. Contact Breaker, Spark Advancer

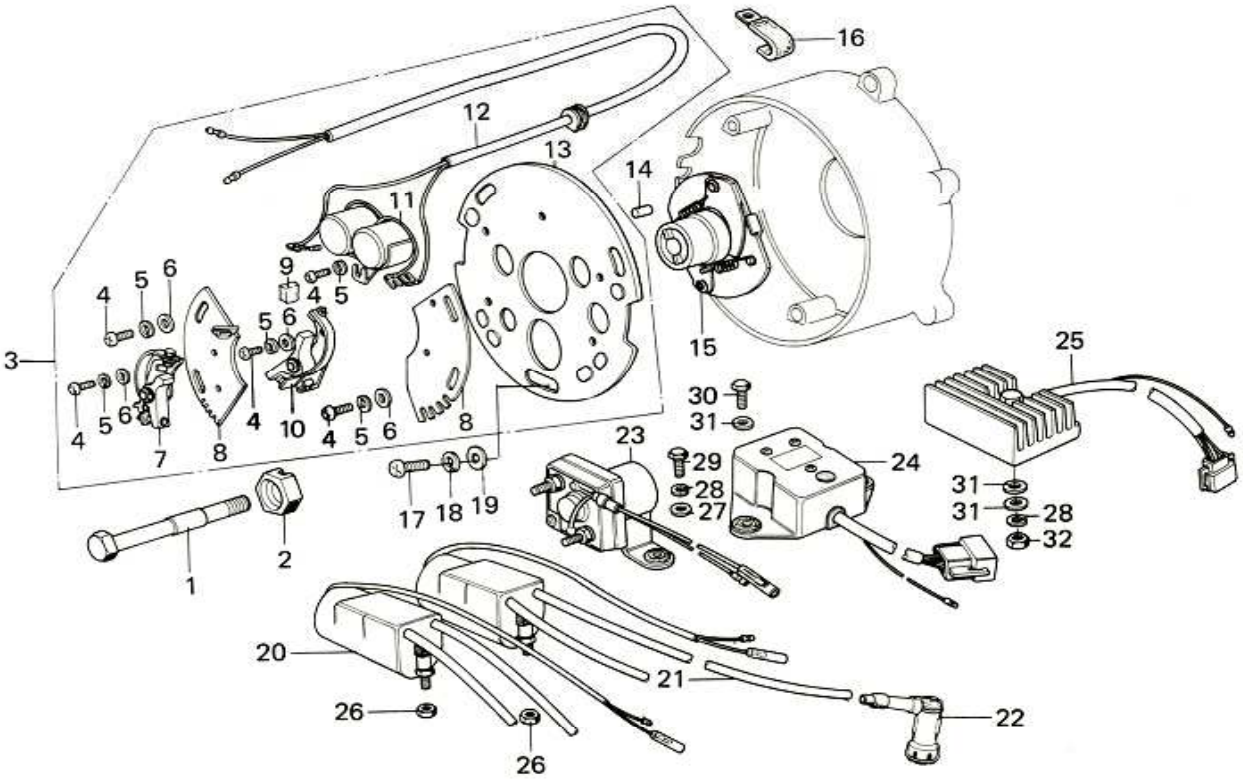

15. Contact Breaker, Spark Advancer

No.	Part No.	Q'TY	PART NAME	
1	92001-113	1	BOLT, spark advancer fitting	
2	92022-244	1	WASHER, spark advancer	
3	21135-011	1	BREAKER ASSY, contact	
4	220B0-408	9	SCREW, pan head, 4x8	
5	461F0-400	9	WASHER, spring, 4mm	
6	410B0-400	9	WASHER, plain, 4mm	
7	21008-028	1	BREAKER, contact	
8	~~21156-010~~	2	PLATE, breaker	**NLA**
9	~~21019-018~~	1	FELT, oil	**NLA**
10	21008-027	1	BREAKER, contact	
11	21013-035	1	CONDENSER	
12	~~21029-037~~	1	WIRING HARNESS, contact breaker	**NLA**
13	~~21021-004~~	1	BASE, contact breaker	**NLA**
14	551A0-408	1	PIN, dowel, 4x8	
15	21148-010	1	ADVANCER ASSY, spark	
16	21126-007	8	CLAMP, cord	
17	220B0-512	3	SCREW, pan head, 5x12	
18	461F0-500	3	WASHER, Spring, 5mm	
19	411B0-500	3	WASHER, plain, 5mm	
20	21121-081	1	COIL, ignition #1+4	
21	~~21121-082~~	1	COIL, ignition #2+3	**NLA**
22	21130-023*	4	CAP, spark plug	
23	21164-001	1	SWITCH ASSY, magnetic	
24	21066-025	1	REGULATOR, voltage	
25	~~21061-024~~	1	RECTIFIER	**NLA**
26	92017-014	2	NUT, lock, 6mm	
27	92022-125	2	WASHER, plain	
28	461F0-600	3	WASHER, spring, 6mm	
29	110B0-616	2	BOLT, hex head, 6x16	
30	110B0-612	2	BOLT, hex head, 6x12	
31	410B0-600	3	WASHER, plain, 6mm	
32	310B0-600	2	NUT, 6mm	
***	*21160-005*	*4*	*CAP, spark plug*	***(entstört)***


16. Starting Motor, Dynamo

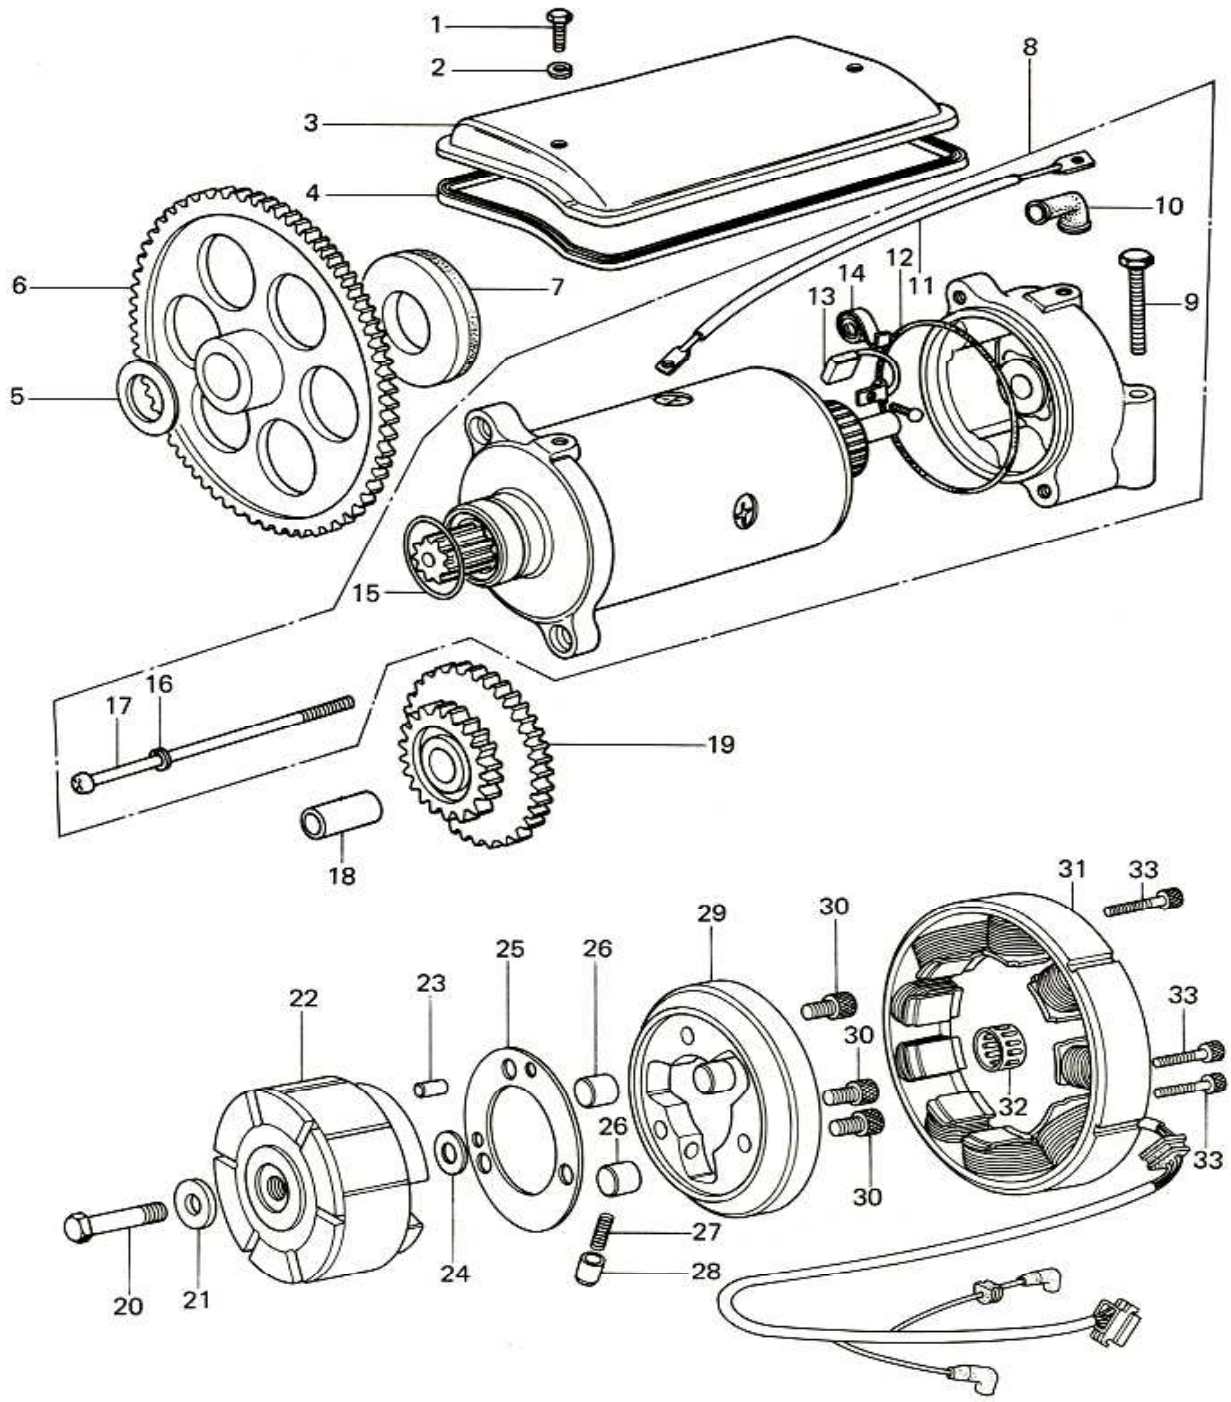

16. Starting Motor, Dynamo

No.	Part No.	Q'TY	PART NAME	
1	110N0-610	2	BOLT, hex head, 6x10	
2	410D0-600	2	WASHER, plain, 6mm	
3	~~21165-001~~	1	COVER, starting motor	**NLA**
4	21166-001	1	GASKET, starting motor cover	
5	~~92026-091~~	1	WASHER, thrust, 22mm	**NLA**
6	21167-003	1	GEAR , starting clutch 71T	
7	92075-193	AR	DAMPER RUBBER 7.3t	
8	~~21163-004~~	1	MOTOR ASSY, starting	**NLA**
9	110B0-656	2	BOLT, hex head, 6x56	
10	21017-017	1	CAP, starting motor terminal	
11	~~26010-048~~	1	WIRE, starter motor lead	**NLA**
12	21027-003	1	O-RING	
13	21039-003	2	BRUSH, carbon	
14	21040-003	2	SPRING, carbon brush	
15	21027-004	1	O-RING, 24mm	
16	461F0-600	2	WASHER, spring, 6mm	
17	~~21015-005~~	2	SCREW, pan head, 6x110	**NLA**
18	~~13002-007~~	1	COLLAR	
19	21167-002	1	GEAR, starting motor	
20	114G0-840	1	BOLT, hex head, 8x40	
21	~~92022-218~~	1	WASHER, plain, 8mm	**NLA**
22	21007-032	1	ROTOR	
23	~~551A0-622~~	1	PIN, dowel, 6x22	**NLA**
24	92026-092	1	WASHER, plain, 22mm	
25	~~92026-082~~	1	PLATE, clutch starting	**NLA**
26	92122-001	3	ROLLER, 15mm	
27	92081-110	3	SPRING	
28	92043-087	3	PIN	
29	13194-003	1	CLUTCH, starting	
30	92003-104	3	BOLT, 8x16	
31	21076-023	1	STATOR ASSY	
32	~~92046-033~~	1	NEEDLE BEARING, K222620	**NLA**
33	120Q0-635	3	BOLT, 6x35	

17. Frame 1/2

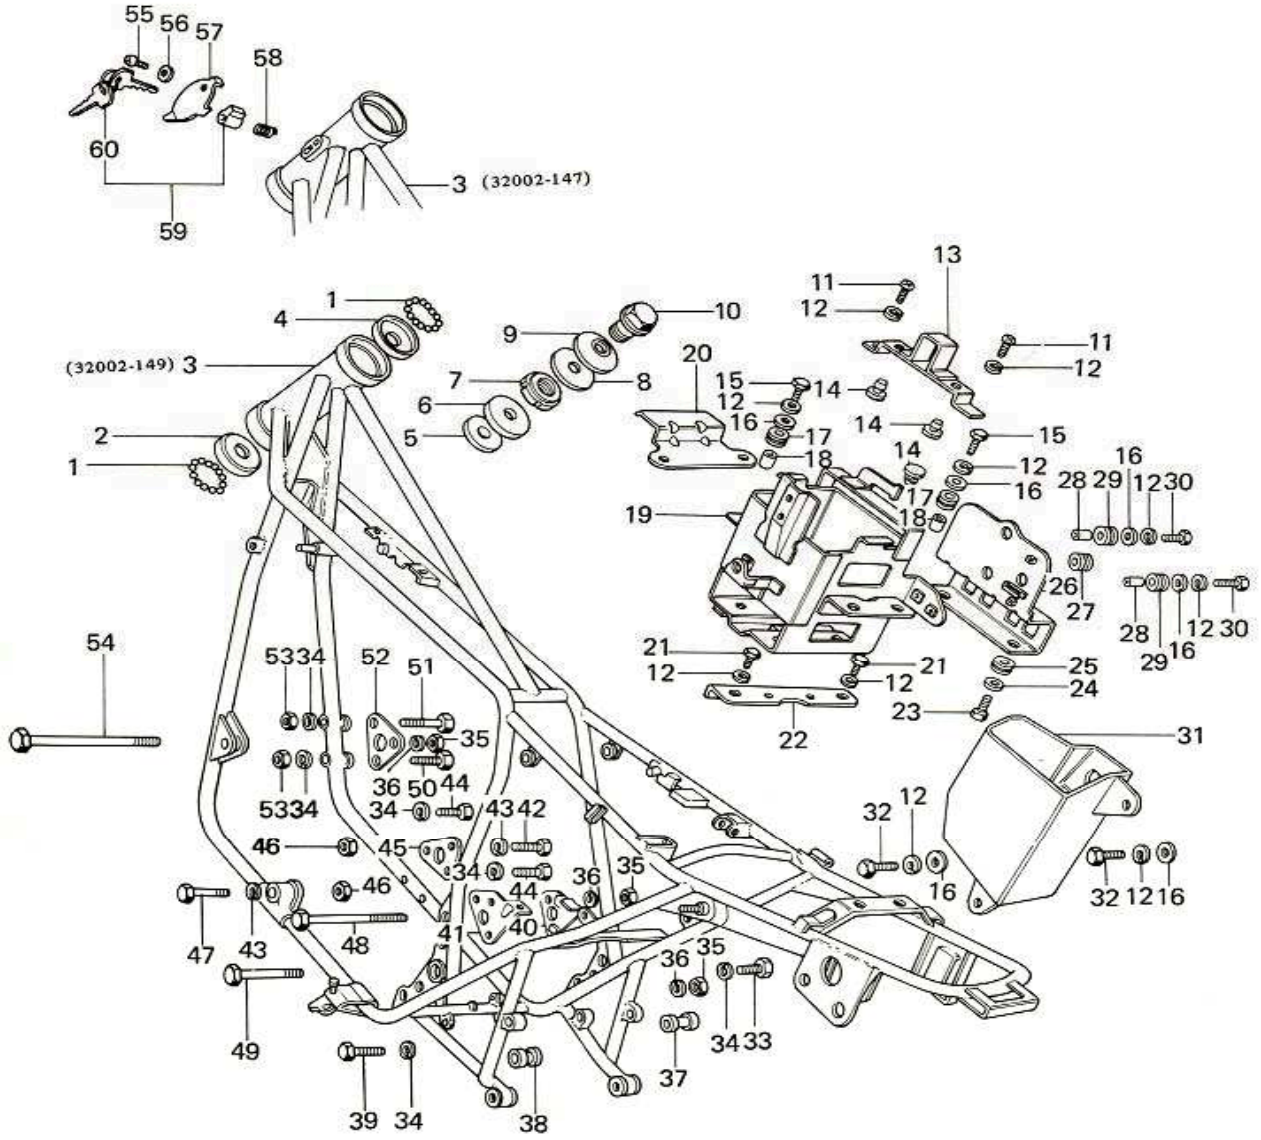

55 56 57 58
60
59
3 (32002-147)
(32002-149) 3
1 4 9 10 7 8 6 5 2 1
11 12 13 11 12
20 15 14 12 16 17 18 19
14 15 12 16 17 18
16 28 29 12 30
26 27
28 29 16 12 30
21 12 21 12 25 24 23 22 31
54
53 34 52 51 35 36 50 44 34 43 42
46 45 34 44 36 35 40 41 48 47 43 49
46
32 12 16
32 12 16
36 35 34 33 37
39 34 38

Next >>

17. Frame 1/2

No.	Part No.	Q'TY	PART NAME	
1	600A0-800	39	BALL, steel, 1/4"	
2	92048-008	1	RACE, steering stem head upper	
3	~~32002-149~~	1	FRAME	**NLA**
4	92048-006	1	RACE, steering stem head lower	
5	92047-011	1	CONE, steering stem head upper	
6	46098-010	1	CAP, steering stem head	
7	92090-007	1	NUT, steering stem head	
8	46100-003	1	WASHER, wave	
9	92022-230	1	WASHER, steering stem head	
10	92007-031	1	BOLT, steering stem head	
11	220B0-616	2	SCREW, pan head, 6x16	
12	461F0-600	12	WASHER, spring, 6mm	
13	~~32100-020~~	1	BAND, battery	**NLA**
14	92075-078	10	DAMPER RUBBER, battery	
15	~~110B0-624~~	4	BOLT, hex head, 6x24	**NLA**
16	92022-125	8	WASHER, plain, 6mm	
17	92075-076	4	DAMPER RUBBER	
18	92027-129	4	COLLAR	
19	~~32097-039~~	1	CASE, battery	**NLA**
20	~~32105-006~~	1	STAY, air cleaner	**NLA**
21	116B0-616	2	BOLT, hex head, 6x16	
22	~~32113-003~~	1	PLATE, battery case	**NLA**
23	92001-115	2	BOLT, hex head, 6x14	
24	410B0-800	2	WASHER, plain, 8mm	
25	92075-161	2	DAMPER RUBBER	
26	~~32129-006~~	1	BRACKET, base	**NLA**
27	92075-051	1	DAMPER RUBBER	
28	92027-165	2	COLLAR	
29	92075-149	2	DAMPER RUBBER	
30	110B0-620	2	BOLT, hex head, 6x20	
31	~~32098-024~~	1	CASE, tool	**NLA**
32	110B0-614	2	BOLT, hex head, 6x14	
33	110G0-840	3	BOLT, hex head, 8x40	
34	461F0-800	8	WASHER, spring, 8mm	
35	92019-021	3	NUT, lock, 10mm	
36	461F1-000	3	WASHER, spring, 10mm	
37	92027-160	1	COLLAR, engine mounting, 31mm	
38	~~92027-159~~	1	COLLAR, engine mounting, 52mm	**NLA**
39	110G0-836	1	BOLT, hex head, 8x36	
40	~~32030-056~~	1	PLATE, engine mounting, RH	**NLA**
41	32030-055	1	PLATE, engine mounting, LH	
42	~~113B1-256A~~	1	BOLT, hex head, 12x56	**NLA**
43	461F1-200	2	WASHER, spring, 12mm	


17. Frame 2/2

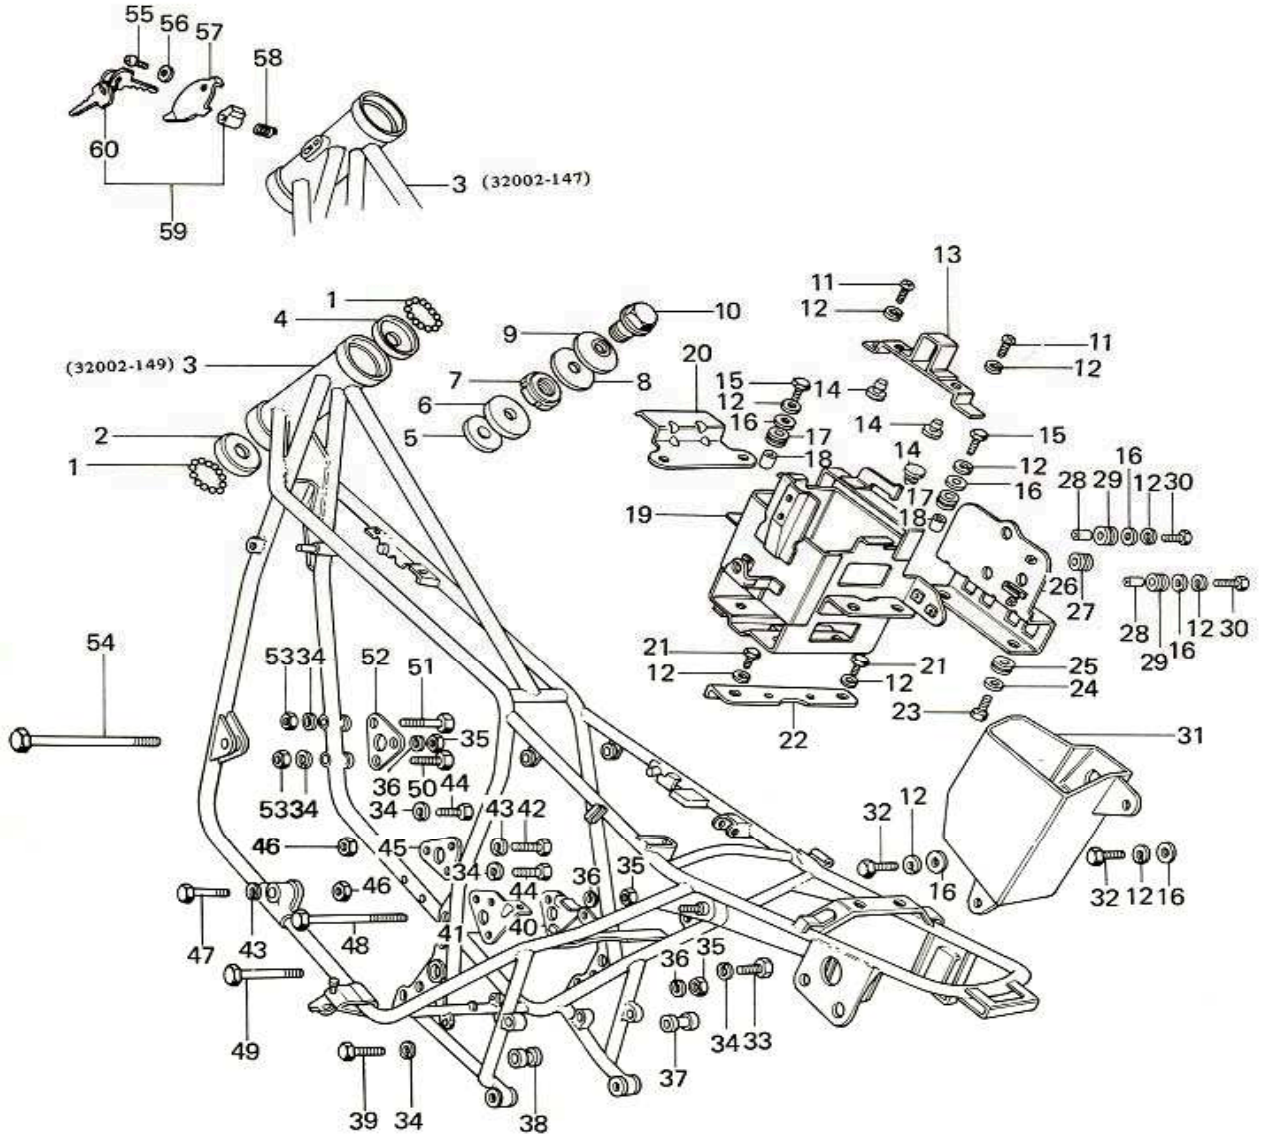
55 56 57 58
60
59
3 (32002-147)
(32002-149) 3
1 4 9 10 7 8 6 5 2 1
11 12 13 11 12
20 15 14 12 16 17 18 14 15 12 16
19 17 18
16 28 29 12 30
26 27
28 29 16 12 30
21 12 21 12 25 24 23
22
31
54
53 34 52 51 35
36 50 44 34 43 42
53 34
46 45 34 44 36 35
46 41 40
47 43 48
49
39 34 38
36 35 34 33 37
32 12 16
32 12 16

17. Frame 2/2

No.	Part No.	Q'TY	PART NAME	
44	110B0-818	2	BOLT, hex head, 8x18	
45	~~32030-026~~	1	PLATE, engine mounting, lower	**NLA**
46	92016-045	2	NUT, lock, 12mm	
47	~~113B1-271A~~	1	BOLT, hex head, 12x71	**NLA**
48	92091-023	1	BOLT, engine mounting, 250mm	
49	92003-099	1	BOLT, engine mounting, 165mm	
50	110G0-859	1	BOLT, hex head, 8x59	
51	110G0-863	1	BOLT, hex head, 8x63	
52	~~32030-025~~	1	PLATE, engine mounting, front	**NLA**
53	311B0-800	2	NUT, 8mm	
54	92091-022	1	BOLT, engine mounting, 310mm	


18. Swinging Arm, Rear Shock Absorber

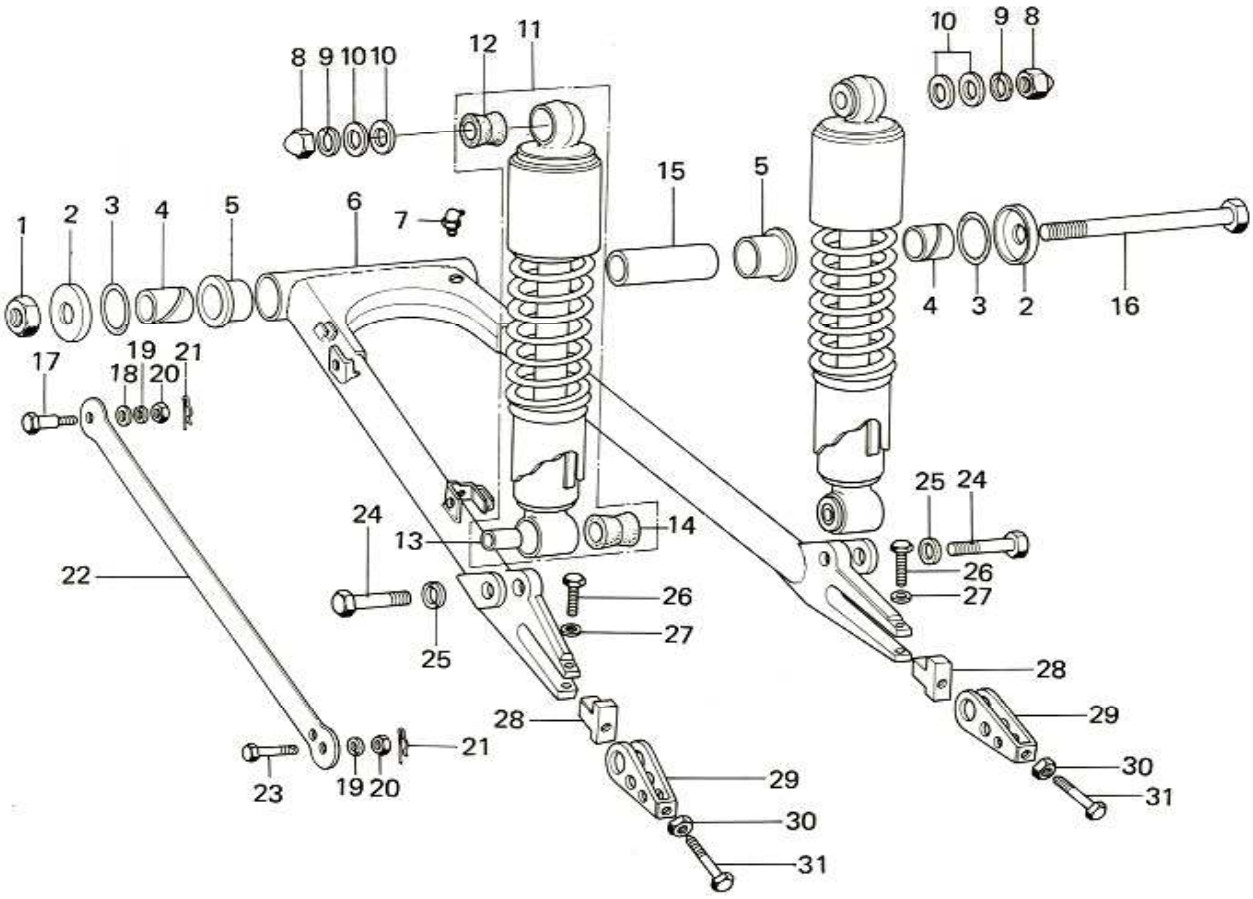

18. Swinging Arm, Rear Shock Absorber

No.	Part No.	Q'TY	PART NAME	
1	92019-022	1	NUT, lock, 16mm	
2	33035-007	2	CAP, swinging arm	
3	671B2-530	2	O-RING, 30mm	
4	33034-009	2	SLEEVE, swinging arm	
5	33033-009	2	BUSHING, swinging arm	
6	~~33001-046~~	1	SWINGING ARM	**NLA**
7	92005-002	1	NIPPLE, grease	
8	92020-014	2	NUT, shock absorber fitting	
9	461F1-200	2	WASHER, spring, 12mm	
10	410B1-200	4	WASHER, plain, 12mm	
11	45014-107	2	SHOCK ABSORBER	
12	45017-018	2	BUSHING, shock absorber rubber	
13	45016-003	2	BUSHING, shock absorber	
14	45017-011	2	BUSHING, shock absorber	
15	33036-005	1	COLLAR, swinging arm	
16	33032-036	1	SHAFT, swinging arm pivot	
17	~~92003-103~~	1	BOLT, hex head, 8x28	**NLA**
18	411B1-000	1	WASHER, plain, 10mm	
19	461F1-000	2	WASHER, spring, 10mm	
20	313B1-000	2	NUT, 10mm	
21	92041-005	2	PIN, cotter	
22	~~43007-032~~	1	TORQUE LINK, rear brake	**NLA**
23	~~92003-147~~	1	BOLT, hex head, 10x45	**NLA**
24	113N1-035	2	BOLT, hex head, 10x35	
25	461F1-000	2	WASHER, spring, 10mm	
26	110G0-840	2	BOLT, hex head, 8x40	
27	416F0-800	2	WASHER, spring, 8mm	
28	33044-001	2	STOPPER, chain adjuster	
29	33040-066	1	ADJUDUSTER, chain	
30	315B1-000	2	NUT, 10mm	
31	92001-143	2	BOLT, chain adjuster, 10mm	


19. Footrests, Stands, Brake Pedal

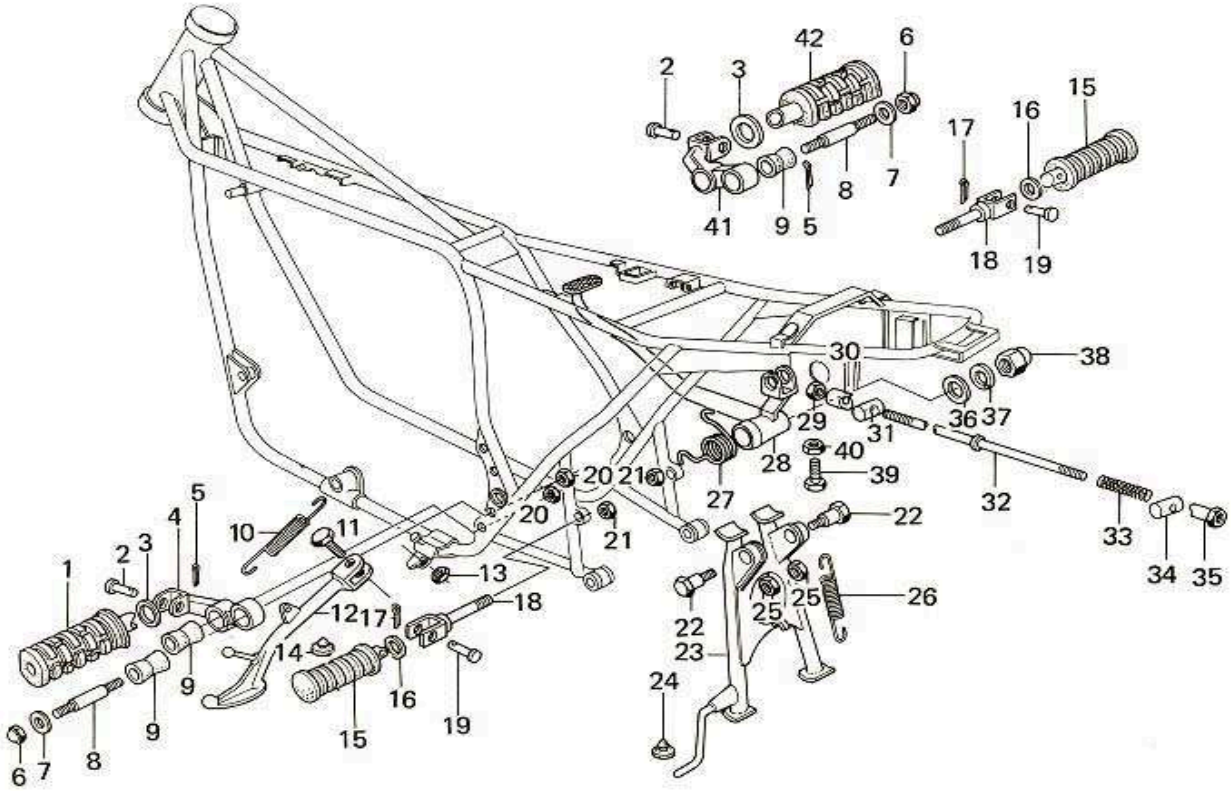

19. Footrests, Stands, Brake Pedal

No.	Part No.	Q'TY	PART NAME	
1	~~34028-011~~	1	BAR, footrest, LH	**NLA**
2	92043-080	2	PIN, footrest bar fitting	
3	92022-250	2	WASHER, plain	
4	~~34003-036~~	1	BRACKET, footrest bar, LH	**NLA**
5	550D2-516	2	PIN, cotter, 2.5x15	
6	92019-013	4	NUT, lock, 8mm	
7	92102-010	4	CAP, footrest bar	
8	~~92004-048~~	4	STUD, footrest bar fitting	**NLA**
9	92075-140	4	RUBBER, footrest bar	
10	34025-005	1	SPRING, side stand	
11	92003-079	1	BOLT, side stand	
12	~~34024-060~~	1	STAND, side	**NLA**
13	315B1-000	1	NUT, 10mm	
14	92075-157	1	RUBBER, side stand	
15	92076-027	2	RUBBER, rear footrest	
16	92022-199	2	WASHER, plain	
17	550D2-012	2	PIN, cotter, 2.0x12	
18	~~33028-011~~	2	BRACKET, rear footrest	**NLA**
19	92043-079	2	PIN, rear footrest fitting	
20	315B1-000	4	NUT, 10mm	
21	315B1-200	2	NUT, 12mm	
22	~~34019-014~~	2	SHAFT, main stand	**NLA**
23	~~34011-029~~	1	STAND, main	**NLA**
24	92075-015	1	RUBBER, main stand	
25	92016-044	2	NUT, 12mm	
26	34023-012	1	SPRING, main stand	
27	43005-021	1	SPRING, brake pedal	
28	~~43001-044~~	1	PEDAL, brake	**NLA**
29	92017-014	1	NUT	
30	92027-177	1	PIN, brake rod	
31	92043-095	1	PIN, brake rod	
32	~~43011-017~~	1	ROD, brake	**NLA**
33	43012-002	1	SPRING, brake rod	
34	92043-065	1	PIN, brake rod	
35	92015-056	1	NUT, brake rod adjuster	
36	92022-195	1	WASHER, plain	
37	461F0-800	1	WASHER, spring, 8mm	
38	92019-013	1	NUT, lock, 8mm	
39	110B0-620	1	BOLT, hex head, 6x20	
40	310B0-600	1	NUT, 6mm	
41	~~34003-037~~	1	BRACKET, footrest bar, RH	**NLA**
42	~~34028-012~~	1	BAR, footrest, RH	**NLA**


20. Handlebar, Grips

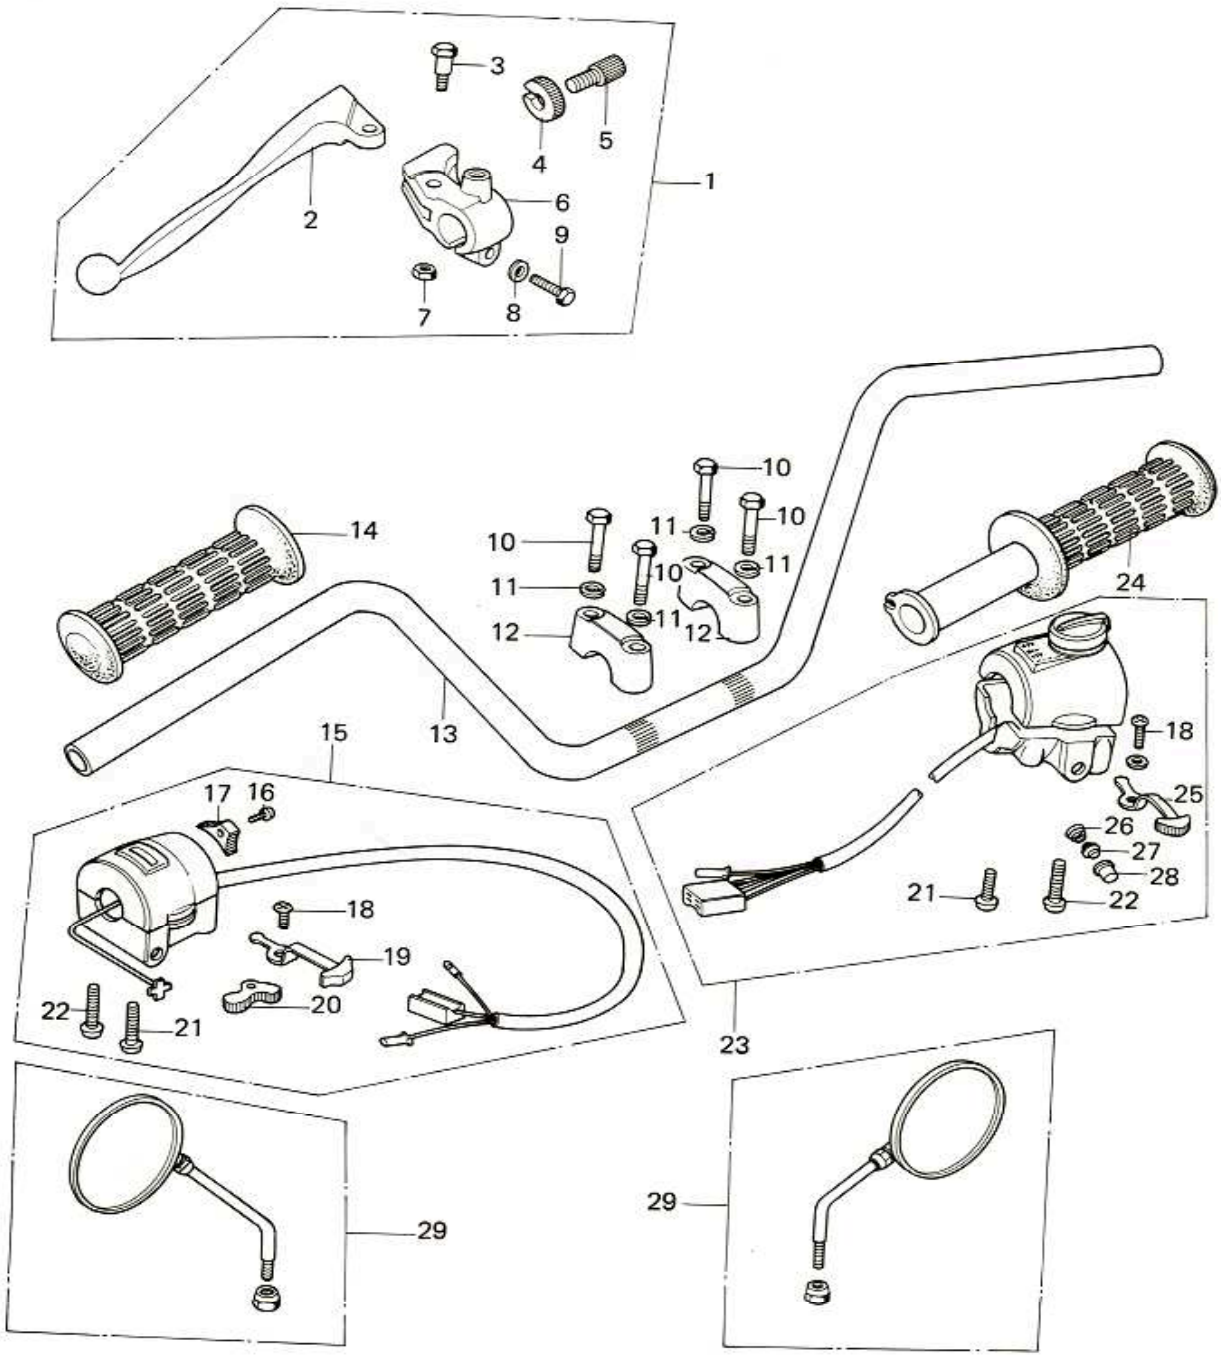

20. Handlebar, Grips

No.	Part No.	Q'TY	PART NAME	
1	46076-049	1	LEVER ASSY, clutch	
2	46092-022	1	LEVER, clutch	
3	92007-047	1	BOLT, hex head, 6mm	
4	46056-005	1	NUT, cable adjuster lock	
5	46055-003	1	SCREW, cable adjuster	
6	46094-017	1	HOLDER, clutch lever	
7	92017-014	1	NUT, lock, 6mm	
8	410B0-600	1	WASHER, plain, 6mm	
9	110B0-622	1	BOLT, hex head, 6x22	
10	92007-002	4	BOLT, handlebar fitting	
11	461F0-800	4	WASHER, spring, 8mm	
12	46012-008	2	HOLDER, handlebar	
13	46003-029	1	HANDLEBAR	
14	46075-028	1	RUBBER, LH, grip	
15	46091-034	1	CASE ASSY, LH	
16	221B0-308A	1	SCREW, countersunk head, 3x9	
17	46043-013	1	KNOB ASSY, lighting switch	
18	220B0-305A	2	SCREW, pan head 3x5	
19	~~46043-005~~	1	KNOB ASSY, lighting switch	**NLA**
20	~~46028-006~~	2	BUTTON, horn switch	**NLA**
21	220B0-520	2	SCREW, pan head, 5x20	
22	220B0-530	2	SCREW, pan head, 5x30	
23	46132-024	1	CASE ASSY, RH	
24	46018-038	1	GRIP ASSY, throttle	
25	~~46043-004~~	1	KNOB ASSY, lighting switch	**NLA**
26	46031-005	1	SPRING, horn button	
27	46079-003	1	CONTACT, horn button	
28	46028-003	1	BUTTON, horn push	
29	56002-027	2	REAR VIEW MIRROR ASSY	

21. Fenders 1/2

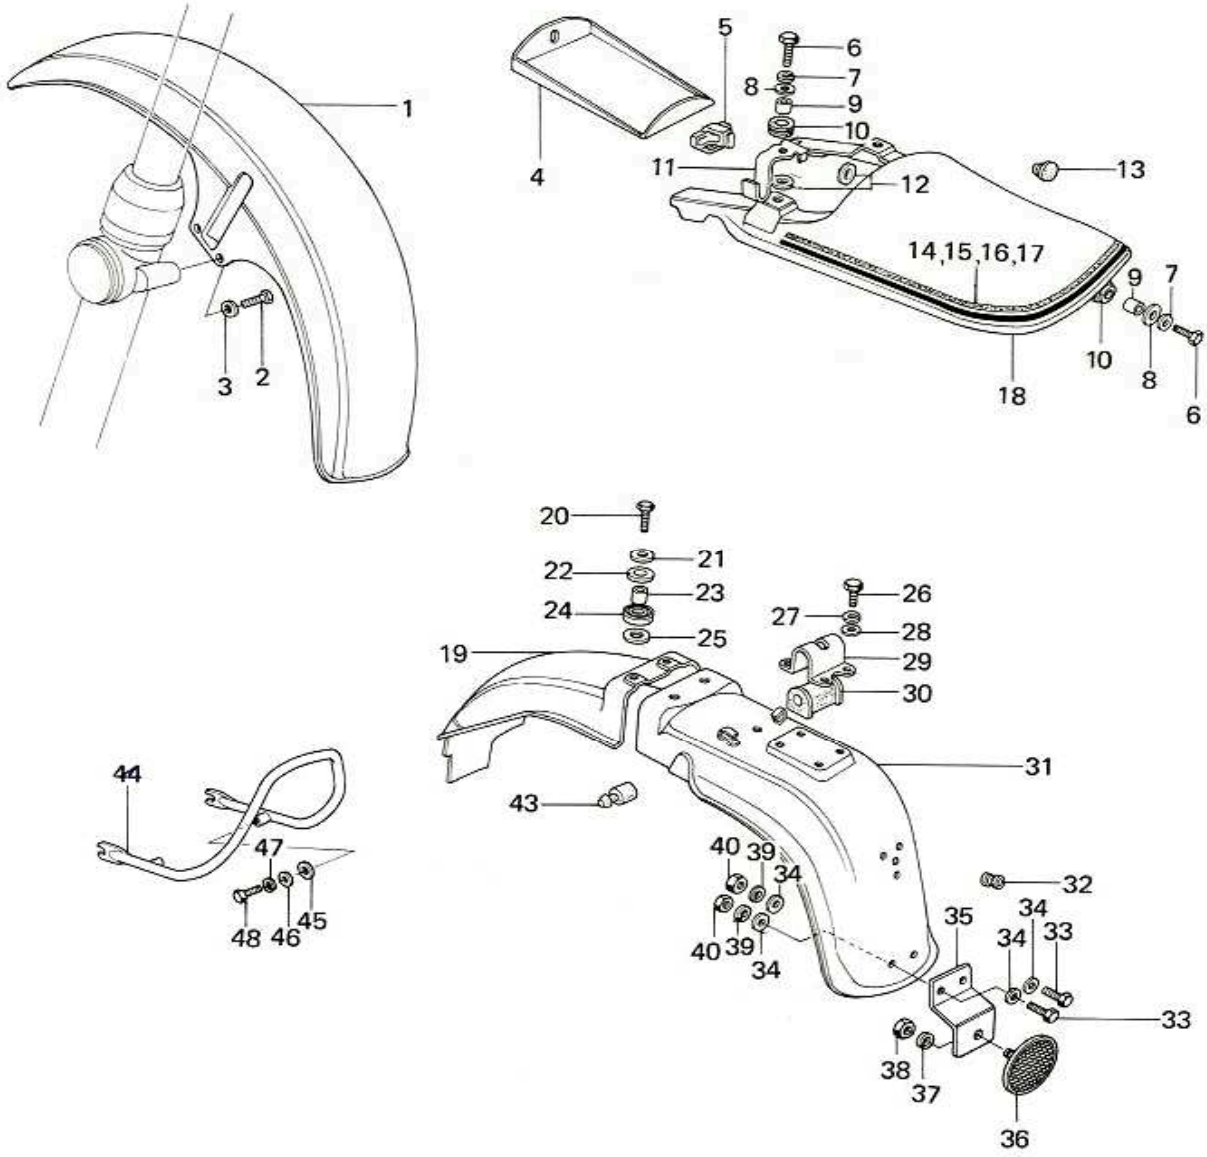


Next >>

21. Fenders 1/2

No.	Part No.	Q'TY	PART NAME	
1	35003-015	1	FENDER, front	
2	110B0-816	4	BOLT, hex head, 8x16	
3	461F0-800	4	WASHER, spring, 8mm	
4	~~32099-018~~	1	CASE	**NLA**
5	~~92074-024~~	1	PLUG	**NLA**
6	116B0-625	4	BOLT, hex head, 6x25	
7	461F0-600	4	WASHER, spring, 6mm	
8	92022-228	4	WASHER, plain, 6mm	
9	92027-162	4	COLLAR, rear fender	
10	92075-174	4	DAMPER RUBBER	
11	~~33122-010~~	1	BRACKET, helmet holder	**NLA**
12	92075-175	4	RUBBER, fender cover	
13	92074-022	2	RUBBER PLUG	
14	~~56027-411~~	1	EMBLEM, LH, Diamond Dark Green	**NLA**
15	~~56027-412~~	1	EMBLEM, RH, Diamond Dark Green	**NLA**
16	~~56027-419~~	1	EMBLEM, LH, Diamond Brown	**NLA**
17	~~56027-420~~	1	EMBLEM, RH, Diamond Brown	**NLA**
18	~~53043-0133-M~~	1	COVER, RR fender, D. Dark Green	**NLA**
18	~~53043-0133-N~~	1	COVER, RR fender, Diamond Brown	**NLA**
19	~~35022-071~~	1	FENDER, rear	**NLA**
20	~~110B0-632~~	2	BOLT, hex head, 6x32	**NLA**
21	92022-228	2	WASHER, plain	
22	92075-121	2	RUBBER, rear fender	
23	92027-162	2	COLLAR, fender cover	
24	92075-133	2	RUBBER	
25	92022-227	2	WASHER, plain, 6mm	
26	116B0-616	4	BOLT, hex head, 6x16	
27	416F0-600	4	WASHER, spring, 6mm	
28	411B0-600	4	WASHER, plain, 6mm	
29	~~35026-006~~	1	BRACKET, rear fender	**NLA**
30	~~92075-132~~	1	RUBBER, rear fender	**NLA**
31	~~35022-123~~	1	FENDER, rear	**NLA**
32	92071-019	1	GROMMET, harness, 10mm	
33	220B0-616	2	SCREW, pan head, 6x16	
34	411B0-600	4	WASHER, plain, 6mm	
35	~~28013-010~~	1	BRACKET, reflex reflector	**NLA**
36	~~28012-015~~	1	REFLECTOR, reflex	**NLA**
37	461F0-500	1	WASHER, spring, 5mm	
38	310B0-500	1	NUT, 5mm	
39	461F0-600	2	WASHER, spring, 6mm	
40	310B0-600	2	NUT, 6mm	
41	-		*MODEL FRANCE*	
42	-		*MODEL FRANCE*	


21. Fenders 2/2

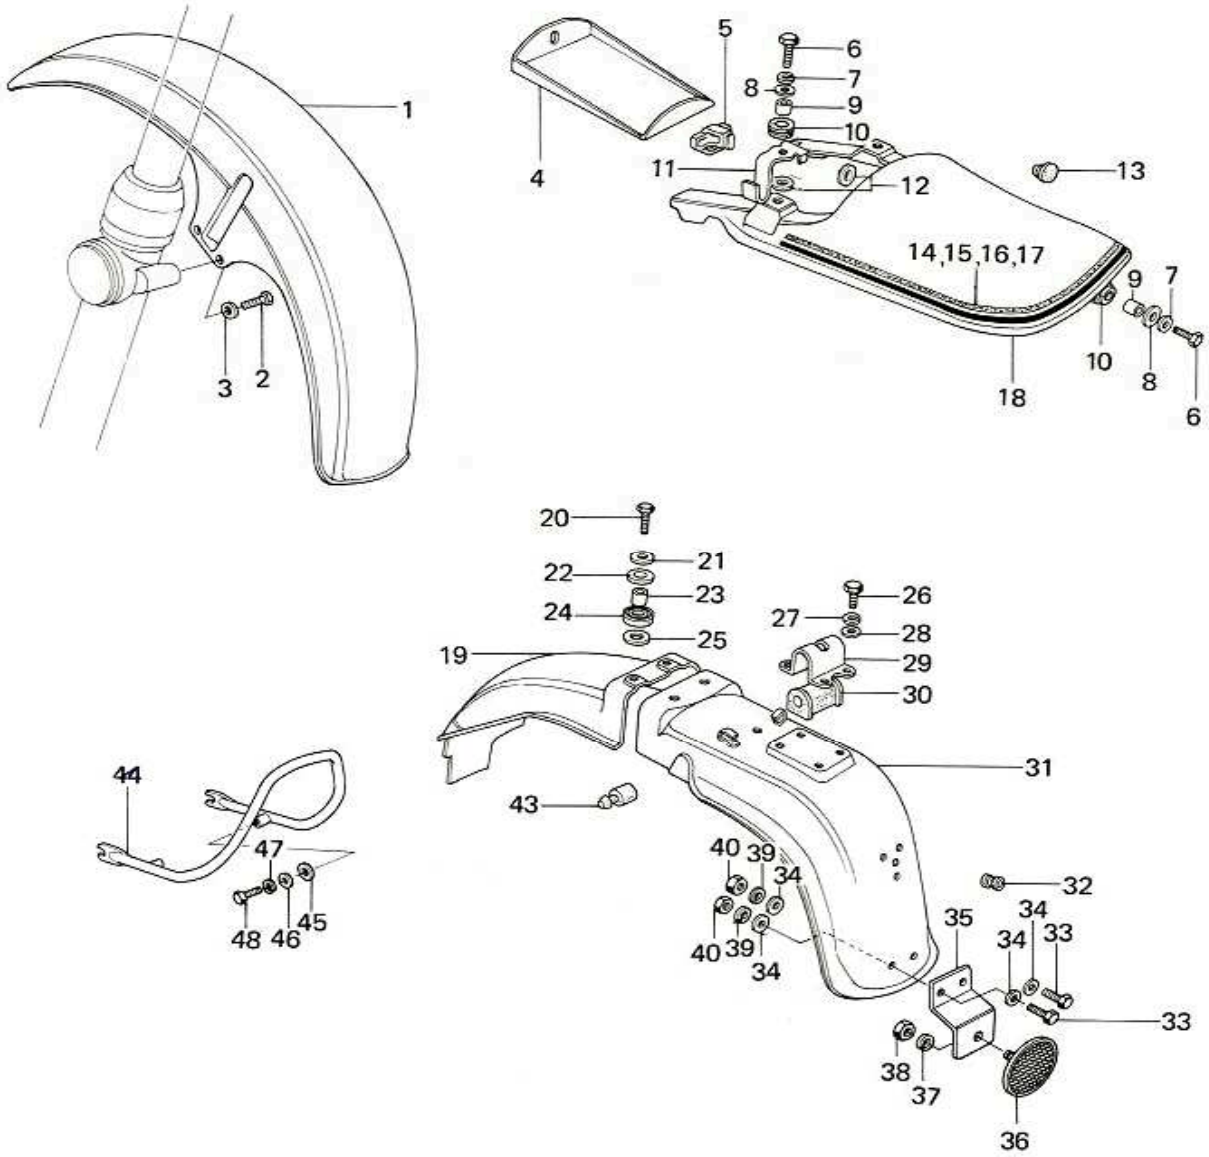

21. Fenders 2/2

No.	Part No.	Q'TY	PART NAME	
43	92075-175	2	DAMPER RUBBER	
44	35032-030	1	STAY, rear fender	
45	92022-044	2	WASHER, plain, 10mm	
46	411B1-000	2	WASHER, plain, 10mm	
47	461F1-000	2	WASHER, spring, 10mm	
48	113B1-022	2	BOLT, hex head, 10x22	


22. Wheels

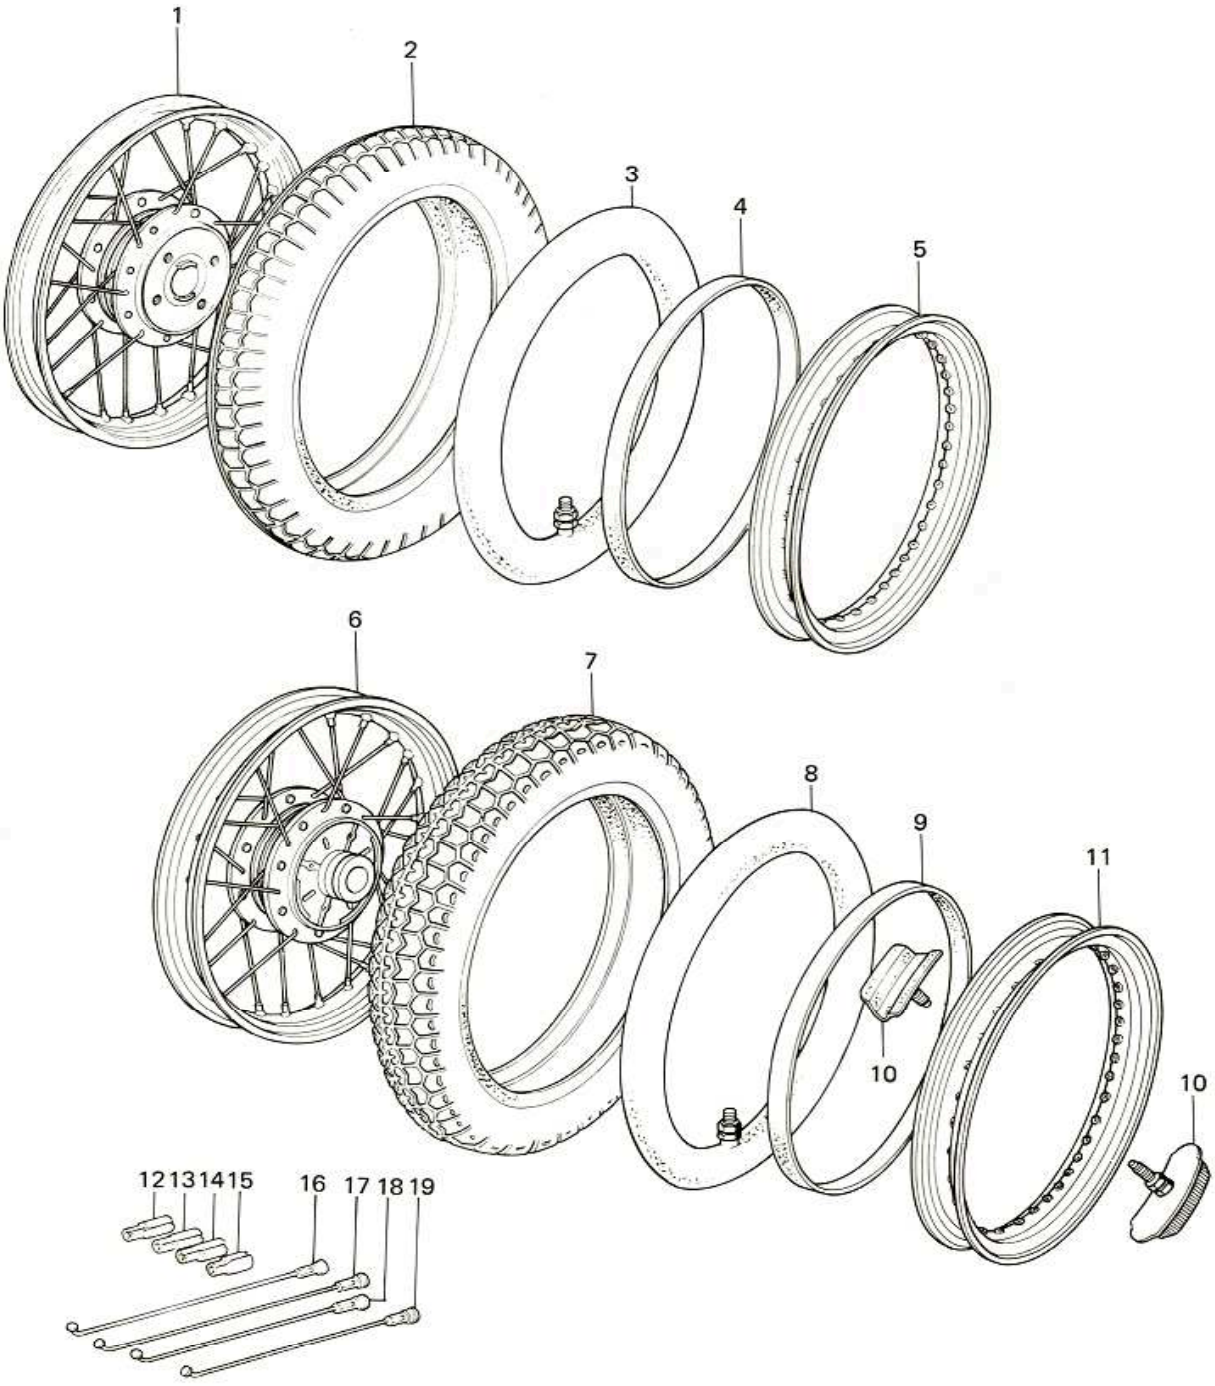

22. Wheels

No.	Part No.	Q'TY	PART NAME	
1	~~41074-047~~	1	WHEEL ASSY, front	**NLA**
2	-	1	TIRE, front 3.25-19	**NLA**
3	-	1	TUBE, front tire 3.25-19	**NLA**
4	41023-015	1	BAND, front rim	
5	41025-085	1	RIM, front 1.85Bx19W	
6	~~42048-023~~	1	WHEEL ASSY, rear	**NLA**
7	-	1	TIRE, rear 4.00-18	**NLA**
8	-	1	TUBE, rear tire 4.00-18	**NLA**
9	41023-017	1	BAND, rear rim	
10	~~41024-008~~	2	BEAD PROTECTOR, 2.15B	**NLA**
11	41025-049	1	RIM, rear 2.15Bx18W	
12	41075-004	AR	WEIGHT, wheel balance, 5g	
13	41075-001	AR	WEIGHT, wheel balance, 10g	
14	41075-002	AR	WEIGHT, wheel balance, 20g	
15	41075-003	AR	WEIGHT, wheel balance, 30g	
16	41027-085	20	SPOKE ASSY, front inner	184,5mm 97°
17	41057-084	20	SPOKE ASSY, front outer	184,0mm 83.3°
18	41027-057	20	SPOKE ASSY, rear inner	143,0mm 101°
19	41028-057	20	SPOKE ASSY, rear outer	142,0mm 73°


23. Front Hub

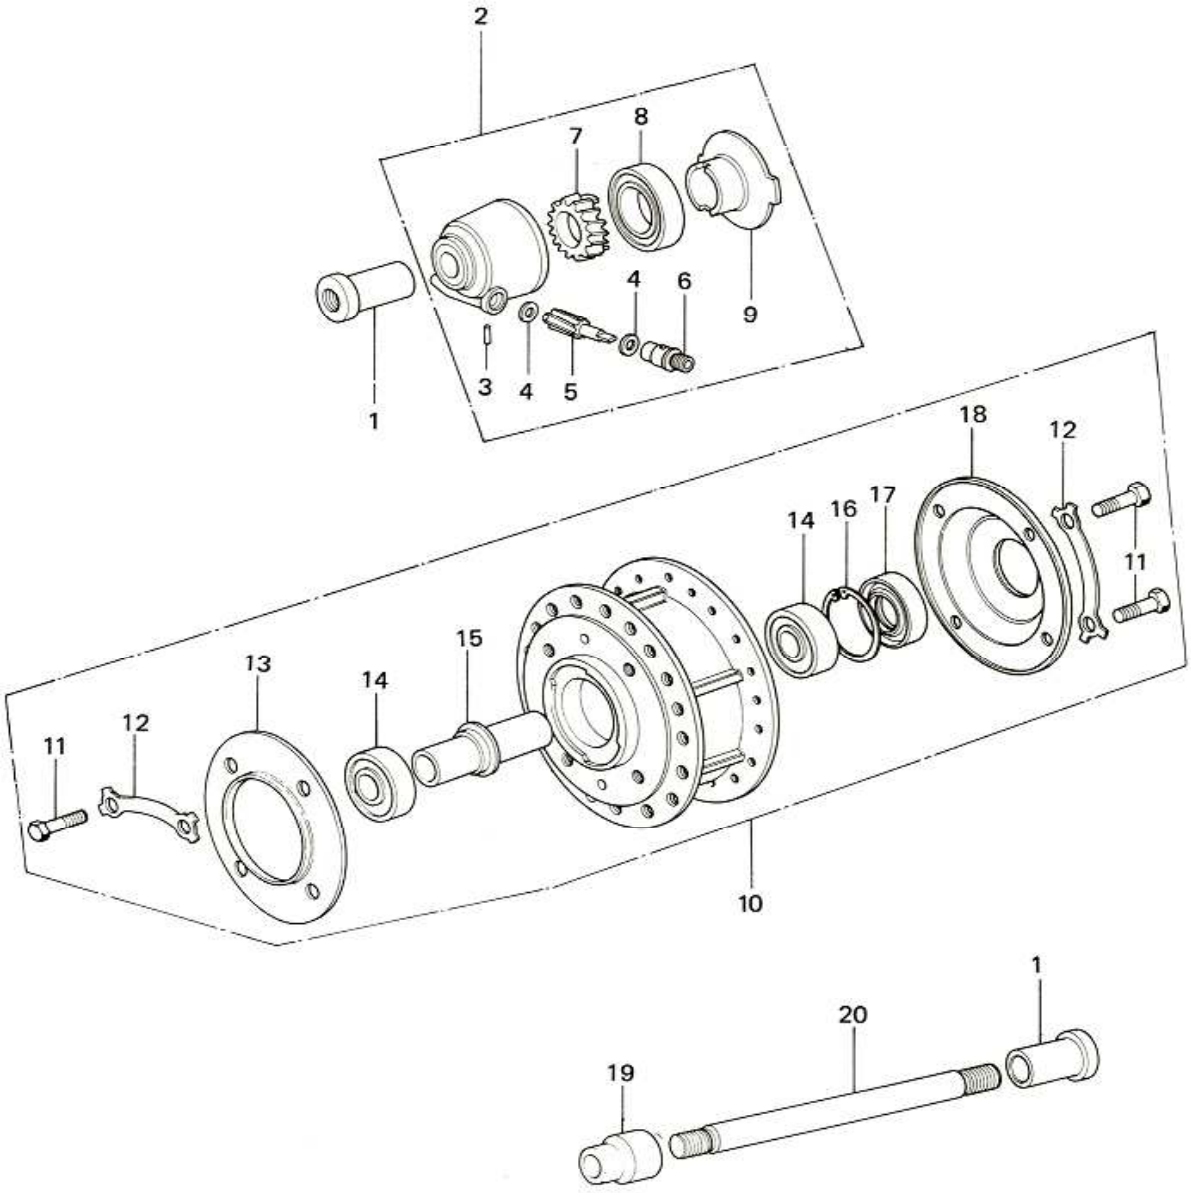

23. Front Hub

No.	Part No.	Q'TY	PART NAME	
1	41069-033	2	COLLAR, front axle	
2	41078-008	1	GEAR BOX ASSY	
3	41082-001	1	SPRING PIN	
4	41063-001	2	WASHER, thrust	
5	41060-017	1	PINION, speedometer	
6	41062-005	1	BUSHING, speedometer cable	
7	41059-026	1	GEAR, speedometer	
8	654A3-0420-8	1	OIL SEAL	
9	41064-013	1	RECEIVER, speedometer gear	
10	41034-040	1	DRUM ASSY, front brake	
11	92001-158	8	BOLT, hex head, 10mm	
12	92088-023	4	WASHER, lock	
13	~~41042-014~~	1	DUST COVER, LH	**NLA**
14	601B6-203	2	BEARING, ball, #6203	
15	~~41039-028~~	1	SPACER, front hub bearing	**NLA**
16	481J4-000	1	CIRCLIP, 40mm	
17	~~654A2-5400-8~~	1	OIL SEAL	**NLA**
18	~~41042-015~~	1	DUST COVER, RH	**NLA**
19	~~41069-032~~	1	COLLAR, front axle	**NLA**
20	~~41068-049~~	1	AXLE, front	**NLA**


24. Rear Hub

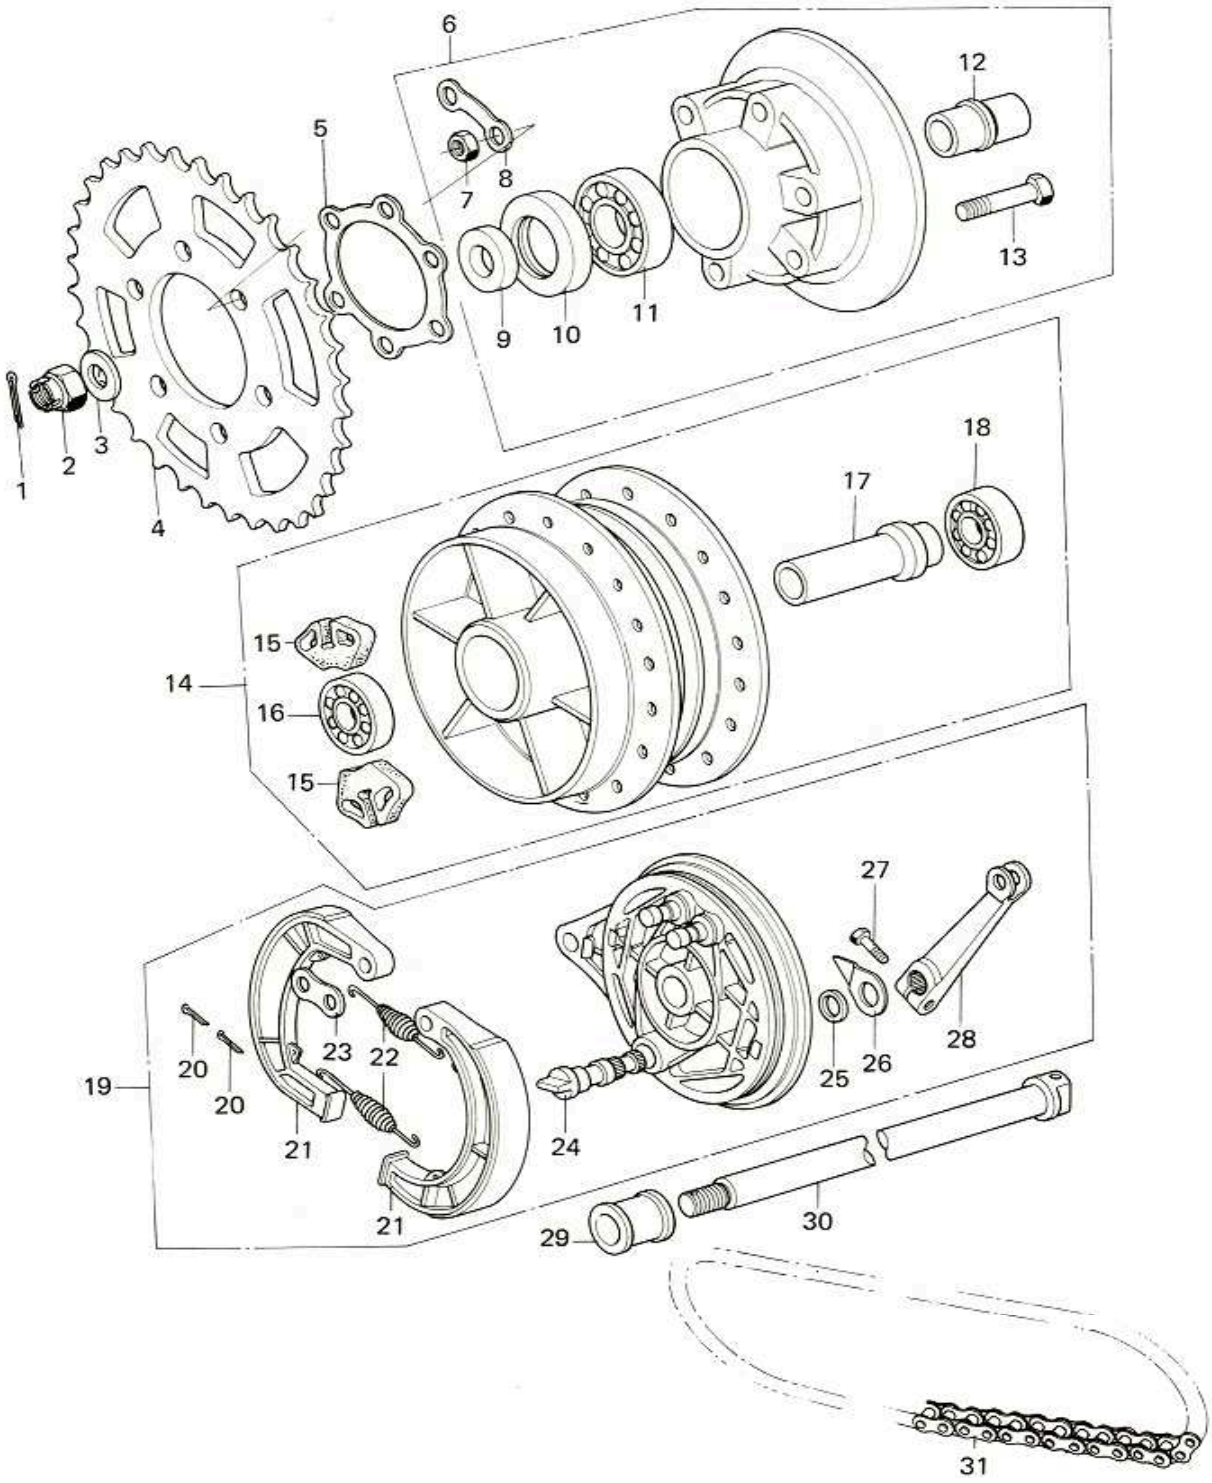
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
15
17
18
19
20
20
21
21
22
23
24
25
26
27
28
29
30
31

24. Rear Hub

No.	Part No.	Q'TY	PART NAME	
1	550D4-035	1	PIN, cotter, 4.0x35	
2	42045-018	1	NUT, castle, 18mm	
3	92022-248	1	WASHER, plain, 20mm	
4	~~42041-161~~	1	REAR SPROCKET 33T	**NLA**
5	~~92026-108~~	1	SPACER, rear hub coupling	**NLA**
6	~~42008-013~~	1	COUPLING ASSY, rear hub	**NLA**
7	42045-005	6	NUT, 10mm	
8	92088-013	3	WASHER, lock, 10mm	
9	~~42037-023~~	1	COLLAR, rear axle sleeve	**NLA**
10	92050-027	1	OIL SEAL	
11	601B6-206	1	BEARING, ball, #6206	
12	~~42036-015~~	1	SLEEVE, rear hub coupling	**NLA**
13	92003-087	6	BOLT, rear sprocket fitting	
14	~~42005-030~~	1	DRUM ASSY, rear brake	**NLA**
15	42014-021	6	SHOCK DAMPER, rear hub	
16	601B6-304	1	BEARING, ball, #6304	
17	~~42010-021~~	1	SPACER, rear hub bearing	**NLA**
18	~~601B6-304Z~~	1	BEARING, ball, #6304Z	**NLA**
19	42006-062	1	PANEL ASSY, rear brake	
20	550D3-025	2	PIN, cotter, 3.0x25	
21	~~41048-016~~	2	SHOE, brake	**NLA**
22	41049-007	2	SPRING, brake shoe	
23	~~41045-006~~	1	WASHER, brake shoe	**NLA**
24	41050-017	1	CAM SHAFT, rear brake	
25	41051-003	1	DUST SHIELD, brake cam	
26	41085-004	1	INDICATOR, rear brake	
27	116B0-825	1	BOLT, hex head, 8x25	
28	~~42029-033~~	1	LEVER, rear brake cam	**NLA**
29	~~42032-037~~	1	COLLAR, rear axle	**NLA**
30	42031-034	1	AXLE, rear	
31	~~92057-096~~	1	CHAIN ASSY, EK630 - 92 Link	**NLA**

25. Disc Brake Equipment A

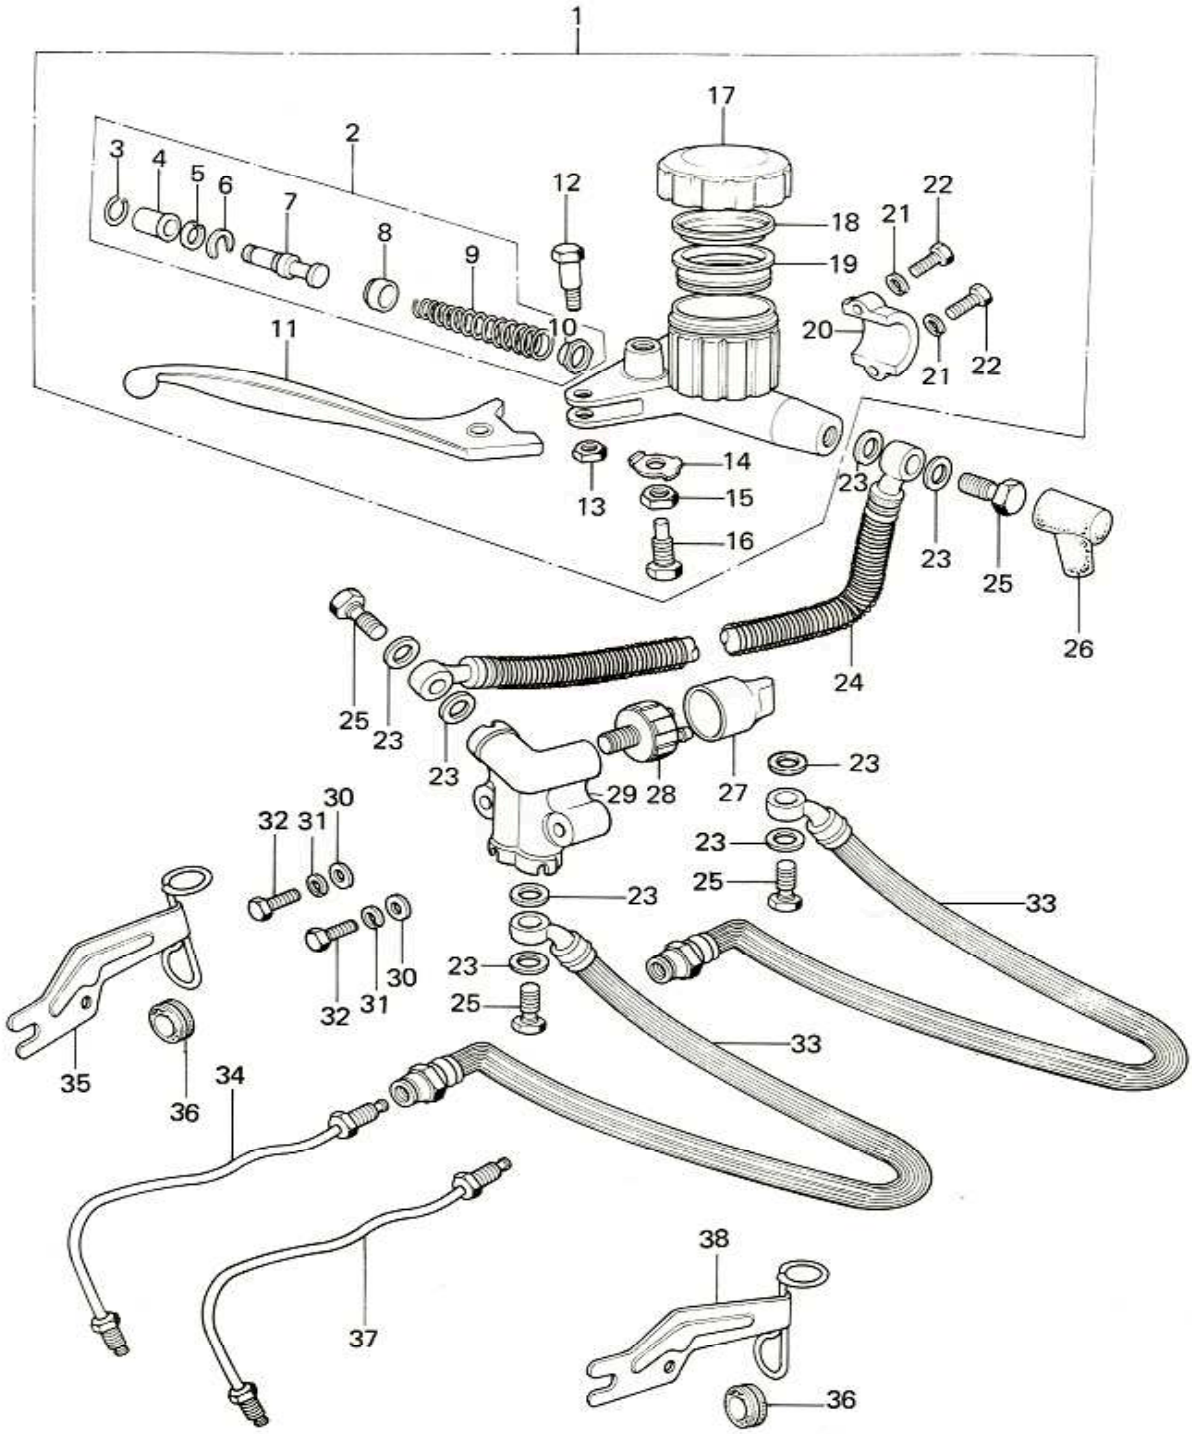


Next >>

25. Disc Brake Equipment A

No.	Part No.	Q'TY	PART NAME	
1	43015-025	1	CYLINDER ASSY, master	
2	43073-005	1	REPAIR SET, master cylinder	
3	~~43025-001~~	1	STOPPER, boots	**NLA**
4	~~43024-001~~	1	BOOTS	**NLA**
5	481J1-800	1	CIRCLIP, 18mm	
6	~~43022-001~~	1	STOPPER, piston	**NLA**
7	~~43072-002~~	1	PISTON ASSY	**NLA**
8	43019-002	1	CUP, primary	
9	43018-002	1	SPRING ASSY, return	
10	~~43017-002~~	1	VALVE ASSY, check	**NLA**
11	43029-003	1	LEVER, front brake	
12	~~43033-004~~	1	BOLT, lever fitting	**NLA**
13	312B0-600	1	NUT, 6mm	
14	43031-001	1	WASHER, lock, 8mm	
15	311B0-800	1	NUT, 8mm	
16	~~43030-003~~	1	BOLT, lever adjusting	**NLA**
17	43026-003	1	CAP, oil cup	
18	43027-001	1	PLATE, master cylinder	
19	43028-003	1	DIAPHRAGM	
20	~~43034-001~~	1	HOLDER, master cylinder	**NLA**
21	411B0-600	2	WASHER, plain, 6mm	
22	110N0-625	2	BOLT, hex head, 6x25	
23	43067-001	8	WASHER, oil bolt	
24	43059-007	1	HOSE, master cylinder brake	
25	43066-001	4	BOLT, oil	
26	43069-001	1	COVER, dust	
27	~~92037-023~~	1	RUBBER CAP	**NLA**
28	43065-001	1	SWITCH, front brake	
29	~~43075-002~~	1	JOINT, four way	**NLA**
30	411B0-600	2	WASHER, plain, 6mm	
31	461F0-600	2	WASHER, spring, 6mm	
32	110N0-645	2	BOLT, hex head, 6x45	
33	43059-011	2	HOSE, front brake	
34	43060-023	1	PIPE, bridge, LH	
35	43063-001	1	BRACKET, brake hose LH	
36	43064-001	2	GROMMET, brake hose bracket	
37	~~43060-024~~	1	PIPE, bridge, RH	**NLA**
38	43063-003	1	BRACKET, brake hose, RH	


26. Disc Brake Equipment B

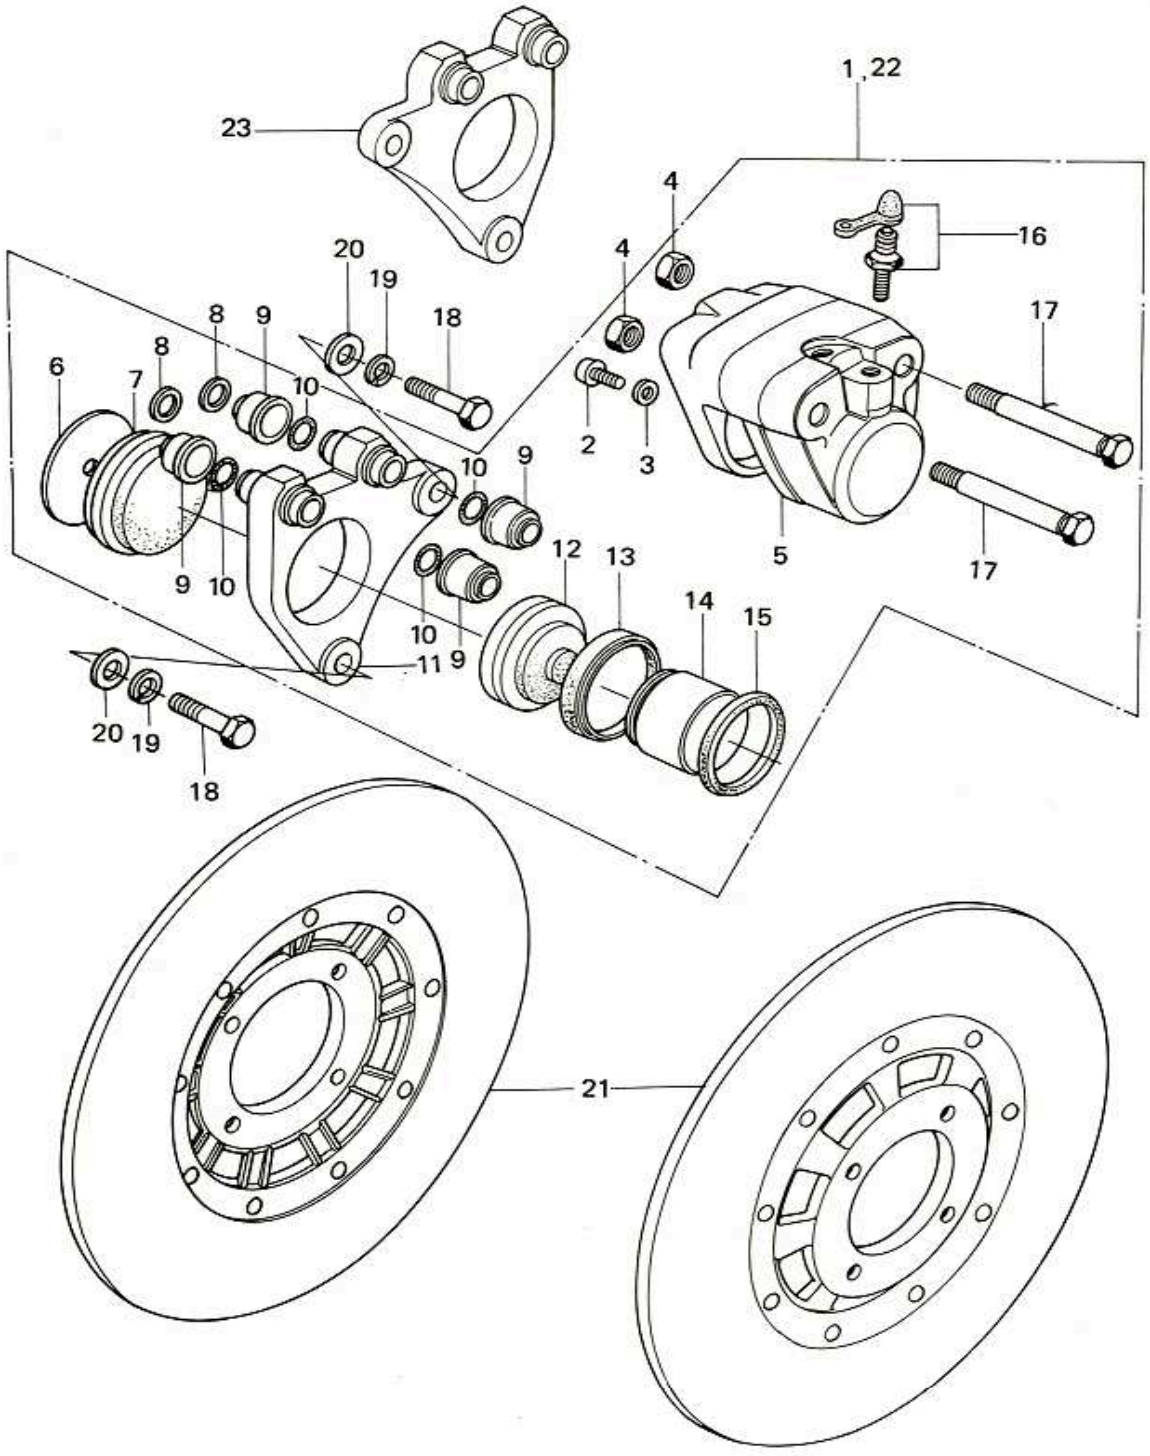

26. Disc Brake Equipment B

No.	Part No.	Q'TY	PART NAME	
1	~~43041-018~~	1	CALIPER ASSY, LH	**NLA**
2	220B0-612	2	SCREW, pan head, 6x12	
3	461F0-600	2	WASHER, spring, 6mm	
4	315B1-000	4	NUT, 10mm	
5	~~43042-008~~	2	CALIPER BODY	**NLA**
6	43040-004	2	SPACER	
7	43051-007	2	PAD B	
8	43088-002	4	DAMPER RUBBER	
9	43052-005	8	DUST SEAL	
10	43053-006	8	O-RING	
11	~~43044-008~~	1	HOLDER, caliper, LH	**NLA**
12	43050-006	2	PAD A	
13	43054-003	2	DUST SEAL, piston	
14	~~43048-006~~	2	PISTON, caliper	**NLA**
15	43049-002	2	RING, piston seal	
16	43085-001	2	BREEDER ASSY	
17	43045-006	4	BOLT	
18	92007-032	4	BOLT, caliper fitting	
19	461F1-000	4	WASHER, spring, 10mm	
20	410B1-000	4	WASHER, plain, 10mm	
21	~~41080-007~~	2	DISC PLATE, front brake	**NLA**
22	~~43041-019~~	1	CALIPER ASSY, RH	**NLA**
23	~~43044-009~~	1	HOLDER, caliper, RH	**NLA**


27. Front Fork 1/2

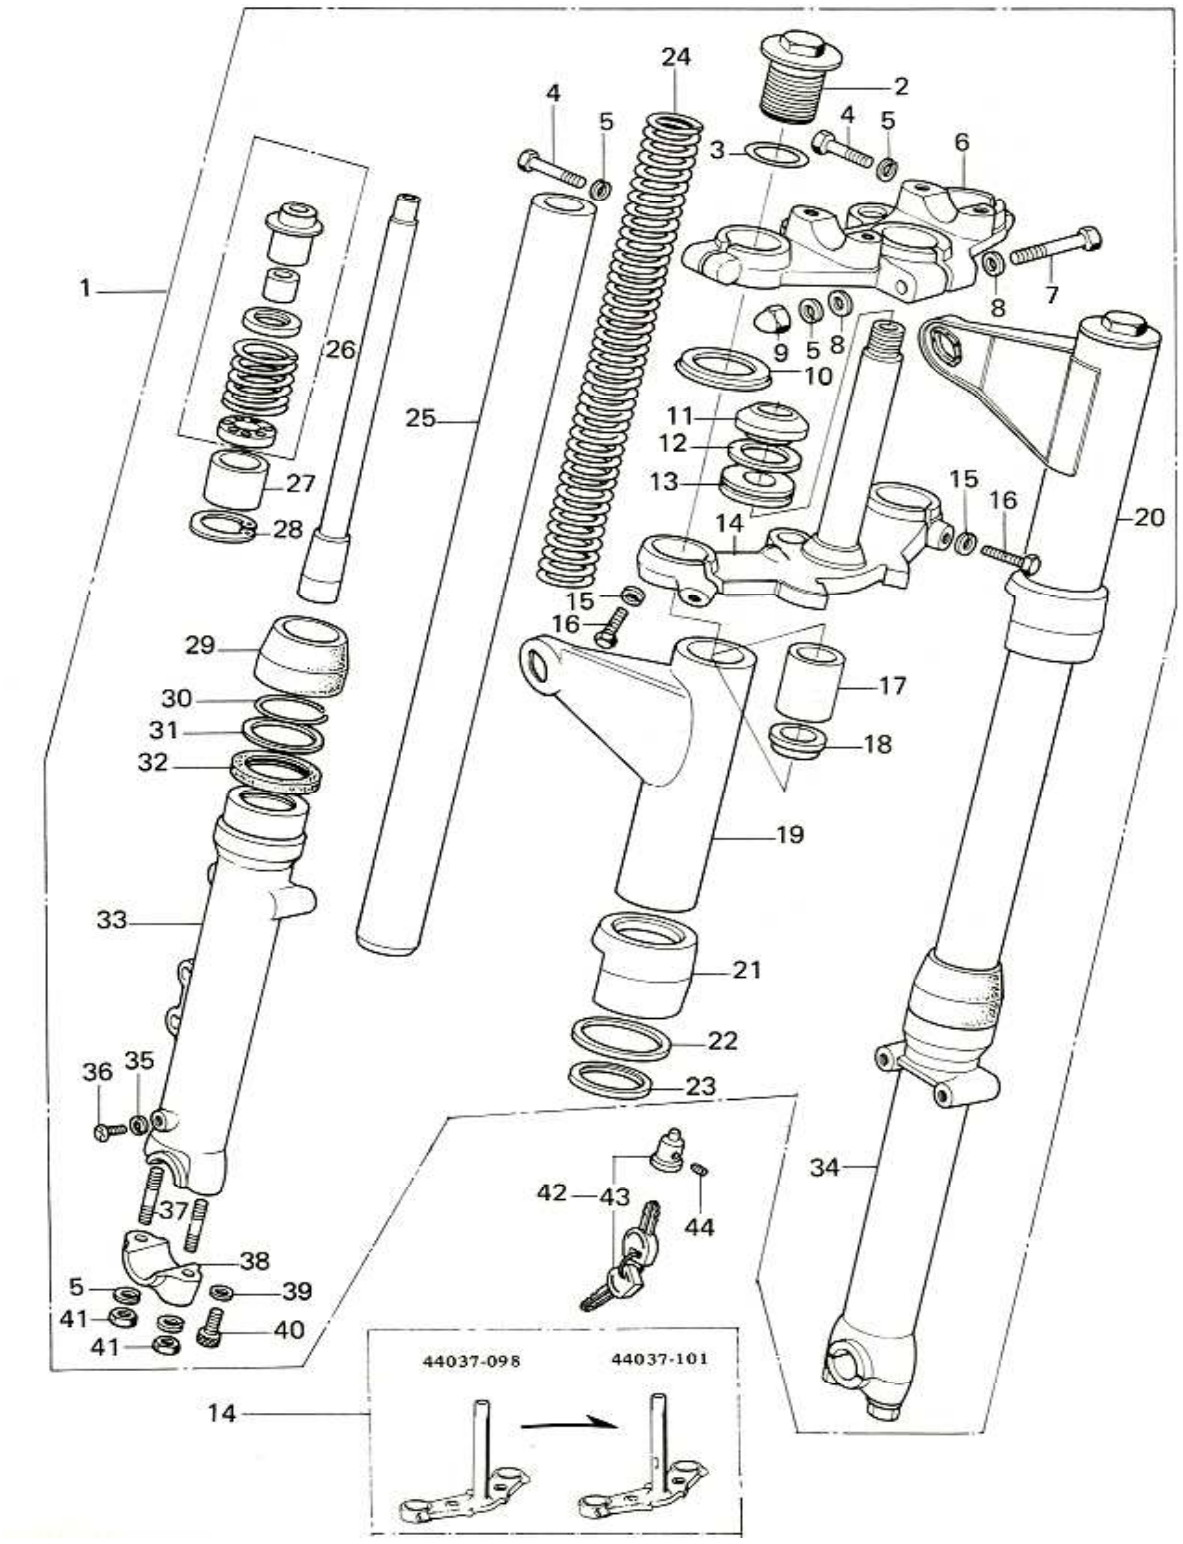

27. Front Fork 1/2

No.	Part No.	Q'TY	PART NAME	
1	~~44001-175~~	1	FRONT FORK ASSY	**NLA**
2	~~44062-003~~	2	BOLT, fork top	**NLA**
3	~~44046-015~~	2	O-RING, fork top	**NLA**
4	~~44041-045~~	2	BOLT, hex head, 8x35	
5	461F0-800	7	WASHER, spring, 8mm	
6	44039-073	1	HEAD, steering stem	
7	~~44041-042~~	1	BOLT, hex head, 8mm	**NLA**
8	410B0-800	2	WASHER, plain, 8mm	
9	92020-007	1	NUT, 8mm	
10	44064-005	2	WASHER, fork cover	
11	92047-012	1	CONE, steering stem	
12	92022-231	1	WASHER, plain	
13	92056-003	1	OIL SEAL, steering stem	
14	~~44037-098~~	1	STEM, steering	**NLA**
15	461F1-200	2	WASHER, spring, 12mm	
16	92003-064	2	BOLT, hex head, 12x36	
17	~~44028-039~~	2	SPACER, fork spring guide	**NLA**
18	~~44029-019~~	2	GUIDE, fork spring	**NLA**
19	~~44033-072~~	1	COVER, LH fork	**NLA**
20	~~44034-072~~	1	COVER, RH fork	**NLA**
21	~~44064-025~~	2	GUIDE, fork cover	**NLA**
22	~~44064-008~~	2	WASHER, fork cover guide	**NLA**
23	44045-038	2	GASKET, fork cover	
24	~~44026-071~~	2	SPRING, fork	**NLA**
25	44013-037	2	TUBE, fork inner	
26	~~44022-027~~	2	CYLINDER, fork	**NLA**
27	~~44018-009~~	2	PISTON, fork	**NLA**
28	~~44044-019~~	2	CIRCLIP	**NLA**
29	44010-032	2	DUST SHIELD, fork	
30	44044-015	2	CIRCLIP	
31	44043-044	2	WASHER, plain	
32	44009-024	2	OIL SEAL	
33	~~44005-063~~	1	TUBE, LH fork outer	**NLA**
34	44006-061	1	TUBE, RH fork outer	
35	44045-002	2	GASKET, fork drain	
36	220B0-408	2	SCREW, pan head, 4x8	
37	172G0-835	4	STUD, 8x35	
38	~~44063-014~~	2	HOLDER, front axle	**NLA**
39	44045-034	2	GASKET, fork cylinder bolt	
40	44041-040	2	BOLT, fork cylinder	
41	92019-022	4	NUT, lock, 8mm	
42	~~27016-048~~	1	LOCK ASSY, steering	**NLA**


27. Front Fork 2/2

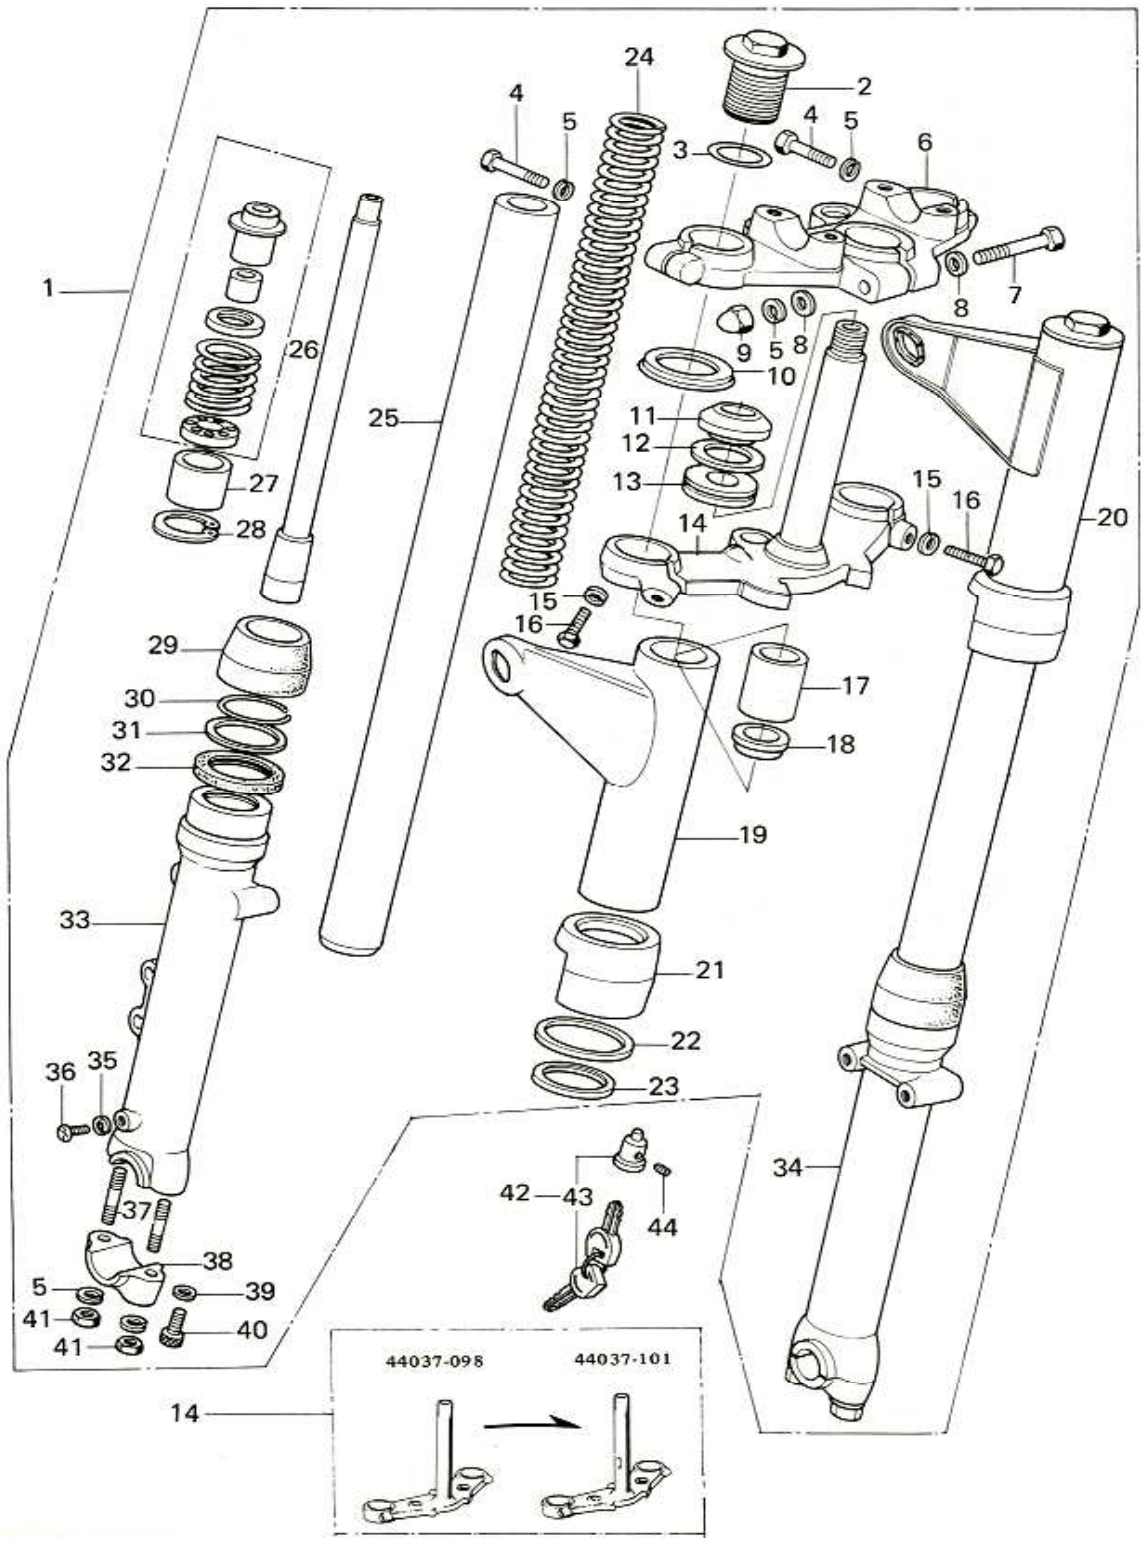

27. Front Fork 2/2

No.	Part No.	Q'TY	PART NAME	
43	~~27008-0695-1~~	1	KEY SET, #751	**NLA**
43	~~27008-0695-2~~	1	KEY SET, #752	**NLA**
43	~~27008-0695-3~~	1	KEY SET, #753	**NLA**
43	~~27008-0695-4~~	1	KEY SET, #754	**NLA**
43	~~27008-0695-5~~	1	KEY SET, #755	**NLA**
44	~~92014-012~~	1	SCREW, steering lock fitting	**NLA**


28. Fuel Tank

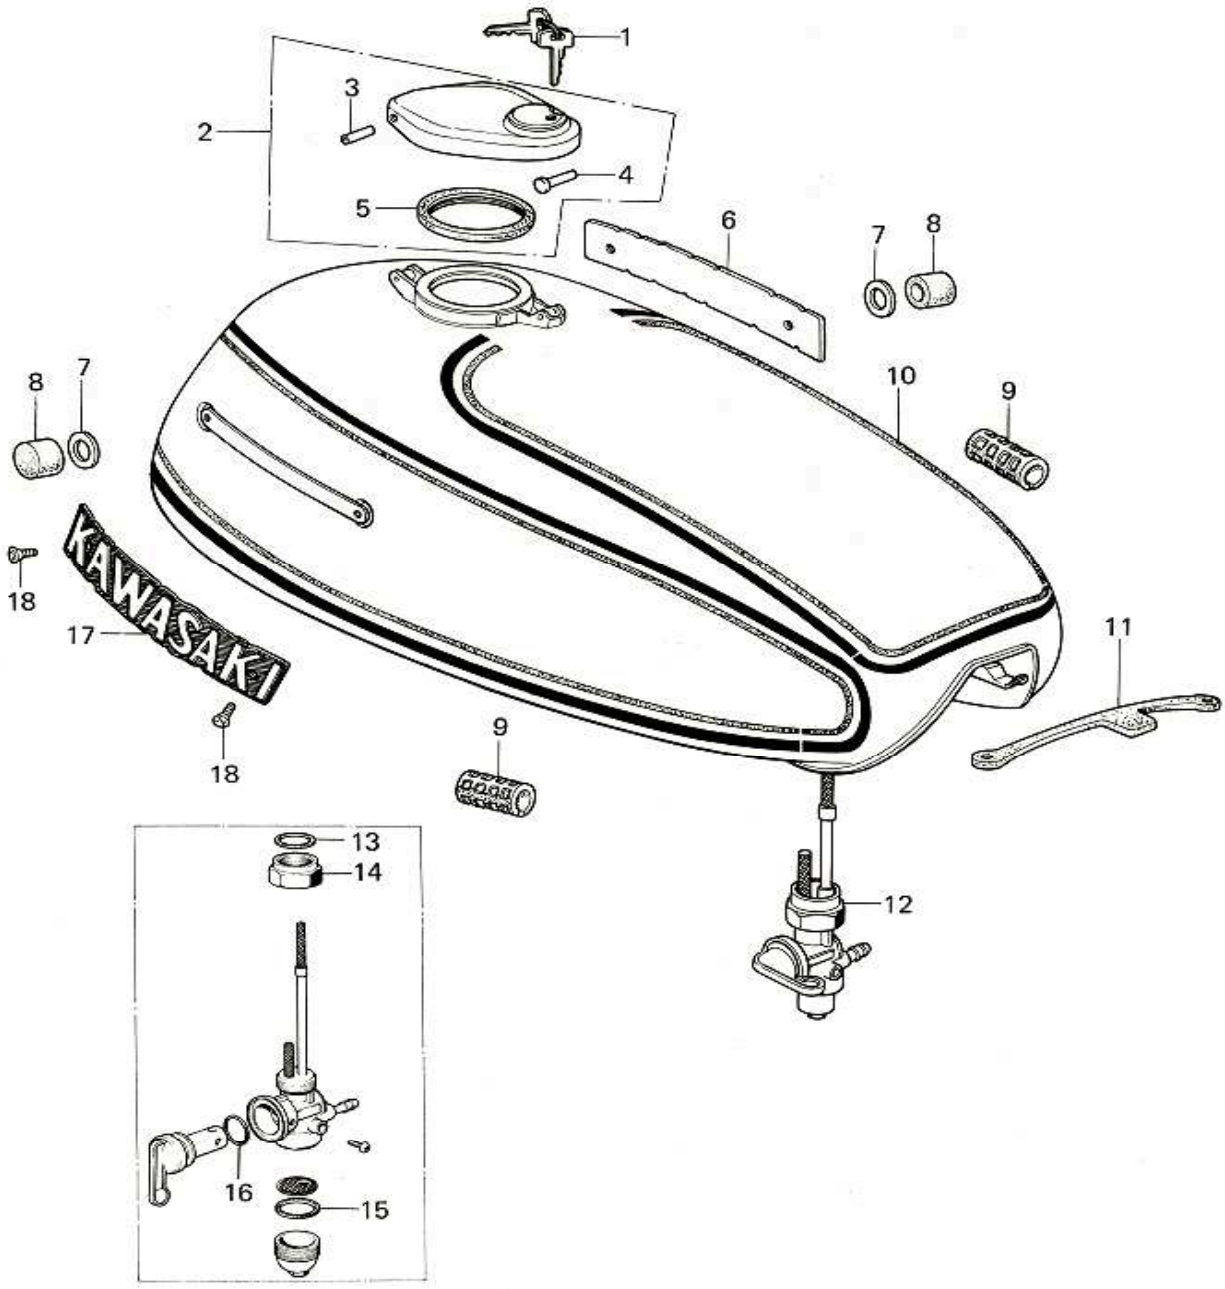


28. Fuel Tank

No.	Part No.	Q'TY	PART NAME	
1	~~27008-0695-1~~	1	KEY SET, #751	**NLA**
1	~~27008-0695-2~~	1	KEY SET, #752	**NLA**
1	~~27008-0695-3~~	1	KEY SET, #753	**NLA**
1	~~27008-0695-4~~	1	KEY SET, #754	**NLA**
1	~~27008-0695-5~~	1	KEY SET, #755	**NLA**
2	51048-012	1	CAP ASSY, fuel tank	
3	92043-127	1	PIN, hinge	
4	92043-126	1	PIN, hook	
5	51059-008	1	GASKET, fuel tank cap	
6	56014-064	1	EMBLEM, fuel tank RH	
7	92022-044	2	WASHER, plain, 25mm	
8	92075-125	2	RUBBER, fuel tank front	
9	92075-084	2	RUBBER, fuel tank rear	
10	~~51001-1073-M~~	1	TANK, fuel, Diamond Dark Green	**NLA**
10	~~51001-1073-N~~	1	TANK, fuel, Diamond Brown	**NLA**
11	92072-042	1	BAND, fuel tank	
12	51023-055	1	COCK ASSY, fuel	
13	92065-081	1	GASKET, fuel cock joint	
14	51035-009	1	NUT, fuel cock joint	
15	51037-010	1	GASKET, fuel cock cup	
16	670B0-214	1	O-RING, 14mm	
17	56013-057	1	EMBLEM, fuel tank LH	
18	92012-003	4	SCREW, countersunk head 3x6	

29. Side Covers

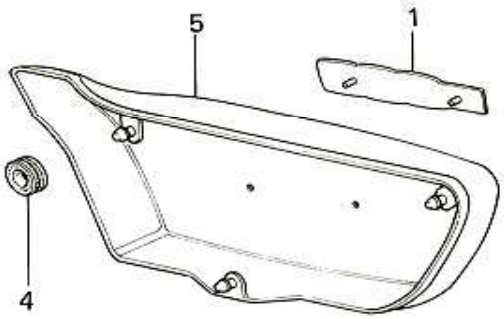


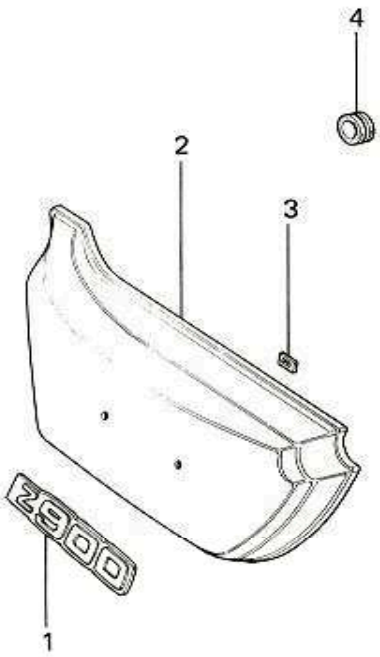

29. Side Covers

No.	Part No.	Q'TY	PART NAME	
1	56018-238	2	EMBLEM, side cover	
2	~~36001-0543-M~~	1	COVER, LH side, D. Dark Green	**NLA**
2	~~36001-0543-N~~	1	COVER, LH side, Diamond Brown	**NLA**
3	92018-005	6	NUT, lock, 3mm	
4	92071-056	6	GROMMET, side cover	
5	~~36007-0302-R~~	1	COVER, RH side, D. Dark Green	**NLA**
5	~~36007-0302-S~~	1	COVER, RH side, Diamond Brown	**NLA**


30. Dual Seat, Chain Cover

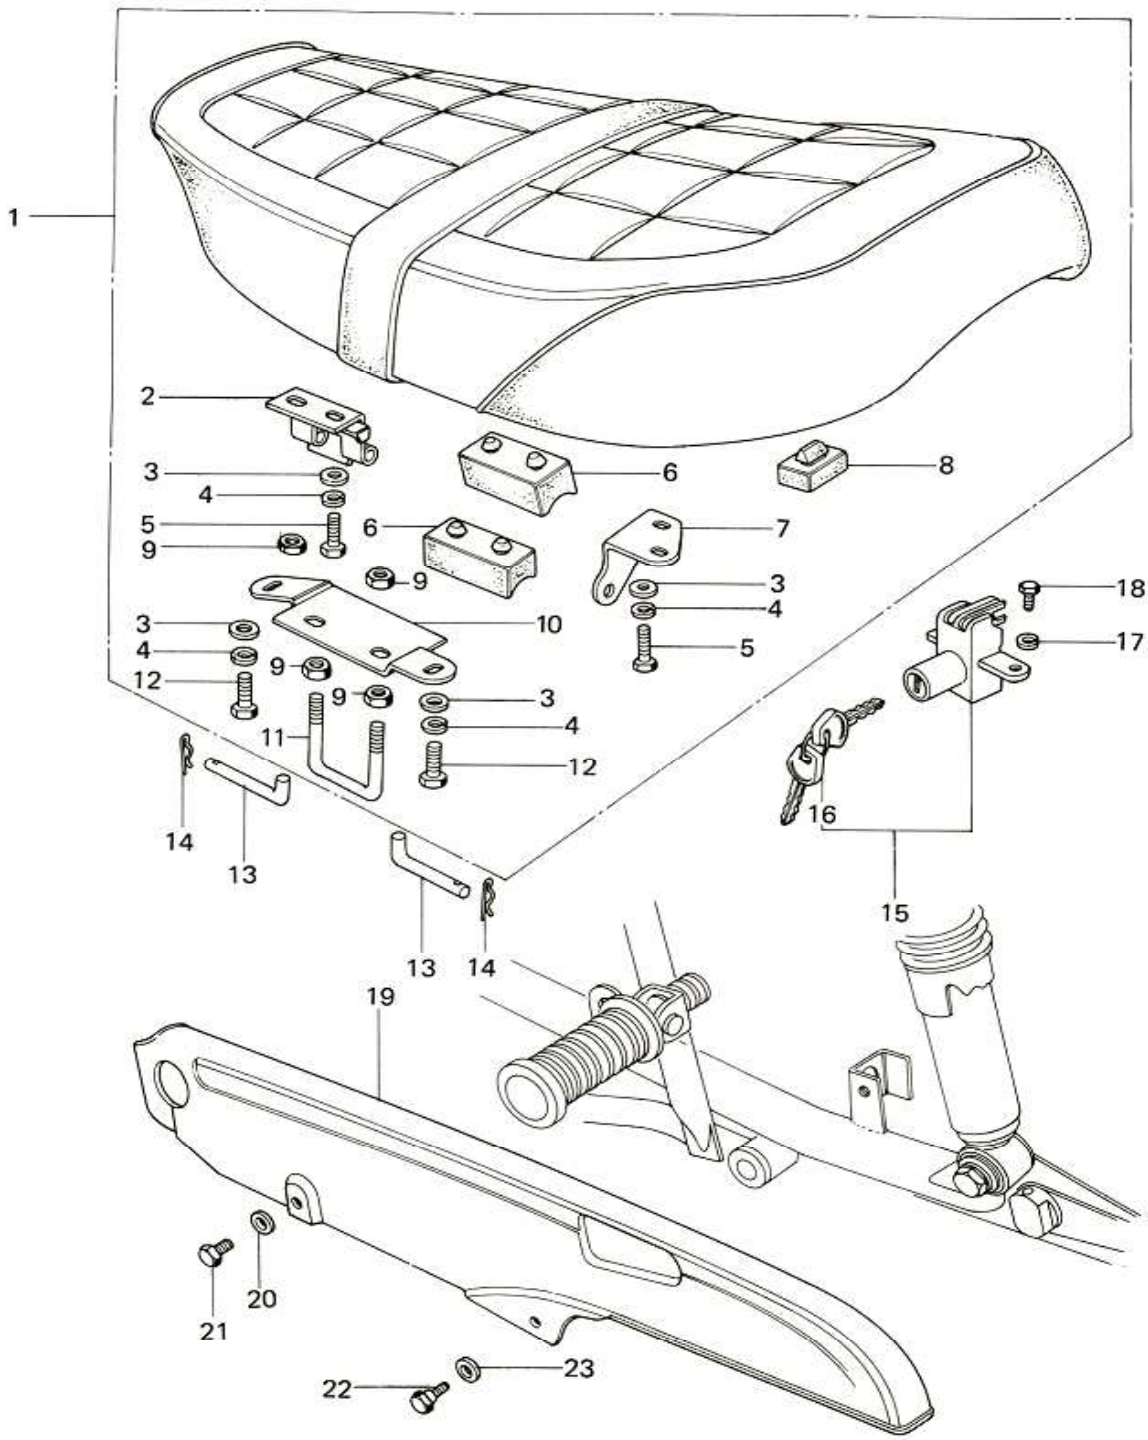

30. Dual Seat, Chain Cover

No.	Part No.	Q'TY	PART NAME	
1	53001-083	1	SEAT ASSY, dual	
2	~~53009-037~~	1	HINGE, front	**NLA**
3	411B0-600	6	WASHER, plain, 6mm	
4	461F0-600	6	WASHER, spring, 6mm	
5	110B0-616	4	BOLT, hex head, 6x16	
6	92075-139	3	DAMPER RUBBER, seat	
7	~~53009-017~~	1	HINGE, rear	**NLA**
8	92075-099	1	DAMPER RUBBER, seat	
9	310B0-600	4	NUT, 6mm	
10	~~53058-003~~	1	BRACKET, seat catch	**NLA**
11	53056-002	1	CATCH, seat	
12	110B0-614	2	BOLT, hex head, 6x14	
13	53011-008	2	PIN, dual seat pivot	
14	92041-003	2	PIN, cotter	
15	27030-005	1	LOCK ASSY, seat	
16	~~27008-0695-1~~	1	KEY SET, #751	**NLA**
16	~~27008-0695-2~~	1	KEY SET, #752	**NLA**
16	~~27008-0695-3~~	1	KEY SET, #753	**NLA**
16	~~27008-0695-4~~	1	KEY SET, #754	**NLA**
16	~~27008-0695-5~~	1	KEY SET, #755	**NLA**
17	461F0-600	1	WASHER, spring, 6mm	
18	110B0-612	1	BOLT, hex head, 6x12	
19	36014-061	1	COVER, chain	
20	92022-125	1	WASHER, plain, 6mm	
21	~~110N0-618~~	1	BOLT, hex head, 6x18	**NLA**
22	92001-115	1	BOLT, hex head, 6x14	
23	92022-195	1	WASHER, plain, 6mm	


31. Cables

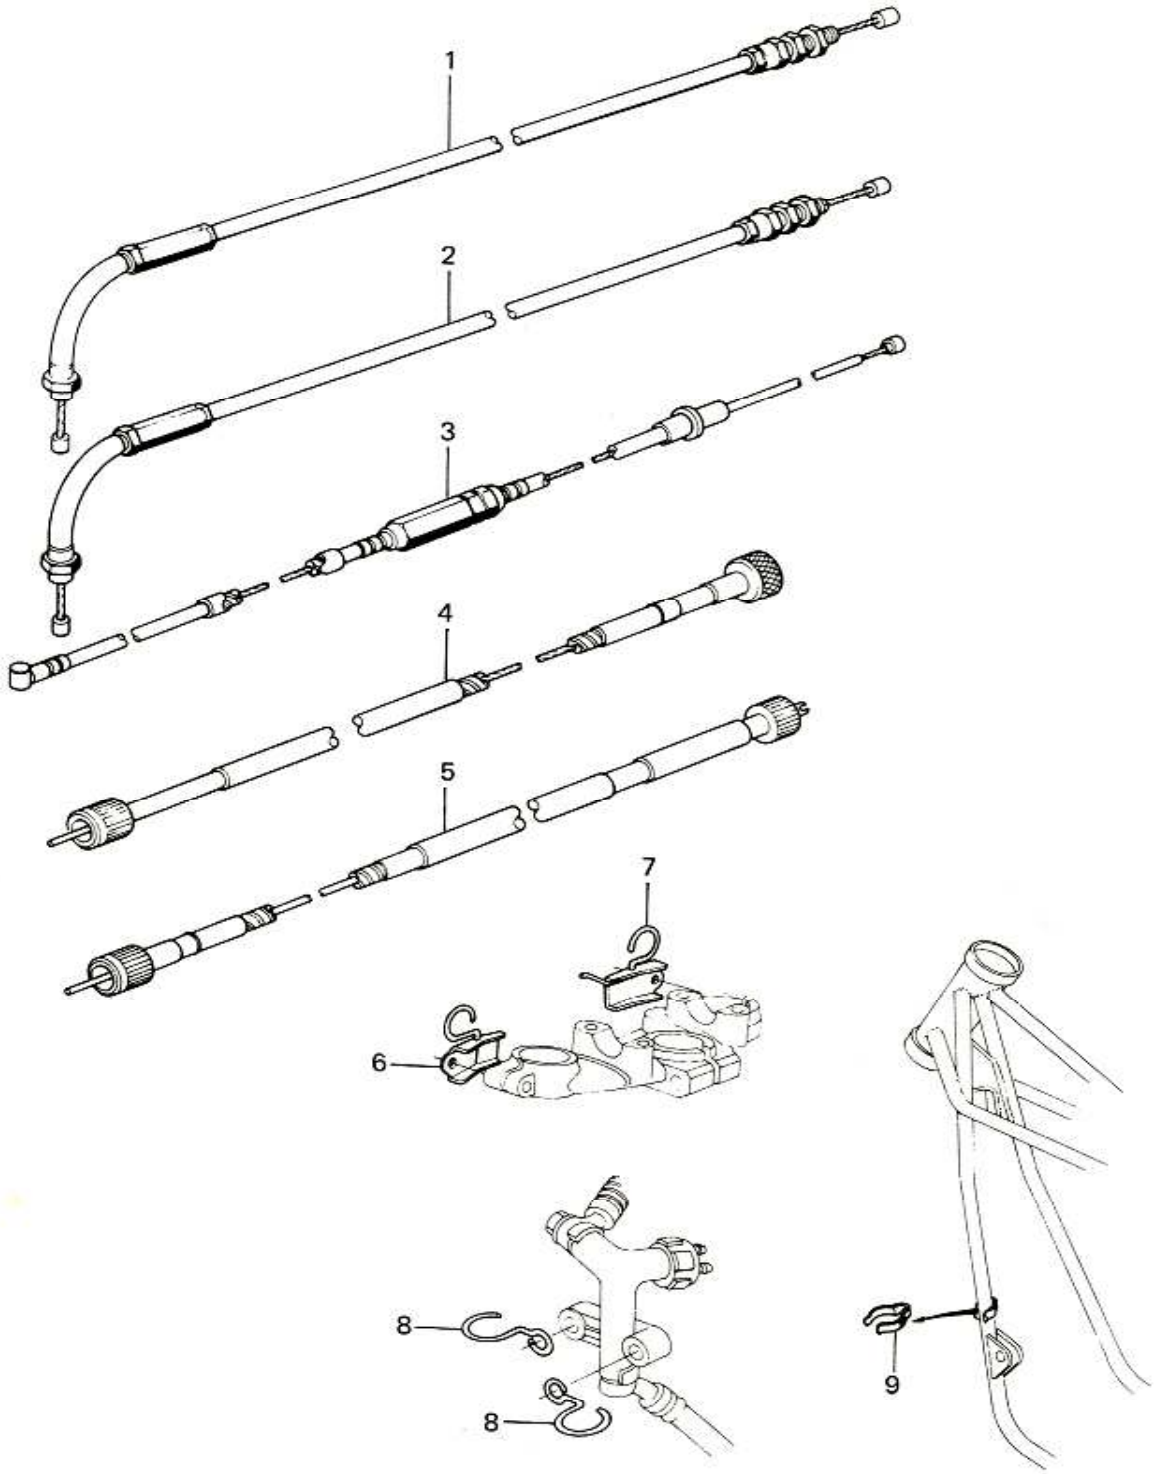

31. Cables

No.	Part No.	Q'TY	PART NAME	
1	~~54012-087~~	1	CABLE, throttle opening	**NLA**
2	54012-081	1	CABLE, throttle closing	
3	54011-048	1	CABLE, clutch	
4	54018-015	1	CABLE, tachometer	
5	54001-040	1	CABLE, speedometer	
5	54001-1005	1	CABLE, speedometer	**+ 5cm**
6	~~92037-090~~	1	CLAMP, cable	**NLA**
7	~~92037-104~~	1	CLAMP, cable	**NLA**
8	92037-092	2	CLAMP, cable	
9	92037-093	1	CLAMP, cable	


32. Electrical Equipments A

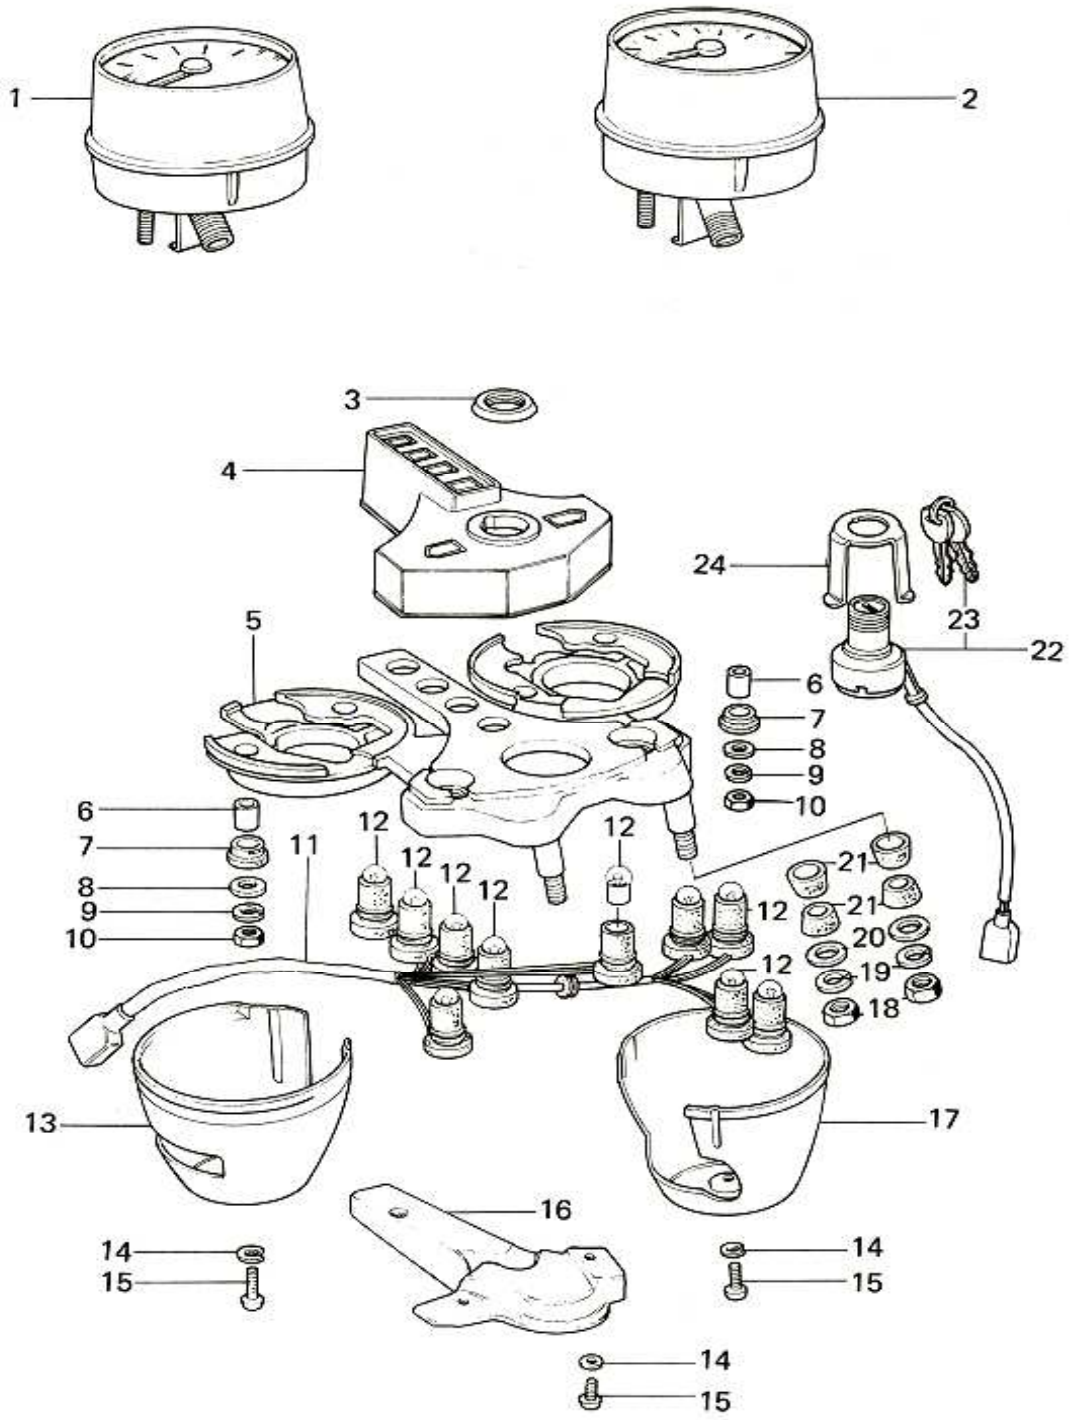

32. Electrical Equipments A

No.	Part No.	Q'TY	PART NAME	
1	25006-056	1	SPEEDOMETER ASSY, KMH	
2	~~25016-028~~	1	TACHOMETER ASSY	**NLA**
3	~~27007-004~~	1	NUT, ignition switch lock	**NLA**
4	25023-015	1	COVER, meter indicator	
5	25008-045	1	BRACKET, meter	
6	92027-174	4	COLLAR, speedometer	
7	92075-172	4	DAMPER RUBBER	
8	92022-241	4	WASHER, plain, 5mm	
9	461F0-500	4	WASHER, spring, 5mm	
10	312B0-500	4	NUT, 5mm	
11	~~25011-049~~	1	SOCKET, meter	**NLA**
12	92069-018	10	BULB, 12V 3.4W	
13	25012-010	1	COVER, speedometer	
14	461F0-300	5	WASHER, spring, 3mm	
15	220B0-308	5	SCREW, pan head, 3x8	
16	25024-006	1	COVER, meter bracket	
17	25012-011	1	COVER, tachometer	
18	310B0-800	2	NUT, 8mm	
19	461F0-800	2	WASHER, spring, 8mm	
20	411B0-800	2	WASHER, plain, 8mm	
21	92075-080	4	DAMPER RUBBER	
22	~~27005-086~~	1	SWITCH ASSY, ignition	**NLA**
23	~~27008-0695-1~~	1	KEY SET, #751	**NLA**
23	~~27008-0695-2~~	1	KEY SET, #752	**NLA**
23	~~27008-0695-3~~	1	KEY SET, #753	**NLA**
23	~~27008-0695-4~~	1	KEY SET, #754	**NLA**
23	~~27008-0695-5~~	1	KEY SET, #755	**NLA**
24	~~27019-003~~	1	HOLDER, igniton switch	**NLA**


33. Electrical Equipments B

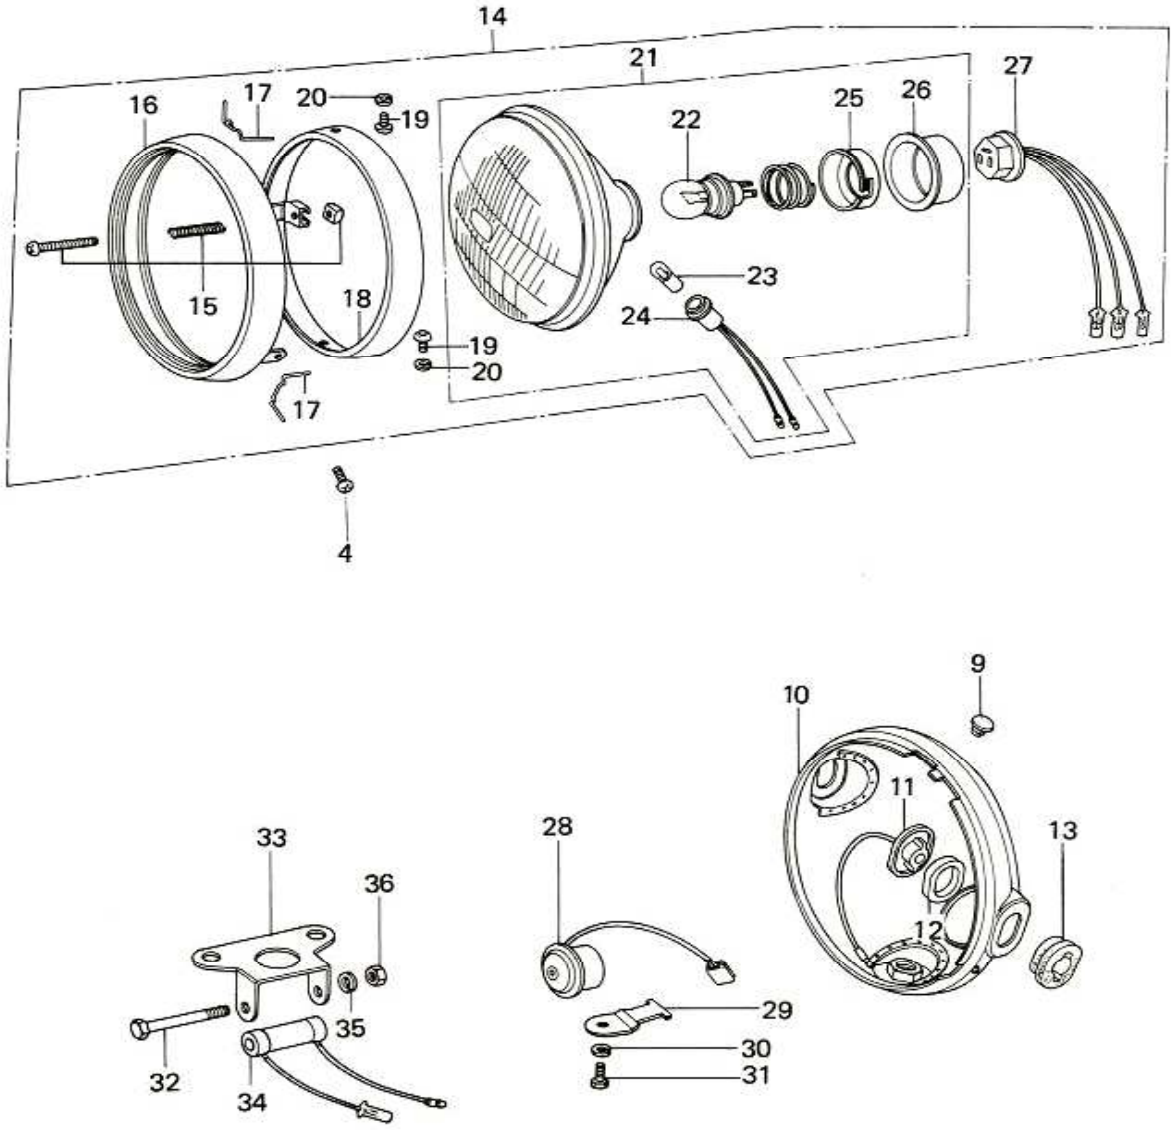


33. Electrical Equipments B

No.	Part No.	Q'TY	PART NAME	
1	-		*England*	
2	-		*England*	
3	-		*England*	
4	23019-022	2	SCREW, pan head, 5x14	
5	-		*England*	
6	-		*England*	
7	-		*England*	
8	-		*England*	
9	92074-006	1	RUBBER PLUG	
10	~~23005-0372-1~~	1	BODY, head lamp, flat black	**NLA**
11	23076-005	2	COLLAR	
12	23066-016	2	DAMPER RUBBER	
13	23066-015	2	DAMPER RUBBER	
14	~~23004-058~~	1	LAMP UNIT, head	**NLA**
15	~~23013-004~~	1	SCREW SET, focus adjust	**NLA**
16	~~23006-045~~	1	RIM, head lamp	**NLA**
17	~~23009-016~~	3	CLAMP, head lamp lens unit	**NLA**
18	23072-004	1	RETAINER, head lamp	
19	23019-028	2	SCREW, pan head, 5x6	
20	461F0-500	2	WASHER, spring, 5mm	
21	~~23007-062~~	1	LENS UNIT, head lamp	**NLA**
22	~~92069-080~~	1	BULB, 12V 45/40W	**NLA**
23	92069-071	1	BULB, 12V 4W	
24	~~23008-042~~	1	SOCKET, parking lamp	**NLA**
25	~~23084-001~~	1	HOLDER, socket	**NLA**
26	~~23085-001~~	1	COVER, socket	**NLA**
27	23008-044	1	SOCKET, head lamp	
28	~~27040-002~~	1	ALARM, turn signal	**NLA**
29	~~27023-005~~	1	BRACKET, turn signal alarm	**NLA**
30	461F0-800	1	WASHER, spring, 8mm	
31	110B0-816	1	BOLT, hex head, 8x16	
32	~~110B0-863~~	1	BOLT, hex head, 8x63	**NLA**
33	~~32122-034~~	1	BRACKET, resister	**NLA**
34	26019-005	1	RESISTER	
35	461F0-800	1	WASHER, spring, 8mm	
36	321B0-800	1	NUT, 8mm	

34. Electrical Equipments C

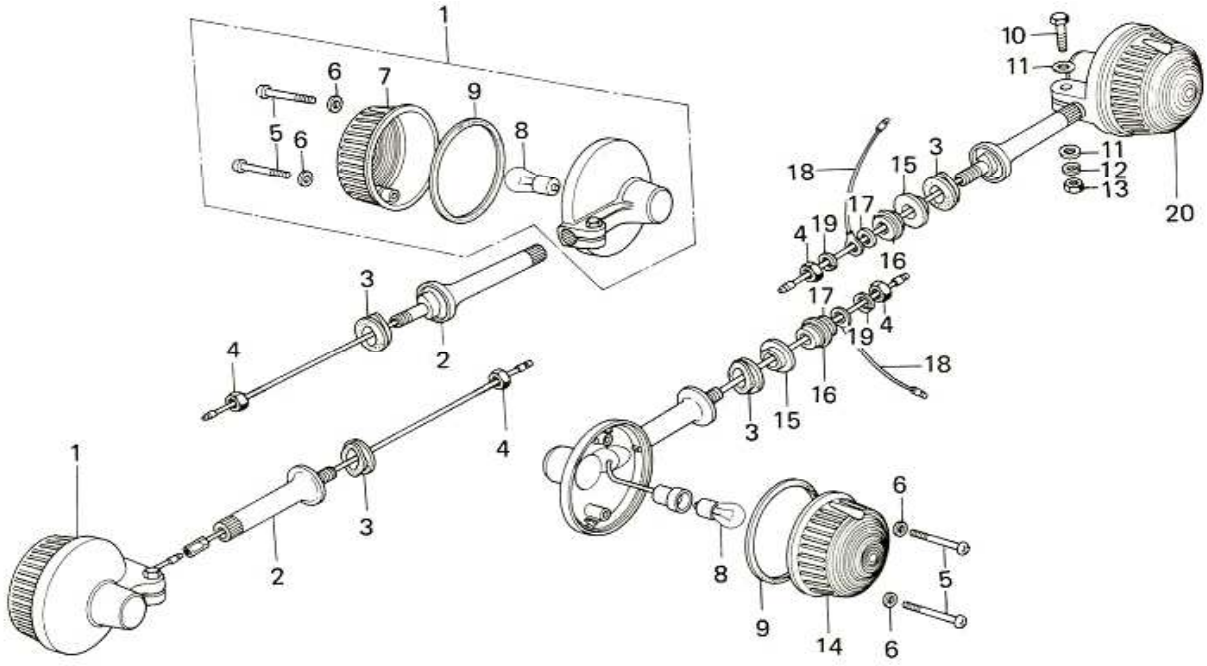


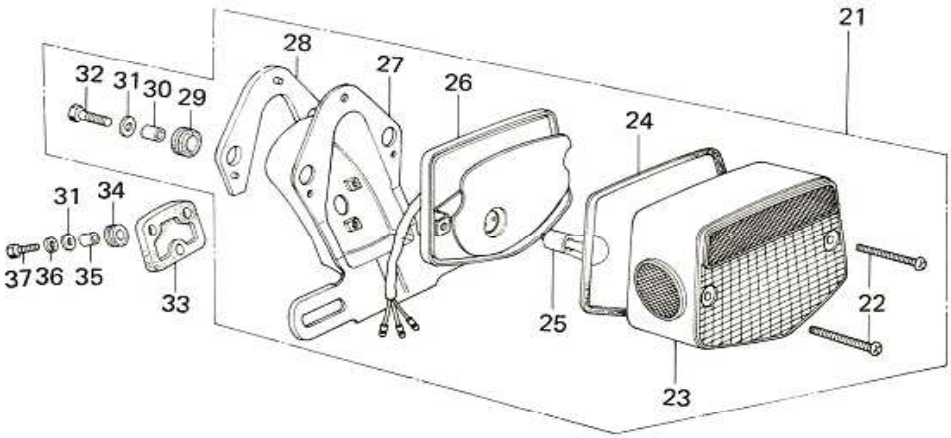

34. Electrical Equipments C

No.	Part No.	Q'TY	PART NAME	
1	23040-047	2	LAMP ASSY, front turn signal	
2	23078-001	4	BRACKET, turn signal lamp	
3	92075-128	4	DAMPER RUBBER, turn signal lamp	
4	315B1-000	4	NUT, 10mm	
5	220E0-435A	8	SCREW, pan head, 4x35	
6	23058-002	8	WASHER, plain, 4mm	
7	23048-012	2	LENS, turn signal lamp, front	
8	~~92069-076~~	4	BULB, 12V 21W	**NLA**
9	23050-002	4	GASKET, turn signal lamp lens	
10	110N0-630	4	BOLT, hex head, 6x30	
11	411B0-600	8	WASHER, plain, 6mm	
12	461F0-600	4	WASHER, spring, 6mm	
13	310B0-600	4	NUT, 6mm	
14	23048-015	2	LENS, turn signal lamp, rear	
15	92075-158	2	DAMPER RUBBER, turn signal lamp	
16	92027-147	2	COLLAR	
17	92022-239	2	WASHER, plain	
18	26011-095	2	WIRE, signal lamp ground lead	
19	461F1-000	2	WASHER, spring, 10mm	
20	~~23040-048~~	2	LAMP ASSY, rear turn signal	**NLA**
21	~~23024-078~~	1	LAMP ASSY, tail	**NLA**
22	~~220E0-460A~~	2	SCREW, pan head, 4x60	**NLA**
23	~~23026-035~~	1	LENS, tail lamp	**NLA**
24	23028-021	1	GASKET, tail lamp lens	
25	92069-063	1	BULB, 12V 21/5W	
26	~~23027-042~~	1	CASE, tail lamp	**NLA**
27	~~23036-048~~	1	BRACKET, license plate	**NLA**
28	23066-023	1	DAMPER RUBBER, bracket	
29	23066-020	2	DAMPER RUBBER	
30	92027-129	2	COLLAR	
31	92022-125	5	WASHER, plain	
32	110B0-622	2	BOLT, hex head, 6x22	
33	35039-004	1	SHOCK DAMPER, tail lamp	
34	92075-121	3	DAMPER RUBBER	
35	92027-156	3	COLLAR	
36	461F0-600	3	WASHER, spring, 6mm	
37	110B0-625	3	BOLT, hex head, 6x25	


35. Electrical Equipments D

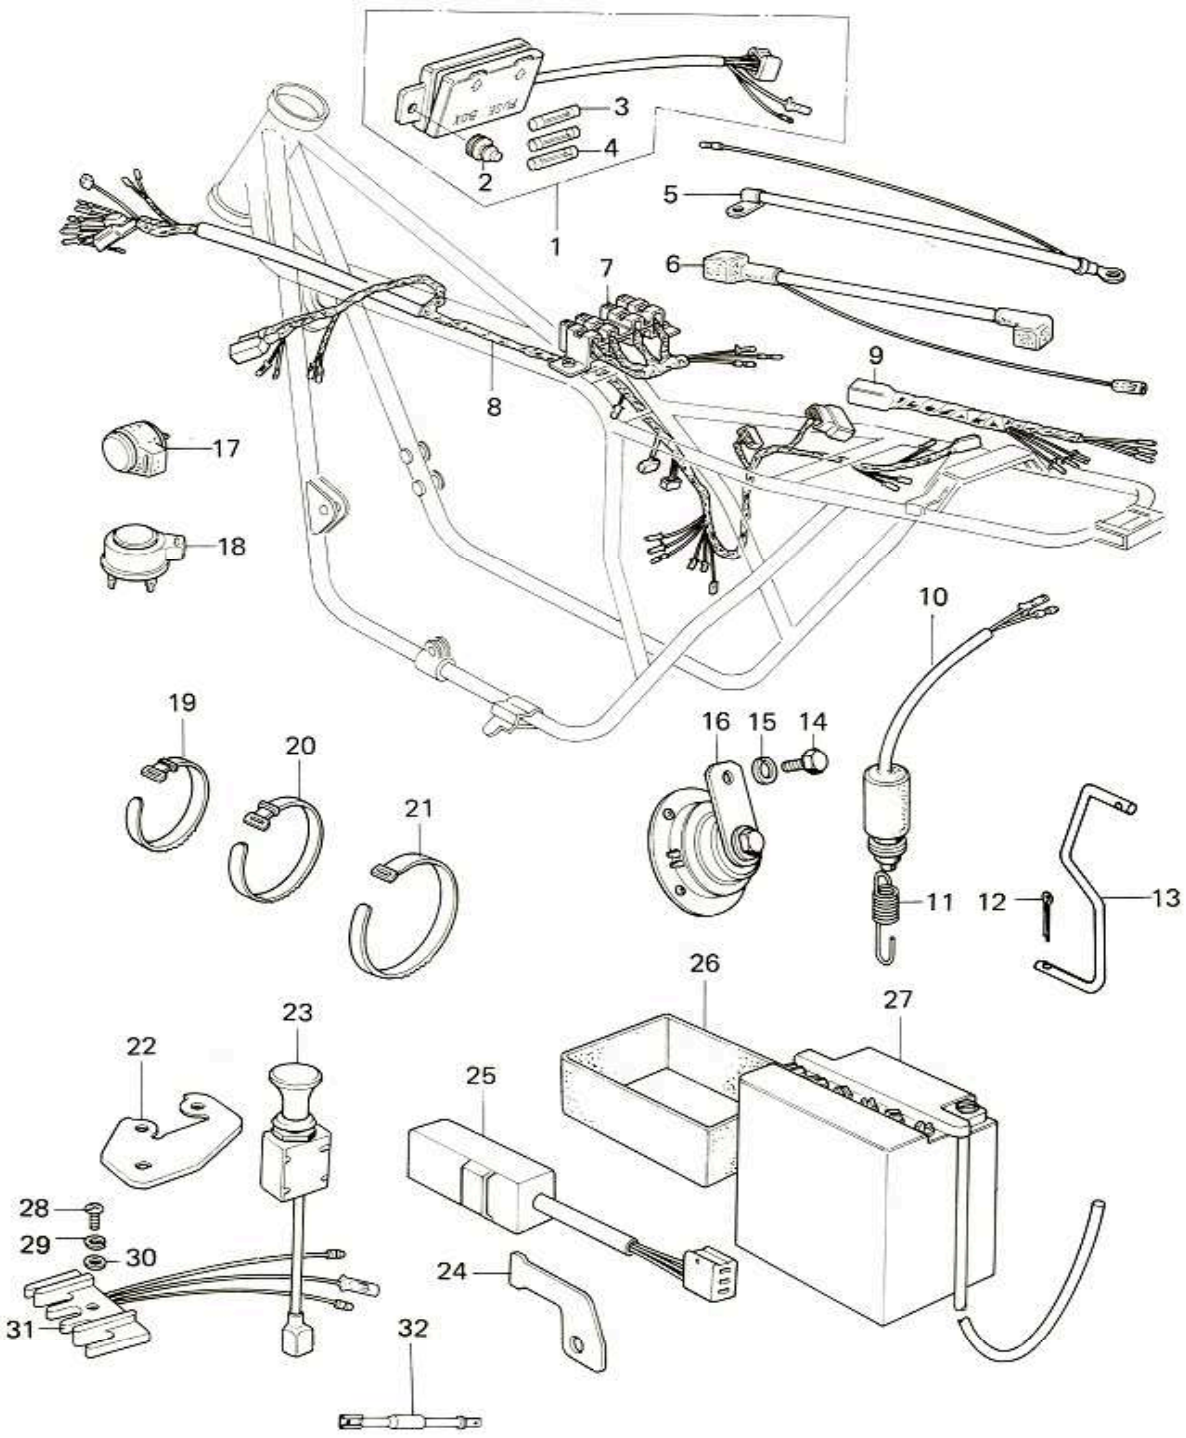

35. Electrical Equipments D

No.	Part No.	Q'TY	PART NAME	
1	26004-035	1	FUSE ASSY	
2	92075-279	1	DAMPER RUBBER	
3	26006-005	2	FUSE 20A	
4	26006-003	3	FUSE 10A	
5	~~26010-043~~	1	WIRE, battery ground lead	**NLA**
6	~~26010-042~~	1	WIRE, starter lead	**NLA**
7	~~26002-057~~	1	WIRING HARNESS, center	**NLA**
8	~~26001-135~~	1	WIRING HARNESS, main	**NLA**
9	~~26002-031~~	1	WIRING HARNESS, rear	**NLA**
10	~~27010-017~~	1	SWITCH, brake lamp	**NLA**
11	27011-009	1	SPRING, brake lamp switch	
12	550D1-610	1	PIN, cotter, 1.6x10	
13	27012-010	1	HOOK, brake lamp switch	
14	110B0-816	1	BOLT, hex head, 8x16	
15	461F0-800	1	WASHER, spring, 8mm	
16	~~27003-065~~	1	HORN	**NLA**
17	27002-011	1	RELAY, turn signal	
18	27002-016	1	RELAY, hazard	
19	92072-030	5	BAND, rubber, small	
20	92072-056	3	BAND, rubber	
21	92072-032	3	BAND, rubber, large	
22	~~32060-019~~	1	BRACKET, hazard switch	**NLA**
23	~~27014-008~~	1	SWITCH, hazard	**NLA**
24	32060-014	1	BRACKET, brake failure indicator	
25	~~28019-001~~	1	SWITCH, brake light	**NLA**
26	~~32099-015~~	1	RUBBER BAND, battery	**NLA**
27	~~26012-042~~	1	BATTERY, YB10L-A2 (12V-10AH)	**NLA**
28	220B0-620	1	SCREW, pan head, 6x20	
29	461F0-600	1	WASHER, spring, 6mm	
30	411B0-600	1	WASHER, plain, 6mm	
31	21066-024	1	REGULATOR, hazard	
32	21066-026	1	REGULATOR	


36. Tools

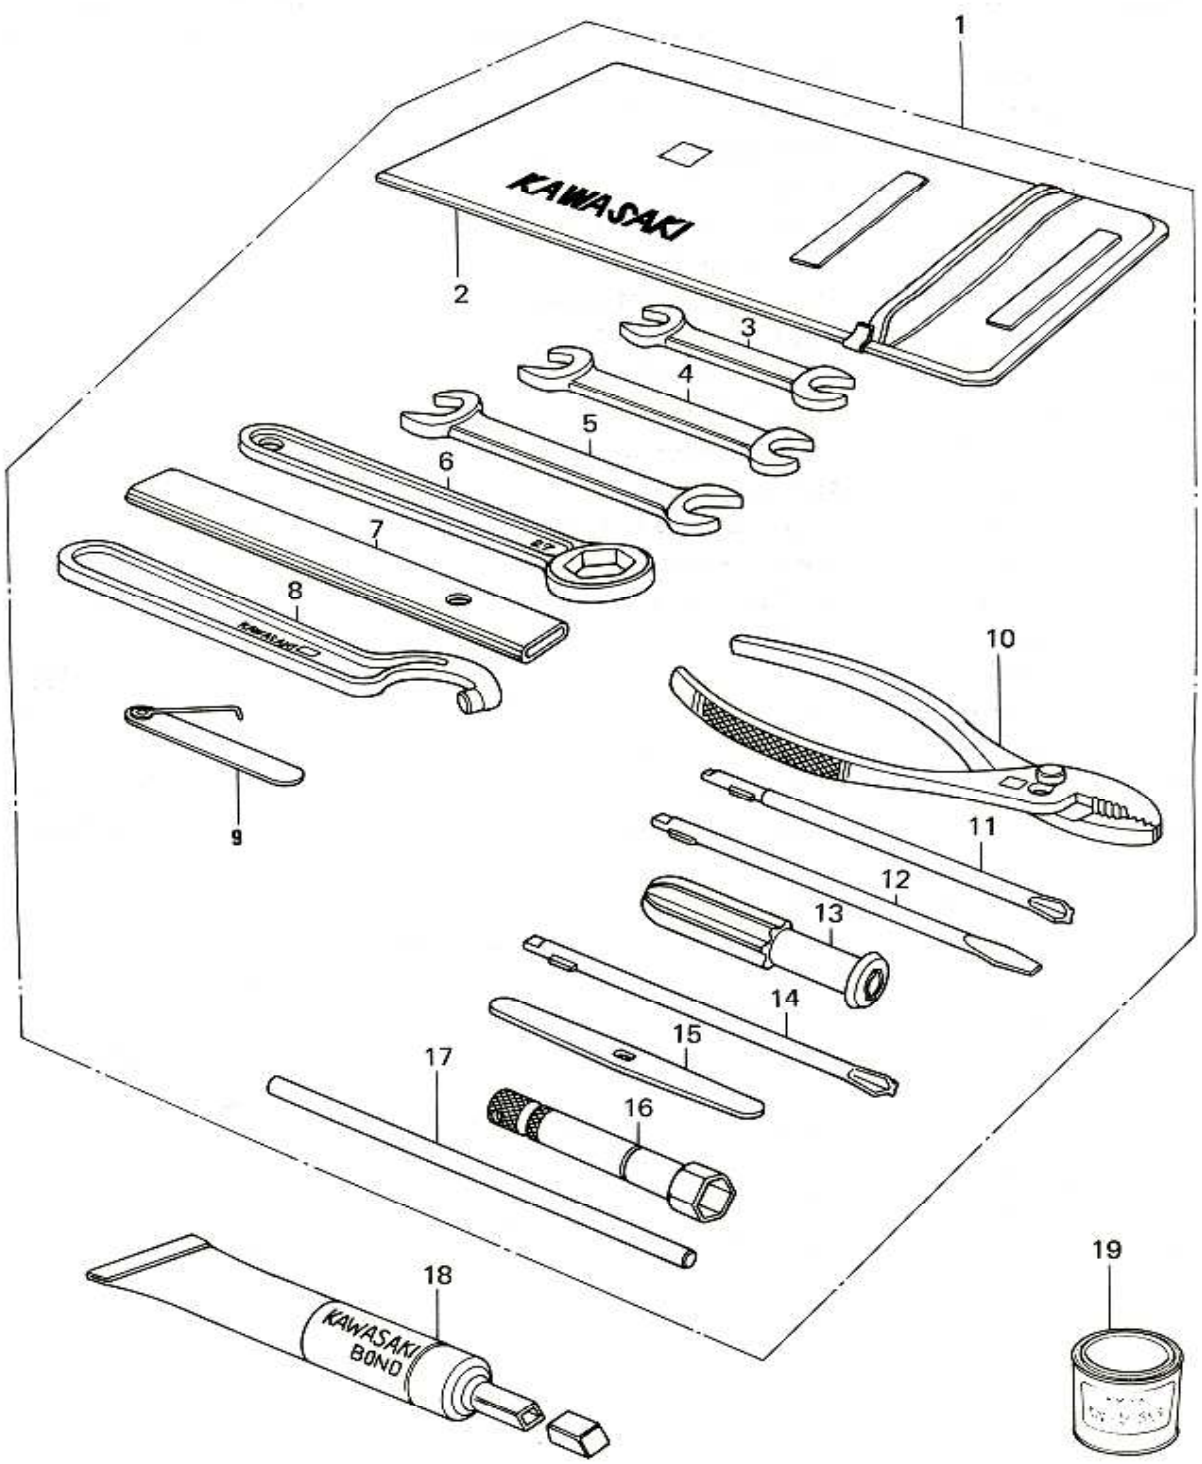

36. Tools

No.	Part No.	Q'TY	PART NAME	
1	~~56007-049~~	1	TOOL KIT	**NLA**
2	56008-006	1	BAG, tool	
3	92126-001	1	WRENCH, open end, 8x10	
4	~~92126-002~~	1	WRENCH, open end, 12x13	**NLA**
5	92110-1153	1	WRENCH, open end, 14x17	
6	92110-1147	1	WRENCH, box, 27mm	
7	92111-1052	1	BAR, wrench	
8	~~92108-007~~	1	ADJUSTER, rear shock absorber	**NLA**
9	~~92128-001~~	1	GAUGE, thickness, 0.35mm	**NLA**
10	92112-003	1	PLIERS, 150mm	
11	92107-006	1	SCREW DRIVER, #2 phillips	
12	92107-007	1	SCREW DRIVER, #3 slot	
13	92106-004	1	GRIP, screw driver	
14	92107-008	1	SCREW DRIVER, #3 phillips	
15	92111-006	1	HANDLE, screw driver	
16	92110-1050	1	WRENCH, spark plug	
17	92111-005	1	BAR, spark plug wrench	
18	92104-002	1	LIQUID GASKET, 100g Tube	
19	~~56019-1083-M~~	1	PAINT, Diamond Dark Green 1/12L	**NLA**
19	~~56019-1083-N~~	1	PAINT, Diamond Brown 1/12L	**NLA**

37. Special Service Tools

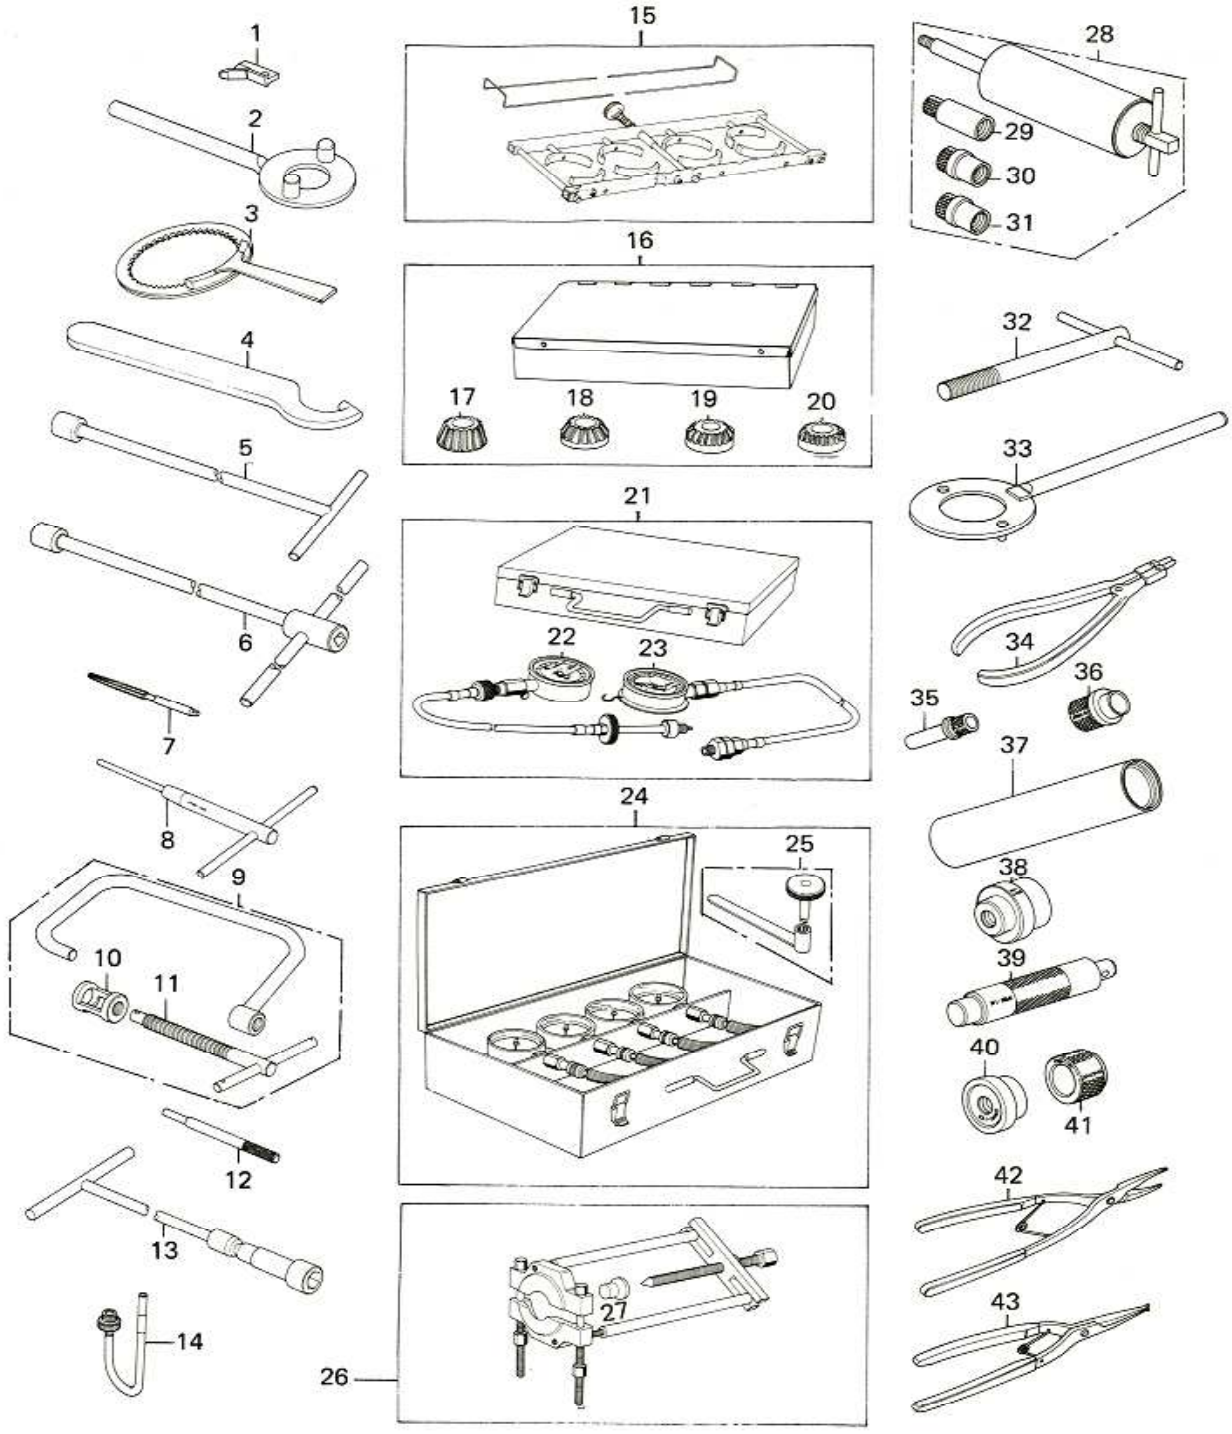

37. Special Service Tools

No.	Part No.	Q'TY	PART NAME	
1	57001-113	1	HOLDER, tappet	
2	~~57001-118~~	1	HOLDER, engine sprocket	**NLA**
3	57001-1243	1	HOLDER, clutch hub	
4	57001-134	1	WRENCH, stem nut	
5	~~57001-142~~	1	SOCKET, front fork piston	**NLA**
6	~~57001-111~~	1	WRENCH, cylinder head bolt	**NLA**
7	57001-105	1	REAMER, valve guide	
8	57001-106	1	HOLDER, valve seat cutter	
9	~~57001-145~~	1	COMPRESSOR, valve spring	**NLA**
10	57001-243	1	ADAPTER, valve spring compressor	
11	~~57001-244~~	1	BOLT, valve spring compressor	**NLA**
12	57001-108	1	ARBOR, valve guide	
13	57001-110	1	WRENCH, spark plug	
14	57001-122	1	GAUGE, float level	
15	~~57001-112~~	1	COMPRESSOR SET, piston ring	**NLA**
16	~~57001-128~~	1	CUTTER SET, valve seat	**NLA**
17	~~57001-101~~	1	CUTTER, valve seat, 30°	**NLA**
18	~~57001-102~~	1	CUTTER, valve seat, 45°	**NLA**
19	~~57001-103~~	1	CUTTER, valve seat, 60°	**NLA**
20	~~57001-104~~	1	CUTTER, valve seat, 60°	**NLA**
21	~~57001-129~~	1	GAUGE SET, oil & compression	**NLA**
22	57001-123	1	GAUGE, compression	
23	57001-125	1	GAUGE, oil pressure	
24	~~57001-127~~	1	GAUGE, vacuum	**NLA**
25	57001-120	1	ADJUSTER, throttle valve	
26	57001-135	1	PULLER, stem bearing	
27	~~57001-136~~	1	ADAPTER, stem bearing	**NLA**
28	57001-910	1	PULLER, piston pin	
29	~~57001-912~~	1	ADAPTER A, piston pin puller	**NLA**
30	57001-913	1	ADAPTER B, piston pin puller	
31	57001-914	1	ADAPTER C, piston pin puller	
32	57001-1099	1	PULLER, dynamo rotor	
33	~~57001-152~~	1	HOLDER, dynamo rotor	**NLA**
34	57001-115	1	PLIERS, piston ring	
35	~~57001-130~~	1	GUIDE, change shaft oil seal	**NLA**
36	57001-131	1	GUIDE, kickshaft oil seal	
37	57001-137	1	DRIVER, stem bearing	
38	57001-138	1	DRIVER, stem cup	
39	~~57001-139~~	1	HOLDER, bearing driver	**NLA**
40	57001-140	1	DRIVER, wheel bearing	
41	57001-141	1	DRIVER, fork oil seal	
42	57001-143	1	PLIERS, circlip, inside	
43	57001-144	1	PLIERS, circlip, outside	

No.	Part No.	Picture
10	~~11002-0162-H~~	1.
21	11004-066	1.
3	~~11005-1362-H~~	3.
5	11009-030	3.
13	11011-054	14.
17	11012-063	14.
11	~~11012-070~~	14.
12	11013-054	14.
3	11015-050	14.
4	11015-051	14.
5	11015-053	14.
15	~~11016-008~~	14.
3	~~11022-0052-H~~	1.
4	11023-006	1.
8	~~11040-001~~	14.
10	~~11040-002~~	14.
9	~~11040-003~~	14.
30	110B0-612	15.
18	110B0-612	30.
32	110B0-614	17.
12	110B0-614	30.
29	110B0-616	15.
5	110B0-616	30.
24	110B0-618	7.
20	110B0-620	4.
30	110B0-620	17.
39	110B0-620	19.
9	110B0-622	20.
32	110B0-622	34.
15	~~110B0-624~~	17.
37	110B0-625	34.
20	~~110B0-632~~	21.
9	110B0-656	16.
2	110B0-816	21.
31	110B0-816	33.
14	110B0-816	35.
44	110B0-818	17.
32	~~110B0-863~~	33.
5	110G0-6125	11.
1	110G0-635	4.
8	110G0-671	11.
39	110G0-836	17.
33	110G0-840	17.
26	110G0-840	18.
50	110G0-859	17.

No.	Part No.	Picture
51	110G0-863	17.
1	110N0-610	16.
21	~~110N0-618~~	30.
3	110N0-620	9.
22	110N0-625	25.
10	110N0-630	34.
32	110N0-645	25.
42	~~113B1-256A~~	17.
47	~~113B1-271A~~	17.
24	113N1-035	18.
8	~~114B1-025~~	10.
20	114G0-840	16.
16	116B0-614	10.
21	116B0-616	17.
26	116B0-616	21.
6	116B0-625	21.
27	116B0-825	24.
15	12004-012	2.
14	12005-005	2.
19	12006-010	1.
20	12006-011	1.
11	12007-011	2.
10	12007-012	2.
9	12009-005	2.
13	12010-004	2.
8	12011-002	2.
7	12032-005	2.
6	12037-001	2.
6	12037-002	2.
6	12037-003	2.
6	12037-004	2.
6	12037-005	2.
6	12037-006	2.
6	12037-007	2.
6	12037-008	2.
6	12037-009	2.
6	12037-010	2.
6	12037-011	2.
6	12037-012	2.
6	12037-013	2.
6	12037-014	2.
6	12037-015	2.
6	12037-016	2.
6	12037-017	2.
6	12037-018	2.

Next >>

No.	Part No.	Picture
6	12037-019	2.
6	12037-020	2.
6	12037-021	2.
6	12037-022	2.
6	12037-023	2.
6	12037-024	2.
6	12037-025	2.
4	~~12044-004~~	2.
1	12044-005	2.
5	~~12046-001~~	2.
2	~~12046-002~~	2.
18	12047-003	4.
15	12048-001	4.
13	12052-003	4.
11	12053-019	4.
16	~~12054-001~~	4.
14	12055-002	4.
17	12056-001	4.
3	12057-001	4.
8	12057-002	4.
9	12057-005	4.
33	120Q0-635	16.
9	~~13001-054~~	3.
18	~~13002-007~~	16.
10	13002-022	3.
8	13008-038	3.
8	13024-046	3.
8	13025-046	3.
9	~~13027-056~~	3.
9	13029-058	3.
12	~~13031-043~~	3.
14	13034-030	1.
2	~~13058-044~~	10.
7	~~13061-017~~	10.
1	13063-004	10.
11	~~13066-029~~	10.
15	13068-028	10.
10	~~13070-005~~	10.
18	13072-012	10.
19	13078-006	10.
14	~~13081-045~~	7.
16	~~13087-031~~	7.
17	13088-030	7.
18	13089-022	7.
23	13091-011	7.

No.	Part No.	Picture
15	~~13095-036~~	7.
7	~~13102-013~~	7.
10	13116-021	7.
20	13116-022	7.
3	~~13118-007~~	7.
12	~~13127-042~~	8.
48	~~13128-037~~	8.
51	~~13129-046~~	8.
6	~~13130-032~~	8.
42	13131-038	8.
10	~~13132-030~~	8.
46	13133-031	8.
11	13134-016	8.
50	~~13135-020~~	8.
7	~~13136-042~~	8.
45	13137-025	8.
28	13140-045	8.
23	~~13140-046~~	8.
20	13142-013	8.
36	13144-062	8.
16	13151-022	8.
2	13157-004	9.
8	13161-029	9.
6	~~13168-024~~	9.
21	13187-006	7.
29	13194-003	16.
27	~~13209-011~~	8.
9	13223-006	1.
17	~~13239-010~~	8.
1	13242-006	9.
19	14001-0522-J	5.
21	14013-001	5.
19	14024-007	11.
14	~~14024-008~~	11.
9	~~14026-012~~	11.
12	~~14026-026~~	11.
25	14027-015	11.
3	14031-053	11.
32	~~14032-0752-H~~	11.
27	~~14032-082~~	11.
23	14032-083	11.
4	14045-014	11.
10	~~14045-015~~	11.
21	14046-023	11.
26	14046-024	11.

No.	Part No.	Picture
31	14046-025	11.
24	14050-006	11.
20	14058-004	11.
14	14068-007	5.
10	~~14070-003~~	5.
1	~~16001-255~~	12.
2	~~16001-268~~	12.
3	~~16001-269~~	12.
4	~~16001-270~~	12.
5	~~16001-271~~	12.
23	16003-013	12.
21	~~16005-027~~	12.
14	~~16007-018~~	12.
15	16008-004	12.
16	16009-071	12.
38	16012-015	12.
40	16013-008	12.
32	16014-017	12.
41	~~16016-017~~	12.
45	16017-093	12.
50	16019-030	12.
22	16019-031	12.
69	~~16021-020~~	12.
77	~~16021-028~~	12.
34	16022-007	12.
76	~~16022-009~~	12.
68	16022-010	12.
17	~~16025-075~~	12.
42	16029-004	12.
43	16030-027	12.
48	16031-031	12.
49	16032-003	12.
20	16033-009	12.
19	16033-013	12.
12	16033-015	12.
62	~~16033-016~~	12.
71	~~16033-016~~	12.
81	~~16033-029~~	12.
52	16038-016	12.
33	16038-022	12.
37	16039-015	12.
56	~~16039-019~~	12.
55	~~16039-020~~	12.
18	~~16039-042~~	12.
8	~~16040-004~~	12.

No.	Part No.	Picture
54	16040-009	12.
72	~~16040-020~~	12.
26	~~16040-021~~	12.
66	16040-022	12.
57	~~16041-016~~	12.
61	16041-017	12.
7	~~16042-009~~	12.
80	16046-002	12.
53	~~16046-005~~	12.
58	16046-007	12.
24	~~16046-009~~	12.
46	~~16047-004~~	12.
51	~~16049-005~~	12.
11	16052-003	12.
10	16054-003	12.
29	~~16054-008~~	12.
64	~~16055-012~~	12.
6	16057-002	12.
27	16065-028	1.
25	16065-029	1.
67	~~16065-039~~	12.
60	16065-040	12.
27	16067-006	12.
9	~~16067-008~~	12.
25	~~16067-009~~	12.
73	~~16068-011~~	12.
31	~~16068-012~~	12.
30	~~16068-013~~	12.
59	16068-014	12.
36	16073-014	12.
35	16076-003	12.
70	~~16077-012~~	12.
74	~~16077-013~~	12.
65	~~16077-014~~	12.
25	~~16082-059~~	13.
23	16085-019	13.
5	16099-002	13.
2	~~16109-003~~	5.
10	~~16110-003~~	13.
30	16111-004	13.
9	16112-002	13.
16	16115-013	5.
5	16144-004	5.
28	16145-002	13.
14	~~16146-001~~	13.

Next >>

No.	Part No.	Picture
37	172G0-835	27.
32	18001-203	14.
27	18001-204	14.
25	18001-205	14.
24	18001-206	14.
23	18067-018	14.
21	18069-045	14.
26	18069-046	14.
22	21007-032	16.
10	21008-027	15.
7	21008-028	15.
11	21013-035	15.
17	~~21015-005~~	16.
10	21017-017	16.
9	~~21019-018~~	15.
13	~~21021-004~~	15.
12	21027-003	16.
15	21027-004	16.
12	~~21029-037~~	15.
13	21039-003	16.
14	21040-003	16.
25	~~21061-024~~	15.
31	21066-024	35.
24	21066-025	15.
32	21066-026	35.
6	21070-003	4.
31	21076-023	16.
20	21121-081	15.
21	~~21121-082~~	15.
2	21126-007	1.
5	21126-007	6.
16	21126-007	15.
22	21130-023*	15.
3	21135-011	15.
15	21148-010	15.
8	~~21156-010~~	15.
8	~~21163-004~~	16.
23	21164-001	15.
3	~~21165-001~~	16.
4	21166-001	16.
19	21167-002	16.
6	21167-003	16.
18	220B0-305A	20.
15	220B0-308	32.
4	220B0-408	15.

No.	Part No.	Picture
36	220B0-408	27.
6	220B0-416	14.
31	220B0-508	13.
17	220B0-512	15.
21	220B0-520	20.
24	220B0-525	1.
22	220B0-530	20.
1	220B0-535	14.
16	~~220B0-550A~~	14.
10	220B0-610	4.
5	220B0-612	1.
13	220B0-612	11.
2	220B0-612	26.
18	220B0-614	8.
5	220B0-616	7.
7	220B0-616	11.
29	220B0-616	14.
11	220B0-616	17.
33	220B0-616	21.
22	220B0-618	1.
12	~~220B0-618~~	5.
26	220B0-618	13.
28	220B0-620	35.
16	220B0-622	11.
28	220B0-625	11.
15	220B0-628	11.
27	220B0-628	13.
1	220B0-630	11.
2	220B0-640	11.
5	220E0-435A	34.
22	~~220E0-460A~~	34.
16	221B0-308A	20.
14	~~23004-058~~	33.
10	~~23005-0372-1~~	33.
16	~~23006-045~~	33.
21	~~23007-062~~	33.
24	~~23008-042~~	33.
27	23008-044	33.
17	~~23009-016~~	33.
15	~~23013-004~~	33.
4	23019-022	33.
19	23019-028	33.
21	~~23024-078~~	34.
23	~~23026-035~~	34.
26	~~23027-042~~	34.

No.	Part No.	Picture
24	23028-021	34.
27	~~23036-048~~	34.
1	23040-047	34.
20	~~23040-048~~	34.
7	23048-012	34.
14	23048-015	34.
9	23050-002	34.
6	23058-002	34.
13	23066-015	33.
12	23066-016	33.
29	23066-020	34.
28	23066-023	34.
18	23072-004	33.
11	23076-005	33.
2	23078-001	34.
25	~~23084-001~~	33.
26	~~23085-001~~	33.
1	25006-056	32.
5	25008-045	32.
11	~~25011-049~~	32.
13	25012-010	32.
17	25012-011	32.
2	~~25016-028~~	32.
4	25023-015	32.
16	25024-006	32.
8	~~26001-135~~	35.
9	~~26002-031~~	35.
7	~~26002-057~~	35.
1	26004-035	35.
4	26006-003	35.
3	26006-005	35.
6	~~26010-042~~	35.
5	~~26010-043~~	35.
11	~~26010-048~~	16.
18	26011-095	34.
27	~~26012-042~~	35.
34	26019-005	33.
17	27002-011	35.
18	27002-016	35.
16	~~27003-065~~	35.
22	~~27005-086~~	32.
3	~~27007-004~~	32.
43	~~27008-0695-1~~	27.
1	~~27008-0695-1~~	28.
16	~~27008-0695-1~~	30.
23	~~27008-0695-1~~	32.
43	~~27008-0695-2~~	27.
1	~~27008-0695-2~~	28.
16	~~27008-0695-2~~	30.
23	~~27008-0695-2~~	32.
43	~~27008-0695-3~~	27.
1	~~27008-0695-3~~	28.
16	~~27008-0695-3~~	30.
23	~~27008-0695-3~~	32.
43	~~27008-0695-4~~	27.
1	~~27008-0695-4~~	28.
16	~~27008-0695-4~~	30.
23	~~27008-0695-4~~	32.
43	~~27008-0695-5~~	27.
1	~~27008-0695-5~~	28.
16	~~27008-0695-5~~	30.
23	~~27008-0695-5~~	32.
10	~~27010-017~~	35.
11	27011-009	35.
13	27012-010	35.
23	~~27014-008~~	35.
42	~~27016-048~~	27.
24	~~27019-003~~	32.
29	~~27023-005~~	33.
15	27030-005	30.
28	~~27040-002~~	33.
36	28012-015	21.
35	28013-010	21.
25	~~28019-001~~	35.
38	310B0-500	21.
32	310B0-600	15.
40	310B0-600	19.
40	310B0-600	21.
9	310B0-600	30.
13	310B0-600	34.
18	310B0-800	32.
21	311B0-600	4.
53	311B0-800	17.
15	311B0-800	25.
10	312B0-500	32.
13	312B0-600	25.
10	312B0-800	9.
20	313B1-000	18.
1	315B0-800	7.
30	315B1-000	18.

Next >>

No.	Part No.	Picture
13	315B1-000	19.
20	315B1-000	19.
4	315B1-000	26.
4	315B1-000	34.
21	315B1-200	19.
3	~~32002-149~~	17.
52	~~32030-025~~	17.
45	~~32030-026~~	17.
41	32030-055	17.
40	~~32030-056~~	17.
24	32060-014	35.
22	~~32060-019~~	35.
19	~~32097-039~~	17.
31	~~32098-024~~	17.
26	~~32099-015~~	35.
4	~~32099-018~~	21.
13	~~32100-020~~	17.
20	~~32105-006~~	17.
22	~~32113-003~~	17.
33	~~32122-034~~	33.
26	~~32129-006~~	17.
36	321B0-800	33.
6	~~33001-046~~	18.
18	~~33028-011~~	19.
16	33032-036	18.
5	33033-009	18.
4	33034-009	18.
2	33035-007	18.
15	33036-005	18.
29	33040-066	18.
28	33044-001	18.
11	~~33122-010~~	21.
4	~~34003-036~~	19.
41	~~34003-037~~	19.
23	~~34011-029~~	19.
22	~~34019-014~~	19.
26	34023-012	19.
12	~~34024-060~~	19.
10	34025-005	19.
1	~~34028-011~~	19.
42	~~34028-012~~	19.
1	35003-015	21.
19	~~35022-071~~	21.
31	~~35022-123~~	21.
29	~~35026-006~~	21.

No.	Part No.	Picture
33	35039-004	34.
2	~~36001-0543-M~~	29.
2	~~36001-0543-N~~	29.
5	~~36007-0302-R~~	29.
5	~~36007-0302-S~~	29.
19	36014-061	30.
4	41023-015	22.
9	41023-017	22.
10	~~41024-008~~	22.
11	41025-049	22.
5	41025-085	22.
18	41027-057	22.
16	41027-085	22.
19	41028-057	22.
10	41034-040	23.
15	~~41039-028~~	23.
13	~~41042-014~~	23.
18	41042-015	23.
23	~~41045-006~~	24.
21	~~41048-016~~	24.
22	41049-007	24.
24	41050-017	24.
25	41051-003	24.
17	41057-084	22.
7	41059-026	23.
5	41060-017	23.
6	41062-005	23.
4	41063-001	23.
9	41064-013	23.
20	~~41068-049~~	23.
19	~~41069-032~~	23.
1	41069-033	23.
1	~~41074-047~~	22.
13	41075-001	22.
14	41075-002	22.
15	41075-003	22.
12	41075-004	22.
2	41078-008	23.
21	~~41080-007~~	26.
3	41082-001	23.
26	41085-004	24.
7	410B0-400	14.
6	410B0-400	15.
19	410B0-600	4.
6	410B0-600	6.

<< Back

No.	Part No.	Picture
6	410B0-600	11.
31	410B0-600	15.
8	410B0-600	20.
24	410B0-800	17.
8	410B0-800	27.
20	410B1-000	26.
10	410B1-200	18.
2	410D0-600	16.
19	411B0-500	15.
4	411B0-600	7.
28	411B0-600	21.
34	411B0-600	21.
21	411B0-600	25.
30	411B0-600	25.
3	411B0-600	30.
11	411B0-600	34.
30	411B0-600	35.
20	411B0-800	32.
18	411B1-000	18.
27	416F0-600	21.
27	416F0-800	18.
14	~~42005-030~~	24.
19	42006-062	24.
6	~~42008-013~~	24.
17	~~42010-021~~	24.
15	42014-021	24.
28	~~42029-033~~	24.
30	42031-034	24.
29	~~42032-037~~	24.
12	~~42036-015~~	24.
9	~~42037-023~~	24.
4	~~42041-161~~	24.
7	42045-005	24.
2	42045-018	24.
6	~~42048-023~~	22.
28	~~43001-044~~	19.
27	43005-021	19.
22	~~43007-032~~	18.
32	~~43011-017~~	19.
33	43012-002	19.
1	43015-025	25.
10	~~43017-002~~	25.
9	43018-002	25.
8	43019-002	25.
6	~~43022-001~~	25.

No.	Part No.	Picture
4	~~43024-001~~	25.
3	~~43025-001~~	25.
17	43026-003	25.
18	43027-001	25.
19	43028-003	25.
11	43029-003	25.
16	~~43030-003~~	25.
14	43031-001	25.
12	~~43033-004~~	25.
20	~~43034-001~~	25.
6	43040-004	26.
1	~~43041-018~~	26.
22	~~43041-019~~	26.
5	~~43042-008~~	26.
11	~~43044-008~~	26.
23	~~43044-009~~	26.
17	43045-006	26.
14	~~43048-006~~	26.
15	43049-002	26.
12	43050-006	26.
7	43051-007	26.
9	43052-005	26.
10	43053-006	26.
13	43054-003	26.
24	43059-007	25.
33	43059-011	25.
34	43060-023	25.
37	~~43060-024~~	25.
35	43063-001	25.
38	43063-003	25.
36	43064-001	25.
28	43065-001	25.
25	43066-001	25.
23	43067-001	25.
26	43069-001	25.
7	~~43072-002~~	25.
2	43073-005	25.
29	~~43075-002~~	25.
16	43085-001	26.
8	43088-002	26.
1	~~44001-175~~	27.
33	~~44005-063~~	27.
34	44006-061	27.
32	44009-024	27.
29	44010-032	27.

No.	Part No.	Picture
25	44013-037	27.
27	~~44018-009~~	27.
26	~~44022-027~~	27.
24	~~44026-071~~	27.
17	~~44028-039~~	27.
18	~~44029-019~~	27.
19	~~44033-072~~	27.
20	~~44034-072~~	27.
14	~~44037-098~~	27.
6	44039-073	27.
40	44041-040	27.
7	~~44041-042~~	27.
4	~~44041-045~~	27.
31	44043-044	27.
30	44044-015	27.
28	~~44044-019~~	27.
35	44045-002	27.
39	44045-034	27.
23	44045-038	27.
3	~~44046-015~~	27.
2	~~44062-003~~	27.
38	~~44063-014~~	27.
10	44064-005	27.
22	~~44064-008~~	27.
21	~~44064-025~~	27.
11	45014-107	18.
13	45016-003	18.
14	45017-011	18.
12	45017-018	18.
13	46003-029	20.
12	46012-008	20.
24	46018-038	20.
28	46028-003	20.
20	~~46028-006~~	20.
26	46031-005	20.
25	~~46043-004~~	20.
19	~~46043-005~~	20.
17	46043-013	20.
5	46055-003	20.
4	46056-005	20.
14	46075-028	20.
1	46076-049	20.
27	46079-003	20.
15	46091-034	20.
2	46092-022	20.

No.	Part No.	Picture
6	46094-017	20.
6	46098-010	17.
8	46100-003	17.
23	46132-024	20.
14	461F0-300	32.
13	461F0-400	12.
5	461F0-400	15.
28	461F0-500	12.
63	461F0-500	12.
18	461F0-500	15.
37	461F0-500	21.
9	461F0-500	32.
20	461F0-500	33.
28	461F0-600	15.
16	461F0-600	16.
12	461F0-600	17.
7	461F0-600	21.
39	461F0-600	21.
31	461F0-600	25.
3	461F0-600	26.
4	461F0-600	30.
17	461F0-600	30.
12	461F0-600	34.
36	461F0-600	34.
29	461F0-600	35.
34	461F0-800	17.
37	461F0-800	19.
11	461F0-800	20.
3	461F0-800	21.
5	461F0-800	27.
19	461F0-800	32.
30	461F0-800	33.
35	461F0-800	33.
15	461F0-800	35.
36	461F1-000	17.
19	461F1-000	18.
25	461F1-000	18.
19	461F1-000	26.
19	461F1-000	34.
43	461F1-200	17.
9	461F1-200	18.
15	461F1-200	27.
19	464G0-600	8.
75	~~464H0-500~~	12.
26	480J1-200	8.

<< Back

No.	Part No.	Picture
22	480J1-900	10.
9	480J2-800	8.
44	480J3-000	8.
5	481J1-800	25.
16	481J4-000	23.
3	482J0-100	10.
21	482K7-000	13.
10	~~51001-1073-M~~	28.
10	~~51001-1073-N~~	28.
12	51023-055	28.
14	51035-009	28.
15	51037-010	28.
2	51048-012	28.
5	51059-008	28.
29	52015-004	11.
1	53001-083	30.
7	~~53009-017~~	30.
2	~~53009-037~~	30.
13	53011-008	30.
18	~~53043-0133-M~~	21.
18	~~53043-0133-N~~	21.
11	53056-002	30.
10	~~53058-003~~	30.
5	54001-040	31.
5	54001-1005	31.
3	54011-048	31.
2	54012-081	31.
1	~~54012-087~~	31.
4	54018-015	31.
12	550D1-610	35.
6	550D1-615	7.
17	550D2-012	19.
5	550D2-516	19.
20	550D3-025	24.
1	550D4-035	24.
22	551A0-314	13.
14	551A0-408	15.
23	~~551A0-622~~	16.
2	552A1-014	3.
18	552A1-014	5.
29	56002-027	20.
1	~~56007-049~~	36.
2	56008-006	36.
17	56013-057	28.
6	56014-064	28.

No.	Part No.	Picture
1	56018-238	29.
19	~~56019-1083-M~~	36.
19	~~56019-1083-N~~	36.
14	56027-411	21.
15	56027-412	21.
16	56027-419	21.
17	56027-420	21.
17	~~57001-101~~	37.
18	~~57001-102~~	37.
19	~~57001-103~~	37.
20	~~57001-104~~	37.
7	57001-105	37.
8	57001-106	37.
12	57001-108	37.
32	57001-1099	37.
13	57001-110	37.
6	~~57001-111~~	37.
15	~~57001-112~~	37.
1	57001-113	37.
34	57001-115	37.
2	~~57001-118~~	37.
25	57001-120	37.
14	57001-122	37.
22	57001-123	37.
3	57001-1243	37.
23	57001-125	37.
24	~~57001-127~~	37.
16	~~57001-128~~	37.
21	~~57001-129~~	37.
35	~~57001-130~~	37.
36	57001-131	37.
4	57001-134	37.
26	57001-135	37.
27	~~57001-136~~	37.
37	57001-137	37.
38	57001-138	37.
39	~~57001-139~~	37.
40	57001-140	37.
41	57001-141	37.
5	~~57001-142~~	37.
42	57001-143	37.
43	57001-144	37.
9	~~57001-145~~	37.
33	~~57001-152~~	37.
10	57001-243	37.

No.	Part No.	Picture
11	~~57001-244~~	37.
28	57001-910	37.
29	~~57001-912~~	37.
30	57001-913	37.
31	57001-914	37.
49	600A0-600	8.
5	600A0-800	10.
1	600A0-800	17.
19	600A1-200	7.
4	600A1-200	13.
14	601B6-203	23.
11	601B6-206	24.
16	601B6-304	24.
18	~~601B6-304Z~~	24.
15	~~610A0-614~~	5.
17	~~654A2-5400-8~~	23.
8	654A3-0420-8	23.
16	670B0-214	28.
8	670B1-507	7.
15	670B1-508	13.
39	670B1-509	12.
8	670B1-510	1.
4	670B2-015	5.
9	670B2-016	5.
3	670B2-018	5.
18	670B2-022	13.
13	671B2-5105	13.
3	671B2-530	18.
5	92001-012	9.
32	~~92001-112~~	8.
1	92001-113	15.
23	92001-115	17.
22	92001-115	30.
33	92001-119	8.
31	92001-143	18.
1	92001-153	5.
11	92001-158	23.
34	92001-163	13.
33	92001-164	13.
35	92001-165	13.
16	92003-064	27.
11	92003-079	19.
13	92003-087	24.
1	92003-092	1.
22	~~92003-093~~	4.

No.	Part No.	Picture
1	92003-095	13.
8	~~92003-098~~	5.
49	92003-099	17.
17	~~92003-103~~	18.
30	92003-104	16.
10	92003-106	6.
23	92003-107	5.
11	92003-107	6.
12	92003-108	6.
4	92003-109	6.
7	~~92003-110~~	6.
8	~~92003-111~~	6.
13	92003-112	6.
9	~~92003-113~~	6.
14	~~92003-114~~	6.
3	92003-141	2.
23	~~92003-147~~	18.
12	~~92003-159~~	13.
11	92003-178	13.
20	92003-179	13.
34	92003-180	14.
17	92003-193	13.
3	92004-045	6.
1	92004-046	6.
2	92004-047	6.
8	~~92004-048~~	19.
12	92004-049	1.
7	92005-002	18.
10	92007-002	20.
10	92007-031	17.
18	92007-032	26.
3	92007-047	20.
18	92012-003	28.
44	~~92014-012~~	27.
2	~~92014-014~~	7.
35	92015-056	19.
16	92015-076	1.
34	92016-028	8.
25	92016-044	19.
46	92016-045	17.
20	92017-014	14.
26	92017-014	15.
29	92017-014	19.
7	92017-014	20.
3	92018-005	29.

No.	Part No.	Picture
6	92019-013	19.
38	92019-013	19.
15	92019-015	8.
28	92019-021	14.
35	92019-021	17.
1	92019-022	18.
41	92019-022	27.
9	92020-007	27.
8	92020-014	18.
7	92022-044	28.
24	92022-080	13.
4	92022-085	10.
27	92022-125	15.
16	92022-125	17.
20	92022-125	30.
31	92022-125	34.
36	92022-195	19.
23	92022-195	30.
16	92022-199	19.
14	~~92022-207~~	10.
47	~~92022-209~~	8.
41	~~92022-210~~	8.
5	92022-211	8.
4	92022-212	8.
5	92022-213	8.
17	92022-215	1.
21	~~92022-218~~	16.
6	92022-220	13.
25	92022-227	21.
8	92022-228	21.
21	92022-228	21.
9	92022-230	17.
12	92022-231	27.
17	92022-239	34.
8	92022-241	32.
2	92022-244	15.
3	92022-248	24.
3	92022-250	19.
17	~~92024-036~~	10.
8	92024-042	8.
43	92024-043	8.
35	92024-044	8.
29	~~92024-047~~	8.
2	~~92024-048~~	13.
11	92026-022	7.

No.	Part No.	Picture
25	~~92026-082~~	16.
5	~~92026-091~~	16.
24	92026-092	16.
5	~~92026-108~~	24.
18	92027-129	17.
30	92027-129	34.
16	92027-147	34.
38	92027-152	8.
2	92027-155	4.
35	92027-156	34.
38	~~92027-159~~	17.
37	92027-160	17.
9	92027-162	21.
23	92027-162	21.
28	92027-165	17.
22	92027-170	14.
6	92027-174	32.
30	92027-177	19.
1	92028-122	8.
52	92028-123	8.
13	~~92028-126~~	10.
12	~~92028-135~~	7.
25	92031-001	8.
2	92033-025	8.
12	92033-025	10.
11	92036-021	3.
18	92036-023	1.
27	~~92037-023~~	25.
19	92037-028	14.
2	92037-061	14.
78	92037-072	12.
6	~~92037-090~~	31.
8	92037-092	31.
9	92037-093	31.
31	92037-103	14.
7	~~92037-104~~	31.
14	~~92037-106~~	14.
82	92037-173	12.
84	92037-174	12.
13	92038-001	3.
14	92041-003	30.
21	92041-005	18.
13	92042-007	1.
20	92042-007	5.
21	92042-014	8.

No.	Part No.	Picture
22	92042-016	5.
22	92042-020	8.
4	92042-028	3.
32	92042-038	13.
24	92043-016	8.
9	~~92043-057~~	9.
34	92043-065	19.
19	92043-079	19.
2	92043-080	19.
30	~~92043-085~~	8.
28	92043-087	16.
31	92043-095	19.
37	92043-109	8.
4	92043-126	28.
3	92043-127	28.
40	92045-021	8.
13	92045-022	8.
13	92046-028	7.
3	92046-031	8.
32	~~92046-033~~	16.
5	92047-011	17.
11	92047-012	27.
4	92048-006	17.
2	92048-008	17.
30	92049-001	11.
11	92049-004	11.
12	92049-016	2.
17	92050-024	11.
10	92050-027	24.
22	92050-047	11.
18	92050-048	11.
6	92050-050	1.
39	92055-035	8.
15	92055-048	6.
29	92055-048	13.
17	92055-049	5.
11	92055-052	5.
8	92055-052	13.
7	92055-054	3.
6	92055-055	5.
1	92055-062	3.
13	92056-003	27.
31	~~92057-096~~	24.
79	92059-084	12.
13	~~92059-118~~	5.

No.	Part No.	Picture
30	92059-120	14.
18	92059-124	14.
83	92059-134	12.
85	~~92059-135~~	12.
47	92063-074	12.
47	92063-075	12.
47	~~92063-076~~	12.
47	92063-077	12.
47	92063-078	12.
44	92064-042	12.
13	92065-081	28.
15	92066-017	1.
7	92066-021	5.
16	92066-024	13.
19	92066-026	13.
26	92068-006	1.
12	92069-018	32.
25	92069-063	34.
23	92069-071	33.
8	~~92069-076~~	34.
22	~~92069-080~~	33.
11	92070-037	1.
32	92071-019	21.
4	92071-056	29.
19	92072-030	35.
21	92072-032	35.
11	92072-042	28.
20	92072-056	35.
9	92074-006	33.
13	92074-022	21.
5	~~92074-024~~	21.
6	92074-030	3.
24	92075-015	19.
27	92075-051	17.
17	92075-076	17.
14	92075-078	17.
21	92075-080	32.
9	92075-084	28.
8	92075-099	30.
4	92075-119	4.
5	92075-120	4.
22	92075-121	21.
34	92075-121	34.
12	92075-123	4.
8	92075-125	28.

No.	Part No.	Picture
3	92075-128	34.
30	~~92075-132~~	21.
24	92075-133	21.
6	92075-139	30.
9	92075-140	19.
29	92075-149	17.
14	92075-157	19.
15	92075-158	34.
25	92075-161	17.
7	92075-172	32.
10	92075-174	21.
12	92075-175	21.
7	92075-193	16.
7	92075-232	4.
2	92075-279	35.
15	92076-027	19.
6	92081-020	10.
4	92081-051	9.
9	92081-069	7.
20	92081-104	10.
22	92081-105	7.
31	92081-106	8.
23	~~92081-107~~	4.
7	92081-108	13.
3	92081-109	13.
27	92081-110	16.
9	~~92082-004~~	10.
7	92083-018	9.
11	92083-028	9.
7	~~92087-006~~	1.
8	92088-013	24.
12	92088-023	23.
7	92090-007	17.
54	92091-022	17.
48	92091-023	17.
33	92092-010	14.
21	~~92102-008~~	10.
7	92102-010	19.
18	92104-002	36.
13	92106-004	36.
11	92107-006	36.
12	92107-007	36.
14	92107-008	36.
8	~~92108-007~~	36.
16	92110-1050	36.

No.	Part No.	Picture
6	92110-1147	36.
5	92110-1153	36.
17	92111-005	36.
15	92111-006	36.
7	92111-1052	36.
10	92112-003	36.
26	92122-001	16.
23	92123-001	1.
14	~~92125-002~~	8.
3	92126-001	36.
4	~~92126-002~~	36.
9	~~92128-001~~	36.