YAMAHA

GENUINE


PARTS CATALOGUE

MOTORCYCLE

A1


YZ490L

CYLINDER

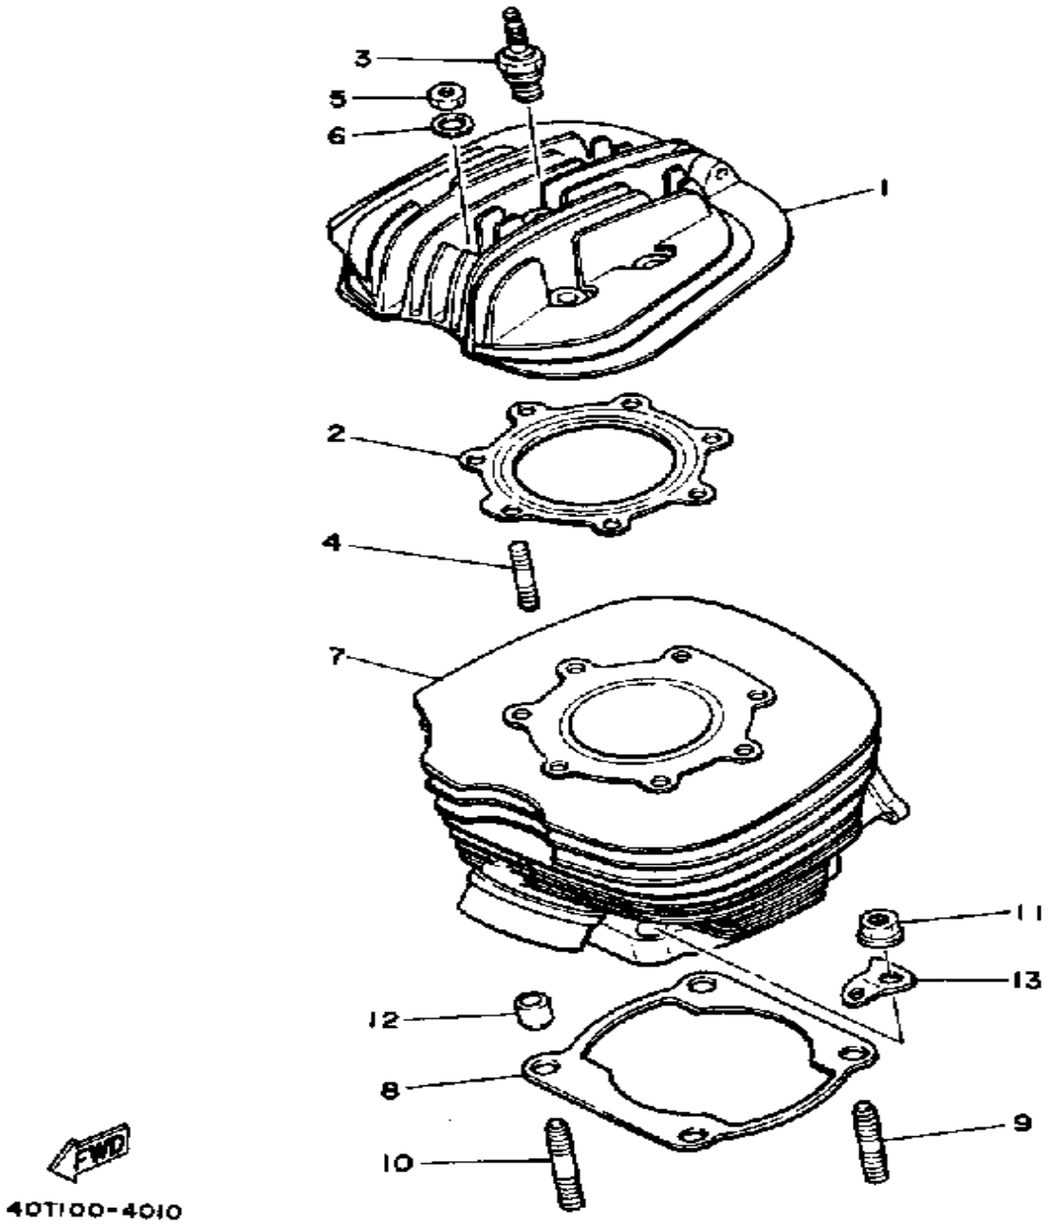

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-11111-00-00	HEAD, CYLINDER 1	1	
2	40T-11181-00-00	GASKET, CYLINDER HEAD 1	1	
3	NGK-B8EG0-00-00	PLUG, SPARK (NGK B8EG) (94702-00323-00)	1	U.R. LM
4	90116-08394-00	BOLT, STUD	7	
5	95333-08600-00	NUT	7	
6	90201-08649-00	WASHER, PLATE	7	
7	40T-11311-02-00	CYLINDER 1	1	
8	40T-11351-00-00	GASKET, CYLINDER	1	
9	90116-12315-00	BOLT, STUD	2	
10	90116-12316-00	BOLT, STUD	2	
11	95701-12500-00	NUT, FLANGE	4	
12	91810-17016-00	PIN, DOWEL	2	
13	40T-14619-01-00	HOOK, SPRING	1	

CRANK - PISTON

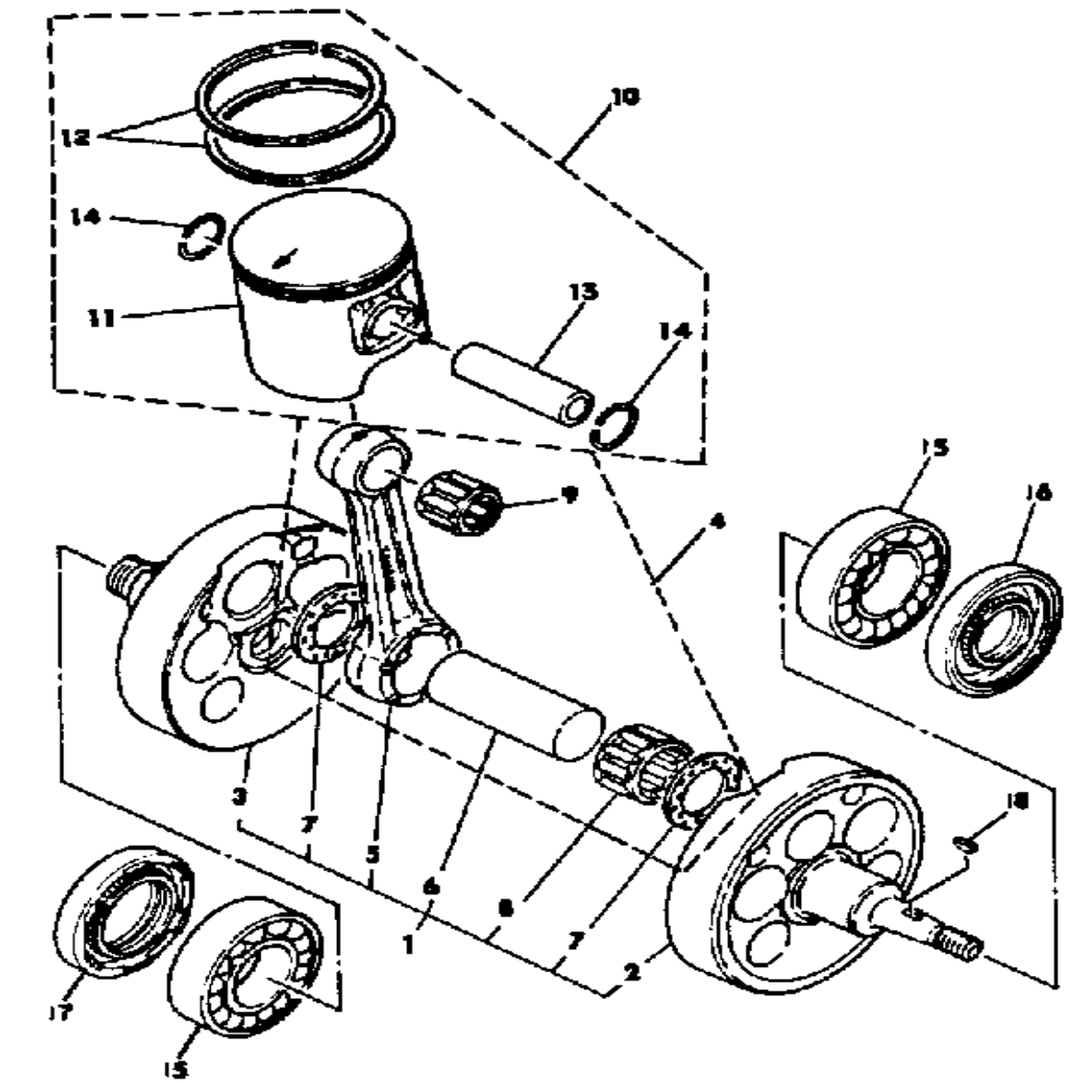


5X6100-2020

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-11400-00-00	CRANKSHAFT ASSEMBLY (3R5-11400-00) (3R5-11400-00)	1	
2	40T-11412-00-00	. CRANK 1	1	
4	3R5-11650-00-00	. CONNECTING ROD ASSEMBLY	1	
	40T-11422-00-00	. CRANK 2	1	
5	3R5-11651-00-00	. . ROD, CONNECTING	1	
6	3R8-11681-00-00	. . PIN, CRANK 1	1	
7	90209-25085-00	. . WASHER, (90209-25220)	2	
8	93310-425N4-00	. . BEARING, CYLINDRICAL	1	
9	93310-418E9-00	. BEARING, CYLINDRICAL	1	
10	40T-11630-00-00	PISTON KIT STD	1	
11	40T-11631-00-93	PISTON STD	1	
12	5X6-11601-00-00	PISTON RINGSET STD	1	
13	275-11633-00-00	PIN, PISTON	1	
14	93450-19052-00	CIRCLIP, INNER	2	
15	93306-30615-00	BEARING (B6306)	2	
16	93103-30150-00	OIL SEAL (38W)	1	
17	93103-40091-00	OIL SEAL	1	
18	40T-11630-10-00	PISTON KIT 1ST	1	ALTERNATE PARTS*
	40T-11630-20-00	PISTON KIT 2ND (2ND O/S)	1	ALTERNATE PARTS*
	40T-11630-30-00	PISTON KIT 3RD (3RD O/S)	1	ALTERNATE PARTS*
	40T-11630-40-00	PISTON KIT 4TH (4TH O/S)	1	ALTERNATE PARTS*
	40T-11635-00-00	PISTON 1 O/S 0.250.25MM)	1	ALTERNATE PARTS*
	40T-11636-00-00	PISTON 2 O/S 0.500.50MM)	1	ALTERNATE PARTS*
	40T-11637-00-00	PISTON 3 O/S 0.750.75MM)	1	ALTERNATE PARTS*
	40T-11638-00-00	PISTON 4 O/S 1.001.00MM)	1	ALTERNATE PARTS*
	5X6-11601-10-00	PISTON RING SET (1ST O/S)	1	ALTERNATE PARTS
	5X6-11601-20-00	PISTON RING SET (2ND O/S)	1	ALTERNATE PARTS

CONTINUED ON NEXT FRAME ➤


CRANK - PISTON

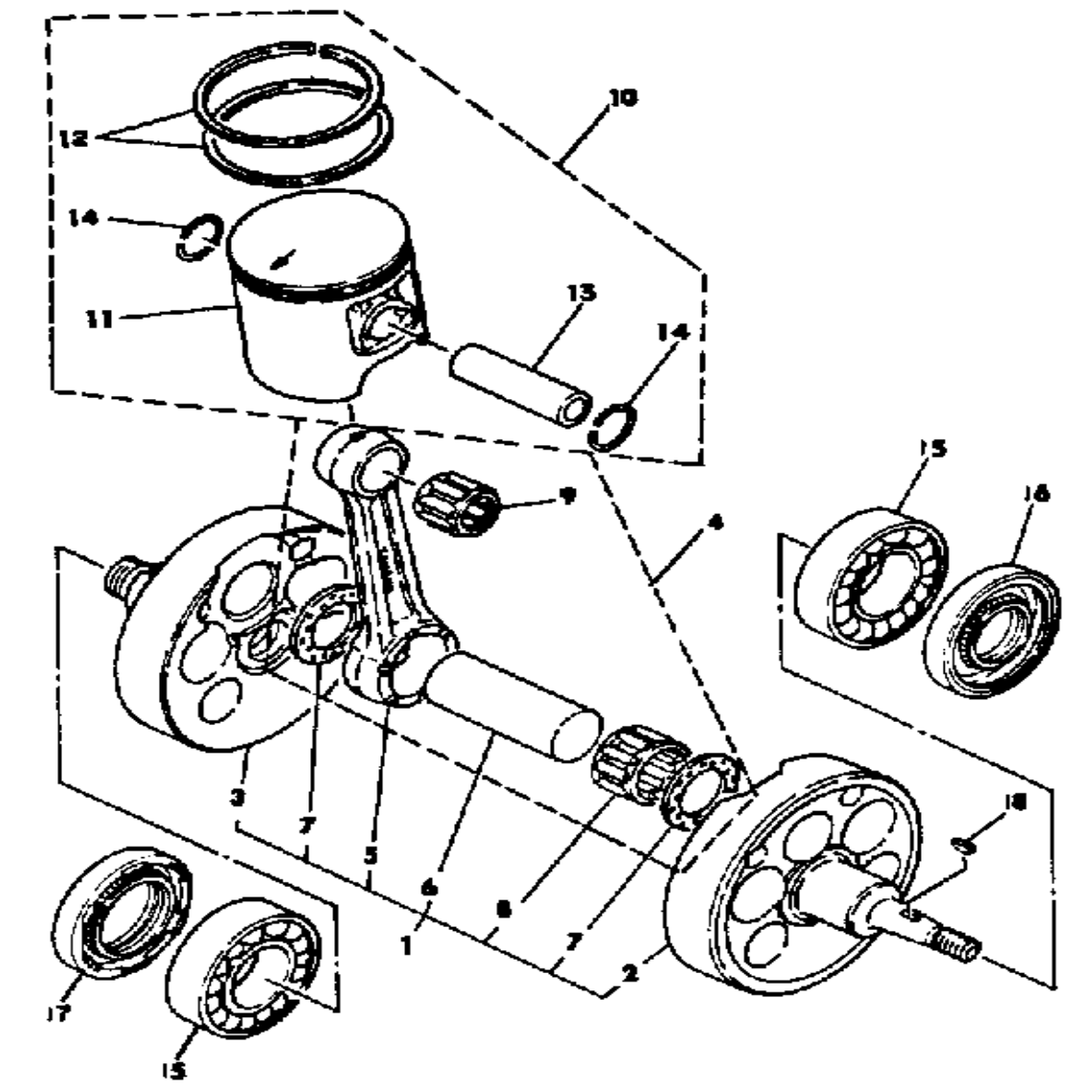

5X6100-2020

Ref. No.	Part Number	Description	Qty	Remarks
18	5X6-11601-30-00	PISTON RING SET (3RD O/S) .	1	ALTERNATE PARTS
	5X6-11601-40-00	PISTON RING SET (4TH O/S) . .	1	ALTERNATE PARTS
	90280-03017-00	KEY, WOODRUFF	1	


A - C - GENERATOR

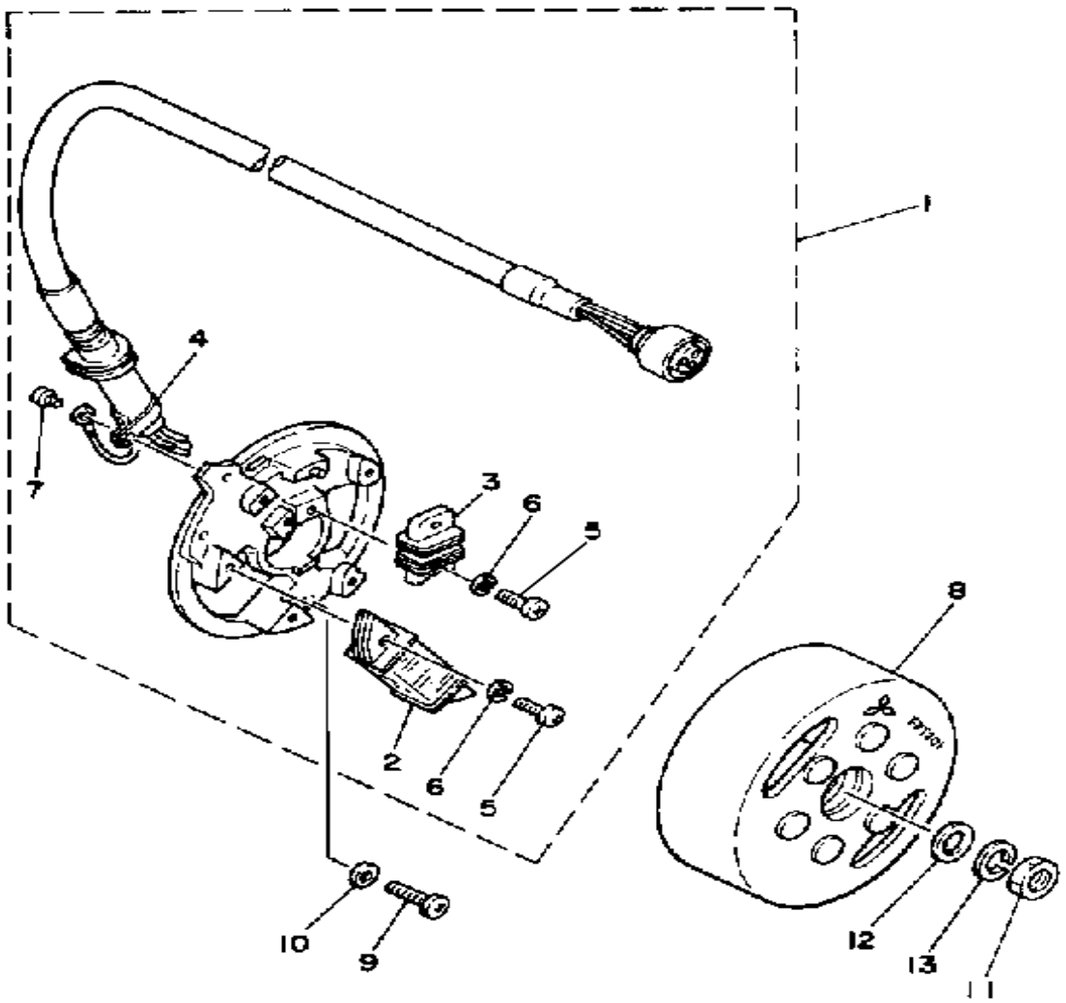

23X100-3030


Ref. No.	Part Number	Description	Qty	Remarks
1	23X-85510-21-00	STATOR ASSEMBLY	1	
2	23X-85520-21-00	. COIL, CHARGE	1	
3	23X-85580-20-00	. COIL, PULSER	1	
4	104-81328-20-00	. CLAMP	1	
5	98503-04014-00	. SCREW, PAN HEAD	3	
6	92901-04100-00	. WASHER, SPRING	3	
7	97601-04106-00	. SCREW, PN/HD.W/WSHR	1	
8	23X-85550-20-00	ROTOR ASSEMBLY	1	
9	98503-06014-00	SCREW, PAN HEAD (92501-06015)	2	
10	92901-06600-00	WASHER	2	
11	90170-12347-00	NUT, HEXAGON	1	
12	90201-12593-00	WASHER, PLATE	1	
13	92901-12100-00	WASHER, SPRING	1	

INTAKE

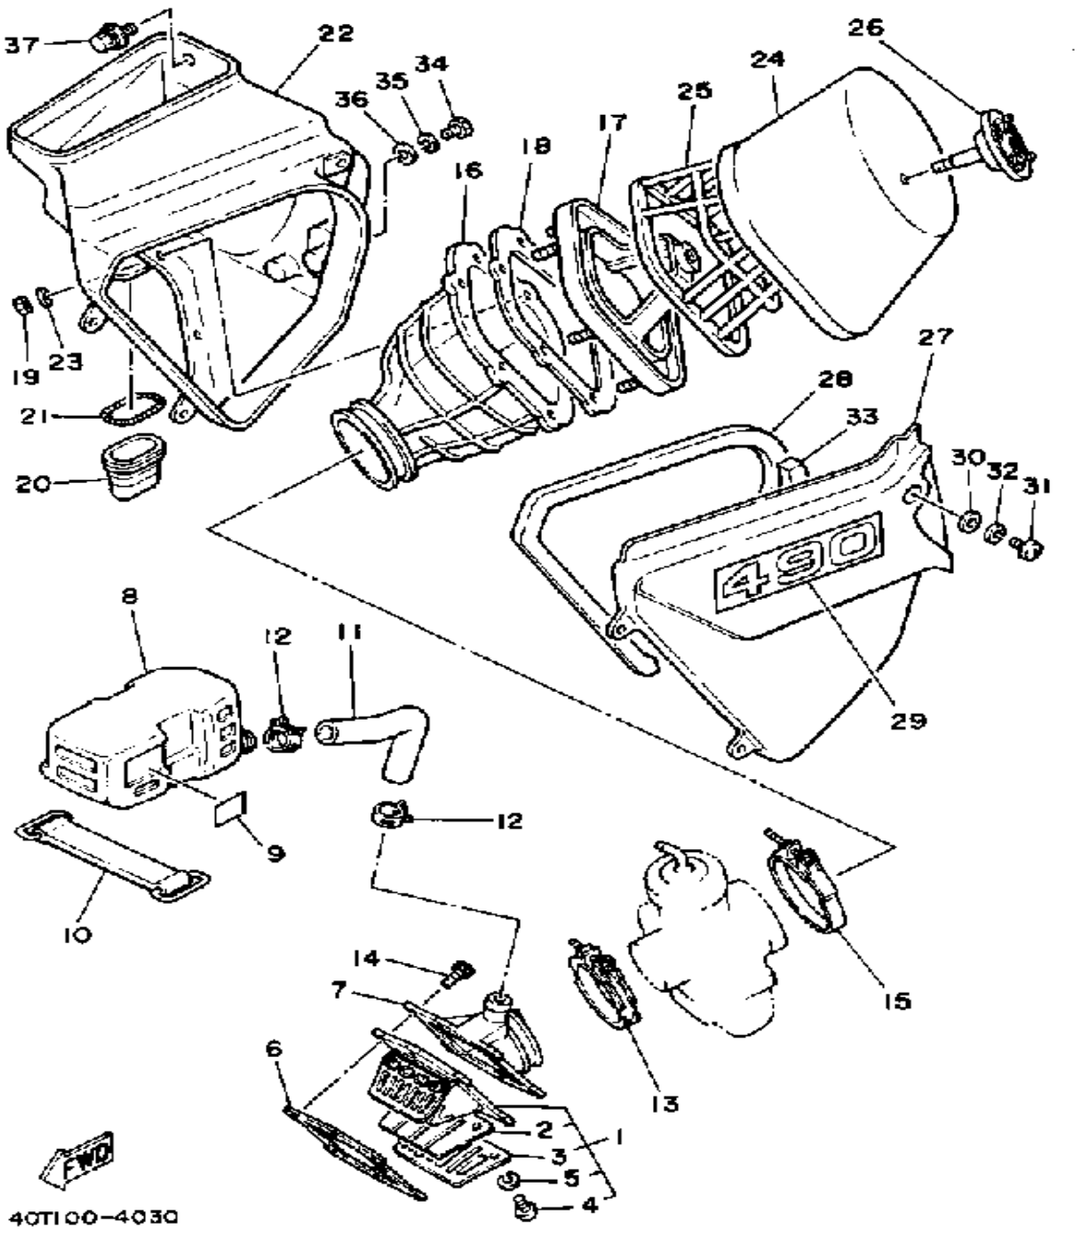

Ref. No.	Part Number	Description	Qty	Remarks
1	39X-13610-00-00	REED VALVE ASSEMBLY	1	
2	39X-13613-00-00	. REED, VALVE	2	
3	39X-13616-00-00	. STOPPER, REED VALVE	2	
4	98580-03008-00	. SCREW, PAN HEAD (98501-03008-00)	8	
5	92990-03100-00	. WASHER, SPRING	8	
6	39X-13621-11-00	GASKET, VALVE SEAT	1	
7	40T-13565-00-00	JOINT, CARBURETOR	1	
8	40T-13581-00-00	CHAMBER, AIR	1	
9	4V3-1441K-00-00	EMBLEM	1	
10	26A-13575-00-00	BAND	1	
11	40T-13584-00-00	PIPE, MANIFOLD	1	
12	90467-23059-00	CLIP	2	
13	86M-13575-00-00	BAND	1	
14	91316-06020-00	BOLT	6	
15	90460-74254-00	CLAMP, HOSE	1	
16	(40T-14453-00-00)	JOINT, AIR CLNR 1	1	
17	39X-14459-00-00	HOLDER, GUIDE	1	
18	39X-14462-00-00	SEAL	1	
19	95601-05100-00	NUT, U	6	
20	39K-14457-00-00	SEAL	1	
21	90504-03033-00	SPRING, COMPRESSION	1	
22	39X-W1441-00-00	AIR CLEANER CASECOMP. ..	1	
23	92990-05200-00	WASHER, PLAIN	6	
24	39X-14451-00-00	ELEMENT, AIR CLNR	1	
25	39X-14458-00-00	GUIDE, ELEMENT	1	
26	4V2-14468-02-00	PLATE, ELEMENT FTNG (4V2-14468-01)	1	
27	39X-14412-00-00	CAP, CLEANER CASE 1	1	


CONTINUED ON NEXT FRAME ➤

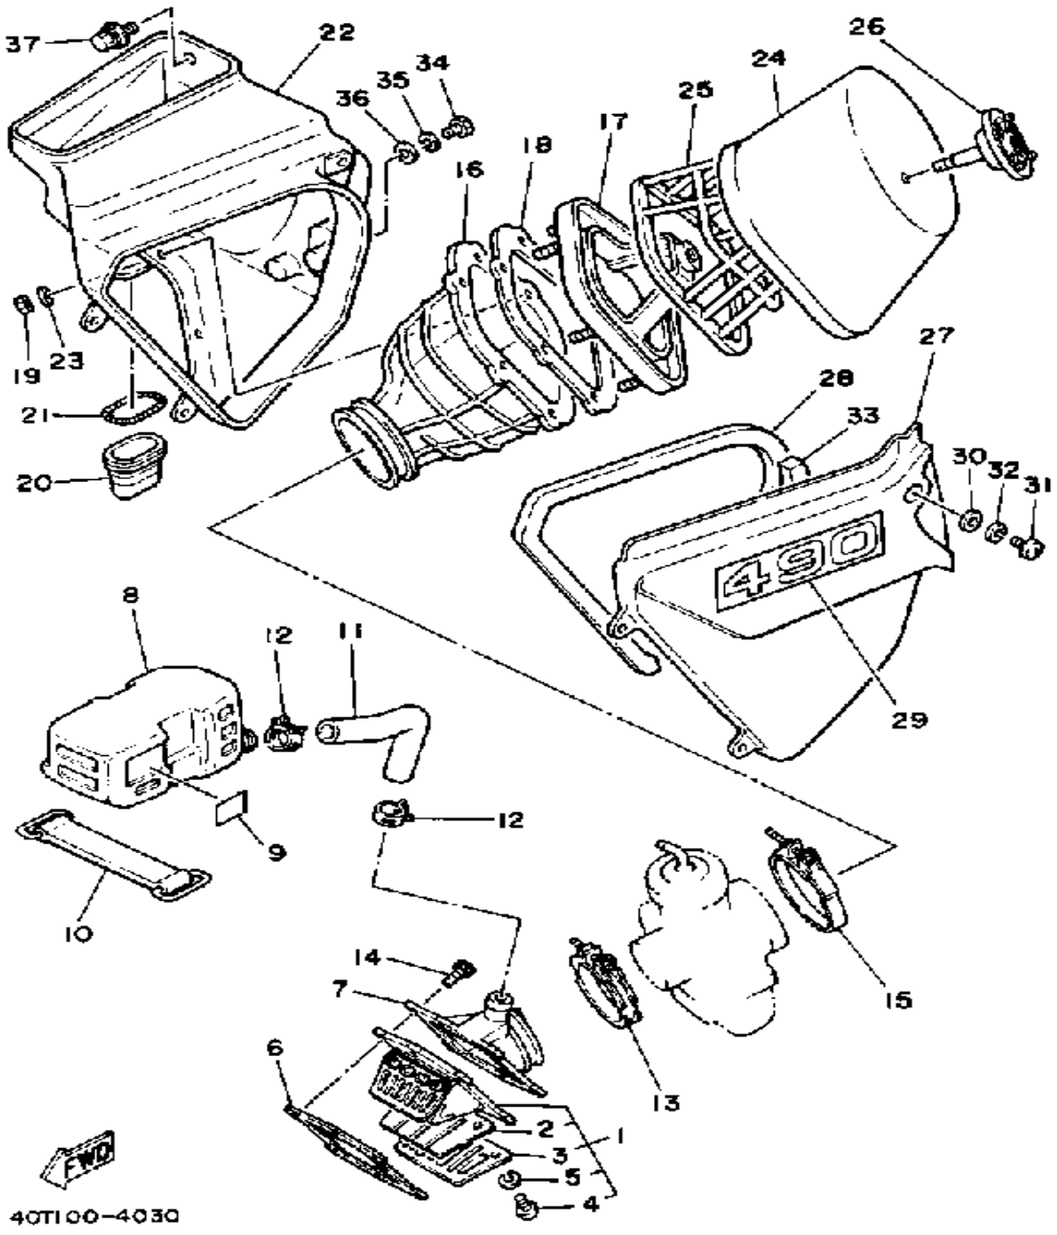

INTAKE


Ref. No.	Part Number	Description	Qty	Remarks
28	39W-14452-00-00	SEAL	1	
29	40T-21737-00-00	EMBLEM	1	
30	92990-06200-00	WASHER, PLAIN	3	
31	98580-06012-00	SCREW, PAN HEAD (92501-06012-00)	3	
32	92995-06100-00	WASHER, SPRING	3	
33	39X-14452-00-00	SEAL	1	
34	97013-06012-00	BOLT	2	
35	92995-06100-00	WASHER, SPRING	2	
36	92901-06600-00	WASHER	2	
37	90119-06056-00	BOLT, WITH WASHER	1	

CARBURETOR

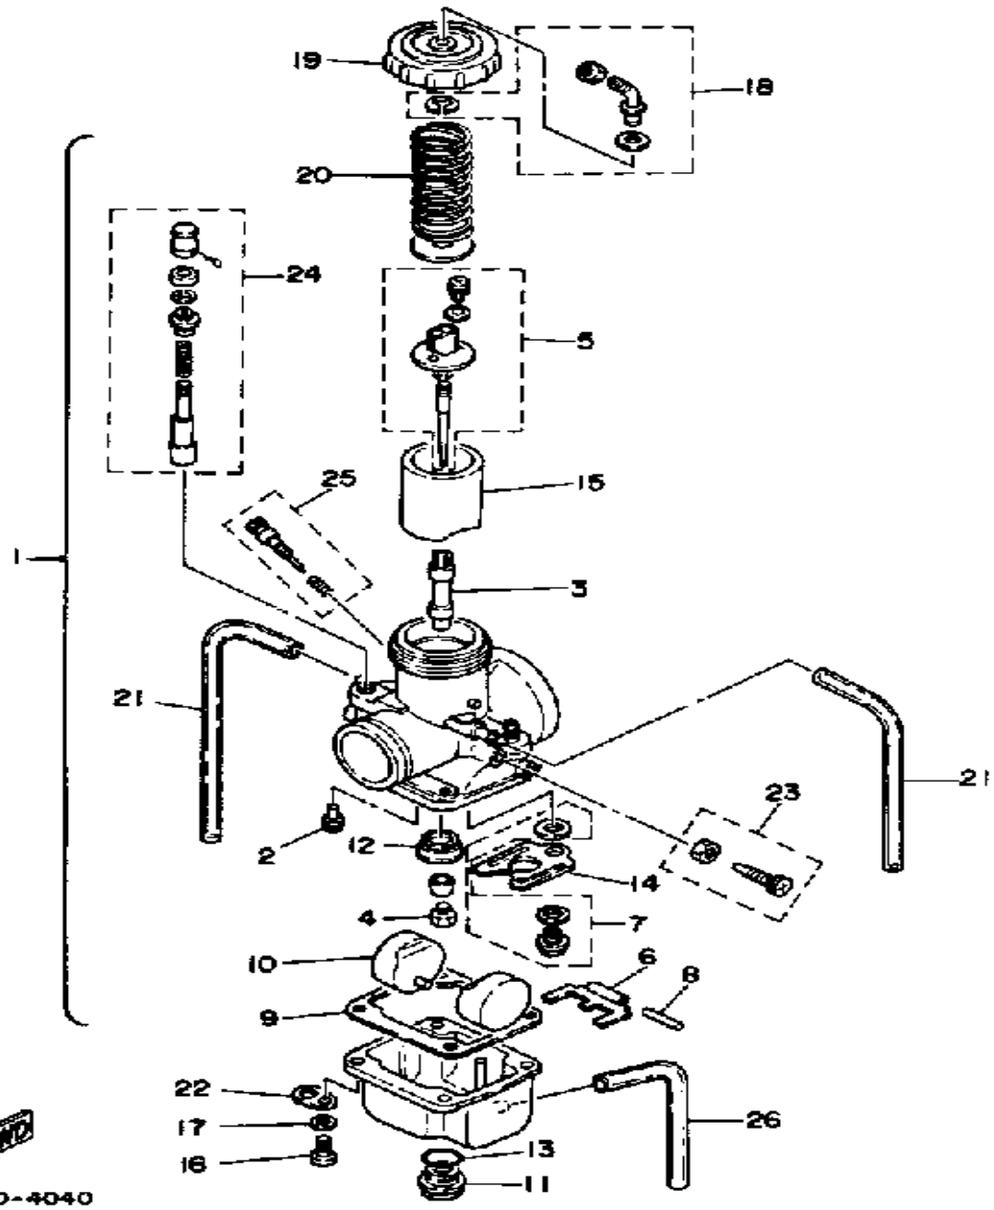

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-14101-00-00	CARBURETOR ASSEMBLY 1 .	1	
2	193-14142-50-00	. JET, PILOT # 0	1	
3	8A7-14141-58-00	. NOZZLE, MAIN Q 8	1	
4	137-14143-86-00	. JET, MAIN (430)	1	ALTERNATE PART
	137-14143-88-00	. JET, MAIN (440)	1	STD
	137-14143-92-00	. JET, MAIN (460)	1	ALTERNATE PART
5	40T-1490J-00-00	. NEEDLE SET	1	
6	40T-14187-00-00	. ARM, FLOAT	1	
7	23X-14107-35-00	. NEEDLE VALVE SET	1	
8	537-14186-00-00	. PIN, FLOAT	1	
9	363-14184-00-00	. GASKET, FLOAT CHMBR ...	1	
10	214-14185-00-00	. FLOAT	2	
11	40T-14115-00-00	. PLUG, SCREW	1	
12	3R3-14153-00-00	. WASHER, MAIN JET	1	
13	278-14117-00-00	. WASHER, SCREW PLUG	1	
14	(40T-14146-00-00)	PLATE	1	
15	40T-14112-25-00	. VALVE, THRTL 1 2 5	1	
16	98580-05016-00	. SCREW, PAN HEAD	4	
17	92990-05100-00	. WASHER, SPRING	4	
18	40T-14106-00-00	. CBLE AJST SCRW SETSCREW SET	1	
19	40T-14158-00-00	. TOP, MIXING CHAMBER	1	
20	8H0-14131-00-00	. SPRING, THRTL VALVE	1	
21	310-14197-00-00	. PIPE	2	
22	313-14146-00-00	. PLATE	2	
23	40T-14103-00-00	. THROTTLE SCREW SET	1	
24	24X-1410A-00-00	. STARTER SET	1	
25	23X-14104-00-00	. AIR SCREW SET	1	
26	3Y3-14196-00-00	. PIPE, OVERFLOW	1	


EXHAUST

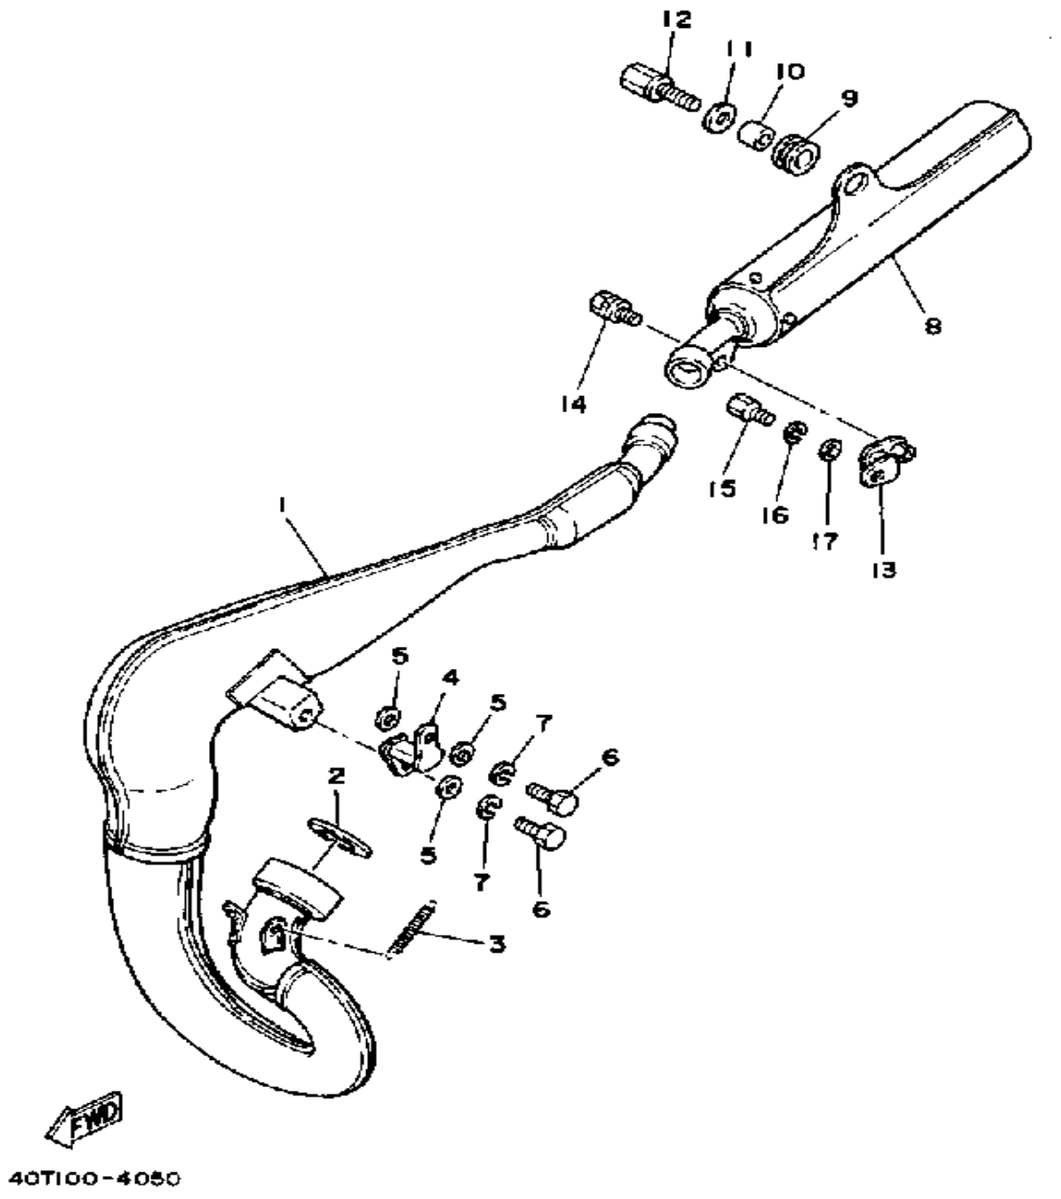

40T100-4050


Ref. No.	Part Number	Description	Qty	Remarks
1	40T-14610-00-00	EXHAUST PIPE ASSEMBLY L	1	
2	40T-14613-00-00	GASKET, EXST PIPE	1	
3	90507-20030-00	SPRING, TENSION	3	
4	40T-14771-00-00	STAY, MUFFLER 1	1	
5	90201-08730-00	WASHER, PLATE	3	
6	97313-08018-00	BOLT, HEXAGON	2	
7	92990-08100-00	WASHER, SPRING	2	
8	40T-14753-01-00	SILENCER, EXHAUST	1	
9	39X-14747-00-00	DAMPER, MUFFLER	1	
10	90387-081A3-00	COLLAR	1	
11	90201-08612-00	WASHER, PLATE	1	
12	90109-08512-00	BOLT	1	
13	565-14771-00-00	STAY, MUFFLER 1	1	
14	90109-06551-00	BOLT	1	
15	97313-06016-00	BOLT	1	
16	92995-06100-00	WASHER, SPRING	1	
17	92901-06600-00	WASHER	1	

CRANKCASE

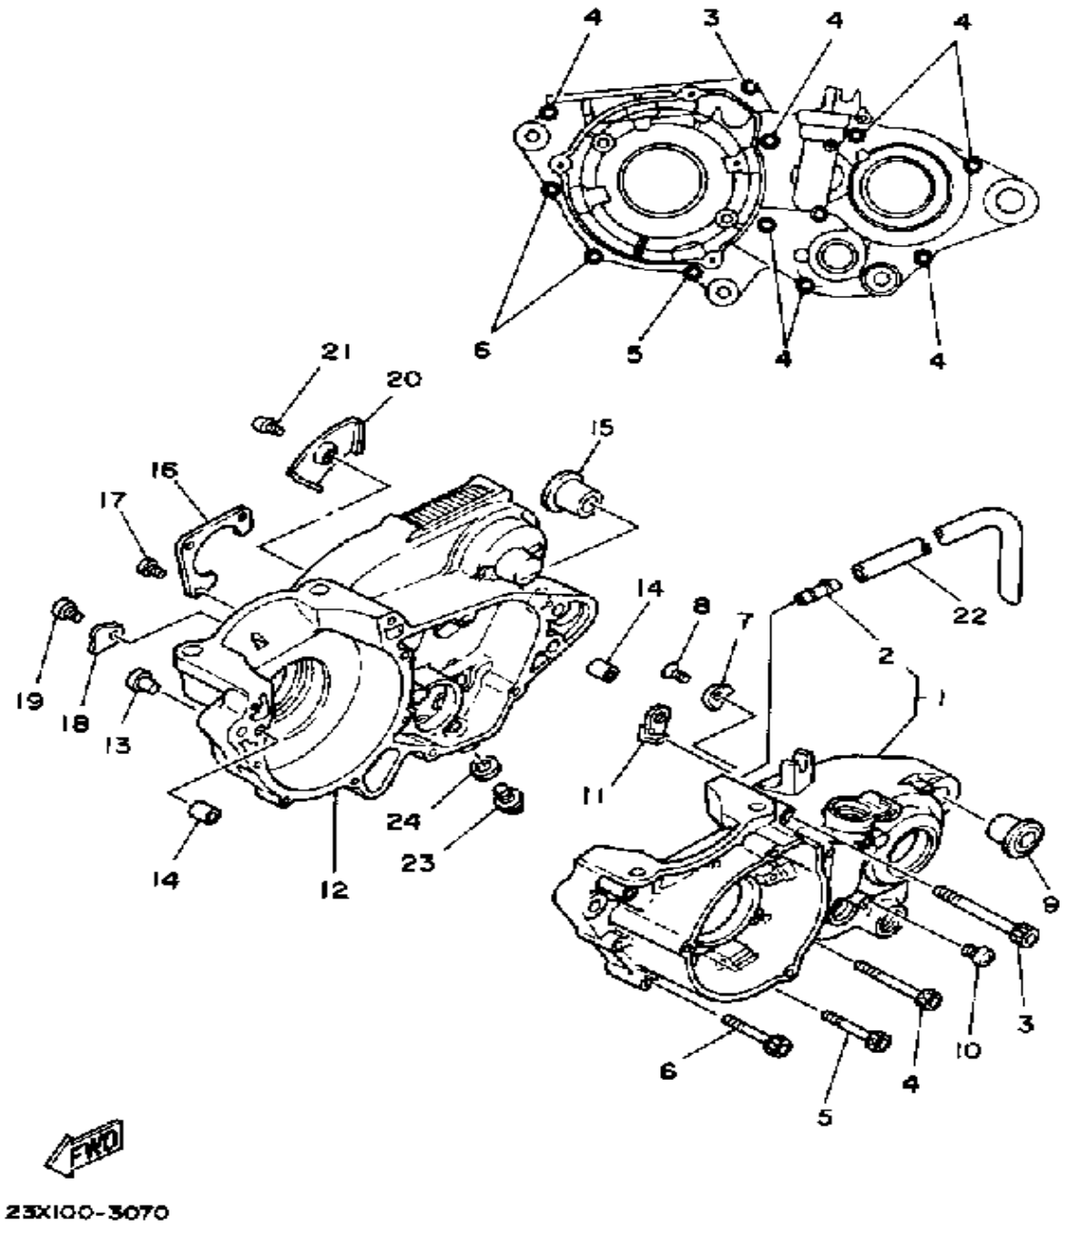


Ref. No.	Part Number	Description	Qty	Remarks
1	3R5-W1511-01-00	CRANKCASE 1	1	
2	137-13115-00-00	. CONNECTOR, SCTN PPE	1	
3	91316-06075-00	BOLT	1	
4	91316-06060-00	BOLT	7	
5	91316-06050-00	BOLT	1	
6	91316-06045-00	BOLT	2	
7	3AK-15383-01-00	PLATE, BRNG COVER (3R4-15383-00)	1	
8	98603-06012-00	SCREW, OVAL HEAD (92701-06012)	1	
9	90387-160H4-00	COLLAR	1	
10	98516-06012-00	SCREW, PAN HEAD	1	
11	23X-26393-00-00	HOLDER	1	
12	3R5-15121-05-00	CRANKCASE 2	1	
13	90338-07011-00	PLUG, SPEC''L SHAPE	1	
14	99510-12016-00	PIN, DOWEL	4	
15	90387-160H4-00	COLLAR	1	
16	23X-15381-00-00	PLATE, BRNG COVER	1	
17	98580-06012-00	SCREW, PAN HEAD (92501-06012-00)	3	
18	4V4-15118-00-00	HOLDER	1	
19	98580-06010-00	SCREW, PAN HEAD	1	
20	3R4-15113-00-00	PLATE	1	
21	98580-06012-00	SCREW, PAN HEAD (92501-06012-00)	1	
22	90445-08605-00	HOSE	1	
23	90340-12097-00	PLUG, STRAIGHT SCREW	1	
24	90430-12207-00	GASKET	1	

CRANKCASE COVER

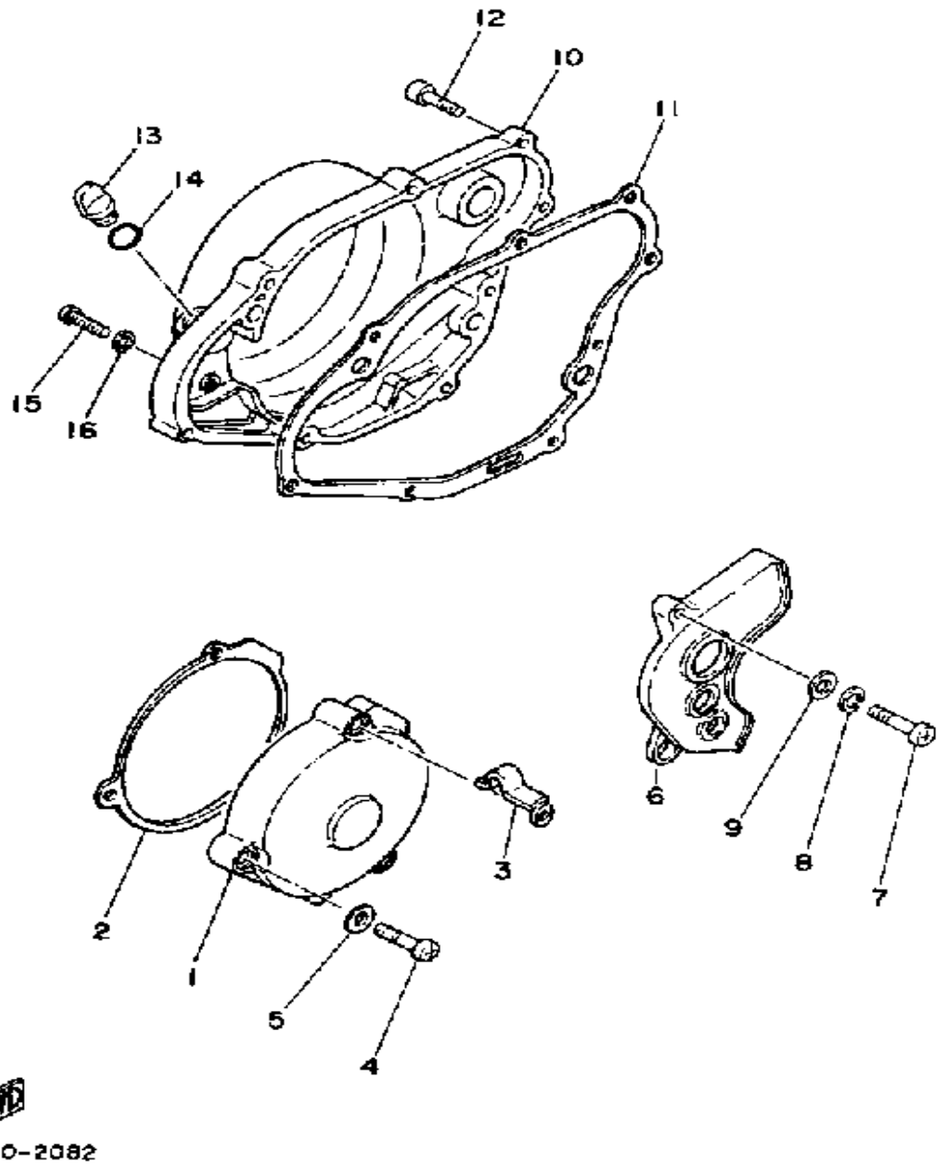

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-15411-00-00	COVER, CRANKCASE L	1	
2	4V4-15451-00-00	GASKET, CRANKCASE COVER	1	
3	90465-06247-00	CLAMP	1	
4	98506-06035-00	SCREW, PAN HEAD	3	
5	92906-06600-00	WASHER	3	
6	23X-15421-00-00	COVER, CRANKCASE 2	1	
7	98506-06025-00	SCREW, PAN HEAD	1	
8	92906-06100-00	WASHER, SPRING	1	
9	92906-06600-00	WASHER	1	
10	40T-15431-00-00	COVER, CRANKCASE 3	1	
11	3R4-15462-00-00	GASKET, CRANKCASE COVER 3	1	
12	91316-06025-00	BOLT	8	
13	1G8-15362-00-00	PLUG, OIL LEVEL	1	
14	93210-14104-00	O-RING	1	
15	98506-06008-00	SCREW, PAN HEAD	1	
16	90430-16016-00	UNAVAILABLE IN PRICE BOOK	1	


STARTER

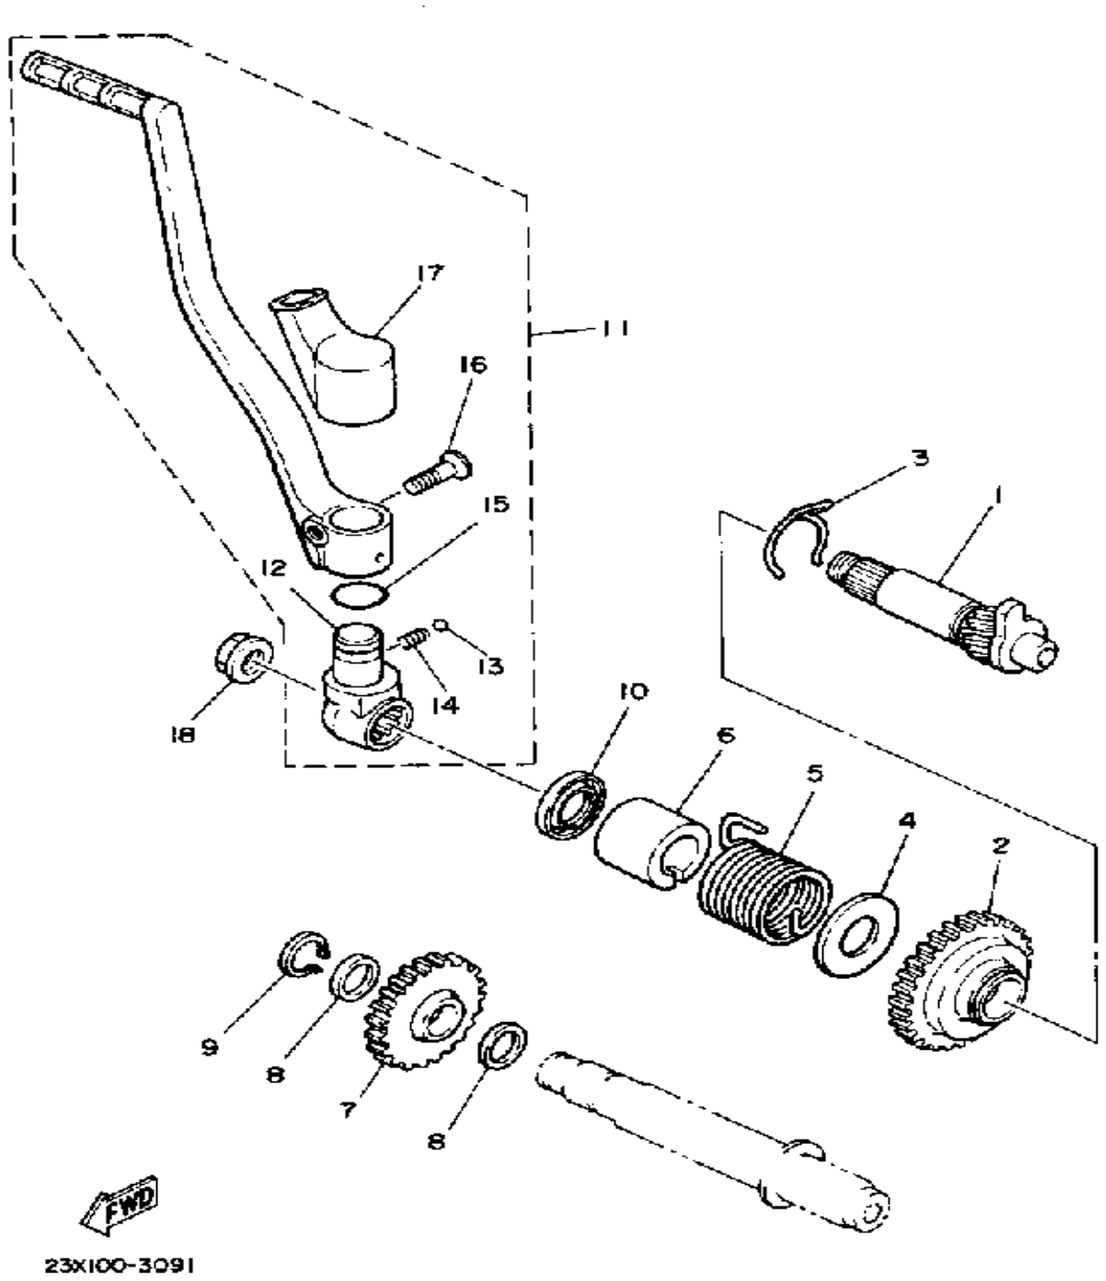

23X100-3091


Ref. No.	Part Number	Description	Qty	Remarks
1	57H-15661-00-00	KICK AXLE ASSEMBLY	1	
2	23X-15641-00-00	GEAR, KICK	1	
3	90468-26048-00	CLIP	1	
4	90201-20358-00	WASHER, PLATE	1	
5	90508-30422-00	SPRING, TORSION	1	
6	40T-15664-00-00	GUIDE, SPRING	1	
7	23X-15651-00-00	GEAR, KICK IDLE	1	
8	90201-17545-00	WASHER, PLATE	2	
9	99009-17400-00	CIRCLIP	1	
10	93102-20309-00	OIL SEAL	1	
11	40T-15620-01-00	KICK CRANK ASSEMBLY	1	
12	23X-15621-02-00	. BOSS, KICK CRANK	1	
13	93501-04011-00	. BALL	1	
14	90501-13720-00	. SPRING, COMPRESSION	1	
15	93210-19501-00	. O-RING	1	
16	90157-06048-00	. SCREW, PAN HEAD - (90152-06010)	1	
17	23X-15618-00-00	. COVER, KICK LEVER	1	
18	90179-12244-00	NUT, SPEC''L SHAPE	1	

CLUTCH

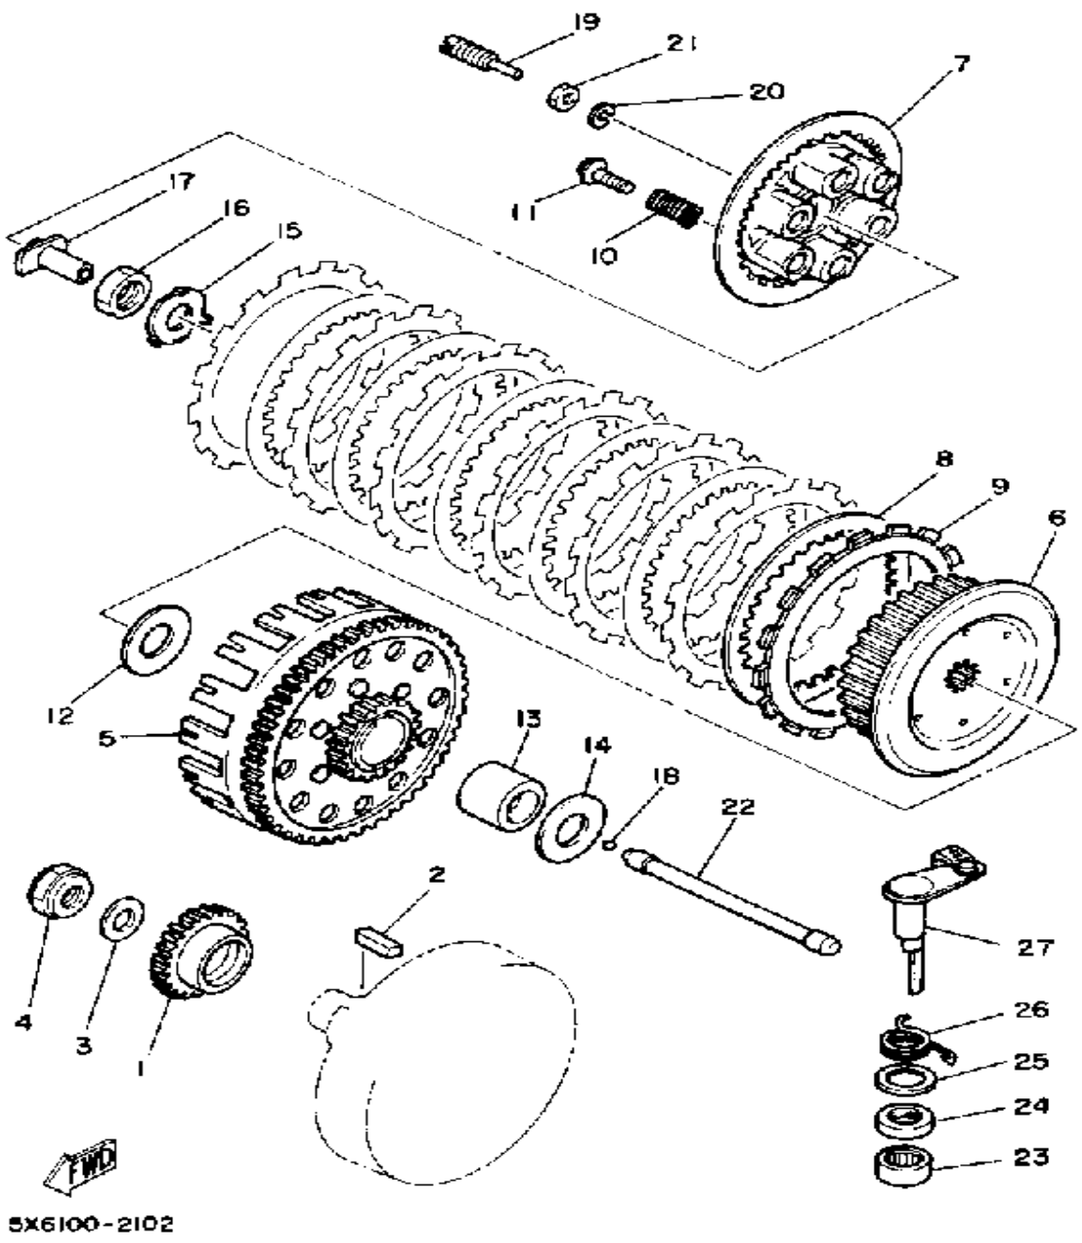

Ref. No.	Part Number	Description	Qty	Remarks
1	23X-16111-00-00	GEAR, PRIMARY DRIVE	1	
2	90282-07019-00	KEY, STRAIGHT	1	
3	90201-186H3-00	WASHER, PLATE	1	
4	90185-18126-00	NUT, SELF-LOCKING	1	
5	39X-16150-00-00	PRI DRVN GEARGEAR COMP	1	
6	23X-16371-00-00	BOSS, CLUTCH	1	
7	23X-16351-00-00	PLATE, PRESSURE 1	1	
8	4H7-16325-00-00	PLATE, CLUTCH 2	6	
9	5X5-16321-00-00	PLATE, FRICTION	7	
10	90501-24408-00	SPRING, COMPRESSION	6	
11	90159-06016-00	SCREW, WITH WASHER	6	
12	2K7-16154-00-00	PLATE, THRUST 1	1	
13	2K7-16181-00-00	SPACER 1	1	
14	2K7-16154-00-00	PLATE, THRUST 1	1	
15	90215-20212-00	WASHER, LOCK	1	
16	90170-20255-00	NUT	1	
17	23X-16356-00-00	ROD, PUSH 1	1	
18	93515-32029-00	BALL	1	
19	90149-06179-00	SCREW	1	
20	92995-06100-00	WASHER, SPRING	1	
21	95380-06600-00	NUT, HEXAGON	1	
22	3R5-16357-01-00	ROD, PUSH 2 0 1	1	
23	93315-21721-00	BEARING, CYLINDRICAL	1	
24	93102-17263-00	OIL SEAL	1	
25	90201-17327-00	WASHER, PLATE	1	
26	90508-14423-00	SPRING, TORSION	1	
27	4V4-16380-00-00	PUSH LEVER ASSEMBLY	1	

TRANSMISSION

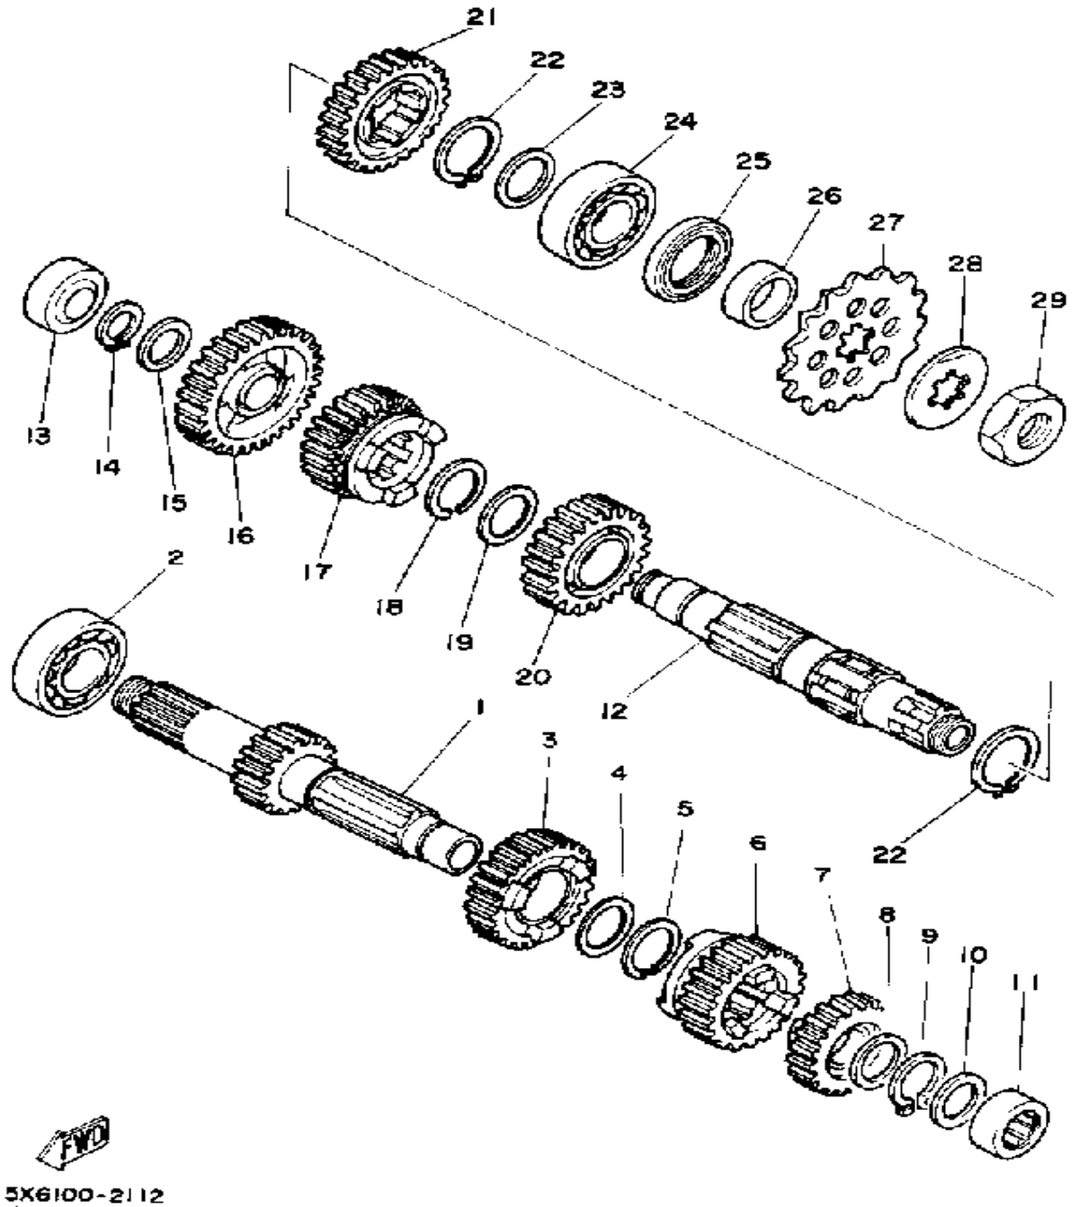


5X6100-2112

Ref. No.	Part Number	Description	Qty	Remarks
1	5X6-17411-01-00	AXLE, MAIN	1	
2	93300-20501-00	BEARING	1	
3	5X6-17141-00-00	GEAR, 4TH PINION (24T)	1	
4	90201-253K0-00	WASHER, PLATE (T=1.0)	1	
5	93440-25084-00	CIRCLIP	1	
6	5X6-17131-00-00	GEAR, 3RD PINION (22T)	1	
7	5X6-17121-01-00	GEAR, 2ND PINION	1	
8	90201-203E7-00	WASHER, PLATE	1	
9	93410-20038-00	CIRCLIP	1	
10	90201-20276-00	WASHER, PLATE (1.0T)	1	
11	93311-62035-00	BEARING, CYLINDRICAL	1	
12	5X6-17421-00-00	AXLE, DRIVE	1	
13	93311-62035-00	BEARING, CYLINDRICAL	1	
14	93410-20038-00	CIRCLIP	1	
15	90201-20278-00	WASHER, PLATE	1	
16	5X6-17211-00-00	GEAR, 1ST WHEEL (28T)	1	
17	5X6-17241-00-00	GEAR, 4TH WHEEL (20T)	1	
18	93440-25084-00	CIRCLIP	1	
19	90201-253K0-00	WASHER, PLATE (T=1.0)	1	
20	5X6-17231-00-00	GEAR, 3RD WHEEL (23T)	1	
21	5X6-17221-00-00	GEAR, 2ND WHEEL (25T)	1	
22	99009-30400-00	CIRCLIP	2	
23	90201-256K6-00	WASHER, PLATE (0.9T)	1	
24	93300-20501-00	BEARING	1	
25	93102-32M07-00	OIL SEAL	1	
26	90387-25663-00	COLLAR	1	
27	93834-13030-00	SPROCKET, DRIVE 13T	1	ALTERNATE PART
	93834-14051-00	SPROCKET, DRIVE	1	
	93834-15078-00	SPROCKET, DRIVE	1	ALTERNATE PART

CONTINUED ON NEXT FRAME ➤


TRANSMISSION

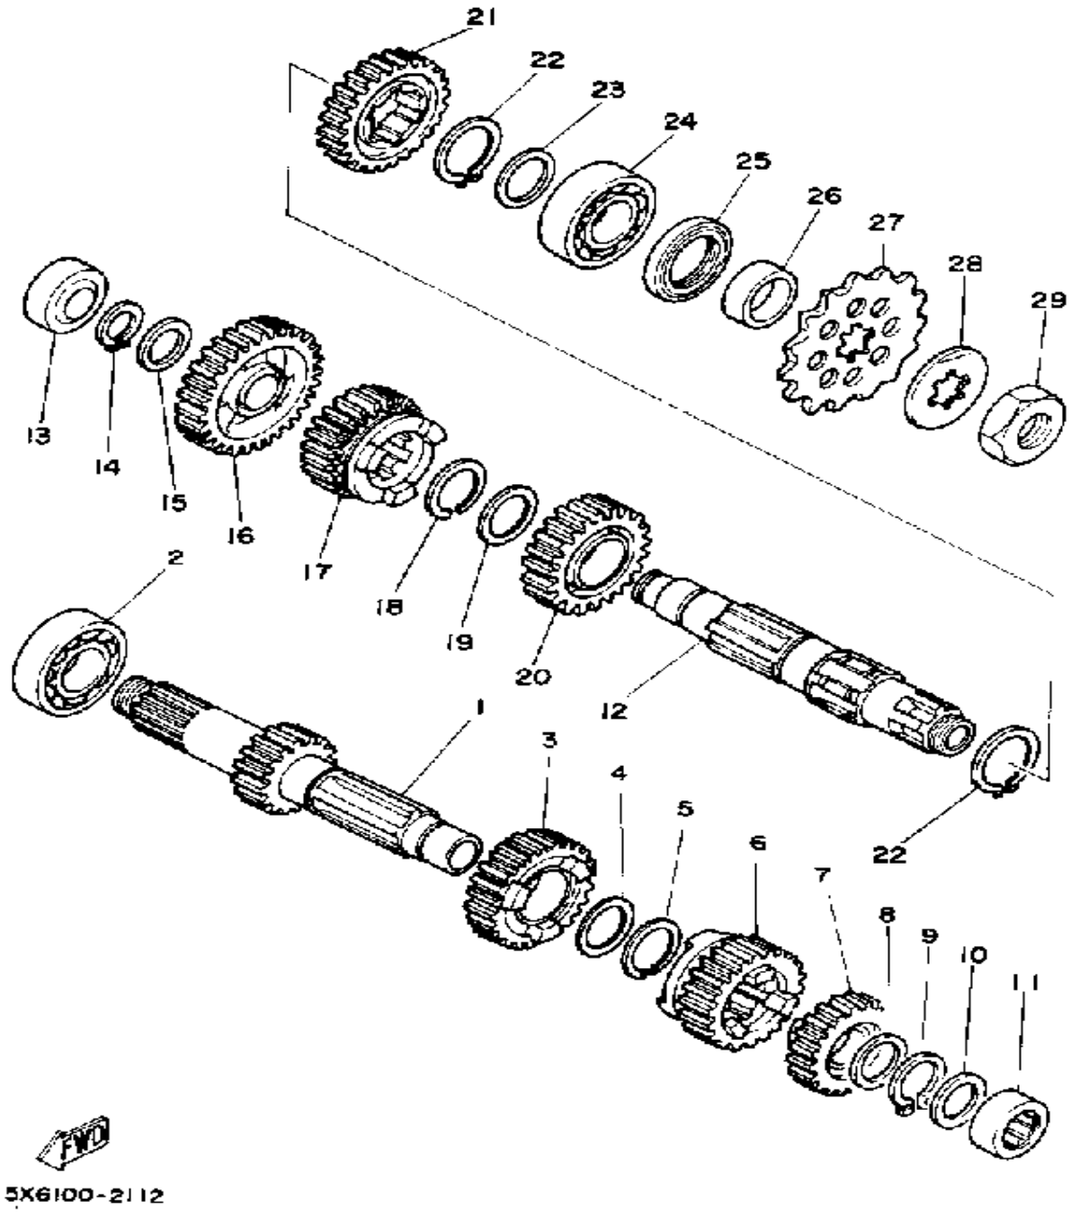

5X6100-2112


Ref. No.	Part Number	Description	Qty	Remarks
28	90215-21239-00	WASHER, LOCK	1	
29	90179-20255-00	NUT	1	

SHIFT CAM - FORK

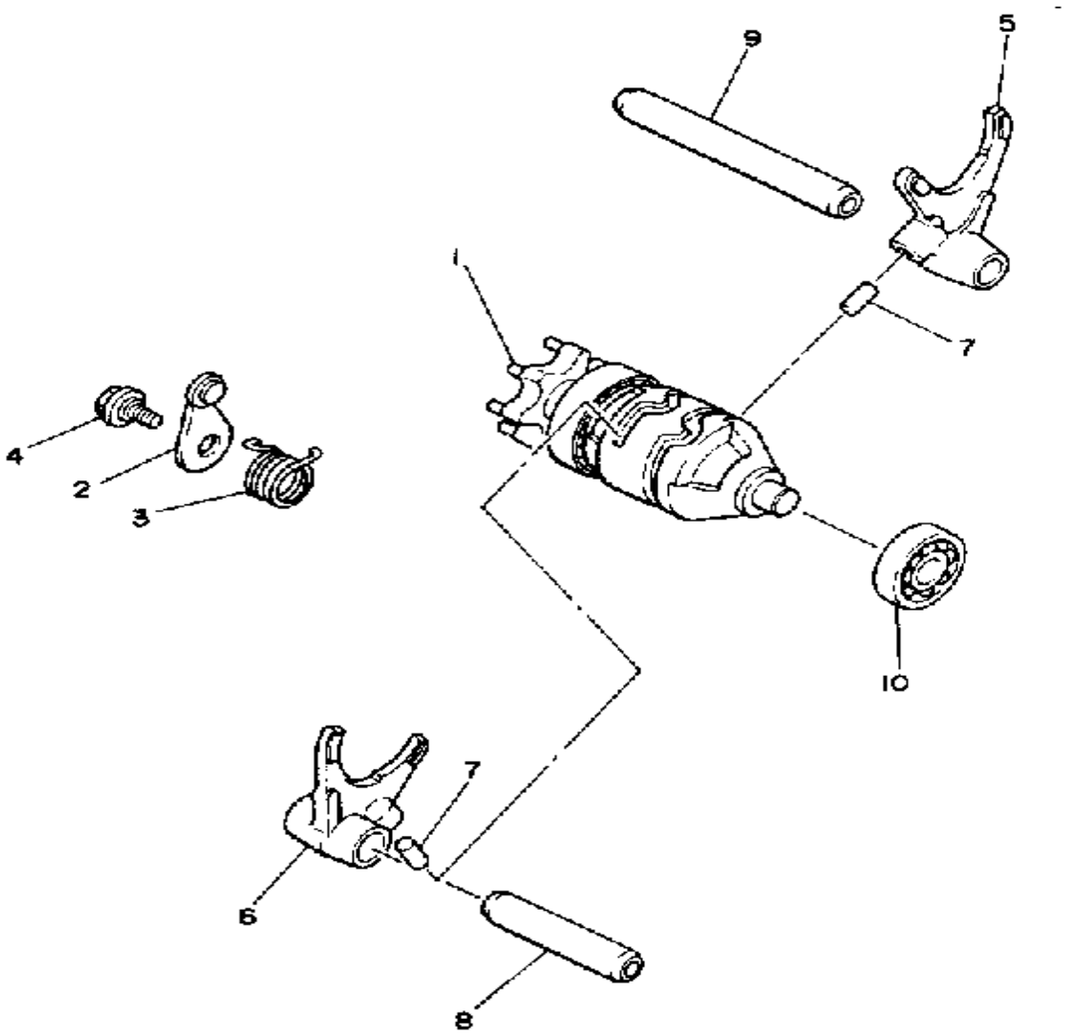

23X100-3120

Ref. No.	Part Number	Description	Qty	Remarks
1	23X-18540-00-00	SHIFT CAM ASSEMBLY	1	
2	3R4-18140-00-00	STOPPER LEVER ASSEMBLY .	1	
3	90508-26421-00	SPRING, TORSION	1	
4	50W-21631-00-00	BOLT 1	1	
5	5X6-18513-00-00	FORK, SHIFT 3	1	
6	5X6-18512-00-00	FORK, SHIFT 2	1	
7	93606-14154-00	PIN, DOWEL	2	
8	5X5-18531-01-00	BAR, SHIF FRK GDE 1	1	
9	5X5-18535-01-00	BAR, SHIF FRK GDE 2	1	
10	93306-20110-00	BEARING	1	

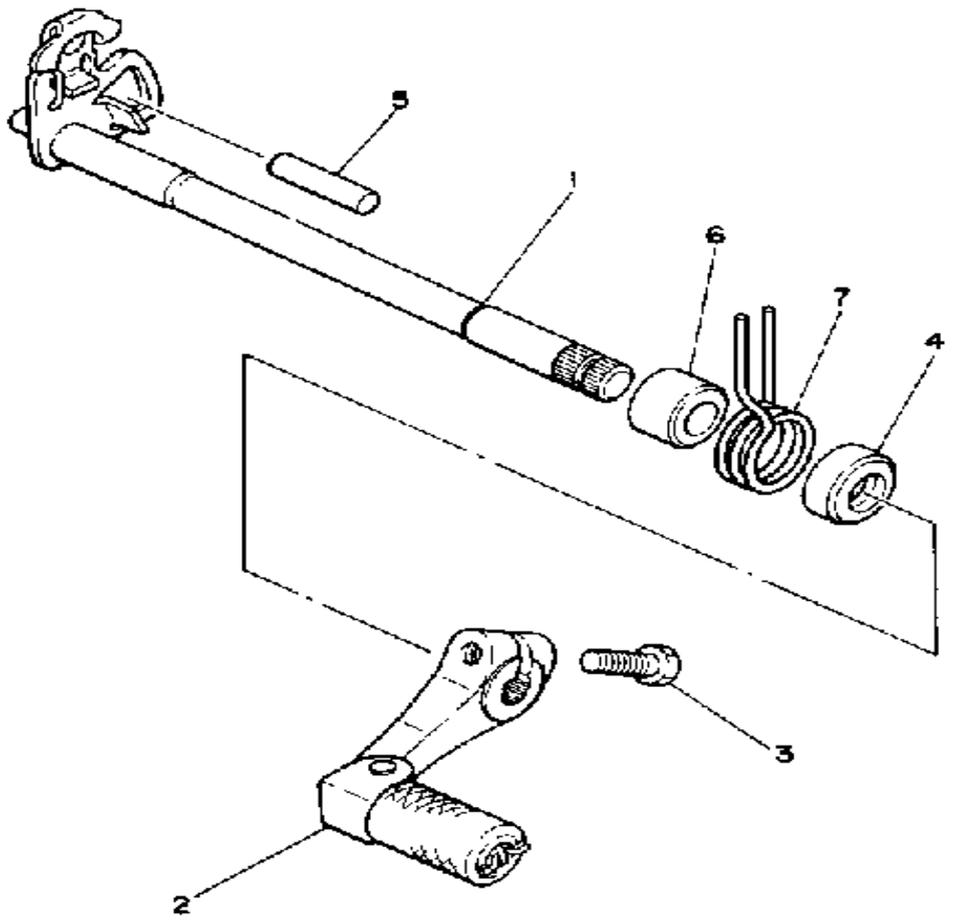


23X100-3130

SHIFT SHAFT

Ref. No.	Part Number	Description	Qty	Remarks
1	23X-18101-01-00	SHIFT SHAFT ASSEMBLY 1 ..	1	
2	23X-18110-01-00	SHIFT PEDAL ASSEMBLY	1	
3	97011-06025-00	BOLT (97001-06025)	1	
4	93102-12321-00	OIL SEAL, SD-TYPE	1	
5	93608-25150-00	PIN, DOWEL	1	
6	90560-12171-00	SPACER	1	
7	90508-29361-00	SPRING, TORSION	1	

FRAME

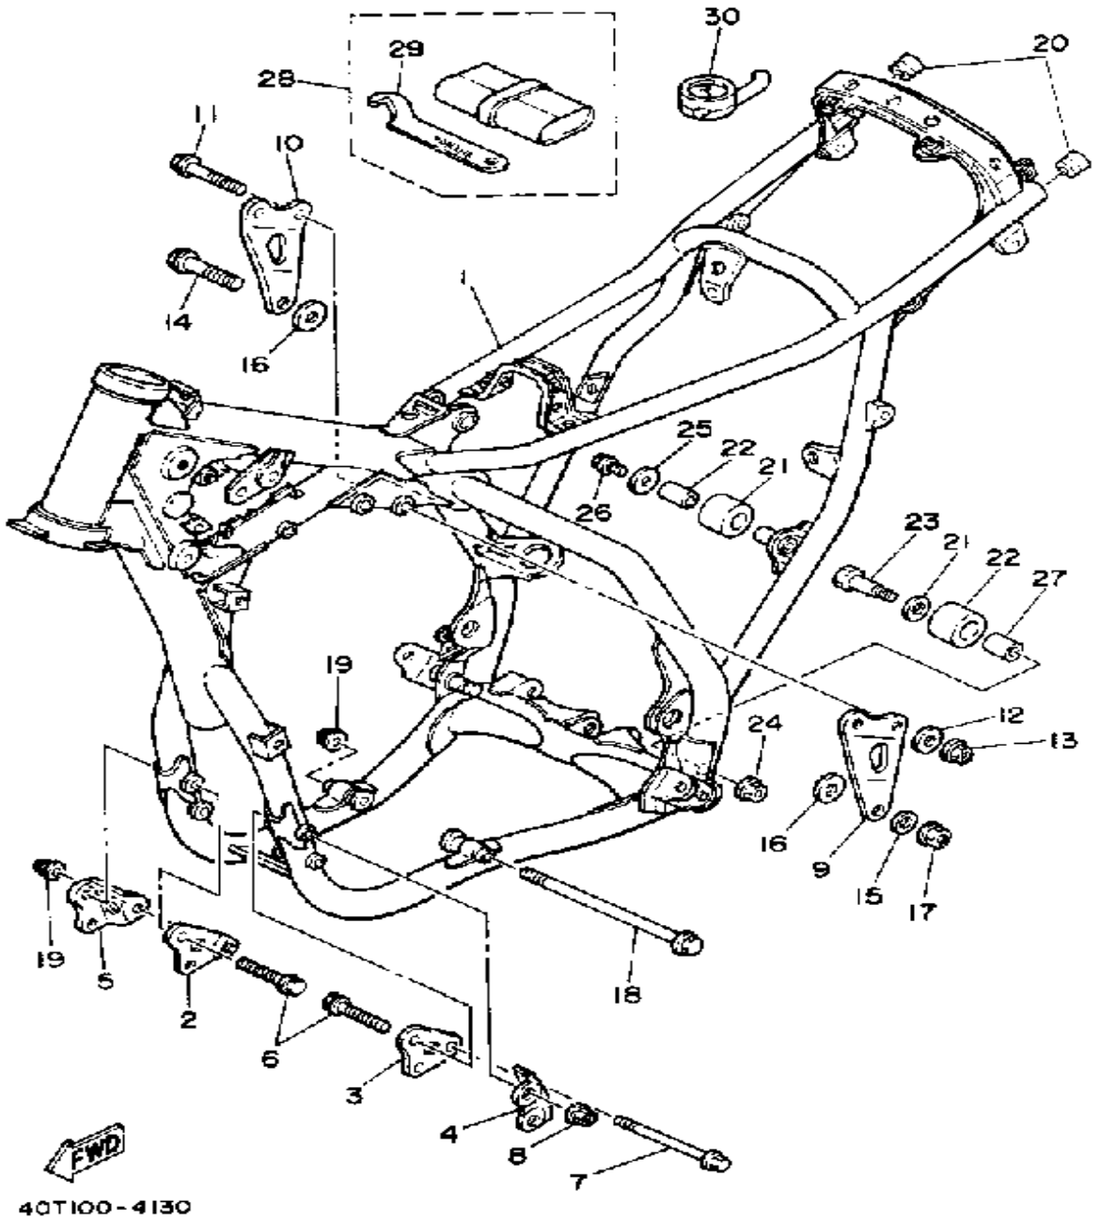


40T100-4130

Ref. No.	Part Number	Description	Qty	Remarks
1	(40T-21110-00-33)	FRAME	1	
2	40T-21416-00-00	BRACKET, FRT UPR 2	1	
3	40T-21415-00-00	BRACKET, FRT UPR 1	1	
4	40T-2141K-00-00	BRACKET, OUTER 1	1	
5	40T-2141L-00-00	BRACKET, OUTER 2	1	
6	95811-08060-00	BOLT, FLANGE	4	
7	95811-08110-00	BOLT, FLANGE	1	
8	95601-08200-00	NUT, SELF LOCKING	4	
9	40T-21425-00-00	BRACKET, REAR UPR 1	1	
10	40T-21426-00-00	BRACKET, REAR UPR 2UPPER 2	1	
11	95811-08055-00	BOLT, FLANGE	2	
12	90202-08022-00	WASHER, PLATE	2	
13	95601-08200-00	NUT, SELF LOCKING	2	
14	95811-10065-00	BOLT, FLANGE	1	
15	92990-10200-00	WASHER, PLAIN	1	
16	90201-100A1-00	WASHER, PLATE	2	
17	95601-10200-00	NUT, SELF-LOCKING	1	
18	95811-08180-00	BOLT, FLANGE	1	
19	95601-08200-00	NUT, SELF LOCKING	2	
20	90339-13005-00	PLUG	2	
21	30X-22178-00-00	TENSIONER	2	
22	4V4-22184-00-00	BUSH	2	
23	90109-08705-00	BOLT	1	
24	95601-08200-00	NUT, SELF LOCKING	1	
25	90201-08753-00	WASHER, PLATE	1	
26	95811-08012-00	BOLT, FLANGE (95801-08012-00)	1	
27	90201-13202-00	WASHER, PLATE	1	

CONTINUED ON NEXT FRAME ➤


FRAME

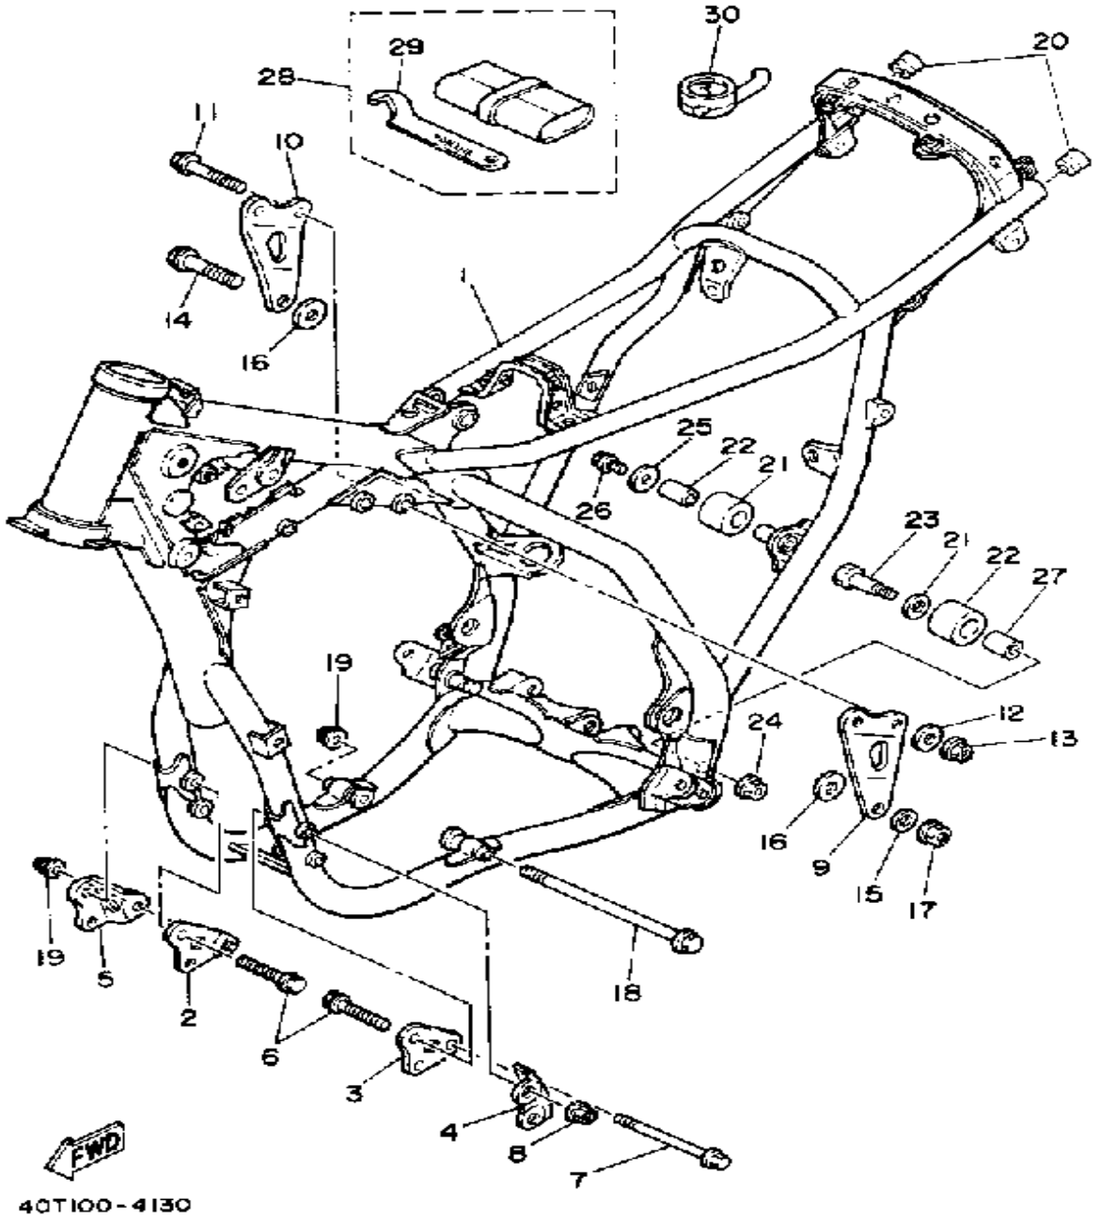

40T100-4130

Ref. No.	Part Number	Description	Qty	Remarks
28	24X-28100-00-00	TOOL KIT	1	
29	1HX-28135-00-00	. SPANNER, SPECIAL	1	
30	2X4-2811A-01-00	GAUGE, AIR	1	


FRONT FENDER - REAR FENDER

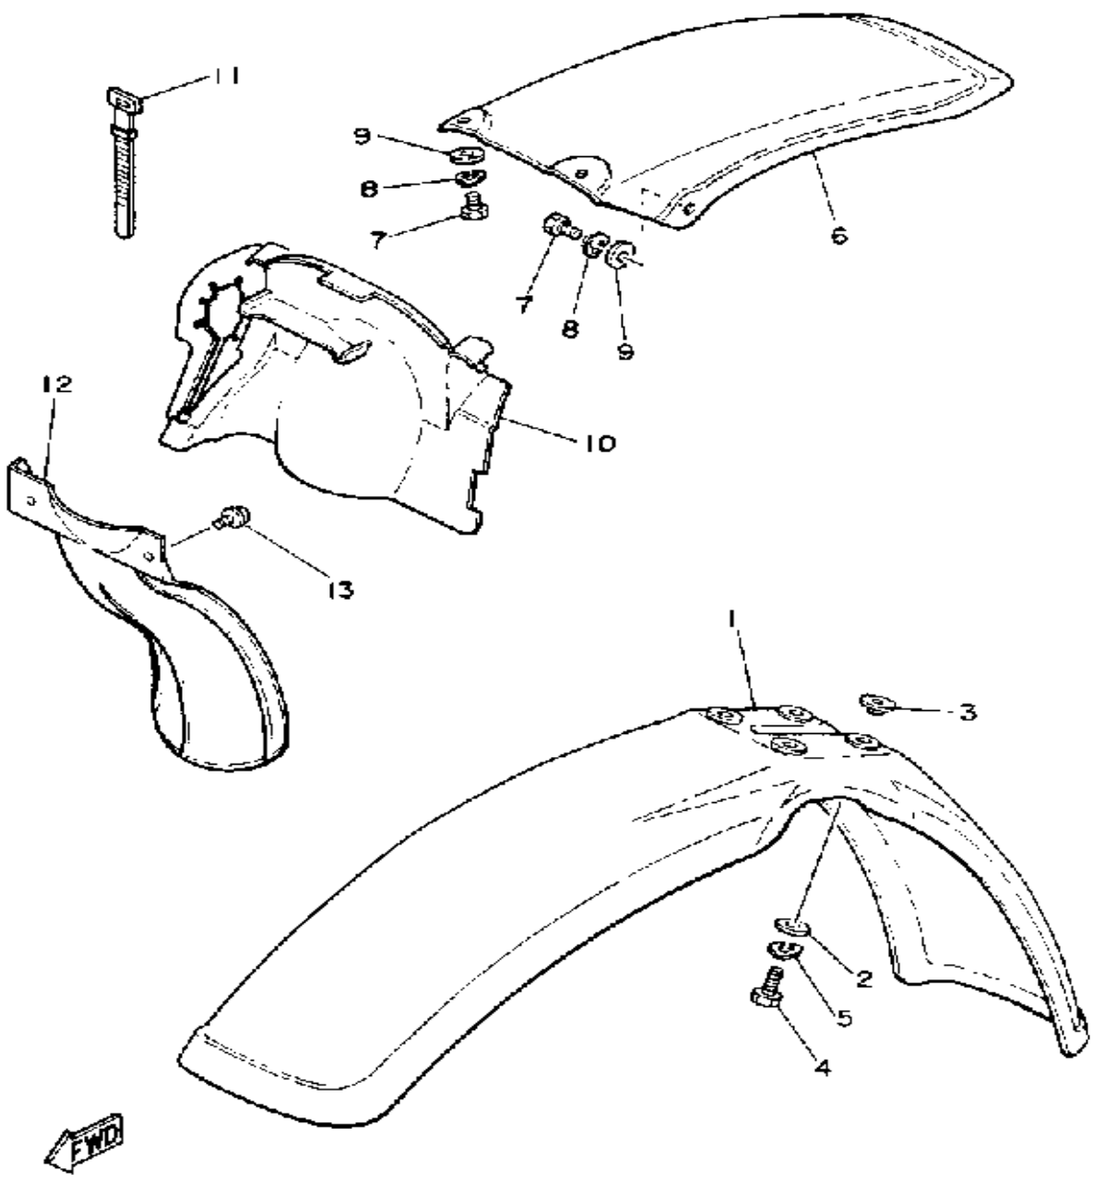

40T100-4140


Ref. No.	Part Number	Description	Qty	Remarks
1	5X6-21511-01-00	FENDER, FRONT	1	U.R. COMP. YELLOW
2	90201-06571-00	WASHER, PLATE	4	
3	90387-06681-00	COLLAR	4	
4	97023-06020-00	BOLT (3XF) (97302-06020)	4	
5	92901-06700-00	WASHER, WAVE (92902-06700)	4	
6	3R4-21611-00-00	FENDER, REAR	1	U.R. COMP. YELLOW
7	97313-06016-00	BOLT	4	
8	92901-06700-00	WASHER, WAVE (92902-06700)	4	
9	90201-06571-00	WASHER, PLATE	4	
10	39X-21620-00-00	GUARD, MUD	1	
11	437-83936-01-00	BAND, SWITCH CORD	1	
12	39X-21642-00-00	GUARD, FLAP	1	
13	90119-06042-00	BOLT, WITH WASHER	2	

SIDE COVER

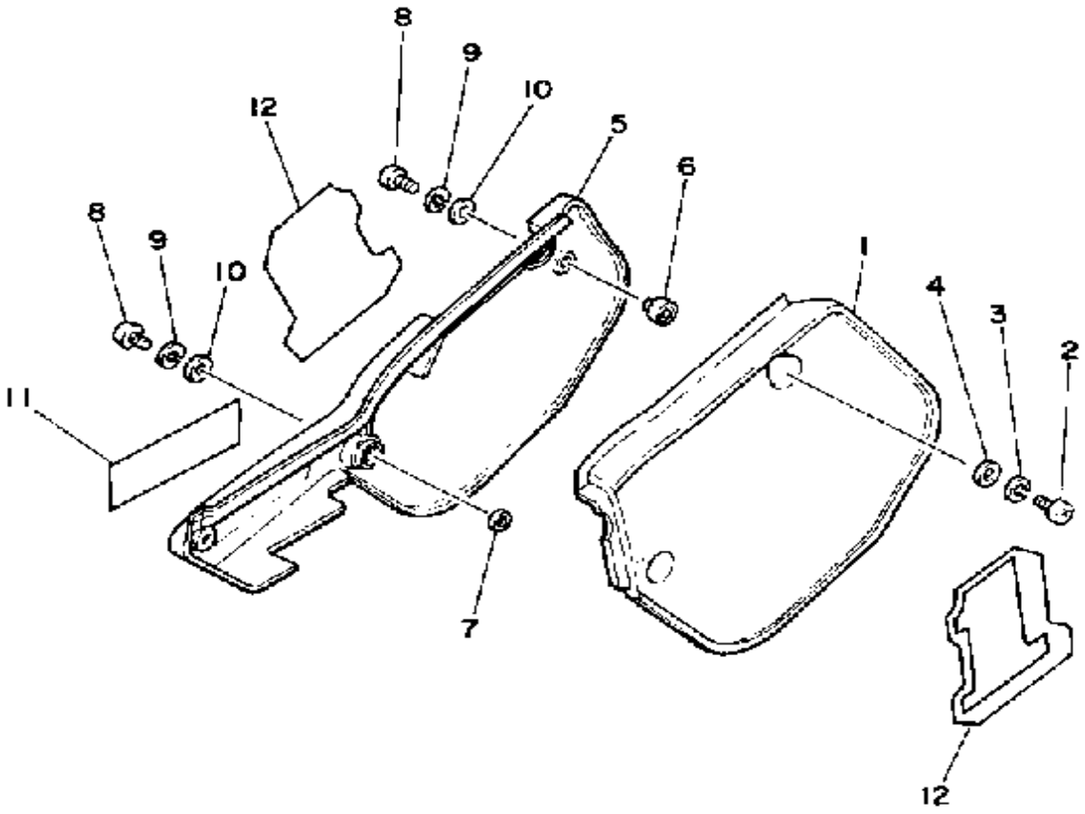

Ref. No.	Part Number	Description	Qty	Remarks
1	39X-21711-01-98	COVER, SIDE 1	2	
2	98503-06014-00	SCREW, PAN HEAD (92501-06015)	2	
3	92995-06100-00	WASHER, SPRING	2	
4	90201-06571-00	WASHER, PLATE	2	
5	39X-21721-01-98	COVER, SIDE 2	1	
6	22W-24181-00-00	DAMPER, LOCATING 1	4	
7	92990-08200-00	WASHER, PLAIN	2	
8	98503-06014-00	SCREW, PAN HEAD (92501-06015)	2	
9	92995-06100-00	WASHER, SPRING	2	
10	90201-06571-00	WASHER, PLATE	2	
11	40T-21737-00-00	EMBLEM	1	
12	3R2-21782-00-00	EMBLEM 2	2	


REAR ARM

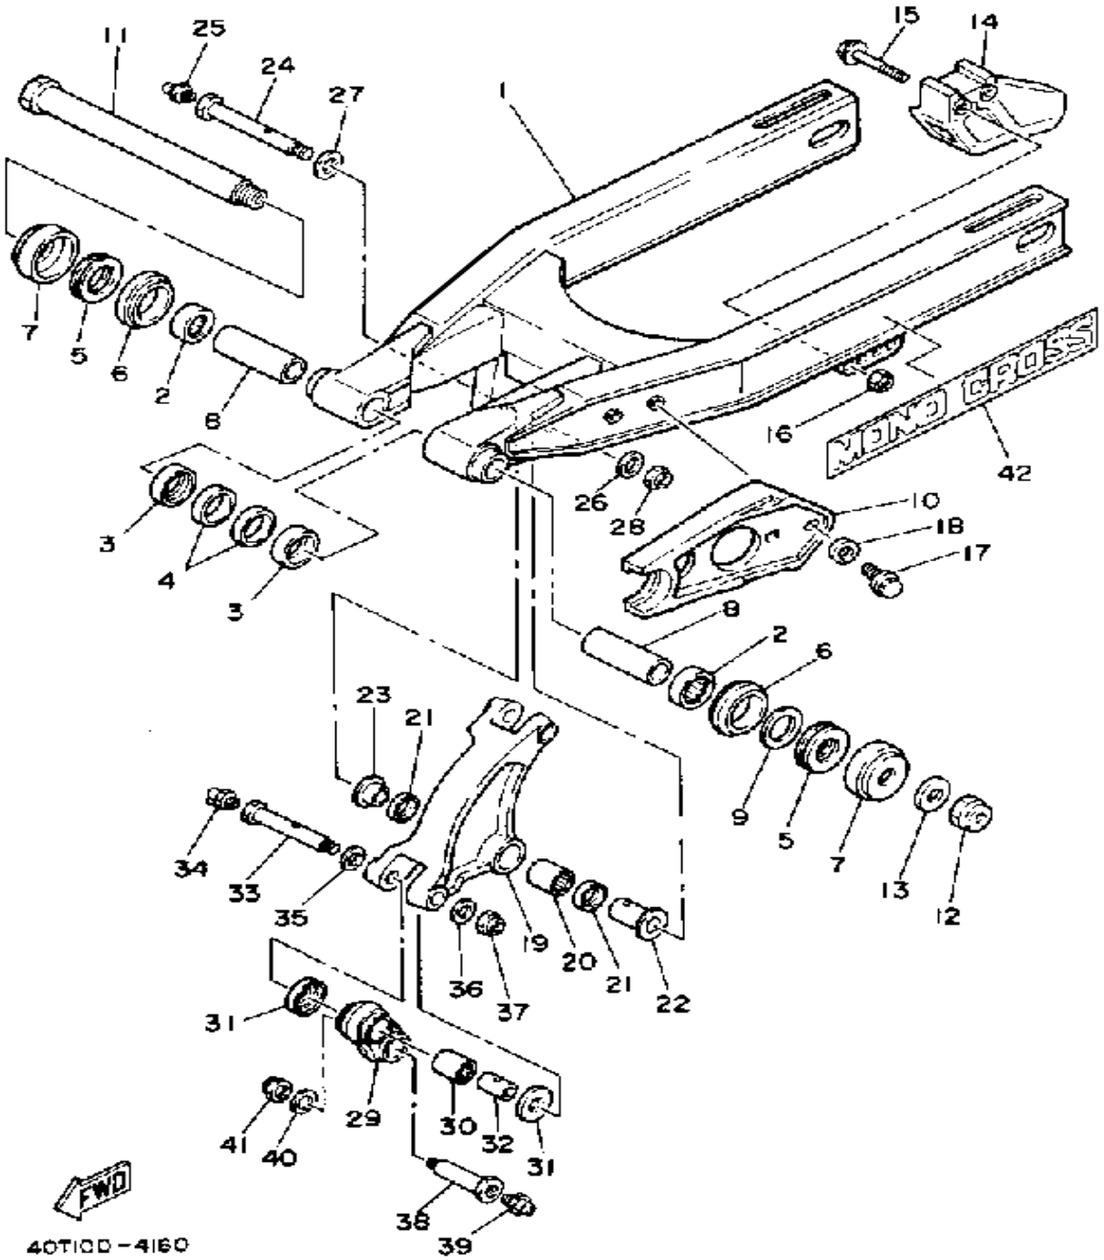

Ref. No.	Part Number	Description	Qty	Remarks
1	39X-22110-00-00	REAR ARM	1	
2	93317-32231-00	BEARING	2	
3	90380-22111-00	BUSH, SOLID	2	
4	93106-22019-00	OIL SEAL (DC 22-28-8)	2	
5	93342-22208-00	BEARING	2	
6	93108-35004-00	OIL SEAL (35-41-8)	2	
7	3R4-22129-00-00	COVER, THRUST 2	2	
8	90380-16077-00	BUSH, SOLID	2	
9	240-22127-00-00	SHIM (0.3T)	1	U.N.
10	39W-22151-00-00	SEAL, GUARD	1	
11	5X6-22141-01-00	SHAFT, PIVOT	1	
12	90185-16127-00	NUT, SELF-LOCKING	1	
13	90201-160F6-00	WASHER, PLATE	1	
14	23X-22199-00-00	SUPPORT, CHAIN	1	
15	95811-08055-00	BOLT, FLANGE	2	
16	95601-08200-00	NUT, SELF LOCKING	2	
17	95811-06020-00	BOLT, FLANGE	2	
18	90201-06067-00	WASHER, PLATE	2	
19	(39X-2217A-00-00)	ARM, RELAY	1	
20	93317-32034-00	BEARING, CYLINDRICAL	1	
21	93109-20029-00	OIL SEAL		
22	90387-147G6-00	COLLAR	1	
23	90387-147G7-00	COLLAR	1	
24	90109-12701-00	BOLT	1	
25	93700-06M03-00	NIPPLE, GREASE	1	
26	90201-120A5-00	WASHER, PLATE	1	
27	90201-142M6-00	WASHER, PLATE	1	
28	90185-12119-00	NUT, SELF-LOCKING	1	
29	39X-2217F-00-00	ROD, CONNECTING 1	1	


CONTINUED ON NEXT FRAME ➤

REAR ARM

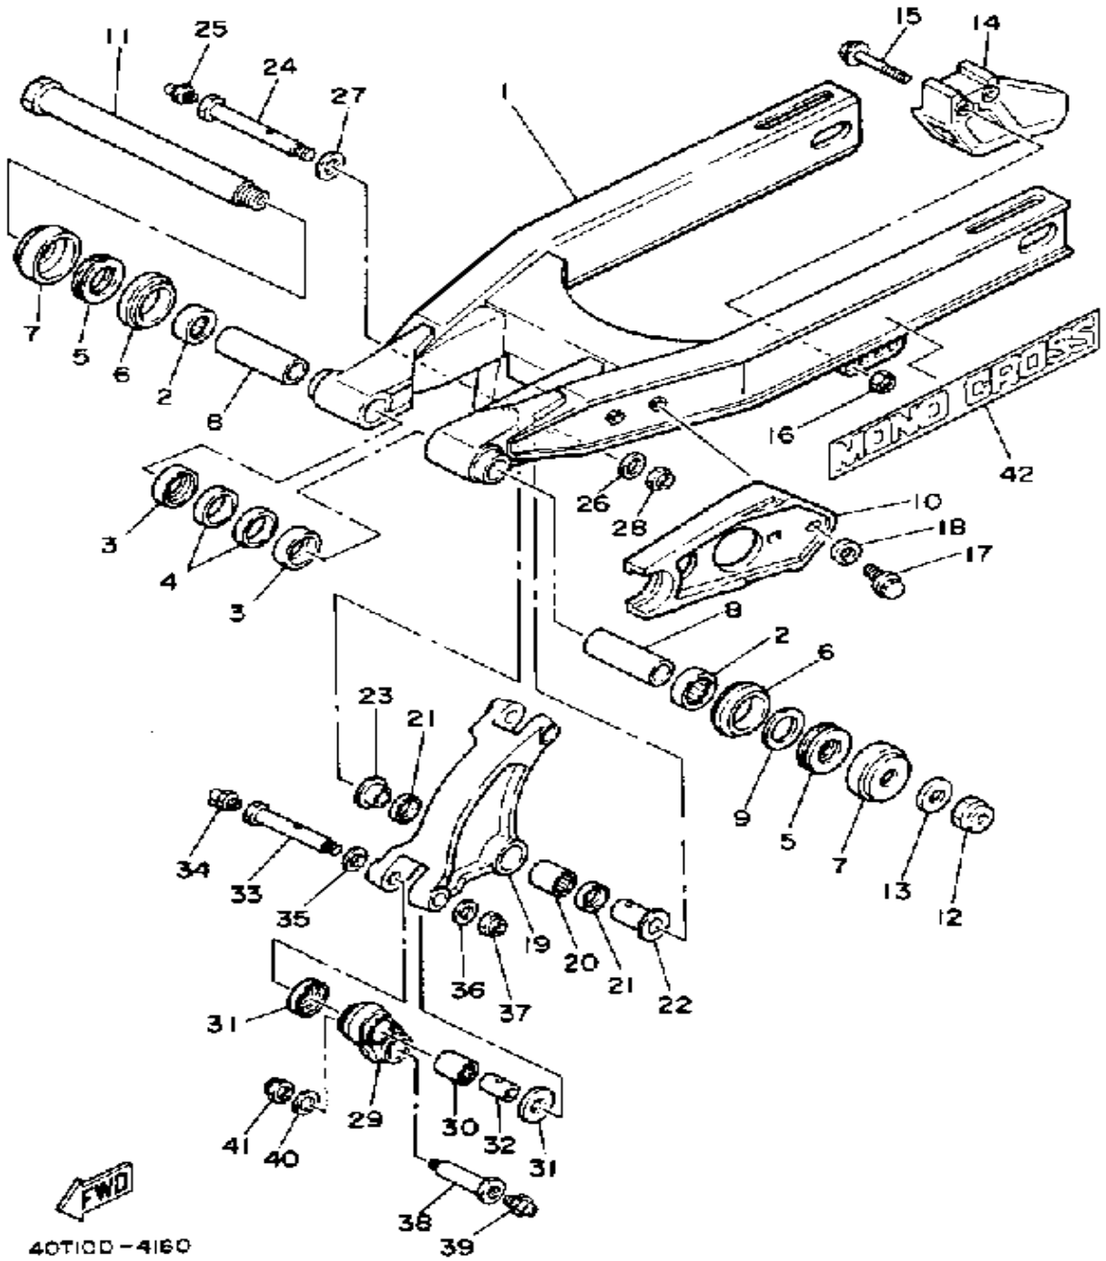

Ref. No.	Part Number	Description	Qty	Remarks
30	93315-31732-00	BEARING, CYLINDRICAL	2	
31	55K-22129-00-00	COVER, THRUST 2	4	
32	90387-121H1-00	COLLAR	2	
33	90109-10702-00	BOLT	1	
34	93700-06005-00	NIPPLE, GREASE	1	
35	90201-120E6-00	WASHER, PLATE	1	
36	90201-100E9-00	WASHER, PLATE	1	
37	90185-10120-00	NUT, SELF-LOCKING	1	
38	90109-10703-00	BOLT	1	
39	93700-06M03-00	NIPPLE, GREASE	1	
40	90201-100F7-00	WASHER, PLATE	1	
41	95611-10100-00	NUT, U	1	
42	5X3-2218A-00-00	EMBLEM, REAR ARM	1	

REAR SUSPENSION

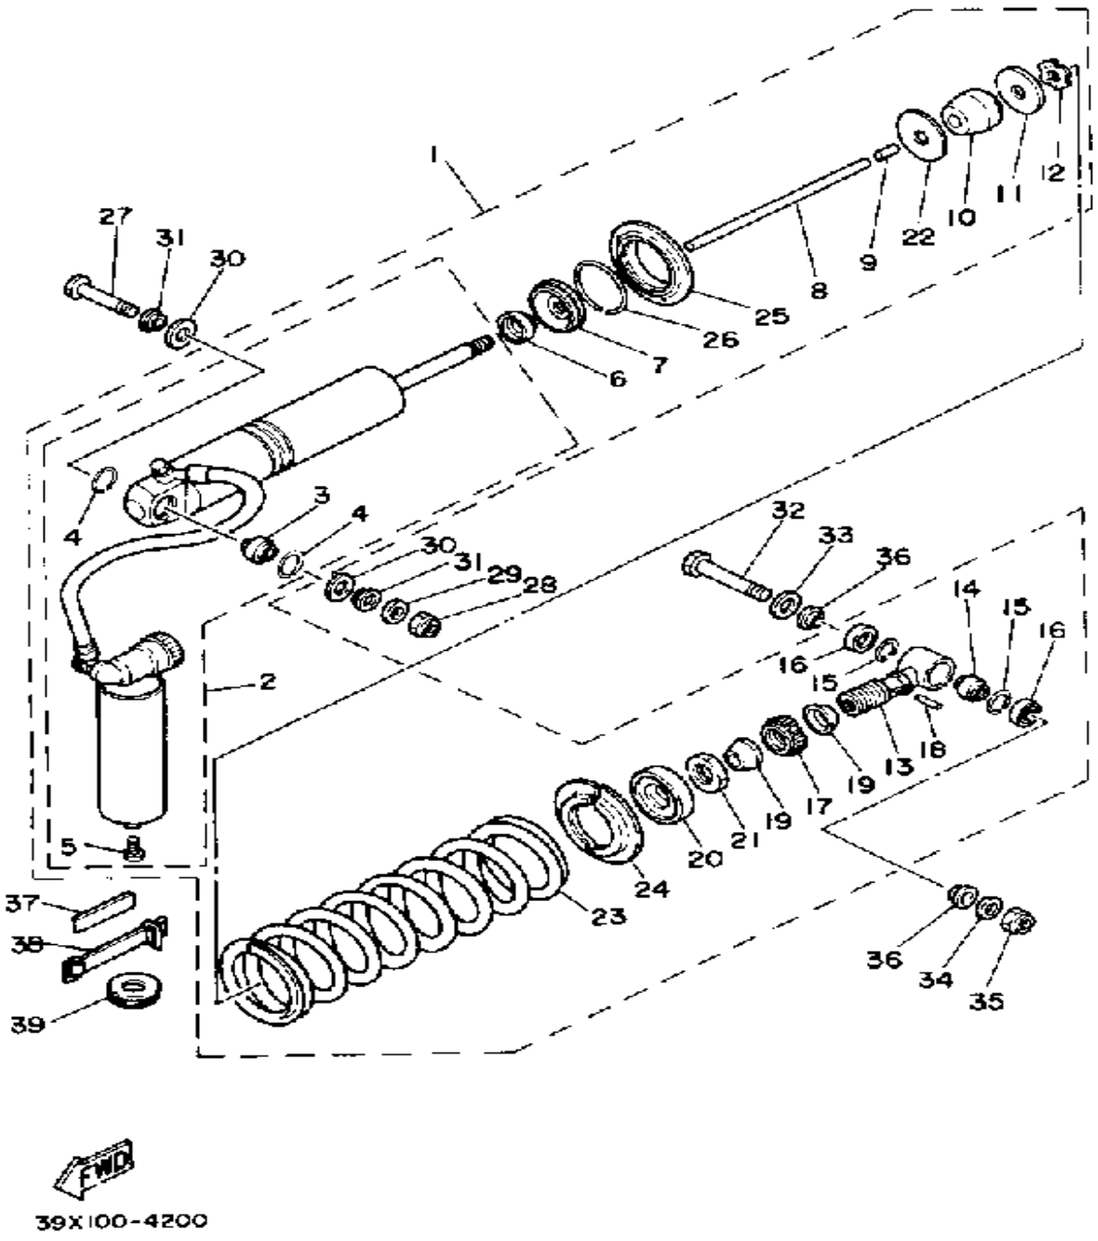


39X100-4200

Ref. No.	Part Number	Description	Qty	Remarks
1	(39X-22210-00-26)	SHK/ABS ASSEMBLY, REAR .	1	
2	43N-22401-00-00	. DAMPER SUB-ASSEMBLY ..	1	
3	93399-99934-00	. . BEARING	1	
4	93440-30113-00	. . CIRCLIP	2	
5	98511-04006-00	. . SCREW, PAN HEAD	1	
6	23X-22475-00-00	. SEAL, DUST 0 1	1	
7	26A-22472-00-00	. CAP, CASE 0 1	1	
8	39X-22489-00-00	. ROD, PUSH	1	
9	93604-21193-00	. PIN, DOWEL	1	
10	39X-22493-00-00	. BUMP, STOP	1	
11	3R4-22228-00-00	. SUPPORT, BUMP STOP	1	
12	90206-14067-00	. WASHER, WAVE	1	
13	39X-22409-00-00	. UPPER BRKT SUB ASSEMBLYSUB ASSEMBLY .	1	
14	93399-99934-00	. BEARING	1	
15	93440-30113-00	. CIRCLIP	2	
16	93104-18077-00	. OIL SEAL	2	
17	5X3-22497-00-00	. NUT, ADJUSTING	1	
18	93604-26132-00	. PIN, DOWEL	1	
19	3R4-22221-01-00	. COVER	2	
20	23X-22213-00-00	. SEAT, SPRING UPPER	1	
21	90170-20320-00	. NUT, HEXAGON	1	
22	(39X-22482-00-00)	STOPPER	1	
23	(39X-22212-10-6W)	SPRING, MXS SOFT	1	
	39X-22212-00-6W	. SPRING, MXS STD	1	
	39X-22212-20-6W	. SPRING, MXS HARD	1	
24	23X-22214-00-00	. GUIDE, SPRING 1	2	
25	23X-22223-00-00	. SEAT, SPRING LOWER	1	
26	93440-51103-00	. CIRCLIP	1	

CONTINUED ON NEXT FRAME ➤


REAR SUSPENSION

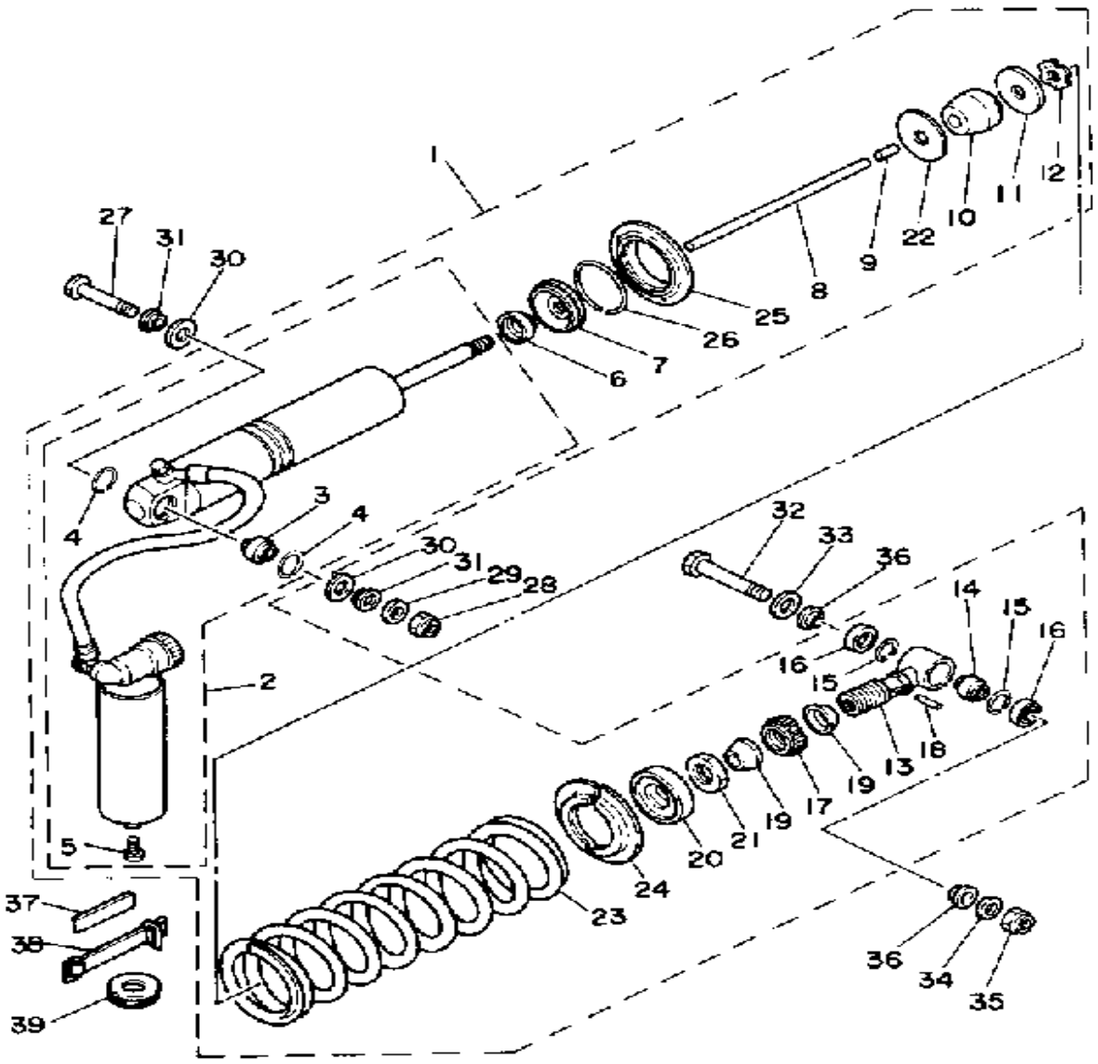

39X100-4200


Ref. No.	Part Number	Description	Qty	Remarks
27	90109-10704-00	BOLT	1	
28	90185-10120-00	NUT, SELF-LOCKING	1	
29	90201-100F7-00	WASHER, PLATE	1	
30	23X-22211-00-00	COVER	2	
31	90387-127G8-00	COLLAR	2	
32	90109-10700-00	BOLT	1	
33	90201-120E6-00	WASHER, PLATE	1	
34	90201-100E9-00	WASHER, PLATE	1	
35	90185-10120-00	NUT, SELF-LOCKING	1	
36	90387-126H8-00	COLLAR	2	
37	24X-22261-00-00	DAMPER, SUB TANK	1	
38	24X-22262-00-00	HOLDER, SUB TANK	1	
39	90480-25381-00	GROMMET	1	

STEERING

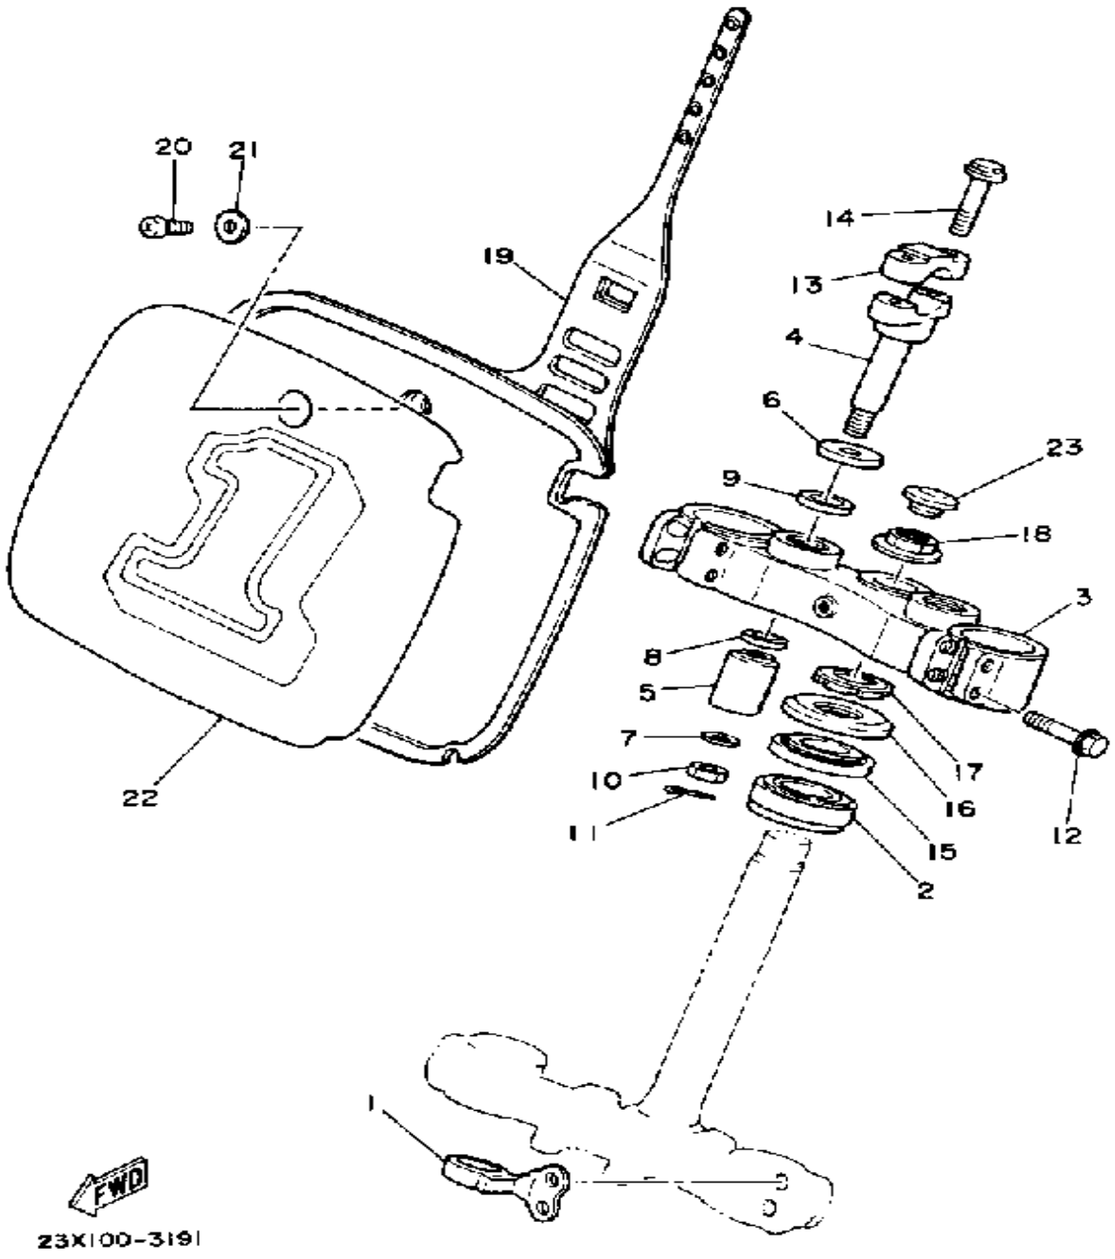

Ref. No.	Part Number	Description	Qty	Remarks
1	3R4-23389-00-00	GUIDE, CABLE	1	
2	93332-00008-00	BEARING	1	
3	40T-W2341-00-98	CROWN, HANDLE	1	
4	1E6-23442-00-00	HOLDER, HANDLE LWR	2	
5	307-22123-00-00	BUSH 1	2	
6	90201-123E8-00	WASHER, PLATE	2	
7	90201-100A1-00	WASHER, PLATE	2	
8	90387-121E8-00	COLLAR	2	
9	90202-14077-00	WASHER, PLATE	2	
10	90185-10037-00	NUT, SELF-LOCKING	2	
11	91490-20020-00	PIN, COTTER (91401-20020-00)	2	
12	90105-08091-00	BOLT, WASHER BASED	4	
13	1E6-23441-00-00	HOLDER, HANDLE UPPER	2	
14	95811-08035-00	BOLT, FLANGE	4	
15	93332-00001-00	BEARING	1	
16	3HE-23416-00-00	COVER, BALL RACE 2	1	
17	90179-25033-00	NUT	1	
18	90179-22330-00	NUT, SPEC"L SHAPE	1	
19	5X6-23485-01-00	PLATE, NUMBER	1	U.R. COMP. YELLOW
20	98503-06014-00	SCREW, PAN HEAD (92501-06015)	1	
21	90201-06571-00	WASHER, PLATE	1	
22	5X6-23395-00-00	EMBLEM	1	
23	34K-2319U-00-00	CAP	1	


FRONT FORK

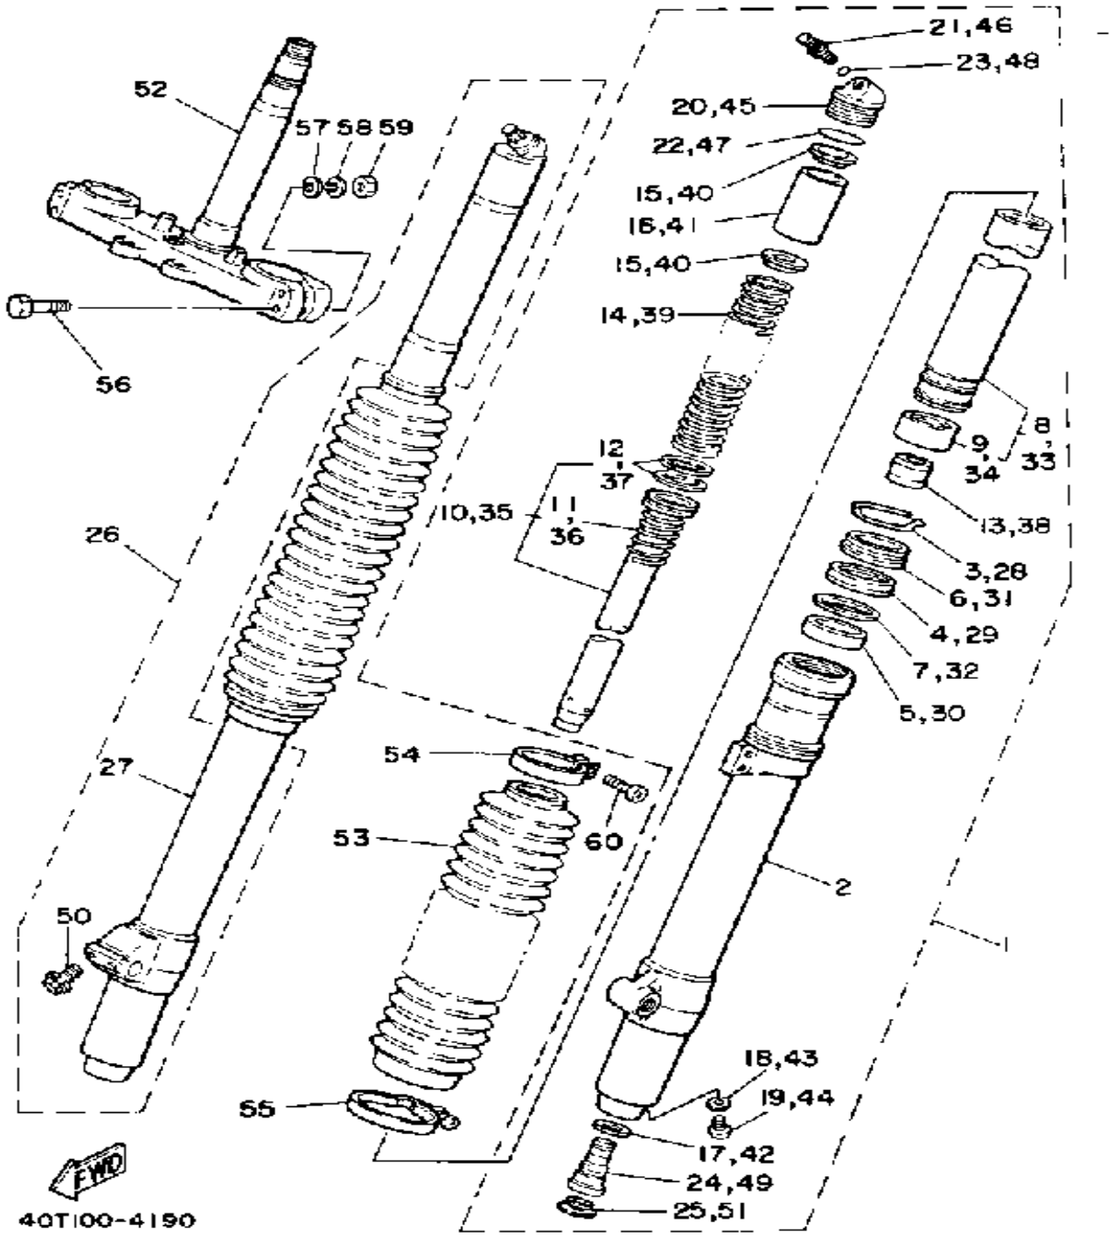

Ref. No.	Part Number	Description	Qty	Remarks
1	(39X-23102-L0-00)	FRONT FORK ASSEMBLY L ..	1	
2	(39X-23126-00-38)	TUBE, OUTER 1	1	
3	4V4-23153-L0-00	. RING, SNAP	1	
4	23X-23145-L0-00	. OIL SEAL	1	
5	3XJ-23125-L0-00	. METAL, SLIDE 1	1	
6	23X-23144-L0-00	. SEAL, DUST	1	
7	4V4-23146-L0-00	. WASHER, OIL SEAL	1	
8	39X-23110-00-00	. INNER TUBE 1COMP. 1	1	
9	4V4-23171-L0-00	. . PISTON, FRONT FORK	1	
10	(39X-23170-20-00)	CYLINDER, FRTFRK	1	
11	5X6-23152-L0-00	. . SPRING, SUB	1	
12	4V4-23157-L0-00	. . RING, PISTON FRTFRK	2	
13	23X-23173-L0-00	. SPINDLE, TAPER	1	
14	39X-23141-00-00	. SPRING, FRTFRK STD (K@0.305)	1	
	39X-23141-10-00	. SPRING, FRTFRK SOFT (K@0.275)	1	
	39X-23141-20-00	. SPRING, FRTFRK HARD (K@0.325)	1	
15	4V4-23142-L0-00	. SEAT, SPRING UPPER	2	
16	39X-23118-00-00	. SPACER	1	
17	23X-23158-L0-00	. GASKET	1	
18	122-23129-00-00	. GASKET, DRAIN PLUG	1	
19	4H7-23119-00-00	. PLUG, DRAIN	1	
20	43M-23111-L0-00	. BOLT, CAP	1	
21	23X-23190-L0-00	. AIR VALVE COMP.	1	
22	4V4-23188-L0-00	. O-RING	1	
23	3J2-23147-00-00	. O-RING	1	
24	39X-2316A-00-00	. VALVE	1	
25	43M-2312G-L0-00	. PLUG	1	

CONTINUED ON NEXT FRAME ➤


FRONT FORK

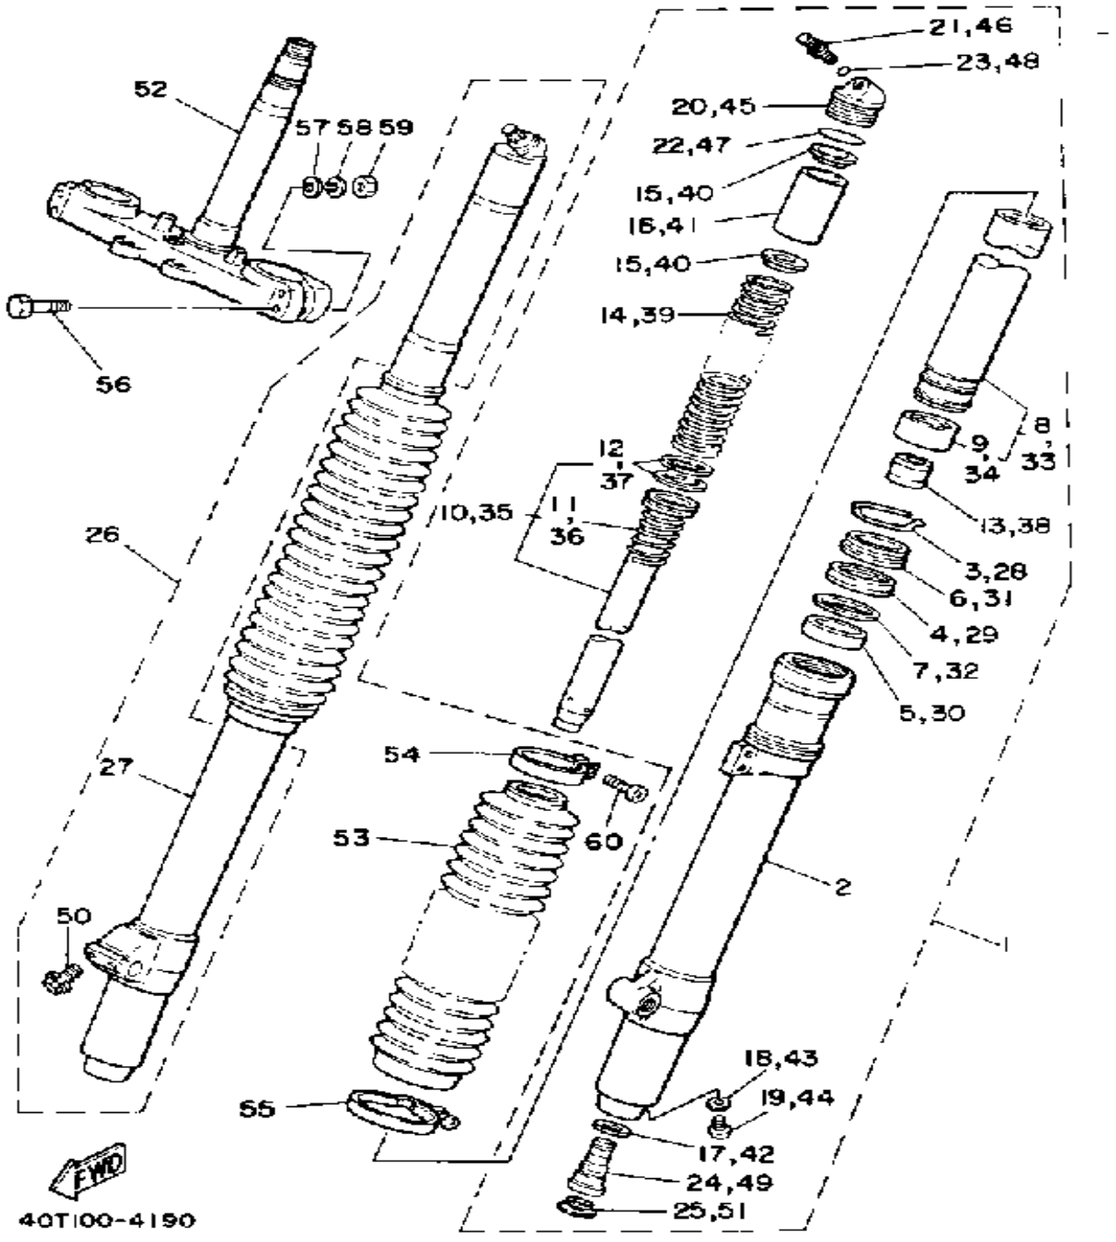

Ref. No.	Part Number	Description	Qty	Remarks
26	(39X-23103-L0-00)	FRONT FORK ASSEMBLY R ..	1	
27	(39X-23136-00-38)	TUBE, OUTER 2	1	
28	4V4-23153-L0-00	. RING, SNAP	1	
29	23X-23145-L0-00	. OIL SEAL	1	
30	3XJ-23125-L0-00	. METAL, SLIDE 1	1	
31	23X-23144-L0-00	. SEAL, DUST	1	
32	4V4-23146-L0-00	. WASHER, OIL SEAL	1	
33	39X-23110-00-00	. INNER TUBE 1COMP. 1	1	
34	4V4-23171-L0-00	. . PISTON, FRONT FORK	1	
35	(39X-23170-20-00)	CYLINDER, FRTFRK	1	
36	5X6-23152-L0-00	. . SPRING, SUB	1	
37	4V4-23157-L0-00	. . RING, PISTON FRTFRK	2	
38	23X-23173-L0-00	. SPINDLE, TAPER	1	
39	39X-23141-00-00	. SPRING, FRTFRK STD (K@0.305)	1	
	39X-23141-10-00	. SPRING, FRTFRK SOFT (K@0.275)	1	
	39X-23141-20-00	SPRING, FRTFRK HARD (K@0.325)	1	
40	4V4-23142-L0-00	. SEAT, SPRING UPPER	2	
41	39X-23118-00-00	. SPACER	1	
42	23X-23158-L0-00	. GASKET	1	
43	122-23129-00-00	. GASKET, DRAIN PLUG	1	
44	4H7-23119-00-00	. PLUG, DRAIN	1	
45	43M-23111-L0-00	. BOLT, CAP	1	
46	23X-23190-L0-00	. AIR VALVE COMP.	1	
47	4V4-23188-L0-00	. O-RING	1	
48	3J2-23147-00-00	. O-RING	1	
49	39X-2316A-00-00	. VALVE	1	
50	5X6-23181-L0-00	. BOLT, HEXAGON SOCKET HEAD	2	


CONTINUED ON NEXT FRAME ➤

FRONT FORK

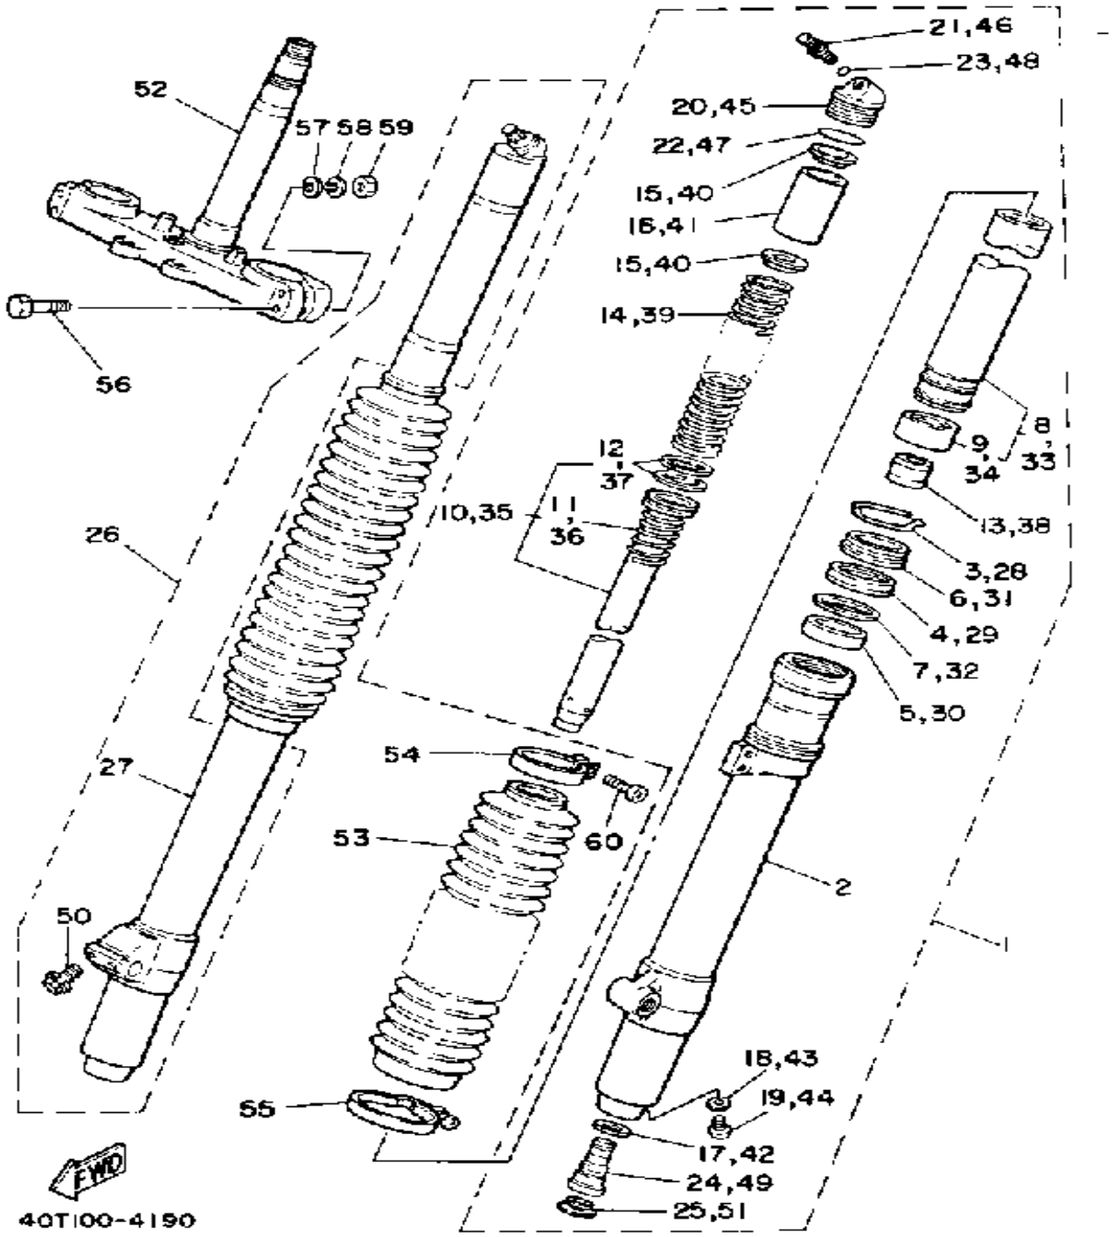

Ref. No.	Part Number	Description	Qty	Remarks
51	43M-2312G-L0-00	. PLUG	1	
52	39X-23340-00-00	UNDER BRACKET	1	
53	39X-23191-00-00	BOOT, FRONT FORK	2	
54	43M-23192-L0-00	BAND	2	
55	3LD-23489-00-00	BAND	2	
56	90101-08312-00	BOLT	4	
57	92901-08600-00	WASHER, PLATE	4	
58	92990-08100-00	WASHER, SPRING	4	
59	95333-08600-00	NUT	4	
60	98506-04018-00	SCREW, PAN HEAD	2	


FUEL TANK

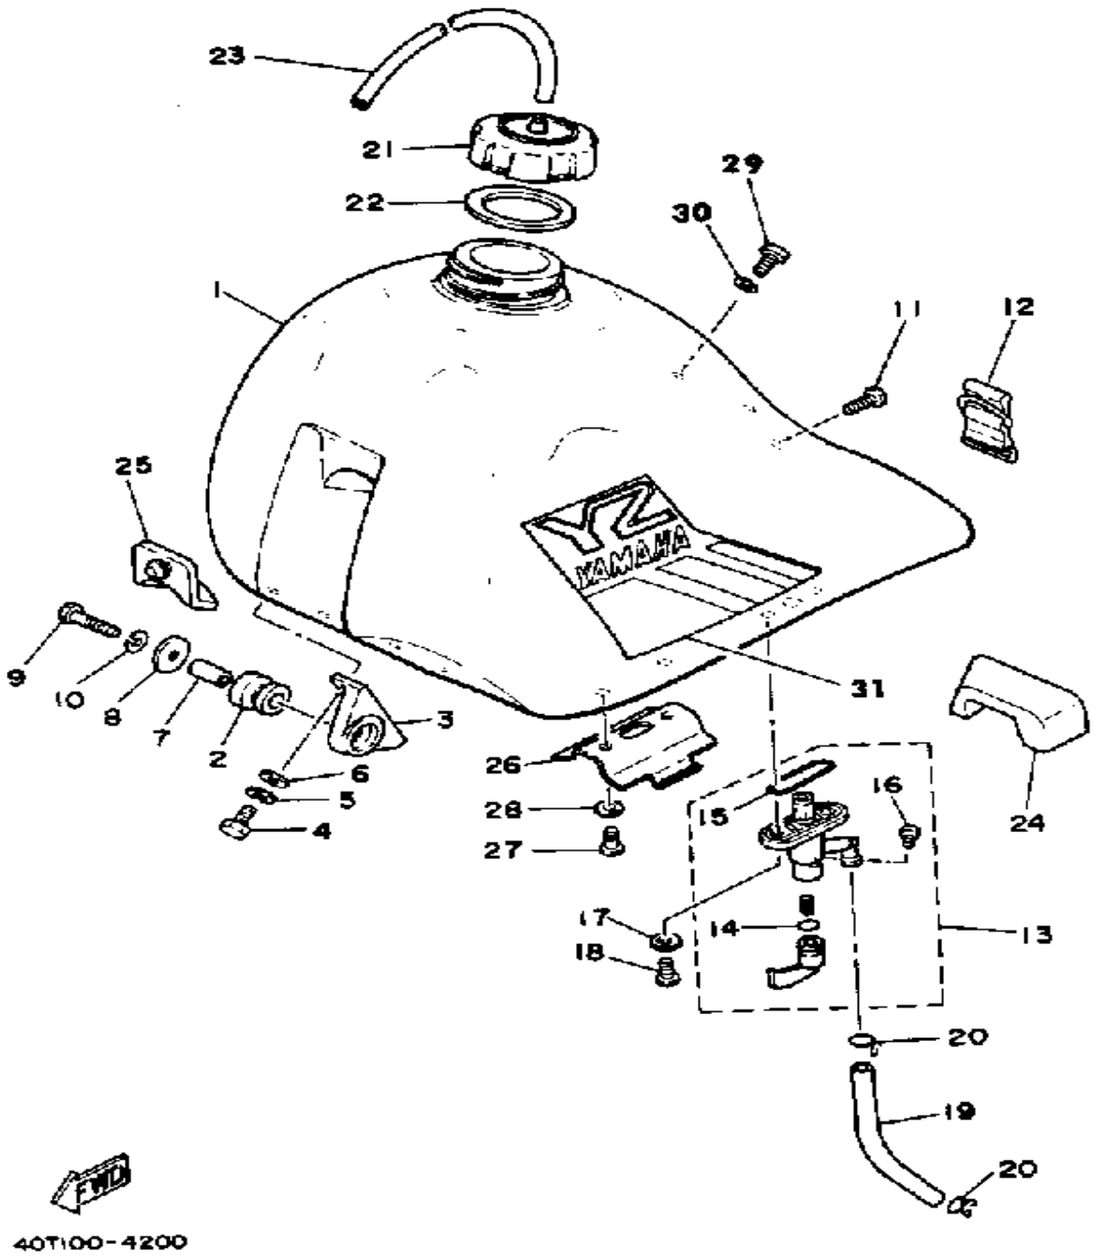

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-24110-00-00	FUEL TANK	1	
2	90480-18354-00	GROMMET	2	
3	24X-24144-00-00	HOLDER, DAMPER	2	
4	97013-06012-00	BOLT	4	
5	92995-06100-00	WASHER, SPRING	4	
6	92901-06600-00	WASHER	4	
7	90387-06387-00	COLLAR	2	
8	90201-06407-00	WASHER, PLATE	2	
9	97021-06030-00	BOLT	2	
10	92995-06100-00	WASHER, SPRING	2	
11	98903-06018-00	SCREW, BIND	1	
12	59V-24173-00-00	BAND, TNK FITTING 1	1	
13	2K5-24500-00-00	FUEL COCK ASSEMBLY 1	1	
14	214-24512-00-00	. GASKET	1	
15	1A0-24512-00-00	. GASKET	1	
16	619-24535-00-00	. SCREW, LVR FITTING	1	
17	90202-05187-00	WASHER, PLATE	2	
18	90149-06011-00	SCREW	2	
19	90445-11356-00	HOSE	1	
20	90467-10008-00	CLIP	2	
21	5X7-24611-01-00	BODY, CAP (5X7-24611-00)	1	
22	5X7-24612-00-00	GASKET, CAP	1	
23	90445-09252-00	HOSE	1	
24	39X-24181-00-00	DAMPER, LOCATING 1	1	
25	23X-24184-00-00	DAMPER, LOCATING 4	1	
26	5X6-2415F-01-00	STAY, CHAMBER	1	
27	98580-06010-00	SCREW, PAN HEAD	2	
28	92901-06600-00	WASHER	2	
29	98580-06012-00	SCREW, PAN HEAD (92501-06012-00)	2	


CONTINUED ON NEXT FRAME ➤

FUEL TANK

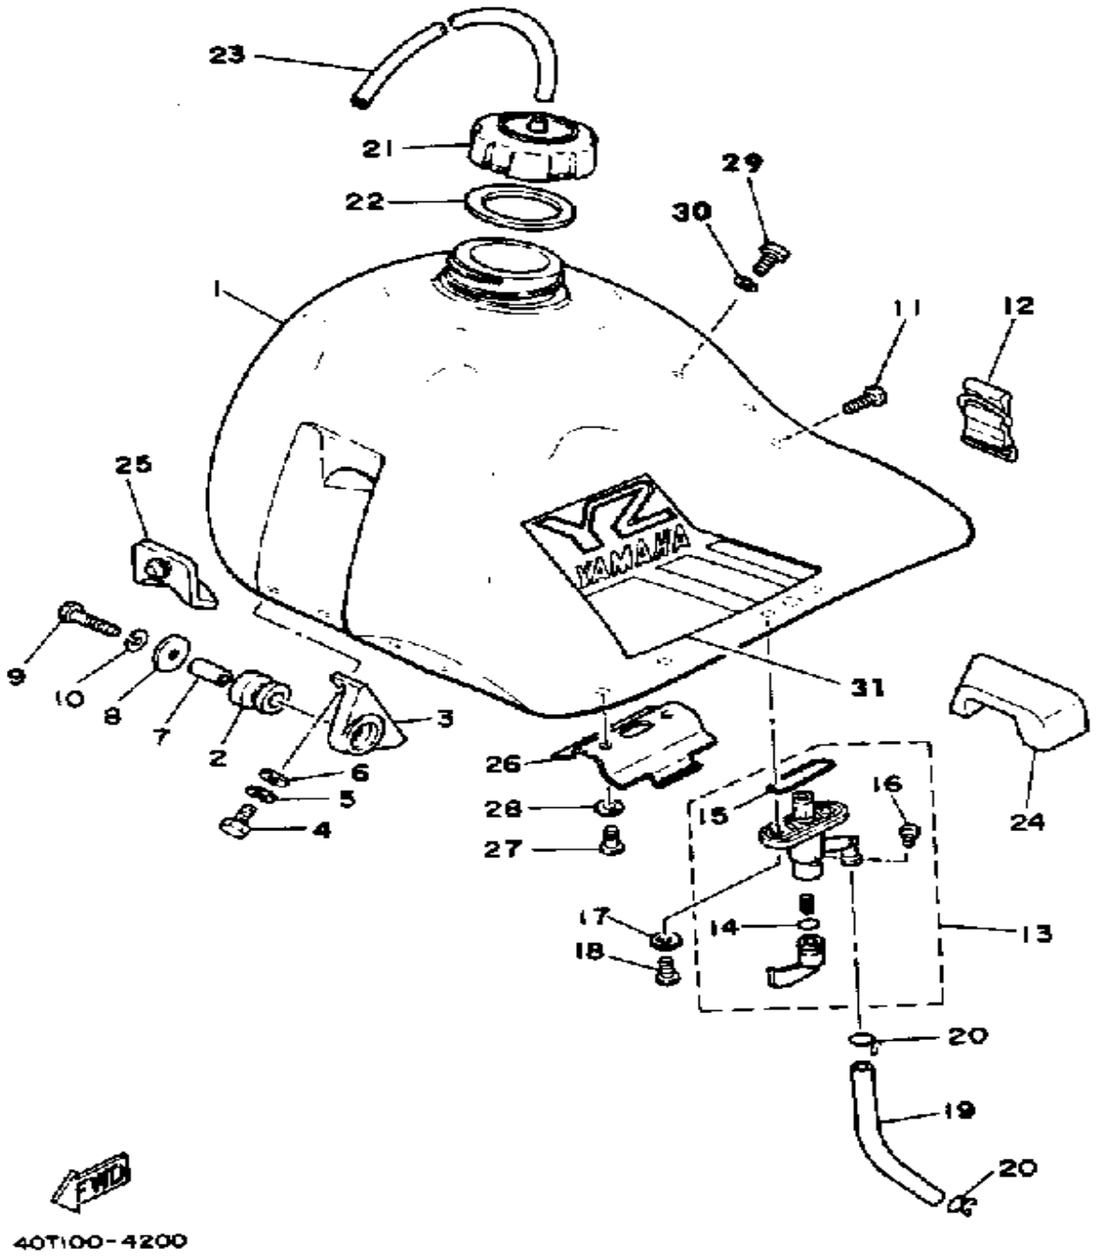

Ref. No.	Part Number	Description	Qty	Remarks
30	92901-06600-00	WASHER	2	
31	(40T-24250-00-00)	GRAPHIC SET	1	U.R. FOR CYP

SEAT

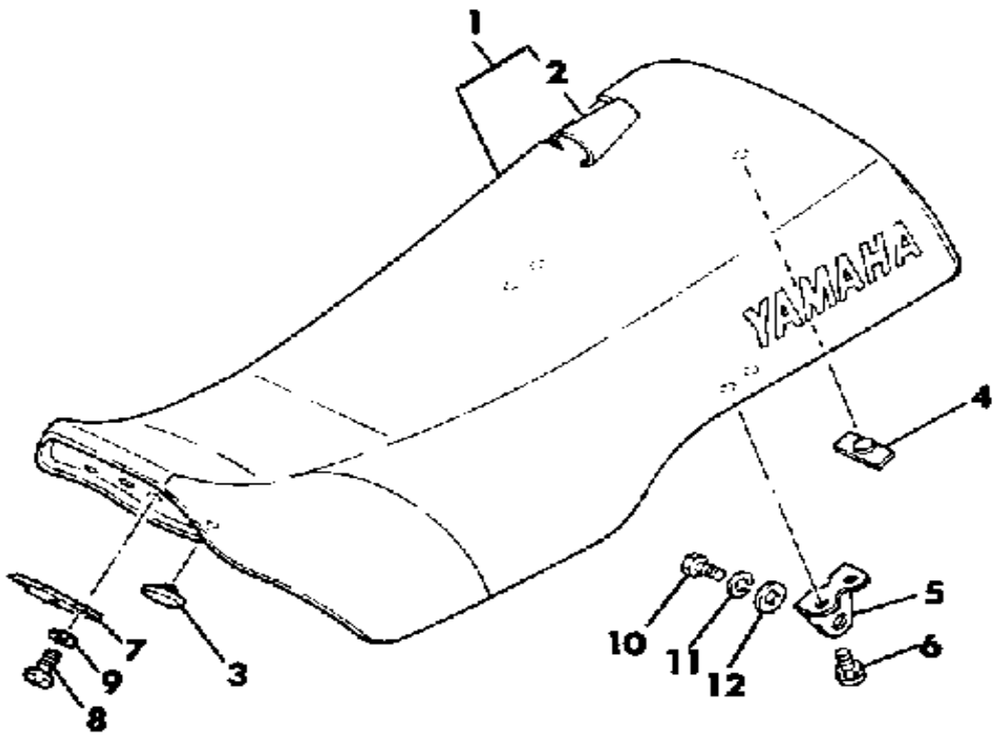




40T100-4210

Ref. No.	Part Number	Description	Qty	Remarks
1	39X-W2473-20-00	SEMI-DBL-SEAT ASSEMBLYASSY	1	
2	23X-24731-10-00	. COVER, DOUBLE SEAT	1	
3	22W-24741-00-00	PAD, SEAT	2	
4	509-24724-00-00	DAMPER, SEAT	1	
5	39W-24738-00-00	BRACKET, SEAT	2	
6	95811-06012-00	BOLT, FLANGE (95801-06012)	4	
7	5X6-24748-10-00	BRACKET, SEAT	1	
8	98580-06012-00	SCREW, PAN HEAD (92501-06012-00)	2	
9	92901-06600-00	WASHER	2	
10	97313-08018-00	BOLT, HEXAGON	2	
11	92990-08100-00	WASHER, SPRING	2	
12	90201-087F0-00	WASHER, PLATE	2	


FRONT WHEEL

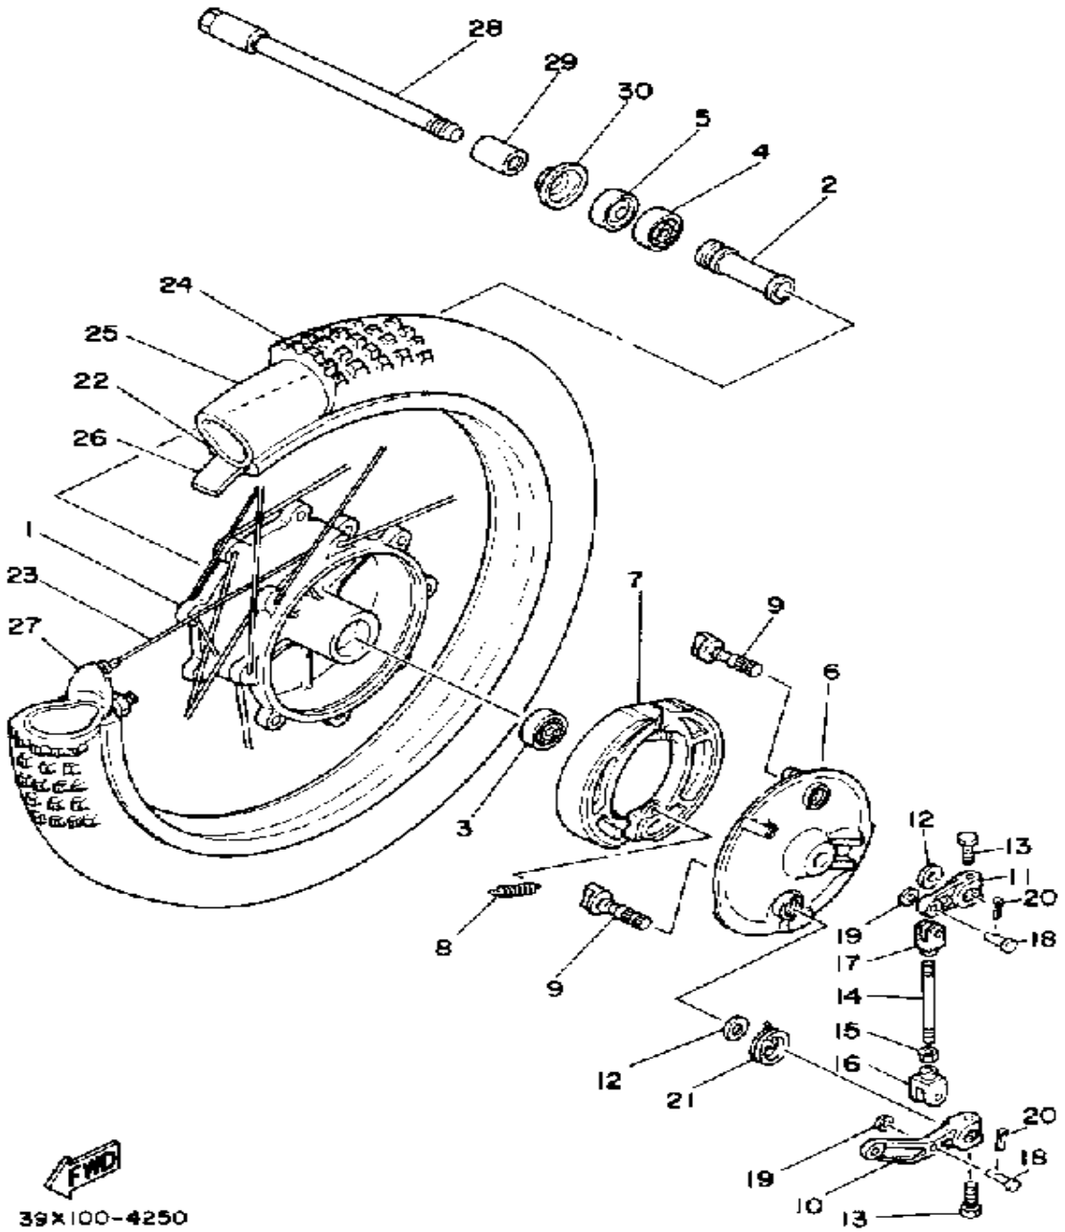


Ref. No.	Part Number	Description	Qty	Remarks
1	38V-25111-00-98	HUB, FRONT	1	
2	90560-15227-00	SPACER	1	
3	93306-20226-00	BEARING	1	
4	93306-20209-00	BEARING	1	
5	93106-20021-00	OIL SEAL, DD-TYPE	1	
6	5X6-25121-00-98	PLATE, BRAKE SHOE	1	LOW GLOSS BLK
7	3R5-W2535-00-00	BRAKESHOE SET-2PCS	2	
8	90506-17328-00	SPRING, TENSION	2	
9	23X-25151-00-00	CAMSHAFT	2	
10	99999-02061-00	LEVER, CAMSHAFT	1	
11	99999-02067-00	LEVER, CAMSHAFT 2	1	
12	137-25159-00-00	SEAL, CAMSHAFT	2	
13	90101-06291-00	BOLT	2	
14	3R5-25161-00-00	ROD, CONNECTING	1	
15	95380-06700-00	NUT	1	
16	3R5-25163-00-00	END, ROD 1	1	
17	3R5-25164-00-00	END, ROD 2	1	
18	90240-06006-00	PIN, CLEVIS	2	
19	92990-06200-00	WASHER, PLAIN	2	
20	91490-20020-00	PIN, COTTER (91401-20020-00)	2	
21	90508-20425-00	SPRING, TORSION	1	
22	94416-21382-00	RIM 1.60X 1	1	
23	39W-25104-00-00	SPOKE SET, FRONT	1	
24	94110-210F9-00	100/90-21 M23 (TT)	1	BRIDGESTONE
25	94227-21123-00	TUBE (80/100-21 TR4 BTL)	1	BRIDGESTONE
26	94330-21084-00	BAND, RIM (70-80/100-21)	1	BRIDGESTONE
27	4V5-25194-00-00	SPACER, BEAD	1	
28	3R4-25181-01-00	AXLE, WHEEL	1	
29	90387-152J3-00	COLLAR	1	

CONTINUED ON NEXT FRAME ➤

FRONT WHEEL

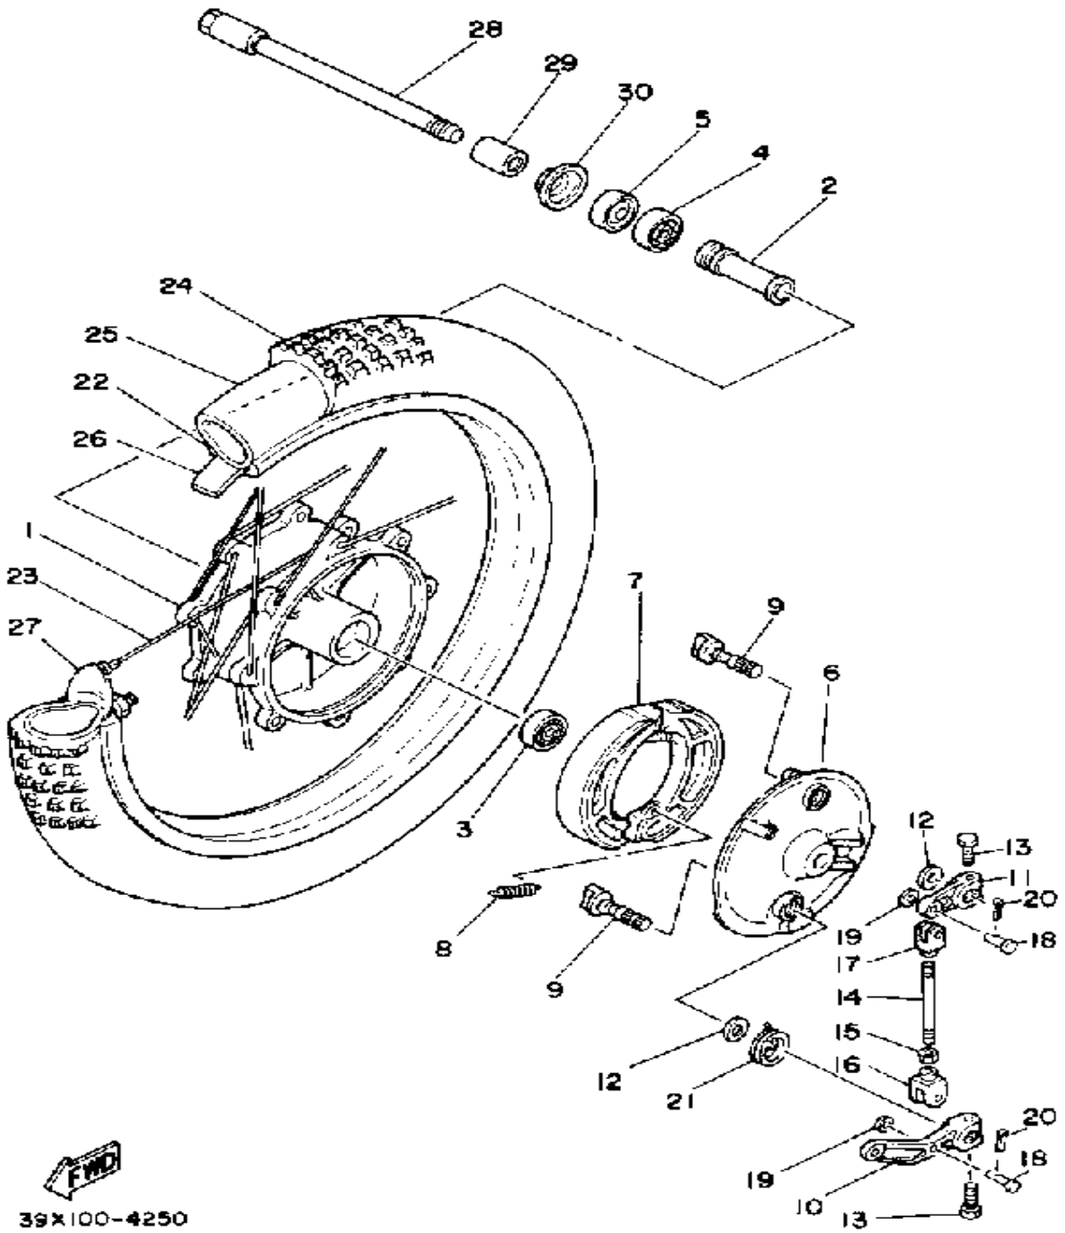

Ref. No.	Part Number	Description	Qty	Remarks
30	322-25118-00-00	COVER, HUB DUST	1	

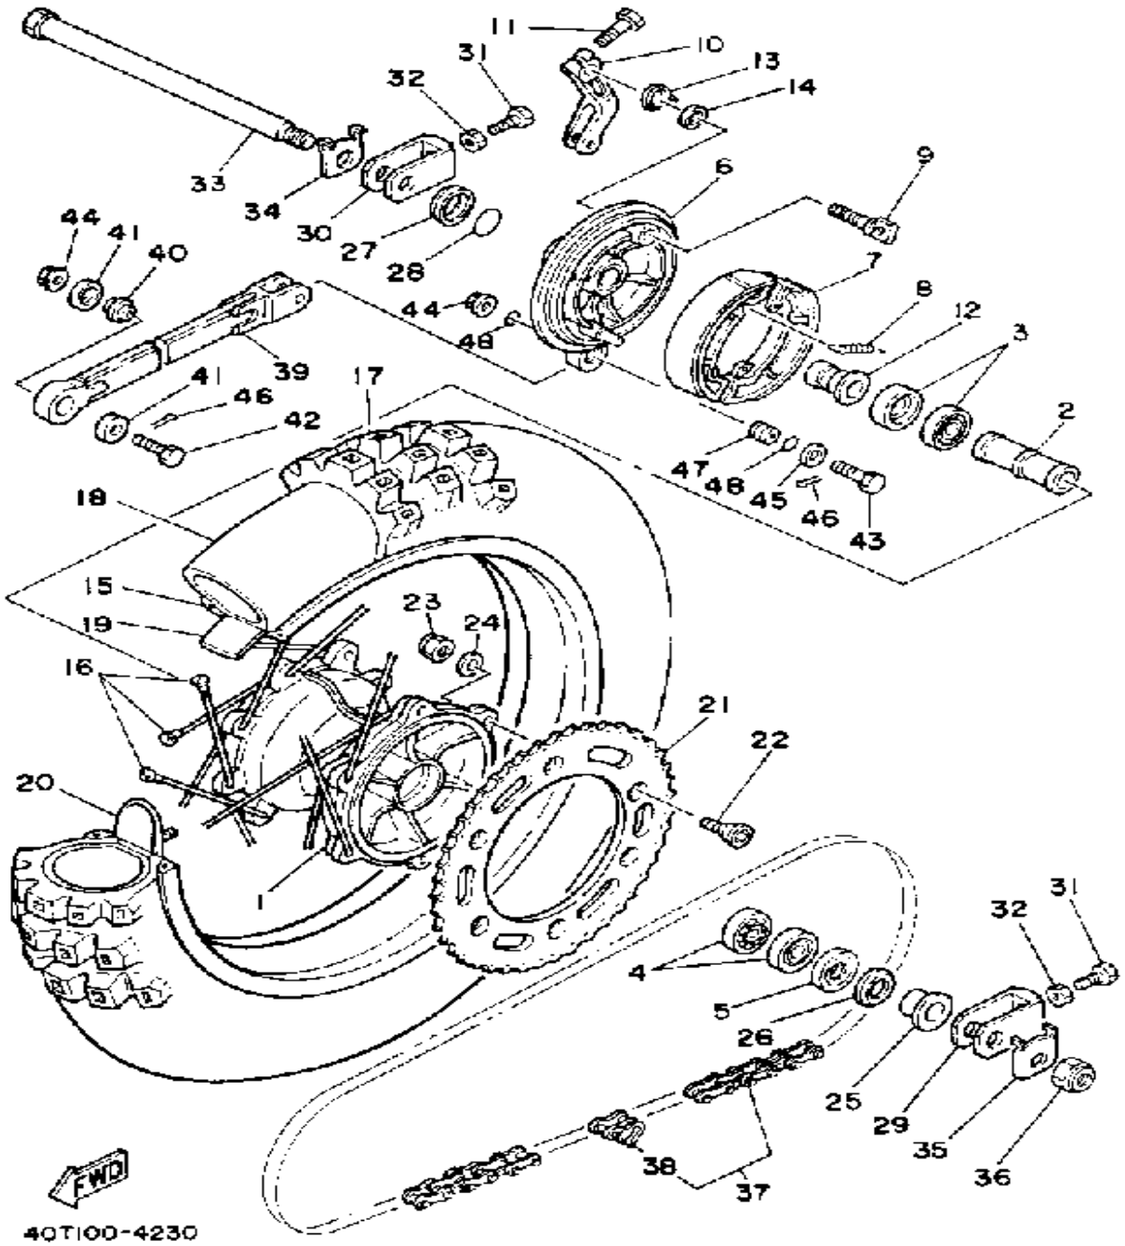


REAR WHEEL

Ref. No.	Part Number	Description	Qty	Remarks
1	40T-25311-00-98	HUB, REAR	1	
2	90560-20226-00	SPACER	1	
3	93306-00418-00	BEARING	2	
4	93306-00406-00	BEARING (B6004Z)	1	
5	93106-28023-00	OIL SEAL	1	
6	40T-25321-00-98	PLATE, BRAKE SHOE	1	
7	40T-W2536-00-00	BRAKESHOE SET-2PCS	2	
8	90507-20002-00	SPRING, TENSION	2	
9	1E6-25151-00-00	CAMSHAFT	1	
10	5X6-25355-00-00	LEVER, CAMSHAFT	1	
11	90101-06291-00	BOLT	1	
12	90387-200H1-00	COLLAR	1	
13	90508-29641-00	SPRING, TORSION	1	
14	93109-14021-00	OIL SEAL, SDO-TYPE	1	
15	94425-18385-00	RIM 2.50X18 (2.50-18)	1	
16	39X-25304-00-00	SPOKE SET, REARREAR	1	
17	(94114-181F0-00)	140/90-18 M22 (TT)	1	
18	(94251-18150-00)	TUBE	1	BRIDGESTONE
19	94340-18086-00	BAND, RIM (4.00-18)	1	BRIDGESTONE
20	40T-25394-00-00	SPACER, BEAD	2	
21	3R4-25444-01-XX	SPROCKET, DRIVN 44T	1	ALTERNATE PART
	3R4-25445-01-XX	SPROCKET, DRIVEN (45T) (39W-25445-01-00)	1	ALTERNATE PART
	3R4-25446-01-XX	SPROCKET, DRIVN 46T	1	STD
	3R4-25448-01-XX	SPROCKET, DRIVN 48T	1	ALTERNATE PART
	3R4-25450-01-XX	SPROCKET, DRIVN 50T	1	ALTERNATE PART
	3R4-25452-01-XX	SPROCKET, DRIVN 52T	1	ALTERNATE PART
22	90109-08706-00	BOLT	6	
23	95611-08100-00	NUT, U	6	

CONTINUED ON NEXT FRAME ➤


REAR WHEEL

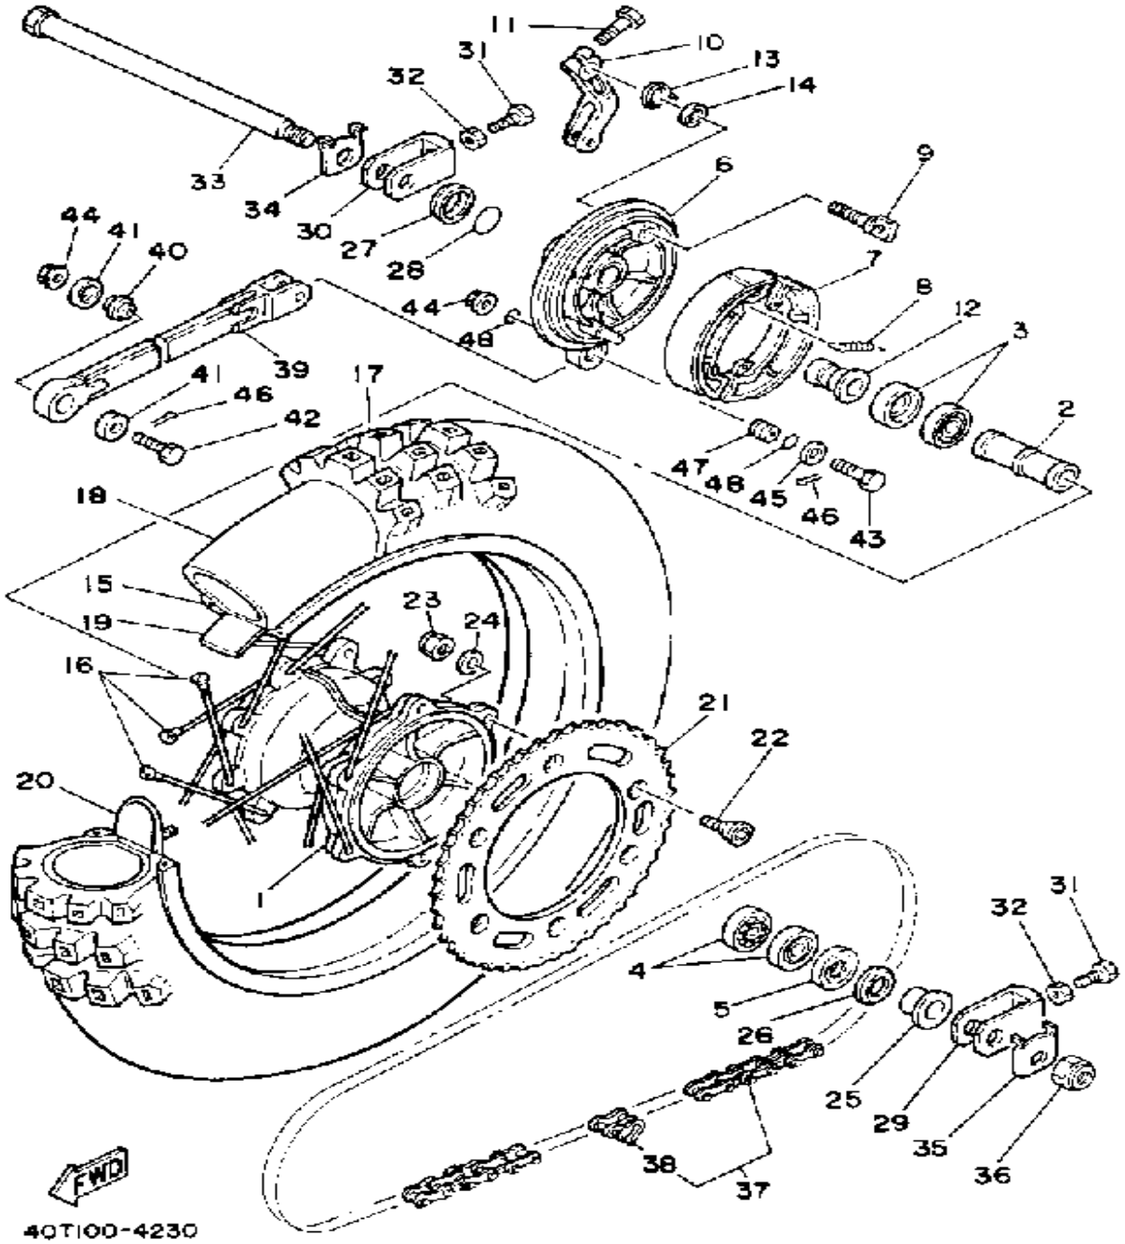

40T100-4230


Ref. No.	Part Number	Description	Qty	Remarks
24	90201-081A6-00	WASHER, PLATE	6	
25	90387-200H2-00	COLLAR	1	
26	4V4-25367-00-00	COVER, HUB DUST	1	
27	23X-25327-00-00	COVER, PLATE	1	
28	93210-31114-00	O-RING	1	
29	39X-25388-00-00	PULLER, CHAIN 1CHAIN 1	1	
30	40T-25389-00-00	PULLER, CHAIN 2	1	
31	90101-08699-00	BOLT	2	
32	95303-08700-00	NUT	2	
33	23X-25381-00-00	AXLE, WHEEL	1	
34	90209-21243-00	WASHER, PLATE (90201-210G3)	1	
35	90209-18244-00	WASHER, PLATE (90201-180G2)	1	
36	90185-18104-00	NUT, SELF-LOCKING	1	
37	94585-20112-00	520DS-112L112L)	1	
38	94685-20001-00	. JOINT CHAIN	1	
40	93399-99910-00	BEARING	1	
41	93112-19006-00	OIL SEAL	2	
42	90102-08034-00	BOLT, WITH HOLE	1	
43	90109-08370-00	BOLT	1	
44	95601-08200-00	NUT, SELF LOCKING	2	
45	92901-08600-00	WASHER, PLATE	1	
46	91490-20020-00	PIN, COTTER (91401-20020-00)	2	
47	90387-083F0-00	COLLAR	1	
48	93210-14167-00	O-RING	2	
93	23X-25371-00-00	BAR, TENSION	1	

STEERING HANDLE - CABLE

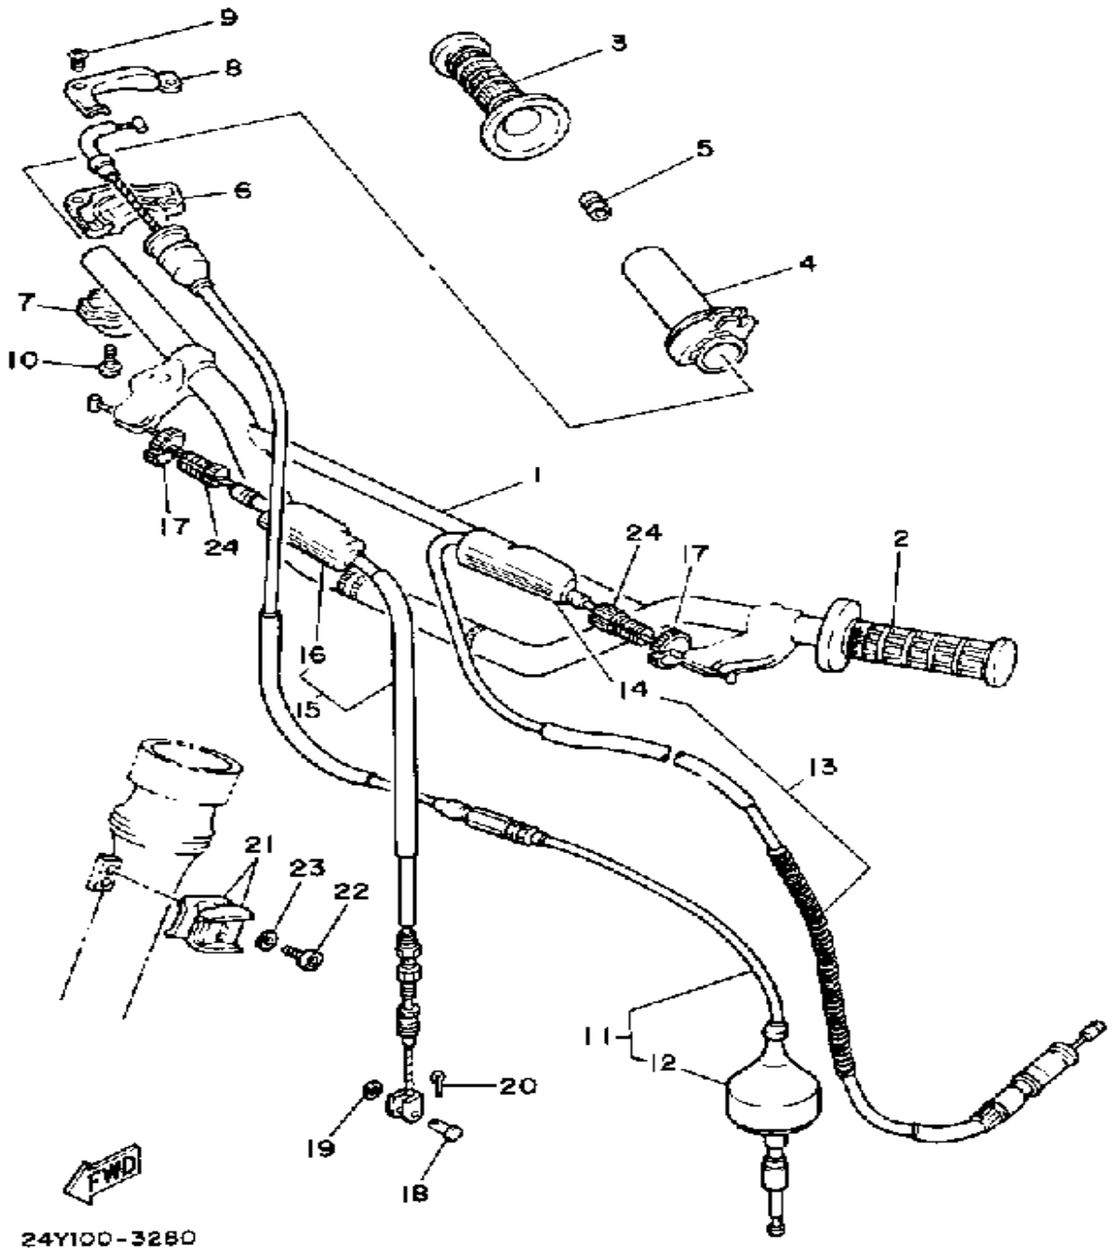


Ref. No.	Part Number	Description	Qty	Remarks
1	23X-26111-00-00	HANDLEBAR	1	
2	4V4-26241-01-00	GRIP LH (4V4-26341-00) (L.H.)	1	
3	1LX-26242-01-00	GRIP (RIGHT)	1	
4	23X-26243-00-00	TUBE, THRTL GUIDE	1	
5	90338-12192-00	PLUG	1	
6	23X-26281-00-00	CAP, GRIP UPPER	1	
7	431-26282-01-98	CAP, GRIP LOWER	1	LOW GLOSS BLK
8	5X2-2628H-01-00	CAP, WIRE	1	
9	98706-04012-00	SCREW, FLAT HEAD	2	
10	98586-05016-00	SCREW, PAN HEAD	2	
11	40T-26311-00-00	CABLE, THROTTLE 1	1	
12	510-26329-00-00	. CAP, RUBBER	1	
13	40T-26335-00-00	CABLE, CLUTCH	1	
14	382-26372-01-00	. COVER, HANDLE LEVER	1	
15	5X6-26341-00-00	CABLE, BRAKE	1	
16	382-26372-01-00	. COVER, HANDLE LEVER	1	
17	90179-08401-00	NUT	2	
18	91701-06018-00	PIN, CLEVIS	1	
19	92990-06200-00	WASHER, PLAIN	1	
20	91490-20020-00	PIN, COTTER (91401-20020-00)	1	
21	90465-16258-00	CLAMP	2	
22	91311-06016-00	BOLT	2	
23	92901-06600-00	WASHER		
24	90123-08090-00	BOLT	2	

STAND - FOOTREST

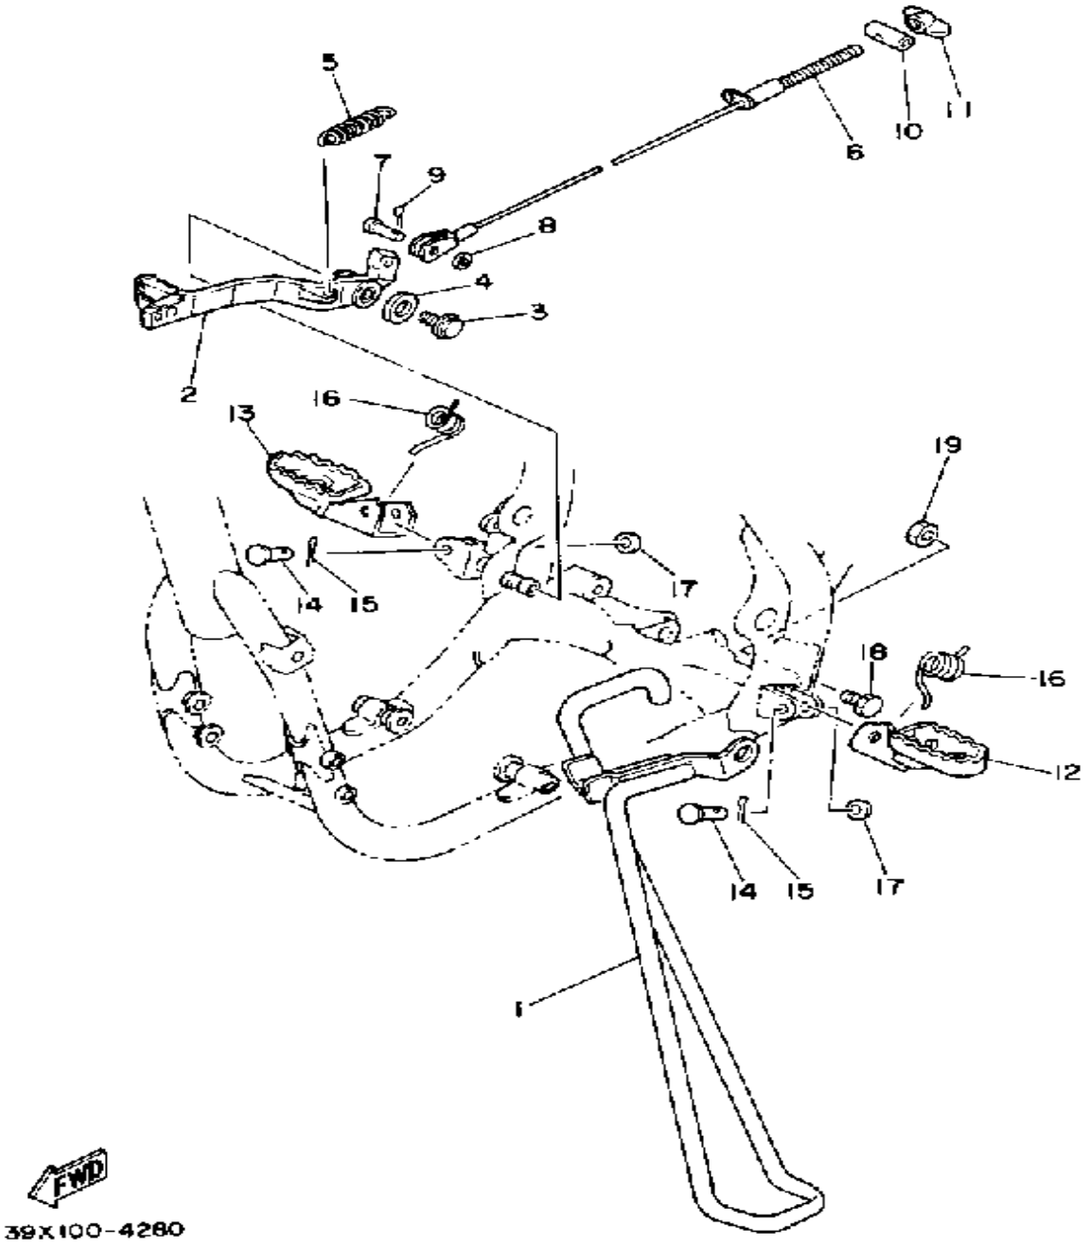

39X100-4280


Ref. No.	Part Number	Description	Qty	Remarks
1	39X-27311-00-00	STAND, SIDE	1	
2	39X-27200-00-00	PEDAL, BRAKE	2	
3	95811-08016-00	BOLT, FLANGE	1	
4	90201-08730-00	WASHER, PLATE	1	
5	90506-18365-00	SPRING, TENSION	1	
6	40T-26351-00-00	CABLE, BRAKE	1	
7	91790-08021-00	PIN, CLEVIS	1	
8	92901-08600-00	WASHER, PLATE	1	
9	91401-25020-00	PIN, COTTER	1	
10	90249-12008-00	PIN	1	
11	90175-06016-00	NUT, WING	1	
12	23X-27411-02-00	FOOTREST 1	1	
13	23X-27421-03-00	FOOTREST 2	1	
14	90240-10101-00	PIN, CLEVIS	2	
15	91401-25020-00	PIN, COTTER	2	
16	90508-20583-00	SPRING, TORSION	2	
17	90201-10119-00	WASHER, PLATE	2	
18	90101-06586-00	BOLT	1	
19	95380-06700-00	NUT	1	

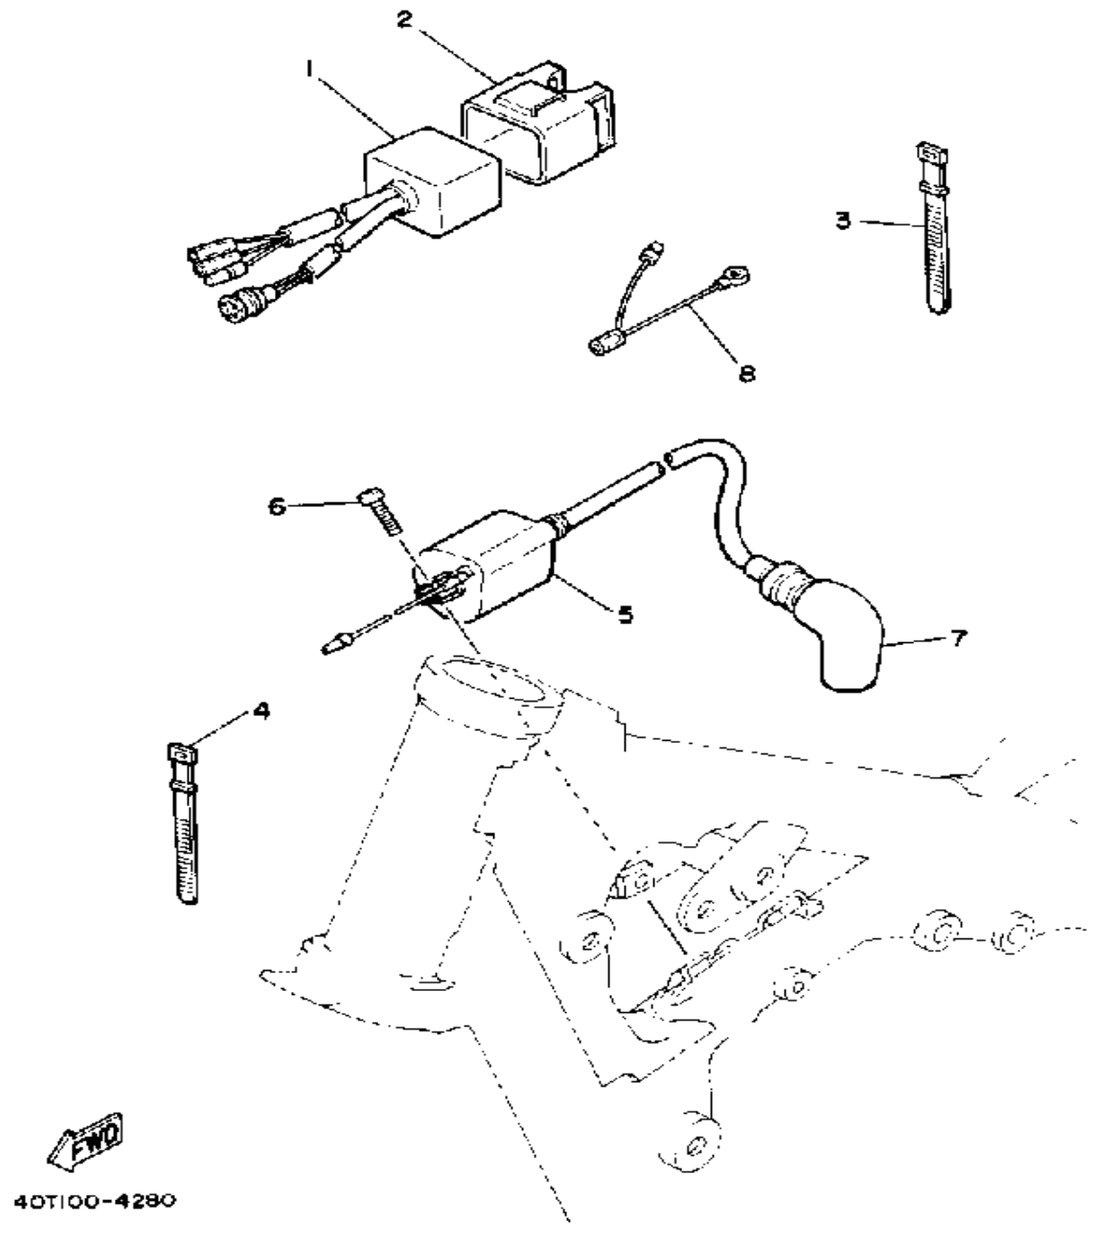

ELECTRICAL 1

Ref. No.	Part Number	Description	Qty	Remarks
1	23X-85540-20-00	CDI UNIT ASSEMBLY	1	
2	2A7-85546-00-00	BAND	1	
3	25G-83936-01-00	BAND, SWITCH CORD	1	
4	437-83936-11-00	BAND, SWITCH CORD	3	
5	43G-82310-40-00	IGNITION COIL ASSEMBLY . . .	1	
6	98503-06014-00	SCREW, PAN HEAD (92501-06015)	2	
7	81E-82370-20-00	PLUG CAP ASSEMBLY	1	U.R.
	81E-82370-20-00	PLUG CAP ASSEMBLY	1	U.R.W/NOISE SUPPRESSOR
8	5X1-82519-01-00	WIRE, EARTH LEAD	1	

HANDLE SWITCH - LEVER

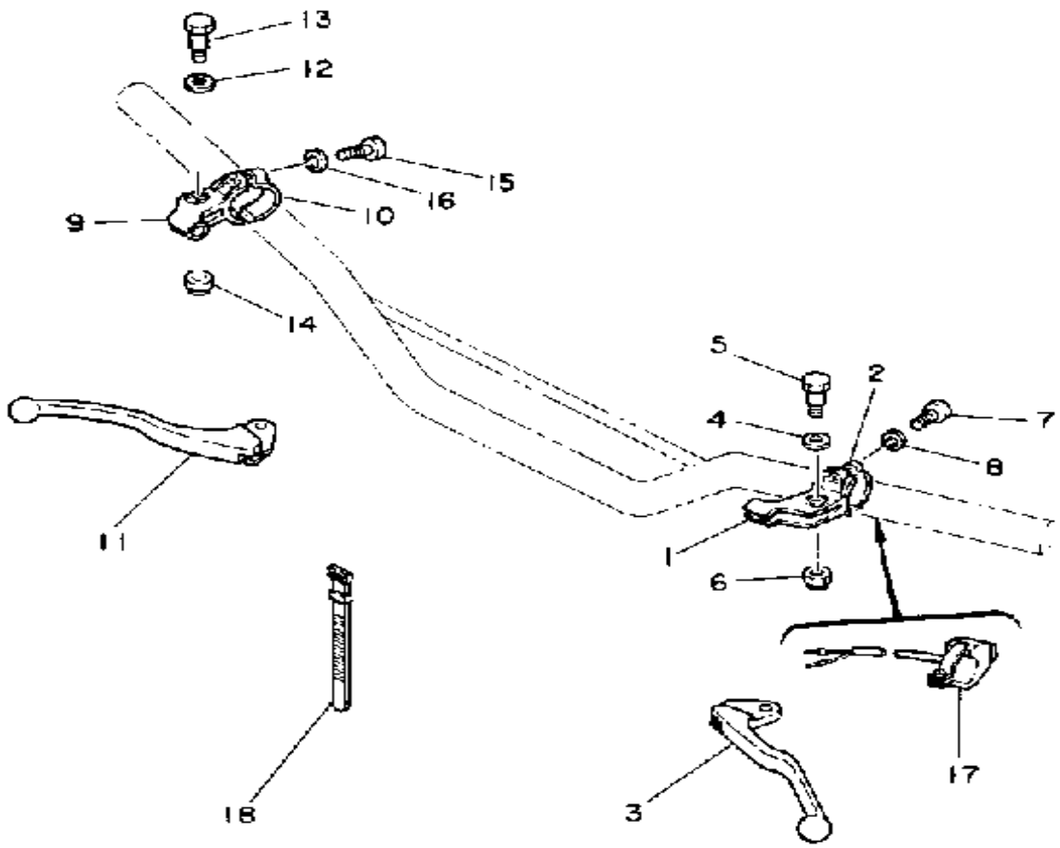

Ref. No.	Part Number	Description	Qty	Remarks
1	38V-82911-00-00	HOLDER, LEVER 1	1	
2	38V-82913-00-00	HOLDER, LEVER LOWER 1	1	
3	23X-83912-00-00	LEVER L	1	
4	90201-08083-00	WASHER, PLATE	1	
5	90109-06797-00	BOLT	1	
6	95601-06100-00	NUT, U	1	
7	98506-05018-00	SCREW, PAN HEAD	2	
8	92906-05100-00	WASHER, SPRING	2	
9	38V-82921-00-00	HOLDER, LEVER 2	1	
10	38V-82913-00-00	HOLDER, LEVER LOWER 1	1	
11	23X-83922-00-00	LEVER 2	1	
12	90201-08083-00	WASHER, PLATE	1	
13	90109-06797-00	BOLT	1	
14	95601-06100-00	NUT, U	1	
15	98506-05018-00	SCREW, PAN HEAD	2	
16	92906-05100-00	WASHER, SPRING	2	
17	23X-83976-00-00	SWITCH, HANDLE 1	1	
18	437-83936-01-00	BAND, SWITCH CORD	2	



39W100-4300