
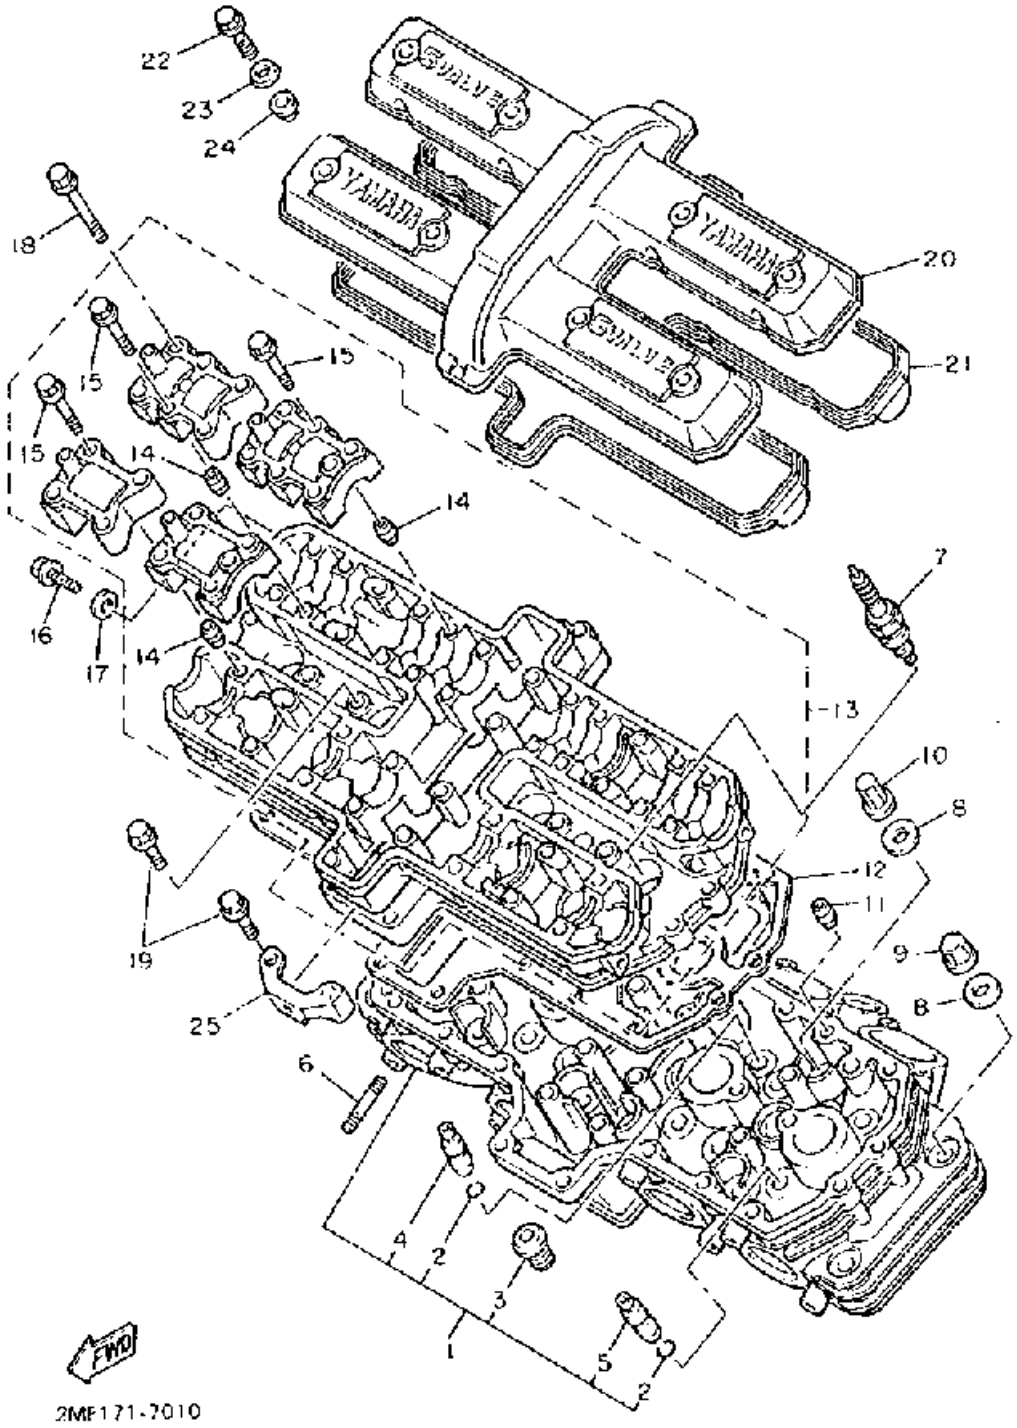



Ref No	Part No	Description
01	2KT-11102-00-00	Cylinder Head Assy
02	93440-09141-00	• . Circlip
03	90340-18101-00	• . Plug, Straight Screw
04	1AA-11133-10-00	• . Guide, Intake Valve
05	1AA-11134-10-00	• . Guide, Exhaust Valve
06	90116-06466-00	Bolt, Stud
07	94701-00203-00	Plug, Spark (ngk Dr8es-l)
07	94701-00222-00	Plug, Spark (nd X24esr-u)
08	90201-096J9-00	Washer, Plate
09	90179-09489-00	Nut
10	90179-09490-00	Nut
11	99530-10014-00	Pin, Dowel
12	2GH-11182-00-00	Gasket, Cylinder Head 2
13	1AA-1115A-01-00	Cam Case Assy
14	99510-08016-00	• . Pin, Dowel
15	90105-06153-00	• . Bolt, Washer Based
16	95026-06012-00	Bolt, Flange
17	90430-06014-00	Gasket
18	90105-06362-00	Bolt, Washer Based
19	95026-06025-00	Bolt, Flange
20	1TV-11191-00-00	Cover, Cylinder Head 1
21	1AA-11193-00-00	Gasket, Head Cover 1
22	90109-06746-00	Bolt
23	90209-11262-00	Washer
24	2GH-1111G-00-00	Rubber, Mount 1
25	1AE-1244E-00-00	Bracket 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

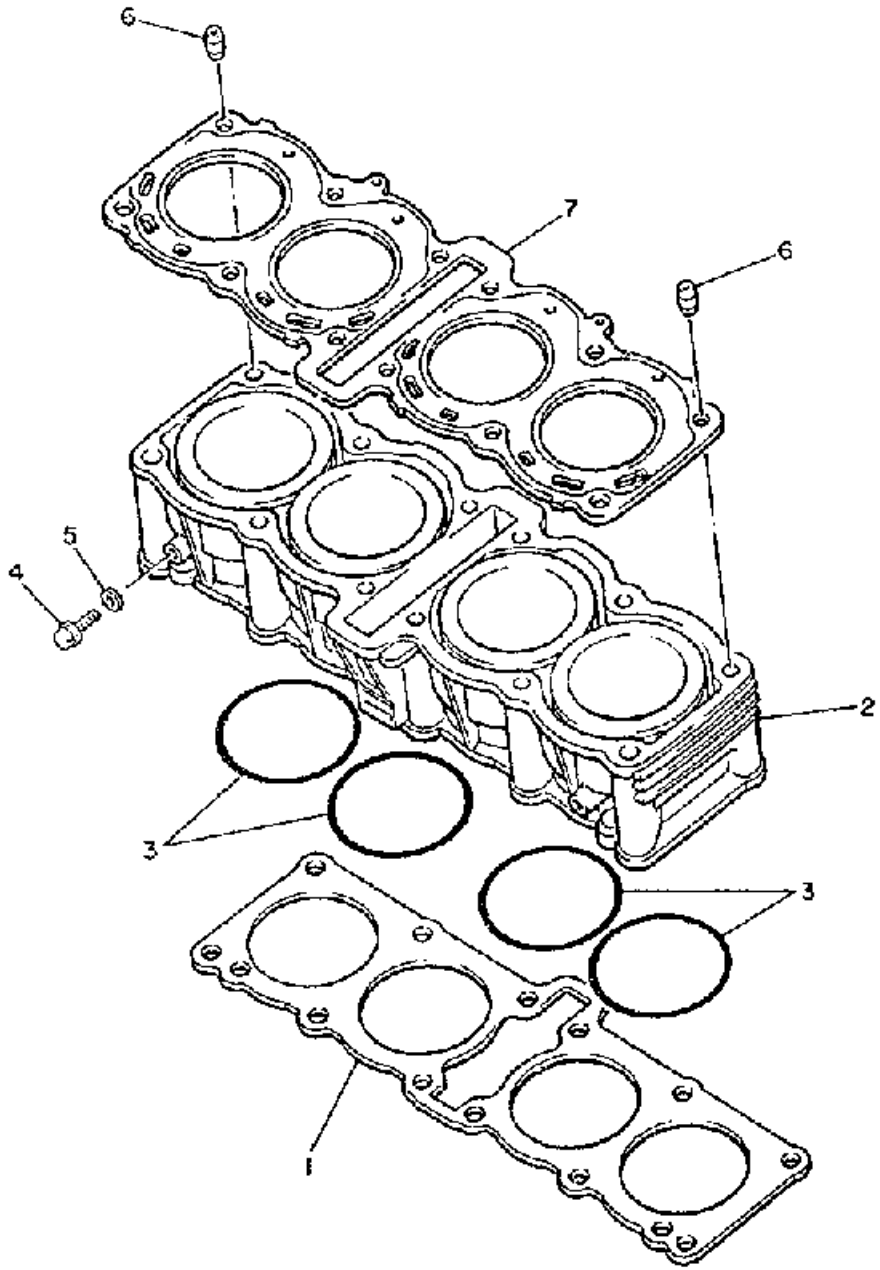


Ref No	Part No	Description
02	1AE-11310-01-00	Cylinder
03	93210-73693-00	O-ring
04	95026-06012-00	Bolt, Flange
05	90430-06014-00	Gasket
06	91810-08016-00	Pin, Dowel
07	2KT-11181-01-00	Gasket, Cylinder Head 1
11	1AA-11351-00-00	Gasket, Cylinder

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

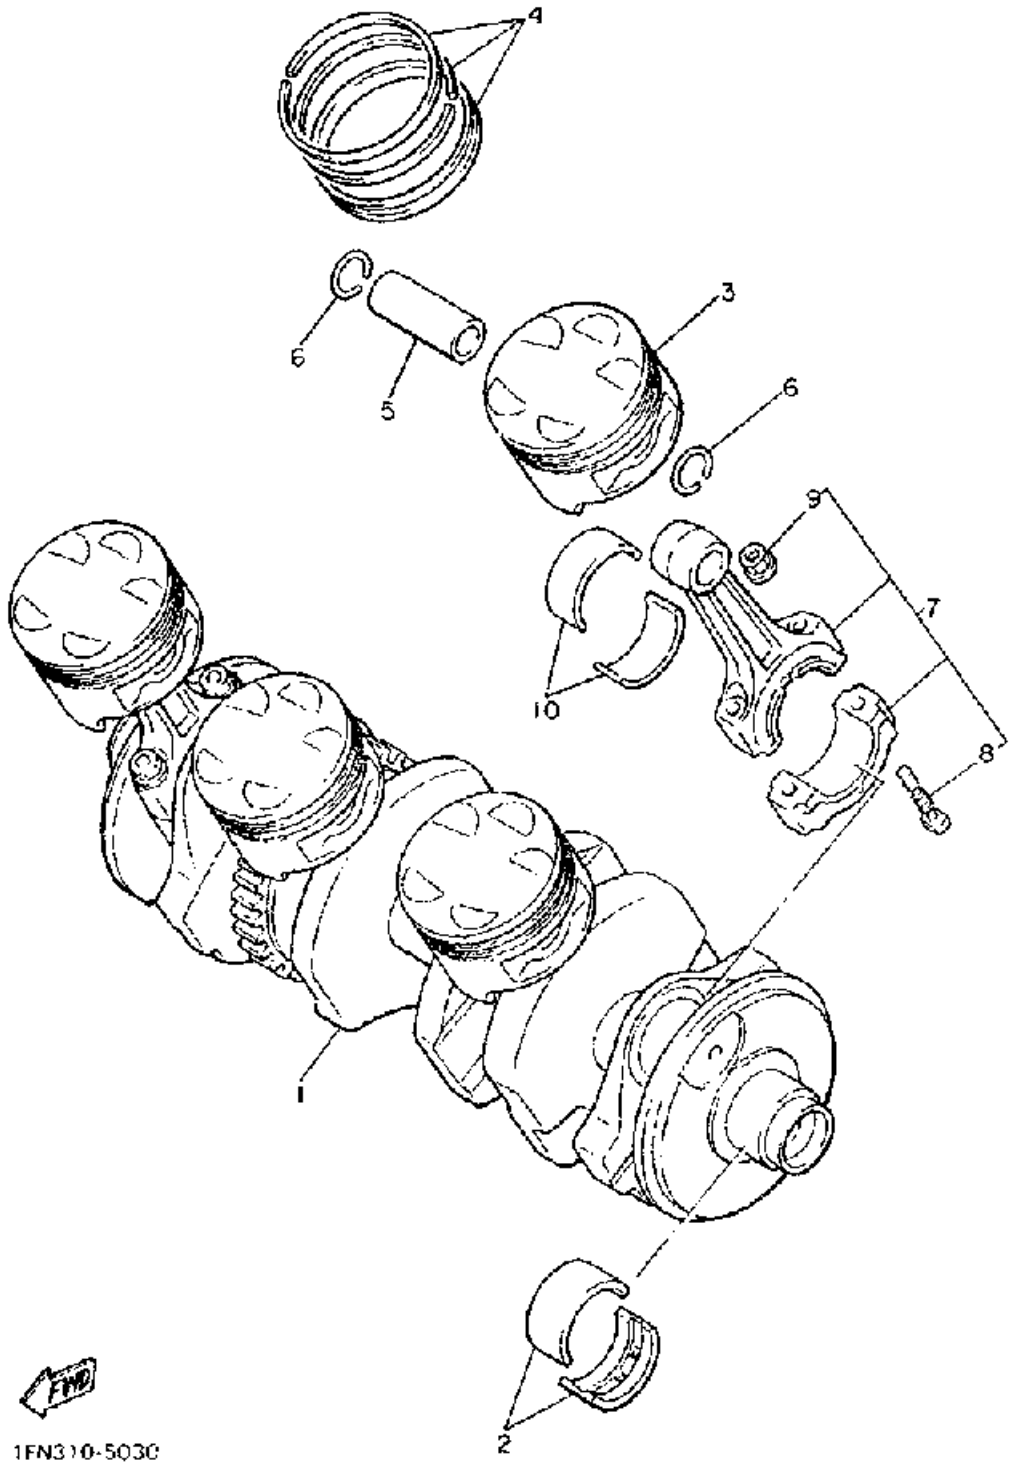


Ref No	Part No	Description
01	3KS-11411-00-00	Crankshaft
02	1AE-11416-00-00	Plane Bearing, Crankshaft 1
02	1AE-11416-10-00	Plane Bearing, Crankshaft 1
02	1AE-11416-20-00	Plane Bearing, Crankshaft 1
02	1AE-11416-30-00	Plane Bearing, Crankshaft 1
02	1AE-11416-40-00	Plane Bearing, Crankshaft 1
03	2MG-11631-00-00	Piston (std)
03	2MG-11636-00-00	Piston (0.50mm O/s)
03	2MG-11638-00-00	Piston (1.00mm O/s)
04	2KT-11610-00-00	Piston Ring Set (std)
04	2KT-11610-20-00	Piston Ring Set (2.ug)
04	2KT-11610-40-00	Piston Ring Set (4.ug)
05	2KT-11633-01-00	Pin, Piston
06	93450-19052-00	Circlip
07	2MG-11650-00-00	Connecting Rod Assy
08	12R-11654-00-00	• . Bolt, Connecting Rod
09	90179-08327-00	• . Nut
10	1AE-11656-00-00	Plane Bearing, Connecting Rod
10	1AE-11656-10-00	Plane Bearing, Connecting Rod
10	1AE-11656-20-00	Plane Bearing, Connecting Rod
10	1AE-11656-30-00	Plane Bearing, Connecting Rod

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

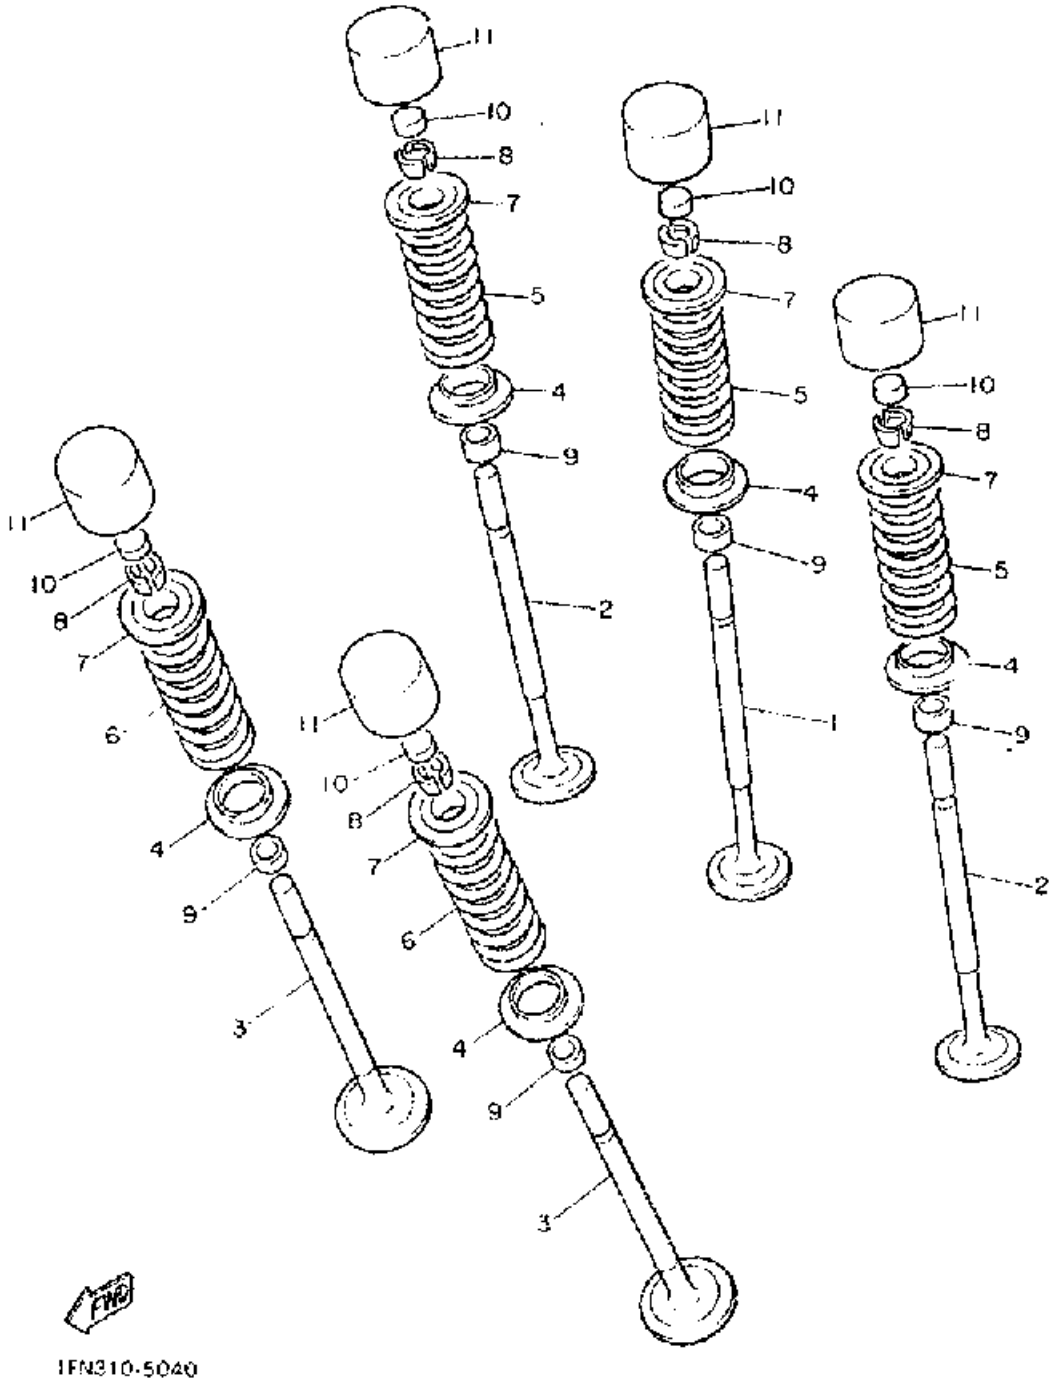


Ref No	Part No	Description
01	1AA-12111-01-00	Valve, Intake
02	1AA-12112-01-00	Valve, Intake 2
03	1AA-12121-01-00	Valve, Exhaust
04	2GH-12116-00-00	Seat, Valve Spring
05	1AA-12113-01-00	Spring, Valve Inner
06	1AA-12114-01-00	Spring, Valve Outer
07	1AA-12117-00-00	Retainer, Valve Spring
08	1AA-12118-00-00	Cotter, Valve
09	33M-12119-00-00	Seal, Valve Stem
10	1AA-12168-00-00	Pad, Adjusting (1.20)
10	1AA-12168-M0-00	Pad, Adjusting (1.65)
10	1AA-12168-RO-00	Pad, Adjusting (1.70)
10	1AA-12168-U0-00	Pad, Adjusting (1.75)
10	1AA-12168-W0-00	Pad, Adjusting (1.80)
10	1AA-12169-Y0-00	Pad, Adjusting (1.85)
10	1AA-12169-10-00	Pad, Adjusting (1.90)
10	1AA-12169-30-00	Pad, Adjusting (1.95)
10	1AA-12169-50-00	Pad, Adjusting (2.00)
10	1AA-12169-70-00	Pad, Adjusting (2.05)
10	1AA-12169-90-00	Pad, Adjusting (2.10)
10	1AA-12168-20-00	Pad, Adjusting (1.25)
10	1AA-12169-E0-00	Pad, Adjusting (2.15)
10	1AA-12169-G0-00	Pad, Adjusting (2.20)
10	1AA-12169-J0-00	Pad, Adjusting (2.25)
10	1AA-12169-L0-00	Pad, Adjusting (2.30)
10	1AA-12169-N0-00	Pad, Adjusting (2.35)
10	1AA-12169-T0-00	Pad, Adjusting (2.40)
10	1AA-12168-40-00	Pad, Adjusting (1.30)
10	1AA-12168-60-00	Pad, Adjusting (1.35)
10	1AA-12168-80-00	Pad, Adjusting (1.40)
10	1AA-12168-A0-00	Pad, Adjusting (1.45)
10	1AA-12168-F0-00	Pad, Adjusting (1.50)
10	1AA-12168-H0-00	Pad, Adjusting (1.55)
10	1AA-12168-K0-00	Pad, Adjusting (1.60)
11	2NK-12153-02-00	Lifter, Valve
11	2NK-12153-09-00	Lifter, Valve

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

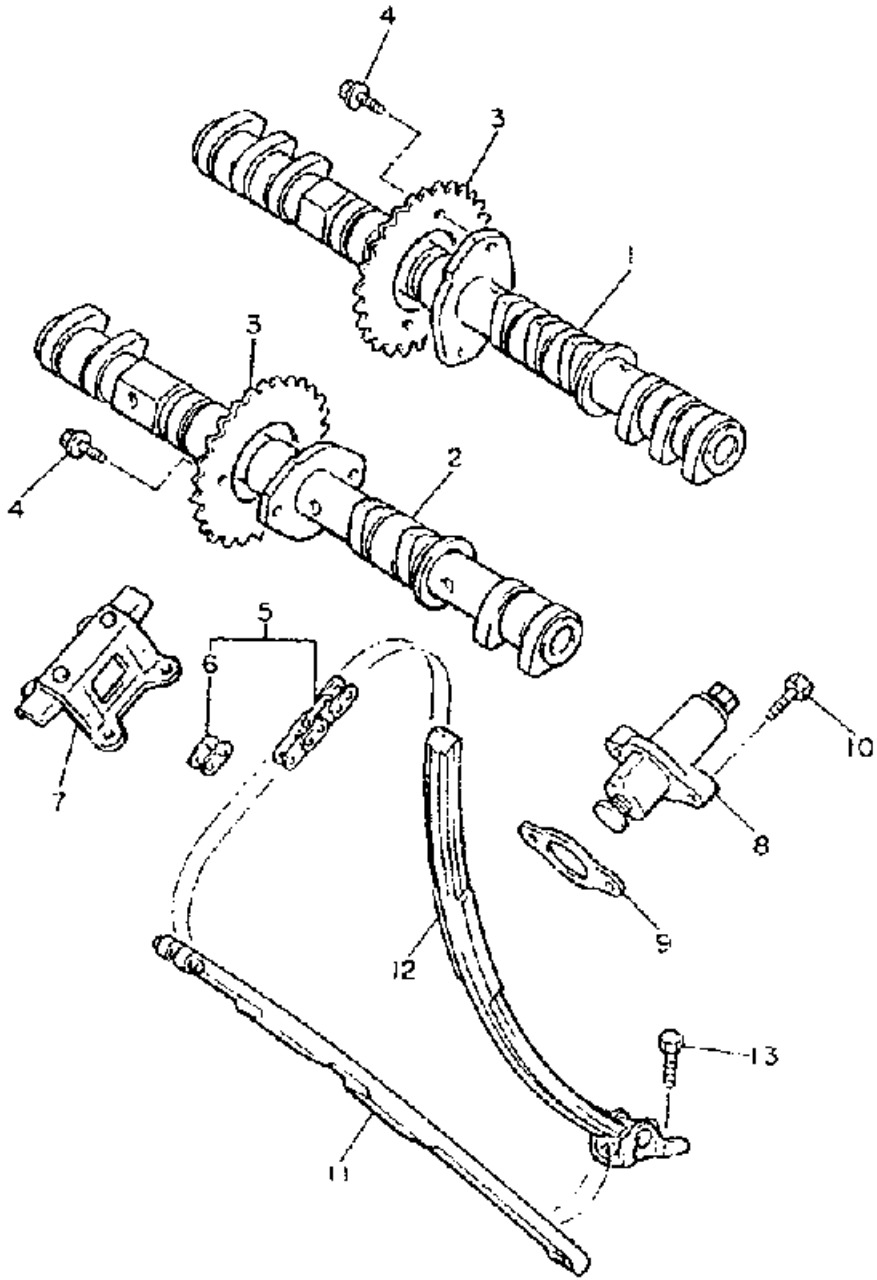


Ref No	Part No	Description
01	1AE-12171-00-00	Camshaft 1
02	1UF-12181-00-00	Camshaft 2
03	4G0-12176-01-00	Sprocket, Cam Chain
04	90105-07342-00	Bolt, Washer Based
05	94581-01110-00	Chain (did219fs-110l)
06	94681-01021-00	• . Joint, Chain
07	2GH-12241-00-00	Guide, Stopper 2
08	1WG-W1212-00-00	Tensioner Assy, Cam Chain
09	30X-12213-00-00	Gasket, Tensioner Case
10	95026-06025-00	Bolt, Flange
11	1AE-12251-00-00	Damper, Chain 1
12	2GH-12252-00-00	Damper, Chain 2
13	90109-065A8-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

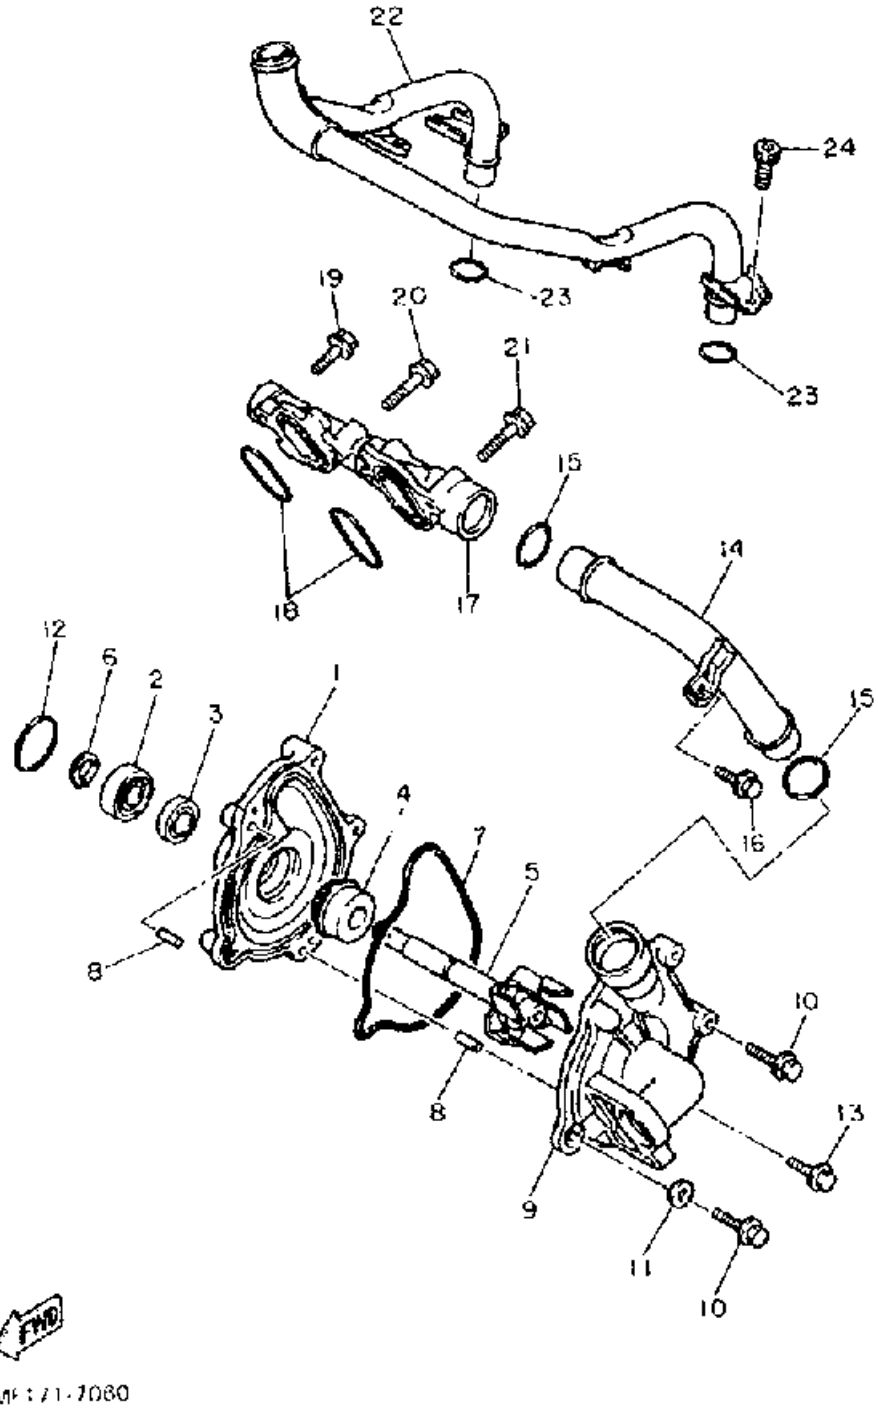


Ref No	Part No	Description
01	1UF-12421-01-00	Housing, Water Pump
02	93306-00106-00	Bearing
03	93101-12060-00	Oil Seal
04	11H-12438-00-00	Seal, Mechanical
05	1UF-12450-00-00	Impeller Shaft Assy
06	99009-12400-00	Circlip
07	1AE-12439-00-00	O-ring
08	93604-10011-00	Pin, Dowel
09	1AE-12422-01-00	Cover, Housing
10	95026-06025-00	Bolt, Flange
11	90430-06014-00	Gasket
13	93210-33133-00	O-ring
14	1AE-12481-00-00	Pipe 1
15	93210-25692-00	O-ring
16	95026-06012-00	Bolt, Flange
17	3DX-12469-00-00	Joint 1
18	93210-30694-00	O-ring
19	95026-06020-00	Bolt, Flange
20	95026-06030-00	Bolt, Flange
21	95026-06040-00	Bolt, Flange
22	1AE-12482-00-00	Pipe 2
23	93210-18417-00	O-ring
24	91316-06012-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

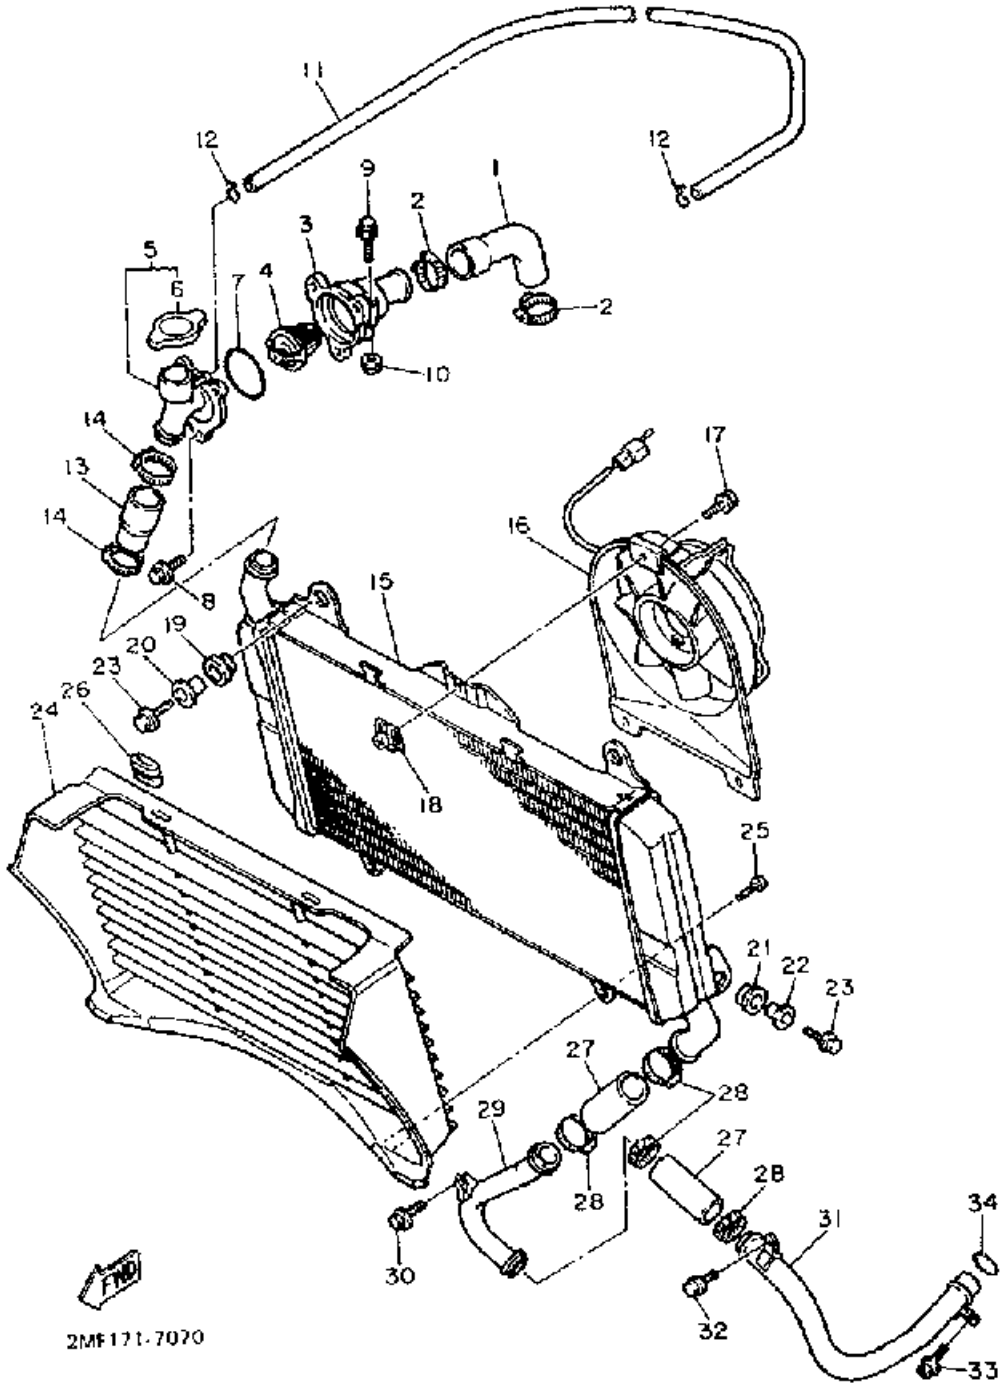


Ref No	Part No	Description
02	90460-38285-00	Clamp, Hose
03	1AE-12417-02-00	Housing, Thermostat
04	1AE-12410-00-00	Thermostat Assy
05	1AE-12590-00-00	Conduction Assy
06	1AE-12462-00-00	Cap, Radiator
07	93210-49046-00	• . O-ring
08	95023-06020-00	Bolt, Flange
09	95026-06030-00	Bolt, Flange
10	95701-06500-00	Nut, Flange
11	90445-091E9-00	Hose
12	90467-08003-00	Clip
13	1AE-12577-00-00	Hose 2
14	90460-28285-00	Clamp, Hose
15	1AE-12461-01-00	Radiator Assy
16	1AE-12405-00-00	Blower Assy
17	11H-12675-00-00	Bolt, Blower Holding
18	1AA-12535-00-00	Plate
19	90480-18276-00	Grommet
20	90387-07037-00	Collar
21	90480-19283-00	Grommet
22	90387-06033-00	Collar
23	95826-06020-00	Bolt, Flange
24	2KT-12467-00-00	Cover, Radiator
25	97706-60114-00	Screw, Tapping
26	90480-01438-00	Grommet
27	90445-327A9-00	Hose
28	90460-38285-00	Clamp, Hose
29	1AE-12483-00-00	Pipe 3
30	91316-06012-00	Bolt
31	1AE-12484-00-00	Pipe 4
32	91316-06012-00	Bolt
33	90110-06142-00	Bolt, Hexagon Socket Head
34	93210-23692-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

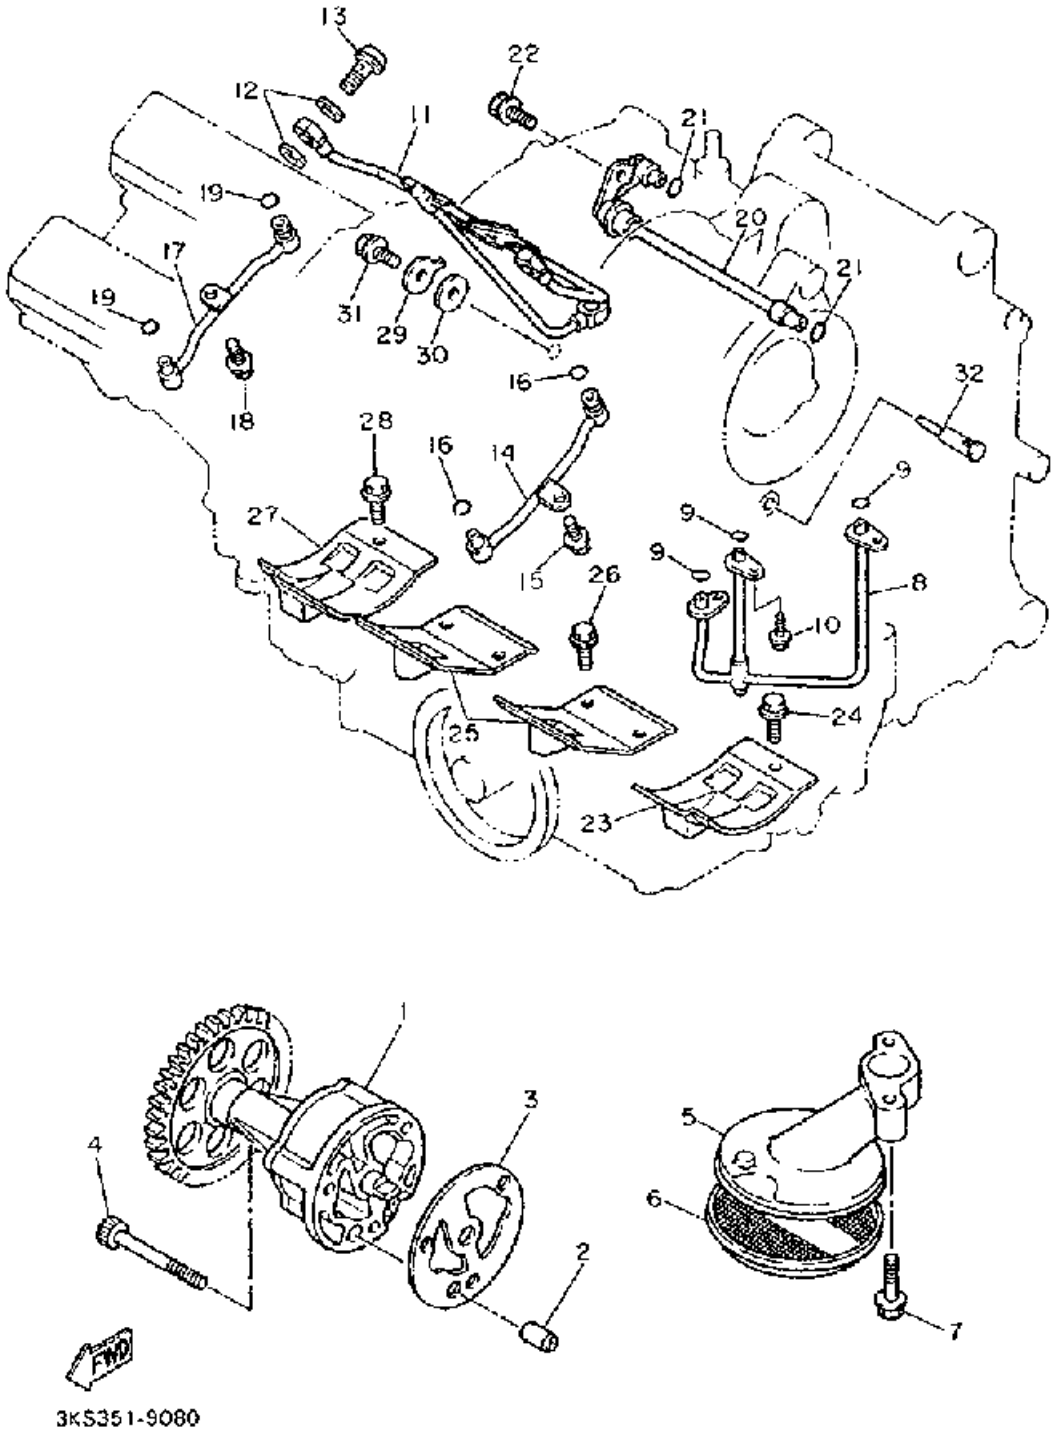

Ref No	Part No	Description
01	1AE-13300-00-00	Oil Pump Assy
02	91810-18013-00	Pin, Dowel
03	2GH-13329-00-00	Gasket, Pump Cover
04	91316-06050-00	Bolt
05	3KS-13412-00-00	Housing, Strainer
06	1AE-13411-00-00	Strainer, Oil
07	95026-06030-00	Bolt, Flange
08	3GM-13161-00-00	Pipe, Delivery 1
09	93210-06714-00	O-ring
10	95026-06012-00	Bolt, Flange
11	1AE-13171-01-00	Pipe, Delivery 2
12	90430-10188-00	Gasket
13	90401-10096-00	Bolt, Union
14	2GH-13181-00-00	Pipe, Delivery 3
15	95026-06012-00	Bolt, Flange
16	93210-06632-00	O-ring
17	2GH-13191-00-00	Pipe, Delivery 4
18	95026-06012-00	Bolt, Flange
19	93210-06632-00	O-ring
20	1AE-1316E-00-00	Pipe, Delevery 5
21	93210-07135-00	O-ring
22	95026-06012-00	Bolt, Flange
23	2GH-15123-00-00	Plate, Buffle 1
25	1AE-15124-00-00	Plate, Buffle 2
26	95026-06012-00	Bolt, Flange
27	2GH-15133-00-00	Plate, Buffle 3
28	95026-06012-00	Bolt, Flange
29	1AE-12483-00-00	Pipe 3
30	91316-06012-00	Bolt
31	1AE-12484-00-00	Pipe 4
32	91316-06012-00	Bolt
33	90110-06142-00	Bolt, Hexagon Socket Head
34	95026-08012-00	Bolt, Flange


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

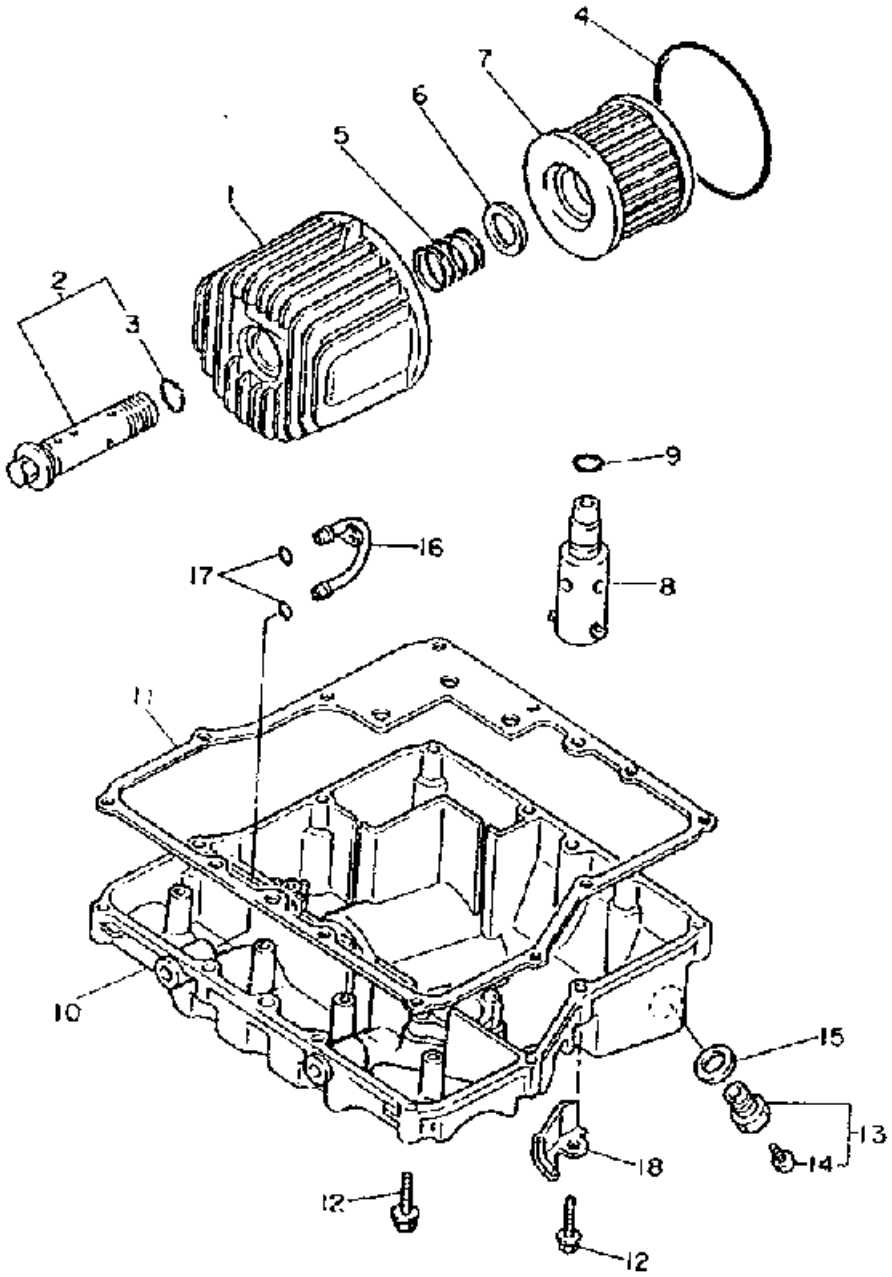

3KS351-9090


Ref No	Part No	Description
01	1AE-13447-00-00	Cover, Oil Element
02	36Y-13340-00-00	By-pass Valve Assy
03	93210-16629-00	• . O-ring
04	93210-87723-00	O-ring
05	90501-20422-00	Spring, Compression
06	90201-21608-00	Washer, Plate
07	36Y-13440-00-00	Element Assy, Oil Cleaner
08	3KS-13490-00-00	Relief Valve Assy
09	93210-15566-00	O-ring
10	3KS-13417-00-00	Cover, Strainer
11	1AE-13414-01-00	Gasket, Strainer Cover
12	95026-06030-00	Bolt, Flange
13	11H-13455-00-00	Plug
14	98901-06008-00	• . Screw, Bind
15	214-11198-01-00	Gasket
16	3GM-13416-00-00	Pipe, Oil 1
17	93210-14579-00	O-ring
18	90465-08076-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

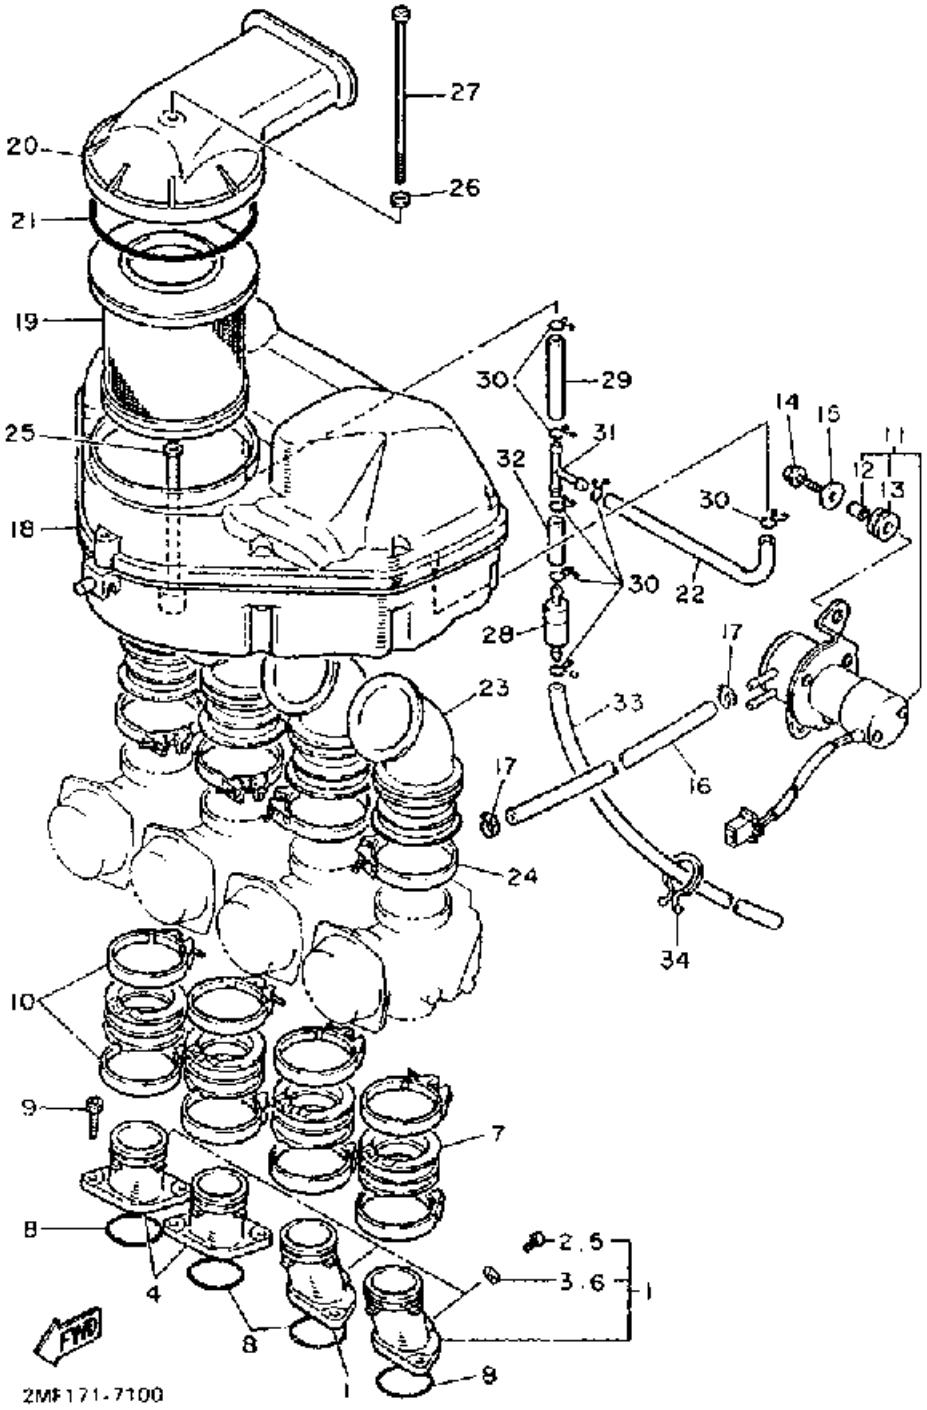


Ref No	Part No	Description
01	2KT-13586-01-00	Joint, Carburetor 1
02	92501-06012-00	• . Screw, Pan Head
03	90430-06014-00	• . Gasket
04	2KT-13596-01-00	Joint, Carburetor 2
05	92501-06012-00	• . Screw, Pan Head
06	90430-06014-00	• . Gasket
07	2LM-13597-00-00	Joint, Carburetor 3
08	93210-40659-00	O-ring
09	91316-06020-00	Bolt
10	1AE-13575-00-00	Band
11	1AE-13907-00-00	Fuel Pump Comp.
12	90387-060A7-00	• . Collar
13	90480-15235-00	• . Grommet
14	95826-06020-00	Bolt, Flange
15	90209-06174-00	Washer
16	90445-127A8-00	Hose
17	90460-12256-00	Clamp, Hose
19	1AE-14451-00-00	Element, Air Cleaner
20	1AE-14422-00-00	Cap, Cleaner Case 2
21	1AE-14452-00-00	Seal
22	90445-11150-00	Hose
23	1AE-14453-00-00	Joint, Air Cleaner 1
24	90460-58015-00	Clamp, Hose
25	1AE-14443-00-00	Collar
26	92990-06600-00	Washer, Plate
27	92511-06160-00	Screw, Pan Head
28	4X7-2149Y-00-00	Filter Assy
29	90445-112E0-00	Hose
30	90467-10008-00	Clip
31	90413-07007-00	Way 3
32	90445-11262-00	Hose
33	90445-113F8-00	Hose
34	90464-30040-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

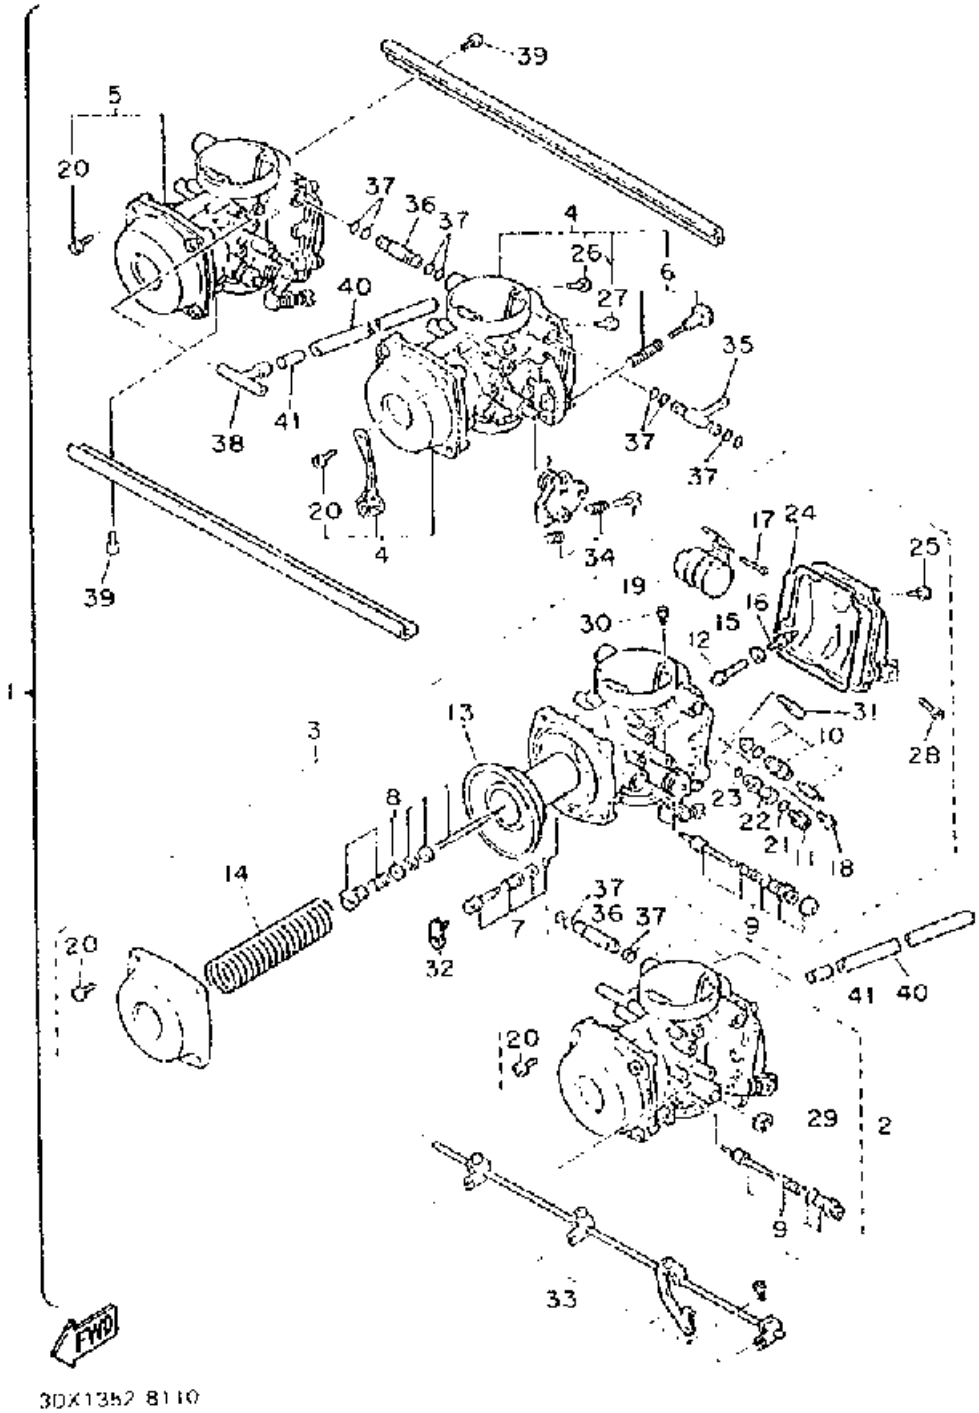


Ref No	Part No	Description
01	3DX-14900-00-00	•• .. Carburetor Assy
02	3DX-14901-00-00	•• .. Carburetor Assy 1
03	3DX-14902-00-00	• . Carburetor Assy 2
04	3DX-14903-00-00	• . Carburetor Assy 3
05	3DX-14904-00-00	•• .. Carburetor Assy 4
06	1AE-14103-00-00	•• .. Throttle Screw Set
07	12R-14105-00-00	•• .. Pilot Screw Set
08	1FN-1490J-00-00	•• .. Needle Set
08	2MG-1490J-00-00	•• .. Needle Set
09	1AE-1410A-00-00	•• .. Starter Set
09	1FN-1410A-00-00	•• .. Starter Set
10	3CF-14107-12-00	•• .. Needle Valve Set
11	620-1423A-71-00	•• .. Jet, Main (102.5)
11	620-14231-21-A0	•• .. Jet, Main (105)
12	1AE-14141-92-00	•• .. Nozzle, Main
13	1AE-14940-00-00	•• .. Diaphragm Assy
14	1AE-14933-00-00	•• .. Spring, Diaphragm
15	137-14153-00-00	•• .. Washer, Main Jet
16	1AE-14565-00-00	Screw
17	353-14186-00-00	•• .. Pin, Float
18	1FN-14585-00-00	•• .. Rod, Choke
19	1WG-14985-00-00	•• .. Float
20	98501-05010-00	•• .. Screw, Pan Head
21	1AE-14227-00-00	•• .. Washer
22	2LH-14267-00-00	•• .. Roller
23	1AE-14237-00-00	•• .. Gasket
24	1FN-14147-00-00	•• .. O-ring
25	98503-04014-00	•• .. Screw, Pan Head
26	98503-04014-00	•• .. Screw, Pan Head
27	98511-04016-00	• . Screw, Pan Head
28	12R-14191-00-00	• . Plug, Drain
29	812-14137-00-00	• . Clip
30	830-14231-23-00	• . Jet, Main (115)
31	1HX-14991-00-00	•• .. Screw
32	1HX-14991-00-00	•• .. Screw
33	1FN-1490L-00-00	• . Starter Lever Set, 1 (15)
34	1AE-1490K-00-00	• . Stop Screw Set
35	1HX-14251-00-00	Nipple
36	16H-14251-00-00	• . Nipple
37	36Y-14147-00-00	• . O-ring
38	1AE-14197-00-00	• . Pipe
39	98501-05010-00	Screw, Pan Head
40	2KT-14197-01-00	• . Pipe
41	1FN-14918-00-00	• . Ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

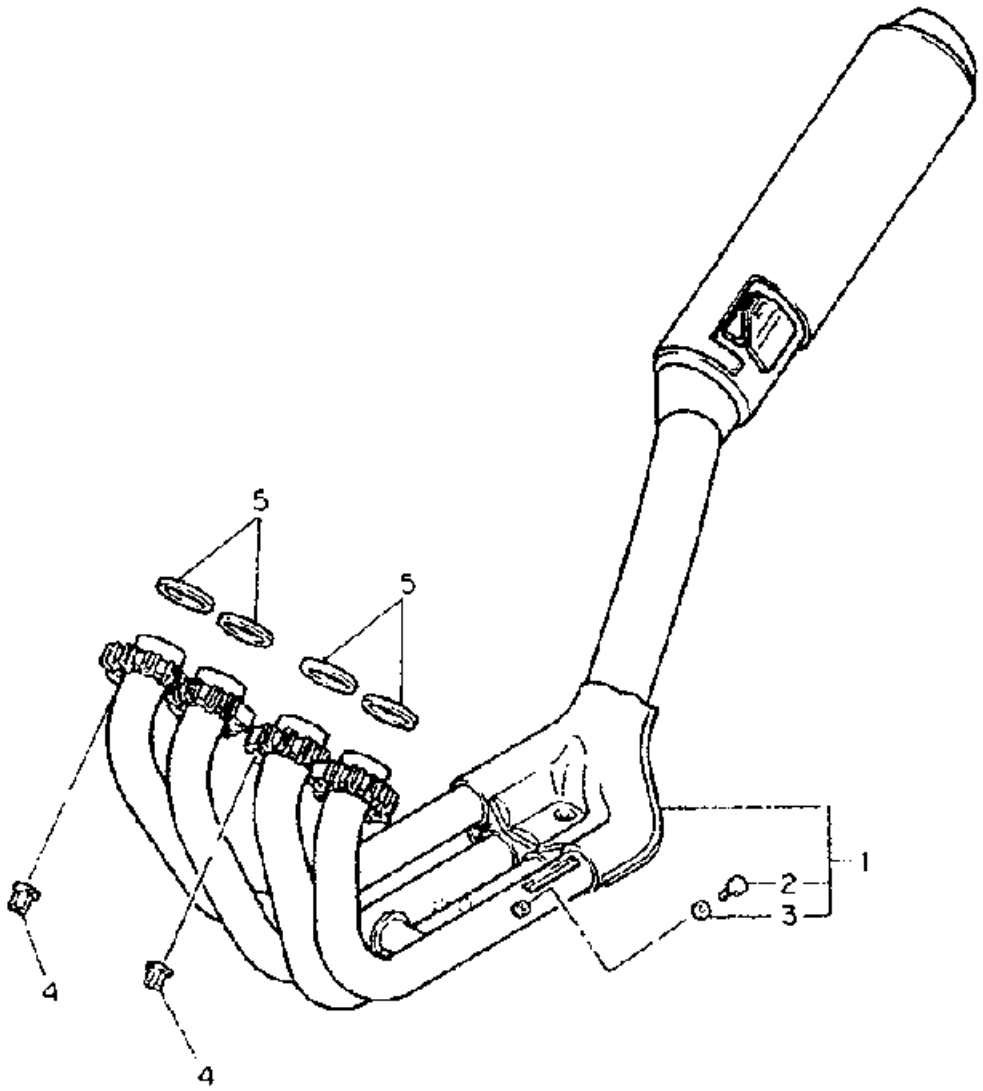


Ref No	Part No	Description
01	2KK-14710-00-00	Muffler Assy 1
02	90101-06576-00	• . Bolt
03	92906-06600-00	Washer, Plate
04	90179-06500-00	Nut
05	4H7-14613-00-00	Gasket, Exhaust Pipe

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

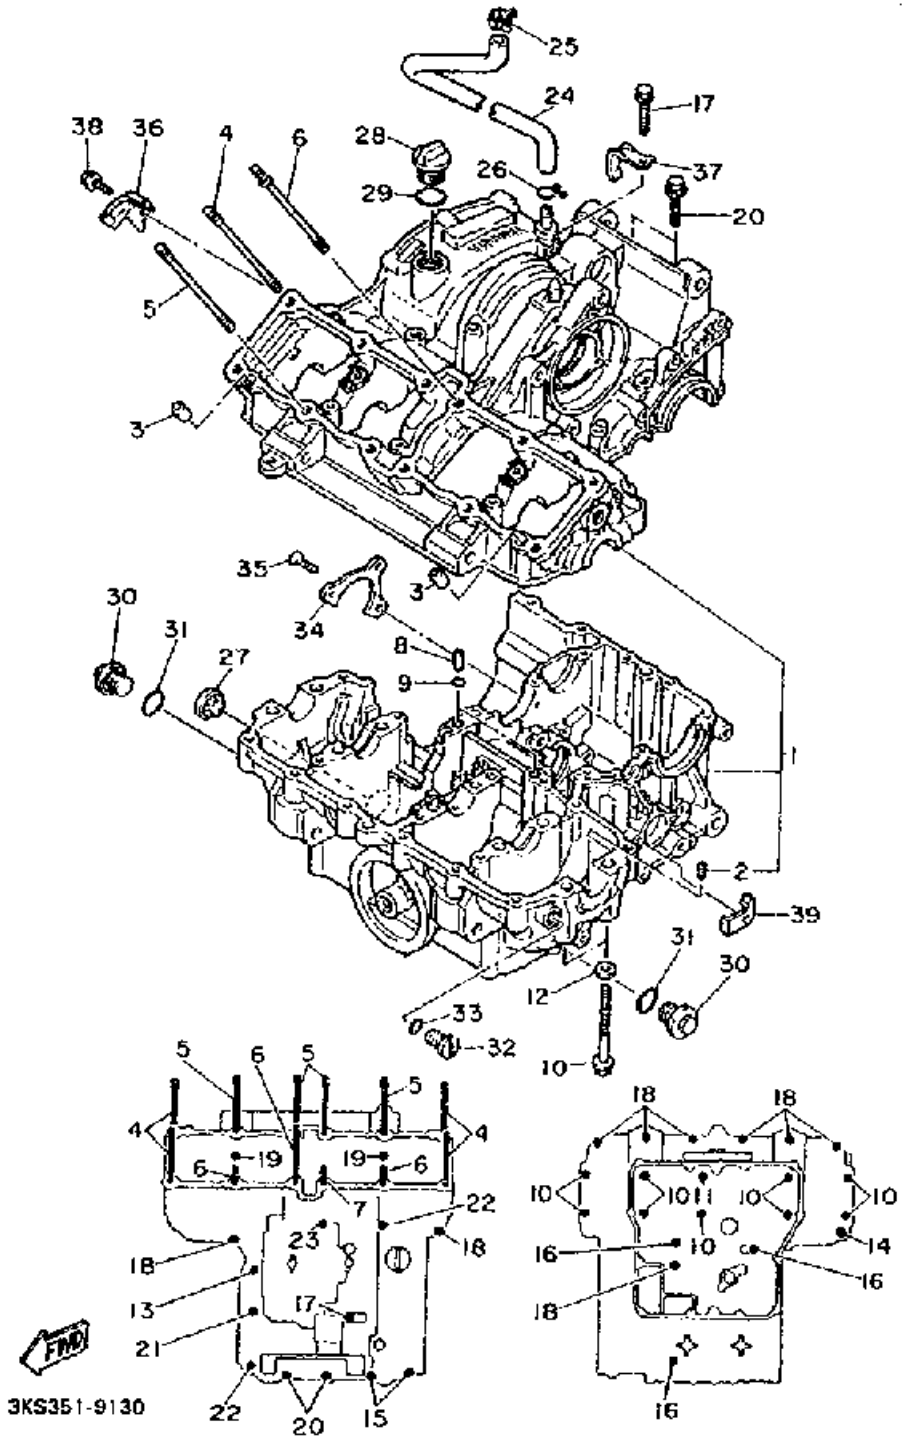


Ref No	Part No	Description
01	3KS-15100-01-00	Crankcase Assy
02	4H7-15138-00-00	• . Nozzle 1
03	99530-10014-00	Pin, Dowel
04	90110-09458-00	Bolt, Hexagon Socket Head
05	90116-09500-00	Bolt, Stud
06	90116-09538-00	Bolt, Stud
07	90116-09501-00	Bolt, Stud
08	90387-05383-00	Collar
09	93210-07135-00	O-ring
10	90105-09373-00	Bolt, Washer Based
11	90105-09580-00	Bolt, Washer Based
12	90201-096J9-00	Washer, Plate
13	95816-06035-00	Bolt, Flange
14	95816-08045-00	Bolt, Flange
15	95816-06060-00	Bolt, Flange
16	95816-06080-00	Bolt, Flange
17	95816-06140-00	Bolt, Flange
18	95816-08045-00	Bolt, Flange
20	95816-08060-00	Bolt, Flange
21	95816-08065-00	Bolt, Flange
22	95816-08000-00	Bolt, Flange
23	90105-09555-00	Bolt, Washer Based
24	1AE-11166-00-00	Pipe, Breather 1
25	90467-15054-00	Clip
26	90467-14015-00	Clip
27	2H7-15361-00-00	Gauge, Level
28	3F9-15362-00-00	Plug, Oil Level
29	93210-27194-00	O-ring
30	4K0-15189-00-00	Plug
31	93210-20573-00	O-ring
32	90340-14079-00	Plug, Straight Screw
33	93210-14369-00	O-ring
34	1AE-15383-00-00	Plate, Bearing Cover
35	90151-06014-00	Screw, Countersunk
36	90462-08184-00	Clamp
37	90465-08280-00	Clamp
38	95026-06012-00	Bolt, Flange
39	90462-08158-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

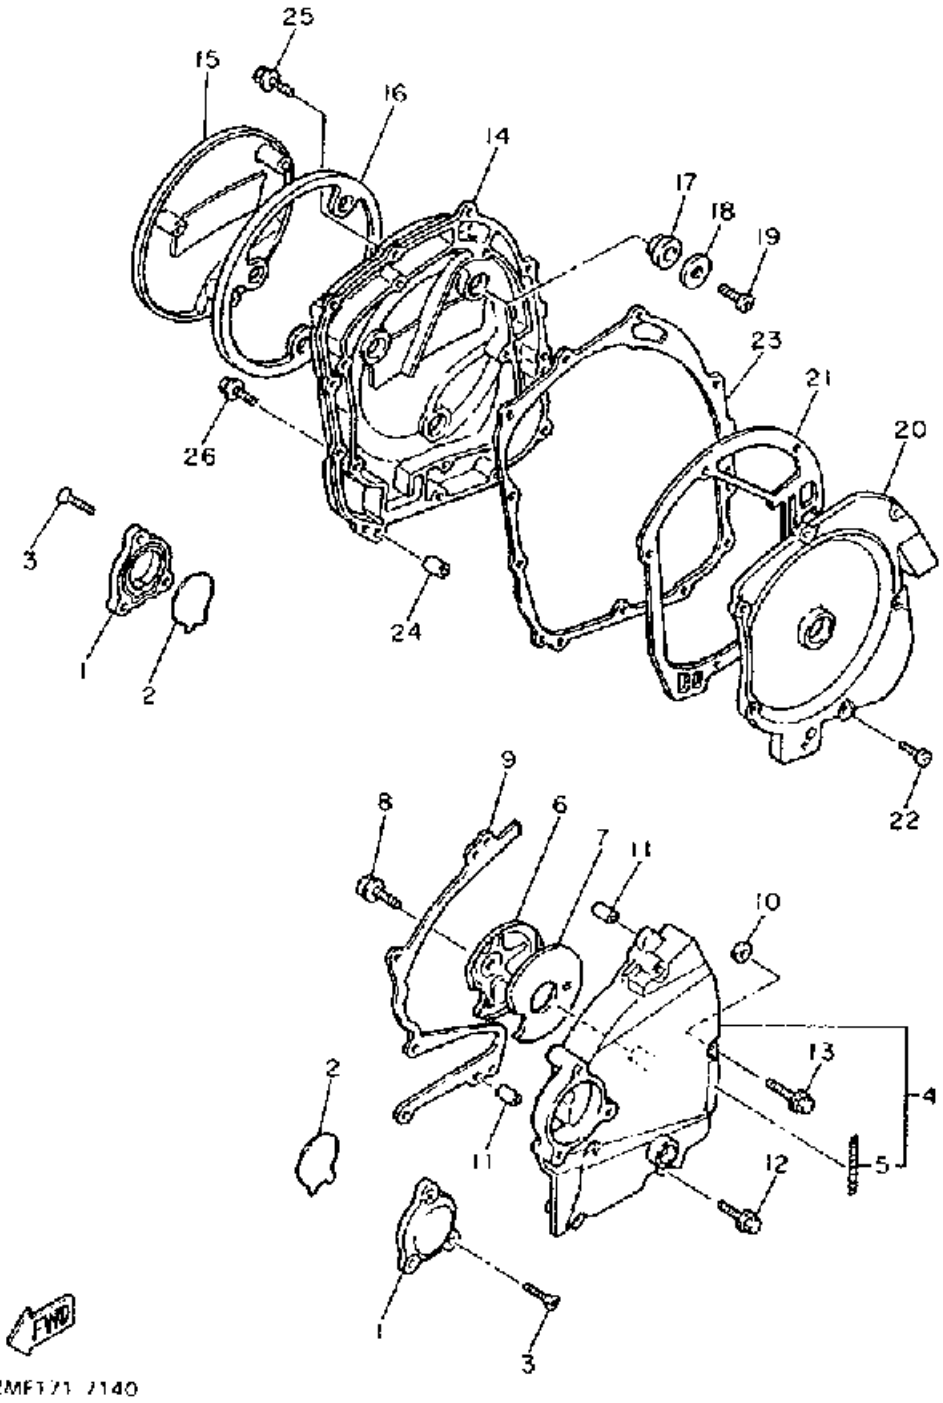


Ref No	Part No	Description
01	2KT-15416-00-00	Cover, Oil Pump
02	1AE-15456-00-00	Gasket, Oil Pump Cover 1
03	90152-06014-00	Screw, Countersunk
04	3KS-15410-00-00	Crankcase Cover Assy 1
05	1TV-15435-00-00	• . Emblem
06	3GM-15427-00-00	Cover, Cap 2
07	1AE-15316-00-00	Damper, Engine Mount 1
08	92011-06010-00	Bolt, Button Head
09	1AE-15451-00-00	Gasket, Crankcase Cover 1
10	1UF-15467-00-00	Gasket
11	91810-18013-00	Pin, Dowel
12	95026-06040-00	Bolt, Flange
13	95026-06050-00	Bolt, Flange
14	2GH-15421-00-00	Cover, Crankcase 2
15	1TV-15417-00-00	Cover, Cap
16	1AE-15449-00-00	Ring, Rubber
17	4H7-15486-00-00	Grommet
18	90209-06096-00	Washer
19	92501-06010-00	Screw, Pan Head
20	1AE-15346-00-00	Breather 1
21	1AE-15463-00-00	Gasket, Carburetor Cover 2
22	92501-06020-00	Screw, Pan Head
23	2GH-15461-00-00	Gasket, Crankcase Cover 2
24	91810-18013-00	Pin, Dowel
25	95026-06030-00	Bolt, Flange
26	95026-06020-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

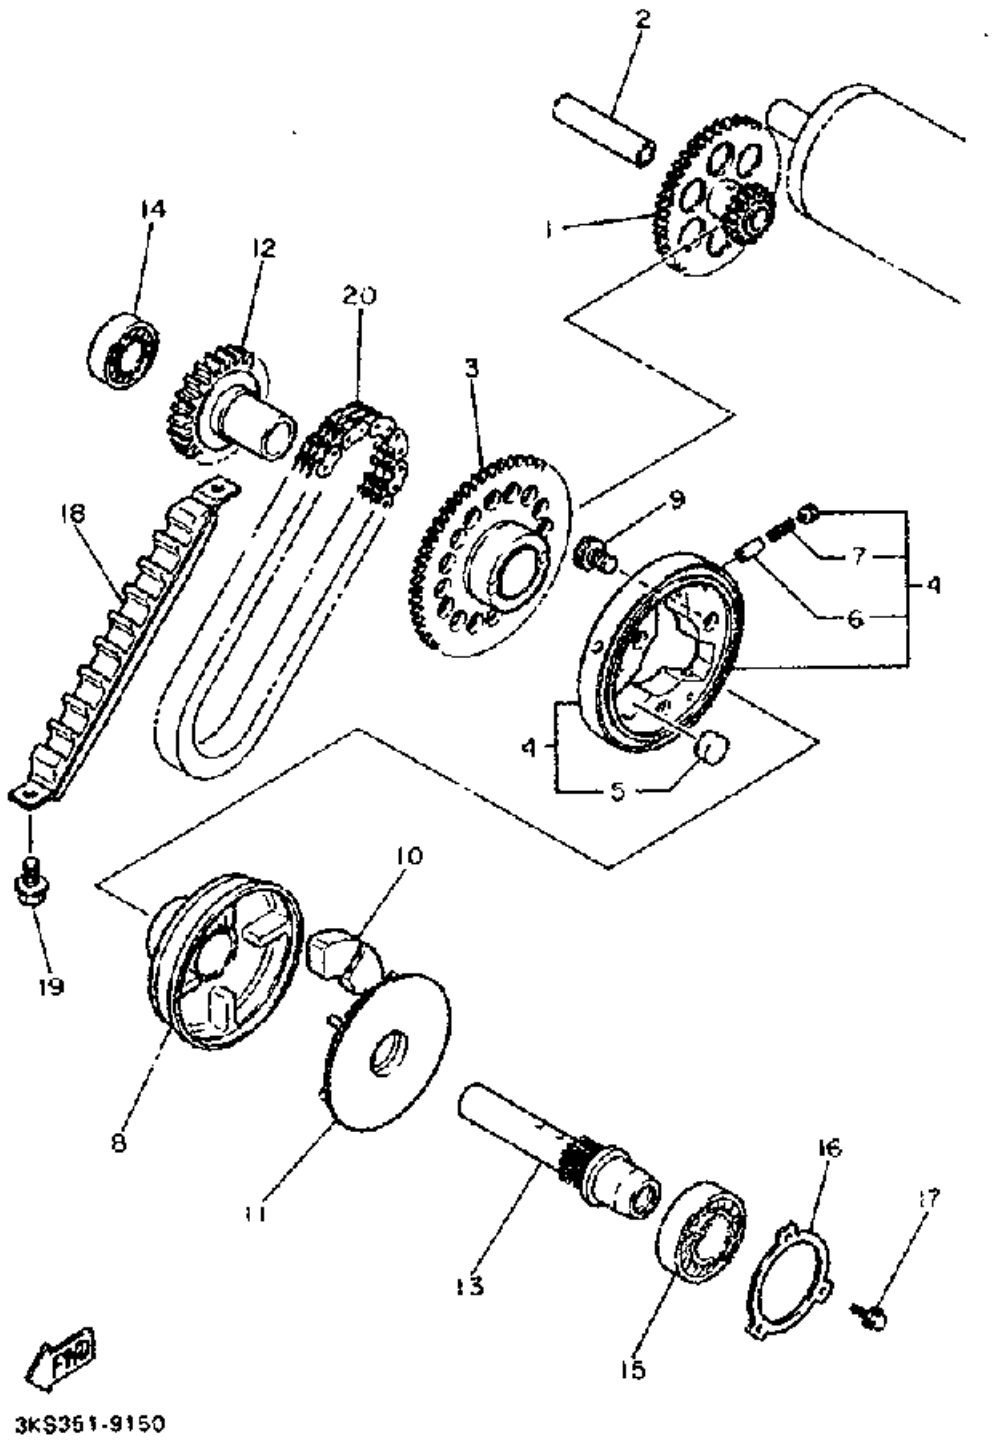


Ref No	Part No	Description
01	3GM-15512-00-00	Gear, Idler 1
02	51Y-15521-00-00	Shaft 1
03	3GM-15517-00-00	Gear, Idler 2
04	3GM-15580-00-00	Starter Clutch Outer Assy
05	93615-12088-00	• . Pin, Dowel
06	1J7-15583-01-00	• . Cap, Starter Clutch Spring
07	90501-04623-00	• . Spring, Compression
08	3GM-15524-00-00	Wheel, Starter
09	90110-08177-00	Bolt, Hexagon Socket Head
10	4H7-16155-01-00	Absorber 1
11	3GM-15689-00-00	Retainer
12	3GM-15519-00-00	Sprocket, Starter 2
13	3GM-15522-00-00	Shaft 2
14	93306-20335-00	Bearing
15	93306-20541-00	Bearing (b6205)
16	1AE-15381-00-00	Plate, Bearing Cover
17	95026-06016-00	Bolt, Flange
18	3GM-11474-00-00	Guide, Upper
19	95816-06014-00	Bolt, Flange
20	36Y-11456-00-00	Chain, Primary

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

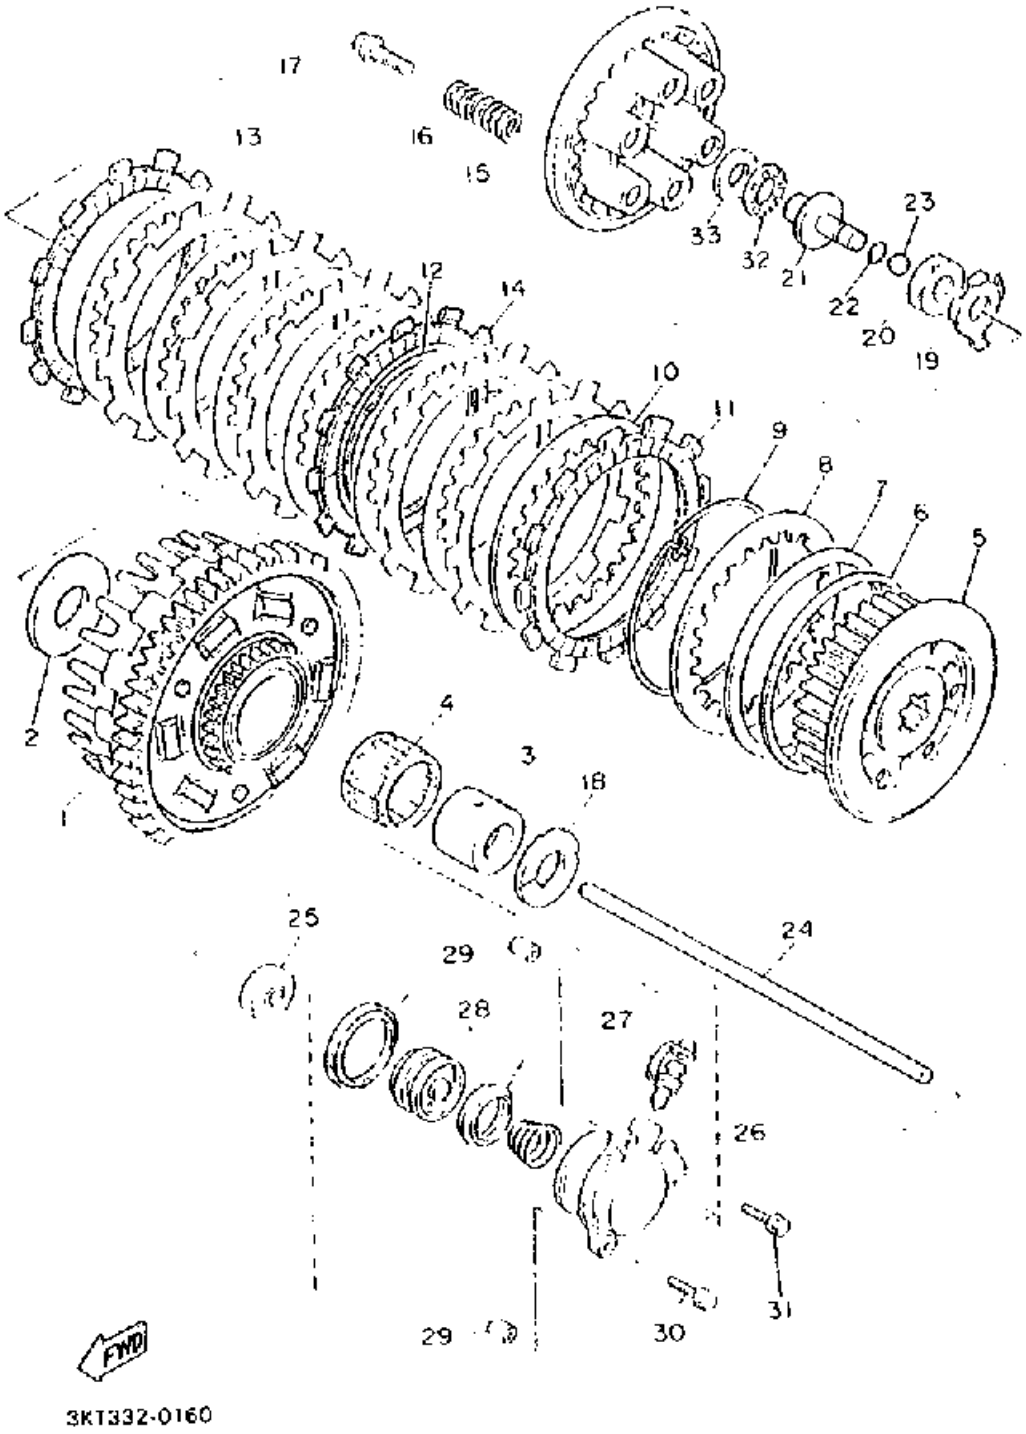


Ref No	Part No	Description
01	1TV-16150-01-00	Primary Driven Gear Comp.
02	1AE-16154-00-00	Plate, Thrust 1
03	90560-25270-00	Spacer
04	93310-340N8-00	Bearing
05	1AE-16371-00-00	Boss, Clutch
06	1J7-16384-00-00	Plate, Seat
07	5G2-16383-00-00	Spring, Clutch Boss
08	168-16324-00-00	Plate, Clutch 1
09	1J7-16385-00-00	Ring, Clutch Boss
10	31A-16325-00-00	Plate, Clutch 2
11	4H7-16321-00-00	Plate, Friction
12	5Y1-16383-00-00	Spring, Clutch Boss
13	31A-16321-00-00	Plate, Friction
14	5Y1-16331-01-00	Plate, Friction 2
15	58L-16351-00-00	Plate, Pressure 1
16	90501-225A9-00	Spring, Compression
17	90159-06123-00	Screw, With Washer
18	1AE-16164-00-00	Plate, Thrust 2
19	90215-20231-00	Washer, Lock
20	90170-20327-00	Nut
21	1LJ-16356-00-00	Rod, Push 1
22	93210-06632-00	O-ring
23	93511-32027-00	Ball
24	1AE-16375-00-00	Collar
25	93109-08061-00	Oil Seal
26	1TV-16381-00-00	Push Lever Comp.
27	36Y-W0048-00-00	• . Bleed Screw Kit
28	26H-W0098-00-00	• . Push Lever Seal Kit
29	91810-18013-00	Pin, Dowel
30	95026-06030-00	Bolt, Flange
31	95026-06090-00	Bolt, Flange
32	93340-21505-00	Bearing
33	90201-150H2-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

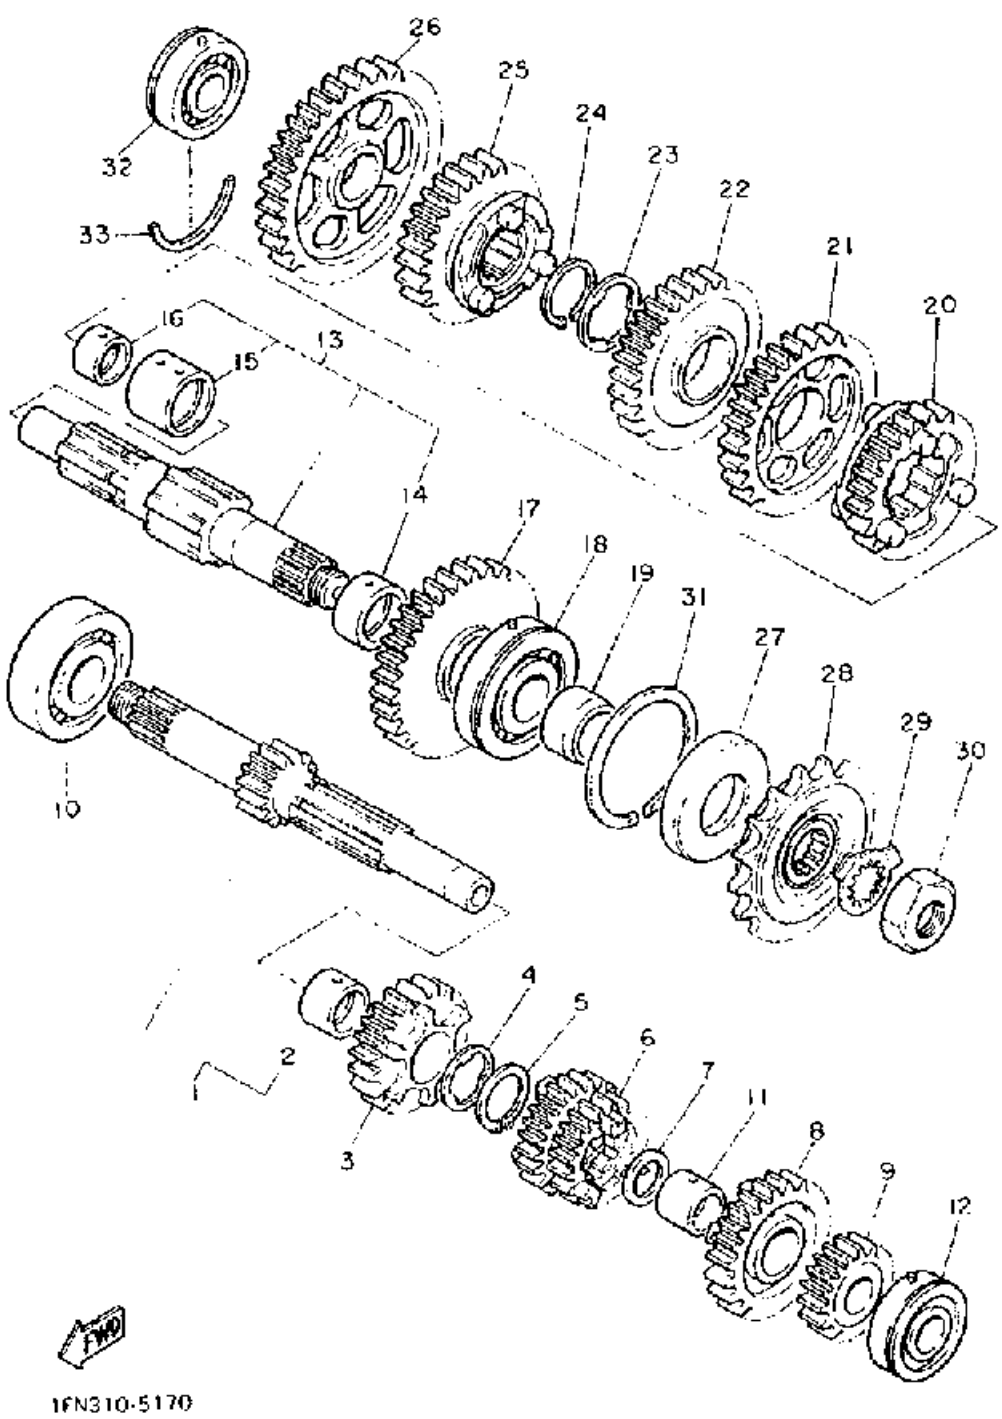


Ref No	Part No	Description
01	1AE-W1741-00-00	Main Axle Assy (13z)
02	90387-253M6-00	Collar
03	1AE-17151-00-00	Gear, 5th Pinion (22z)
04	90209-22191-00	Washer
05	93440-25084-00	Circlip
06	1AE-17131-00-00	Gear, 3rd Pinion (18/20z)
07	90201-200K3-00	Washer, Plate
08	1TV-17161-00-00	Gear, 6th Pinion (24z)
09	1AE-17121-00-00	Gear, 2nd Pinion (16z)
10	93306-30525-00	Bearing (b6305)
11	90387-203M7-00	Collar
12	93306-20455-00	Bearing
13	1AE-W1742-00-00	Drive Axle Assy
14	90387-263M8-00	• . Collar
15	90387-284M0-00	• . Collar
16	90387-204M1-00	• . Collar
17	1AE-17221-01-00	Gear, 2nd Wheel (35z)
18	93306-30546-00	Bearing (b6305 Special)
19	90387-253M9-00	Collar
20	1TV-17261-00-00	Gear, 6th Wheel (26z)
21	1AE-17231-00-00	Gear, 3rd Wheel (32z)
22	1AE-17241-00-00	Gear, 4th Wheel (30z)
23	90209-25196-00	Washer
24	93440-28062-00	Circlip
25	1AE-17251-00-00	Gear, 5th Wheel (28z)
26	1AE-17211-01-00	Gear, 1st Wheel (37z)
27	93102-35019-00	Oil Seal
28	1AE-17460-00-00	Sprocket, Drive

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

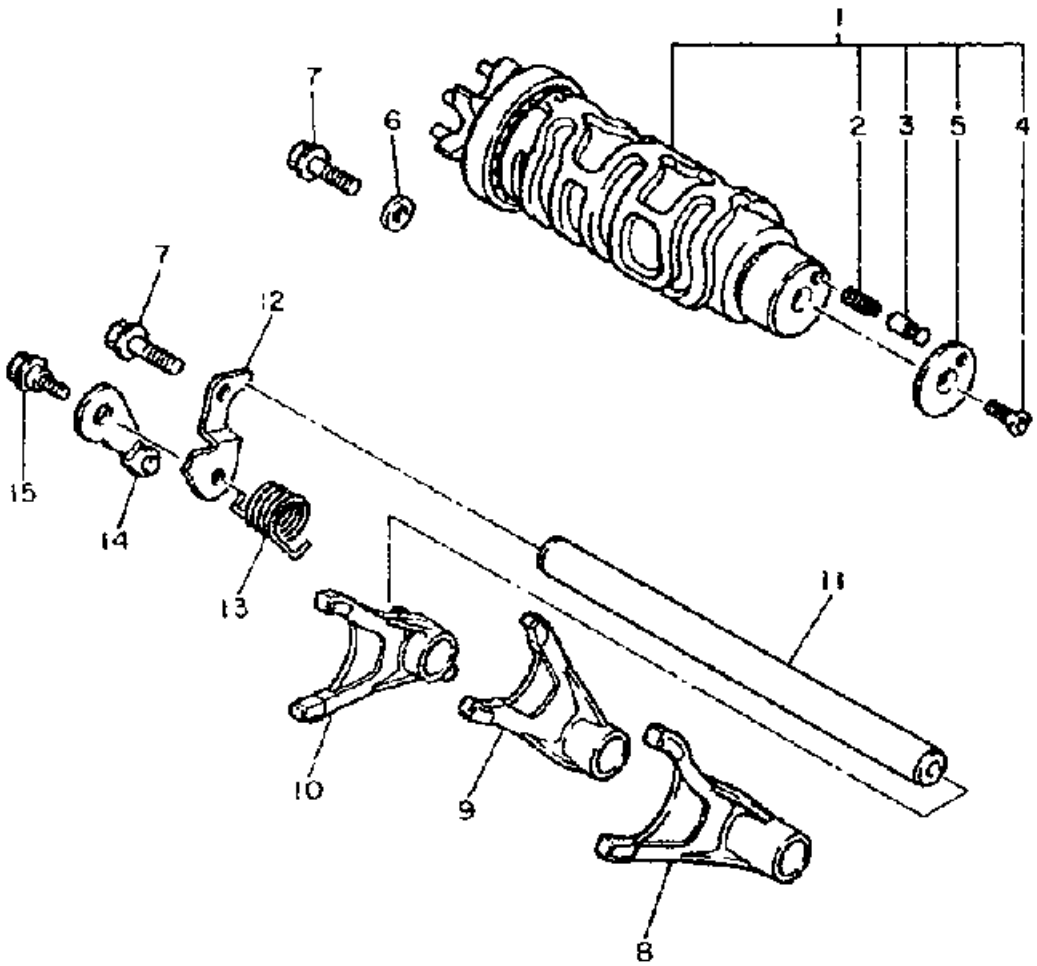


Ref No	Part No	Description
01	1AE-18540-01-00	• . Shift Cam Assy
02	90501-06022-00	• . Spring, Compression
03	278-18542-00-00	• . Point, Neutral
04	98701-05012-00	• . Screw, Flat Head
05	278-18566-00-00	• . Plate, Side 2
06	90201-06643-00	Washer, Plate
07	95822-06016-00	Bolt, Flange
08	1AE-18511-00-00	Fork, Shift 1
09	1AE-18512-00-00	Fork, Shift 2
10	1AE-18513-00-00	Fork, Shift 3
11	12R-18531-00-00	Bar, Shift Fork Guide 1
12	1AE-18536-00-00	Stopper, Shift Bar
13	90508-26681-00	Spring, Torsion
14	36Y-18140-00-00	Stopper Lever Assy
15	90109-065A9-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

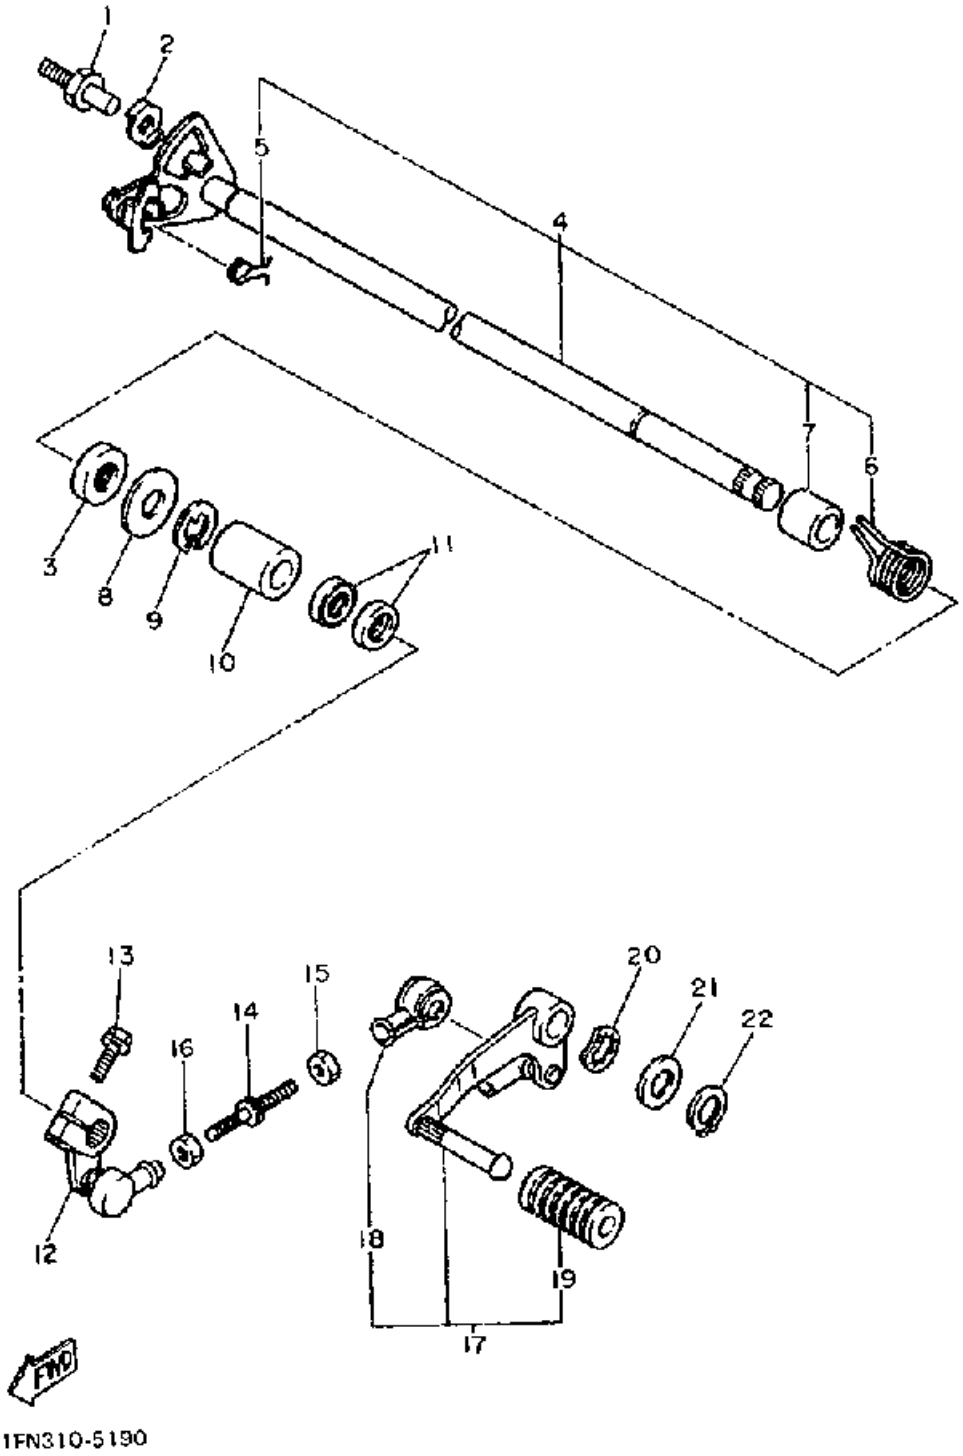


Ref No	Part No	Description
01	4GO-18127-00-00	Stopper, Screw
02	90215-08115-00	Washer, Lock
03	93102-12106-00	Oil Seal (sd 12-22-5 Hs)
04	1AE-18101-00-00	Shift Shaft Assy
05	90508-10514-00	Spring, Torsion
06	90508-32682-00	• . Spring, Torsion
07	90387-114K8-00	• . Collar
08	90201-12575-00	Washer, Plate
09	99001-10600-00	Circlip
10	90560-12191-00	Spacer
11	93109-12053-00	Oil Seal
12	1AE-18112-00-00	Arm, Shift
13	91026-06020-00	Bolt, Flange
14	1AE-18115-00-00	Rod, Shift
15	90170-06289-00	Nut
16	95316-06700-00	Nut
17	1AE-18110-01-00	Shift Pedal Assy
18	2H9-18154-00-00	• . Cover, Dust
19	132-18113-01-00	• . Cover, Shift Pedal
20	90206-12074-00	Washer, Wave
21	90201-124E4-00	Washer, Plate
22	99009-12400-00	Circlip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

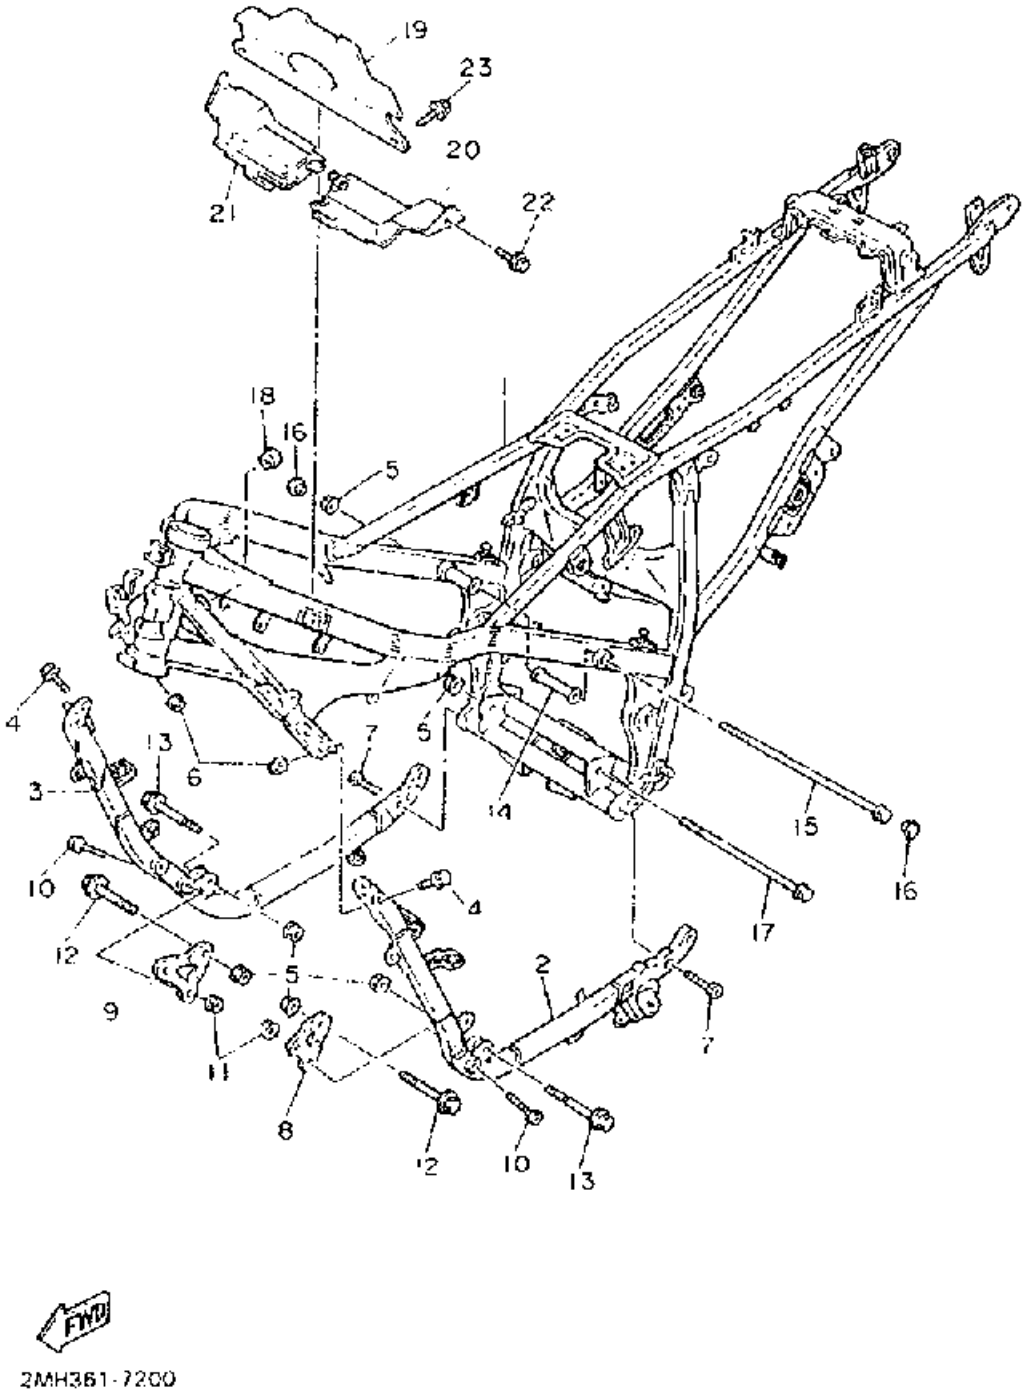


Ref No	Part No	Description
01	3DX-21110-00-MA	Frame Comp.
02	2KT-21140-01-MA	Down Tube Comp.
03	2KT-21150-00-MA	Down Tube Comp.2
04	95821-10040-00	Bolt, Flange
05	90179-10247-00	Nut
06	95601-10200-00	Nut, Self-locking
07	90110-08152-00	Bolt, Hexagon Socket Head
08	1AE-21315-00-00	Stay, Engine 2
09	1AE-21316-00-00	Stay, Engine 3
10	91311-08050-00	Bolt
11	95701-08500-00	Nut, Flange
12	90105-10423-00	Bolt, Washer Based
13	90105-10170-00	Bolt, Washer Based
14	1AE-21459-00-00	Spacer
15	90105-10056-00	Bolt, Washer Based
16	90338-23172-00	Plug
17	90105-10042-00	Bolt, Washer Based
18	90480-18171-00	Grommet
19	1AE-1246A-00-00	Cover 1
20	1AE-1246E-00-00	Cover 2
21	1AE-1246F-00-00	Cover 3
22	95826-06012-00	Bolt, Flange
23	90119-06061-00	Bolt, With Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

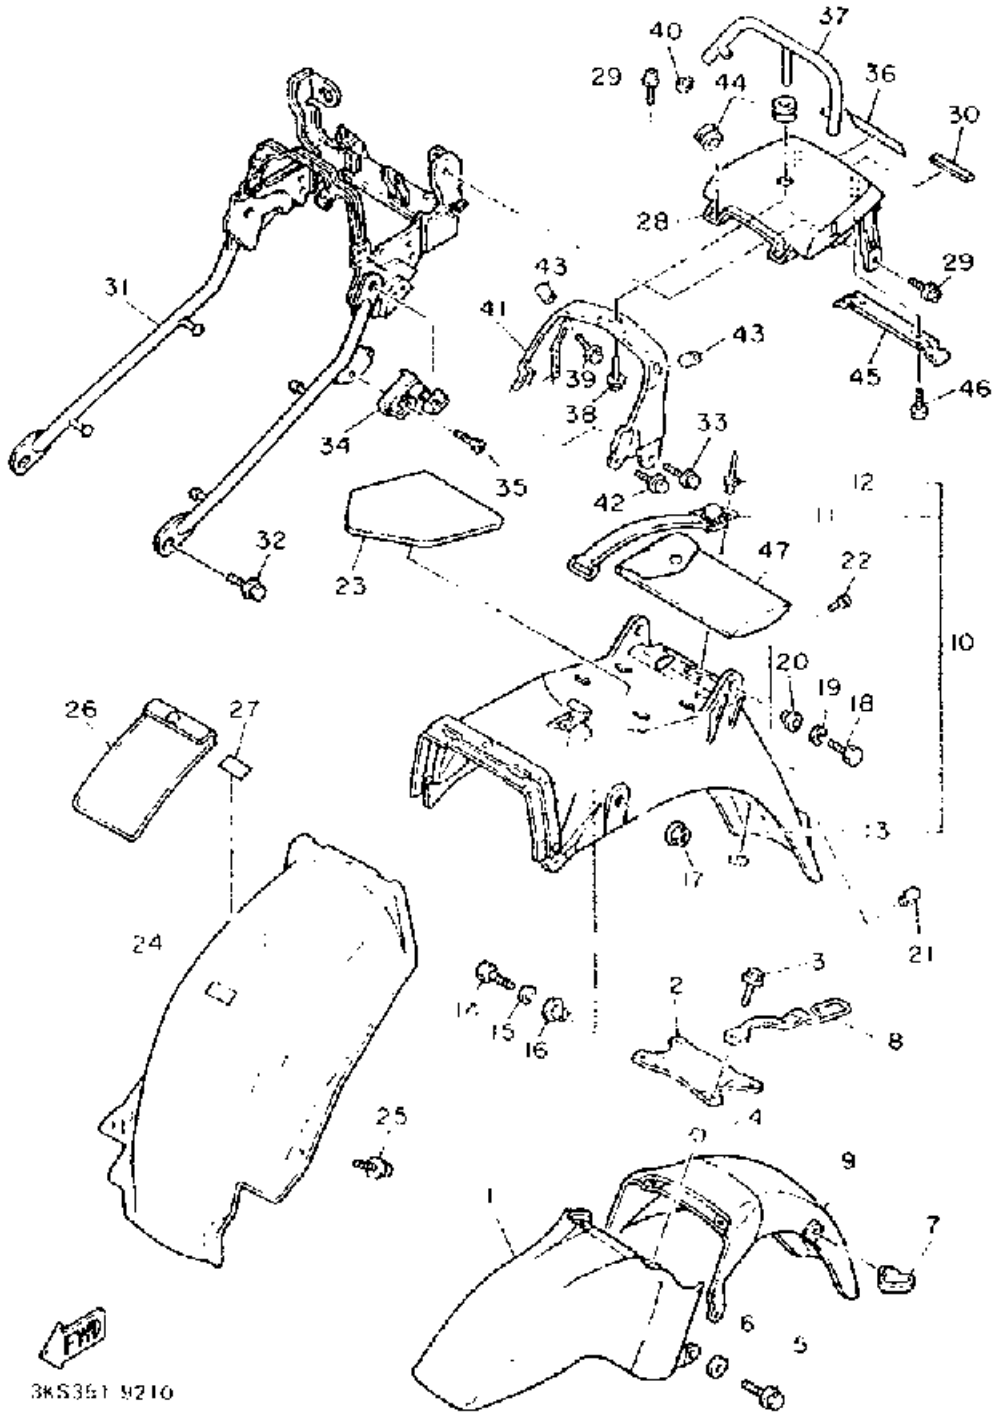


Ref No	Part No	Description
01	1AE-21511-00-GE	Fender, Front
01	1AE-21511-00-7M	Fender, Front
02	1AE-21512-00-00	Bracket, Fender
03	90105-06399-00	Bolt, Washer Based
04	90387-06022-00	Collar
05	95026-06020-00	Bolt, Flange
06	90201-062A8-00	Washer, Plate
07	1A8-21518-00-00	Holder, Cable
08	3KS-21596-00-00	Holder
09	1AE-21556-00-GE	Fender, Front 2
09	1AE-21556-00-7M	Fender, Front 2
10	3KS-W2161-00-00	Rear Fender Comp.
11	36Y-21376-00-00	Band, Tool
12	90267-40076-00	Rivet, Blind
13	92990-04200-00	Washer, Plain
14	97016-06016-00	Bolt
15	92906-06100-00	Washer, Spring
16	90387-06648-00	Collar
17	95706-06500-00	Nut, Flange
18	97016-06020-00	Bolt
19	92906-06100-00	Washer, Spring
20	90387-064L2-00	Collar
21	2MG-21639-00-00	Damper 2
22	90338-07180-00	Plug
23	2KT-2848K-00-00	Seat 2
24	36Y-21629-00-00	Guard, Mud
25	90119-06108-00	Bolt, With Washer
26	4K5-28186-00-00	Pouch
27	4K5-2814E-10-00	Hook
28	2MG-21651-00-GE	Cover, Rear Fender
28	2MG-21651-00-7M	Cover, Rear Fender
29	90159-06042-00	Screw, With Washer
30	2KT-21649-00-00	Damper
31	2MG-21640-00-00	Rear Stay Comp.
32	95806-08016-00	Bolt, Flange
33	95806-08025-00	Bolt, Flange
34	26H-21308-00-00	Helmet Hanger Assy
35	90149-06150-00	Screw
36	99236-00020-00	Emblem, Yamaha
36	99233-00020-00	Emblem, Yamaha
37	1TV-24773-00-00	Handle, Seat
38	95023-08025-00	Bolt, Flange
39	95023-08035-00	Bolt, Flange
40	90338-15110-00	Plug
41	2MG-2474F-00-00	Stay, Front 1
42	95026-08012-00	Bolt, Flange
43	90560-08237-00	Spacer
44	90480-15397-00	Grommet
45	2KT-21688-00-00	Bracket, Rear Stay
46	97701-40510-00	Screw, Panhead Tapping
47	2KT-28100-00-00	Tool Kit

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

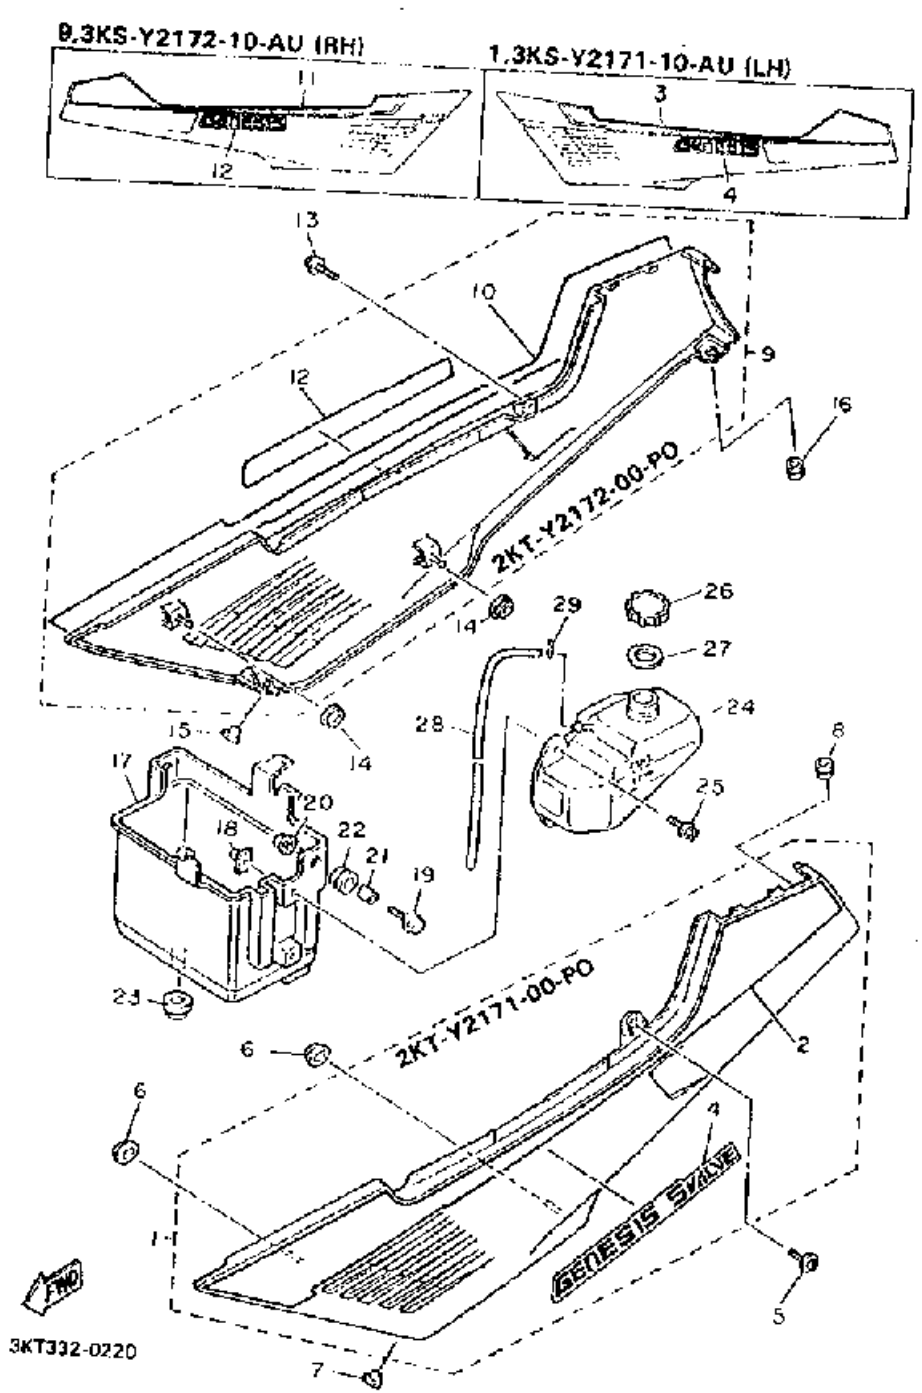


Ref No	Part No	Description
01	2KT-Y2171-00-P0	Cover, Side 1
01	3KS-Y2171-10-AU	Cover, Side 1
02	3KS-2173E-20-00	• . Graphic 1
03	3KS-2173L-00-00	• . Graphic Set 1
04	3KS-21737-20-00	• . Emblem
04	3KS-21782-00-00	• . Emblem 2
05	90159-06033-00	Screw, With Washer
06	90480-01401-00	Grommet
07	90480-10190-00	Grommet
08	90480-10334-00	Grommet
09	2KT-Y2172-00-P0	Cover, Side 2
09	3KS-Y2172-10-AU	Cover, Side 2
10	3KS-2173F-20-00	• . Graphic 2
11	3KS-2174L-00-00	• . Graphic Set 2
12	3KS-21737-20-00	• . Emblem
12	3KS-21782-00-00	• . Emblem 2
13	90159-06033-00	Screw, With Washer
14	90480-01401-00	Grommet
15	90480-10190-00	Grommet
16	90480-10334-00	Grommet
17	36Y-21245-00-00	Box
18	31A-14477-00-00	Plate
19	90119-06097-00	Bolt, With Washer
20	95701-06500-00	Nut, Flange
21	90387-060A7-00	Collar
22	90480-16233-00	Grommet
23	90480-23192-00	Grommet
24	1AE-21871-00-00	Tank, Recovery
25	90159-06056-00	Screw, With Washer
26	26H-21875-00-00	Cap
27	26H-21874-00-00	Gasket
28	90446-09246-00	Hose
29	90467-08003-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

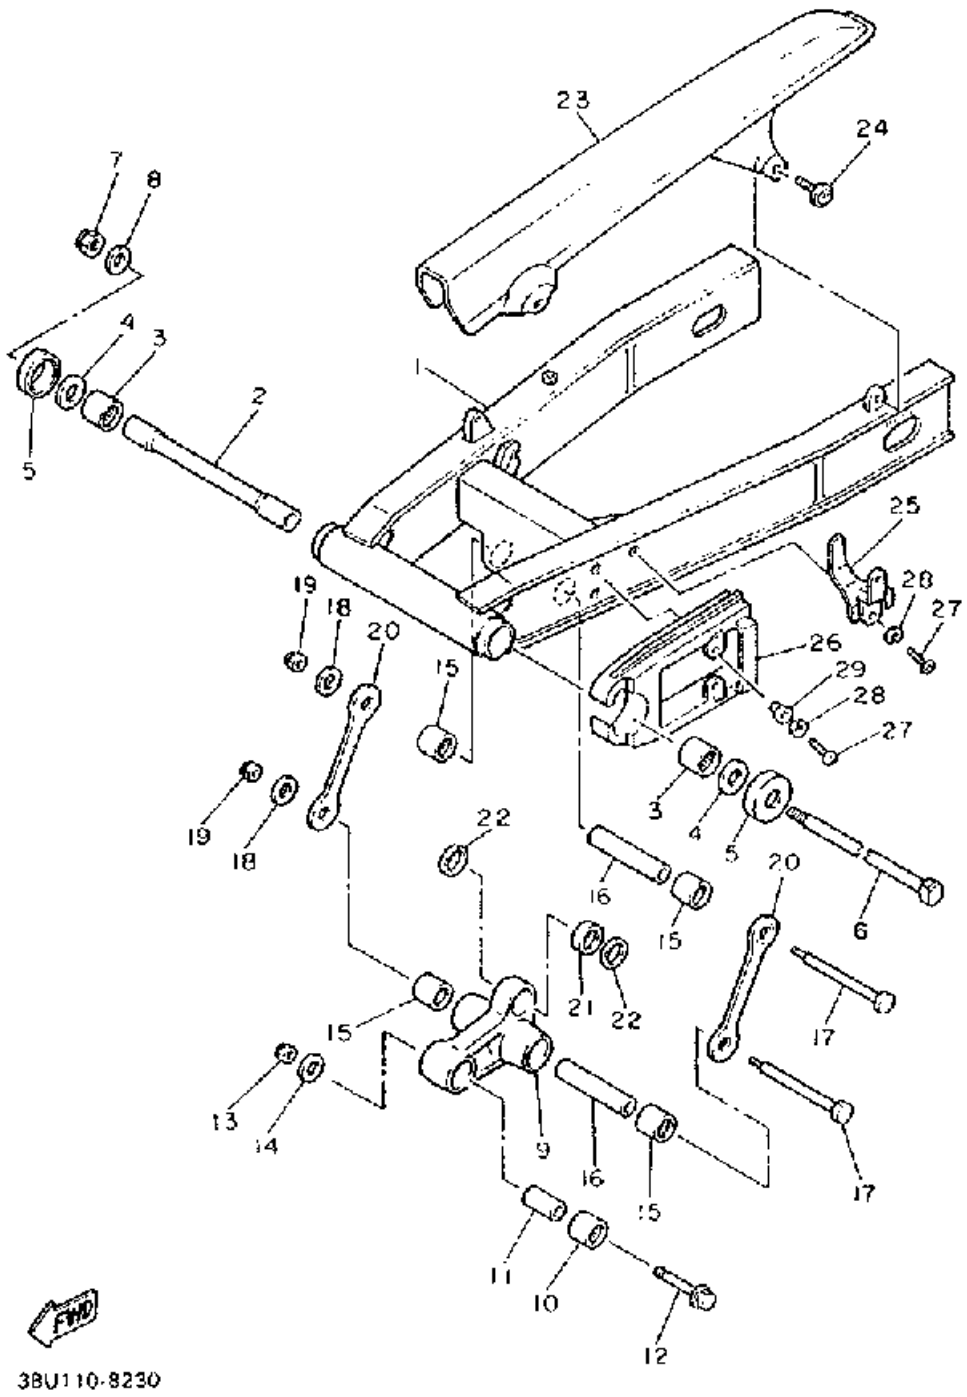


Ref No	Part No	Description
01	2KT-22110-00-00	Rear Arm Comp.
02	36Y-22184-00-00	Bush
03	93317-42550-00	Bearing
04	36Y-22127-00-00	Shim
05	36Y-22128-00-00	Cover, Thrust 1
06	1AE-22141-00-00	Shaft, Pivot
07	90185-14070-00	Nut, Self-locking
08	90201-14222-00	Washer, Plate
09	2KT-2217A-00-00	Arm, Relay
10	93317-42060-00	Bearing
11	90387-100T8-00	Collar
12	90105-10451-00	Bolt, Washer Based
13	95611-10100-00	Nut, U
14	90201-10437-00	Washer, Plate
15	93317-41761-00	Bearing
16	90387-126T1-00	Collar
17	90101-12673-00	Bolt
18	90201-126A7-00	Washer, Plate
19	95611-12100-00	Nut, U
20	2KT-2217M-00-00	Arm 1
21	93399-99919-00	Bearing
23	29L-22311-00-00	Case, Chain
24	90159-06084-00	Screw, With Washer
25	2KT-22321-00-00	Stay, Chain Case 1
26	2KT-22151-00-00	Seal, Guard
27	92501-06025-00	Screw, Pan Head
28	92990-06100-00	Washer, Spring
29	90387-06681-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

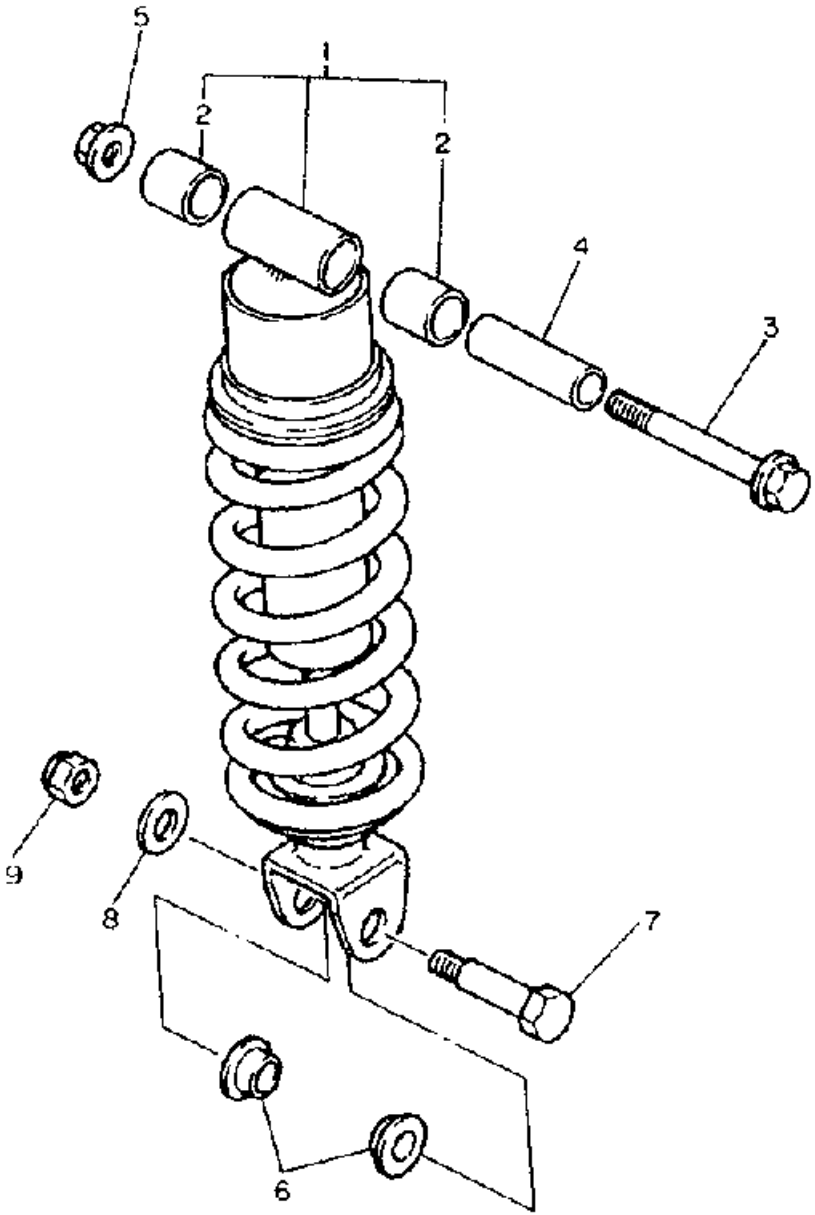

Ref No	Part No	Description
01	2KT-22210-00-00	Shock Absorber Assy, Rear
02	90384-18157-00	• . Bush, Bimetal Formed
03	90105-12382-00	Bolt, Washer Based
04	90387-127H0-00	Collar
05	90185-12072-00	Nut, Self-locking
06	90387-124W2-00	Collar
07	90101-10659-00	Bolt
08	90201-10437-00	Washer, Plate
09	95611-10100-00	Nut, U


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

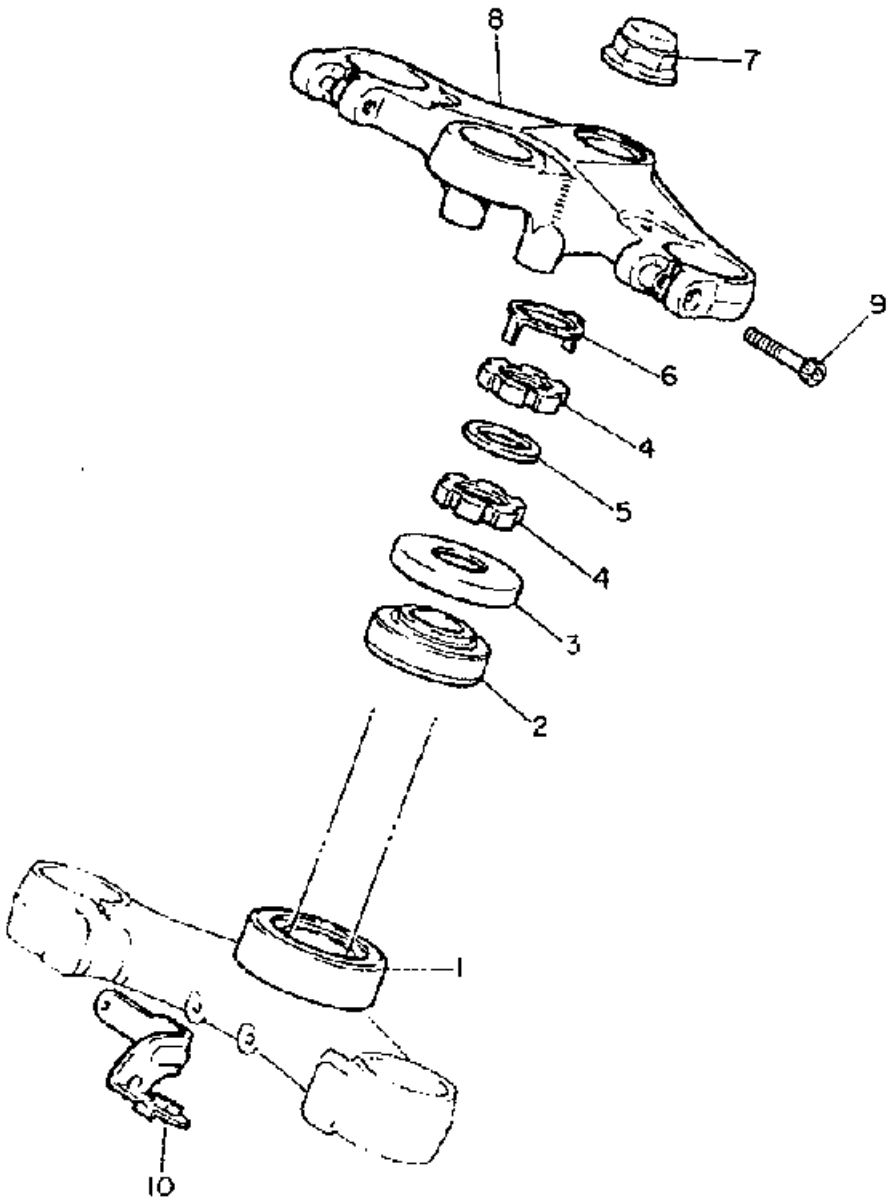

1FN310-5250


Ref No	Part No	Description
01	93332-00008-00	Bearing
02	93332-00023-00	Bearing
03	4H3-23415-00-00	Cover, Ball Race 1
04	90179-25495-00	Nut
05	90202-26142-00	Washer, Plate
06	26H-23418-01-00	Washer, Special
07	90179-22455-00	Nut
08	1AE-23435-00-98	Crown, Handle
09	91316-08030-00	Bolt
10	1AE-2317E-00-00	Stay

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

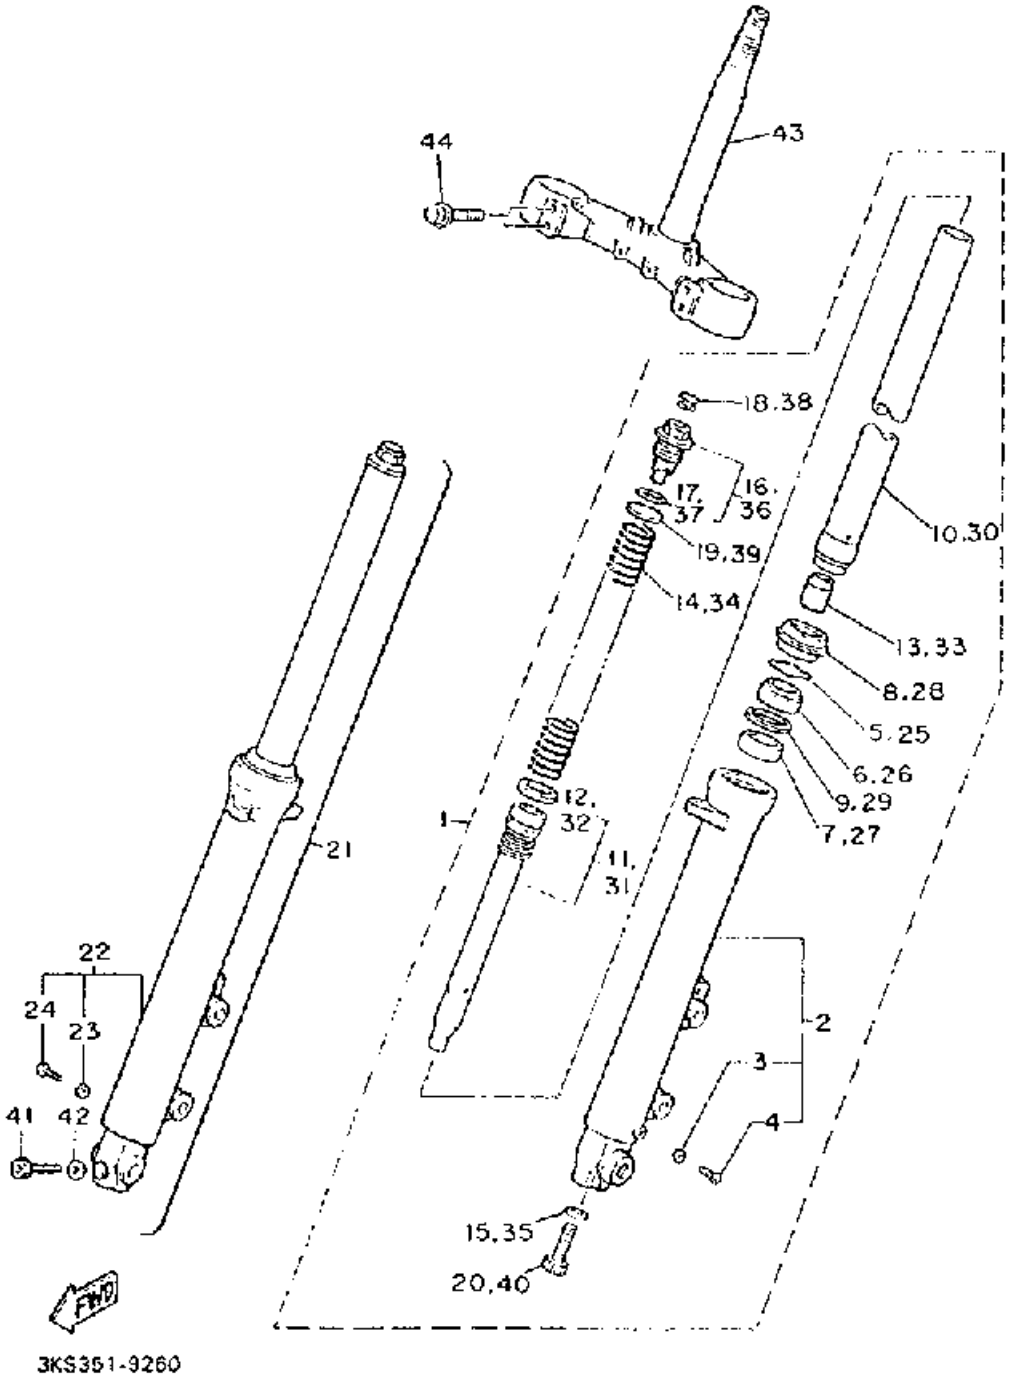


Ref No	Part No	Description
01	2KS-23102-00-00	Front Fork Assy (l.h)
02	3KS-23126-00-00	• . Tube, Outer (left)
03	122-23129-00-00	•• .. Gasket, Drain Plug
04	4H7-23119-00-00	•• .. Plug, Drain
05	26H-23156-00-00	• . Clip, Oil Seal
06	1AE-23145-00-00	• . Oil Seal
07	3KS-23125-00-00	• . Metal, Slide 1
08	1AE-23144-00-00	• . Seal, Dust
09	1AE-23149-00-00	• . Washer, Spring Upper
10	3KS-23110-00-00	• . Inner Tube Comp.1
11	3KS-23170-00-00	• . Cylinder Comp., Front Fork
12	1AE-23157-00-00	•• .. Ring, Piston
13	2YK-23173-00-00	• . Spindle, Taper
14	2KT-23141-00-00	• . Spring, Front Fork
15	509-23158-L0-00	• . Gasket
16	2KT-23111-00-00	• . Bolt, Cap
17	1W4-23114-L0-00	•• .. Gasket
18	2KT-23168-00-00	• . Cap, Front Fork
19	2KT-23149-00-00	• . Washer, Spring Upper
20	278-23181-50-00	• . Bolt, Hexagon Socket Head
21	3KS-23103-00-00	• . Front Fork Assy (r.h)
22	3KS-23136-00-00	• . Tube, Outer (right)
23	122-23129-00-00	•• .. Gasket, Drain Plug
24	4H7-23119-00-00	•• .. Plug, Drain
25	26H-23156-00-00	• . Clip, Oil Seal
26	1AE-23145-00-00	• . Oil Seal
27	3KS-23125-00-00	• . Metal, Slide 1
28	1AE-23144-00-00	• . Seal, Dust
29	1AE-23149-00-00	• . Washer, Spring Upper
30	3KS-23110-00-00	• . Inner Tube Comp.1
31	3KS-23170-00-00	• . Cylinder Comp., Front Fork
32	1AE-23157-00-00	•• .. Ring, Piston
33	2YK-23173-00-00	• . Spindle, Taper
34	2KT-23141-00-00	• . Spring, Front Fork
35	509-23158-L0-00	• . Gasket
36	2KT-23111-00-00	• . Bolt, Cap
37	1W4-23114-L0-00	•• .. Gasket
38	2KT-23168-00-00	• . Cap, Front Fork
39	2KT-23149-00-00	• . Washer, Spring Upper
40	278-23181-50-00	• . Bolt, Hexagon Socket Head
41	1WG-23128-00-00	• . Bolt, Axle Holder
42	90201-08085-00	• . Washer, Plate
43	1AE-23340-00-00	Under Bracket Comp.
44	1AE-23128-00-00	Bolt, Axle Holder

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

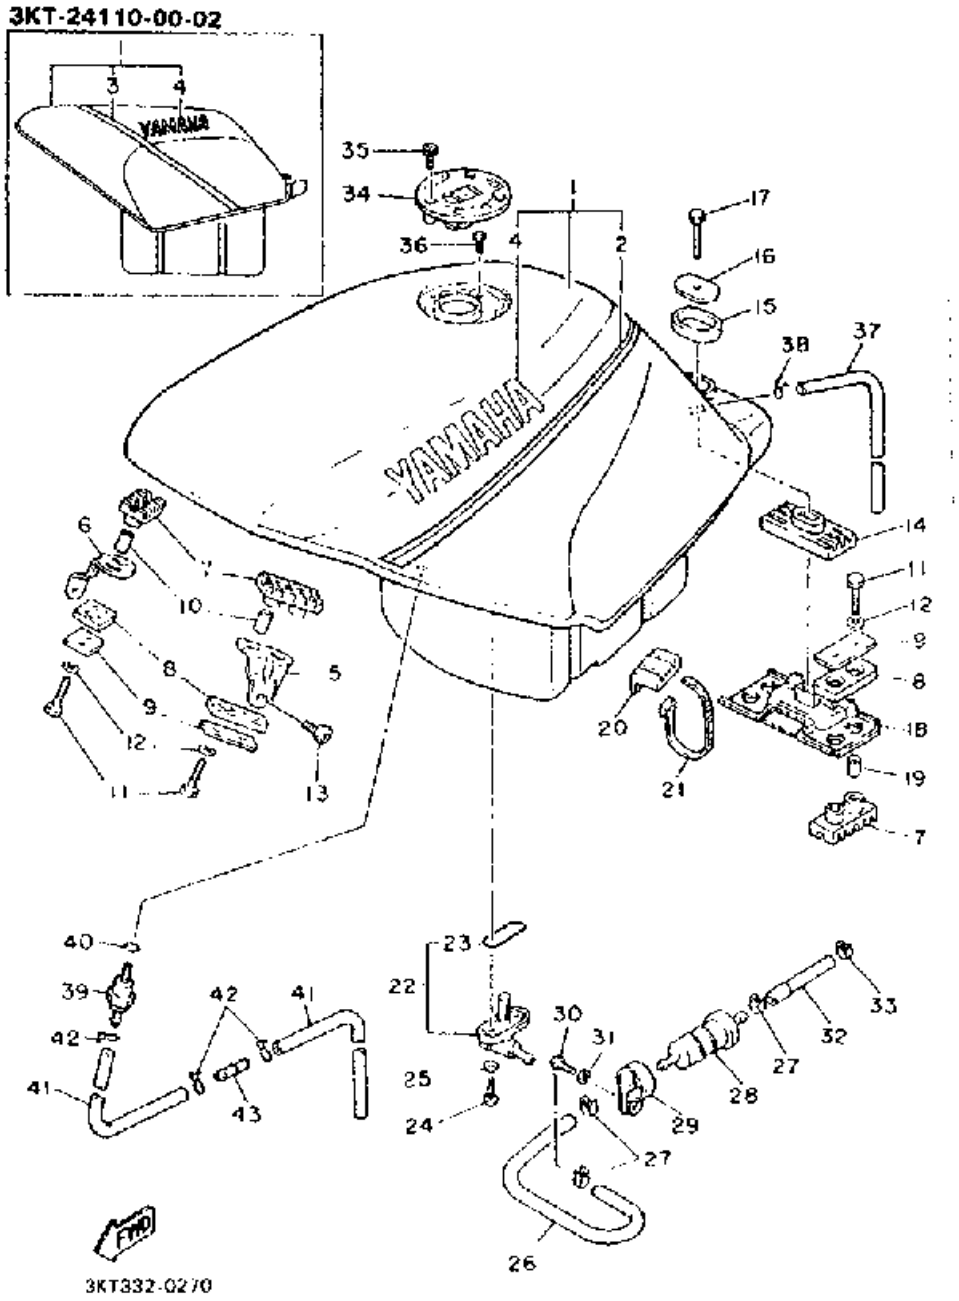


Ref No	Part No	Description
01	3KT-24110-00-04	Fuel Tank Comp.
01	3KT-24110-00-02	Fuel Tank Comp.
02	3KS-24244-20-00	• . Graphic, Fuel Tank 1
03	3KS-24246-00-00	• . Graphic 3
04	99226-00045-00	• . Emblem, Yamaha
04	99226-00040-00	• . Emblem, Yamaha
05	1AE-24191-01-00	Bracket, Fuel Tank 1
06	1AE-24192-01-00	Bracket, Fuel Tank 2
07	1AE-24181-01-00	Damper, Locating 1
08	47X-24183-00-00	Damper, Locating 3
09	47X-24186-00-00	Washer, Special
10	90387-060N3-00	Collar
11	97001-06035-00	Bolt
12	92990-06100-00	Washer, Spring
13	90109-086A0-00	Bolt
14	1AE-24183-00-00	Damper, Locating 3
15	3Y6-24183-00-00	Damper, Locating 3
16	12R-24186-00-00	Washer, Special
17	97002-08030-00	Bolt
18	1AE-24117-00-00	Stay, Fuel Tank
19	90387-060N3-00	Collar
20	1AE-24182-00-00	Damper, Locating 2
21	5Y9-12491-00-00	Clamp 1
22	26H-24500-00-00	Fuel Cock Assy 1
23	214-24512-00-00	• . Gasket
24	90149-06011-00	Screw
25	90202-05193-00	Washer, Plate
26	1AE-24311-01-00	Pipe, Fuel 1
27	90467-11044-00	Clip
28	1FK-24560-00-00	Filter Assy
29	1AE-24366-00-00	Clamp, Fuel Pipe 1
30	92501-06012-00	Screw, Pan Head
31	92990-06100-00	Washer, Spring
32	1AE-24312-00-00	Pipe 2
33	90467-10091-00	Clip
34	1LJ-24602-12-00	Cap Assy
36	91311-05010-00	Bolt
37	90445-10366-00	Hose
38	90467-09006-00	Clip
39	20K-24180-00-00	Roll Over Valve Assy
40	93210-10166-00	O-ring
41	90445-10142-00	Hose
42	90467-09006-00	Clip
43	42H-24119-00-00	Tube, Connecting

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

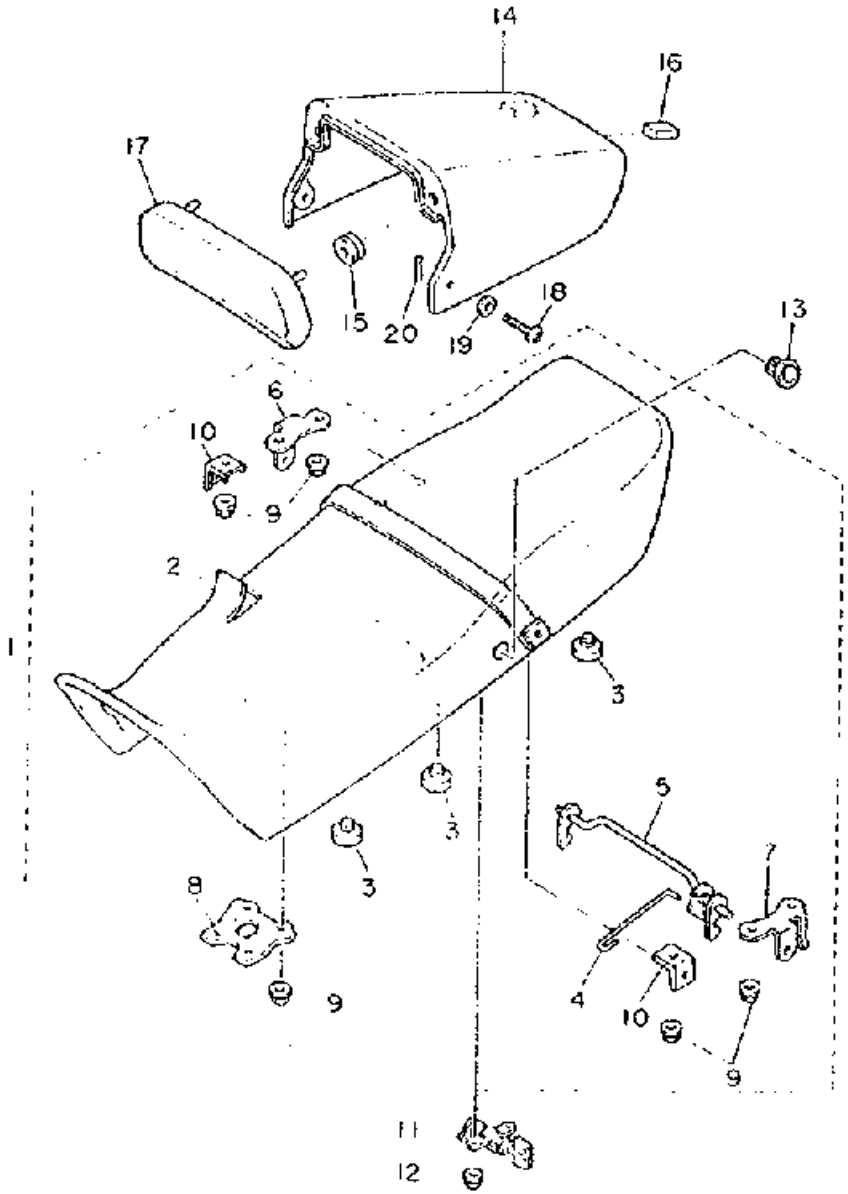


Ref No	Part No	Description
01	1AE-24730-00-00	Double Seat Assy
02	1AE-24731-00-00	• . Cover, Seat
03	22W-24741-00-00	• . Pad, Seat
04	47X-2478F-00-00	• . Rod, Connecting
05	47X-24776-00-00	• . Lever, Seat
06	47X-24728-01-00	• . Bracket, Seat
07	47X-24718-01-00	• . Bracket, Seat
08	1AE-24748-00-00	• . Bracket, Seat
09	95701-06500-00	• . Nut, Flange
10	4K0-24748-00-00	• . Bracket, Seat
11	51X-24705-00-00	Seat Lock Assy
12	95701-05500-00	Nut, Flange
13	1AE-24796-00-00	Cover
14	1FN-24791-00-7M	Cover, Seat Back
14	1FN-24791-00-GE	Cover, Seat Back
15	29L-24742-50-00	Grommet
16	34M-2139X-00-00	Damper
17	1FN-2840F-00-00	Back Rest Assy
18	90149-06218-00	Screw
19	90202-07015-00	Washer, Plate
20	90468-10050-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

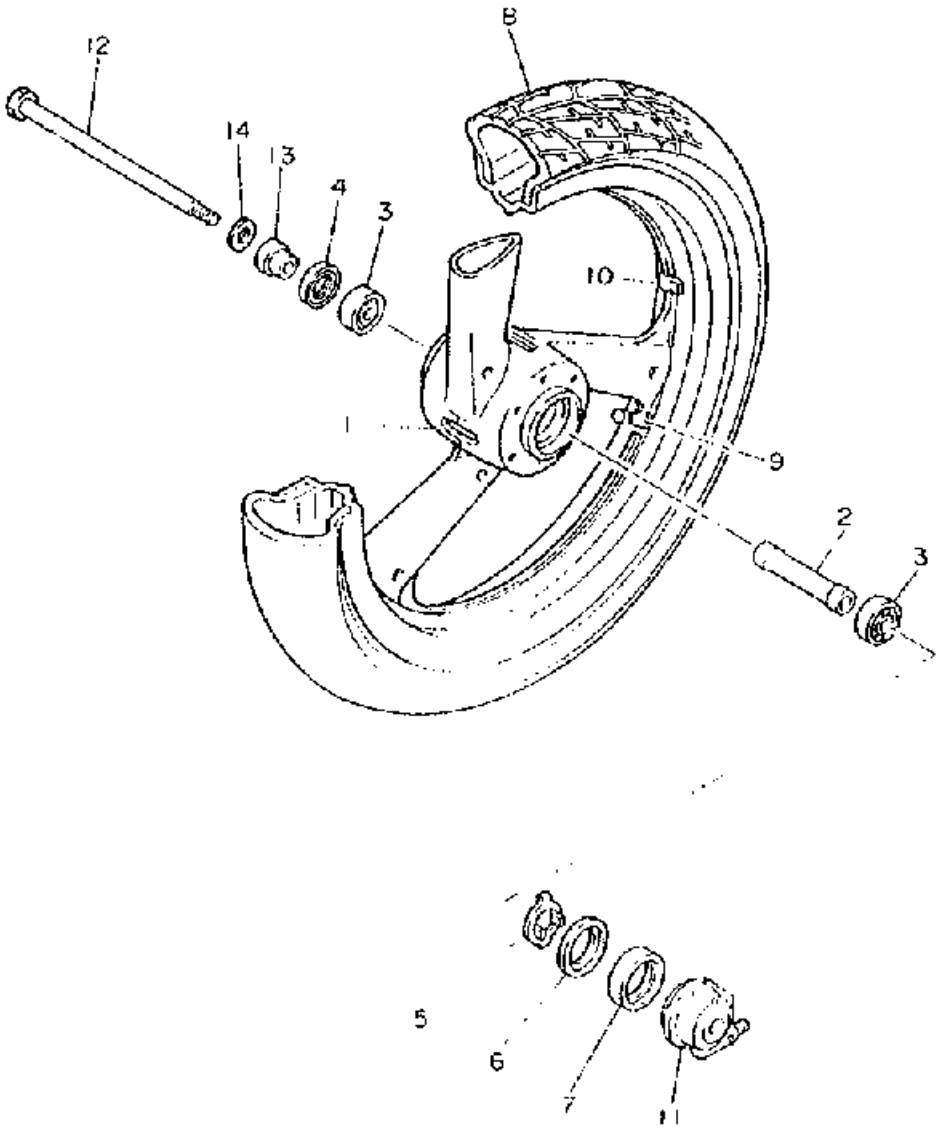


Ref No	Part No	Description
01	3CV-25168-00-UA	Cast Wheel, Front
01	3CV-25168-00-WG	Cast Wheel, Front
02	90560-15255-00	Spacer
03	93306-30203-00	Bearing
04	93102-22014-00	Oil Seal
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93105-45017-00	Oil Seal
08	94112-172U5-00	Tire (120.70 V17-v250)
08	94112-172U4-00	Tire (120/70v17-v250)
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel 910g0
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	2GH-25190-00-00	Gear Unit Assy
12	47X-25181-00-00	Axle, Wheel
13	90387-15550-00	Collar
14	90201-15238-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

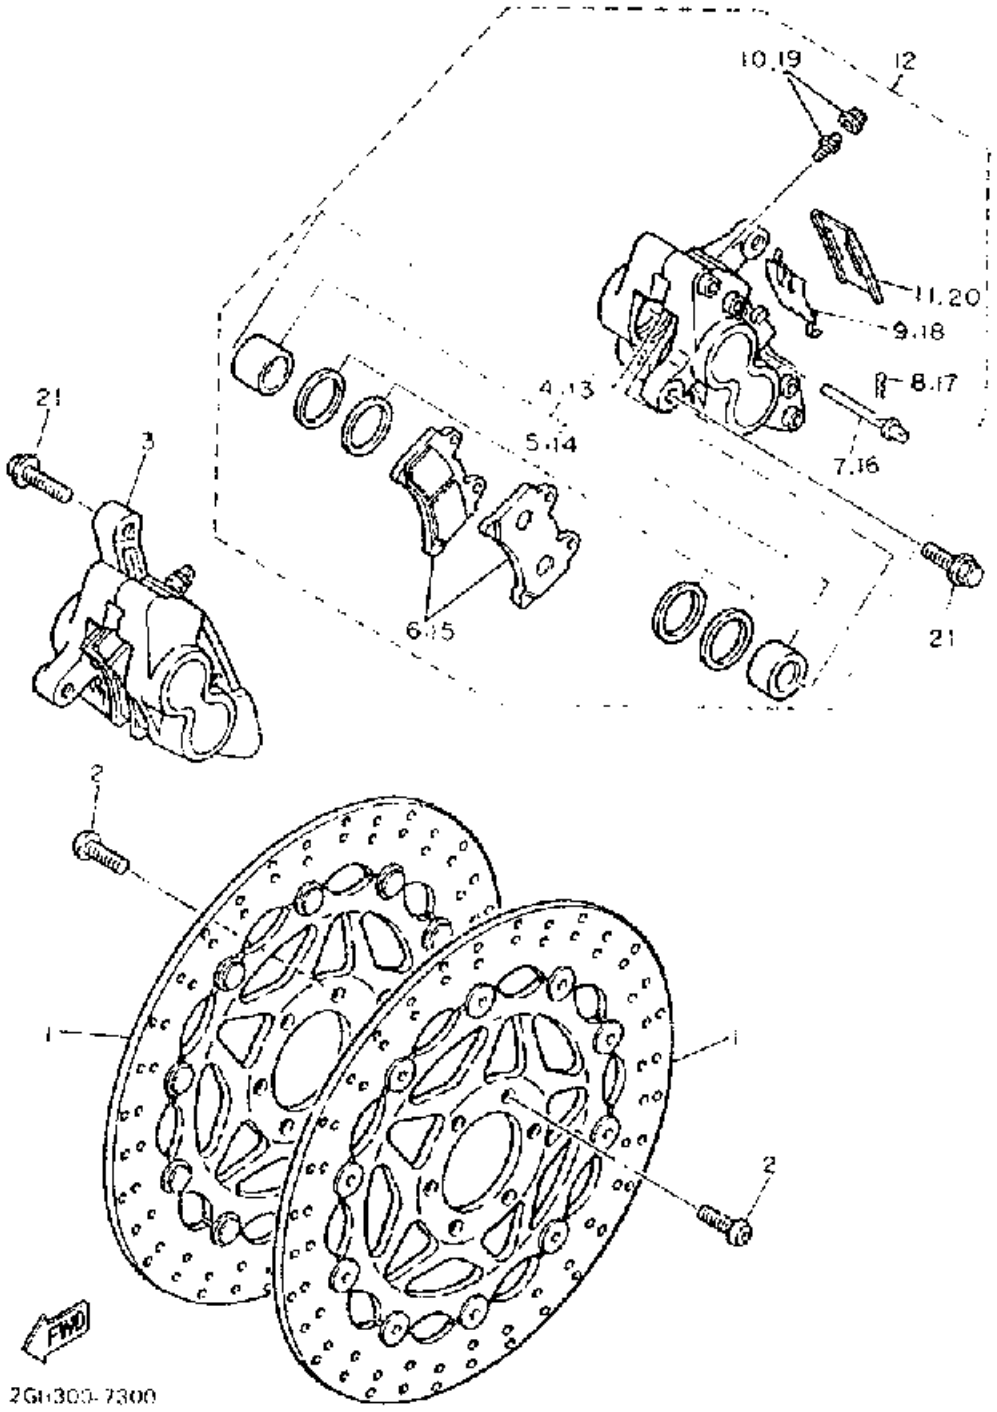


Ref No	Part No	Description
01	3CW-2581T-00-00	Disc Brake Assy
02	90109-08718-00	Bolt
03	2GH-25810-01-00	• . Caliper Assy
04	1NL-W0057-00-00	• . Piston Assy, Caliper
05	1NL-W0047-00-00	•• .. Caliper Seal Kit
06	2GH-W0045-01-00	• . Brake Pad Kit
07	1KT-25924-00-00	• . Pin, Pad
08	1KT-25925-00-00	• . Clip
09	2GH-25919-00-00	• . Support, Pad
10	1J3-W0048-00-00	• . Bleed Screw Kit Entluftungsschraubensatz
11	1KT-25836-00-00	• . Cover, Dust
12	2GH-25810-11-00	Caliper Assy
13	1NL-W0057-00-00	• . Piston Assy, Caliper
14	1NL-W0047-00-00	•• .. Caliper Seal Kit
15	2GH-W0045-01-00	• . Brake Pad Kit
16	1KT-25924-00-00	• . Pin, Pad
17	1KT-25925-00-00	• . Clip
18	2GH-25919-00-00	• . Support, Pad
19	1J3-W0048-00-00	• . Bleed Screw Kit Entluftungsschraubensatz
20	1KT-25836-00-00	• . Cover, Dust
21	90105-10308-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

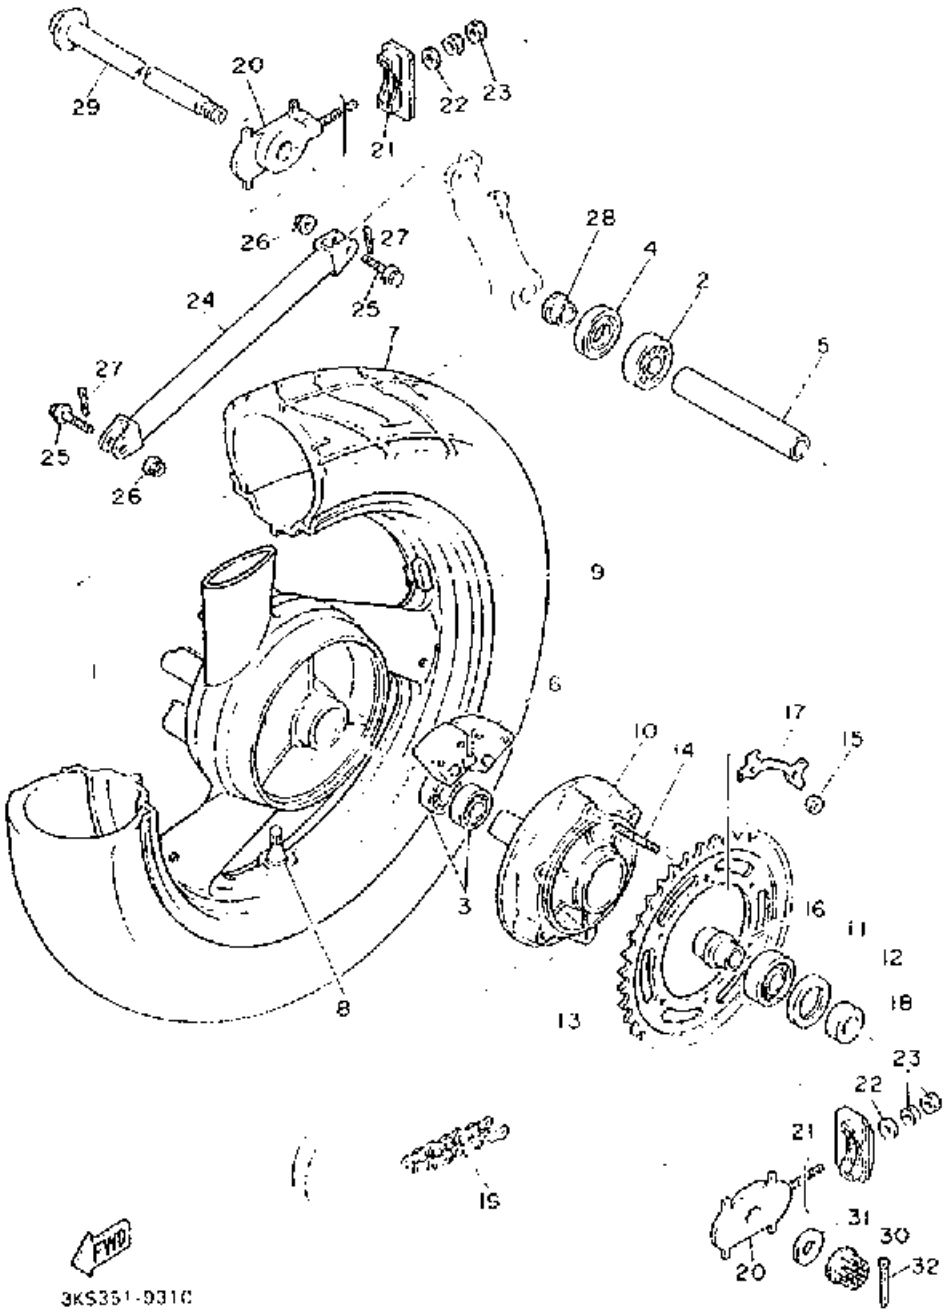


Ref No	Part No	Description
01	3KS-25338-00-UA	Cast Wheel, Rear
01	3KS-25338-00-WG	Cast Wheel, Rear
02	93306-30306-00	Bearing (b6303)
03	93306-20310-00	Bearing (b6203du)
04	93102-25044-00	Oil Seal
05	90387-173M5-00	Collar
06	1UF-25364-00-00	Damper
07	94114-182U6-00	Tire (140/70 V18-v250)
07	94114-182U7-00	Tire (140/70 V18-v250)
08	93900-00030-00	Valve, Rim
09	29L-25398-00-00	Balancer, Wheel (10g)
09	29L-25398-10-00	Balancer, Wheel (20g)
09	29L-25398-20-00	Balancer, Wheel (30g)
10	1AE-25366-00-00	Clutch, Hub
11	93306-37203-00	Bearing
12	93105-42024-00	Oil Seal
13	1UF-25443-20-33	Sprocket, Driven ((43z
14	90116-10482-00	Bolt, Stud
15	90170-10219-00	Nut
16	90387-177K0-00	Collar
17	1UF-25412-00-00	Washer
18	90387-177K1-00	Collar
19	94580-79110-00	Chain (did50va-110l)
20	46X-25388-01-00	Puller, Chain 1 (rk50hf0z1)
21	36Y-25389-00-00	Puller, Chain 2
22	92901-08600-00	Washer, Plate
23	95303-08600-00	Nut
24	1AE-25371-00-00	Bar, Tension
25	90105-08321-00	Bolt, Washer Based
26	95701-08500-00	Nut, Flange
27	91401-20015-00	Pin, Cotter
28	90387-170J6-00	Collar
29	1AE-25381-00-00	Axle, Wheel
30	90171-16024-00	Nut, Castle
31	90201-160F6-00	Washer, Plate
32	91401-30030-00	Pin, Cotter

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

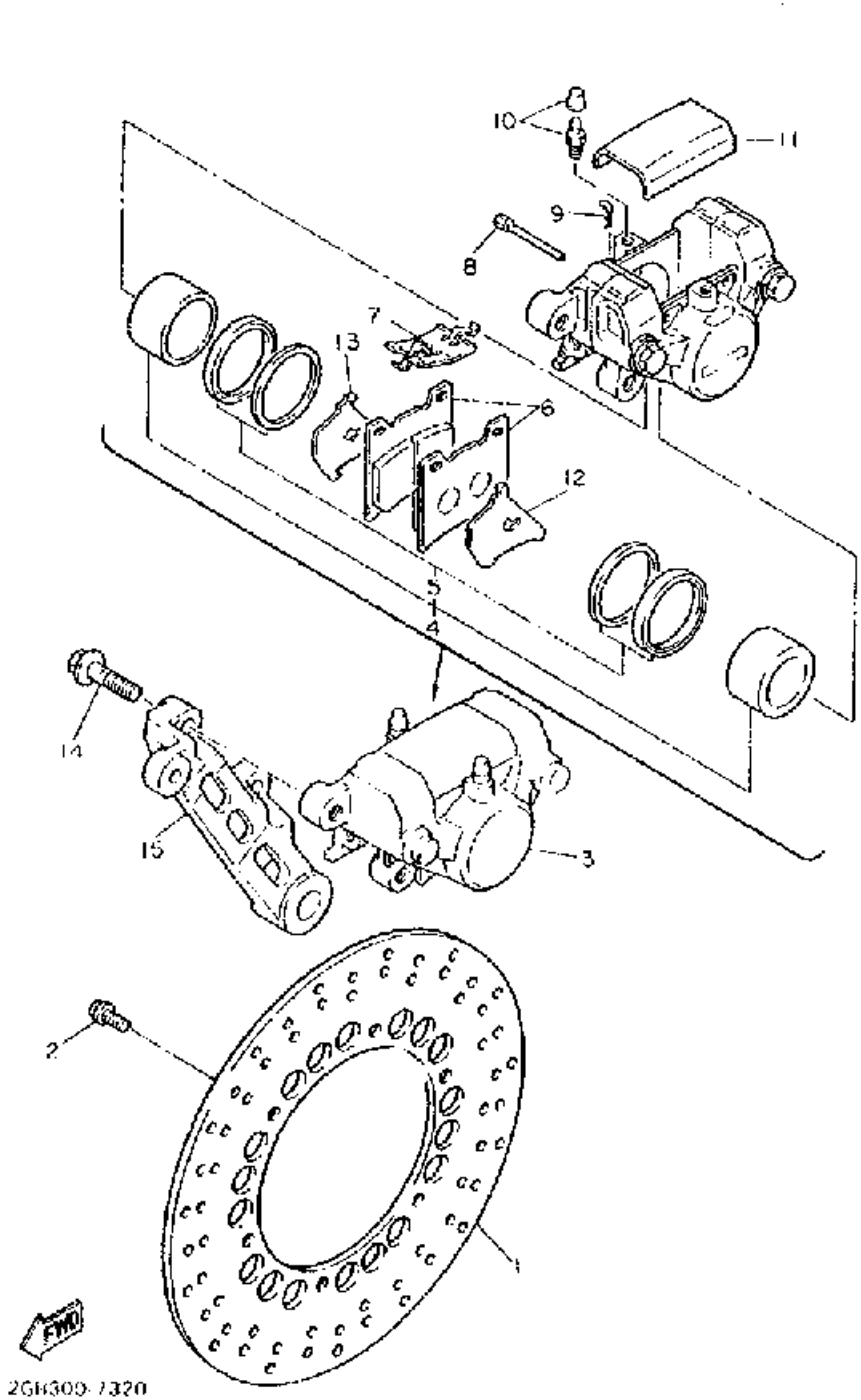


Ref No	Part No	Description
01	2KT-25831-00-00	Disc, Brake
02	90109-085A4-00	Bolt
03	2KT-25810-51-00	Caliper Assy
04	31A-W0057-00-00	• . Piston Assy, Caliper
05	31A-W0047-00-00	•• .. Caliper Seal Kit
06	26H-W0045-11-00	• . Brake Pad Kit
07	29L-25919-00-00	• . Support, Pad
08	1KT-25924-00-00	• . Pin, Pad
09	26H-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Bleed Screw Kit
11	51J-25836-00-00	• . Cover, Dust
12	1FK-25827-00-00	• . Shim, Caliper
13	1FK-25828-00-00	• . Shim, Caliper
14	90105-10363-00	Bolt, Washer Based
15	1AE-25819-51-00	Bracket, Caliper

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

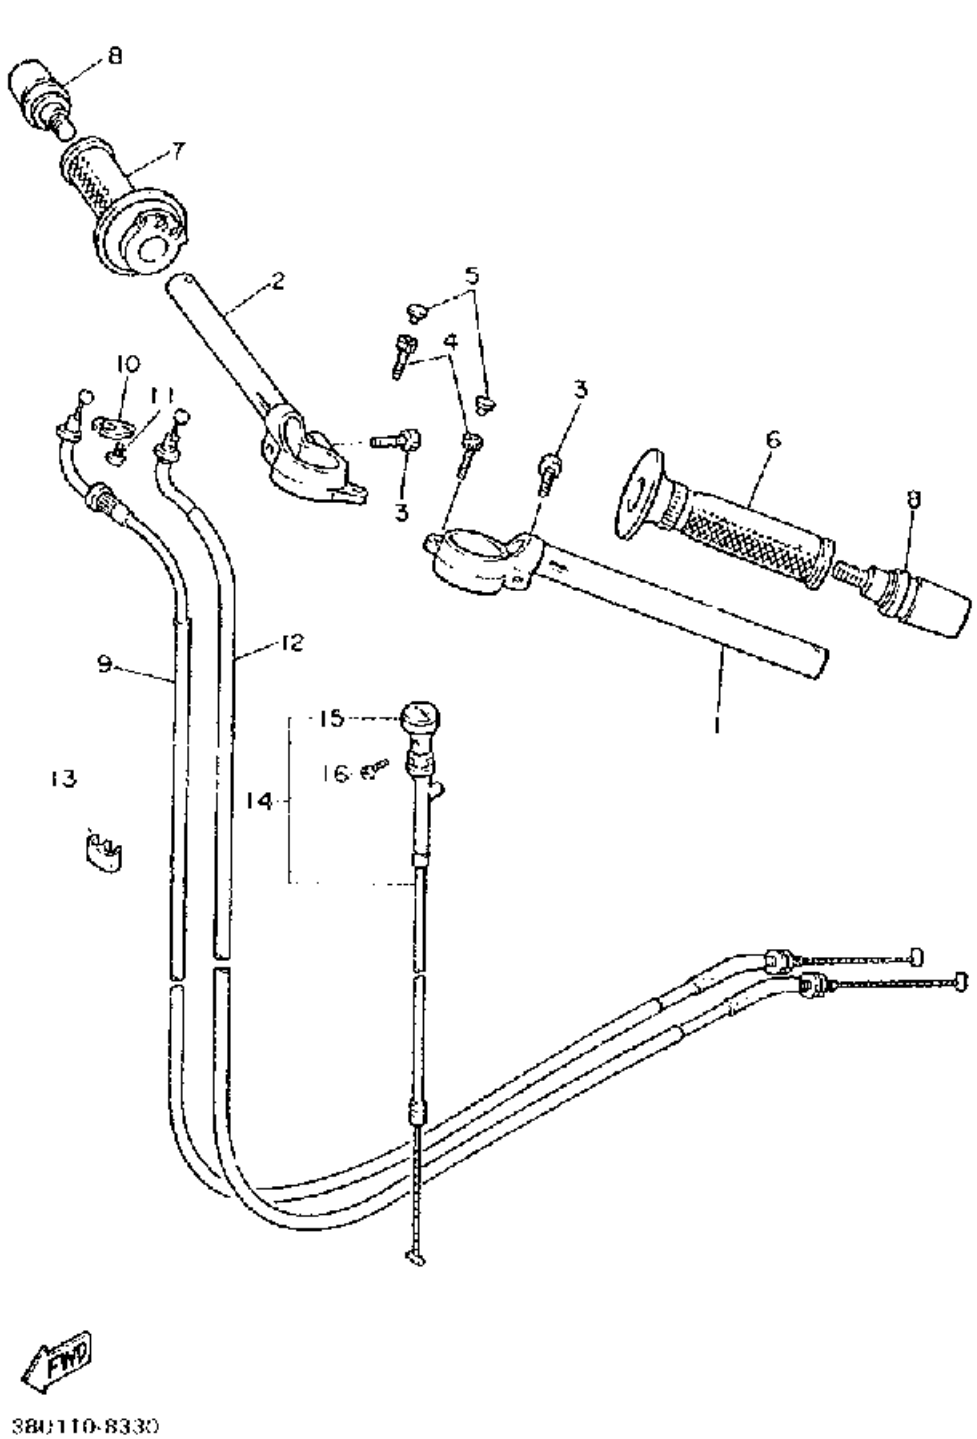


Ref No	Part No	Description
01	1AE-26121-00-00	Handlebar (left)
02	1AE-26122-00-00	Handlebar (right)
03	91316-08030-00	Bolt
04	91316-06016-00	Bolt
05	2H9-23469-00-00	Cap, Bolt
06	31A-26241-00-00	Grip (left)
07	36Y-26240-00-00	Grip Assy
08	36Y-26246-00-00	End, Grip
09	3BV-26311-00-00	Cable, Throttle 1
10	5H0-26393-00-00	Holder
11	98506-05008-00	Screw, Pan Head
12	3BV-26312-00-00	Cable, Throttle 2
13	90464-60067-00	Clamp
14	2KT-26330-00-00	Starter Cable Assy
15	1AE-26325-00-00	• . Knob, Starter
16	90149-03132-00	• . Screw

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

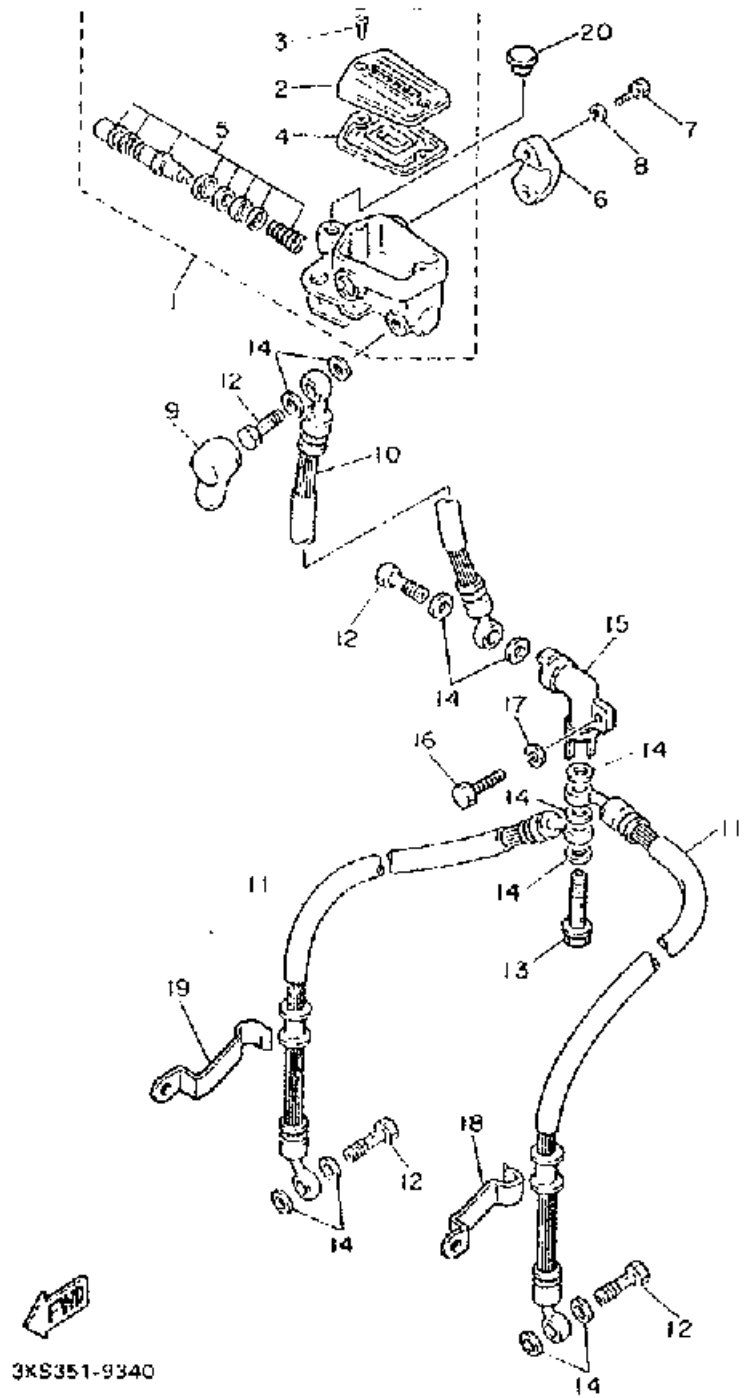


Ref No	Part No	Description
01	36Y-25850-01-00	Master Cylinder Assy
02	36Y-25852-01-00	• . Cap, Reservoir
03	98706-04012-00	• . Screw, Flat Head
04	36Y-25854-00-00	• . Diaphragm, Reservoir
05	36Y-W0041-00-00	• . Cylinder Kit, Master
06	36Y-25867-00-00	Bracket, Master Cylinder
07	91316-06025-00	Bolt
08	92906-06100-00	Washer, Spring
09	4L0-25862-00-00	Boot, Master Cylinder
10	1AE-25872-00-00	Hose, Brake 1
11	3KS-25873-00-00	Hose, Brake 2
12	90401-10096-00	Bolt, Union
13	90401-10095-00	Bolt, Union
14	90201-10118-00	Washer, Plate
15	1JT-25885-01-00	Joint
16	97001-06025-00	Bolt
17	92906-06100-00	Washer, Spring
18	3KS-25875-00-00	Holder, Brake Hose 1
19	3KS-25876-00-00	Holder, Brake Hose 2
20	90338-09012-00	Plug

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

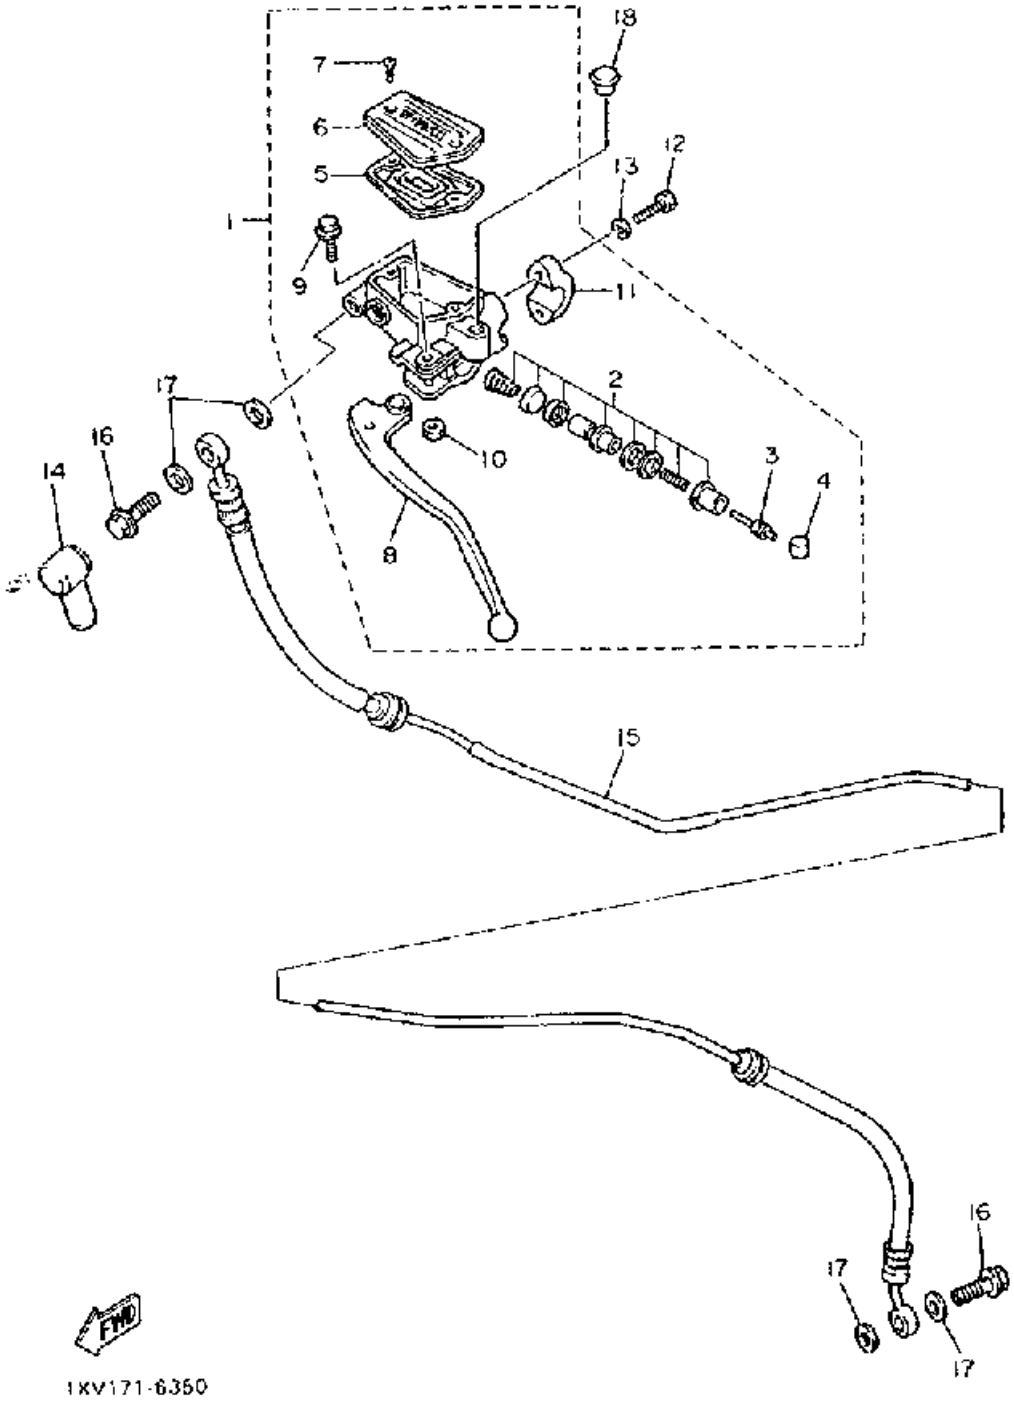

Ref No	Part No	Description
01	3BV-26450-00-00	Master Cylinder Assy (clutch)
02	26H-W0099-00-00	• . Cylinder Kit, Master (clutch)
03	26H-26464-00-00	• . Rod, Push
04	26H-26455-00-00	• . Bush
05	1AE-26454-00-00	• . Diaphragm, Reservoir
06	1FK-26452-01-00	• . Cap, Reservoir
07	98706-04012-00	• . Screw, Flat Head
08	1AE-83912-00-00	• . Lever 1
09	90109-067A0-00	• . Bolt
10	95616-06100-00	• . Nut, U
11	1AE-26467-00-00	• . Holder
12	91316-06025-00	Bolt
13	92906-06100-00	Washer, Spring
14	4LO-25862-00-00	Boot, Master Cylinder
15	1AE-26470-00-00	Hose, Clutch
16	90401-10096-00	Bolt, Union
17	90201-10118-00	Washer, Plate
18	90338-09012-00	Plug


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

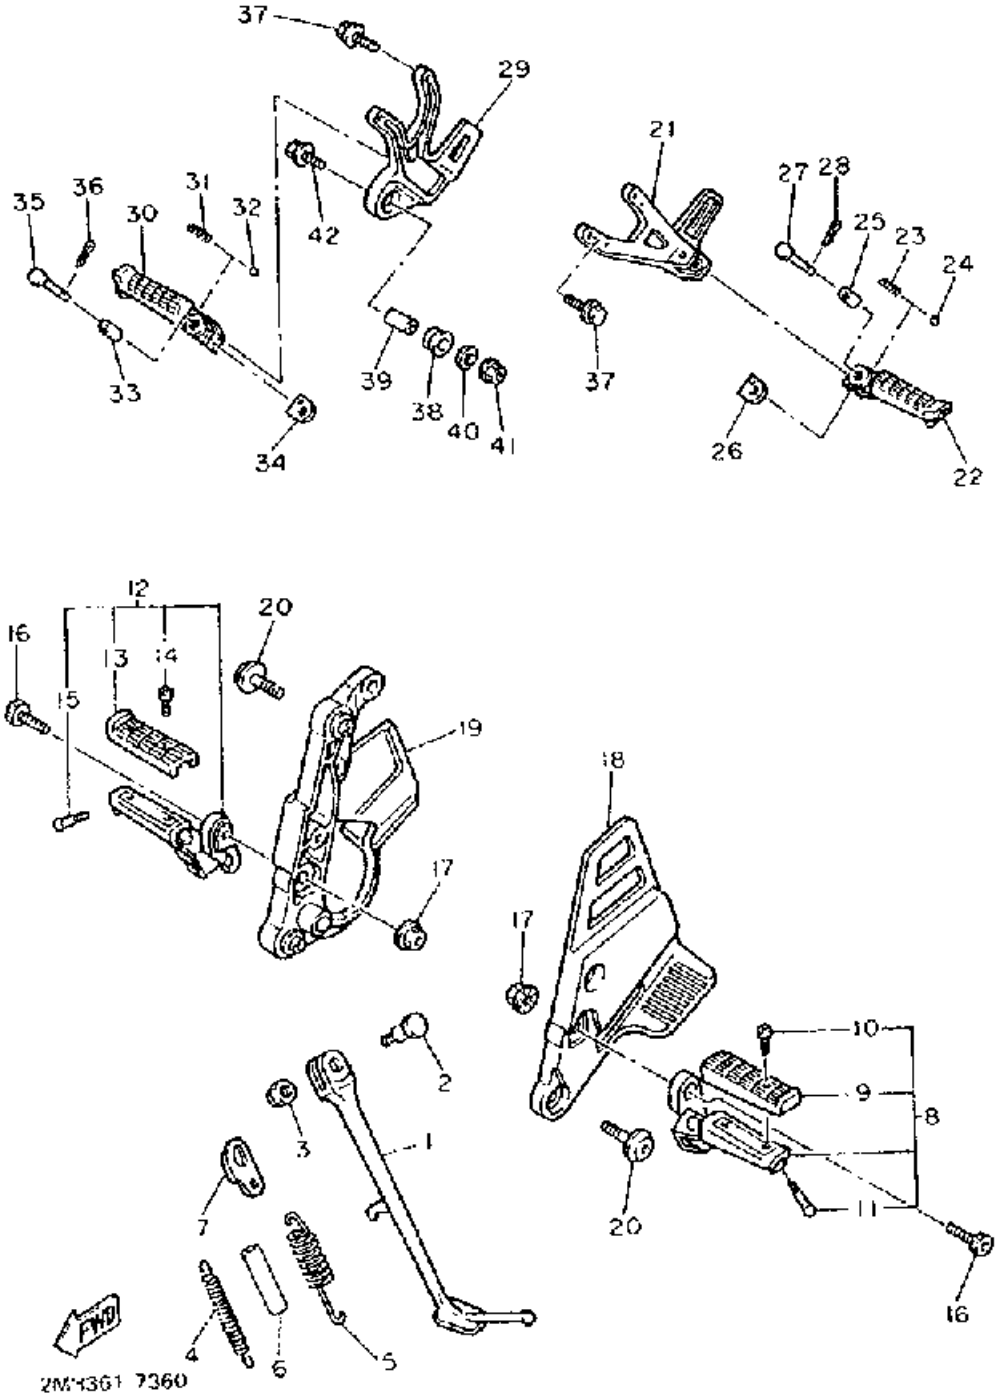

Ref No	Part No	Description
01	2KT-27311-00-00	Stand, Side
02	90109-10474-00	Bolt
03	90185-10037-00	Nut, Self-locking
04	90506-18224-00	Spring, Tension
05	90506-26225-00	Spring, Tension
06	1TX-27351-00-00	Guide, Side Stand
07	2KT-27315-00-00	Link, Side Stand
08	2KT-27410-00-00	Front Footrest Assy (left)
09	2GH-27413-00-00	• . Cover, Footrest
10	90157-05079-00	• . Screw, Pan Head
11	90109-083E0-00	• . Bolt
12	2KT-27420-00-00	Front Footrest Assy (right)
13	2GH-27413-00-00	• . Cover, Footrest
14	90157-05079-00	• . Screw, Pan Head
15	90109-083E0-00	• . Bolt
16	91316-10030-00	Bolt
17	95701-10500-00	Nut, Flange
18	1AE-W2748-00-00	Bracket 2
19	1AE-W2749-00-00	Bracket 3
20	90149-08222-00	Screw
21	2KT-2741L-00-00	Bracket 4
22	1HX-27431-00-00	Footrest, Rear 1
23	90501-12743-00	Spring, Compression
24	93501-04011-00	Ball
25	90387-064H8-00	Collar
26	1HX-27437-00-00	Washer, Special
27	91701-06045-00	Pin, Clevis
28	91401-20015-00	Pin, Cotter
29	2KT-2742L-00-00	Bracket 5
30	1HX-27441-00-00	Footrest, Rear 2
31	90501-12743-00	Spring, Compression
32	93501-04011-00	Ball
33	90387-064H8-00	Collar
34	1HX-27437-00-00	Washer, Special
35	91701-06045-00	Pin, Clevis
36	91401-20015-00	Pin, Cotter
37	95821-08025-00	Bolt, Flange
38	2HT-27414-00-00	Damper, Footrest
39	90387-10636-00	Collar
40	90201-10669-00	Washer, Plate
41	95701-10500-00	Nut, Flange
42	90105-10316-00	Bolt, Washer Based


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

REAR MASTER CYLINDER

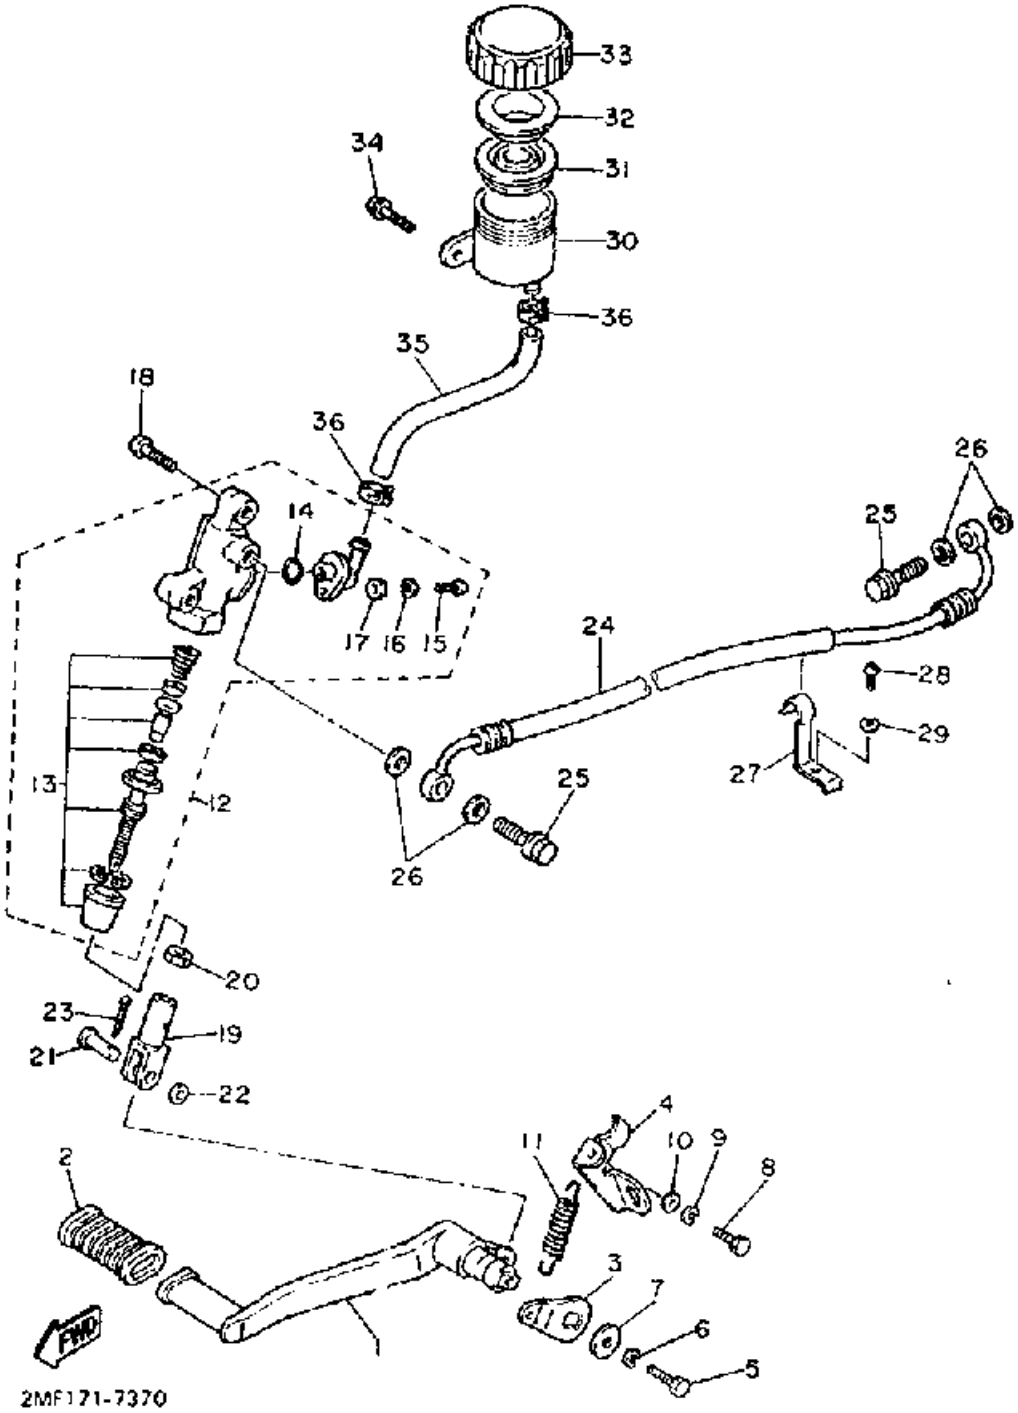


Ref No	Part No	Description
01	1AE-27211-00-00	Pedal, Brake
02	22N-18113-00-00	Cover, Shift Pedal
03	1AE-27252-00-00	Lever, Brake Pedal
04	1AE-27254-00-00	Hook
05	97001-06012-00	Bolt
06	92990-06100-00	Washer, Spring
07	90201-06778-00	Washer, Plate
08	97002-06016-00	Bolt
09	92990-06100-00	Washer, Spring
10	92990-06600-00	Washer, Plate
11	90506-14388-00	Spring, Tension
12	1AE-25850-51-00	Master Cylinder Assy
13	1AE-W0042-51-00	• . Cylinder Kit, Master
14	93210-15620-00	• . O-ring
15	98506-04012-00	• . Screw, Pan Head
16	92906-04100-00	• . Washer, Spring
17	92906-04600-00	• . Washer, Plate
18	92016-08020-00	Bolt, Button Head
19	31A-27222-00-00	Joint
20	95303-08600-00	Nut
21	90240-08013-00	Pin, Clevis
22	90201-08083-00	Washer, Plate
23	91401-20015-00	Pin, Cotter
24	1AE-25872-52-00	Hose, Brake 1
25	90401-10096-00	Bolt, Union
26	90201-10118-00	Washer, Plate
27	2KT-25875-00-00	Holder, Brake Hose 1
28	92501-06020-00	Screw, Pan Head
29	92990-06100-00	Washer, Spring
30	31A-25894-01-00	Tank, Reservoir
31	360-25854-00-00	Diaphragm, Reservoir
32	2GU-25855-00-00	Bush,diaphragm
33	2GU-25852-50-00	Cap, Reservoir
34	90159-06056-00	Screw, With Washer
35	1AE-25895-00-00	Hose, Reservoir
36	90467-14057-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

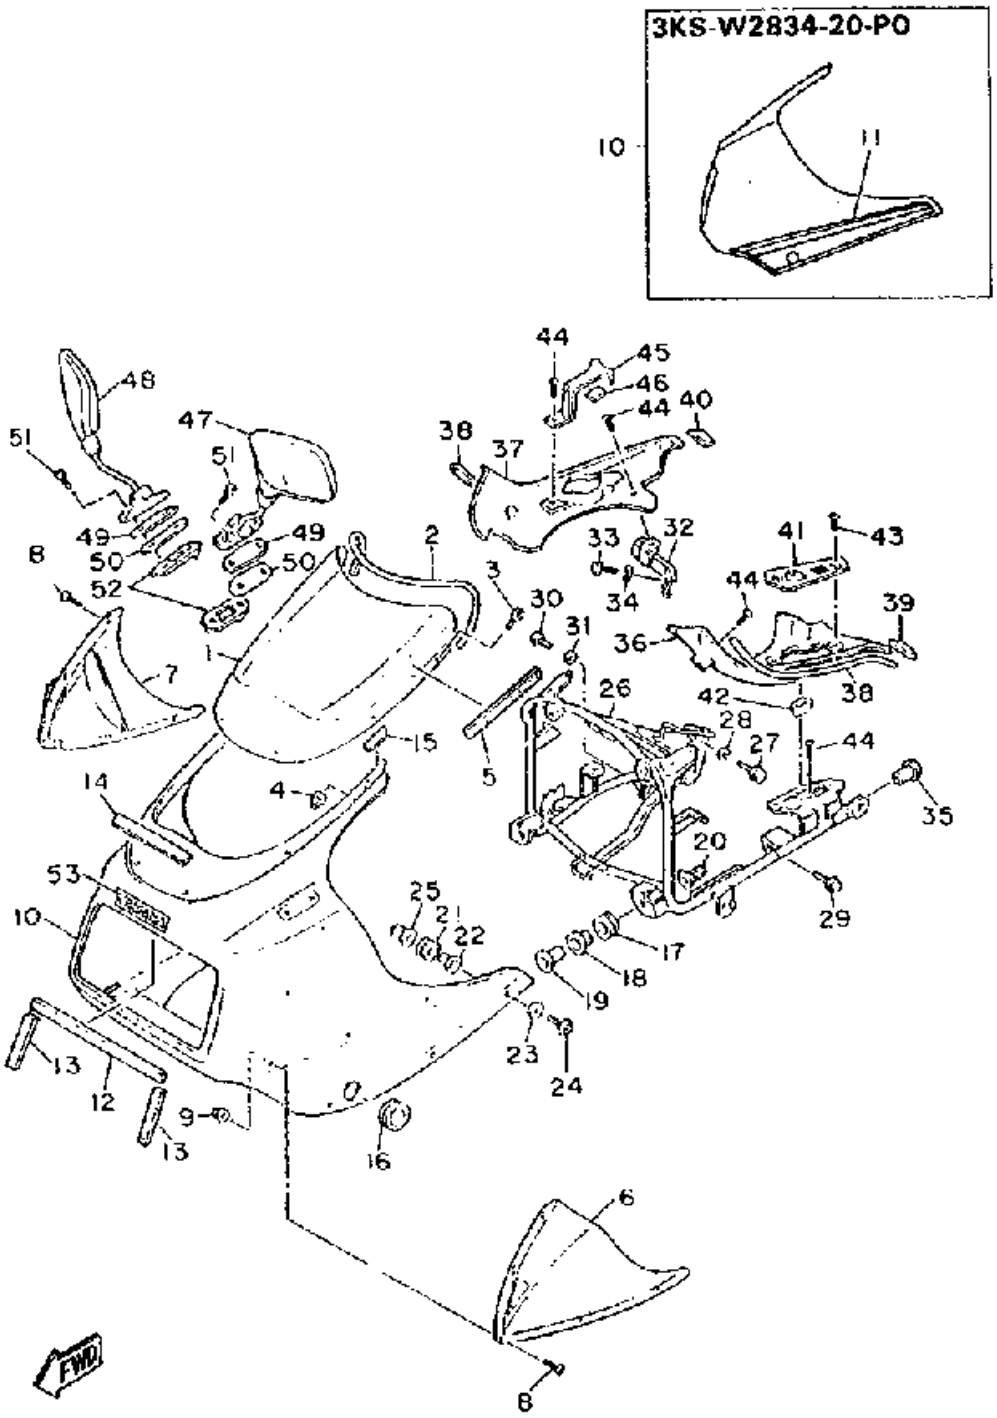


Ref No	Part No	Description
01	2KK-28381-00-00	Windshield
02	47X-28346-00-00	Mole 2
03	90150-05020-00	Screw, Round Head
04	95706-05500-00	Nut, Flange
05	3JJ-2835Y-00-00	Label, Caution
05	3JJ-2835Y-10-00	Label, Caution
06	3KS-2834V-00-00	Protector 1
06	3KT-2834V-00-P0	Protector 1
07	3KS-2834W-00-00	Protector 2
07	3KT-2834W-00-P0	Protector 2
08	90150-05020-00	Screw, Round Head
09	95706-05500-00	Nut, Flange
10	2KT-2835G-00-AU	Body, Front Upper 1
10	3KS-W2834-00-P0	Body, Cowling
11	3KS-2834X-20-00	• . Graphic Set 1, Cowling
12	1AE-28371-00-00	Damper
13	1AE-28372-00-00	Damper
14	1AE-2834E-00-00	Damper
15	1AE-2834F-00-00	Damper
16	90480-35394-00	Grommet
17	90480-14229-00	Grommet
18	90480-14429-00	Grommet
19	90387-066H4-00	Collar
20	1AE-28363-00-00	Nut
21	90480-13163-00	Grommet
22	90387-061F9-00	Collar
23	90202-07015-00	Washer, Plate
24	90110-06083-00	Bolt, Hexagon Socket Head
25	90179-06500-00	Nut
26	2KT-28356-00-00	Stay 1
27	97016-08016-00	Bolt
28	92906-08100-00	Washer, Spring
29	95826-06012-00	Bolt, Flange
30	91316-06012-00	Bolt
31	92906-06200-00	Washer, Plain
32	1AE-28357-00-00	Stay 2
33	97026-06010-00	Bolt
34	92906-06100-00	Washer, Spring
35	3Y1-21279-00-00	Plug, Blind
36	1AE-2836K-00-00	Panel, Inner 1
37	1AE-2836L-00-00	Panel, Inner 2
38	1AE-28346-00-00	Mole 2
39	1AE-28347-00-00	Mole 3
40	1AE-28348-00-00	Mole 4
41	1AE-28365-00-00	Cover
42	90480-04130-00	Grommet
43	90154-05008-00	Screw, Binding
44	90154-05013-00	Screw, Binding
45	1AE-2834V-00-00	Protector 1
46	1AE-2837J-00-00	Damper 5
47	1AE-26280-00-00	Rear View Mirror Assy(left)
48	1AE-26290-00-00	Rear View Mirror Assy(right)
49	1AE-26298-00-00	Plate, Mirror Fitting 1
50	1AE-26299-00-00	Plate, Mirror Fitting 2
51	92706-06025-00	Screw, Flat Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

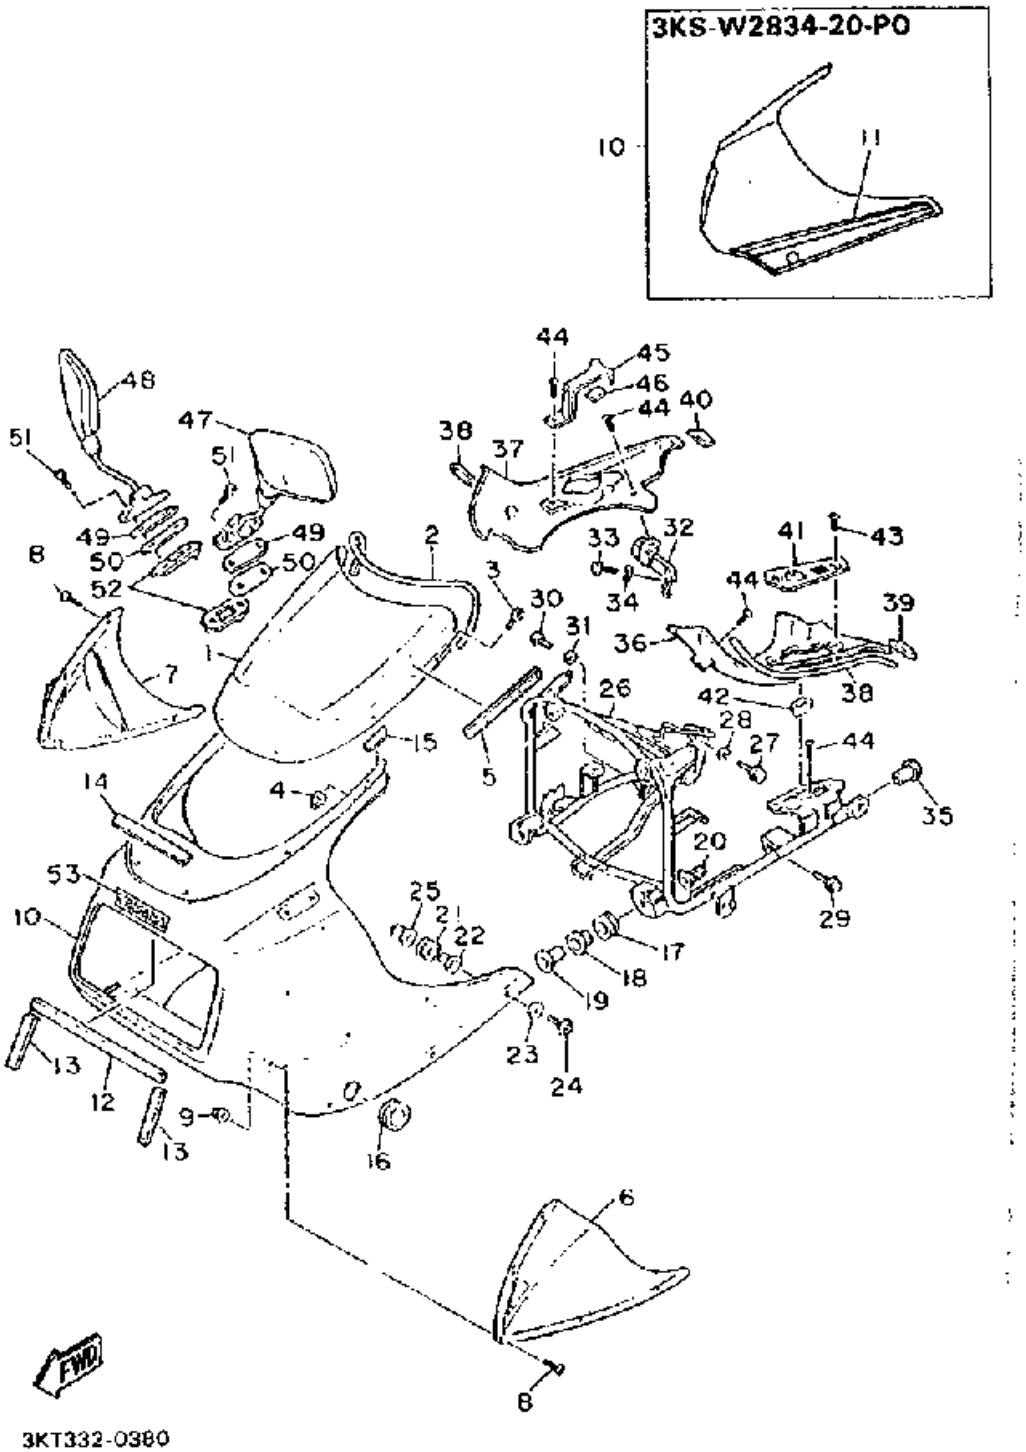


Ref No	Part No	Description
52	1AE-26294-00-00	Nut 1
53	99236-00025-00	Emblem, Yamaha


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

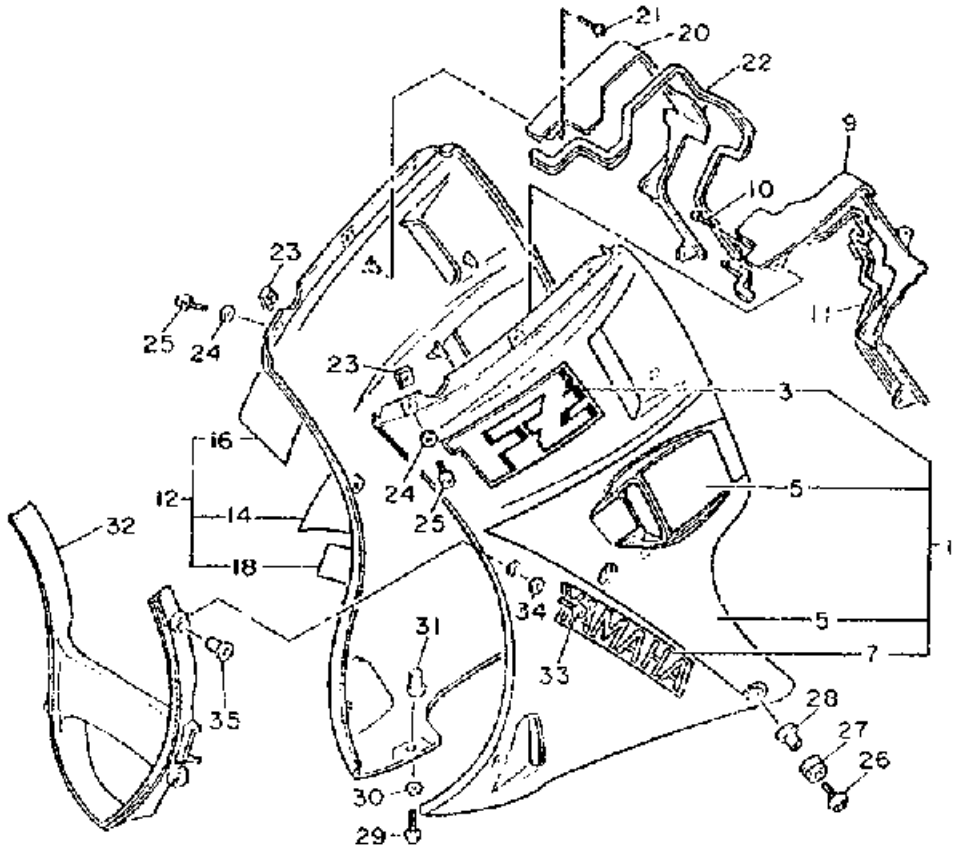

13,3KS-W283F-00-4X

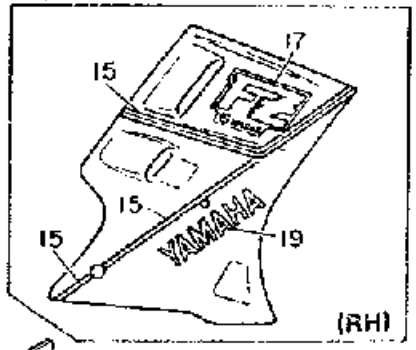

2,3KS-W283E-00-4X

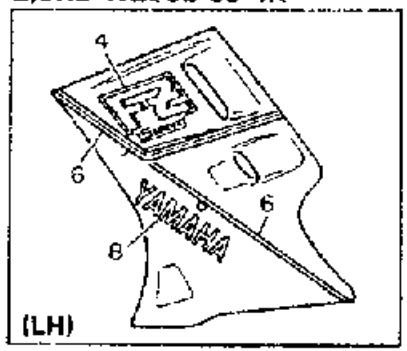


FWD

3KT332-0390


Ref No	Part No	Description
01	3KS-W283E-20-GE	Body, Front Lower 1
02	3KS-W283E-00-4X	Body, Front Lower 1
03	3KS-28328-20-00	Emblem
04	3KS-28328-00-00	Emblem
05	3KS-2836V-20-00	Graphic Set 3, Cowling
06	3KS-2836V-10-00	Graphic Set 3, Cowling
07	99233-00055-00	Emblem, Yamaha
08	99236-00070-00	Emblem, Yamaha
09	2KT-28396-00-00	Plate 1
10	97706-50614-00	Screw, Tapping
11	2KT-2834G-00-00	Mole 5
12	3KS-W283F-20-GE	Body, Front Lower 2
13	3KS-W283F-00-4X	Body, Front Lower 2
14	3KS-2836W-20-00	Graphic Set 4, Cowling
15	3KS-2836W-10-00	Graphic Set 4, Cowling
16	3KS-28338-20-00	Emblem
17	3KS-28338-00-00	Emblem
18	99233-00055-00	Emblem, Yamaha
19	99236-00070-00	Emblem, Yamaha
20	2KT-28397-00-00	Plate 2
21	97706-50614-00	Screw, Tapping
22	2KT-2834H-00-00	Mole 6
23	90183-05024-00	Nut, Spring
24	90202-05180-00	Washer, Plate
25	90110-05079-00	Bolt, Hexagon Socket Head
26	90110-06078-00	Bolt, Hexagon Socket Head
27	90480-13398-00	Grommet
28	90387-067N5-00	Collar
29	90149-05224-00	Screw
30	90202-05180-00	Washer, Plate
31	90179-05523-00	Nut
32	2KT-2836M-00-GE	Panel, Inner 3
32	2KT-2836M-00-7M	Panel, Inner 3
33	90149-05224-00	Screw
34	90202-05180-00	Washer, Plate
35	90179-05523-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

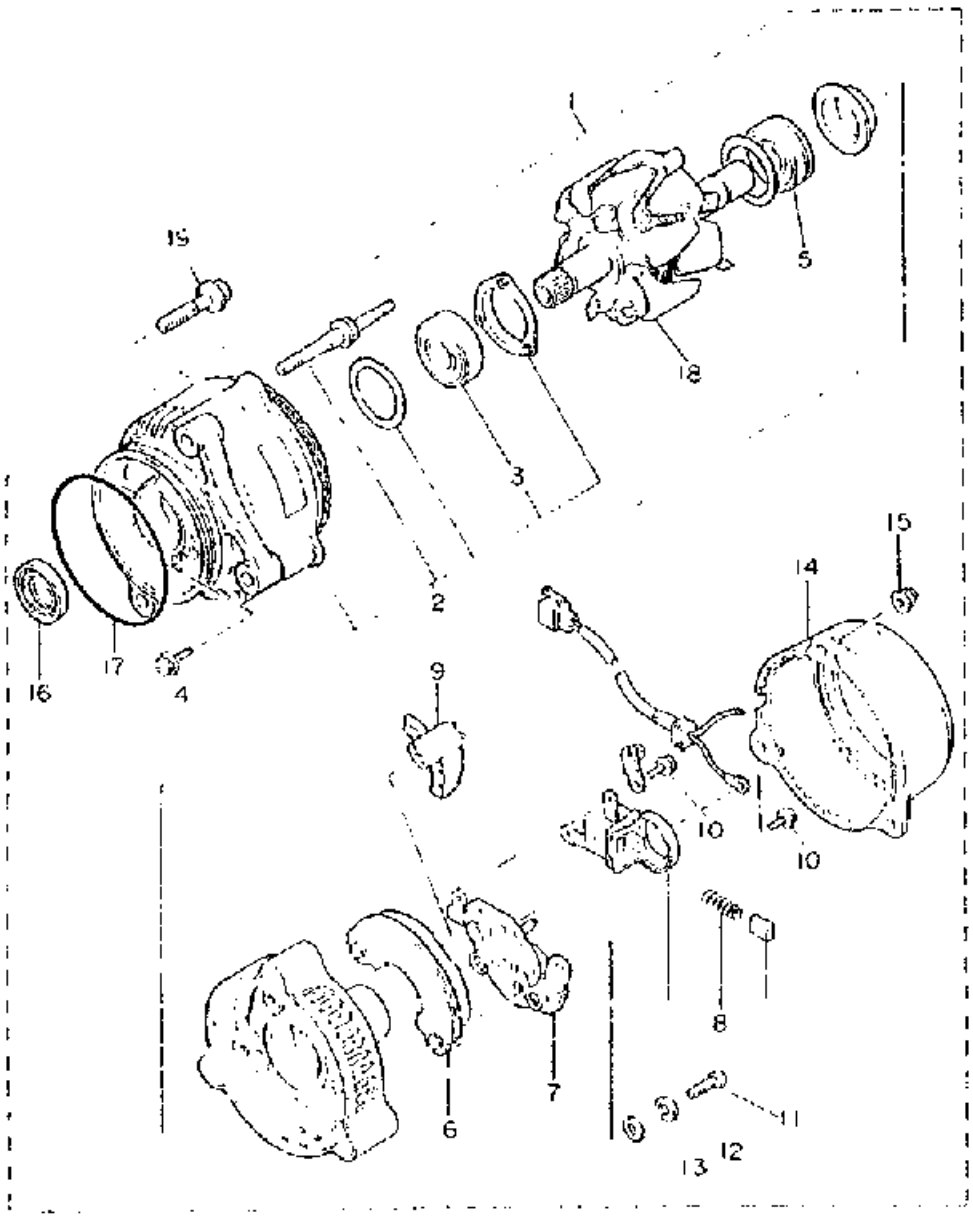


Ref No	Part No	Description
01	2KT-81600-54-00	A.c. Generator Assy
02	2KT-81634-50-00	•• .. Head Wire Assy
03	36Y-81643-30-00	•• .. Bearing
04	2KT-81645-50-00	• . Screw
05	36Y-81643-50-00	• . Bearing
06	36Y-81970-50-00	• . Rectifier Assy
07	36Y-81910-50-00	• . Voltage Regulator Assy
08	3FV-81619-00-00	• . Brush Holder Assy
09	36Y-81972-50-00	• . Cover, Rectifier
10	36Y-81645-30-00	• . Screw
11	98501-05018-00	• . Screw, Pan Head
12	92901-05100-00	• . Washer, Spring
13	92901-05600-00	• . Washer, Plate
14	2KT-81604-50-00	• . Cover Assy
15	2KT-81675-50-00	• . Washer, Special
16	36Y-81638-50-00	• . Oil Seal
17	2KT-81642-50-00	• . O-ring
18	2GH-81660-52-00	• . Field Coil Assy
19	95816-08030-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

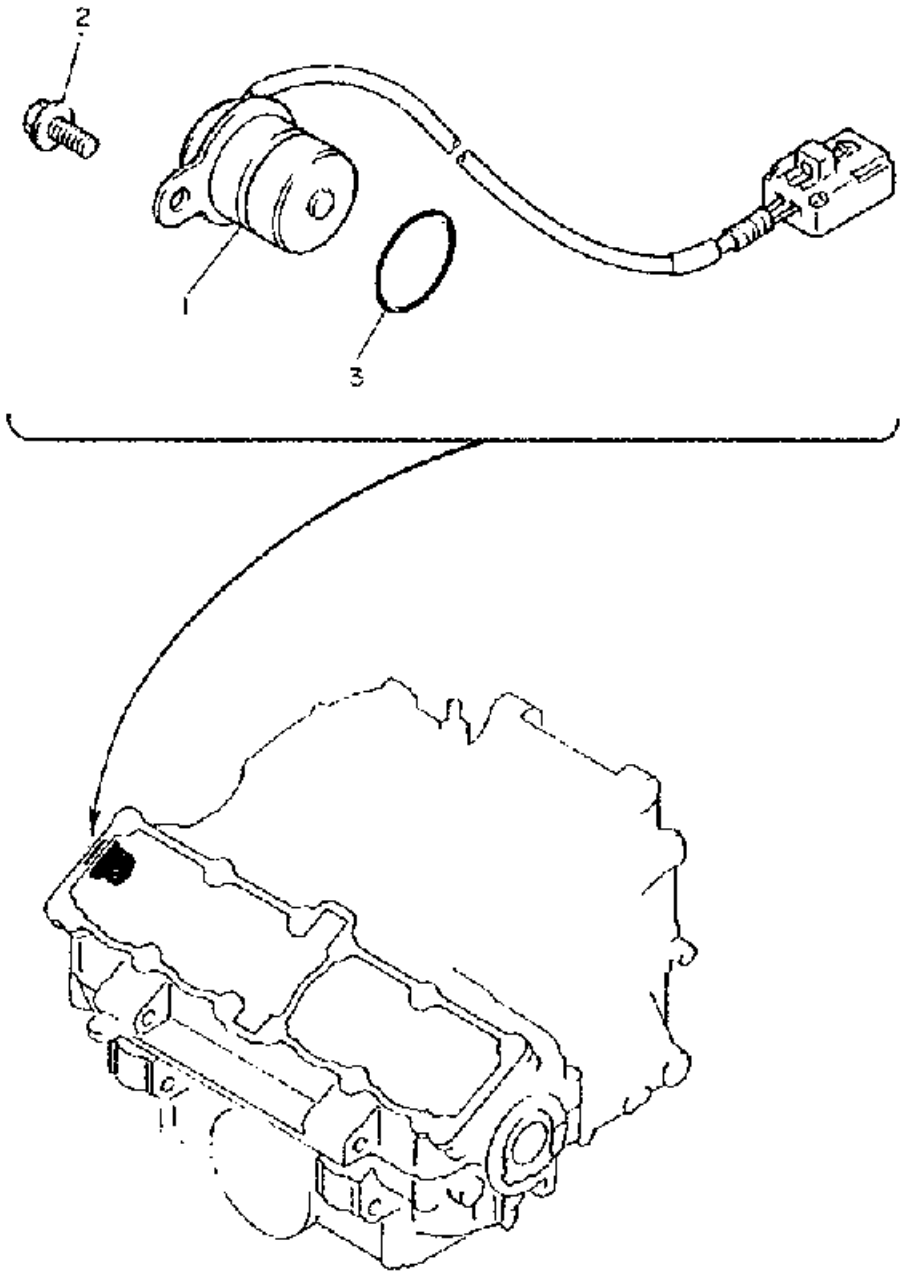

Ref No	Part No	Description
01	2KT-81670-11-0	Pick-up Assy
02	95026-06012-0	Bolt, Flange
03	93210-19216-0	O-ring


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

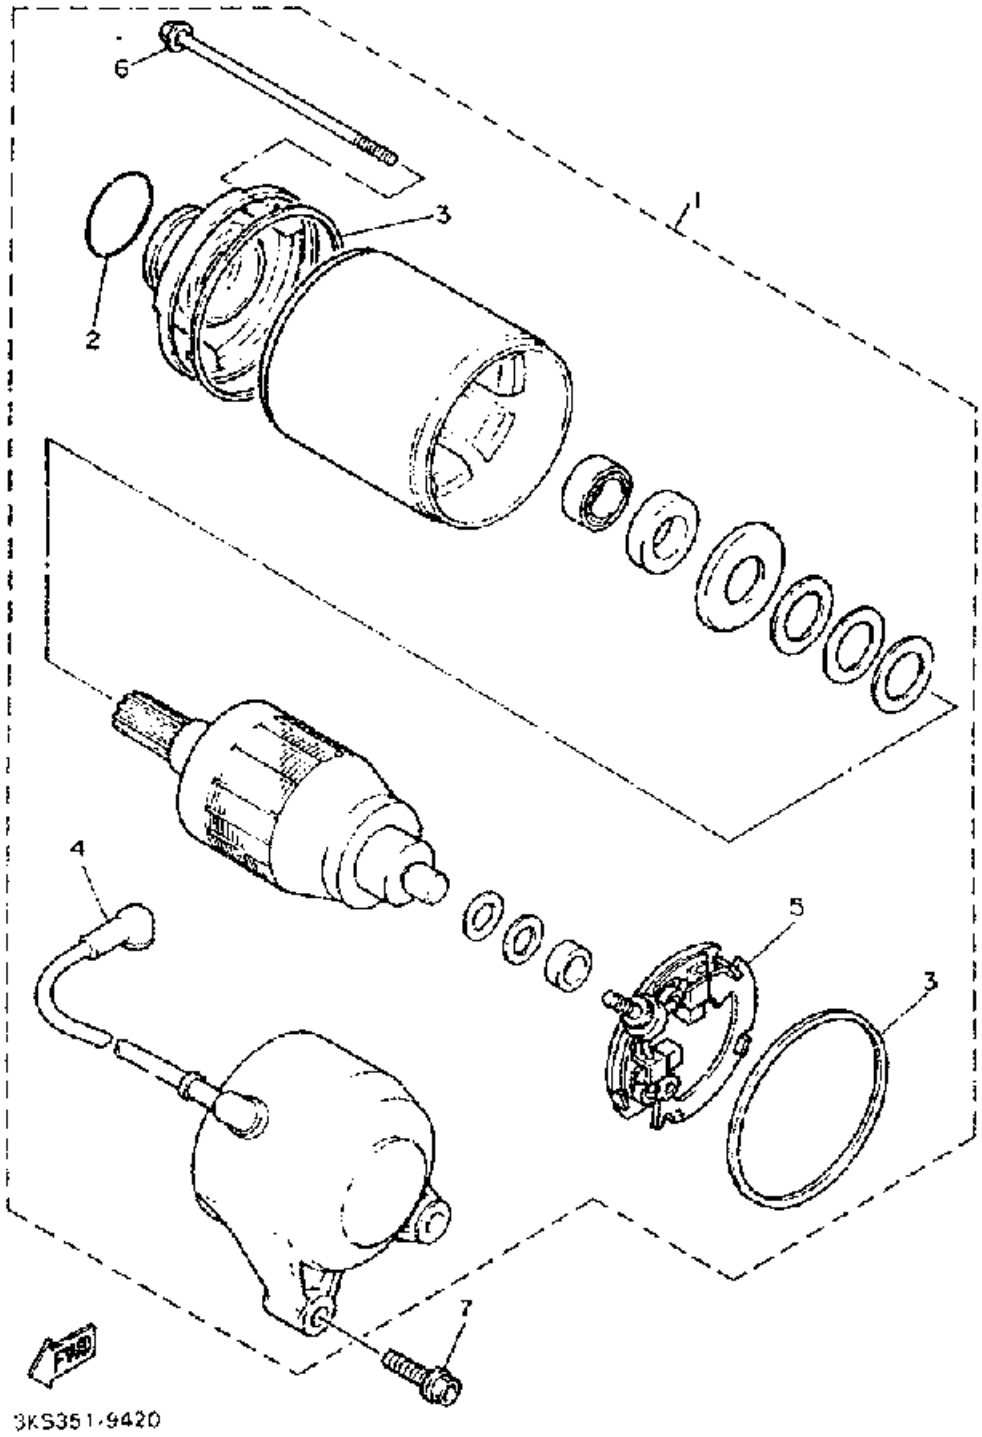

Ref No	Part No	Description
01	3KS-81800-02-00	Starting Motor Assy
02	26H-81847-00-00	• . O-ring
03	11H-81844-00-00	• . Gasket
04	2KT-81815-00-00	• . Cord, Starter Motor
05	3KS-81840-00-00	• . Brush Holder Assy
06	3HE-81826-00-00	• . Bolt
07	95816-06025-00	Bolt, Flange


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

FLASHER LIGHT

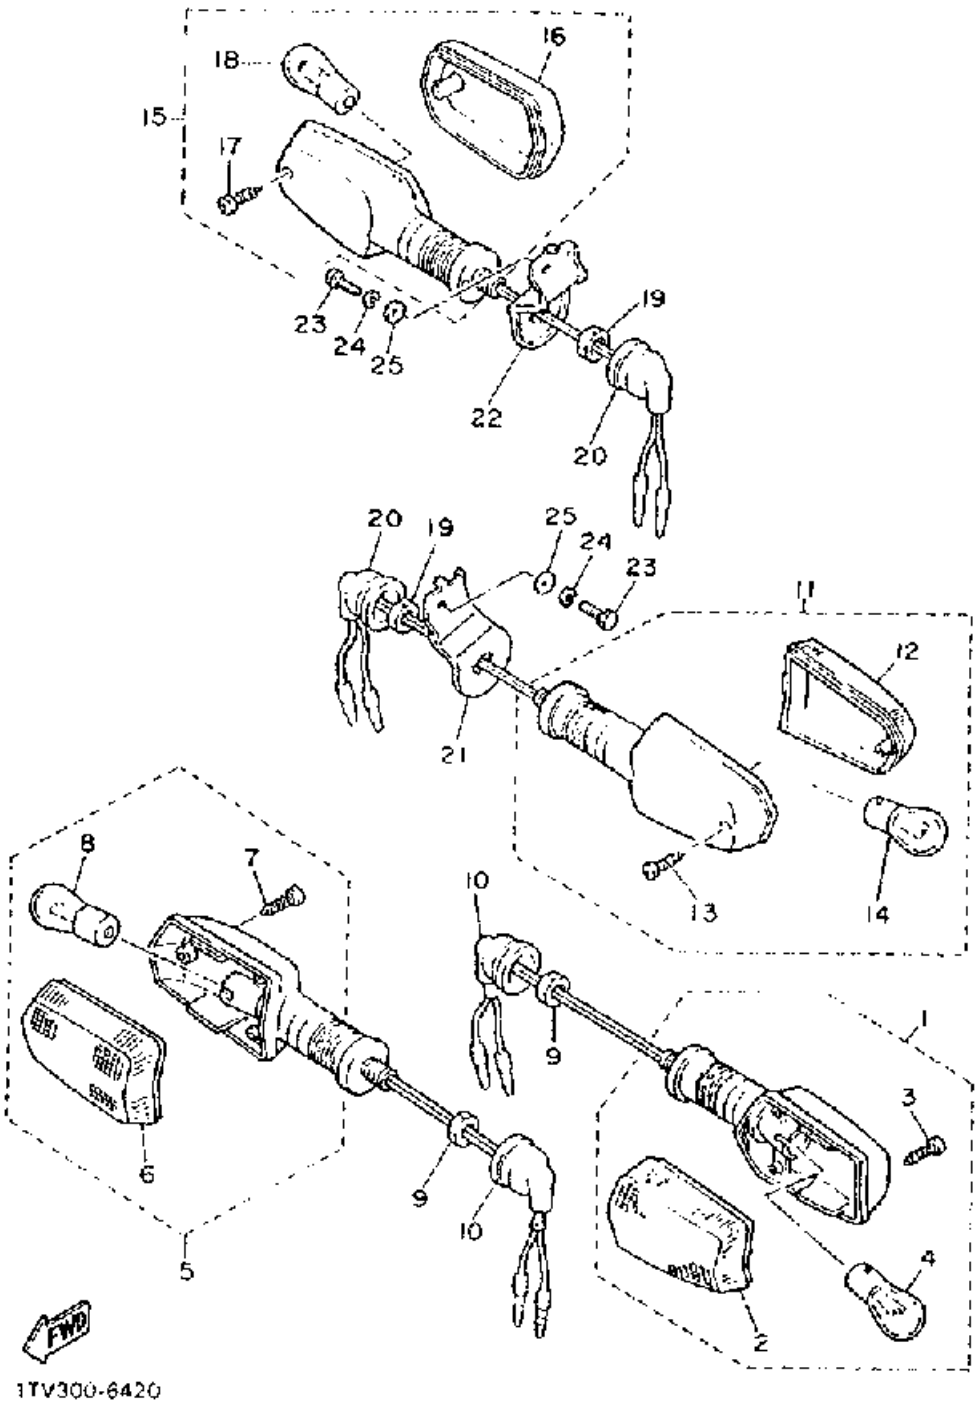


Ref No	Part No	Description
01	1VU-83310-00-00	Front Flasher Light Assy 1
02	51L-83332-01-00	• . Lens, Flasher
03	97706-40620-00	• . Screw, Tapping
04	306-83311-40-00	• . Bulb, Flasher (12v-21w)
05	1VU-83320-00-00	Front Flasher Light Assy 2
06	51L-83342-01-00	• . Lens, Flasher 2
07	97706-40620-00	• . Screw, Tapping
08	306-83311-40-00	• . Bulb, Flasher (12v-21w)
09	95306-12600-00	Nut
10	18G-83365-00-00	Cap
11	51J-83330-00-00	Rear Flasher Light Assy 1
12	1VU-83332-00-00	• . Lens, Flasher
13	97706-40620-00	• . Screw, Tapping
14	306-83311-40-00	• . Bulb, Flasher (12v-21w)
15	51J-83340-00-00	Flasher Light Assy 2
16	1VU-83342-00-00	• . Lens, Flasher 2
17	97706-40620-00	• . Screw, Tapping
18	306-83311-40-00	• . Bulb, Flasher (12v-21w)
19	95306-12600-00	Nut
20	18G-83365-00-00	Cap
21	2MG-83368-00-00	Stay, Flasher 1
22	2MG-83369-00-00	Stay, Flasher 2
23	97002-06016-00	Bolt
24	92990-06100-00	Washer, Spring
25	92990-06600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

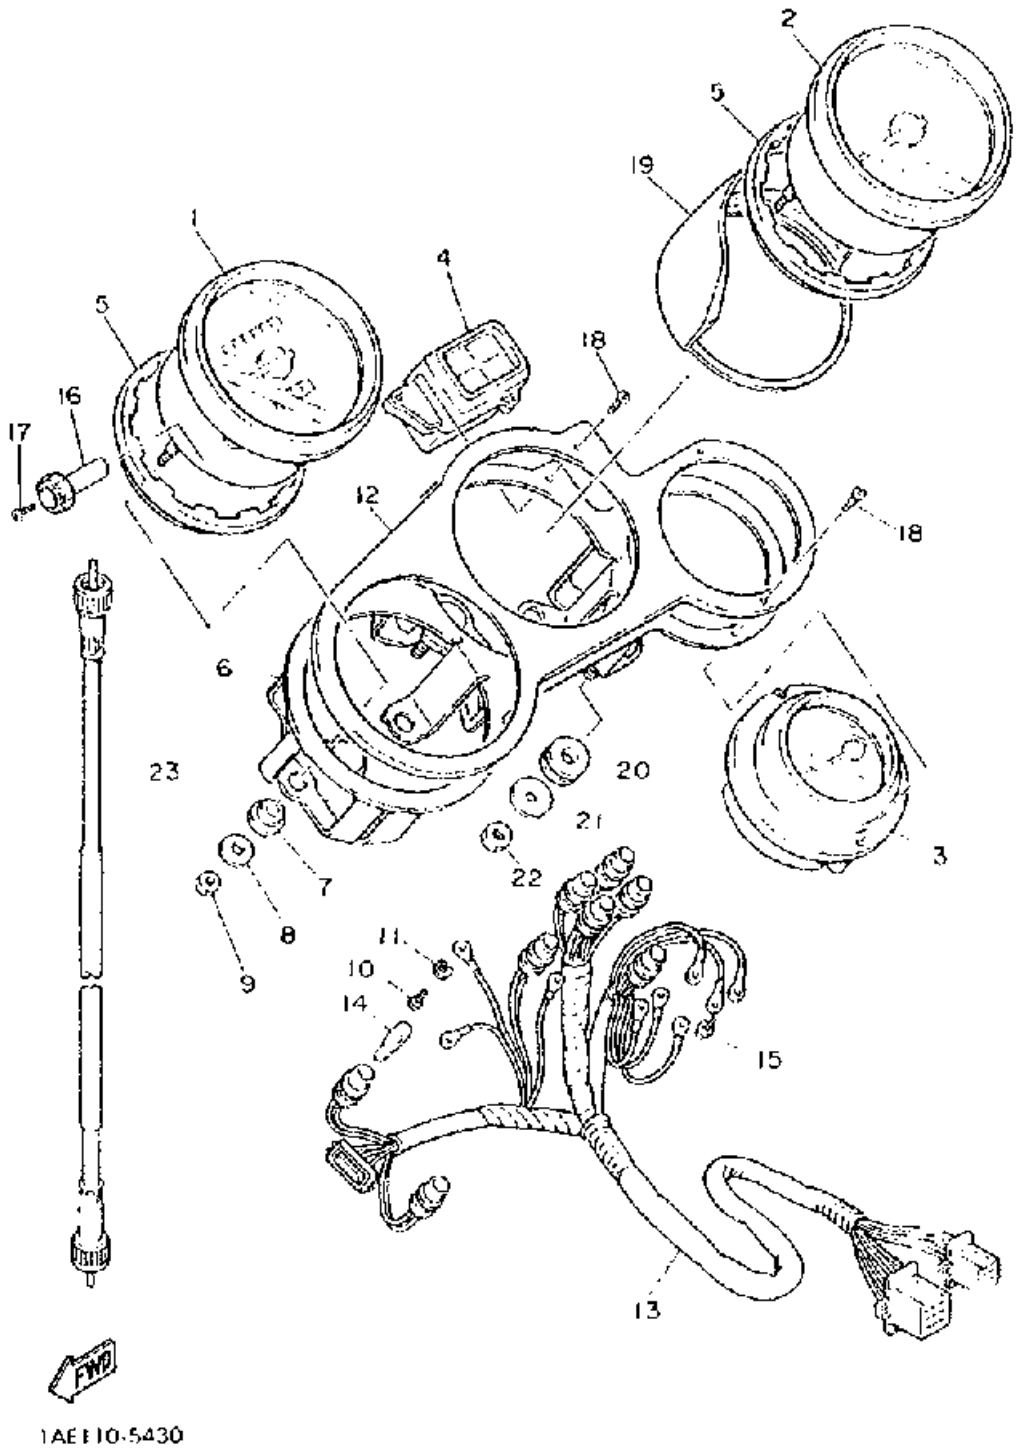


Ref No	Part No	Description
01	1FN-83570-F0-00	Speedometer Assy
02	1FN-83540-00-00	Tachometer Assy
03	1AE-83590-00-00	Water Temperature Assy
04	47X-83530-00-00	Pilot Light Assy
05	1AE-83513-00-00	Damper
06	1AE-83519-00-00	Bracket, Meter
07	584-83523-00-00	Damper
08	90201-052E2-00	Washer, Plate
09	95306-05600-00	Nut
10	98501-03012-00	Screw, Pan Head
11	92990-03100-00	Washer, Spring
12	1AE-83514-00-00	Plate, Fitting
13	1AE-83520-00-00	Socket Cord Assy
14	4G1-84744-00-00	Bulb (12v-3.4w)
15	90159-03102-00	Screw, With Washer
16	1AE-83578-00-00	Knob, Trip Meter
17	90157-02031-00	Screw, Pan Head
19	1AE-83559-00-00	Cover, Meter
20	90480-14229-00	Grommet
22	95316-06600-00	Nut
23	11L-83550-00-00	Speedometer Cable Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

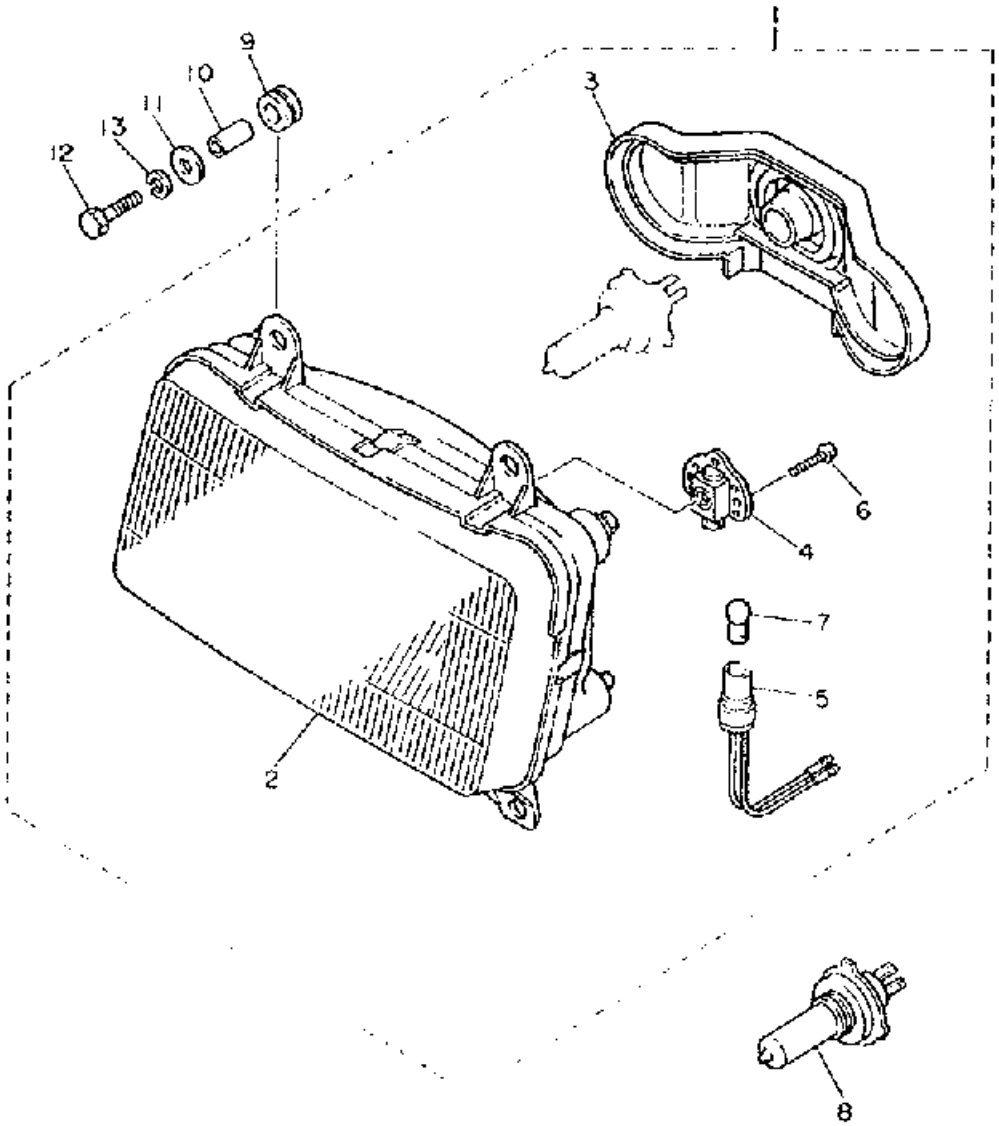


Ref No	Part No	Description
01	1FN-84303-G0-00	Headlight Unit Assy
02	1FN-84320-G0-00	• . Lens Assy
03	1AE-84397-A0-00	• . Cover, Socket
04	1AE-8430M-00-00	• . Gear Unit Assy
05	36Y-84359-00-00	• . Cord, Headlight
06	97706-40616-00	• . Screw, Tapping
07	4E2-84347-00-00	• . Bulb (12v-4w)
09	90480-14023-00	Grommet
10	90387-07598-00	Collar
11	90201-06059-00	Washer, Plate
12	97001-06025-00	Bolt
13	92906-06100-00	Washer, Spring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

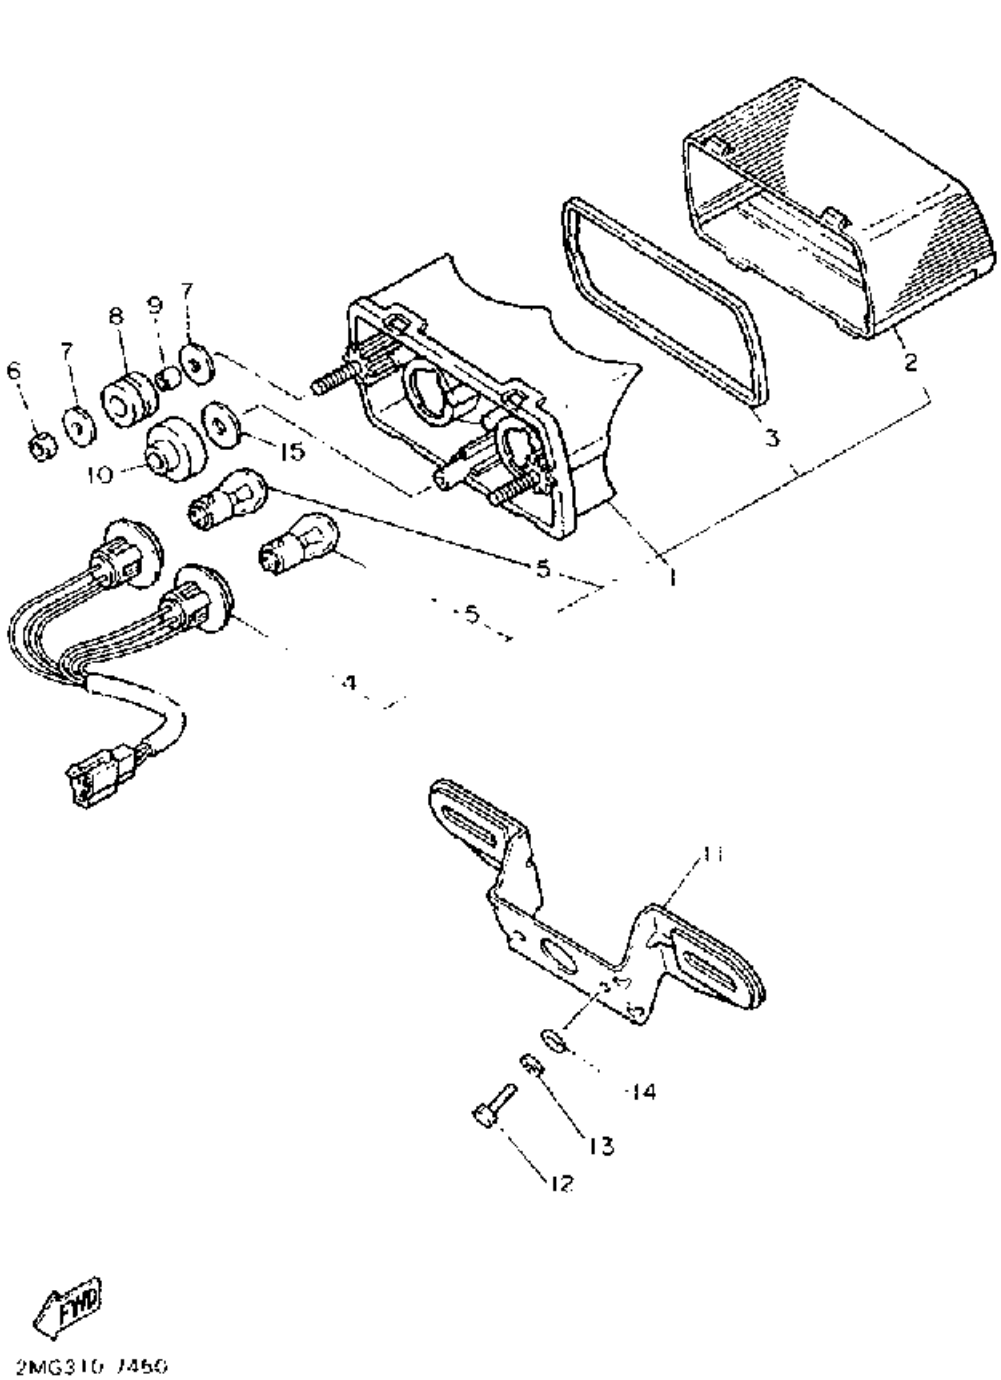

Ref No	Part No	Description
01	47X-84710-E0-00	Taillight Unit Assy
02	47X-84721-00-00	• . Lens, Taillight
03	47X-84723-00-00	• . Gasket, Tail Lens
04	47X-84735-00-00	• . Cord Assy
05	31L-84714-00-00	• . Bulb (12v-21/5w)
06	95303-06600-00	Nut
07	90201-063J2-00	Washer, Plate
08	90480-18276-00	Grommet
09	90387-060A7-00	Collar
10	90480-15259-00	Grommet
11	2MG-84751-00-00	Bracket, License
12	97016-06016-00	Bolt
13	92906-06100-00	Washer, Spring
14	90201-06067-00	Washer, Plate
15	92906-10200-00	Washer


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

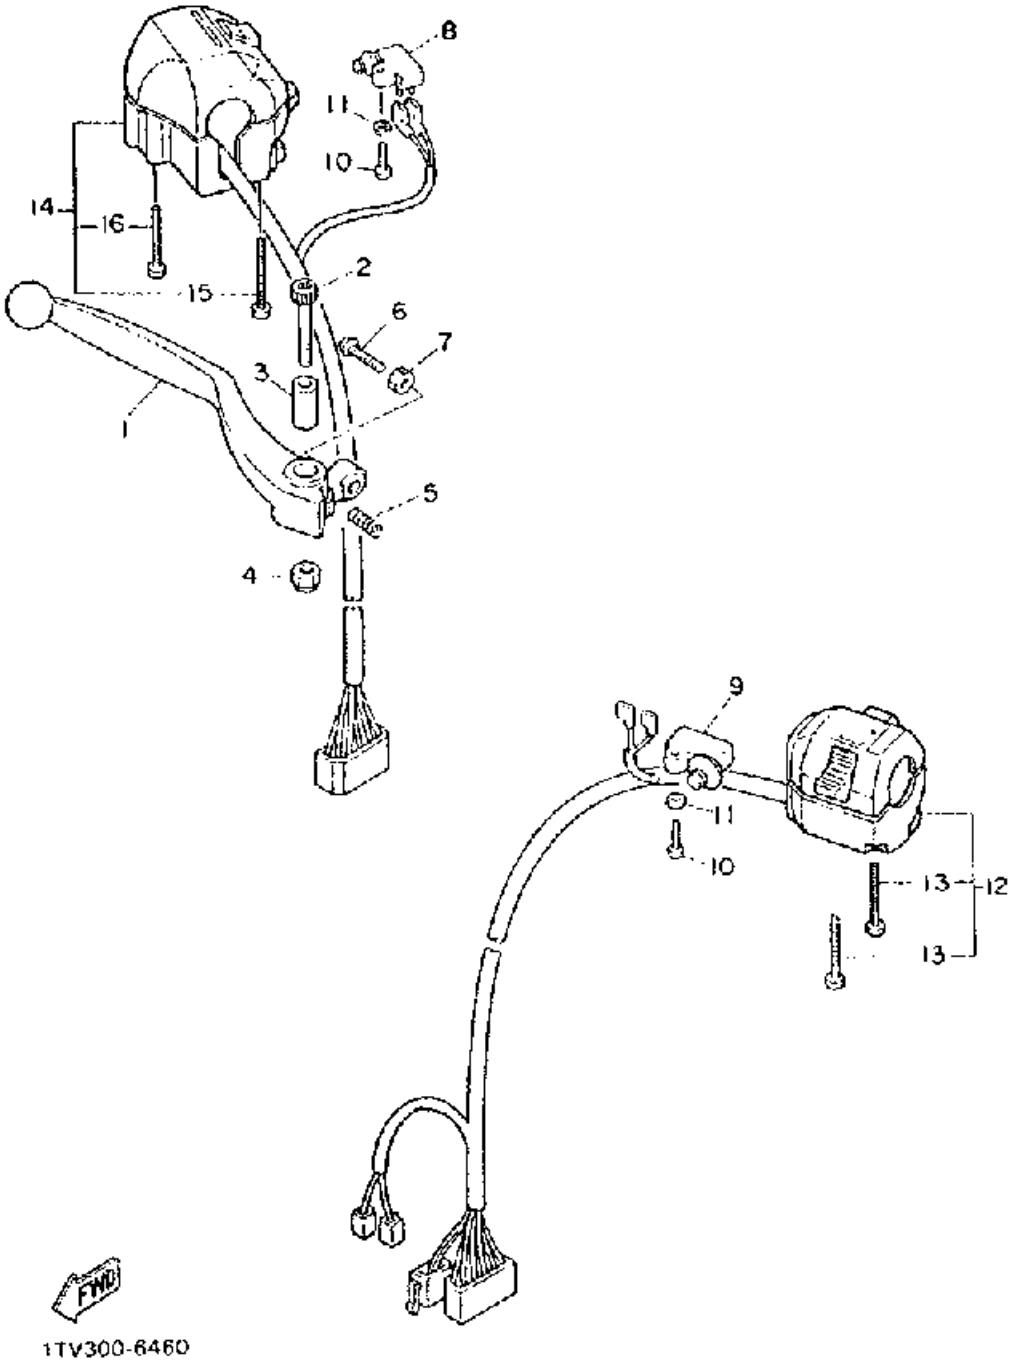

Ref No	Part No	Description
01	36Y-83922-00-00	Lever 2
02	90110-06074-00	Bolt, Hexagon Socket Head
03	36Y-83913-00-00	Collar, Lever 1
04	95616-06100-00	Nut, U
05	90501-10312-00	Spring, Compression
06	90149-06153-00	Screw
07	90170-06010-00	Nut
08	36Y-83980-01-00	Front Stop Switch Assy
09	36Y-82917-00-00	Switch
10	98506-04018-00	Screw, Pan Head
11	92906-04600-00	Washer, Plate
12	1TX-83972-00-00	Switch, Handle 4
13	98506-05035-00	• . Screw, Pan Head
14	3DX-83973-00-00	Switch, Handle 3
15	98501-05046-00	• . Screw, Pan Head
16	98501-05040-00	• . Screw, Pan Head


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

ELEKTRISCHE AUSRUSTUNG 1

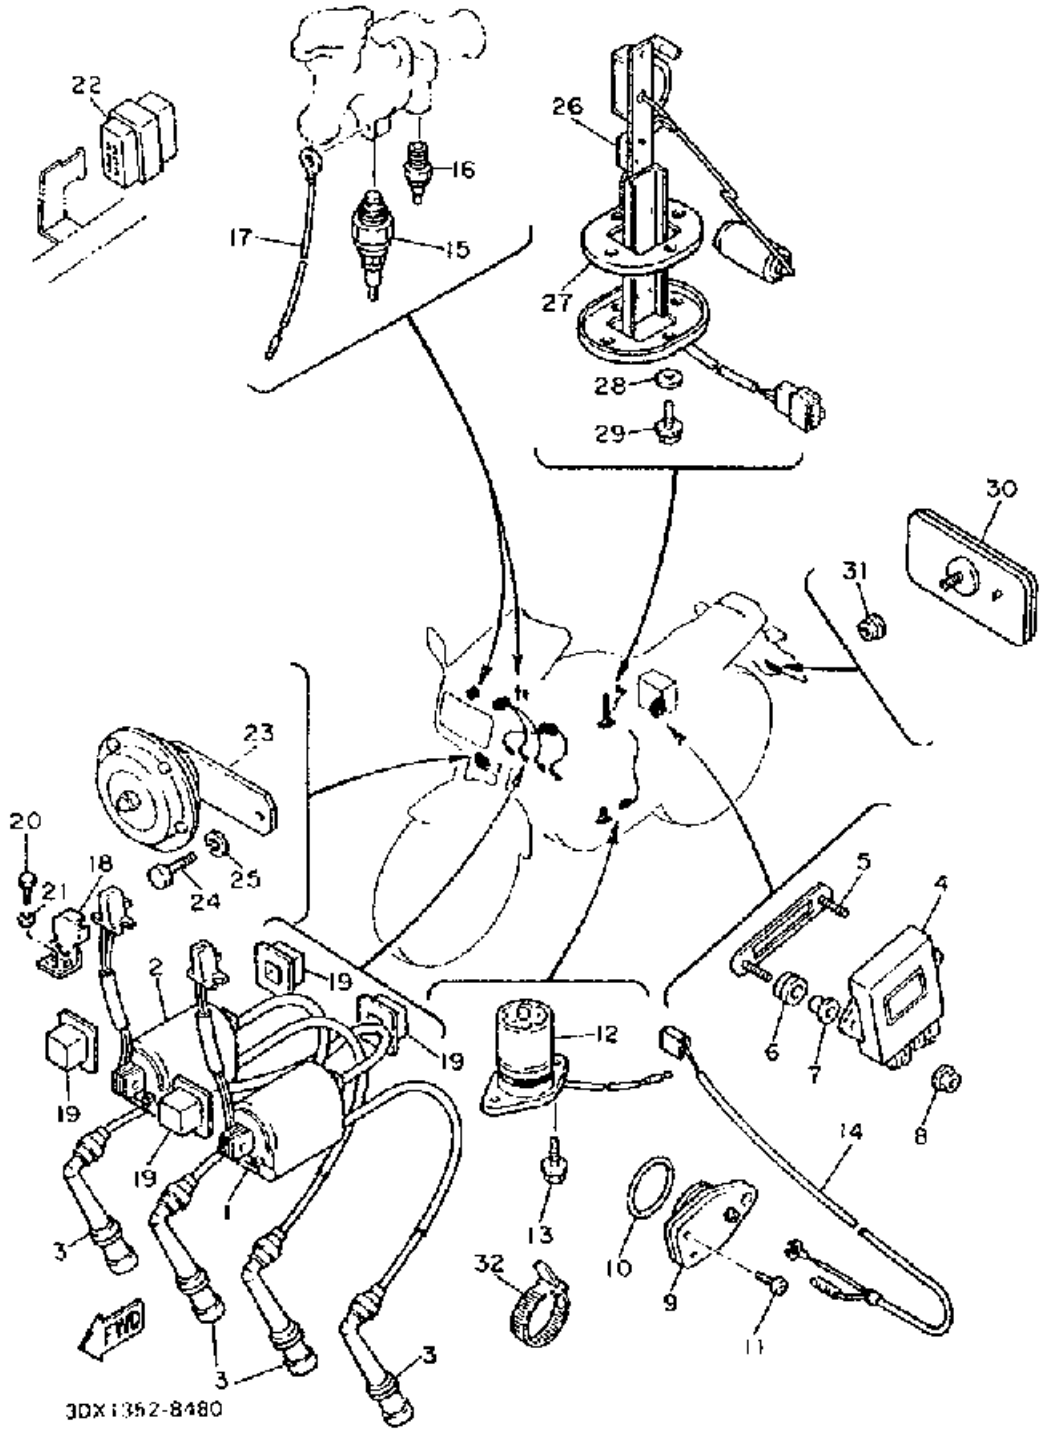

Ref No	Part No	Description
01	2KT-82310-10-00	Ignition Coil Assy
02	2KT-82320-10-00	Ignition Coil Assy
03	2KT-82370-00-00	Plug Cap Assy
04	2MG-82305-10-00	Ignitor Unit Assy
05	1AE-21158-00-00	Bracket
06	90480-18276-00	Grommet
07	90387-067K8-00	Collar
08	95701-06500-00	Nut, Flange
09	1AE-82540-00-00	Neutral Switch Assy
10	93210-29196-00	O-ring
11	92502-06016-00	Screw, Pan Head
12	4H7-85720-01-00	Oil Level Gauge Assy
13	95026-06016-00	Bolt, Flange
14	2KT-82509-00-00	Wire, Sub Lead
15	2EL-82560-00-00	Thermo Switch Assy
16	11H-83591-00-00	Thermo Unit
17	1VJ-82519-00-00	Wire, Earth Lead
18	2KT-82316-00-00	Bracket, Ignition Coil
19	4U8-82317-00-00	Damper, Ignition Coil
20	97001-06012-00	Bolt
21	92990-06100-00	Washer, Spring
22	47G-83350-41-00	Flasher Relay Assy
23	3KS-83371-00-00	Horn
24	97016-08016-00	Bolt
25	92906-08100-00	Washer, Spring
26	1AE-85752-00-00	Sender Unit Assy, Fuel Meter
27	2H7-85753-00-00	Gasket, Sender Unit
28	90202-06010-00	Washer, Plate
29	95821-06014-00	Bolt, Flange
30	3G1-85130-01-00	Rear Reflector Assy
31	95701-05500-00	Nut, Flange
32	90464-13073-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

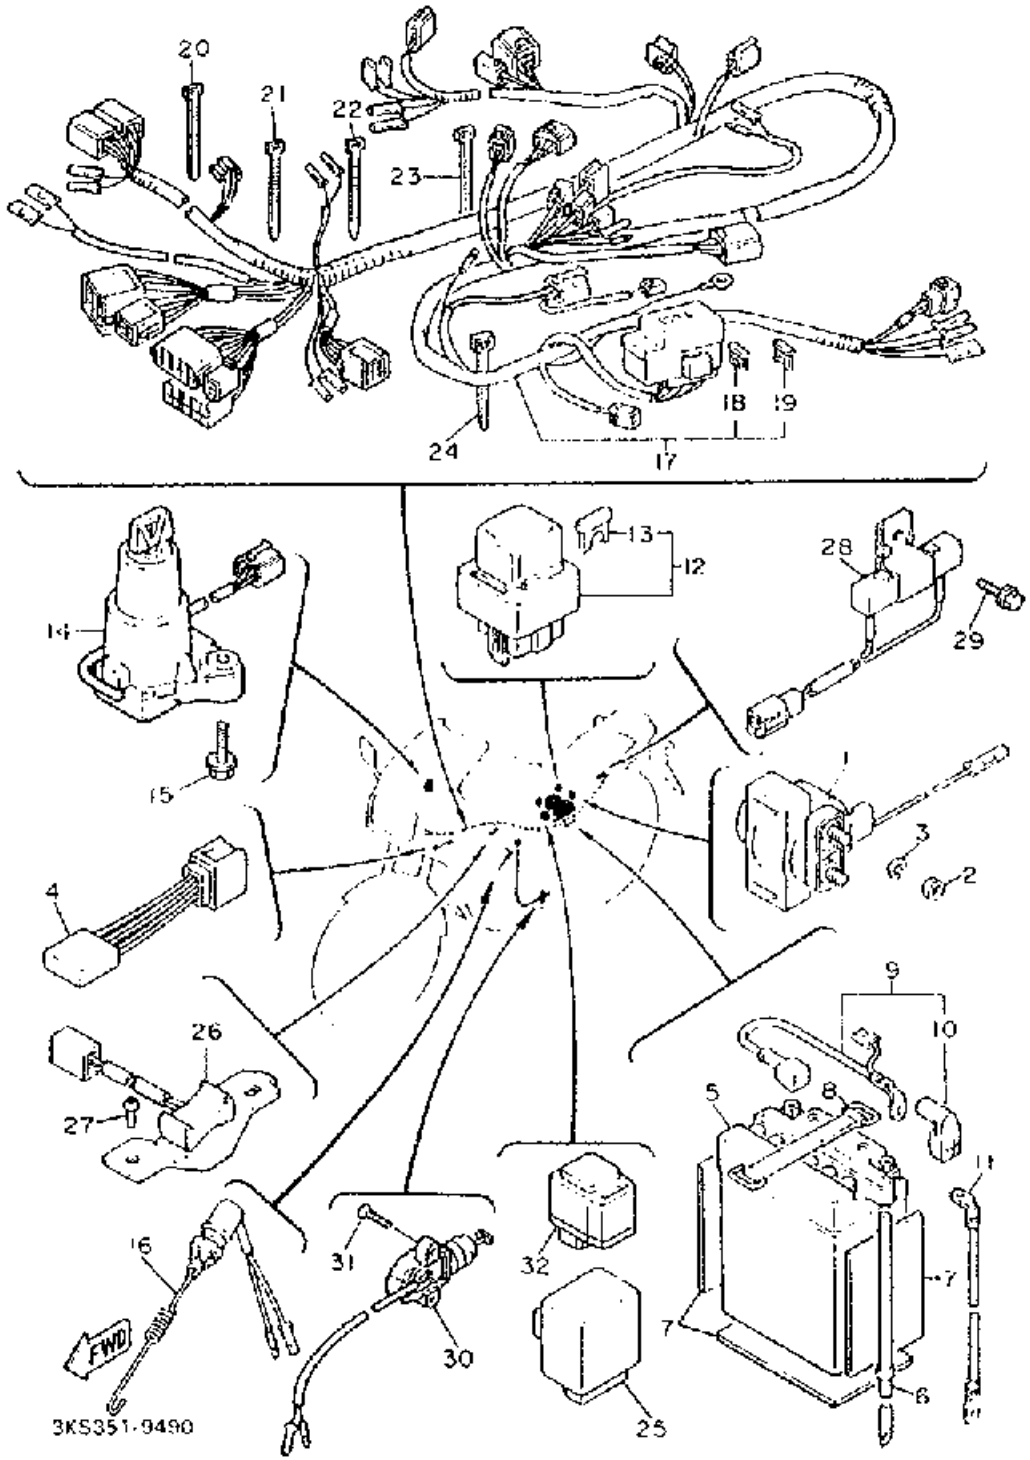

Ref No	Part No	Description
01	36Y-81940-00-00	Starter Relay Assy
02	95303-06700-00	Nut
03	92990-06100-00	Washer, Spring
04	4U8-81980-M0-00	Diode Assy
05	447-82110-78-00	Battery Assy (fb14l-a2)
06	90445-083A4-00	Hose
07	5Y1-82122-00-00	Seat, Battery
08	2T4-82131-00-00	Band, Battery
09	36Y-82115-00-00	Wire, Plus Lead
10	4X7-82119-00-00	• . Cover, Lead Wire
11	1AE-82116-00-00	Wire, Minus Lead
12	1AE-82150-00-00	Fuse Holder Assy
13	1AE-82151-00-00	• . Fuse (12v-30a)
14	3KS-82501-00-00	Main Switch Steering Lock
15	90109-06614-00	Bolt (torx)
16	33M-82530-01-00	Stop Switch Assy
17	3KS-82590-00-00	Wire Harness Assy
18	42X-82151-00-00	• . Fuse (10a)
19	36Y-82151-00-00	• . Fuse (12v-15a)
20	437-83936-10-00	Band, Switch Cord
21	90465-13169-00	Clamp
22	5Y9-12491-00-00	Clamp 1
23	341-26397-01-00	Band
24	12R-82591-00-00	Band
25	1AE-85740-01-00	Control Unit Assy
26	1AE-83964-00-00	Switch
27	90154-05013-00	Screw, Binding
28	3KS-85370-00-00	Resistor Assy
29	95826-06012-00	Bolt, Flange
30	2KT-82566-01-00	Switch, Side Stand
31	90152-05016-00	Screw, Countersunk
32	4U8-81950-02-00	Relay Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.